

FCI API Reference



Contents

1	Revi	sion Hi	story		8					
2	Mod	lule Ind	ex		10					
	2.1	Modul	es		10					
3	Data	a Structi	ıre Index		11					
	3.1	Data S	tructures .		11					
4	File	Index			12					
	4.1	File Lis	t		12					
5	Mod	lule Doc	umentatio	on .	13					
	5.1	LibFCI			13					
		5.1.1	Introducti	on	13					
		5.1.2	Acronyms	and Definitions	14					
		5.1.3	Functions Summary							
		5.1.4	Commands Summary							
		5.1.5	Interface I	Interface Management						
		5.1.6	Features		18					
			5.1.6.1	IPv4/IPv6 Router (TCP/UDP)	18					
			5.1.6.2	L2 Bridge (Switch)	20					
			5.1.6.3	Flexible Parser	22					
			5.1.6.4	Flexible Router	23					
		5.1.7	Defines .		27					
			5.1.7.1	FPP_CMD_PHY_IF	27					
			5.1.7.2	FPP_CMD_LOG_IF	28					
			5.1.7.3	FPP_CMD_IF_LOCK_SESSION	30					
			5.1.7.4	FPP_CMD_IF_UNLOCK_SESSION	31					
			5.1.7.5	FPP_CMD_L2_BD	31					
			5.1.7.6	FPP_CMD_FP_TABLE	34					



			5.1.7.7	FPP_CMD_FP_RULE	36
			5.1.7.8	FPP_CMD_FP_FLEXIBLE_FILTER	37
			5.1.7.9	FCI_CFG_FORCE_LEGACY_API	38
			5.1.7.10	FPP_CMD_IPV4_CONNTRACK_CHANGE	39
			5.1.7.11	FPP_CMD_IPV6_CONNTRACK_CHANGE	39
			5.1.7.12	CTCMD_FLAGS_REP_DISABLED	39
		5.1.8	Enums		39
			5.1.8.1	fpp_if_flags_t	39
			5.1.8.2	$fpp_phy_if_op_mode_t $	39
			5.1.8.3	fpp_if_m_rules_t	40
			5.1.8.4	fpp_phy_if_block_state_t	41
			5.1.8.5	fpp_l2_bd_flags_t	41
			5.1.8.6	fpp_fp_rule_match_action_t	41
			5.1.8.7	fpp_fp_offset_from_t	42
			5.1.8.8	fci_mcast_groups_t	42
			5.1.8.9	fci_client_type_t	
			5.1.8.10	fci_cb_retval_t	43
		5.1.9	Function	ıs	43
			5.1.9.1	fci_open()	43
			5.1.9.2	fci_close()	44
			5.1.9.3	fci_catch()	
			5.1.9.4	fci_cmd()	45
			5.1.9.5	fci_query()	46
			5.1.9.6	fci_write()	46
			5.1.9.7	fci_register_cb()	47
6	Data	a Struct	ure Docui	mentation	49
	6.1	FCI_C	LIENT Str	uct Reference	49
		6.1.1	Detailed	Description	49
	6.2	fpp_ct		Struct Reference	49
		6.2.1	Detailed	Description	50
		6.2.2	Field Do	cumentation	50
			6.2.2.1	action	50
			6.2.2.2	saddr	50
			6.2.2.3	daddr	51
			6.2.2.4	sport	51



		6.2.2.5	dport	51
		6.2.2.6	saddr_reply	51
		6.2.2.7	daddr_reply	51
		6.2.2.8	sport_reply	51
		6.2.2.9	dport_reply	51
		6.2.2.10	protocol	51
		6.2.2.11	flags	52
		6.2.2.12	route_id	52
		6.2.2.13	route_id_reply	52
6.3	fpp_ct	_cmd_t St	ruct Reference	52
	6.3.1	Detailed	Description	53
	6.3.2	Field Do	cumentation	53
		6.3.2.1	action	53
		6.3.2.2	saddr	53
		6.3.2.3	daddr	53
		6.3.2.4	sport	53
		6.3.2.5	dport	53
		6.3.2.6	saddr_reply	54
		6.3.2.7	daddr_reply	54
		6.3.2.8	sport_reply	54
		6.3.2.9	dport_reply	54
		6.3.2.10	protocol	54
		6.3.2.11	flags	54
		6.3.2.12	route_id	54
		6.3.2.13	route_id_reply	54
6.4	fpp_fle	exible_par	ser_table_cmd Struct Reference	55
	6.4.1	Detailed	Description	55
	6.4.2	Field Do	cumentation	55
		6.4.2.1	action	55
		6.4.2.2	table_name	55
		6.4.2.3	rule_name	55
		6.4.2.4	position	55
		6.4.2.5	$r \ldots \ldots \ldots \ldots \ldots$	56
6.5	fpp_fp	_rule_cm	d_tag Struct Reference	56
	6.5.1	Detailed	Description	56
	6.5.2	Field Do	cumentation	56



		6.5.2.1	action	56
		6.5.2.2	$r \ldots \ldots \ldots$	56
6.6	fpp_fp	_rule_pro	ps_tag Struct Reference	57
	6.6.1	Detailed	Description	57
6.7	fpp_if_	_m_args_t	Struct Reference	57
	6.7.1	Detailed	Description	58
	6.7.2	Field Do	cumentation	58
		6.7.2.1	vlan	58
		6.7.2.2	ethtype	58
		6.7.2.3	sport	58
		6.7.2.4	dport	58
		6.7.2.5	v4	58
		6.7.2.6	v6	59
		6.7.2.7	proto	59
		6.7.2.8	smac	59
		6.7.2.9	dmac	59
		6.7.2.10	fp_table0	59
		6.7.2.11	fp_table1	59
		6.7.2.12	hif_cookie	59
6.8	fpp_l2	_bridge_d	omain_control_cmd Struct Reference	59
	6.8.1	Detailed	Description	60
	6.8.2	Field Do	cumentation	60
		6.8.2.1	action	60
		6.8.2.2	vlan	60
		6.8.2.3	ucast_hit	60
		6.8.2.4	ucast_miss	61
		6.8.2.5	mcast_hit	61
		6.8.2.6	mcast_miss	61
		6.8.2.7	if_list	61
		6.8.2.8	untag_if_list	61
		6.8.2.9	flags	61
6.9	fpp_lo	g_if_cmd_	t Struct Reference	62
	6.9.1	Detailed	Description	62
	6.9.2	Field Do	cumentation	62
		6.9.2.1	action	62
		6.9.2.2	name	63



		6.9.2.3	id	63
		6.9.2.4	parent_name	63
		6.9.2.5	parent_id	63
		6.9.2.6	egress	63
		6.9.2.7	flags	64
		6.9.2.8	match	64
		6.9.2.9	arguments	64
6.10	fpp_pl	ny_if_cmd	Lt Struct Reference	64
	6.10.1	Detailed	Description	65
	6.10.2	Field Do	cumentation	65
		6.10.2.1	action	65
		6.10.2.2	name	65
		6.10.2.3	id	66
		6.10.2.4	flags	66
		6.10.2.5	mode	66
		6.10.2.6	block_state	66
		6.10.2.7	mac_addr	66
		6.10.2.8	mirror	67
6.11	fpp_rt	_cmd_t St	ruct Reference	67
	6.11.1	Detailed	Description	67
	6.11.2	Field Do	cumentation	67
		6.11.2.1	action	68
		6.11.2.2	dst_mac	68
		6.11.2.3	output_device	68
		6.11.2.4	$id \ \dots $	68
		6.11.2.5	flags	68
6.12	fpp_tir	neout_cn	nd_t Struct Reference	69
	6.12.1	Detailed	Description	69
File	Docum	entation		70
7.1	fpp.h I	File Refere	nce	70
	7.1.1	Detailed	Description	71
	7.1.2	Macro D	efinition Documentation	71
		7.1.2.1	FPP_CMD_IPV4_CONNTRACK	71
		7.1.2.2	FPP_CMD_IPV6_CONNTRACK	73
		7.1.2.3	FPP_CMD_IP_ROUTE	76

7



			7.1.2.4	FPP_C	MD_IP	V4_RE	SET			 	 	 	 		77
			7.1.2.5	FPP_C	MD_IP	V6_RE	SET			 	 	 	 		77
			7.1.2.6	FPP_C	MD_IP	V4_SE	Γ_TII	MEO	UT	 	 	 	 		77
7.	.2	fpp_ex	t.h File Re	eference						 	 	 	 		78
		7.2.1	Detailed	Descrip	otion .					 	 	 	 		80
7.	.3	libfci.h	File Refe	rence .						 	 	 	 		80
		7.3.1	Detailed	Descrip	otion .					 	 	 	 		81
8 E	xan	nple Do	cumenta	tion											82
8.	.1	fpp_cn	nd_ip_rou	ıte.c						 	 	 	 		82
8.	.2	fpp_cn	nd_ipv4_o	conntra	ck.c .					 	 	 	 		85
8.	.3	fpp_cn	nd_ipv6_d	conntra	ck.c .					 	 	 	 		90
8.	.4	fpp_cn	nd_log_if.	.c						 	 	 	 		94
8.	.5	fpp_cn	n <mark>d_phy_i</mark> i	f.c						 	 	 	 	•	96
Inde	X														101



Revision History

Revision	Change Description
1.0.0	Initial version. Contains description of FCI API and following features: • Interface Management • IPv4/IPv6 Router (TCP/UDP) • L2 Bridge (Switch) • Flexible Parser • Flexible Router
1.1.0	Added description of simple bridge (without VLAN awareness). Disabled part describing async messaging as it is currently not used. Description of fci_cmd(), fci_query(), and fci_write() simplified. Various minor improvements.
1.2.0	Improved description of Router and Bridge configuration steps. Added missing byte order information to various command argument values. Following values unified with rest of structure members to be in network byte order:
	• fpp_rt_cmd_t::id
	• fpp_rt_cmd_t::flags
	• fpp_ct_cmd_t::route_id
	• fpp_ct_cmd_t::route_id_reply
	• fpp_ct_cmd_t::flags
	• fpp_fp_table_cmd_t::position
1.2.1	Added FPP_IF_MIRROR to fpp_if_flags_t. Added name of interface to mirror the traffic to fpp_phy_if_cmd_t.



1.3.0	Description of various elements re-phrased to better explain their				
	purpose. Created summary lists of functions, commands, and events				
	and added links to them to improve document navigation. Added				
	usage examples for FPP_CMD_PHY_IF, FPP_CMD_LOG_IF, and				
	FPP_CMD_IP_ROUTE commands. Described relevant fpp_rt_cmd_t				
	structure members.				
1.4.0	Added usage examples for FPP_CMD_IPV4_CONNTRACK and				
	FPP_CMD_IPV6_CONNTRACK. Related argument structures				
	documentation updated. Removed unwanted and unsupported				
	symbol descriptions.				



Module Index

2.1 Modules

Here is a list of all modules:	
LibFCI	19



Data Structure Index

3.1 Data Structures

Here are the data structures with brief descriptions:

FCI_CLIENT	
The FCI client representation type	49
fpp_ct6_cmd_t	
Data structure used in various functions for IPv6 conntrack management .	49
fpp_ct_cmd_t	
Data structure used in various functions for conntrack management	52
fpp_flexible_parser_table_cmd	
Arguments for the FPP_CMD_FP_TABLE command	55
fpp_fp_rule_cmd_tag	
Arguments for the FPP_CMD_FP_RULE command	56
fpp_fp_rule_props_tag	
Properties of the Flexible parser rule	57
fpp_if_m_args_t	
Match rules arguments	57
fpp_l2_bridge_domain_control_cmd	
Data structure to be used for command buffer for L2 bridge domain control	
commands	59
fpp_log_if_cmd_t	
Data structure to be used for logical interface commands	62
fpp_phy_if_cmd_t	
Data structure to be used for physical interface commands	64
fpp_rt_cmd_t	
Structure representing the command to add or remove a route	67
fpp_timeout_cmd_t	
Timeout command argument	69



File Index

4.1 File List

Here is a list of all documented files with brief descriptions:

fci_exar	fci_examples.h						
fpp.h							
	The legacy FCI API	70					
fpp_ext.	h						
	Extension of the legacy fpp.h	78					
libfci.h							
	Generic LihECI header file	80					



Module Documentation

5.1 LibFCI

This is the Fast Control Interface available to host applications to communicate with the networking engine.

5.1.1 Introduction

This is the Fast Control Interface available to host applications to communicate with the networking engine.

The FCI is intended to provide a generic configuration and monitoring interface to networking acceleration HW. Provided API shall remain the same within all HW/OS-specific implementations to keep dependent applications portable across various systems.

The LibFCI is not directly touching the HW. Instead, it only passes commands to dedicated software component (OS/HW-specific endpoint) and receives return values. The endpoint is then responsible for HW configuration. This approach supports kernel-user space deployment where user space contains only API and the logic is implemented in kernel.

Implementation uses appropriate transport mechanism to pass data between LibFCI user and the endpoint. For reference, in Linux netlink socket will be used, in QNX it will be a message.

Usage scenario example - FCI command execution:

- 1. User calls fci_open() to get the FCI_CLIENT instance, use FCI_GROUP_NONE as multicast group mask.
- 2. User calls fci_cmd() to send a command with arguments to the endpoint.
- 3. Endpoint receives the command and performs requested actions.
- 4. Endpoint generates response and sends it back to the client.
- 5. Client receives the response and informs the caller.
- 6. User calls fci_close() to finalize the FCI_CLIENT instance.



5.1.2 Acronyms and Definitions

- **Physical Interface:** Interface physically able to send and receive data (EMAC, HIF). Physical interfaces are pre-defined and can't be added or removed in runtime. Every physical interface has associated a **default** logical interface and set of properties like classification algorithm.
- Logical Interface: Extension of physical interface defined by set of rules which describes Ethernet traffic. Intended to be used to dispatch traffic being received via particular physical interfaces using 1:N association i.e. traffic received by a physical interface can be classified and distributed to N logical interfaces. These can be either connected to SW stack running in host system or just used to distribute traffic to an arbitrary physical interface(s). Logical interfaces are dynamic objects and can be created and destroyed in runtime.
- Classification Algorithm: Way how ingress traffic is being processed by the PFE firmware.
- **Route:** Routes are representing direction where matching traffic shall be forwarded to. Every route specifies egress physical interface and MAC address of next network node.
- **Conntrack:** "Tracked connection", a data structure containing information about a connection. In context of this document it always refers to an IP connection (TCP, UDP, other). Term is equal to 'routing table entry'. Conntracks contain reference to routes which shall be used in case when a packet is matching the conntrack properties.

5.1.3 Functions Summary

• fci open()

Connect to endpoint and create client instance.

• fci close()

Close connection and destroy the client instance.

• fci write()

Execute FCI command without data response.

• fci_cmd()

Execute FCI command with data response.

• fci_query()

Alternative to fci_cmd().

• fci catch()

Poll for and process received asynchronous messages.

• fci_register_cb()

Register callback to be called in case of received message.



5.1.4 Commands Summary

- FPP_CMD_PHY_IF
 Management of physical interfaces.
- FPP_CMD_LOG_IF

 Management of logical interfaces.
- FPP_CMD_IF_LOCK_SESSION Get exclusive access to interfaces.
- FPP_CMD_IF_UNLOCK_SESSION Cancel exclusive access to interfaces.
- FPP_CMD_L2_BD L2 bridge domains management.
- FPP_CMD_FP_TABLE

 Administration of Flexible Parser tables.
- FPP_CMD_FP_RULE

 Administration of Flexible Parser rules.
- FPP_CMD_FP_FLEXIBLE_FILTER *Utilization of Flexible Parser to filter out (drop) frames.*
- FPP_CMD_IPV4_RESET Reset IPv4 (routes, conntracks, ...).
- FPP_CMD_IPV6_RESET

 Reset IPv6 (routes, conntracks, ...).
- FPP_CMD_IP_ROUTE Management of IP routes.
- FPP_CMD_IPV4_CONNTRACK Management of IPv4 connections.
- FPP_CMD_IPV6_CONNTRACK
 Management of IPv6 connections.
- FPP_CMD_IPV4_SET_TIMEOUT Configuration of connection timeouts.

5.1.5 Interface Management

Physical Interface

Physical interfaces are static objects and are defined at startup. LibFCI client can get a list of currently available physical interfaces using query option of the FPP_CMD_PHY_IF command. Every physical interface contains a list of logical interfaces. Without any configuration all physical interfaces are in default operation mode. It means that all ingress



traffic is processed using only associated **default** logical interface. Default logical interface is always the tail of the list of associated logical interfaces. When new logical interface is associated, it is placed at head position of the list so the default one remains on tail. User can change the used classification algorithm via update option of the FPP_CMD_PHY_IF command.

Here are supported operations related to physical interfaces:

To **list** available physical interfaces:

- 1. Lock interface database with FPP_CMD_IF_LOCK_SESSION.
- 2. Read first interface via FPP_CMD_PHY_IF + FPP_ACTION_QUERY.
- 3. Read next interface(s) via FPP_CMD_PHY_IF + FPP_ACTION_QUERY_CONT.
- 4. Unlock interface database with FPP_CMD_IF_UNLOCK_SESSION.

To **modify** a physical interface (read-modify-write):

- 1. Lock interface database with FPP_CMD_IF_LOCK_SESSION.
- 2. Read interface properties via FPP_CMD_PHY_IF + FPP_ACTION_QUERY + FPP_ACTION_QUERY_CONT.
- 3. Modify desired properties.
- 4. Write modifications using FPP_CMD_PHY_IF + FPP_ACTION_UPDATE.
- 5. Unlock interface database with FPP_CMD_IF_UNLOCK_SESSION.

Logical Interface

Logical interfaces specify traffic endpoints. They are connected to respective physical interfaces and contain information about which traffic can they accept and how the accepted traffic shall be processed (where, resp. to which **physical** interface(s) the matching traffic shall be forwarded). For example, there can be two logical interfaces associated with an EMAC1, one accepting traffic with VLAN ID = 10 and the second one accepting all remaining traffic. First one can be configured to forward the matching traffic to EMAC1 and the second one to drop the rest.

Logical interfaces can be created and destroyed in runtime using actions related to the FPP_CMD_LOG_IF command. Note that first created logical interface on a physical interface becomes the default one (tail). All subsequent logical interfaces are added at head position of list of interfaces.



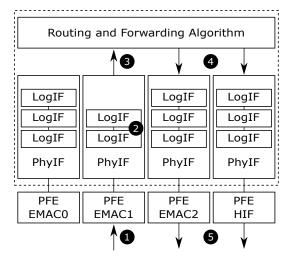


Figure 5.1 Configuration Example

The example shows scenario when physical interface EMAC1 is configured in FPP_IF_OP_FLEXIBLE_ROUTER operation mode:

- 1. Packet is received via EMAC1 port of the PFE.
- 2. Classifier walks through list of Logical Interfaces associated with the ingress Physical Interface. Every Logical Interface contains a set of classification rules (see fpp_if_m_rules_t) the classification process is using to match the ingress packet. Note that the list is searched from head to tail, where tail is the default logical interface.
- 3. Information about matching Logical Interface and Physical Interface is passed to the Routing and Forwarding Algorithm. The algorithm reads the Logical Interface and retrieves forwarding properties.
- 4. The matching Logical Interface is configured to forward the packet to EMAC2 and HIF so the forwarding algorithm ensures that. Optionally, here the packet can be modified according to interface setup (VLAN insertion, source MAC address replacement, ...).
- 5. Packet is physically transmitted via dedicated interfaces. Packet replica sent to HIF carries metadata describing the matching Logical and Physical interface so the host driver can easily dispatch the traffic.

Here are supported operations related to logical interfaces:

To **create** new logical interface:

- 1. Lock interface database with FPP_CMD_IF_LOCK_SESSION.
- 2. Create logical interface via FPP_CMD_LOG_IF + FPP_ACTION_REGISTER.
- 3. Unlock interface database with FPP_CMD_IF_UNLOCK_SESSION.

To **list** available logical interfaces:

1. Lock interface database with FPP_CMD_IF_LOCK_SESSION.



- Read first interface via FPP_CMD_LOG_IF + FPP_ACTION_QUERY.
- 3. Read next interface(s) via FPP_CMD_LOG_IF + FPP_ACTION_QUERY_CONT.
- 4. Unlock interface database with FPP_CMD_IF_UNLOCK_SESSION.

To **modify** an interface (read-modify-write):

- 1. Lock interface database with FPP_CMD_IF_LOCK_SESSION.
- 2. Read interface properties via FPP_CMD_LOG_IF + FPP_ACTION_QUERY + FPP_ACTION_QUERY_CONT.
- 3. Modify desired properties.
- 4. Write modifications using FPP_CMD_LOG_IF + FPP_ACTION_UPDATE.
- 5. Unlock interface database with FPP_CMD_IF_UNLOCK_SESSION.

To **remove** logical interface:

- 1. Lock interface database with FPP_CMD_IF_LOCK_SESSION.
- 2. Remove logical interface via FPP_CMD_LOG_IF + FPP_ACTION_DEREGISTER.
- 3. Unlock interface database with FPP_CMD_IF_UNLOCK_SESSION.

5.1.6 Features

5.1.6.1 IPv4/IPv6 Router (TCP/UDP)

Introduction

The IPv4/IPv6 Forwarder is a dedicated feature to offload the host CPU from tasks related to forwarding of specific IP traffic between physical interfaces. Normally, the ingress IP traffic is passed to the host CPU running TCP/IP stack which is responsible for routing of the packets. Once the stack identifies that a packet does not belong to any of local IP endpoints it performs lookup in routing table to determine how to process such traffic. If the routing table contains entry associated with the packet (5-tuple search) the stack modifies and forwards the packet to another interface to reach its intended destination node. The PFE can be configured to identify flows which do not need to enter the host CPU using its internal routing table, and to ensure that the right packets are forwarded to the right destination interfaces.

Configuration

The FCI contains mechanisms to setup particular Physical Interfaces to start classifying packets using Router classification algorithm as well as to manage PFE routing tables. The router configuration then consists of following steps:



- 1. Optionally use FPP_CMD_IPV4_RESET or FPP_CMD_IPV6_RESET to initialize the router. All previous configuration changes will be discarded.
- 2. Create one or more routes (FPP_CMD_IP_ROUTE + FPP_ACTION_REGISTER). Once created, every route has an unique identifier. Creating route on an physical interface causes switch of operation mode of that interface to FPP_IF_OP_ROUTER.
- 3. Create one or more IPv4 routing table entries (FPP_CMD_IPV4_CONNTRACK + FPP_ACTION_REGISTER).
- 4. Create one or more IPv6 routing table entries (FPP_CMD_IPV6_CONNTRACK + FPP_ACTION_REGISTER).
- 5. Set desired physical interface(s) to router mode FPP_IF_OP_ROUTER using FPP_CMD_PHY_IF + FPP_ACTION_UPDATE. This selects interfaces which will use routing algorithm to classify ingress traffic.
- 6. Enable physical interface(s) by setting the FPP_IF_ENABLED flag via the FPP_CMD_PHY_IF + FPP_ACTION_UPDATE.
- 7. Optionally change MAC address(es) via FPP_CMD_PHY_IF + FPP_ACTION_UPDATE.

From this point the traffic matching created conntracks is processed according to conntrack properties (e.g. NAT) and fast-forwarded to configured physical interfaces. Conntracks are subject of aging. When no traffic has been seen for specified time period (see FPP_CMD_IPV4_SET_TIMEOUT) the conntracks are removed.

Routes and conntracks can be listed using query commands:

- FPP_CMD_IP_ROUTE + FPP_ACTION_QUERY + FPP_ACTION_QUERY_CONT.
- FPP_CMD_IPV4_CONNTRACK+FPP_ACTION_QUERY+FPP_ACTION_QUERY_CONT.
- FPP_CMD_IPV6_CONNTRACK+FPP_ACTION_QUERY+FPP_ACTION_QUERY_CONT.

When conntrack or route are no more required, they can be deleted via corresponding command:

- FPP_CMD_IP_ROUTE + FPP_ACTION_DEREGISTER,
- FPP_CMD_IPV4_CONNTRACK + FPP_ACTION_DEREGISTER, and
- FPP_CMD_IPV6_CONNTRACK + FPP_ACTION_DEREGISTER.

Deleting route causes deleting all associated countracks. When the latest route on an interface is deleted, the interface is put to default operation mode FPP_IF_OP_DEFAULT.



5.1.6.2 L2 Bridge (Switch)

Introduction

The L2 Bridge functionality covers forwarding of packets based on MAC addresses. It provides possibility to move bridging-related tasks from host CPU to the PFE and thus offloads the host-based networking stack. The L2 Bridge feature represents a network switch device implementing following functionality:

- MAC table and address learning: The L2 bridging functionality is based on determining to which interface an ingress packet shall be forwarded. For this purpose a network switch device implements so called bridging table (MAC table) which is searched to get target interface for each packet entering the switch. If received source MAC address does not match any MAC table entry then a new entry, containing the Physical Interface which the packet has been received on, is added learned. Destination MAC address of an ingress packet is then used to search the table to determine the target interface.
- **Aging:** Each MAC table entry gets default timeout value once learned. In time this timeout is being decreased until zero is reached. Entries with zero timeout value are automatically removed from the table. The timeout value is re-set each time the corresponding table entry is used to process a packet.
- **Port migration:** When a MAC address is seen on one interface of the switch and an entry has been created, it is automatically updated when the MAC address is seen on another interface.
- VLAN Awareness: The bridge implements VLAN table. This table is used to implement VLAN-based policies like Ingress and Egress port membership. Feature includes configurable VLAN tagging and un-tagging functionality per bridge interface (Physical Interface). The bridge utilizes PFE HW accelerators to perform MAC and VLAN table lookup thus this operation is highly optimized. Host CPU SW is only responsible for correct bridge configuration using the dedicated API.

L2 Bridge VLAN Awareness and Domains

The VLAN awareness is based on entities called Bridge Domains (BD) which are visible to both classifier firmware, and the driver, and are used to abstract particular VLANs. Every BD contains configurable set of properties:

- Associated VLAN ID.
- Set of Physical Interfaces which are members of the domain.
- Information about which of the member interfaces are 'tagged' or 'untagged'.
- Instruction how to process matching uni-cast packets (forward, flood, discard, ...).
- Instruction how to process matching multi-cast packets.

The L2 Bridge then consists of multiple BD types:



- The Default BD: Default domain is used by the classification process when a packet has been received with default VLAN ID. This can happen either if the packet does not contain VLAN tag or the VLAN tag is equal to the default VLAN configured within the bridge.
- The Fall-back BD: This domain is used when packet with an unknown VLAN ID (does not match any standard or default domain) is received in FPP_IF_OP_VLAN_BRIDGE mode. It is also used as representation of simple L2 bridge when VLAN awareness is disabled (in case of the FPP_IF_OP_BRIDGE mode).
- **Set of particular Standard BDs:** Standard domain. Specifies what to do when packet with VLAN ID matching the Standard BD is received.

Configuration

Here are steps needed to configure VLAN-aware switch:

- 1. Optionally get list of available physical interfaces and their IDs. See the Interface Management.
- Create a bridge domain (VLAN domain) (FPP_CMD_L2_BD + FPP_ACTION_REGISTER).
- 3. Configure domain hit/miss actions (FPP_CMD_L2_BD + FPP_ACTION_UPDATE) to let the bridge know how to process matching traffic.
- 4. Add physical interfaces as members of that domain (FPP_CMD_L2_BD + FPP_ACTION_UPDATE). Adding interface to a bridge domain causes switch of its operation mode to FPP_IF_OP_VLAN_BRIDGE and enabling promiscuous mode on MAC level.
- 5. Set physical interface(s) to VLAN bridge mode FPP_IF_OP_VLAN_BRIDGE using FPP_CMD_PHY_IF + FPP_ACTION_UPDATE.
- 6. Set promiscuous mode and enable physical interface(s) by setting the FPP_IF_ENABLED and FPP_IF_PROMISC flags via the FPP_CMD_PHY_IF + FPP_ACTION_UPDATE.

For simple, non-VLAN aware switch do:

- 1. Optionally get list of available physical interfaces and their IDs. See the Interface Management.
- 2. Add physical interfaces as members of fall-back BD (FPP_CMD_L2_BD + FPP_ACTION_UPDATE). The fall-back BD is identified by VLAN 0 and exists automatically.
- 3. Configure domain hit/miss actions (FPP_CMD_L2_BD + FPP_ACTION_UPDATE) to let the bridge know how to process matching traffic.
- 4. Set physical interface(s) to simple bridge mode FPP_IF_OP_BRIDGE using FPP_CMD_PHY_IF + FPP_ACTION_UPDATE.



5. Set promiscuous mode and enable physical interface(s) by setting the FPP_IF_ENABLED and FPP_IF_PROMISC flags via the FPP_CMD_PHY_IF + FPP_ACTION_UPDATE.

Once interfaces are in bridge domain, all ingress traffic is processed according to bridge domain setup. Unknown source MAC addresses are being learned and after specified time period without traffic are being aged.

An interface can be added to or removed from BD at any time via FPP_CMD_L2_BD + FPP_ACTION_UPDATE. When interface is removed from all bridge domains (is not associated with any BD), its operation mode is automatically switched to FPP_IF_OP_DEFAULT and MAC promiscuous mode is disabled.

List of available bridge domains with their properties can be retrieved using FPP_CMD_L2_BD + FPP_ACTION_QUERY + FPP_ACTION_QUERY_CONT.

5.1.6.3 Flexible Parser

Introduction

The Flexible Parser is PFE firmware-based feature allowing user to extend standard ingress packet classification process by set of customizable classification rules. According to the rules the Flexible Parser can mark frames as ACCEPTED or REJECTED. The rules are configurable by user and exist in form of tables. Every classification table entry consist of following fields:

- 32-bit Data field to be compared with value from the ingress frame.
- 32-bit Mask field (active bits are '1') specifying which bits of the data field will be used to perform the comparison.
- 16-bit Configuration field specifying rule properties including the offset to the frame data which shall be compared.

The number of entries within the table is configurable by user. The table is processed sequentially starting from entry index 0 until the last one is reached or classification is terminated by a rule configuration. When none of rules has decided that the packet shall be accepted or rejected the default result is REJECT.

Example

This is example of how Flexible Parser table can be configured. Every row contains single rule and processing starts with rule 0. ACCEPT/REJECT means that the classification is terminated with given result, CONTINUE means that next rule (sequentially) will be evaluated. CONTINUE with N says that next rule to be evaluated is N. Evaluation of the latest rule not resulting in ACCEPT or REJECT results in REJECT.



Rule	Flags	Mask	Next	Condition
0	FP_FL_INVERT	!= 0	n/a	if ((PacketData&Mask) != (RuleData&Mask))
	FP_FL_REJECT			then REJECT
				else CONTINUE
1	FP_FL_ACCEPT	!= 0	n/a	if ((PacketData&Mask) == (RuleData&Mask))
				then ACCEPT
				else CONTINUE
2	-	!= 0	4	if ((PacketData&Mask) == (RuleData&Mask))
				then CONTINUE with 4
				else CONTINUE
3	FP_FL_REJECT	= 0	n/a	REJECT
4	FP_FL_INVERT	!= 0	6	if ((PacketData&Mask) != (RuleData&Mask))
				then CONTINUE with 6
				else CONTINUE
5	FP_FL_ACCEPT	= 0	n/a	ACCEPT
6	FP_FL_INVERT	!= 0	n/a	if ((PacketData&Mask) != (RuleData&Mask))
	FP_FL_ACCEPT			then ACCEPT
				else CONTINUE
7	FP_FL_REJECT	= 0	n/a	REJECT

Configuration

- 1. Create a Flexible Parser table using FPP_CMD_FP_TABLE + FPP_ACTION_REGISTER.
- 2. Create one or multiple rules with FPP_CMD_FP_RULE + FPP_ACTION_REGISTER.
- 3. Assing rules to tables via FPP_CMD_FP_TABLE + FPP_ACTION_USE_RULE. Rules can be removed from table with FPP_ACTION_UNUSE_RULE.

Created table can be used for instance as argument of Flexible Router. When not needed the table can be deleted with FPP_CMD_FP_TABLE + FPP_ACTION_DEREGISTER and particular rules with FPP_CMD_FP_RULE + FPP_ACTION_DEREGISTER. This cleanup should be always considered since tables and rules are stored in limited PFE internal memory.

Flexible parser classification introduces performance penalty which is proportional to number of rules and complexity of the table.

5.1.6.4 Flexible Router

Introduction

Flexible router specifies behavior when ingress packets are classified and routed according to custom rules different from standard L2 Bridge (Switch) or IPv4/IPv6 Router processing. Feature allows definition of packet distribution rules using physical and logical interfaces. The classification hierarchy is given by ingress physical interface containing a configurable set of logical interfaces. Every time a packet is received via the respective physical interface, which is configured to use the Flexible Router classification, a walk through the list of



associated logical interfaces is performed. Every logical interface is used to match the packet using interface-specific rules (fpp_if_m_rules_t). In case of match the matching packet is processed according to the interface configuration (e.g. forwarded via specific physical interface(s), dropped, sent to host, ...). In case when more rules are specified, the logical interface can be configured to apply logical AND or OR to get the match result. Please see the example within Interface Management.

Configuration

- 1. Lock interface database with FPP_CMD_IF_LOCK_SESSION.
- 2. Use FPP_CMD_PHY_IF + FPP_ACTION_UPDATE to set a physical interface(s) to FPP IF OP FLEXIBLE ROUTER operation mode.
- 3. Use FPP_CMD_LOG_IF + FPP_ACTION_REGISTER to create new logical interface(s) if needed.
- 4. Optionally, if Flexible Parser is desired to be used as a classification rule, create table(s) according to Flexible Parser description.
- 5. Configure existing logical interface(s) (set match rules and arguments) via FPP_CMD_LOG_IF + FPP_ACTION_UPDATE.
- 6. Unlock interface database with FPP_CMD_IF_UNLOCK_SESSION.

Note that Flexible Router can be used to implement certain form of IPv4/IPv6 Router (TCP/UDP) as well as L2 Bridge (Switch). Such usage is of course not recommended since both mentioned features exist as fully optimized implementation and usage of Flexible Router this way would pointlessly affect forwarding performance.

Files

- file fpp_ext.h

 Extension of the legacy fpp.h.
- file libfci.h

Generic LibFCI header file.

Macros

- #define FPP_CMD_PHY_IF
 - $FCI\ command\ for\ working\ with\ physical\ interfaces.$
- #define FPP_CMD_LOG_IF
 - FCI command for working with logical interfaces.
- #define FPP_CMD_IF_LOCK_SESSION
 - FCI command to perform lock on interface database.
- #define FPP_CMD_IF_UNLOCK_SESSION



FCI command to perform unlock on interface database.

• #define FPP_CMD_L2_BD

VLAN-based L2 bridge domain management.

• #define FPP_CMD_FP_TABLE

Administers the Flexible Parser tables.

• #define FPP_CMD_FP_RULE

Administers the Flexible Parser rules.

• #define FPP_ACTION_USE_RULE

Flexible Parser specific 'use' action for FPP_CMD_FP_TABLE.

• #define FPP ACTION UNUSE RULE

Flexible Parser specific 'unuse' action for FPP_CMD_FP_TABLE.

• #define FPP_CMD_FP_FLEXIBLE_FILTER

Uses flexible parser to filter out frames from further processing.

#define FCI_CFG_FORCE_LEGACY_API

Changes the LibFCI API so it is more compatible with legacy implementation.

- #define FPP_CMD_IPV4_CONNTRACK_CHANGE
- #define FPP CMD IPV6 CONNTRACK CHANGE
- #define CTCMD_FLAGS_ORIG_DISABLED

Disable connection originator.

• #define CTCMD FLAGS REP DISABLED

Disable connection replier.

Enumerations

enum fpp_if_flags_t {

```
FPP_IF_ENABLED, FPP_IF_PROMISC,
FPP_IF_MATCH_OR, FPP_IF_DISCARD,
FPP_IF_MIRROR }
    Interface flags.
• enum fpp_phy_if_op_mode_t {
    FPP_IF_OP_DISABLED, FPP_IF_OP_DEFAULT,
    FPP_IF_OP_BRIDGE, FPP_IF_OP_ROUTER,
    FPP_IF_OP_VLAN_BRIDGE, FPP_IF_OP_FLEXIBLE_ROUTER }
    Physical if modes.
```

```
    enum fpp_if_m_rules_t {
        FPP_IF_MATCH_TYPE_ETH, FPP_IF_MATCH_TYPE_VLAN,
        FPP_IF_MATCH_TYPE_PPPOE, FPP_IF_MATCH_TYPE_ARP,
        FPP_IF_MATCH_TYPE_MCAST, FPP_IF_MATCH_TYPE_IPV4,
        FPP_IF_MATCH_TYPE_IPV6, FPP_IF_MATCH_RESERVED7,
        FPP_IF_MATCH_RESERVED8, FPP_IF_MATCH_TYPE_IPX,
        FPP_IF_MATCH_TYPE_BCAST, FPP_IF_MATCH_TYPE_UDP,
        FPP_IF_MATCH_TYPE_TCP, FPP_IF_MATCH_TYPE_ICMP,
        FPP_IF_MATCH_TYPE_IGMP, FPP_IF_MATCH_VLAN,
```



```
FPP IF MATCH PROTO, FPP IF MATCH SPORT,
 FPP_IF_MATCH_DPORT, FPP_IF_MATCH_SIP6,
 FPP_IF_MATCH_DIP6, FPP_IF_MATCH_SIP,
 FPP IF MATCH DIP, FPP IF MATCH ETHTYPE,
 FPP_IF_MATCH_FP0, FPP_IF_MATCH_FP1,
 FPP_IF_MATCH_SMAC, FPP_IF_MATCH_DMAC,
 FPP_IF_MATCH_HIF_COOKIE }
    Match rules. Can be combined using bitwise OR.
• enum fpp phy if block state t {
 BS_NORMAL, BS_BLOCKED,
 BS_LEARN_ONLY, BS_FORWARD_ONLY }
    Interface blocking state.
• enum fpp_l2_bd_flags_t { FPP_L2BR_DOMAIN_DEFAULT, FPP_L2BR_DOMAIN_FALLBACK
 }
    L2 bridge domain flags.
enum fpp_fp_rule_match_action_t {
 FP_ACCEPT, FP_REJECT,
 FP NEXT RULE }
    Specifies the Flexible Parser result on the rule match.
• enum fpp fp offset from t {
 FP_OFFSET_FROM_L2_HEADER, FP_OFFSET_FROM_L3_HEADER,
 FP_OFFSET_FROM_L4_HEADER }
    Specifies how to calculate the frame data offset.
• enum fci_mcast_groups_t { FCI_GROUP_NONE, FCI_GROUP_CATCH }
    List of supported multicast groups.
enum fci_client_type_t { FCI_CLIENT_DEFAULT }
    List of supported FCI client types.
• enum fci_cb_retval_t { FCI_CB_STOP, FCI_CB_CONTINUE }
    The FCI callback return values.
```

Functions

- FCI_CLIENT * fci_open (fci_client_type_t type, fci_mcast_groups_t group)
 - Creates new FCI client and opens a connection to FCI endpoint.
- int fci_close (FCI_CLIENT *client)

Disconnects from FCI endpoint and destroys FCI client instance.

- int fci_catch (FCI_CLIENT *client)
 - Catch and process all FCI messages delivered to the FCI client.
- int fci_cmd (FCI_CLIENT *client, unsigned short fcode, unsigned short *cmd_buf, unsigned short cmd_len, unsigned short *rep_buf, unsigned short *rep_len)
 - Run an FCI command with optional data response.
- int fci_query (FCI_CLIENT *this_client, unsigned short fcode, unsigned short cmd_len, unsigned short *pcmd, unsigned short *rsplen, unsigned short *rsp_data)



Run an FCI command with data response.

• int fci_write (FCI_CLIENT *client, unsigned short fcode, unsigned short cmd_len, unsigned short *cmd_buf)

Run an FCI command.

• int fci_register_cb (FCI_CLIENT *client, fci_cb_retval_t(*event_cb)(unsigned short fcode, unsigned short len, unsigned short *payload))

Register event callback function.

• int fci_fd (FCI_CLIENT *this_client)

Obsolete function, shall not be used.

5.1.7 Defines

5.1.7.1 FPP_CMD_PHY_IF

#define FPP_CMD_PHY_IF

FCI command for working with physical interfaces.

Note

Command is defined as extension of the legacy fpp.h.

Interfaces are needed to be known to FCI to support insertion of routes and conntracks. Command can be used to get operation mode, mac address and operation flags (enabled, promisc).

Command can be used with various .action values:

- FPP_ACTION_UPDATE: Updates properties of an existing physical interface.
- FPP_ACTION_QUERY: Gets head of list of existing physical interfaces properties.
- FPP_ACTION_QUERY_CONT: Gets next item from list of existing physical interfaces. Shall be called after FPP_ACTION_QUERY was called. On each call it replies with properties of the next interface in the list.

Note

Precondition to use the query is to atomically lock the access with FPP_CMD_IF_LOCK_SESSION.

Command Argument Type: fpp_phy_if_cmd_t



Action FPP_ACTION_UPDATE

Update interface properties. Set fpp_phy_if_cmd_t.action to FPP_ACTION_UPDATE and fpp_phy_if_cmd_t.name to name of the desired interface to be updated. Rest of the fpp_phy_if_cmd_t members will be considered to be used as the new interface properties. It is recommended to use read-modify-write approach in combination with FPP_ACTION_QUERY and FPP_ACTION_QUERY_CONT.

Action FPP_ACTION_QUERY and FPP_ACTION_QUERY_CONT

Get interface properties. Set fpp_phy_if_cmd_t.action to FPP_ACTION_QUERY to get first interface from the list of physical interfaces or FPP_ACTION_QUERY_CONT to get subsequent entries. Response data type for query commands is of type fpp_phy_if_cmd_t.

For operation modes see fpp_phy_if_op_mode_t. For operation flags see fpp_if_flags_t.

Possible command return values are:

- FPP_ERR_OK: Success.
- FPP_ERR_IF_ENTRY_NOT_FOUND: Last entry in the query session.
- FPP_ERR_IF_WRONG_SESSION_ID: Someone else is already working with the interfaces.
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.

Examples

fpp_cmd_phy_if.c.

5.1.7.2 FPP CMD LOG IF

#define FPP_CMD_LOG_IF

FCI command for working with logical interfaces.

Note

Command is defined as extension of the legacy fpp.h.

Command can be used to update match rules of logical interface or for adding egress interfaces. It can also update operational flags (enabled, promisc, match). Following values of .action are supported:

- FPP_ACTION_REGISTER: Creates a new logical interface.
- FPP_ACTION_DEREGISTER: Destroys an existing logical interface.
- FPP_ACTION_UPDATE: Updates properties of an existing logical interface.



- FPP_ACTION_QUERY: Gets head of list of existing logical interfaces parameters.
- FPP_ACTION_QUERY_CONT: Gets next item from list of existing logical interfaces. Shall be called after FPP_ACTION_QUERY was called. On each call it replies with properties of the next interface.

Precondition to use the query is to atomic lock the access with FPP_CMD_IF_LOCK_SESSION. Command Argument Type: fpp_log_if_cmd_t

Action FPP_ACTION_REGISTER

To create a new logical interface the FPP_CMD_LOG_IF command expects following values to be set in the command argument structure:

The interface *logif1* will be created as child of *emac0* without any configuration and disabled. Names of available physical interfaces can be obtained via FPP_CMD_PHY_IF + FPP ACTION QUERY + FPP ACTION QUERY CONT.

Action FPP_ACTION_DEREGISTER

Items to be set in command argument structure to remove a logical interface:

Action FPP_ACTION_UPDATE

To update logical interface properties just set fpp_log_if_cmd_t.action to FPP_ACTION_UPDATE and fpp_log_if_cmd_t.name to the name of logical interface which you wish to update. Rest of the fpp_log_if_cmd_t structure members will be considered to be used as the new interface properties. It is recommended to use read-modify-write approach in combination with FPP_ACTION_QUERY and FPP_ACTION_QUERY_CONT.

For match rules see (fpp_if_m_rules_t). For match rules arguments see (fpp_if_m_args_t).

Possible command return values are:

- FPP_ERR_OK: Update successful.
- FPP_ERR_IF_ENTRY_NOT_FOUND: If corresponding logical interface doesn't exit.
- FPP_ERR_IF_RESOURCE_ALREADY_LOCKED: Someone else is already configuring the interfaces.
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.



Action FPP_ACTION_QUERY and FPP_ACTION_QUERY_CONT

Get interface properties. Set fpp_log_if_cmd_t.action to FPP_ACTION_QUERY to get first interface from the list of all logical interfaces or FPP_ACTION_QUERY_CONT to get subsequent entries. Response data type for query commands is of type fpp_log_if_cmd_t.

Possible command return values are:

- FPP ERR OK: Success.
- FPP_ERR_IF_ENTRY_NOT_FOUND: Last entry in the query session.
- FPP_ERR_IF_WRONG_SESSION_ID: Someone else is already working with the interfaces.
- FPP_ERR_IF_MATCH_UPDATE_FAILED: Update of match flags has failed.
- FPP_ERR_IF_EGRESS_UPDATE_FAILED: Update of egress interfaces has failed.
- FPP_ERR_IF_EGRESS_DOESNT_EXIST: Egress interface provided in command doesn't exist.
- FPP_ERR_IF_OP_FLAGS_UPDATE_FAILED: Operation flags update has failed (PROMISC/ENABLE/MATCH).
- FPP ERR INTERNAL FAILURE: Internal FCI failure.

Examples

fpp_cmd_log_if.c.

5.1.7.3 FPP_CMD_IF_LOCK_SESSION

#define FPP_CMD_IF_LOCK_SESSION

FCI command to perform lock on interface database.

The reason for it is guaranteed atomic operation between fci/rpc/platform.

Note

Command is defined as extension of the legacy fpp.h.

Possible command return values are:

- FPP_ERR_OK: Lock successful
- FPP_ERR_IF_RESOURCE_ALREADY_LOCKED: Database was already locked by someone else

Examples

fpp_cmd_log_if.c, and fpp_cmd_phy_if.c.



5.1.7.4 FPP_CMD_IF_UNLOCK_SESSION

#define FPP_CMD_IF_UNLOCK_SESSION

FCI command to perform unlock on interface database.

The reason for it is guaranteed atomic operation between fci/rpc/platform.

Note

Command is defined as extension of the legacy fpp.h.

Possible command return values are:

- FPP_ERR_OK: Lock successful
- FPP_ERR_IF_WRONG_SESSION_ID: The lock wasn't locked or was locked in different session and will not be unlocked.

Examples

fpp_cmd_log_if.c, and fpp_cmd_phy_if.c.

5.1.7.5 FPP_CMD_L2_BD

```
#define FPP_CMD_L2_BD
```

VLAN-based L2 bridge domain management.

Bridge domain can be used to include a set of physical interfaces and isolate them from another domains using VLAN. Command can be used with various .action values:

- FPP_ACTION_REGISTER: Create a new bridge domain.
- FPP_ACTION_DEREGISTER: Delete bridge domain.
- FPP_ACTION_UPDATE: Update a bridge domain meaning that will rewrite domain properties except of VLAN ID.
- FPP_ACTION_QUERY: Gets head of list of registered domains.
- FPP_ACTION_QUERY_CONT: Get next item from list of registered domains. Shall be called after FPP_ACTION_QUERY was called. On each call it replies with parameters of next domain. It returns FPP_ERR_RT_ENTRY_NOT_FOUND when no more entries exist.

Command Argument Type: fpp_l2_bd_cmd_t



Action FPP_ACTION_REGISTER

Items to be set in command argument structure:

```
fpp_12_bd_cmd_t cmd_data =
{
    // Register new bridge domain
    .action = FPP_ACTION_REGISTER,
    // VLAN ID associated with the domain (network endian)
    .vlan = ...,
    // Action to be taken when destination MAC address (uni-cast) of a packet
    // matching the domain is found in the MAC table: 0 - Forward, 1 - Flood,
    // 2 - Punt, 3 - Discard
    .ucast_hit = ...,
    // Action to be taken when destination MAC address (uni-cast) of a packet
    // matching the domain is not found in the MAC table.
    .ucast_miss = ...,
    // Multicast hit action
    .mcast_hit = ...,
    // Multicast miss action
    .mcast_miss = ...
};
```

Possible command return values are:

- FPP_ERR_OK: Domain added.
- FPP_ERR_WRONG_COMMAND_PARAM: Unexpected argument.
- FPP_ERR_L2BRIDGE_DOMAIN_ALREADY_REGISTERED: Given domain already registered.
- FPP ERR INTERNAL FAILURE: Internal FCI failure.

Action FPP_ACTION_DEREGISTER

Items to be set in command argument structure:

```
fpp_12_bd_cmd_t cmd_data =
{
    // Delete bridge domain
    .action = FPP_ACTION_DEREGISTER,
    // VLAN ID associated with the domain to be deleted (network endian)
    .vlan = ...,
}.
```

Possible command return values are:

- FPP_ERR_OK: Domain removed.
- FPP ERR WRONG COMMAND PARAM: Unexpected argument.
- FPP_ERR_L2BRIDGE_DOMAIN_NOT_FOUND: Given domain not found.
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.

Action FPP_ACTION_UPDATE

Items to be set in command argument structure:

```
fpp_12_bd_cmd_t cmd_data =
{
    // Update bridge domain
    .action = FPP_ACTION_UPDATE,
```



```
// VLAN ID associated with the domain to be updated (network endian)
.vlan = ...,
// New unicast hit action (0 - Forward, 1 - Flood, 2 - Punt, 3 - Discard)
.ucast_hit = ...,
// New unicast miss action
.ucast_miss = ...
// New multicast hit action
.mcast_hit = ...,
// New multicast miss action
.mcast_miss = ...,
// New port list (network endian). Bitmask where every set bit represents
// ID of physical interface being member of the domain. For instance bit
// (1 \alpha 3), if set, says that interface with ID=3 is member of the domain.
// Only valid interface IDs are accepted by the command. If flag is set,
// interface is added to the domain. If flag is not set and interface
// has been previously added, it is removed. The IDs are given by the
// related FCI endpoint and related networking HW. Interface IDs can be
// obtained via FPP_CMD_PHY_IF.
.if_list = ...,
// Flags marking interfaces listed in @c if_list to be 'tagged' or
// 'untagged' (network endian). If respective flag is set, corresponding
// interface within the @c if_list is treated as 'untagged' meaning that
// the VLAN tag will be removed. Otherwise it is configured as 'tagged'.
// Note that only interfaces listed within the @c if_list are taken into
// account.
.untag_if_list = ...,
```

Possible command return values are:

- FPP_ERR_OK: Domain updated.
- FPP_ERR_WRONG_COMMAND_PARAM: Unexpected argument.
- FPP_ERR_L2BRIDGE_DOMAIN_NOT_FOUND: Given domain not found.
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.

Action FPP_ACTION_QUERY and FPP_ACTION_QUERY_CONT

Items to be set in command argument structure:

Response data type for queries: fpp_l2_bd_cmd_t

Response data provided (all values in network byte order):

```
// VLAN ID associated with domain (network endian)
rsp_data.vlan;
// Action to be taken when destination MAC address (uni-cast) of a packet
// matching the domain is found in the MAC table: 0 - Forward, 1 - Flood,
// 2 - Punt, 3 - Discard
rsp data.ucast hit:
// Action to be taken when destination MAC address (uni-cast) of a packet
// matching the domain is not found in the MAC table.
rsp data.ucast miss;
// Multicast hit action.
rsp_data.mcast_hit;
// Multicast miss action.
rsp_data.mcast_miss;
// Bitmask where every set bit represents ID of physical interface being member
// of the domain. For instance bit (1 	imes 3), if set, says that interface with ID=3
// is member of the domain.
rsp_data.if_list;
// Similar to @c if_list but this interfaces are configured to be VLAN 'untagged'.
rsp_data.untag_if_list;
```



```
// See the fpp_l2_bd_flags_t.
rsp_data.flags;
```

Possible command return values are:

- FPP_ERR_OK: Response buffer written.
- FPP_ERR_L2BRIDGE_DOMAIN_NOT_FOUND: No more entries.
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.

5.1.7.6 FPP_CMD_FP_TABLE

```
#define FPP CMD FP TABLE
```

Administers the Flexible Parser tables.

The Flexible Parser table is an ordered set of Flexible Parser rules which are matched in the order of appearance until match occurs or end of the table is reached. The following actions can be done on the table:

- FPP_ACTION_REGISTER: Create a new table with a given name.
- FPP_ACTION_DEREGISTER: Destroy an existing table.
- FPP ACTION USE RULE: Add a rule into the table at specified position.
- FPP_ACTION_UNUSE_RULE: Remove a rule from the table.
- FPP_ACTION_QUERY: Return the first rule in the table.
- FPP_ACTION_QUERY_CONT: Return the next rule in the table.

The Flexible Parser starts processing the table from the 1st rule in the table. If there is no match the Flexible Parser always continues with the rule following the currently processed rule. The processing ends once rule match happens and the rule action is one of the FP_ACCEPT or FP_REJECT and the respective value is returned. REJECT is also returned after the last rule in the table was processed without any match. The Flexible Parser may branch to arbitrary rule in the table if some rule matches and the action is FP_NEXT_RULE. Note that loops are forbidden.

See the FPP_CMD_FP_RULE and fpp_fp_rule_props_t for the detailed description of how the rules are being matched.

Action FPP ACTION REGISTER

Items to be set in command argument structure:



Action FPP_ACTION_DEREGISTER

Items to be set in command argument structure:

Action FPP_ACTION_USE_RULE

Items to be set in command argument structure:

Note

Single rule can be member of only one table.

Action FPP_ACTION_UNUSE_RULE

Items to be set in command argument structure:

Action FPP_ACTION_QUERY

Items to be set in command argument structure:

Response data type for queries: fpp_fp_rule_cmd_t

Response data provided:

Note

All data is provided in the network byte order.

Action FPP_ACTION_QUERY_CONT

Items to be set in command argument structure:



Response data is provided in the same form as for FPP_ACTION_QUERY action.

5.1.7.7 FPP_CMD_FP_RULE

```
#define FPP_CMD_FP_RULE
```

Administers the Flexible Parser rules.

Each Flexible Parser rule consists of a condition specified by data, mask and offset triplet and action to be performed. If 32-bit frame data at given offset masked by mask is equal to the specified data masked by the same mask then the condition is true. An invert flag may be set to invert the condition result. The rule action may be either accept, reject or next_rule which means to continue with a specified rule.

The rule administering command may be one of the following actions:

- FPP_ACTION_REGISTER: Create a new rule.
- FPP_ACTION_DEREGISTER: Delete an existing rule.
- FPP_ACTION_QUERY: Return the first rule (among all existing rules).
- FPP_ACTION_QUERY_CONT: Return the next rule.

Action FPP_ACTION_REGISTER

Items to be set in command argument structure:

```
fpp_fp_rule_cmd_t cmd_data =
   // Creates a new rule
   .action = FPP_ACTION_REGISTER,
   // Unique up-to-15-character rule identifier
   .r.rule_name = "rule_name",
   // 32-bit data to match with the frame data at given offset (network endian)
   .r.data = htonl(0x08000000),
   // 32-bit mask to apply on the frame data and .r.data before comparison (network endian)
   .r.mask = htonl(0xFFFF0000),
   // Offset of the frame data to be compared (network endian)
   .r.offset = htonl(12),
  // Invert match or not (values 0 or 1)
   .r.invert = 0,
   // How to calculate the offset
   .r.match_action = FP_OFFSET_FROM_L2_HEADER,
  // Action to be done on match
   .r.offset_from = FP_ACCEPT,
   // Identifier of the next rule to use when match_action == FP_NEXT_RULE
   .r.next_rule_name = "rule_name2"
```

This example is used to match and accept all IPv4 frames (16-bit value 0x0800 at bytes 12 and 13, when starting bytes counting from 0).

Note

All values are specified in the network byte order.



Warning

It is forbidden to create rule loops using the *next_rule* feature.

Action FPP_ACTION_DEREGISTER

Items to be set in command argument structure:

Action FPP_ACTION_QUERY

Items to be set in command argument structure:

Response data type for queries: fpp_fp_rule_cmd_t

Response data provided:

Note

All data is provided in the network byte order.

Action FPP_ACTION_QUERY_CONT

Items to be set in command argument structure:

Response data is provided in the same form as for FPP_ACTION_QUERY action.

5.1.7.8 FPP_CMD_FP_FLEXIBLE_FILTER

```
#define FPP_CMD_FP_FLEXIBLE_FILTER
```

Uses flexible parser to filter out frames from further processing.

Allows registration of a Flexible Parser table (see FPP_CMD_FP_TABLE) as a filter which:

- FPP_ACTION_REGISTER: Use the specified table as a Flexible Filter (replace old table by a new one if already configured).
- FPP_ACTION_DEREGISTER: Disable Flexible Filter, no table will be used as Flexible Filter.



The Flexible Filter examines received frames before any other processing and discards those which have REJECT result from the configured Flexible Parser.

See the FPP_CMD_FP_TABLE for flexible parser behavior description.

Action FPP ACTION REGISTER

Items to be set in command argument structure:

```
fpp_flexible_filter_cmd_t cmd_data =
{
    // Set the specified table as Flexible Filter
    .action = FPP_ACTION_REGISTER,
    // Name of the Flexible Parser table to be used to filter the frames
    .table_name = "table_name"
}
```

Action FPP ACTION DEREGISTER

Items to be set in command argument structure:

```
fpp_flexible_filter_cmd_t cmd_data =
{
    // Disable the Flexible Filter
    .action = FPP_ACTION_DEREGISTER,
}
```

5.1.7.9 FCI_CFG_FORCE_LEGACY_API

```
#define FCI_CFG_FORCE_LEGACY_API
```

Changes the LibFCI API so it is more compatible with legacy implementation.

LibFCI API was modified to avoid some inconvenient properties. Here are the points the legacy API differs in:

1. With legacy API, argument rsp_data of function fci_query shall be provided shifted by two bytes this way:

```
reply_struct_t rsp_data;
retval = fci_query(this_client, fcode, cmd_len, &pcmd, &rsplen, (unsigned short
 *)(&rsp_data) + lu);
```

Where reply_struct_t is the structure type depending on command being called.

2. In legacy API, macros FPP_CMD_IPV4_CONNTRACK_CHANGE and FPP_CMD_IPV6_CONNTRACK_CHANGE are defined in application files. In current API they are defined here in libfci.h.

Warning

It is not recommended to enable this feature.

2019-2020 NXP Public 38



5.1.7.10 FPP_CMD_IPV4_CONNTRACK_CHANGE

#define FPP_CMD_IPV4_CONNTRACK_CHANGE

5.1.7.11 FPP_CMD_IPV6_CONNTRACK_CHANGE

#define FPP_CMD_IPV6_CONNTRACK_CHANGE

5.1.7.12 CTCMD_FLAGS_REP_DISABLED

#define CTCMD_FLAGS_REP_DISABLED

Disable connection replier.

Used to create uni-directional connections (see FPP_CMD_IPV4_CONNTRACK, FPP_CMD_IPV4_CONNTRACK)

Examples

fpp_cmd_ipv4_conntrack.c, and fpp_cmd_ipv6_conntrack.c.

5.1.8 Enums

5.1.8.1 fpp_if_flags_t

enum fpp_if_flags_t

Interface flags.

Enumerator

FPP_IF_ENABLED	If set, interface is enabled
FPP_IF_PROMISC	If set, interface is promiscuous
FPP_IF_MATCH_OR	Result of match is logical OR of rules, else AND
FPP_IF_DISCARD	Discard matching frames
FPP_IF_MIRROR	If set mirroring is enabled

5.1.8.2 fpp_phy_if_op_mode_t

enum fpp_phy_if_op_mode_t

Physical if modes.



Enumerator

FPP_IF_OP_DISABLED	Disabled
FPP_IF_OP_DEFAULT	Default operational mode
FPP_IF_OP_BRIDGE	L2 bridge
FPP_IF_OP_ROUTER	L3 router
FPP_IF_OP_VLAN_BRIDGE	L2 bridge with VLAN
FPP_IF_OP_FLEXIBLE_ROUTER	Flexible router

5.1.8.3 fpp_if_m_rules_t

enum fpp_if_m_rules_t

Match rules. Can be combined using bitwise OR.

Enumerator

FPP_IF_MATCH_TYPE_ETH	Match ETH Packets
FPP_IF_MATCH_TYPE_VLAN	Match VLAN Tagged Packets
FPP_IF_MATCH_TYPE_PPPOE	Match PPPoE Packets
FPP_IF_MATCH_TYPE_ARP	Match ARP Packets
FPP_IF_MATCH_TYPE_MCAST	Match Multicast (L2) Packets
FPP_IF_MATCH_TYPE_IPV4	Match IPv4 Packets
FPP_IF_MATCH_TYPE_IPV6	Match IPv6 Packets
FPP_IF_MATCH_RESERVED7	Reserved
FPP_IF_MATCH_RESERVED8	Reserved
FPP_IF_MATCH_TYPE_IPX	Match IPX Packets
FPP_IF_MATCH_TYPE_BCAST	Match Broadcast (L2) Packets
FPP_IF_MATCH_TYPE_UDP	Match UDP Packets
FPP_IF_MATCH_TYPE_TCP	Match TCP Packets
FPP_IF_MATCH_TYPE_ICMP	Match ICMP Packets
FPP_IF_MATCH_TYPE_IGMP	Match IGMP Packets
FPP_IF_MATCH_VLAN	Match VLAN ID
FPP_IF_MATCH_PROTO	Match IP Protocol
FPP_IF_MATCH_SPORT	Match L4 Source Port
FPP_IF_MATCH_DPORT	Match L4 Destination Port
FPP_IF_MATCH_SIP6	Match Source IPv6 Address
FPP_IF_MATCH_DIP6	Match Destination IPv6 Address
FPP_IF_MATCH_SIP	Match Source IPv4 Address
FPP_IF_MATCH_DIP	Match Destination IPv4 Address
FPP_IF_MATCH_ETHTYPE	Match EtherType
FPP_IF_MATCH_FP0	Match Packets Accepted by Flexible Parser 0
FPP_IF_MATCH_FP1	Match Packets Accepted by Flexible Parser 1
FPP_IF_MATCH_SMAC	Match Source MAC Address
L	l .

2019-2020 NXP Public 40



Enumerator

FPP_IF_MATCH_DMAC	Match Destination MAC Address
FPP_IF_MATCH_HIF_COOKIE	Match HIF header cookie value

5.1.8.4 fpp_phy_if_block_state_t

enum fpp_phy_if_block_state_t

Interface blocking state.

Enumerator

BS_NORMAL	Learning and forwarding enabled
BS_BLOCKED	Learning and forwarding disabled
BS_LEARN_ONLY	Learning enabled, forwarding disabled
BS_FORWARD_ONLY	Learning disabled, forwarding enabled

5.1.8.5 fpp_l2_bd_flags_t

enum fpp_12_bd_flags_t

L2 bridge domain flags.

Enumerator

FPP_L2BR_DOMAIN_DEFAULT	Domain type is default
FPP_L2BR_DOMAIN_FALLBACK	Domain type is fallback

5.1.8.6 fpp_fp_rule_match_action_t

 $\verb"enum fpp_fp_rule_match_action_t"$

Specifies the Flexible Parser result on the rule match.

Enumerator

FP_ACCEPT Flexible parser result on rule match is ACCEPT	
FP_REJECT	Flexible parser result on rule match is REJECT
FP_NEXT_RULE	On rule match continue matching by the specified rule



5.1.8.7 fpp_fp_offset_from_t

```
enum fpp_fp_offset_from_t
```

Specifies how to calculate the frame data offset.

The offset may be calculated either from the L2, L3 or L4 header beginning. The L2 header beginning is also the Ethernet frame beginning because the Ethernet frame begins with the L2 header. This offset is always valid however if the L3 or L4 header is not recognized then the rule is always skipped as not-matching.

Enumerator

FP_OFFSET_FROM_L2_HEADER	Calculate offset from the L2 header (frame beginning)
FP_OFFSET_FROM_L3_HEADER	Calculate offset from the L3 header
FP_OFFSET_FROM_L4_HEADER	Calculate offset from the L4 header

5.1.8.8 fci_mcast_groups_t

```
enum fci_mcast_groups_t
```

List of supported multicast groups.

An FCI client instance can be member of a multicast group. It means it can send and receive multicast messages to/from another group members (another FCI instances or FCI endpoints). This can be in most cases used by FCI endpoint to notify all associated FCI instances about some event has occurred.

Note

Each group is intended to be represented by a single bit flag (max 32-bit, so it is possible to have max 32 multicast groups). Then, groups can be combined using bitwise OR operation.

Enumerator

FCI_GROUP_NONE	Default MCAST group value, no group, for sending FCI commands	
FCI_GROUP_CATCH	MCAST group for catching events	

5.1.8.9 fci_client_type_t

enum fci_client_type_t

List of supported FCI client types.



FCI client can specify using this type to which FCI endpoint shall be connected.

Enumerator

FCI_CLIENT_DEFAULT	Default type (equivalent of legacy FCILIB_FF_TYPE macro)
--------------------	--

5.1.8.10 fci_cb_retval_t

```
enum fci cb retval t
```

The FCI callback return values.

These return values shall be used in FCI callback (see fci_register_cb). It tells fci_catch function whether it should return or continue.

Enumerator

FCI_CB_STOP	Stop waiting for events and exit fci_catch function	
FCI_CB_CONTINUE	Continue waiting for next events	

5.1.9 Functions

5.1.9.1 fci_open()

Creates new FCI client and opens a connection to FCI endpoint.

Binds the FCI client with FCI endpoint. This enables sending/receiving data to/from the endpoint. Refer to the remaining API for possible communication options.

Parameters

in	type	Client type. Default value is FCI_CLIENT_DEFAULT. See fci_client_type_t.
in	group	A 32-bit multicast group mask. Each bit represents single multicast
		address. FCI instance will listen to specified multicast addresses as well it will send data to all specified multicast groups. See

Returns

The FCI client instance or NULL if failed



5.1.9.2 fci_close()

Disconnects from FCI endpoint and destroys FCI client instance.

Terminate the FCI client and release all allocated resources.

Parameters

Returns

0 if success, error code otherwise

5.1.9.3 fci_catch()

Catch and process all FCI messages delivered to the FCI client.

Function is intended to be called in its own thread. It waits for message reception. If there is an event callback associated with the FCI client, assigned by function fci_register_cb, then, when message is received, the callback is called to process the data. As long as there is no error and the callback returns FCI_CB_CONTINUE, fci_catch continues waiting for another message. Otherwise it returns.

Note

This is a blocking function.

Multicast group FCI_GROUP_CATCH shall be used when opening the client for catching messages

See also

```
fci_register_cb()
```

Parameters

Return values



Return values

Error code. See the 'errno' for more detail	ls
---	----

5.1.9.4 fci_cmd()

```
int fci_cmd (
    FCI_CLIENT * client,
    unsigned short fcode,
    unsigned short * cmd_buf,
    unsigned short cmd_len,
    unsigned short * rep_buf,
    unsigned short * rep_len )
```

Run an FCI command with optional data response.

This routine can be used when one need to perform any command either with or without data response. If the command responded with some data structure the structure is written into the rep_buf. The length of the returned data structure (number of bytes) is written into rep_len.

Note

The rep_buf buffer must be aligned to 4.

Parameters

in	client	The FCI client instance
in	fcode	Command to be executed. Available commands are listed in
		Commands Summary.
in	cmd_buf	Pointer to structure holding command arguments.
in	cmd_len	Length of the command arguments structure in bytes.
out	rep_buf	Pointer to memory where the data response shall be written. Can
		be NULL.
in,out	rep_len	Pointer to variable where number of response bytes shall be
		written.

Return values

<0	Failed to execute the command. Can be NULL.
>=0	Command was executed with given return value (FPP_ERR_OK for success).



5.1.9.5 fci_query()

Run an FCI command with data response.

This routine can be used when one need to perform a command which is resulting in a data response. It is suitable for various 'query' commands like reading of whole tables or structured entries from the endpoint.

Note

If either rsp_data or rsplen is NULL pointer, the response data is discarded.

Parameters

in	this_client	The FCI client instance
in	fcode	Command to be executed. Available commands are listed in
		Commands Summary.
in	cmd_len	Length of the command arguments structure in bytes
in	pcmd	Pointer to structure holding command arguments.
out	rsplen	Pointer to memory where length of the data response will be
		provided
out	rsp_data	Pointer to memory where the data response shall be written.

Return values

<0	Failed to execute the command.
>=0	Command was executed with given return value (FPP_ERR_OK for success).

Examples

fpp_cmd_ip_route.c, fpp_cmd_log_if.c, and fpp_cmd_phy_if.c.

5.1.9.6 fci_write()

2019-2020 NXP Public 46



```
unsigned short cmd_len,
unsigned short * cmd_buf )
```

Run an FCI command.

Similar as the fci_query() but without data response. The endpoint receiving the command is still responsible for generating response but the response is not delivered to the caller.

Parameters

in	client	The FCI client instance
in	fcode	Command to be executed. Available commands are listed in
		Commands Summary.
in	cmd_len	Length of the command arguments structure in bytes
in	cmd_buf	Pointer to structure holding command arguments

Return values

<0	Failed to execute the command.
>=0	Command was executed with given return value (FPP_ERR_OK for success).

Examples

```
fpp_cmd_ip_route.c, fpp_cmd_ipv4_conntrack.c, fpp_cmd_ipv6_conntrack.c, fpp_cmd_log_if.c, and fpp_cmd_phy_if.c.
```

5.1.9.7 fci_register_cb()

Register event callback function.

Once FCI endpoint (or another client in the same multicast group) sends message to the FCI client, this callback is called. The callback will work only if function fci_catch is running.

Parameters

in	0110711	The FCI client instance, use the same instance as when calling fci_catch function
in	event_cb	The callback function to be executed



Returns

0 if success, error code otherwise

Note

In order to continue receiving messages, the callback function shall always return FCI_CB_CONTINUE. Any other value will cause the fci_catch to return.

Here is the list of defined messages. Expected fcode value is either FPP_CMD_IPV4_CONNTRACK_CHANGE or FPP_CMD_IPV6_CONNTRACK_CHANGE.

2019-2020 NXP Public 48



Chapter 6

Data Structure Documentation

6.1 FCI_CLIENT Struct Reference

The FCI client representation type.

```
#include <libfci.h>
```

6.1.1 Detailed Description

The FCI client representation type.

This is the FCI instance representation. It is used by the rest of the API to communicate with associated endpoint. The endpoint can be a standalone application/driver taking care of HW configuration tasks and shall be able to interpret commands sent via the LibFCI API.

Examples

```
fpp_cmd_ip_route.c, fpp_cmd_ipv4_conntrack.c, fpp_cmd_ipv6_conntrack.c, fpp_cmd_log_if.c, and fpp_cmd_phy_if.c.
```

The documentation for this struct was generated from the following file:

• libfci.h

6.2 fpp_ct6_cmd_t Struct Reference

Data structure used in various functions for IPv6 conntrack management.

```
#include <fpp.h>
```

Data Fields

- uint16_t action
- uint32_t saddr [4]
- uint32_t daddr [4]



- uint16_t sport
- uint16_t dport
- uint32_t saddr_reply [4]
- uint32_t daddr_reply [4]
- uint16_t sport_reply
- uint16_t dport_reply
- uint16_t protocol
- uint16_t flags
- uint32_t route_id
- uint32_t route_id_reply

6.2.1 Detailed Description

Data structure used in various functions for IPv6 conntrack management.

It can be used:

• for command buffer in functions fci_write, fci_query or fci_cmd, with FPP_CMD_IPV6_CONNTRACK command.

Examples

fpp_cmd_ipv6_conntrack.c.

6.2.2 Field Documentation

6.2.2.1 action

uint16_t action

Action to perform

Examples

fpp_cmd_ipv6_conntrack.c.

6.2.2.2 saddr

uint32_t saddr[4]

Source IP address



6.2.2.3 daddr

uint32_t daddr[4]

Destination IP address

6.2.2.4 sport

uint16_t sport

Source port

6.2.2.5 dport

uint16_t dport

Destination port

6.2.2.6 saddr_reply

uint32_t saddr_reply[4]

Source IP address in 'reply' direction

6.2.2.7 daddr_reply

uint32_t daddr_reply[4]

Destination IP address in 'reply' direction

6.2.2.8 sport_reply

uint16_t sport_reply

Source port in 'reply' direction

6.2.2.9 dport_reply

uint16_t dport_reply

Destination port in 'reply' direction

6.2.2.10 protocol

uint16_t protocol

Protocol ID: TCP, UDP



6.2.2.11 flags

```
uint16_t flags
```

Flags. See FPP_CMD_IPV6_CONNTRACK.

6.2.2.12 route_id

```
uint32_t route_id
```

Associated route ID. See FPP_CMD_IP_ROUTE.

6.2.2.13 route_id_reply

```
uint32_t route_id_reply
```

Route for 'reply' direction. Applicable only for bi-directional connections.

The documentation for this struct was generated from the following file:

• fpp.h

6.3 fpp_ct_cmd_t Struct Reference

Data structure used in various functions for conntrack management.

```
#include <fpp.h>
```

Data Fields

- uint16_t action
- uint32_t saddr
- uint32_t daddr
- uint16_t sport
- uint16_t dport
- uint32_t saddr_reply
- uint32_t daddr_reply
- uint16_t sport_reply
- uint16_t dport_reply
- uint16_t protocol
- uint16_t flags
- uint32_t route_id
- uint32_t route_id_reply



6.3.1 Detailed Description

Data structure used in various functions for countrack management.

It can be used:

• for command buffer in functions fci_write, fci_query or fci_cmd, with FPP_CMD_IPV4_CONNTRACK command.

Examples

fpp_cmd_ipv4_conntrack.c.

6.3.2 Field Documentation

6.3.2.1 action

uint16_t action

Action to perform

Examples

fpp_cmd_ipv4_conntrack.c.

6.3.2.2 saddr

uint32_t saddr

Source IP address

6.3.2.3 daddr

uint32_t daddr

Destination IP address

6.3.2.4 sport

uint16_t sport

Source port

6.3.2.5 dport

uint16_t dport

Destination port



6.3.2.6 saddr_reply

```
uint32_t saddr_reply
```

Source IP address in 'reply' direction

6.3.2.7 daddr_reply

```
uint32_t daddr_reply
```

Destination IP address in 'reply' direction

6.3.2.8 sport_reply

```
uint16_t sport_reply
```

Source port in 'reply' direction

6.3.2.9 dport_reply

```
uint16_t dport_reply
```

Destination port in 'reply' direction

6.3.2.10 protocol

```
uint16_t protocol
```

Protocol ID: TCP, UDP

6.3.2.11 flags

```
uint16_t flags
```

Flags. See FPP_CMD_IPV4_CONNTRACK.

6.3.2.12 route_id

```
uint32_t route_id
```

Associated route ID. See FPP_CMD_IP_ROUTE.

6.3.2.13 route_id_reply

```
uint32_t route_id_reply
```

Route for 'reply' direction. Applicable only for bi-directional connections.

The documentation for this struct was generated from the following file:

• fpp.h



6.4 fpp_flexible_parser_table_cmd Struct Reference

Arguments for the $\protect\operatorname{FPP_CMD_FP_TABLE}$ command.

```
#include <fpp_ext.h>
```

Data Fields

- uint16 t action
- uint8_t table_name [16]
- uint8_t rule_name [16]
- uint16_t position
- fpp_fp_rule_props_t r

6.4.1 Detailed Description

Arguments for the FPP_CMD_FP_TABLE command.

6.4.2 Field Documentation

6.4.2.1 action

uint16_t action

Action to be done

6.4.2.2 table_name

```
uint8_t table_name[16]
```

Name of the table to be administered by the action

6.4.2.3 rule_name

```
uint8_t rule_name[16]
```

Name of the rule to be added/removed to/from the table

6.4.2.4 position

```
uint16_t position
```

Position where to add rule (network endian)



6.4.2.5 r

```
fpp_fp_rule_props_t r
```

Properties of the rule - used as query result

The documentation for this struct was generated from the following file:

• fpp_ext.h

6.5 fpp_fp_rule_cmd_tag Struct Reference

Arguments for the FPP_CMD_FP_RULE command.

```
#include <fpp_ext.h>
```

Data Fields

- uint16_t action
- fpp_fp_rule_props_t r

6.5.1 Detailed Description

Arguments for the FPP_CMD_FP_RULE command.

6.5.2 Field Documentation

6.5.2.1 action

```
uint16_t action
```

Action to be done

6.5.2.2 r

```
fpp_fp_rule_props_t r
```

Parameters of the rule

The documentation for this struct was generated from the following file:

• fpp_ext.h



6.6 fpp_fp_rule_props_tag Struct Reference

Properties of the Flexible parser rule.

```
#include <fpp_ext.h>
```

6.6.1 Detailed Description

Properties of the Flexible parser rule.

```
The rule match can be described as:
```

```
((frame_data[offset] & mask) == (data & mask)) ? match = true : match = false;
match = (invert ? !match : match);
```

Value of match being equal to true causes:

- Flexible Parser to stop and return ACCEPT
- Flexible Parser to stop and return REJECT
- Flexible Parser to set the next rule to rule specified in next_rule_name

The documentation for this struct was generated from the following file:

• fpp_ext.h

6.7 fpp_if_m_args_t Struct Reference

Match rules arguments.

```
#include <fpp_ext.h>
```

Data Fields

- uint16_t vlan
- uint16_t ethtype
- uint16_t sport
- uint16_t dport
- uint8_t proto
- uint8 t smac [6]
- uint8_t dmac [6]
- char fp_table0 [16]
- char fp_table1 [16]
- uint32_t hif_cookie
- struct { } v4
- struct { } **v6**



6.7.1 Detailed Description

Match rules arguments.

Every value corresponds to specified match rule (fpp_if_m_rules_t).

6.7.2 Field Documentation

fpp_cmd_log_if.c.

```
6.7.2.1 vlan
uint16_t vlan
VLAN ID (FPP_IF_MATCH_VLAN)
Examples
    fpp_cmd_log_if.c.
6.7.2.2 ethtype
uint16_t ethtype
EtherType (FPP_IF_MATCH_ETHTYPE)
6.7.2.3 sport
uint16_t sport
L4 source port number (FPP_IF_MATCH_SPORT)
6.7.2.4 dport
uint16_t dport
L4 destination port number (FPP_IF_MATCH_DPORT)
6.7.2.5 v4
struct { ... } v4
IPv4 source and destination address (FPP_IF_MATCH_SIP, FPP_IF_MATCH_DIP)
Examples
```



6.7.2.6 v6

```
struct { ... } v6
```

IPv6 source and destination address (FPP_IF_MATCH_SIP6, FPP_IF_MATCH_DIP6)

6.7.2.7 proto

```
uint8_t proto
```

IP protocol (FPP_IF_MATCH_PROTO)

6.7.2.8 smac

```
uint8_t smac[6]
```

Source MAC Address (FPP_IF_MATCH_SMAC)

6.7.2.9 dmac

```
uint8_t dmac[6]
```

Destination MAC Address (FPP_IF_MATCH_DMAC)

6.7.2.10 fp_table0

```
char fp_table0[16]
```

Flexible Parser table 0 (FPP_IF_MATCH_FP0)

6.7.2.11 fp_table1

```
char fp_table1[16]
```

Flexible Parser table 1 (FPP_IF_MATCH_FP1)

6.7.2.12 hif_cookie

```
uint32 t hif cookie
```

HIF header cookie (FPP_IF_MATCH_HIF_COOKIE)

The documentation for this struct was generated from the following file:

• fpp_ext.h

6.8 fpp_l2_bridge_domain_control_cmd Struct Reference

Data structure to be used for command buffer for L2 bridge domain control commands.

```
#include <fpp_ext.h>
```



Data Fields

- uint16_t action
- uint16_t vlan
- uint8_t ucast_hit
- uint8_t ucast_miss
- uint8_t mcast_hit
- uint8_t mcast_miss
- uint32 t if list
- uint32_t untag_if_list
- fpp_l2_bd_flags_t flags

6.8.1 Detailed Description

Data structure to be used for command buffer for L2 bridge domain control commands. It can be used:

• for command buffer in functions fci_write or fci_cmd, with commands: FPP_CMD_L2_BD.

6.8.2 Field Documentation

6.8.2.1 action

```
uint16_t action
```

Action to be executed (register, unregister, query, ...)

6.8.2.2 vlan

```
uint16_t vlan
```

VLAN ID associated with the bridge domain (network endian)

6.8.2.3 ucast_hit

```
uint8_t ucast_hit
```

Action to be taken when destination MAC address (uni-cast) of a packet matching the domain is found in the MAC table (network endian): 0 - Forward, 1 - Flood, 2 - Punt, 3 - Discard



6.8.2.4 ucast miss

```
uint8_t ucast_miss
```

Action to be taken when destination MAC address (uni-cast) of a packet matching the domain is not found in the MAC table

6.8.2.5 mcast_hit

uint8_t mcast_hit

Multicast hit action

6.8.2.6 mcast miss

uint8_t mcast_miss

Multicast miss action

6.8.2.7 if list

```
uint32_t if_list
```

Port list (network endian). Bitmask where every set bit represents ID of physical interface being member of the domain. For instance bit (1 « 3), if set, says that interface with ID=3 is member of the domain. Only valid interface IDs are accepted by the command. If flag is set, interface is added to the domain. If flag is not set and interface has been previously added, it is removed. The IDs are given by the related FCI endpoint and related networking HW. Interface IDs can be obtained via FPP_CMD_PHY_IF.

6.8.2.8 untag_if_list

```
uint32_t untag_if_list
```

Flags marking interfaces listed in if_list to be 'tagged' or 'untagged' (network endian). If respective flag is set, corresponding interface within the if_list is treated as 'untagged' meaning that the VLAN tag will be removed. Otherwise it is configured as 'tagged'. Note that only interfaces listed within the if_list are taken into account.

6.8.2.9 flags

```
fpp_12_bd_flags_t flags
```

See the fpp_l2_bd_flags_t

The documentation for this struct was generated from the following file:

• fpp_ext.h



6.9 fpp_log_if_cmd_t Struct Reference

Data structure to be used for logical interface commands.

```
#include <fpp_ext.h>
```

Data Fields

- uint16_t action
- char name [IFNAMSIZ]
- uint32_t id
- char parent_name [IFNAMSIZ]
- uint32_t parent_id
- uint32_t egress
- fpp_if_flags_t flags
- fpp_if_m_rules_t match
- fpp_if_m_args_t arguments

6.9.1 Detailed Description

Data structure to be used for logical interface commands.

Usage:

- As command buffer in functions fci_write, fci_query or fci_cmd, with FPP_CMD_LOG_IF command.
- As reply buffer in functions fci_query or fci_cmd, with FPP_CMD_LOG_IF command.

Examples

```
fpp_cmd_log_if.c.
```

6.9.2 Field Documentation

6.9.2.1 action

```
uint16 t action
```

Action

Examples

fpp_cmd_log_if.c.



6.9.2.2 name

char name[IFNAMSIZ]

Interface name

Examples

fpp_cmd_log_if.c.

6.9.2.3 id

```
uint32_t id
```

Interface ID (network endian)

6.9.2.4 parent_name

char parent_name[IFNAMSIZ]

Parent physical interface name

Examples

fpp_cmd_log_if.c.

6.9.2.5 parent_id

```
uint32_t parent_id
```

Parent physical interface ID (network endian)

6.9.2.6 egress

```
uint32_t egress
```

Egress interfaces in the form of mask (to get egress id: egress & (1 < id)) must be stored in network order (network endian)

Examples

fpp_cmd_log_if.c.



6.9.2.7 flags

```
fpp_if_flags_t flags
```

Interface flags from query or flags to be set (network endian)

Examples

```
fpp_cmd_log_if.c.
```

6.9.2.8 match

```
fpp_if_m_rules_t match
```

Match rules from query or match rules to be set (network endian)

Examples

```
fpp_cmd_log_if.c.
```

6.9.2.9 arguments

```
fpp_if_m_args_t arguments
```

Arguments for match rules (network endian)

Examples

```
fpp_cmd_log_if.c.
```

The documentation for this struct was generated from the following file:

• fpp_ext.h

6.10 fpp_phy_if_cmd_t Struct Reference

Data structure to be used for physical interface commands.

```
#include <fpp_ext.h>
```

Data Fields

- uint16_t action
- char name [IFNAMSIZ]
- uint32_t id
- fpp_if_flags_t flags



- fpp_phy_if_op_mode_t mode
- fpp_phy_if_block_state_t block_state
- uint8_t mac_addr [6]
- char mirror [IFNAMSIZ]

6.10.1 Detailed Description

Data structure to be used for physical interface commands.

Usage:

- As command buffer in functions fci_write, fci_query or fci_cmd, with FPP_CMD_PHY_IF command.
- As reply buffer in functions fci_query or fci_cmd, with FPP_CMD_PHY_IF command.

Examples

```
fpp_cmd_phy_if.c.
```

6.10.2 Field Documentation

6.10.2.1 action

```
uint16_t action
```

Action

Examples

```
fpp_cmd_phy_if.c.
```

6.10.2.2 name

```
char name[IFNAMSIZ]
```

Interface name

Examples

```
fpp_cmd_phy_if.c.
```



6.10.2.3 id

```
uint32_t id
```

Interface ID (network endian)

Examples

```
fpp_cmd_phy_if.c.
```

6.10.2.4 flags

```
fpp_if_flags_t flags
```

Interface flags (network endian)

Examples

```
fpp_cmd_phy_if.c.
```

6.10.2.5 mode

```
fpp_phy_if_op_mode_t mode
```

Phy if mode (network endian)

Examples

fpp_cmd_phy_if.c.

6.10.2.6 block_state

```
fpp_phy_if_block_state_t block_state
```

Phy if block state

6.10.2.7 mac_addr

```
uint8_t mac_addr[6]
```

Phy if MAC (network endian)



6.10.2.8 mirror

```
char mirror[IFNAMSIZ]
```

Name of interface to mirror the traffic to

The documentation for this struct was generated from the following file:

• fpp_ext.h

6.11 fpp_rt_cmd_t Struct Reference

Structure representing the command to add or remove a route.

```
#include <fpp.h>
```

Data Fields

- uint16_t action
- uint8_t dst_mac [6]
- char output_device [IFNAMSIZ]
- uint32_t id
- uint32_t flags

6.11.1 Detailed Description

Structure representing the command to add or remove a route.

Data structure to be used for command buffer for route commands. It can be used:

- as command buffer in functions fci_write, fci_query or fci_cmd, with FPP_CMD_IP_ROUTE command.
- as reply buffer in functions fci_query or fci_cmd, with FPP_CMD_IP_ROUTE command.

Examples

```
fpp_cmd_ip_route.c.
```

6.11.2 Field Documentation



6.11.2.1 action

```
uint16_t action
```

Action to perform

Examples

fpp_cmd_ip_route.c.

6.11.2.2 dst_mac

```
uint8_t dst_mac[6]
```

Destination MAC address (network endian)

Examples

fpp_cmd_ip_route.c.

6.11.2.3 output_device

char output_device[IFNAMSIZ]

Name of egress physical interface

Examples

fpp_cmd_ip_route.c.

6.11.2.4 id

uint32_t id

Unique route identifier

Examples

fpp_cmd_ip_route.c.

6.11.2.5 flags

uint32_t flags

Flags (network endian). 1 for IPv4 route, 2 for IPv6.



Examples

fpp_cmd_ip_route.c.

The documentation for this struct was generated from the following file:

• fpp.h

6.12 fpp_timeout_cmd_t Struct Reference

Timeout command argument.

#include <fpp.h>

6.12.1 Detailed Description

Timeout command argument.

Data structure to be used for command buffer for timeout settings. It can be used:

• for command buffer in functions fci_write, fci_query or fci_cmd, with FPP_CMD_IPV4_SET_TIMEOUT command.

The documentation for this struct was generated from the following file:

• fpp.h



Chapter 7

File Documentation

7.1 fpp.h File Reference

```
The legacy FCI API.
#include <stdint.h>
```

Data Structures

- struct fpp_ct_cmd_t
 - Data structure used in various functions for conntrack management.
- struct fpp_ct6_cmd_t
 - Data structure used in various functions for IPv6 conntrack management.
- struct fpp_rt_cmd_t
 - Structure representing the command to add or remove a route.
- struct fpp_timeout_cmd_t
 - Timeout command argument.

Macros

- #define FPP_ACTION_REGISTER
 - Generic 'register' action for FPP_CMD_*.
- #define FPP_ACTION_DEREGISTER
 - Generic 'deregister' action for FPP_CMD_*.
- #define FPP_ACTION_UPDATE
 - *Generic 'update' action for FPP_CMD_**.
- #define FPP_ACTION_QUERY
 - Generic 'query' action for FPP_CMD_*.
- #define FPP_ACTION_QUERY_CONT
 - *Generic 'query continue' action for FPP_CMD_**.

2019-2020 NXP Public 70



• #define FPP_CMD_IPV4_CONNTRACK

Specifies FCI command for working with IPv4 tracked connections.

• #define FPP_CMD_IPV6_CONNTRACK

Specifies FCI command for working with IPv6 tracked connections.

• #define FPP_CMD_IP_ROUTE

Specifies FCI command for working with routes.

• #define FPP_CMD_IPV4_RESET

Specifies FCI command that clears all IPv4 routes (see FPP_CMD_IP_ROUTE) and conntracks (see FPP_CMD_IPV4_CONNTRACK)

• #define FPP CMD IPV6 RESET

Specifies FCI command that clears all IPv6 routes (see FPP_CMD_IP_ROUTE) and conntracks (see FPP_CMD_IPV6_CONNTRACK)

• #define FPP_CMD_IPV4_SET_TIMEOUT

Specifies FCI command for setting timeouts of conntracks.

7.1.1 Detailed Description

The legacy FCI API.

This file origin is the fpp.h file from CMM sources.

7.1.2 Macro Definition Documentation

7.1.2.1 FPP_CMD_IPV4_CONNTRACK

#define FPP_CMD_IPV4_CONNTRACK

Specifies FCI command for working with IPv4 tracked connections.

This command can be used with various values of .action:

- FPP_ACTION_REGISTER: Defines a connection and binds it to previously created route(s).
- FPP_ACTION_DEREGISTER: Deletes previously defined connection.
- FPP_ACTION_QUERY: Gets parameters of existing connection. It creates a snapshot of all active conntrack entries and replies with first of them.
- FPP_ACTION_QUERY_CONT: Shall be called periodically after FPP_ACTION_QUERY was called. On each call it replies with parameters of next connection. It returns FPP_ERR_CT_ENTRY_NOT_FOUND when no more entries exist.

Command Argument Type: fpp_ct_cmd_t



Action FPP_ACTION_REGISTER

Items to be set in command argument structure:

```
fpp_ct_cmd_t cmd_data =
 // Register new conntrack
 .action = FPP_ACTION_REGISTER,
 // Source IPv4 address (network endian)
  .saddr = ...,
 // Destination IPv4 address (network endian)
 .daddr = ...,
 // Source port (network endian)
 .sport = ...
 // Destination port (network endian)
 .dport = ...,
 // Reply source IPv4 address (network endian). Used for NAT, otherwise equals .daddr
 .saddr_reply = ...,
 // Reply destination IPv4 address (network endian). Used for NAT, otherwise equals .saddr
  .daddr_reply = ...,
 // Reply source port (network endian). Used for NAT, otherwise equals .dport
 .sport reply = ....
 // Reply destination port (network endian). Used for NAT, otherwise equals .sport
 .dport_reply = ...
 // IP protocol ID (17=UDP, 6=TCP, \ldots)
  .protocol = ...,
 // Bidirectional/Single direction (network endian)
 .flags = \dots,
 // ID of route previously created with .FPP_CMD_IP_ROUTE command (network endian)
 .route id = \dots
 // ID of reply route previously created with .FPP_CMD_IP_ROUTE command (network endian)
 .route_id_reply = ...
```

By default the connection is created as bi-directional. It means that two routing table entries are created at once: one for standard flow given by .saddr, .daddr, .sport, .dport, and .protocol and one for reverse flow defined by .saddr_reply, .daddr_reply, .sport_reply and .dport_reply. To create single-directional connection, either:

- set .flags |= CTCMD_FLAGS_REP_DISABLED and don't set route_id_reply, or
- set .flags |= CTCMD_FLAGS_ORIG_DISABLED and don't set route_id.

To configure NAT-ed connection, set reply addresses and/or ports different than original addresses and ports. To achieve NAPT (also called PAT), use daddr_reply, dport_reply, and sport_reply:

- daddr_reply != saddr: Source address of packets in original direction will be changed from saddr to daddr_reply. In case of bi-directional connection, destination address of packets in reply direction will be changed from daddr_reply to saddr.
- dport_reply != sport: Source port of packets in original direction will be changed from sport to dport_reply. In case of bi-directional connection, destination port of packets in reply direction will be changed from dport_reply to sport.
- 3. saddr_reply != daddr: Destination address of packets in original direction will be changed from daddr to saddr_reply. In case of bi-directional connection, source address of packets in reply direction will be changed from saddr_reply to daddr.

2019-2020 NXP Public 72



4. sport_reply != dport: Destination port of packets in original direction will be changed from dport to sport_reply. In case of bi-directional connection, source port of packets in reply direction will be changed from sport_reply to dport.

Action FPP_ACTION_DEREGISTER

Items to be set in command argument structure:

Action FPP_ACTION_QUERY and FPP_ACTION_QUERY_CONT

Items to be set in command argument structure:

Response data type for queries: fpp_ct_cmd_t

Response data provided:

```
rsp_data.saddr; // Source IPv4 address (network endian)
rsp_data.daddr; // Destination IPv4 address (network endian)
rsp_data.sport; // Source port (network endian)
rsp_data.daport; // Destination port (network endian)
rsp_data.saddr_reply; // Reply source IPv4 address (network endian)
rsp_data.daddr_reply; // Reply destination IPv4 address (network endian)
rsp_data.sport_reply; // Reply source port (network endian)
rsp_data.dport_reply; // Reply destination port (network endian)
rsp_data.protocol; // IP protocol ID (17=UDP, 6=TCP, ...)
```

Examples

fpp_cmd_ipv4_conntrack.c.

7.1.2.2 FPP_CMD_IPV6_CONNTRACK

```
#define FPP_CMD_IPV6_CONNTRACK
```

Specifies FCI command for working with IPv6 tracked connections.

This command can be used with various values of .action:

- FPP_ACTION_REGISTER: Defines a connection and binds it to previously created route(s).
- FPP_ACTION_DEREGISTER: Deletes previously defined connection.



- FPP_ACTION_QUERY: Gets parameters of existing connection. It creates a snapshot of all active conntrack entries and replies with first of them.
- FPP_ACTION_QUERY_CONT: Shall be called periodically after FPP_ACTION_QUERY was called. On each call it replies with parameters of next connection. It returns FPP_ERR_CT_ENTRY_NOT_FOUND when no more entries exist.

Command Argument Type: fpp_ct6_cmd_t

Action FPP_ACTION_REGISTER

Items to be set in command argument structure:

```
fpp_ct6_cmd_t cmd_data =
 // Register new conntrack
 .action = FPP_ACTION_REGISTER,
 // Source IPv6 address, (network endian)
 .saddr[0..3] = ...,
 // Destination IPv6 address, (network endian)
 .daddr[0..3] = ...,
 // Source port (network endian)
 .sport = ...,
 // Destination port (network endian)
 .dport = ...,
 // Reply source IPv6 address (network endian). Used for NAT, otherwise equals .daddr
  .saddr_reply[0..3] = ...,
 // Reply destination IPv6 address (network endian). Used for NAT, otherwise equals .saddr
 .daddr_reply[0..3] = ...,
 // Reply source port (network endian). Used for NAT, otherwise equals .dport
 .sport_reply = ...,
 // Reply destination port (network endian). Used for NAT, otherwise equals .sport
 .dport_reply = ...,
 // IP protocol ID (17=UDP, 6=TCP, ...)
 .protocol = ...
 // Bidirectional/Single direction (network endian)
 // ID of route previously created with .FPP_CMD_IP_ROUTE command (network endian)
 // ID of reply route previously created with .FPP_CMD_IP_ROUTE command (network endian)
  .route_id_reply = ...
```

By default the connection is created as bi-directional. It means that two routing table entries are created at once: one for standard flow given by .saddr, .daddr, .sport, .dport, and .protocol and one for reverse flow defined by .saddr_reply, .daddr_reply, .sport_reply and .dport_reply. To create single-directional connection, either:

- set .flags |= CTCMD_FLAGS_REP_DISABLED and don't set route_id_reply, or
- set .flags |= CTCMD_FLAGS_ORIG_DISABLED and don't set route_id.

To configure NAT-ed connection, set reply addresses and/or ports different than original addresses and ports. To achieve NAPT (also called PAT), use daddr_reply, dport_reply, saddr_reply, and sport_reply:

1. daddr_reply != saddr: Source address of packets in original direction will be changed from saddr to daddr_reply. In case of bi-directional connection,



destination address of packets in reply direction will be changed from daddr_reply to saddr.

- dport_reply != sport: Source port of packets in original direction will be changed from sport to dport_reply. In case of bi-directional connection, destination port of packets in reply direction will be changed from dport_reply to sport.
- 3. saddr_reply != daddr: Destination address of packets in original direction will be changed from daddr to saddr_reply. In case of bi-directional connection, source address of packets in reply direction will be changed from saddr_reply to daddr.
- 4. sport_reply != dport: Destination port of packets in original direction will be changed from dport to sport_reply. In case of bi-directional connection, source port of packets in reply direction will be changed from sport_reply to dport.

Action FPP_ACTION_DEREGISTER

Items to be set in command argument structure:

```
fpp_ct6_cmd_t cmd_data =
{
    .action = FPP_ACTION_DEREGISTER, // Deregister previously created conntrack
    .saddr[0..3] = ..., // Source IPv6 address, (network endian)
    .daddr[0..3] = ..., // Destination IPv6 address, (network endian)
    .sport = ..., // Source port (network endian)
    .daport = ..., // Destination port (network endian)
    .saddr_reply[0..3] = ..., // Reply source IPv6 address (network endian)
    .daddr_reply[0..3] = ..., // Reply destination IPv6 address (network endian)
    .sport_reply = ..., // Reply source port (network endian)
    .dport_reply = ..., // Reply destination port (network endian)
    .protocol = ..., // IP protocol ID
};
```

Action FPP_ACTION_QUERY and FPP_ACTION_QUERY_CONT

Items to be set in command argument structure:

Response data type for queries: fpp_ct6_cmd_t

Response data provided (all values in network byte order):

Examples

fpp_cmd_ipv6_conntrack.c.



7.1.2.3 FPP_CMD_IP_ROUTE

```
#define FPP_CMD_IP_ROUTE
```

Specifies FCI command for working with routes.

Routes are representing direction where matching traffic shall be forwarded to. Every route specifies egress physical interface and MAC address of next network node. This command can be used with various values of .action:

- FPP_ACTION_REGISTER: Defines a new route.
- FPP_ACTION_DEREGISTER: Deletes previously defined route.
- FPP_ACTION_QUERY: Gets parameters of existing routes. It creates a snapshot of all active route entries and replies with first of them.
- FPP_ACTION_QUERY_CONT: Shall be called periodically after FPP_ACTION_QUERY was called. On each call it replies with parameters of next route. It returns FPP_ERR_RT_ENTRY_NOT_FOUND when no more entries exist.

Command Argument Type: fpp_rt_cmd_t

Action FPP_ACTION_REGISTER

Items to be set in command argument structure:

Action FPP_ACTION_DEREGISTER

Items to be set in command argument structure:

```
fpp_rt_cmd_t cmd_data =
{
    .action = FPP_ACTION_DEREGISTER, // Deregister a route
    .id = ... // Unique route identifier (network endian)
}:
```

Action FPP_ACTION_QUERY and FPP_ACTION_QUERY_CONT

Items to be set in command argument structure:



Examples

fpp_cmd_ip_route.c.

7.1.2.4 FPP CMD IPV4 RESET

```
#define FPP_CMD_IPV4_RESET
```

Specifies FCI command that clears all IPv4 routes (see FPP_CMD_IP_ROUTE) and conntracks (see FPP_CMD_IPV4_CONNTRACK)

This command uses no arguments.

Command Argument Type: none (cmd_buf = NULL; cmd_len = 0;)

Examples

fpp_cmd_ip_route.c.

7.1.2.5 FPP_CMD_IPV6_RESET

```
#define FPP_CMD_IPV6_RESET
```

Specifies FCI command that clears all IPv6 routes (see FPP_CMD_IP_ROUTE) and conntracks (see FPP_CMD_IPV6_CONNTRACK)

This command uses no arguments.

Command Argument Type: none (cmd_buf = NULL; cmd_len = 0;)

Examples

fpp cmd ip route.c.

7.1.2.6 FPP_CMD_IPV4_SET_TIMEOUT

```
#define FPP_CMD_IPV4_SET_TIMEOUT
```

Specifies FCI command for setting timeouts of conntracks.

This command sets timeout for conntracks based on protocol. Three kinds of protocols are distinguished: TCP, UDP and others. For each of them timeout can be set independently. For UDP it is possible to set different value for bidirectional and single-directional connection. Default timeout value is 5 days for TCP, 300s for UDP and 240s for others.

Newly created connections are being created with new timeout values already set. Previously created connections have their timeout updated with first received packet.

Command Argument Type: fpp_timeout_cmd_t



Items to be set in command argument structure:

```
fpp_timeout_cmd_t cmd_data =
{
    // IP protocol to be affected. Either 17 for UDP, 6 for TCP or 0 for others.
    .protocol;
    // Use 0 for normal connections, 1 for 4over6 IP tunnel connections.
    .sam_4o6_timeout;
    // Timeout value in seconds.
    .timeout_value1;
    // Optional timeout value which is valid only for UDP connections. If the value is set    // (non zero), then it affects unidirectional UDP connections only.
    .timeout_value2;
};
```

7.2 fpp_ext.h File Reference

Extension of the legacy fpp.h.

Data Structures

- struct fpp_if_m_args_t
 - Match rules arguments.
- struct fpp_phy_if_cmd_t
 - Data structure to be used for physical interface commands.
- struct fpp_log_if_cmd_t
 - Data structure to be used for logical interface commands.
- struct fpp_l2_bridge_domain_control_cmd
 - Data structure to be used for command buffer for L2 bridge domain control commands.
- struct fpp_fp_rule_props_tag
 - Properties of the Flexible parser rule.
- struct fpp_fp_rule_cmd_tag
 - Arguments for the FPP_CMD_FP_RULE command.
- struct fpp_flexible_parser_table_cmd
 - Arguments for the FPP CMD FP TABLE command.

Macros

- #define FPP_CMD_PHY_IF
 - FCI command for working with physical interfaces.
- #define FPP_CMD_LOG_IF
 - FCI command for working with logical interfaces.
- #define FPP_CMD_IF_LOCK_SESSION
 - FCI command to perform lock on interface database.
- #define FPP_CMD_IF_UNLOCK_SESSION
 - FCI command to perform unlock on interface database.



• #define FPP_CMD_L2_BD

VLAN-based L2 bridge domain management.

• #define FPP_CMD_FP_TABLE

Administers the Flexible Parser tables.

• #define FPP_CMD_FP_RULE

Administers the Flexible Parser rules.

• #define FPP_ACTION_USE_RULE

Flexible Parser specific 'use' action for FPP_CMD_FP_TABLE.

• #define FPP ACTION UNUSE RULE

Flexible Parser specific 'unuse' action for FPP_CMD_FP_TABLE.

#define FPP_CMD_FP_FLEXIBLE_FILTER

Uses flexible parser to filter out frames from further processing.

Enumerations

```
• enum fpp if flags t {
 FPP_IF_ENABLED, FPP_IF_PROMISC,
 FPP_IF_MATCH_OR, FPP_IF_DISCARD,
 FPP_IF_MIRROR }
    Interface flags.
• enum fpp_phy_if_op_mode_t {
 FPP_IF_OP_DISABLED, FPP_IF_OP_DEFAULT,
 FPP_IF_OP_BRIDGE, FPP_IF_OP_ROUTER,
 FPP_IF_OP_VLAN_BRIDGE, FPP_IF_OP_FLEXIBLE_ROUTER }
    Physical if modes.
enum fpp_if_m_rules_t {
 FPP_IF_MATCH_TYPE_ETH, FPP_IF_MATCH_TYPE_VLAN,
 FPP_IF_MATCH_TYPE_PPPOE, FPP_IF_MATCH_TYPE_ARP,
 FPP_IF_MATCH_TYPE_MCAST, FPP_IF_MATCH_TYPE_IPV4,
 FPP_IF_MATCH_TYPE_IPV6, FPP_IF_MATCH_RESERVED7,
 FPP IF MATCH RESERVED8, FPP IF MATCH TYPE IPX,
 FPP IF_MATCH_TYPE_BCAST, FPP_IF_MATCH_TYPE_UDP,
 FPP_IF_MATCH_TYPE_TCP, FPP_IF_MATCH_TYPE_ICMP,
 FPP_IF_MATCH_TYPE_IGMP, FPP_IF_MATCH_VLAN,
 FPP_IF_MATCH_PROTO, FPP_IF_MATCH_SPORT,
 FPP_IF_MATCH_DPORT, FPP_IF_MATCH_SIP6,
 FPP_IF_MATCH_DIP6, FPP_IF_MATCH_SIP,
 FPP IF MATCH DIP, FPP IF MATCH ETHTYPE,
 FPP_IF_MATCH_FP0, FPP_IF_MATCH_FP1,
 FPP_IF_MATCH_SMAC, FPP_IF_MATCH_DMAC,
 FPP_IF_MATCH_HIF_COOKIE }
   Match rules. Can be combined using bitwise OR.
```

enum fpp_phy_if_block_state_t {
 BS_NORMAL, BS_BLOCKED,
 BS_LEARN_ONLY, BS_FORWARD_ONLY }



Interface blocking state.

```
enum fpp_l2_bd_flags_t { FPP_L2BR_DOMAIN_DEFAULT, FPP_L2BR_DOMAIN_FALLBACK }
```

L2 bridge domain flags.

```
enum fpp_fp_rule_match_action_t {
    FP_ACCEPT, FP_REJECT,
    FP_NEXT_RULE }
```

Specifies the Flexible Parser result on the rule match.

```
    enum fpp_fp_offset_from_t {
        FP_OFFSET_FROM_L2_HEADER, FP_OFFSET_FROM_L3_HEADER,
        FP_OFFSET_FROM_L4_HEADER }
```

Specifies how to calculate the frame data offset.

7.2.1 Detailed Description

Extension of the legacy fpp.h.

All FCI commands and related elements not present within the legacy fpp.h shall be put into this file. All macro values (uint16_t) shall have the upper nibble set to b1111 to ensure no conflicts with the legacy macro values.

Note

Documentation is part of libfci.h.

7.3 libfci.h File Reference

Generic LibFCI header file.

Macros

#define FCI_CFG_FORCE_LEGACY_API

Changes the LibFCI API so it is more compatible with legacy implementation.

- #define FPP_CMD_IPV4_CONNTRACK_CHANGE
- #define FPP_CMD_IPV6_CONNTRACK_CHANGE
- #define CTCMD_FLAGS_ORIG_DISABLED

Disable connection originator.

• #define CTCMD FLAGS REP DISABLED

Disable connection replier.



Enumerations

• enum fci_mcast_groups_t { FCI_GROUP_NONE, FCI_GROUP_CATCH }

List of supported multicast groups.

• enum fci_client_type_t { FCI_CLIENT_DEFAULT }

List of supported FCI client types.

• enum fci_cb_retval_t { FCI_CB_STOP, FCI_CB_CONTINUE }

The FCI callback return values.

Functions

• FCI_CLIENT * fci_open (fci_client_type_t type, fci_mcast_groups_t group)

Creates new FCI client and opens a connection to FCI endpoint.

• int fci_close (FCI_CLIENT *client)

Disconnects from FCI endpoint and destroys FCI client instance.

• int fci_catch (FCI_CLIENT *client)

Catch and process all FCI messages delivered to the FCI client.

• int fci_cmd (FCI_CLIENT *client, unsigned short fcode, unsigned short *cmd_buf, unsigned short cmd_len, unsigned short *rep_buf, unsigned short *rep_len)

Run an FCI command with optional data response.

• int fci_query (FCI_CLIENT *this_client, unsigned short fcode, unsigned short cmd_len, unsigned short *pcmd, unsigned short *rsplen, unsigned short *rsp_data)

Run an FCI command with data response.

• int fci_write (FCI_CLIENT *client, unsigned short fcode, unsigned short cmd_len, unsigned short *cmd_buf)

Run an FCI command.

• int fci_register_cb (FCI_CLIENT *client, fci_cb_retval_t(*event_cb)(unsigned short fcode, unsigned short len, unsigned short *payload))

Register event callback function.

• int fci_fd (FCI_CLIENT *this_client)

Obsolete function, shall not be used.

7.3.1 Detailed Description

Generic LibFCI header file.

This file contains generic API and API description



Chapter 8

Example Documentation

8.1 fpp_cmd_ip_route.c

```
* Copyright 2020 NXP
* Redistribution and use in source and binary forms, with or without
\star modification, are permitted provided that the following conditions are met:
* 1. Redistributions of source code must retain the above copyright notice,
     this list of conditions and the following disclaimer.
 \star 2. Redistributions in binary form must reproduce the above copyright notice,
     this list of conditions and the following disclaimer in the documentation
     and/or other materials provided with the distribution.
 \star 3. Neither the name of the copyright holder nor the names of its contributors
     \ensuremath{\mathsf{may}} be used to endorse or promote products derived from this software
     without specific prior written permission.
* THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS"
* AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO,
* THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR
\star PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER
* OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL,
* EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO,
* PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS;
* OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY,
* WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE
* OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF
* ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.
  ______ */
#include <stdio.h>
#include <stdlib.h>
#include <arpa/inet.h>
#include <errno.h>
#include "libfci.h"
#include "fpp.h"
#include "fpp_ext.h"
#include "fci_examples.h"
              Reset IPv4 and IPv6 router
* @param[in] cl The FCI client instance
void fci_router_reset(FCI_CLIENT *cl)
   int ret;
   ret = fci_write(cl, FPP_CMD_IPV4_RESET, 0, NULL);
   if (FPP_ERR_OK != ret)
       printf("FPP_CMD_IPV4_RESET failed: %d\n", ret);
```



```
ret = fci_write(cl, FPP_CMD_IPV6_RESET, 0, NULL);
    if (FPP_ERR_OK != ret)
    {
        printf("FPP_CMD_IPV6_RESET failed: %d\n", ret);
}
* @brief
                Register two TPv4 routes
* @details
                Function registers two IPv4 routes: one targeting emac0 and the second
                one emacl. Traffic matching respective route will be forwarded via
                physical interface given by 'fpp_rt_cmd_t.output_device' while its source
                MAC address will be replaced by MAC address of the output interface and
                destination MAC address will be replaced by 'fpp_rt_cmd_t.dst_mac'.
* @param[in]
               cl The FCI client instance
void fci_router_register_ipv4_routes(FCI_CLIENT *cl)
    int ret;
    fpp_rt_cmd_t r1 =
        /* Register new route */
        .action = FPP_ACTION_REGISTER,
        /\star Destination MAC address to be used for packets matching the route \star/
        .dst_mac = \{0x00, 0xaa, 0xbb, 0xcc, 0xdd, 0xee\},
        /* Egress physical interface */
        .output_device = "emac0",
        /* Unique route identifier */
        .id = htonl(123),
        /* Use IPv4 addressing */
        .flags = htonl(1)
    };
    fpp_rt_cmd_t r2 =
        .action = FPP_ACTION_REGISTER,
        .dst_mac = \{0x00, 0x11, 0x22, 0x33, 0x44, 0x55\},
        .output_device = "emac1",
        .id = htonl(456),
        .flags = htonl(1),
    };
    /* Register route "r1" */
    ret = fci_write(cl, FPP_CMD_IP_ROUTE, sizeof(r1), (void *)&r1);
    if (FPP_ERR_OK != ret)
    {
        printf("FPP_CMD_IP_ROUTE[FPP_ACTION_REGISTER] failed: %d\n", ret);
       return:
    /* Register route "r2" */
    ret = fci_write(cl, FPP_CMD_IP_ROUTE, sizeof(r2), (void *)&r2);
    if (FPP_ERR_OK != ret)
    {
        printf("FPP_CMD_IP_ROUTE[FPP_ACTION_REGISTER] failed: %d\n", ret);
        return;
    }
}
/*
* @brief
                Register two IPv6 routes
* @details
                Function registers two IPv6 routes: one targeting emac0 and the second
                one emacl. Traffic matching respective route will be forwarded via
                physical interface given by 'fpp_rt_cmd_t.output_device' while its source
                MAC address will be replaced by MAC address of the output interface and
                destination MAC address will be replaced by 'fpp_rt_cmd_t.dst_mac'.
                cl The FCI client instance
* @param[in]
void fci_router_register_ipv6_routes(FCI_CLIENT *cl)
    int ret;
    fpp_rt_cmd_t r1 =
        /* Register new route */
        .action = FPP_ACTION_REGISTER,
        /\star~ Destination MAC address to be used for packets matching the route \star/
        .dst_mac = \{0x00, 0xaa, 0xbb, 0xcc, 0xdd, 0xee\},
        /* Egress physical interface */
```



```
.output_device = "emac0",
        /* Unique route identifier */
        .id = htonl(111),
        /* Use IPv6 addressing */
        .flags = htonl(2)
    };
    fpp_rt_cmd_t r2 =
        .action = FPP_ACTION_REGISTER,
        .dst_mac = {0x00, 0x11, 0x22, 0x33, 0x44, 0x55}, .output_device = "emac1",
        .id = htonl(222),
        .flags = htonl(2),
    /* Register route "r1" */
    ret = fci_write(cl, FPP_CMD_IP_ROUTE, sizeof(r1), (void *)&r1);
    if (FPP_ERR_OK != ret)
    {
        printf("FPP_CMD_IP_ROUTE[FPP_ACTION_REGISTER] failed: %d\n", ret);
    /* Register route "r2" */
    ret = fci_write(cl, FPP_CMD_IP_ROUTE, sizeof(r2), (void *)&r2);
    if (FPP_ERR_OK != ret)
        printf("FPP_CMD_IP_ROUTE[FPP_ACTION_REGISTER] failed: %d\n", ret);
        return:
}
/*
               Print all IPv4 routes
 * @param[in] cl The FCI client instance
void fci_router_print_ipv4_routes(FCI_CLIENT *cl)
    int ret;
    fpp_rt_cmd_t cmd;
    fpp_rt_cmd_t rep;
    unsigned short rep_len;
    cmd.action = FPP_ACTION_QUERY;
    ret = fci_query(cl, FPP_CMD_IP_ROUTE, sizeof(cmd), (void *)&cmd, &rep_len, (void *)&rep);
    while (FPP_ERR_OK == ret)
    {
        if (1 == ntohl(rep.flags))
        {
            printf("%03d: %s (%02x:%02x:%02x:%02x:%02x:%02x), flags: 0x%x\n",
                ntohl(rep.id), rep.output_device, rep.dst_mac[0], rep.dst_mac[1],
                    rep.dst_mac[2], rep.dst_mac[3], rep.dst_mac[4], rep.dst_mac[5],
                        ntohl(rep.flags));
        cmd.action = FPP_ACTION_QUERY_CONT;
        ret = fci_query(cl, FPP_CMD_IP_ROUTE, sizeof(cmd), (void *)&cmd, &rep_len, (void
       *)&rep);
    }
}
/*
 * @brief
               Print all IPv6 routes
 * @param[in] cl The FCI client instance
void fci_router_print_ipv6_routes(FCI_CLIENT *cl)
    int ret;
    fpp_rt_cmd_t cmd;
    fpp_rt_cmd_t rep;
    unsigned short rep_len;
    cmd.action = FPP_ACTION_QUERY;
    ret = fci_query(cl, FPP_CMD_IP_ROUTE, sizeof(cmd), (void *)&cmd, &rep_len, (void *)&rep);
    while (FPP_ERR_OK == ret)
    {
        if (2 == ntohl(rep.flags))
            printf("%03d: %s (%02x:%02x:%02x:%02x:%02x:%02x), flags: 0x%x\n",
                ntohl(rep.id), rep.output_device, rep.dst_mac[0], rep.dst_mac[1],
```



```
rep.dst_mac[2], rep.dst_mac[3], rep.dst_mac[4], rep.dst_mac[5],
                        ntohl(rep.flags));
        cmd.action = FPP_ACTION_QUERY_CONT;
       ret = fci_query(cl, FPP_CMD_IP_ROUTE, sizeof(cmd), (void *)&cmd, &rep_len, (void
}
 * @brief
               Remove routes created by fci_router_register_ipv4_routes()
 * @param[in] cl The FCI client instance
void fci_router_remove_ipv4_routes(FCI_CLIENT *cl)
   int ret;
   fpp_rt_cmd_t cmd;
    cmd.action = FPP_ACTION_DEREGISTER;
   cmd.id = htonl(123);
   ret = fci_write(cl, FPP_CMD_IP_ROUTE, sizeof(cmd), (void *)&cmd);
    if (FPP_ERR_OK != ret)
       printf("FPP_CMD_IP_ROUTE[FPP_ACTION_DEREGISTER] failed: %d\n", ret);
    }
    cmd.id = htonl(456);
    ret = fci_write(cl, FPP_CMD_IP_ROUTE, sizeof(cmd), (void *)&cmd);
    if (FPP ERR OK != ret)
       printf("FPP_CMD_IP_ROUTE[FPP_ACTION_DEREGISTER] failed: %d\n", ret);
   }
}
               Remove routes created by fci_router_register_ipv6_routes()
 * @brief
 * @param[in]
              cl The FCI client instance
void fci_router_remove_ipv6_routes(FCI_CLIENT *cl)
   int ret:
   fpp_rt_cmd_t cmd;
   cmd.action = FPP_ACTION_DEREGISTER;
   cmd.id = htonl(111);
   ret = fci_write(cl, FPP_CMD_IP_ROUTE, sizeof(cmd), (void *)&cmd);
    if (FPP_ERR_OK != ret)
        printf("FPP_CMD_IP_ROUTE[FPP_ACTION_DEREGISTER] failed: %d\n", ret);
    cmd.id = htonl(222);
    ret = fci_write(cl, FPP_CMD_IP_ROUTE, sizeof(cmd), (void *)&cmd);
    if (FPP_ERR_OK != ret)
       printf("FPP_CMD_IP_ROUTE[FPP_ACTION_DEREGISTER] failed: %d\n", ret);
```

8.2 fpp_cmd_ipv4_conntrack.c



```
without specific prior written permission.
\star THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS"
* AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO,
* THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR
\star PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER
* OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL,
* EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO,
* PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS;
* OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY,
\star WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE
\star OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF
* ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.
#include <stdio.h>
#include <stdlib.h>
#include <arpa/inet.h>
#include <errno.h>
#include "libfci.h"
#include "fpp.h"
#include "fpp_ext.h"
#include "fci_examples.h"
* @brief
               Register two UPD connections to be fast-forwarded
\star @details Add 2 routing table entries (conntracks). Traffic matching
               respective conntrack will be forwarded via physical interface
                given by matching route (fpp_rt_cmd_t.output_device) while its
                source MAC address will be replaced by MAC address of the output
                interface and destination MAC address will be replaced by the
                one defined by route (fpp_rt_cmd_t.dst_mac).
                In case of no hit, packet will be sent to default logical
                interface (to host). Host can configure slow-path routing using
                standard OS-provided mechanisms to route rest of traffic (e.g.
                ICMP).
* @param[in]
              cl The FCI client instance
void fci_router_register_ipv4_conntracks(FCI_CLIENT *cl)
    int ret;
    fpp_ct_cmd_t ct1 =
        /* New connection */
        .action = FPP_ACTION_REGISTER,
        /* Source IP address: 11.41.48.100 */
        .saddr = htonl(0x0b293064),
        /* Destination IP address: 12.41.48.100 */
        .daddr = hton1(0x0c293064),
        /* Source L4 port */
        .sport = htons(11),
        /* Destination L4 port */
        .dport = htons(12).
        /* Source IP address in reply direction. Equal to 'daddr' to disable
           replacement. */
        .saddr_reply = htonl(0x0c293064),
        /\star\, Destination IP address in reply direction. Same as 'saddr' to
            disable replacement. */
        .daddr_reply = htonl(0x0b293064),
        /* Source L4 port in reply direction. Equal to 'dport' to disable
           replacement. */
        .sport_reply = htons(12),
        /\star Destination L4 port in reply direction. Equal to 'sport' to disable
           replacement.*/
        .dport_reply = htons(11),
        /* Protocol ID: UDP */
        .protocol = 17,
        /* Flags: Do not open reply connection */
        .flags = htons(CTCMD_FLAGS_REP_DISABLED),
        /\star Associated route (456=emac1). This route will be used to forward
           packets matching this tracked connection (SIP+DIP+SPORT+DPORT+PROTO).
            Route must exist. To create a route see the FPP_CMD_IP_ROUTE. \star/
        .route_id = htonl(456),
    };
```



```
fpp_ct_cmd_t ct2 =
        .action = FPP_ACTION_REGISTER,
        /* Source IP address: 12.41.48.100 */
        .saddr = htonl(0x0c293064),
        /\star Destination IP address: 11.41.48.100 \star/
        .daddr = htonl(0x0b293064),
        .sport = htons(12),
        .dport = htons(11),
        .saddr_reply = htonl(0x0b293064),
        .daddr_reply = htonl(0x0c293064),
        .sport_reply = htons(11),
        .dport_reply = htons(12),
        .protocol = 17.
        .flags = htons(CTCMD_FLAGS_REP_DISABLED),
        .route_id = htonl(123),
   /* Register connection "ct1" */
   ret = fci_write(cl, FPP_CMD_IPV4_CONNTRACK, sizeof(ct1), (void *)&ct1);
    if (0 != ret)
    {
       printf("FPP_CMD_IPV4_CONNTRACK[FPP_ACTION_REGISTER] failed: %d\n", ret);
    /* Register connection "ct2" */
   ret = fci_write(cl, FPP_CMD_IPV4_CONNTRACK, sizeof(ct2), (void *)&ct2);
   if (0 != ret)
    {
       printf("FPP_CMD_IPV4_CONNTRACK[FPP_ACTION_REGISTER] failed: %d\n", ret);
        return:
}
/*
                Register two UPD connections to be fast-forwarded with NAT
* @details
                Add 2 routing table entries (conntracks). Traffic matching
                respective conntrack will be forwarded via physical interface
                given by matching route (fpp_rt_cmd_t.output_device) while its
                source MAC address will be replaced by MAC address of the output
                interface and destination MAC address will be replaced by the
                one defined by route (fpp_rt_cmd_t.dst_mac). Additionally, source
                and destination IP address will be replaced using '.daddr_reply'
                and '.saddr_reply' as well as source and destination port number
                will be replaced by '.dport_reply' and '.sport_reply' values.
                In case of no hit, packet will be sent to default logical
                interface (to host). Host can configure slow-path routing using
                standard OS-provided mechanisms to route rest of traffic (e.g.
               TCMP).
* @param[in]
               cl The FCI client instance
void fci_router_register_ipv4_conntracks_nat(FCI_CLIENT *cl)
   int ret;
   fpp_ct_cmd_t ct1 =
        /* New connection */
        .action = FPP_ACTION_REGISTER,
        /* Source IP address: 11.41.48.100 */
        .saddr = htonl(0x0b293064).
        /* Destination IP address: 12.41.48.100 */
        .daddr = hton1(0x0c293064),
        /* Source L4 port */
        .sport = htons(11),
        /* Destination L4 port */
        .dport = htons(12),
        /* Source IP address in reply direction. Destination IP address of
           routed packet will be replaced by this value (120.41.48.100). */
        .saddr_reply = hton1(0x78293064),
        /\star Destination IP address in reply direction. Source IP address of
           routed packet will be replaced by this value (110.41.48.100). \star/
        .daddr_reply = htonl(0x6e293064),
        /* Source L4 port in reply direction. Destination port of routed packet
           will be replaced by this value. */
```



}

```
.sport_reply = htons(120),
        /* Destination L4 port in reply direction. Source port or routed packet
           will be replaced by this value. */
        .dport_reply = htons(110),
        /* Protocol ID: UDP */
        .protocol = 17,
        /* Flags: Do not open reply connection */
        .flags = htons(CTCMD_FLAGS_REP_DISABLED),
        /\star Associated route (456=emacl). This route will be used to forward
            packets matching this tracked connection (SIP+DIP+SPORT+DPORT+PROTO).
            Route must exist. To create a route see the FPP_CMD_IP_ROUTE. \star/
        .route_id = htonl(456),
    }:
    fpp_ct_cmd_t ct2 =
        .action = FPP_ACTION_REGISTER,
        /* Source IP address: 120.41.48.100 */
        .saddr = htonl(0x78293064),
        /* Destination IP address: 110.41.48.100 */
        .daddr = htonl(0x6e293064),
        .sport = htons(120),
        .dport = htons(110),
        .saddr_reply = htonl(0x0b293064),
        .daddr_reply = htonl(0x0c293064),
        .sport_reply = htons(11),
        .dport_reply = htons(12),
        .protocol = 17,
        .flags = htons(CTCMD_FLAGS_REP_DISABLED),
        .route_id = htonl(123)
    };
    /* Register connection "ct1" */
    ret = fci_write(cl, FPP_CMD_IPV4_CONNTRACK, sizeof(ct1), (void *)&ct1);
    if (0 != ret)
    {
        printf("FPP_CMD_IPV4_CONNTRACK[FPP_ACTION_REGISTER] failed: %d\n", ret);
        return:
    /* Register connection "ct2" */
    ret = fci_write(cl, FPP_CMD_IPV4_CONNTRACK, sizeof(ct2), (void *)&ct2);
    if (0 != ret.)
       printf("FPP_CMD_IPV4_CONNTRACK[FPP_ACTION_REGISTER] failed: %d\n", ret);
        return:
    }
 * @brief
                Register bi-directional UPD connection to be fast-forwarded
                Add 2 routing table entries with a single conntrack. Traffic
 * @details
                matching respective conntrack will be forwarded via physical
                interface given by matching route defined for both, the
                original as well as reply direction.
                In case of no hit, packet will be sent to default logical
                interface (to host). Host can configure slow-path routing using
                standard OS-provided mechanisms to route rest of traffic (e.g.
                TCMP).
 * @param[in]
               cl The FCI client instance
void fci_router_register_bd_ipv4_conntrack(FCI_CLIENT *cl)
    int ret;
    fpp_ct_cmd_t ct1 =
        /* New connection */
        .action = FPP_ACTION_REGISTER,
        /* Source IP address: 11.41.48.100 */
        .saddr = htonl(0x0b293064),
        /* Destination IP address: 12.41.48.100 */
        .daddr = hton1(0x0c293064),
        /* Source L4 port */
        .sport = htons(11),
        /* Destination L4 port */
        .dport = htons(12),
```



```
/* Source IP address in reply direction. Equal to 'daddr' to
           disable NAT */
        .saddr_reply = htonl(0x0c293064),
        /* Destination IP address in reply direction. Same as 'saddr' to
           disable NAT. */
        .daddr_reply = htonl(0x0b293064),
        /* Source L4 port in reply direction. Equal to 'dport' to disable
           replacement. */
        .sport_reply = htons(12),
        /\star Destination L4 port in reply direction. Equal to 'sport' to disable
           replacement.*/
        .dport_reply = htons(11),
        /* Protocol ID: UDP */
        .protocol = 17,
        /* Flags: None. Create bi-directional connection. */
        .flags = htons(0),
        /\star Associated route (123=emac0, 456=emac1). This routes will be used to
           forward packets matching this tracked connection either in original
           or opposite, reply direction. Routes must exist. To create a route
           see the FPP_CMD_IP_ROUTE. */
        .route id = htonl(456),
        .route_id_reply = hton1(123)
   };
   /* Register connection "ct1" */
   ret = fci_write(cl, FPP_CMD_IPV4_CONNTRACK, sizeof(ct1), (void *)&ct1);
   if (0 != ret)
    {
       printf("FPP_CMD_IPV4_CONNTRACK[FPP_ACTION_REGISTER] failed: %d\n", ret);
       return:
   }
}
* @brief
               Configure IPv4 router
* @details
              Create routes and conntracks to fast-forward traffic between
               EMACO and EMAC1. Put both EMACs to Router mode and enable them.
* @param[in]
               cl The FCI client instance
void fci_setup_ipv4_router(FCI_CLIENT *cl)
    /* Reset the router */
   fci_router_reset(cl);
    /* Create routes */
   fci_router_register_ipv4_routes(cl);
    /* Create conntracks */
   fci_router_register_ipv4_conntracks(cl);
    /* Set interface mode */
   fci_phy_if_set_mode(cl, "emac0", FPP_IF_OP_ROUTER);
   fci_phy_if_set_mode(cl, "emac1", FPP_IF_OP_ROUTER);
    /* Enable interfaces */
   fci_phy_if_enable(cl, "emac0");
   fci_phy_if_enable(cl, "emacl");
       Now traffic received via EMACO or EMAC1 and matching conntracks will be
        routed via interfaces defined by routes.
}
* @brief
               Configure IPv4 router with NAT
               Create routes and conntracks to fast-forward traffic between
* @details
               EMACO and EMAC1 and modify IP addresses and port numbers. Put
               both EMACs to Router mode and enable them.
               cl The FCI client instance
* @param[in]
void fci_setup_ipv4_router_nat(FCI_CLIENT *cl)
    /* Reset the router */
   fci_router_reset(cl);
    /* Create routes */
   fci_router_register_ipv4_routes(cl);
    /\star Create conntracks with NAT enabled \star/
    fci_router_register_ipv4_conntracks_nat(cl);
    /* Set interface mode */
   fci_phy_if_set_mode(cl, "emac0", FPP_IF_OP_ROUTER);
```



```
fci_phy_if_set_mode(cl, "emac1", FPP_IF_OP_ROUTER);
    /* Enable interfaces */
    fci_phy_if_enable(cl, "emac0");
    fci_phy_if_enable(cl, "emac1");
       Now traffic received via EMACO or EMAC1 and matching conntracks will be
        routed via interfaces defined by routes. Each routed packet will be
       modified in way that its source and destination IP address and source
        and destination port numbers will be replaced using configured values.
}
* @brief
               Configure IPv4 router using bi-directional conntrack
* @details
               Create routes and conntrack to fast-forward traffic between
               EMAC0 and EMAC1. Put both EMACs to Router mode and enable them.
              cl The FCI client instance
* @param[in]
void fci setup ipv4 router bd(FCI CLIENT *cl)
    /* Reset the router */
   fci_router_reset(cl);
    /* Create routes */
   fci_router_register_ipv4_routes(cl);
    /* Create bi-directional conntrack */
    fci_router_register_bd_ipv4_conntrack(cl);
    /* Set interface mode */
   fci_phy_if_set_mode(cl, "emac0", FPP_IF_OP_ROUTER);
    fci_phy_if_set_mode(cl, "emac1", FPP_IF_OP_ROUTER);
    /* Enable interfaces */
   fci_phy_if_enable(cl, "emac0");
   fci_phy_if_enable(cl, "emac1");
        Now traffic received via EMACO or EMAC1 and matching conntrack in both
       directions will be routed via interfaces defined by routes.
}
```

8.3 fpp_cmd_ipv6_conntrack.c

```
* Copyright 2020 NXP
* Redistribution and use in source and binary forms, with or without
\star modification, are permitted provided that the following conditions are met:
* 1. Redistributions of source code must retain the above copyright notice,
     this list of conditions and the following disclaimer.
\star 2. Redistributions in binary form must reproduce the above copyright notice,
     this list of conditions and the following disclaimer in the documentation
     and/or other materials provided with the distribution.
\star 3. Neither the name of the copyright holder nor the names of its contributors
     may be used to endorse or promote products derived from this software
     without specific prior written permission.
* THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS"
* AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO,
* THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR
* PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER
* OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL,
* EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO,
* PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS;
* OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY,
* WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE
\star OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF
* ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.
#include <stdio.h>
#include <stdlib.h>
```



```
#include <arpa/inet.h>
#include <errno.h>
#include "libfci.h"
#include "fpp.h"
#include "fpp_ext.h"
#include "fci_examples.h"
* @brief
                Register two UPD connections to be fast-forwarded
* @details
                Add 2 routing table entries (conntracks). Traffic matching
                respective conntrack will be forwarded via physical interface
                given by matching route (fpp_rt_cmd_t.output_device) while its
                source MAC address will be replaced by MAC address of the output
                interface and destination MAC address will be replaced by the
                one defined by route (fpp_rt_cmd_t.dst_mac).
                In case of no hit, packet will be sent to default logical
                interface (to host). Host can configure slow-path routing using
                standard OS-provided mechanisms to route rest of traffic (e.g.
                ICMP).
               cl The FCI client instance
* @param[in]
void fci_router_register_ipv6_conntracks(FCI_CLIENT *cl)
    int ret;
    fpp_ct6_cmd_t ct1 =
        /* New connection */
        .action = FPP_ACTION_REGISTER,
        /* Source IP address: ::aaaa */
        .saddr[0] = htonl(0),
        .saddr[1] = htonl(0),
        .saddr[2] = htonl(0),
        .saddr[3] = htonl(0x0000aaaa),
        /* Destination IP address: ::bbbb */
        .daddr[0] = htonl(0),
        .daddr[1] = htonl(0),
        .daddr[2] = htonl(0),
        .daddr[3] = htonl(0x0000bbbb),
        /* Source L4 port */
        .sport = htons(10),
        /* Destination L4 port */
        .dport = htons(11),
        /\star Source IP address in reply direction. Equal to 'daddr' to disable
            replacement. */
        .saddr_reply[0] = htonl(0),
        .saddr_reply[1] = htonl(0),
        .saddr_reply[2] = htonl(0),
        .saddr_reply[3] = htonl(0x0000bbbb),
        /\star~ Destination IP address in reply direction. Same as 'saddr' to
           disable replacement. */
        .daddr_reply[0] = htonl(0),
        .daddr_reply[1] = htonl(0),
        .daddr_reply[2] = htonl(0),
        .daddr_reply[3] = htonl(0x0000aaaa),
        /* Source L4 port in reply direction. Equal to 'dport' to disable
           replacement. */
        .sport_reply = htons(11),
        /* Destination L4 port in reply direction. Equal to 'sport' to disable
            replacement.*/
        .dport_reply = htons(10),
        /* Protocol ID: UDP */
        .protocol = 17,
        /\star Flags: Do not open reply connection \star/
        .flags = htons(CTCMD_FLAGS_REP_DISABLED),
        /\star Associated route (222=emac1). This route will be used to forward
            packets matching this tracked connection (SIP+DIP+SPORT+DPORT+PROTO).
            Route must exist. To create a route see the FPP_CMD_IP_ROUTE. \star/
        .route_id = hton1(222),
    };
    fpp_ct6_cmd_t ct2 =
        .action = FPP_ACTION_REGISTER,
        /* Source IP address: ::bbbb */
```



```
.saddr[0] = htonl(0),
        .saddr[1] = htonl(0),
        .saddr[2] = htonl(0),
        .saddr[3] = htonl(0x0000bbbb),
        /* Destination IP address: ::aaaa */
        .daddr[0] = htonl(0),
        .daddr[1] = htonl(0),
        .daddr[2] = htonl(0),
        .daddr[3] = htonl(0x0000aaaa),
        .sport = htons(11),
        .dport = htons(10),
        .saddr_reply[0] = htonl(0),
        .saddr_reply[1] = htonl(0),
        .saddr_reply[2] = htonl(0),
        .saddr_reply[3] = htonl(0x0000aaaa),
        .daddr_reply[0] = htonl(0),
        .daddr_reply[1] = htonl(0),
        .daddr_reply[2] = htonl(0),
        .daddr_reply[3] = htonl(0x0000bbbb),
        .sport_reply = htons(10),
.dport_reply = htons(11),
        .protocol = 17,
        .flags = htons(CTCMD_FLAGS_REP_DISABLED),
        .route_id = htonl(111)
    /* Register connection "ct1" */
    ret = fci_write(cl, FPP_CMD_IPV6_CONNTRACK, sizeof(ct1), (void *)&ct1);
    if (0 != ret)
    {
        printf("FPP_CMD_IPV6_CONNTRACK[FPP_ACTION_REGISTER] failed: %d\n", ret);
        return;
    /* Register connection "ct2" */
    ret = fci_write(cl, FPP_CMD_IPV6_CONNTRACK, sizeof(ct2), (void *)&ct2);
    if (0 != ret)
    {
        printf("FPP_CMD_IPV6_CONNTRACK[FPP_ACTION_REGISTER] failed: %d\n", ret);
        return:
    }
}
 * @brief
                Register bi-directional UPD connection to be fast-forwarded
 * @details
                Add 2 routing table entries with a single conntrack. Traffic
                matching respective conntrack will be forwarded via physical
                interface given by matching route defined for both, the
                original as well as reply direction. Traffic matching
                respective direction will be forwarded via physical interface
                given by matching route (fpp_rt_cmd_t.output_device) while its
                source MAC address will be replaced by MAC address of the output
                interface and destination MAC address will be replaced by the
                one defined by route (fpp_rt_cmd_t.dst_mac).
                In case of no hit, packet will be sent to default logical
                interface (to host). Host can configure slow-path routing using
                standard OS-provided mechanisms to route rest of traffic (e.g.
                TCMP).
 * @param[in]
               cl The FCI client instance
void fci_router_register_bd_ipv6_conntrack(FCI_CLIENT *cl)
    int ret;
    fpp_ct6_cmd_t ct1 =
        /* New connection */
        .action = FPP_ACTION_REGISTER,
        /* Source IP address: ::aaaa */
        .saddr[0] = htonl(0),
.saddr[1] = htonl(0),
        .saddr[2] = htonl(0),
        .saddr[3] = htonl(0x0000aaaa),
        /\star Destination IP address: ::bbbb \star/
        .daddr[0] = htonl(0),
        .daddr[1] = htonl(0),
```

.daddr[2] = htonl(0),



```
.daddr[3] = htonl(0x0000bbbb),
        /* Source L4 port */
        .sport = htons(10),
        /* Destination L4 port */
        .dport = htons(11),
        /* Source IP address in reply direction. Same as 'saddr' to
            disable replacement. */
        .saddr_reply[0] = htonl(0),
        .saddr_reply[1] = htonl(0),
        .saddr_reply[2] = htonl(0),
        .saddr_reply[3] = htonl(0x0000bbbb),
        /\star Destination IP address in reply direction. Same as 'saddr' to
            disable replacement. */
        .daddr_reply[0] = htonl(0),
        .daddr_reply[1] = htonl(0),
        .daddr_reply[2] = htonl(0),
        .daddr_{reply[3]} = htonl(0x0000aaaa),
        /\star Source L4 port in reply direction. Equal to 'dport' to disable
            replacement. */
        .sport_reply = htons(11),
        /* Destination L4 port in reply direction. Equal to 'dport' to disable
            replacement. */
        .dport_reply = htons(10),
        /* Protocol ID: UDP */
        .protocol = 17,
        /* Flags: Create connection also in reply direction */
        .flags = htons(0),
        /\star Associated route (111=emac0, 222=emac1). This route will be used to forward
            packets matching this tracked connection (SIP+DIP+SPORT+DPORT+PROTO).
            Route must exist. To create a route see the FPP_CMD_IP_ROUTE. */
        .route_id = htonl(222),
        .route_id_reply = htonl(111),
    };
    /* Register connection "ct1" */
    ret = fci_write(cl, FPP_CMD_IPV6_CONNTRACK, sizeof(ct1), (void *)&ct1);
    if (0 != ret.)
        printf("FPP_CMD_IPV6_CONNTRACK[FPP_ACTION_REGISTER] failed: %d\n", ret);
        return;
    }
}
/*
* @brief
                Configure IPv6 router
                Create routes and conntracks to fast-forward traffic between
* @details
                EMACO and EMAC1. Put both EMACs to Router mode and enable them.
* @param[in] cl The FCI client instance
void fci_setup_ipv6_router(FCI_CLIENT *cl)
    /* Reset the router */
    fci_router_reset(cl);
    /* Create routes */
    fci_router_register_ipv6_routes(cl);
    /* Create conntracks */
    fci_router_register_ipv6_conntracks(cl);
    /* Set interface mode */
   fci_phy_if_set_mode(cl, "emac0", FPP_IF_OP_ROUTER);
fci_phy_if_set_mode(cl, "emac1", FPP_IF_OP_ROUTER);
    /* Enable interfaces */
   fci_phy_if_enable(cl, "emac0");
fci_phy_if_enable(cl, "emac1");
        Now traffic received via {\tt EMAC0} or {\tt EMAC1} and matching conntracks will be
        routed via interfaces defined by routes.
}
* @brief
                Configure IPv6 router using bi-directional conntrack
* @details
                Create routes and conntrack to fast-forward traffic between
                EMACO and EMAC1 and modify IP addresses and port numbers. Put
                both EMACs to Router mode and enable them.
* @param[in]
                cl The FCI client instance
```



```
void fci_setup_ipv6_router_bd(FCI_CLIENT *cl)
    /* Reset the router */
    fci_router_reset(cl);
    /* Create routes */
    fci_router_register_ipv6_routes(cl);
    /* Create bi-directional conntrack */
    fci_router_register_bd_ipv6_conntrack(cl);
    /* Set interface mode */
    fci_phy_if_set_mode(cl, "emac0", FPP_IF_OP_ROUTER);
    fci_phy_if_set_mode(cl, "emac1", FPP_IF_OP_ROUTER);
   /* Enable interfaces */
fci_phy_if_enable(cl, "emac0");
    fci_phy_if_enable(cl, "emac1");
        Now traffic received via EMACO or EMAC1 and matching conntracks will be
        routed via interfaces defined by routes. Each routed packet will be
        modified in way that its source and destination IP address and source
        and destination port numbers will be replaced using configured values.
}
```

8.4 fpp_cmd_log_if.c

```
* Copyright 2020 NXP
\star Redistribution and use in source and binary forms, with or without
 * modification, are permitted provided that the following conditions are met:
 * 1. Redistributions of source code must retain the above copyright notice,
    this list of conditions and the following disclaimer.
 \star 2. Redistributions in binary form must reproduce the above copyright notice,
     this list of conditions and the following disclaimer in the documentation
     and/or other materials provided with the distribution.
 \star 3. Neither the name of the copyright holder nor the names of its contributors
     may be used to endorse or promote products derived from this software
     without specific prior written permission.
* THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS"
* AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO,
 * THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR
* PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER
* OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL,
 * EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO,
* PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS;
* OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY,
 * WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE
* OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF
* ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.
#include <stdio.h>
#include <stdlib.h>
#include <arpa/inet.h>
#include <errno.h>
#include <string.h>
#include "libfci.h"
#include "fpp.h"
#include "fpp_ext.h"
#include "fci_examples.h"
/*
* @brief Print all logical interfaces
* @param[in] cl The FCI client instance
* @brief
void fci_log_if_print_all(FCI_CLIENT *cl)
   fpp_log_if_cmd_t rep, cmd;
```



```
unsigned short replen;
   int ret;
    /\star Get exclusive access to interfaces \star/
    if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL)))
        printf("FPP_CMD_IF_LOCK_SESSION failed: %d\n", ret);
    }
    else
    {
        /* Get all interfaces */
        cmd.action = FPP_ACTION_QUERY;
        ret = fci_query(cl, FPP_CMD_LOG_IF, sizeof(cmd), (unsigned short *)&cmd,
        %replen, (unsigned short *)&rep);
while (FPP_ERR_OK == ret)
        {
            printf("%02d %s (%-5s): Flags: 0x%04x, Egress: 0x%08x, MatchRules: 0x%08x\n",
                       ntohl(rep.id), rep.name, rep.parent_name, rep.flags,
                               ntohl(rep.egress), ntohl(rep.match));
            cmd.action = FPP_ACTION_QUERY_CONT;
            ret = fci_query(cl, FPP_CMD_LOG_IF, sizeof(cmd), (unsigned short *)&cmd,
                        &replen, (unsigned short *)&rep);
        /* Unlock interfaces */
        if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL)))
            printf("FPP_CMD_IF_UNLOCK_SESSION failed: %d\n", ret);
    }
}
/*
               Create IPC channel
               Add logical interface on hif0 to send certain traffic to hif2. This allows
* @details
                setup of IPC channel between two host cores. Packets transmitted by host CPU
                via HIF channel 0 will be classified and in case that they contain destination
                IP address equal to 14.41.48.1 OR VLAN tag equal to 123, they will be
                forwarded to HIF channel 2, otherwise they will follow the default path.
                In case the host sitting on hif2 would require similar packet distribution
                to hif0, another logical interface needs to be created on hif2.
                This example utilizes the Flexible Router operation mode of hif0.
               cl The FCI client instance
* @param[in]
void fci_add_ipc_log_if(FCI_CLIENT *cl)
    fpp_log_if_cmd_t cmd = {0};
    int ret;
    int dst_id = fci_phy_if_get_id(cl, "hif2");
    if (dst_id < 0)</pre>
    {
        printf("Could not get destination interface ID\n");
        return:
    /* Get exclusive access to interfaces */
    if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL)))
    {
        printf("FPP_CMD_IF_LOCK_SESSION failed: %d\n", ret);
    }
   else
    {
        /* Add logical interface to 'src' physical interface */
        cmd.action = FPP_ACTION_REGISTER;
        strncpy(cmd.name, "ipc0", sizeof(cmd.name)-1);
        strncpy(cmd.parent_name, "hif0", sizeof(cmd.parent_name)-1);
        ret = fci_write(cl, FPP_CMD_LOG_IF, sizeof(cmd), (unsigned short *)&cmd);
        if (FPP_ERR_OK != ret)
            printf("ipc0 could not be created: %d\n", ret);
        }
       else
            /* Configure the new interface */
            cmd.action = FPP_ACTION_UPDATE;
```



```
cmd.match = htonl(FPP_IF_MATCH_DIP|FPP_IF_MATCH_VLAN);
            cmd.arguments.v4.dip = htonl(0x0e293001); /* 14.41.48.1 */
            cmd.arguments.vlan = htons(123);
            cmd.flags = FPP_IF_ENABLED|FPP_IF_MATCH_OR;
            cmd.egress = htonl(1 « dst_id);
            ret = fci_write(cl, FPP_CMD_LOG_IF, sizeof(cmd), (unsigned short *)&cmd);
            if (FPP_ERR_OK != ret)
                printf("Can't update: %d\n", ret);
        }
           Unlock interfaces */
        if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL)))
            printf("FPP_CMD_IF_UNLOCK_SESSION failed: %d\n", ret);
       Configure pfe0 to start using logical interface-based
        classification of ingress traffic (Flexible Router) \star/
    fci_phy_if_set_mode(cl, "hif0", FPP_IF_OP_FLEXIBLE_ROUTER);
    /\star Enable the hif0 and hif2 \star/
    fci_phy_if_enable(cl, "hif0");
    fci_phy_if_enable(cl, "hif2");
* @brief
              Delete a logical interface
* @param[in] cl The FCI client instance
* @param[in]
              name Name of the logical interface to remove
void fci_log_if_del(FCI_CLIENT *cl, char *name)
    fpp_log_if_cmd_t cmd = {0};
   int ret;
    /\star Get exclusive access to interfaces \star/
    if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL)))
        printf("FPP_CMD_IF_LOCK_SESSION failed: %d\n", ret);
    }
   else
    {
        /* Remove logical interface */
       cmd.action = FPP_ACTION_DEREGISTER;
        strncpy(cmd.name, name, sizeof(cmd.name)-1);
        ret = fci_write(cl, FPP_CMD_LOG_IF, sizeof(cmd), (unsigned short *)&cmd);
        if (FPP_ERR_OK != ret)
        {
            printf("ipc0 could not be deleted: %d\n", ret);
        /* Unlock interfaces */
        if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL)))
            printf("FPP_CMD_IF_UNLOCK_SESSION failed: %d\n", ret);
    }
```

8.5 fpp_cmd_phy_if.c

```
/* ------

* Copyright 2020 NXP

* Redistribution and use in source and binary forms, with or without

* modification, are permitted provided that the following conditions are met:

* 1. Redistributions of source code must retain the above copyright notice,

* this list of conditions and the following disclaimer.

* 2. Redistributions in binary form must reproduce the above copyright notice,

* this list of conditions and the following disclaimer in the documentation
```



```
and/or other materials provided with the distribution.
\star 3. Neither the name of the copyright holder nor the names of its contributors
     may be used to endorse or promote products derived from this software
     without specific prior written permission.
* THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS"
* AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO,
 * THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR
* PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER
* OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL,
 * EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO,
* PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS;
* OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY,
\star WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE
* OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF
* ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.
 #include <stdio.h>
#include <stdlib.h>
#include <arpa/inet.h>
#include <errno.h>
#include <string.h>
#include "libfci.h"
#include "fpp.h"
#include "fpp_ext.h"
#include "fci_examples.h"
               Get QUERY response by interface name
* @brief
* @param[in] cl The FCI client instance
* @param[in] name Physical interface name
* @param[out] phy_if Pointer where the response shall be written
               1 if success, zero otherwise
int fci_phy_if_get_by_name(FCI_CLIENT *cl, char *name, fpp_phy_if_cmd_t *phy_if)
   fpp_phy_if_cmd_t rep = {0}, cmd = {0};
   unsigned short replen;
   int ret, retval = 0;
   /\star Get exclusive access to interfaces \star/
    if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL)))
    {
       printf("FPP_CMD_IF_LOCK_SESSION failed: %d\n", ret);
   }
   else
       /* Get all interfaces */
       cmd.action = FPP_ACTION_QUERY;
       ret = fci_query(cl, FPP_CMD_PHY_IF, sizeof(cmd), (unsigned short *)&cmd,
                   &replen, (unsigned short *)&rep);
       while (FPP_ERR_OK == ret)
           if (0 == strcmp(name, rep.name))
           {
               memcpy(phy_if, &rep, sizeof(*phy_if));
               ret.val = 1:
               break;
           }
           else
               cmd.action = FPP_ACTION_QUERY_CONT;
               ret = fci_query(cl, FPP_CMD_PHY_IF, sizeof(cmd), (unsigned short *)&cmd,
                           &replen, (unsigned short *)&rep);
           }
       /* Unlock interfaces */
       if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL)))
           printf("FPP_CMD_IF_UNLOCK_SESSION failed: %d\n", ret);
   return retval;
}
```



```
* @brief
              Enable physical interface
 * @param[in]
              name Physical interface name
void fci_phy_if_enable(FCI_CLIENT *cl, char *name)
    fpp_phy_if_cmd_t cmd;
   int ret;
    if (fci_phy_if_get_by_name(cl, name, &cmd))
        /* Get exclusive access to interfaces */
       if (FPP_ERR_OK != fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL))
        {
           printf("FPP_CMD_IF_LOCK_SESSION failed\n");
        }
        else
        {
            cmd.action = FPP_ACTION_UPDATE;
            cmd.flags |= FPP_IF_ENABLED;
           if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_PHY_IF, sizeof(cmd),
                                        (unsigned short *)&cmd)))
               printf("%s enable failed: %d\n", name, ret);
        }
        /* Unlock interfaces */
        if (FPP_ERR_OK != fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL))
           printf("FPP_CMD_IF_UNLOCK_SESSION failed\n");
    }
    else
    {
       printf("%s not found\n", name);
}
/*
 * @brief
              Disable physical interface
 * @param[in] cl The FCI client instance
 * @param[in] name Physical interface name
void fci_phy_if_disable(FCI_CLIENT *cl, char *name)
    fpp_phy_if_cmd_t cmd;
   int ret;
    if (fci_phy_if_get_by_name(cl, name, &cmd))
    {
        cmd.action = FPP_ACTION_UPDATE;
       cmd.flags &= ~FPP_IF_ENABLED;
        /\star Get exclusive access to interfaces \star/
       if (FPP_ERR_OK != fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL))
        {
           printf("FPP_CMD_IF_LOCK_SESSION failed\n");
        }
       else
            if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_PHY_IF, sizeof(cmd),
                                            (unsigned short *) & cmd)))
            {
               printf("%s disable failed: %d\n", name, ret);
           Unlock interfaces */
        if (FPP_ERR_OK != fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL))
           printf("FPP_CMD_IF_UNLOCK_SESSION failed\n");
    }
   else
    {
       printf("%s not found\n", name);
```



```
}
               Print all physical interfaces
 * @brief
 * @param[in] The FCI client instance
void fci_phy_if_print_all(FCI_CLIENT *cl)
    fpp_phy_if_cmd_t rep = {0}, cmd = {0};
    unsigned short replen;
    int ret;
    /\star Get exclusive access to interfaces \star/
    if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL)))
        printf("FPP_CMD_IF_LOCK_SESSION failed: %d\n", ret);
    }
    else
    {
        /* Get all interfaces */
        cmd.action = FPP_ACTION_QUERY;
        ret = fci_query(cl, FPP_CMD_PHY_IF, sizeof(cmd), (unsigned short *)&cmd,
                    &replen, (unsigned short *)&rep);
        while (FPP_ERR_OK == ret)
        {
            printf("%02d %-5s: Mode: 0x%x, Flags: 0x%04x\n",
                       ntohl(rep.id), rep.name, rep.mode, rep.flags);
            cmd.action = FPP_ACTION_QUERY_CONT;
            ret = fci_query(cl, FPP_CMD_PHY_IF, sizeof(cmd), (unsigned short *)&cmd,
                        &replen, (unsigned short *)&rep);
    }
       Unlock interfaces */
    if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL)))
        printf("FPP_CMD_IF_UNLOCK_SESSION failed: %d\n", ret);
    }
}
/*
               Get physical interface ID by name
The FCI client instance
* @brief
 * @param[in]
 * @param[in] name Name of physical interface
 * @return
               Physical interface ID (in host byte order) or -1 if failed.
int fci_phy_if_get_id(FCI_CLIENT *cl, char *name)
    fpp_phy_if_cmd_t rep = {0};
    int ret;
    /* Get reply data by name */
    if (fci_phy_if_get_by_name(cl, name, &rep))
        ret = ntohl(rep.id);
    }
    else
    {
       ret = -1;
    return ret;
* @brief
               Change mode and enable physical interface
 * @param[in] cl The FCI client instance
               id Physical interface ID mode New operation mode to be set
 * @param[in]
 * @param[in]
void fci_phy_if_set_mode(FCI_CLIENT *cl, char *name, fpp_phy_if_op_mode_t mode)
    fpp_phy_if_cmd_t rep;
    int ret;
    /* Get interface reply by name */
    if (fci_phy_if_get_by_name(cl, name, &rep))
        /\star Get exclusive access to interfaces \star/
        if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL)))
```



```
printf("FPP_CMD_IF_LOCK_SESSION failed: %d\n", ret);
    else
    {
        /\star Change the mode \star/
        rep.action = FPP_ACTION_UPDATE;
        rep.mode = mode;
        if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_PHY_IF,
                                    sizeof(rep), (unsigned short *)&rep)))
        {
            printf("Mode change failed: %d\n", ret);
        }
        /* Unlock interfaces */
        if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL)))
        {
            printf("FPP_CMD_IF_UNLOCK_SESSION failed: %d\n", ret);
}
else
{
   printf("%s not found\n", name);
}
```



Index

action	fpp_rt_cmd_t, 68
fpp_ct6_cmd_t, 50	
fpp_ct_cmd_t, 53	egress
fpp_flexible_parser_table_cmd, 55	fpp_log_if_cmd_t, 63
fpp_fp_rule_cmd_tag, 56	ethtype
fpp_l2_bridge_domain_control_cmd, 60	fpp_if_m_args_t, 58
fpp_log_if_cmd_t, 62	fci_catch
fpp_phy_if_cmd_t, 65	LibFCI, 44
fpp_rt_cmd_t, 67	FCI_CB_CONTINUE
arguments	LibFCI, 43
fpp_log_if_cmd_t, 64	fci_cb_retval_t
	LibFCI, 43
block_state	FCI_CB_STOP
fpp_phy_if_cmd_t, 66	LibFCI, 43
BS_BLOCKED	FCI_CFG_FORCE_LEGACY_API
LibFCI, 41	LibFCI, 38
BS_FORWARD_ONLY	FCI_CLIENT, 49
LibFCI, 41	FCI_CLIENT_DEFAULT
BS_LEARN_ONLY	LibFCI, 43
LibFCI, 41	fci_client_type_t
BS_NORMAL	LibFCI, 42
LibFCI, 41	fci_close
CTCMD ELACS DED DISADLED	LibFCI, 43
CTCMD_FLAGS_REP_DISABLED LibFCI, 39	fci cmd
Librei, 39	LibFCI, 45
daddr	FCI_GROUP_CATCH
fpp_ct6_cmd_t, 50	LibFCI, 42
fpp_ct_cmd_t, 53	FCI_GROUP_NONE
daddr_reply	LibFCI, 42
fpp_ct6_cmd_t, 51	fci_mcast_groups_t
fpp_ct_cmd_t, 54	LibFCI, 42
dmac	fci_open
fpp_if_m_args_t, 59	LibFCI, 43
dport	fci_query
fpp_ct6_cmd_t, 51	LibFCI, 45
fpp_ct_cmd_t, 53	fci_register_cb
fpp_if_m_args_t, 58	LibFCI, 47
dport_reply	fci_write
fpp_ct6_cmd_t, 51	LibFCI, 46
fpp_ct_cmd_t, 54	flags
dst mac	fpp ct6 cmd t, 51



fpp_ct_cmd_t, 54	FPP_CMD_IPV6_CONNTRACK
fpp_l2_bridge_domain_control_cmd, 61	fpp.h, 73
fpp_log_if_cmd_t, 63	FPP_CMD_IPV6_CONNTRACK_CHANGE
fpp_phy_if_cmd_t, 66	LibFCI, 39
fpp_rt_cmd_t, 68	FPP_CMD_IPV6_RESET
FP_ACCEPT	fpp.h, 77
LibFCI, 41	FPP_CMD_L2_BD
FP_NEXT_RULE	LibFCI, 31
LibFCI, 41	FPP_CMD_LOG_IF
FP_OFFSET_FROM_L2_HEADER	LibFCI, 28
LibFCI, 42	FPP_CMD_PHY_IF
FP_OFFSET_FROM_L3_HEADER	LibFCI, 27
LibFCI, 42	fpp_ct6_cmd_t, 49
FP_OFFSET_FROM_L4_HEADER	action, 50
LibFCI, 42	daddr, 50
FP REJECT	daddr_reply, 51
LibFCI, 41	dport, 51
fp_table0	dport_reply, 51
fpp_if_m_args_t, 59	flags, 51
fp_table1	protocol, 51
fpp_if_m_args_t, 59	route_id, 52
fpp.h, 70	route_id_reply, 52
FPP_CMD_IP_ROUTE, 75	saddr, 50
FPP_CMD_IPV4_CONNTRACK, 71	saddr_reply, 51
FPP_CMD_IPV4_RESET, 77	
	sport, 51
FPP_CMD_IPV4_SET_TIMEOUT, 77	sport_reply, 51
FPP_CMD_IPV6_CONNTRACK, 73	fpp_ct_cmd_t, 52
FPP_CMD_IPV6_RESET, 77	action, 53
FPP_CMD_FP_FLEXIBLE_FILTER	daddr, 53
LibFCI, 37	daddr_reply, 54
FPP_CMD_FP_RULE	dport, 53
LibFCI, 36	dport_reply, 54
FPP_CMD_FP_TABLE	flags, 54
LibFCI, 34	protocol, 54
FPP_CMD_IF_LOCK_SESSION	route_id, 54
LibFCI, 30	route_id_reply, 54
FPP_CMD_IF_UNLOCK_SESSION	saddr, 53
LibFCI, 30	saddr_reply, 53
FPP_CMD_IP_ROUTE	sport, 53
fpp.h, 75	sport_reply, 54
FPP_CMD_IPV4_CONNTRACK	fpp_ext.h, 78
fpp.h, 71	fpp_flexible_parser_table_cmd, 55
FPP_CMD_IPV4_CONNTRACK_CHANGE	action, 55
LibFCI, 38	position, 55
FPP_CMD_IPV4_RESET	r, 55
fpp.h, 77	rule_name, 55
FPP_CMD_IPV4_SET_TIMEOUT	table_name, 55
fpp.h, 77	fpp_fp_offset_from_t



LibFCI, 42	FPP_IF_MATCH_RESERVED7
fpp_fp_rule_cmd_tag, 56	LibFCI, 40
action, 56	FPP_IF_MATCH_RESERVED8
r, 56	LibFCI, 40
fpp_fp_rule_match_action_t	FPP_IF_MATCH_SIP
LibFCI, 41	LibFCI, 40
fpp_fp_rule_props_tag, 57	FPP_IF_MATCH_SIP6
FPP_IF_DISCARD	LibFCI, 40
LibFCI, 39	FPP_IF_MATCH_SMAC
FPP_IF_ENABLED	LibFCI, 40
LibFCI, 39	FPP_IF_MATCH_SPORT
fpp_if_flags_t	LibFCI, 40
LibFCI, 39	FPP_IF_MATCH_TYPE_ARP
fpp_if_m_args_t, 57	LibFCI, 40
dmac, 59	FPP_IF_MATCH_TYPE_BCAST
dport, 58	LibFCI, 40
ethtype, 58	FPP_IF_MATCH_TYPE_ETH
fp_table0, 59	LibFCI, 40
fp_table1, 59	FPP_IF_MATCH_TYPE_ICMP
hif_cookie, 59	LibFCI, 40
proto, 59	FPP_IF_MATCH_TYPE_IGMP
smac, 59	LibFCI, 40
sport, 58	FPP_IF_MATCH_TYPE_IPV4
v4, 58	LibFCI, 40
v4, 50 v6, 58	FPP_IF_MATCH_TYPE_IPV6
vlan, 58	LibFCI, 40
fpp_if_m_rules_t	FPP_IF_MATCH_TYPE_IPX
LibFCI, 40	LibFCI, 40
FPP_IF_MATCH_DIP	FPP_IF_MATCH_TYPE_MCAST
LibFCI, 40	LibFCI, 40
	•
FPP_IF_MATCH_DIP6 LibFCI, 40	FPP_IF_MATCH_TYPE_PPPOE
FPP IF MATCH DMAC	LibFCI, 40 FPP_IF_MATCH_TYPE_TCP
LibFCI, 41	LibFCI, 40
FPP_IF_MATCH_DPORT	FPP_IF_MATCH_TYPE_UDP
LibFCI, 40	LibFCI, 40
•	•
FPP_IF_MATCH_ETHTYPE	FPP_IF_MATCH_TYPE_VLAN
LibFCI, 40	LibFCI, 40
FPP_IF_MATCH_FP0	FPP_IF_MATCH_VLAN
LibFCI, 40	LibFCI, 40
FPP_IF_MATCH_FP1	FPP_IF_MIRROR
LibFCI, 40	LibFCI, 39
FPP_IF_MATCH_HIF_COOKIE	FPP_IF_OP_BRIDGE
LibFCI, 41	LibFCI, 40
FPP_IF_MATCH_OR	FPP_IF_OP_DEFAULT
LibFCI, 39	LibFCI, 40
FPP_IF_MATCH_PROTO	FPP_IF_OP_DISABLED
LibFCI, 40	LibFCI, 40



FPP_IF_OP_FLEXIBLE_ROUTER	action, 67
LibFCI, 40	dst_mac, 68
FPP_IF_OP_ROUTER	flags, 68
LibFCI, 40	id, 68
FPP_IF_OP_VLAN_BRIDGE	output_device, 68
LibFCI, 40	fpp_timeout_cmd_t, 69
FPP_IF_PROMISC	
LibFCI, 39	hif_cookie
fpp_l2_bd_flags_t	fpp_if_m_args_t, 59
LibFCI, 41	• 1
fpp_l2_bridge_domain_control_cmd, 59	id
action, 60	fpp_log_if_cmd_t, 63
flags, 61	fpp_phy_if_cmd_t, 65
if_list, 61	fpp_rt_cmd_t, 68
mcast_hit, 61	if_list
mcast_miss, 61	fpp_l2_bridge_domain_control_cmd, 61
ucast_hit, 60	LibFCI, 13
ucast_miss, 60	BS_BLOCKED, 41
untag_if_list, 61	BS_FORWARD_ONLY, 41
vlan, 60	BS_LEARN_ONLY, 41
FPP_L2BR_DOMAIN_DEFAULT	BS_NORMAL, 41
LibFCI, 41	CTCMD_FLAGS_REP_DISABLED, 39
FPP_L2BR_DOMAIN_FALLBACK	fci_catch, 44
LibFCI, 41	FCI_CB_CONTINUE, 43
fpp_log_if_cmd_t, 62	fci_cb_retval_t, 43
action, 62	FCI_CB_STOP, 43
arguments, 64	FCI_CFG_FORCE_LEGACY_API, 38
egress, 63	FCI_CLIENT_DEFAULT, 43
flags, 63	fci_client_type_t, 42
id, 63	fci_close, 43
match, 64	fci cmd, 45
name, 62	FCI_GROUP_CATCH, 42
parent_id, 63	FCI_GROUP_NONE, 42
parent_name, 63	fci_mcast_groups_t, 42
fpp_phy_if_block_state_t	fci_open, 43
LibFCI, 41	fci_query, 45
fpp_phy_if_cmd_t, 64	fci_register_cb, 47
action, 65	fci_write, 46
block_state, 66	FP_ACCEPT, 41
flags, 66	FP_NEXT_RULE, 41
id, 65	FP_OFFSET_FROM_L2_HEADER, 42
mac_addr, 66	FP_OFFSET_FROM_L3_HEADER, 42
mirror, 66	FP_OFFSET_FROM_L4_HEADER, 42
mode, 66	FP_REJECT, 41
name, 65	FPP_CMD_FP_FLEXIBLE_FILTER, 37
fpp_phy_if_op_mode_t	FPP_CMD_FP_RULE, 36
LibFCI, 39	FPP_CMD_FP_TABLE, 34
fpp rt cmd t, 67	FPP CMD IF LOCK SESSION, 30



FPP_CMD_IF_UNLOCK_SESSION, 30	FPP_IF_OP_FLEXIBLE_ROUTER, 40
FPP_CMD_IPV4_CONNTRACK_CHANGE,	FPP_IF_OP_ROUTER, 40
38	FPP_IF_OP_VLAN_BRIDGE, 40
FPP_CMD_IPV6_CONNTRACK_CHANGE,	FPP_IF_PROMISC, 39
39	fpp_l2_bd_flags_t, 41
FPP_CMD_L2_BD, 31	FPP_L2BR_DOMAIN_DEFAULT, 41
FPP_CMD_LOG_IF, 28	FPP_L2BR_DOMAIN_FALLBACK, 41
FPP_CMD_PHY_IF, 27	fpp_phy_if_block_state_t, 41
fpp_fp_offset_from_t, 42	fpp_phy_if_op_mode_t, 39
fpp_fp_rule_match_action_t, 41	libfci.h, 80
FPP_IF_DISCARD, 39	, , , , , , , , , , , , , , , , , , , ,
FPP_IF_ENABLED, 39	mac_addr
fpp_if_flags_t, 39	fpp_phy_if_cmd_t, 66
fpp_if_m_rules_t, 40	match
FPP_IF_MATCH_DIP, 40	fpp_log_if_cmd_t, 64
FPP_IF_MATCH_DIP6, 40	mcast_hit
	fpp_l2_bridge_domain_control_cmd, 61
FPP_IF_MATCH_DMAC, 41	mcast_miss
FPP_IF_MATCH_DPORT, 40	fpp_l2_bridge_domain_control_cmd, 61
FPP_IF_MATCH_ETHTYPE, 40	mirror
FPP_IF_MATCH_FP0, 40	fpp_phy_if_cmd_t, 66
FPP_IF_MATCH_FP1, 40	mode
FPP_IF_MATCH_HIF_COOKIE, 41	fpp_phy_if_cmd_t, 66
FPP_IF_MATCH_OR, 39	11-1 3
FPP_IF_MATCH_PROTO, 40	name
FPP_IF_MATCH_RESERVED7, 40	fpp_log_if_cmd_t, 62
FPP_IF_MATCH_RESERVED8, 40	fpp_phy_if_cmd_t, 65
FPP_IF_MATCH_SIP, 40	
FPP_IF_MATCH_SIP6, 40	output_device
FPP_IF_MATCH_SMAC, 40	fpp_rt_cmd_t, 68
FPP_IF_MATCH_SPORT, 40	narant id
FPP_IF_MATCH_TYPE_ARP, 40	parent_id for log if and t 63
FPP_IF_MATCH_TYPE_BCAST, 40	fpp_log_if_cmd_t, 63
FPP_IF_MATCH_TYPE_ETH, 40	parent_name
FPP_IF_MATCH_TYPE_ICMP, 40	fpp_log_if_cmd_t, 63
FPP_IF_MATCH_TYPE_IGMP, 40	position
FPP_IF_MATCH_TYPE_IPV4, 40	fpp_flexible_parser_table_cmd, 55
FPP_IF_MATCH_TYPE_IPV6, 40	proto
FPP_IF_MATCH_TYPE_IPX, 40	fpp_if_m_args_t, 59
FPP_IF_MATCH_TYPE_MCAST, 40	protocol
FPP IF MATCH TYPE PPPOE, 40	fpp_ct6_cmd_t, 51
FPP_IF_MATCH_TYPE_TCP, 40	fpp_ct_cmd_t, 54
FPP_IF_MATCH_TYPE_UDP, 40	r
FPP_IF_MATCH_TYPE_VLAN, 40	fpp_flexible_parser_table_cmd, 55
FPP_IF_MATCH_VLAN, 40	fpp_fp_rule_cmd_tag, 56
FPP_IF_MIRROR, 39	route_id
FPP_IF_OP_BRIDGE, 40	fpp_ct6_cmd_t, 52
FPP_IF_OP_DEFAULT, 40	fpp_cto_cmd_t, 52 fpp_ct_cmd_t, 54
FPP_IF_OP_DISABLED, 40	route_id_reply
TEE IF OF DISADLED, 40	TOUTE IN TEDIA



```
fpp_ct6_cmd_t, 52
   fpp_ct_cmd_t, 54
rule_name
   fpp_flexible_parser_table_cmd, 55
saddr
    fpp_ct6_cmd_t, 50
   fpp_ct_cmd_t, 53
saddr_reply
   fpp_ct6_cmd_t, 51
   fpp_ct_cmd_t, 53
smac
    fpp_if_m_args_t, 59
sport
    fpp_ct6_cmd_t, 51
   fpp_ct_cmd_t, 53
   fpp_if_m_args_t, 58
sport_reply
    fpp_ct6_cmd_t, 51
   fpp_ct_cmd_t, 54
table_name
   fpp_flexible_parser_table_cmd, 55
ucast_hit
    fpp_l2_bridge_domain_control_cmd, 60
ucast miss
    fpp_l2_bridge_domain_control_cmd, 60
untag_if_list
    fpp_l2_bridge_domain_control_cmd, 61
v4
    fpp_if_m_args_t, 58
v6
    fpp_if_m_args_t, 58
vlan
    fpp_if_m_args_t, 58
    fpp_l2_bridge_domain_control_cmd, 60
```