

FCI API Reference



Contents

1	Revi	sion Hi	story	10
2	Mod	lule Ind	ex	12
	2.1	Modul	es	12
3	Data	a Structi	ure Index	13
	3.1	Data S	tructures	13
4	File	Index		15
	4.1	File Lis	st	15
5	Mod	lule Doc	cumentation	16
	5.1	LibFCI	[16
		5.1.1	Introduction	16
		5.1.2	Acronyms and Definitions	17
		5.1.3	Functions Summary	17
		5.1.4	Commands Summary	17
		5.1.5	Events summary	18
		5.1.6	Interface Management	19
		5.1.7	Features	21
			5.1.7.1 IPv4/IPv6 Router (TCP/UDP)	21
			5.1.7.2 L2 Bridge (Switch)	22
			5.1.7.3 Flexible Parser	25
			5.1.7.4 Flexible Router	26
			5.1.7.5 IPsec Offload	27
			5.1.7.6 Egress QoS	27
		5.1.8	Defines	32
			5.1.8.1 FPP_CMD_PHY_IF	33
			5.1.8.2 FPP_CMD_LOG_IF	34
			5.1.8.3 FPP_CMD_IF_LOCK_SESSION	36



	5.1.8.4	FPP_CMID_IF_UNLOCK_SESSION	36
	5.1.8.5	FPP_CMD_L2_BD	37
	5.1.8.6	FPP_CMD_FP_TABLE	39
	5.1.8.7	FPP_CMD_FP_RULE	41
	5.1.8.8	FPP_CMD_FP_FLEXIBLE_FILTER	43
	5.1.8.9	FPP_CMD_DATA_BUF_PUT	43
	5.1.8.10	FPP_CMD_DATA_BUF_AVAIL	44
	5.1.8.11	FPP_CMD_SPD	44
	5.1.8.12	FPP_CMD_QOS_QUEUE	46
	5.1.8.13	FPP_CMD_QOS_SCHEDULER	47
	5.1.8.14	FPP_CMD_QOS_SHAPER	48
	5.1.8.15	FCI_CFG_FORCE_LEGACY_API	49
	5.1.8.16	FPP_CMD_IPV4_CONNTRACK_CHANGE	49
	5.1.8.17	FPP_CMD_IPV6_CONNTRACK_CHANGE	49
	5.1.8.18	CTCMD_FLAGS_REP_DISABLED	50
5.1.9	Enums		50
	5.1.9.1	fpp_if_flags_t	50
	5.1.9.2	$fpp_phy_if_op_mode_t $	50
	5.1.9.3	fpp_if_m_rules_t	51
	5.1.9.4	fpp_phy_if_block_state_t	51
	5.1.9.5	fpp_l2_bd_flags_t	52
	5.1.9.6	fpp_fp_rule_match_action_t	52
	5.1.9.7	fpp_fp_offset_from_t	52
	5.1.9.8	fci_mcast_groups_t	53
	5.1.9.9	fci_client_type_t	53
	5.1.9.10	fci_cb_retval_t	54
5.1.10	Function	ns	54
	5.1.10.1	fci_open()	54
	5.1.10.2	fci_close()	54
	5.1.10.3	fci_catch()	55
	5.1.10.4	fci_cmd()	56
	5.1.10.5	fci_query()	56
	5.1.10.6	fci_write()	57
	5.1.10.7	fci_register_cb()	58



6.1	FCI_C	LIENT Str	uct Reference	5	59
	6.1.1	Detailed	Description	5	59
6.2	fpp_al	go_stats_t	Struct Reference	5	59
	6.2.1	Detailed	Description	6	60
	6.2.2	Field Do	cumentation	6	60
		6.2.2.1	processed	6	60
		6.2.2.2	accepted	6	60
		6.2.2.3	rejected	6	60
		6.2.2.4	discarded	6	60
6.3	fpp_bu	ıf_cmd_t	Struct Reference	6	60
	6.3.1	Detailed	Description	6	61
	6.3.2	Field Do	cumentation	6	61
		6.3.2.1	payload	6	61
		6.3.2.2	len	6	61
6.4	fpp_ct	6_cmd_t	Struct Reference	6	61
	6.4.1	Detailed	Description	6	62
	6.4.2	Field Do	cumentation	6	62
		6.4.2.1	action	6	52
		6.4.2.2	saddr	6	52
		6.4.2.3	daddr	6	62
		6.4.2.4	sport	6	52
		6.4.2.5	dport	6	3
		6.4.2.6	saddr_reply	6	33
		6.4.2.7	daddr_reply	6	3
		6.4.2.8	sport_reply	6	63
		6.4.2.9	dport_reply	6	3
		6.4.2.10	protocol	6	63
		6.4.2.11	flags	6	3
		6.4.2.12	route_id	6	63
		6.4.2.13	route_id_reply	6	64
6.5	fpp_ct	_cmd_t St	ruct Reference	6	64
	6.5.1	Detailed	Description	6	64
	6.5.2	Field Do	cumentation	6	64
		6.5.2.1	action	6	35
		6.5.2.2	saddr	6	65
		6.5.2.3	daddr	6	35



		6.5.2.4	sport	. 65
		6.5.2.5	dport	. 65
		6.5.2.6	saddr_reply	. 65
		6.5.2.7	daddr_reply	. 65
		6.5.2.8	sport_reply	. 66
		6.5.2.9	dport_reply	. 66
		6.5.2.10	protocol	. 66
		6.5.2.11	flags	. 66
		6.5.2.12	route_id	. 66
		6.5.2.13	route_id_reply	. 66
6.6	fpp_fp	_rule_cm	d_t Struct Reference	. 66
	6.6.1	Detailed	Description	. 67
	6.6.2	Field Do	cumentation	. 67
		6.6.2.1	action	. 67
		6.6.2.2	$r \ldots \ldots \ldots \ldots \ldots$. 67
6.7	fpp_fp	_rule_pro	pps_t Struct Reference	. 67
	6.7.1	Detailed	Description	. 67
6.8	fpp_fp	_table_cn	nd_t Struct Reference	. 68
	6.8.1	Detailed	Description	. 68
	6.8.2	Field Do	cumentation	. 68
		6.8.2.1	action	. 68
		6.8.2.2	table_name	. 68
		6.8.2.3	rule_name	. 68
		6.8.2.4	position	. 68
		6.8.2.5	$r \ldots \ldots \ldots \ldots \ldots$. 69
6.9	fpp_if_	_m_args_t	Struct Reference	. 69
	6.9.1	Detailed	Description	. 69
	6.9.2	Field Do	cumentation	. 69
		6.9.2.1	vlan	. 70
		6.9.2.2	ethtype	. 70
		6.9.2.3	sport	. 70
		6.9.2.4	dport	. 70
		6.9.2.5	v4	. 70
		6.9.2.6	v6	. 70
		6.9.2.7	proto	. 70
		6.9.2.8	smac	. 71



		6.9.2.9	dmac	71
		6.9.2.10	fp_table0	71
		6.9.2.11	fp_table1	71
		6.9.2.12	hif_cookie	71
6.10	fpp_l2	_bd_cmd_	_t Struct Reference	71
	6.10.1	Detailed	Description	72
	6.10.2	Field Do	cumentation	72
		6.10.2.1	action	72
		6.10.2.2	vlan	72
		6.10.2.3	ucast_hit	72
		6.10.2.4	ucast_miss	72
		6.10.2.5	mcast_hit	72
		6.10.2.6	mcast_miss	73
		6.10.2.7	if_list	73
		6.10.2.8	untag_if_list	73
		6.10.2.9	flags	73
6.11	fpp_lo	g_if_cmd_	_t Struct Reference	73
	6.11.1	Detailed	Description	74
	6.11.2	Field Do	cumentation	74
		6.11.2.1	action	74
		6.11.2.2	name	74
		6.11.2.3	id	75
		6.11.2.4	parent_name	75
			parent_id	
			egress	
		6.11.2.7	flags	
		6.11.2.8	match	
		6.11.2.9	arguments	
		6.11.2.10	stats	
6.12	fpp pł		_t Struct Reference	
			Description	
			cumentation	
		6.12.2.1	action	
		6.12.2.2	name	
			id	
			flags	
		· · · · ·		



		6.12.2.5 mode	78
		6.12.2.6 block_state	78
		6.12.2.7 mac_addr	78
		6.12.2.8 mirror	78
		6.12.2.9 stats	78
6.13	fpp_ph	ny_if_stats_t Struct Reference	79
	6.13.1	Detailed Description	79
	6.13.2	Field Documentation	79
		6.13.2.1 ingress	79
		6.13.2.2 egress	79
		6.13.2.3 malformed	79
		6.13.2.4 discarded	80
6.14	fpp_qc	os_queue_cmd_t Struct Reference	80
		•	80
	6.14.2	Field Documentation	80
		6.14.2.1 action	80
		6.14.2.2 if_name	81
		6.14.2.3 id	81
		6.14.2.4 mode	81
		6.14.2.5 min	81
		6.14.2.6 max	82
		6.14.2.7 zprob	82
6.15	fpp_qc	os_scheduler_cmd_t Struct Reference	82
		•	83
	6.15.2	Field Documentation	83
		6.15.2.1 action	83
			83
			84
			84
		6.15.2.5 algo	84
		6.15.2.6 input_en	85
		6.15.2.7 input_w	85
		1 -	85
6.16			85
	6.16.1	Detailed Description	86
	6.16.2	Field Documentation	86



		6.16.2.1 action
		6.16.2.2 if_name
		6.16.2.3 id
		6.16.2.4 position
		6.16.2.5 mode
		6.16.2.6 isl
		6.16.2.7 max_credit
		6.16.2.8 min_credit
6.17	fpp_rt_	_cmd_t Struct Reference
	6.17.1	Detailed Description
	6.17.2	Field Documentation
		6.17.2.1 action
		6.17.2.2 dst_mac
		6.17.2.3 output_device
		6.17.2.4 id
		6.17.2.5 flags
6.18	fpp_sp	d_cmd_t Struct Reference
	6.18.1	Detailed Description
	6.18.2	Field Documentation
		6.18.2.1 action
		6.18.2.2 name
		6.18.2.3 position
		6.18.2.4 saddr
		6.18.2.5 daddr
		6.18.2.6 sport
		6.18.2.7 dport
		6.18.2.8 protocol
		6.18.2.9 sa_id
		6.18.2.10 spi
		6.18.2.11 spd_action
6.19	fpp_tir	neout_cmd_t Struct Reference
	6.19.1	Detailed Description
File 1	Docum	entation 93
7.1		Tile Reference
	7.1.1	Detailed Description

7



		7.1.2	Macro D	Definition Documentation	9	4
			7.1.2.1	FPP_CMD_IPV4_CONNTRACK	9	4
			7.1.2.2	FPP_CMD_IPV6_CONNTRACK	90	6
			7.1.2.3	FPP_CMD_IP_ROUTE	9	8
			7.1.2.4	FPP_CMD_IPV4_RESET	10	0
			7.1.2.5	FPP_CMD_IPV6_RESET	10	0
			7.1.2.6	FPP_CMD_IPV4_SET_TIMEOUT	10	0
	7.2	fpp_ex	t.h File Re	eference	10	1
		7.2.1	Detailed	Description	103	3
	7.3	libfci.l	n File Refe	rence	103	3
		7.3.1	Detailed	Description	10	5
•		1.5		and the second s	10	_
8	Exa	mpie Do	ocumenta	ITION	100	0
	8.1	fpp_cr	nd_ip_rou	ate.c	10	6
	8.2	fpp_cr	nd_ipv4_o	conntrack.c	109	9
	8.3	fpp_cr	nd_ipv6_o	conntrack.c	113	3
	8.4	fpp_cr	nd_log_if.	.c	11	7
	8.5	fpp_cr	nd_phy_i	f.c	119	9
	8.6	fpp_cr	nd_qos_q	ueue.c	12	2
	8.7	fpp_cr	nd_qos_s	cheduler.c	12	5
	8.8	fpp_cr	nd_qos_s	haper.c	129	9
Inc	lex				132	2
111	ICA				13	_



Revision History

Revision	Change Description
1.0.0	Initial version. Contains description of FCI API and following features: • Interface Management • IPv4/IPv6 Router (TCP/UDP) • L2 Bridge (Switch) • Flexible Parser • Flexible Router
1.1.0	Added description of simple bridge (without VLAN awareness). Disabled part describing async messaging as it is currently not used. Description of fci_cmd(), fci_query(), and fci_write() simplified. Various minor improvements.
1.2.0	Improved description of Router and Bridge configuration steps. Added missing byte order information to various command argument values. Following values unified with rest of structure members to be in network byte order:
	• fpp_rt_cmd_t::id
	• fpp_rt_cmd_t::flags
	• fpp_ct_cmd_t::route_id
	• fpp_ct_cmd_t::route_id_reply
	• fpp_ct_cmd_t::flags
	• fpp_fp_table_cmd_t::position
1.2.1	Added FPP_IF_MIRROR to fpp_if_flags_t. Added name of interface
	to mirror the traffic to fpp_phy_if_cmd_t.



1.3.0	Description of various elements re-phrased to better explain their
1.3.0	
	purpose. Created summary lists of functions, commands, and events
	and added links to them to improve document navigation. Added
	usage examples for FPP_CMD_PHY_IF, FPP_CMD_LOG_IF, and
	FPP_CMD_IP_ROUTE commands. Described relevant fpp_rt_cmd_t
	structure members.
1.4.0	Added usage examples for FPP_CMD_IPV4_CONNTRACK and
	FPP_CMD_IPV6_CONNTRACK. Related argument structures
	documentation updated. Removed unwanted and unsupported
	symbol descriptions.
1.5.0	Added statistics for physical fpp_phy_if_stats_t and logical
	fpp_algo_stats_t interfaces. Statistics are in network byte
	order.
1.6.0	Added API for data passing: FPP_CMD_DATA_BUF_PUT and
	FPP_CMD_DATA_BUF_AVAIL with related fpp_buf_cmd_t.
1.7.0	Described the IPsec offload configuration and related
	FPP_CMD_SPD command.
1.8.0	Added QoS configuration commands: FPP_CMD_QOS_QUEUE,
	FPP_CMD_QOS_SCHEDULER and FPP_CMD_QOS_SHAPER with
	related argument structures.
1.8.1	Licensing notice within headers of examples updated.



Module Index

2.1 Modules

Here is a list of all modules:		
LibFCI		16



Data Structure Index

3.1 Data Structures

Here are the data structures with brief descriptions: FCI_CLIENT	
The FCI client representation type	59
fpp_algo_stats_t Algorithm statistics	59
<pre>fpp_buf_cmd_t</pre>	60
$\frac{fpp_ct6_cmd_t}{Data\ structure\ used\ in\ various\ functions\ for\ IPv6\ conntrack\ management\ \ .}$	61
<pre>fpp_ct_cmd_t</pre>	64
fpp_fp_rule_cmd_t Arguments for the FPP_CMD_FP_RULE command	66
fpp_fp_rule_props_t Properties of the Flexible parser rule	67
fpp_fp_table_cmd_t Arguments for the FPP_CMD_FP_TABLE command	68
fpp_if_m_args_t Match rules arguments	69
fpp_l2_bd_cmd_t Data structure to be used for command buffer for L2 bridge domain control commands	71
fpp_log_if_cmd_t Data structure to be used for logical interface commands	73
fpp_phy_if_cmd_t Data structure to be used for physical interface commands	76
fpp_phy_if_stats_t Physical interface statistics	79





<pre>fpp_qos_queue_cmd_t</pre>	80
fpp_qos_scheduler_cmd_t Argument of the FPP_CMD_QOS_SCHEDULER command	82
fpp_qos_shaper_cmd_t Argument of the FPP_CMD_QOS_SHAPER command	85
fpp_rt_cmd_t Structure representing the command to add or remove a route	88
fpp_spd_cmd_t Argument structure for the FPP_CMD_SPD command	90
fpp_timeout_cmd_t Timeout command argument	92



2019-2020 NXP

Chapter 4

File Index

4.1 File List

Here is a li	st of all documented files with brief descriptions:	
fci_exa	mples.h	\$ 3
fpp.h		
	The legacy FCI API	93
fpp_ext	h	
	Extension of the legacy fpp.h	101
libfci.h		
	Generic LibFCI header file	103



Module Documentation

5.1 LibFCI

This is the Fast Control Interface available to host applications to communicate with the networking engine.

5.1.1 Introduction

This is the Fast Control Interface available to host applications to communicate with the networking engine.

The FCI is intended to provide a generic configuration and monitoring interface to networking acceleration HW. Provided API shall remain the same within all HW/OS-specific implementations to keep dependent applications portable across various systems.

The LibFCI is not directly touching the HW. Instead, it only passes commands to dedicated software component (OS/HW-specific endpoint) and receives return values. The endpoint is then responsible for HW configuration. This approach supports kernel-user space deployment where user space contains only API and the logic is implemented in kernel.

Implementation uses appropriate transport mechanism to pass data between LibFCI user and the endpoint. For reference, in Linux netlink socket will be used, in QNX it will be a message.

Usage scenario example - FCI command execution:

- 1. User calls fci_open() to get the FCI_CLIENT instance, use FCI_GROUP_NONE as multicast group mask.
- 2. User calls fci_cmd() to send a command with arguments to the endpoint.
- 3. Endpoint receives the command and performs requested actions.
- 4. Endpoint generates response and sends it back to the client.
- 5. Client receives the response and informs the caller.
- 6. User calls fci_close() to finalize the FCI_CLIENT instance.



5.1.2 Acronyms and Definitions

- **Physical Interface:** Interface physically able to send and receive data (EMAC, HIF). Physical interfaces are pre-defined and can't be added or removed in runtime. Every physical interface has associated a **default** logical interface and set of properties like classification algorithm.
- Logical Interface: Extension of physical interface defined by set of rules which describes Ethernet traffic. Intended to be used to dispatch traffic being received via particular physical interfaces using 1:N association i.e. traffic received by a physical interface can be classified and distributed to N logical interfaces. These can be either connected to SW stack running in host system or just used to distribute traffic to an arbitrary physical interface(s). Logical interfaces are dynamic objects and can be created and destroyed in runtime.
- Classification Algorithm: Way how ingress traffic is being processed by the PFE firmware.
- **Route:** Routes are representing direction where matching traffic shall be forwarded to. Every route specifies egress physical interface and MAC address of next network node.
- **Conntrack:** "Tracked connection", a data structure containing information about a connection. In context of this document it always refers to an IP connection (TCP, UDP, other). Term is equal to 'routing table entry'. Conntracks contain reference to routes which shall be used in case when a packet is matching the conntrack properties.

5.1.3 Functions Summary

- fci_open()

 Connect to endpoint and create client instance.
- fci_close()

 Close connection and destroy the client instance.
- fci_write()

 Execute FCI command without data response.
- fci_cmd()

 Execute FCI command with data response.
- fci_query()
 Alternative to fci_cmd().
- fci_catch()

 Poll for and process received asynchronous messages.
- fci_register_cb()
 Register callback to be called in case of received message.

5.1.4 Commands Summary

FPP_CMD_PHY_IF
 Management of physical interfaces.



- FPP_CMD_LOG_IF
 Management of logical interfaces.
- FPP_CMD_IF_LOCK_SESSION Get exclusive access to interfaces.
- FPP_CMD_IF_UNLOCK_SESSION Cancel exclusive access to interfaces.
- FPP_CMD_L2_BD L2 bridge domains management.
- FPP_CMD_FP_TABLE

 Administration of Flexible Parser tables.
- FPP_CMD_FP_RULE

 Administration of Flexible Parser rules.
- FPP_CMD_FP_FLEXIBLE_FILTER *Utilization of Flexible Parser to filter out (drop) frames.*
- FPP_CMD_IPV4_RESET Reset IPv4 (routes, conntracks, ...).
- FPP_CMD_IPV6_RESET Reset IPv6 (routes, conntracks, ...).
- FPP_CMD_IP_ROUTE Management of IP routes.
- FPP_CMD_IPV4_CONNTRACK Management of IPv4 connections.
- FPP_CMD_IPV6_CONNTRACK
 Management of IPv6 connections.
- FPP_CMD_IPV4_SET_TIMEOUT Configuration of connection timeouts.
- FPP_CMD_DATA_BUF_PUT Send arbitrary data to the accelerator.
- FPP_CMD_SPD Configure the IPsec offload.
- FPP_CMD_QOS_QUEUE Management of Egress QoS queues.
- FPP_CMD_QOS_SCHEDULER Management of Egress QoS schedulers.
- FPP_CMD_QOS_SHAPER
 Management of Egress QoS shapers.

5.1.5 Events summary

FPP_CMD_DATA_BUF_AVAIL
 Network accelerator sends a data buffer to host.



5.1.6 Interface Management

Physical Interface

Physical interfaces are static objects and are defined at startup. LibFCI client can get a list of currently available physical interfaces using query option of the FPP_CMD_PHY_IF command. Every physical interface contains a list of logical interfaces. Without any configuration all physical interfaces are in default operation mode. It means that all ingress traffic is processed using only associated **default** logical interface. Default logical interface is always the tail of the list of associated logical interfaces. When new logical interface is associated, it is placed at head position of the list so the default one remains on tail. User can change the used classification algorithm via update option of the FPP_CMD_PHY_IF command.

Here are supported operations related to physical interfaces:

To **list** available physical interfaces:

- 1. Lock interface database with FPP_CMD_IF_LOCK_SESSION.
- Read first interface via FPP_CMD_PHY_IF + FPP_ACTION_QUERY.
- 3. Read next interface(s) via FPP_CMD_PHY_IF + FPP_ACTION_QUERY_CONT.
- 4. Unlock interface database with FPP_CMD_IF_UNLOCK_SESSION.

To **modify** a physical interface (read-modify-write):

- 1. Lock interface database with FPP CMD IF LOCK SESSION.
- 2. Read interface properties via FPP_CMD_PHY_IF + FPP_ACTION_QUERY + FPP_ACTION_QUERY_CONT.
- 3. Modify desired properties.
- 4. Write modifications using FPP_CMD_PHY_IF + FPP_ACTION_UPDATE.
- 5. Unlock interface database with FPP_CMD_IF_UNLOCK_SESSION.

Logical Interface

Logical interfaces specify traffic endpoints. They are connected to respective physical interfaces and contain information about which traffic can they accept and how the accepted traffic shall be processed (where, resp. to which **physical** interface(s) the matching traffic shall be forwarded). For example, there can be two logical interfaces associated with an EMAC1, one accepting traffic with VLAN ID = 10 and the second one accepting all remaining traffic. First one can be configured to forward the matching traffic to EMAC1 and the second one to drop the rest.

Logical interfaces can be created and destroyed in runtime using actions related to the FPP_CMD_LOG_IF command. Note that first created logical interface on a physical interface becomes the default one (tail). All subsequent logical interfaces are added at head position of list of interfaces.



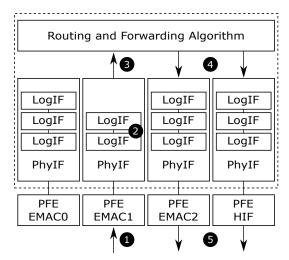


Figure 5.1 Configuration Example

The example shows scenario when physical interface EMAC1 is configured in FPP_IF_OP_FLEXIBLE_ROUTER operation mode:

- 1. Packet is received via EMAC1 port of the PFE.
- 2. Classifier walks through list of Logical Interfaces associated with the ingress Physical Interface. Every Logical Interface contains a set of classification rules (see fpp_if_m_rules_t) the classification process is using to match the ingress packet. Note that the list is searched from head to tail, where tail is the default logical interface.
- 3. Information about matching Logical Interface and Physical Interface is passed to the Routing and Forwarding Algorithm. The algorithm reads the Logical Interface and retrieves forwarding properties.
- 4. The matching Logical Interface is configured to forward the packet to EMAC2 and HIF so the forwarding algorithm ensures that. Optionally, here the packet can be modified according to interface setup (VLAN insertion, source MAC address replacement, ...).
- 5. Packet is physically transmitted via dedicated interfaces. Packet replica sent to HIF carries metadata describing the matching Logical and Physical interface so the host driver can easily dispatch the traffic.

Here are supported operations related to logical interfaces:

To **create** new logical interface:

- 1. Lock interface database with FPP_CMD_IF_LOCK_SESSION.
- 2. Create logical interface via FPP_CMD_LOG_IF + FPP_ACTION_REGISTER.
- 3. Unlock interface database with FPP_CMD_IF_UNLOCK_SESSION.

To **list** available logical interfaces:

- 1. Lock interface database with FPP_CMD_IF_LOCK_SESSION.
- Read first interface via FPP_CMD_LOG_IF + FPP_ACTION_QUERY.



- 3. Read next interface(s) via FPP_CMD_LOG_IF + FPP_ACTION_QUERY_CONT.
- 4. Unlock interface database with FPP_CMD_IF_UNLOCK_SESSION.

To **modify** an interface (read-modify-write):

- 1. Lock interface database with FPP_CMD_IF_LOCK_SESSION.
- 2. Read interface properties via FPP_CMD_LOG_IF + FPP_ACTION_QUERY + FPP_ACTION_QUERY_CONT.
- 3. Modify desired properties.
- 4. Write modifications using FPP_CMD_LOG_IF + FPP_ACTION_UPDATE.
- 5. Unlock interface database with FPP_CMD_IF_UNLOCK_SESSION.

To **remove** logical interface:

- 1. Lock interface database with FPP_CMD_IF_LOCK_SESSION.
- 2. Remove logical interface via FPP_CMD_LOG_IF + FPP_ACTION_DEREGISTER.
- 3. Unlock interface database with FPP_CMD_IF_UNLOCK_SESSION.

5.1.7 Features

5.1.7.1 IPv4/IPv6 Router (TCP/UDP)

Introduction

The IPv4/IPv6 Forwarder is a dedicated feature to offload the host CPU from tasks related to forwarding of specific IP traffic between physical interfaces. Normally, the ingress IP traffic is passed to the host CPU running TCP/IP stack which is responsible for routing of the packets. Once the stack identifies that a packet does not belong to any of local IP endpoints it performs lookup in routing table to determine how to process such traffic. If the routing table contains entry associated with the packet (5-tuple search) the stack modifies and forwards the packet to another interface to reach its intended destination node. The PFE can be configured to identify flows which do not need to enter the host CPU using its internal routing table, and to ensure that the right packets are forwarded to the right destination interfaces.

Configuration

The FCI contains mechanisms to setup particular Physical Interfaces to start classifying packets using Router classification algorithm as well as to manage PFE routing tables. The router configuration then consists of following steps:

- 1. Optionally use FPP_CMD_IPV4_RESET or FPP_CMD_IPV6_RESET to initialize the router. All previous configuration changes will be discarded.
- 2. Create one or more routes (FPP_CMD_IP_ROUTE + FPP_ACTION_REGISTER). Once created, every route has an unique identifier. Creating route on an physical interface causes switch of operation mode of that interface to FPP_IF_OP_ROUTER.



- 3. Create one or more IPv4 routing table entries (FPP_CMD_IPV4_CONNTRACK + FPP ACTION REGISTER).
- 4. Create one or more IPv6 routing table entries (FPP_CMD_IPV6_CONNTRACK + FPP_ACTION_REGISTER).
- 5. Set desired physical interface(s) to router mode FPP_IF_OP_ROUTER using FPP_CMD_PHY_IF + FPP_ACTION_UPDATE. This selects interfaces which will use routing algorithm to classify ingress traffic.
- 6. Enable physical interface(s) by setting the FPP_IF_ENABLED flag via the FPP_CMD_PHY_IF + FPP_ACTION_UPDATE.
- 7. Optionally change MAC address(es) via FPP_CMD_PHY_IF + FPP_ACTION_UPDATE.

From this point the traffic matching created conntracks is processed according to conntrack properties (e.g. NAT) and fast-forwarded to configured physical interfaces. Conntracks are subject of aging. When no traffic has been seen for specified time period (see FPP CMD IPV4 SET TIMEOUT) the conntracks are removed.

Routes and conntracks can be listed using query commands:

- FPP_CMD_IP_ROUTE + FPP_ACTION_QUERY + FPP_ACTION_QUERY_CONT.
- FPP_CMD_IPV4_CONNTRACK+FPP_ACTION_QUERY+FPP_ACTION_QUERY_CONT.
- FPP_CMD_IPV6_CONNTRACK+FPP_ACTION_QUERY+FPP_ACTION_QUERY_CONT.

When conntrack or route are no more required, they can be deleted via corresponding command:

- FPP CMD IP ROUTE + FPP ACTION DEREGISTER,
- FPP_CMD_IPV4_CONNTRACK + FPP_ACTION_DEREGISTER, and
- FPP_CMD_IPV6_CONNTRACK + FPP_ACTION_DEREGISTER.

Deleting route causes deleting all associated countracks. When the latest route on an interface is deleted, the interface is put to default operation mode FPP_IF_OP_DEFAULT.

5.1.7.2 L2 Bridge (Switch)

Introduction

The L2 Bridge functionality covers forwarding of packets based on MAC addresses. It provides possibility to move bridging-related tasks from host CPU to the PFE and thus offloads the host-based networking stack. The L2 Bridge feature represents a network switch device implementing following functionality:

• MAC table and address learning: The L2 bridging functionality is based on determining to which interface an ingress packet shall be forwarded. For this purpose a network switch device implements so called bridging table (MAC table) which is searched to get target interface for each packet entering the switch. If received source MAC address does not match any MAC table entry then a new entry, containing



the Physical Interface which the packet has been received on, is added - learned. Destination MAC address of an ingress packet is then used to search the table to determine the target interface.

- **Aging:** Each MAC table entry gets default timeout value once learned. In time this timeout is being decreased until zero is reached. Entries with zero timeout value are automatically removed from the table. The timeout value is re-set each time the corresponding table entry is used to process a packet.
- **Port migration:** When a MAC address is seen on one interface of the switch and an entry has been created, it is automatically updated when the MAC address is seen on another interface.
- VLAN Awareness: The bridge implements VLAN table. This table is used to implement VLAN-based policies like Ingress and Egress port membership. Feature includes configurable VLAN tagging and un-tagging functionality per bridge interface (Physical Interface). The bridge utilizes PFE HW accelerators to perform MAC and VLAN table lookup thus this operation is highly optimized. Host CPU SW is only responsible for correct bridge configuration using the dedicated API.

L2 Bridge VLAN Awareness and Domains

The VLAN awareness is based on entities called Bridge Domains (BD) which are visible to both classifier firmware, and the driver, and are used to abstract particular VLANs. Every BD contains configurable set of properties:

- Associated VLAN ID.
- Set of Physical Interfaces which are members of the domain.
- Information about which of the member interfaces are 'tagged' or 'untagged'.
- Instruction how to process matching uni-cast packets (forward, flood, discard, ...).
- Instruction how to process matching multi-cast packets.

The L2 Bridge then consists of multiple BD types:

- The Default BD: Default domain is used by the classification process when a packet has been received with default VLAN ID. This can happen either if the packet does not contain VLAN tag or the VLAN tag is equal to the default VLAN configured within the bridge.
- The Fall-back BD: This domain is used when packet with an unknown VLAN ID (does not match any standard or default domain) is received in FPP_IF_OP_VLAN_BRIDGE mode. It is also used as representation of simple L2 bridge when VLAN awareness is disabled (in case of the FPP_IF_OP_BRIDGE mode).
- **Set of particular Standard BDs:** Standard domain. Specifies what to do when packet with VLAN ID matching the Standard BD is received.

Configuration

Here are steps needed to configure VLAN-aware switch:



- 1. Optionally get list of available physical interfaces and their IDs. See the Interface Management.
- Create a bridge domain (VLAN domain) (FPP_CMD_L2_BD + FPP_ACTION_REGISTER).
- 3. Configure domain hit/miss actions (FPP_CMD_L2_BD + FPP_ACTION_UPDATE) to let the bridge know how to process matching traffic.
- Add physical interfaces as members of that domain (FPP_CMD_L2_BD + FPP_ACTION_UPDATE). Adding interface to a bridge domain causes switch of its operation mode to FPP_IF_OP_VLAN_BRIDGE and enabling promiscuous mode on MAC level.
- 5. Set physical interface(s) to VLAN bridge mode FPP_IF_OP_VLAN_BRIDGE using FPP_CMD_PHY_IF + FPP_ACTION_UPDATE.
- 6. Set promiscuous mode and enable physical interface(s) by setting the FPP_IF_ENABLED and FPP_IF_PROMISC flags via the FPP_CMD_PHY_IF + FPP_ACTION_UPDATE.

For simple, non-VLAN aware switch do:

- 1. Optionally get list of available physical interfaces and their IDs. See the Interface Management.
- Add physical interfaces as members of fall-back BD (FPP_CMD_L2_BD + FPP_ACTION_UPDATE). The fall-back BD is identified by VLAN 0 and exists automatically.
- 3. Configure domain hit/miss actions (FPP_CMD_L2_BD + FPP_ACTION_UPDATE) to let the bridge know how to process matching traffic.
- 4. Set physical interface(s) to simple bridge mode FPP_IF_OP_BRIDGE using FPP_CMD_PHY_IF + FPP_ACTION_UPDATE.
- 5. Set promiscuous mode and enable physical interface(s) by setting the FPP_IF_ENABLED and FPP_IF_PROMISC flags via the FPP_CMD_PHY_IF + FPP_ACTION_UPDATE.

Once interfaces are in bridge domain, all ingress traffic is processed according to bridge domain setup. Unknown source MAC addresses are being learned and after specified time period without traffic are being aged.

An interface can be added to or removed from BD at any time via FPP_CMD_L2_BD + FPP_ACTION_UPDATE. When interface is removed from all bridge domains (is not associated with any BD), its operation mode is automatically switched to FPP_IF_OP_DEFAULT and MAC promiscuous mode is disabled.

List of available bridge domains with their properties can be retrieved using FPP_CMD_L2_BD + FPP_ACTION_QUERY + FPP_ACTION_QUERY_CONT.



5.1.7.3 Flexible Parser

Introduction

The Flexible Parser is PFE firmware-based feature allowing user to extend standard ingress packet classification process by set of customizable classification rules. According to the rules the Flexible Parser can mark frames as ACCEPTED or REJECTED. The rules are configurable by user and exist in form of tables. Every classification table entry consist of following fields:

- 32-bit Data field to be compared with value from the ingress frame.
- 32-bit Mask field (active bits are '1') specifying which bits of the data field will be used to perform the comparison.
- 16-bit Configuration field specifying rule properties including the offset to the frame data which shall be compared.

The number of entries within the table is configurable by user. The table is processed sequentially starting from entry index 0 until the last one is reached or classification is terminated by a rule configuration. When none of rules has decided that the packet shall be accepted or rejected the default result is REJECT.

Example

This is example of how Flexible Parser table can be configured. Every row contains single rule and processing starts with rule 0. ACCEPT/REJECT means that the classification is terminated with given result, CONTINUE means that next rule (sequentially) will be evaluated. CONTINUE with N says that next rule to be evaluated is N. Evaluation of the latest rule not resulting in ACCEPT or REJECT results in REJECT.

Rule	Flags	Mask	Next	Condition
0	FP_FL_INVERT	!= 0	n/a	if ((PacketData&Mask) != (RuleData&Mask))
	FP_FL_REJECT			then REJECT
				else CONTINUE
1	FP_FL_ACCEPT	!= 0	n/a	if ((PacketData&Mask) == (RuleData&Mask))
				then ACCEPT
				else CONTINUE
2	-	!= 0	4	if ((PacketData&Mask) == (RuleData&Mask))
				then CONTINUE with 4
				else CONTINUE
3	FP_FL_REJECT	= 0	n/a	REJECT
4	FP_FL_INVERT	!= 0	6	if ((PacketData&Mask) != (RuleData&Mask))
				then CONTINUE with 6
				else CONTINUE
5	FP_FL_ACCEPT	= 0	n/a	ACCEPT
6	FP_FL_INVERT	!= 0	n/a	if ((PacketData&Mask) != (RuleData&Mask))
	FP_FL_ACCEPT			then ACCEPT
				else CONTINUE
7	FP_FL_REJECT	= 0	n/a	REJECT



Configuration

- 1. Create a Flexible Parser table using FPP_CMD_FP_TABLE + FPP_ACTION_REGISTER.
- 2. Create one or multiple rules with FPP_CMD_FP_RULE + FPP_ACTION_REGISTER.
- 3. Assing rules to tables via FPP_CMD_FP_TABLE + FPP_ACTION_USE_RULE. Rules can be removed from table with FPP_ACTION_UNUSE_RULE.

Created table can be used for instance as argument of Flexible Router. When not needed the table can be deleted with FPP_CMD_FP_TABLE + FPP_ACTION_DEREGISTER and particular rules with FPP_CMD_FP_RULE + FPP_ACTION_DEREGISTER. This cleanup should be always considered since tables and rules are stored in limited PFE internal memory.

Flexible parser classification introduces performance penalty which is proportional to number of rules and complexity of the table.

5.1.7.4 Flexible Router

Introduction

Flexible router specifies behavior when ingress packets are classified and routed according to custom rules different from standard L2 Bridge (Switch) or IPv4/IPv6 Router processing. Feature allows definition of packet distribution rules using physical and logical interfaces. The classification hierarchy is given by ingress physical interface containing a configurable set of logical interfaces. Every time a packet is received via the respective physical interface, which is configured to use the Flexible Router classification, a walk through the list of associated logical interfaces is performed. Every logical interface is used to match the packet using interface-specific rules (fpp_if_m_rules_t). In case of match the matching packet is processed according to the interface configuration (e.g. forwarded via specific physical interface(s), dropped, sent to host, ...). In case when more rules are specified, the logical interface can be configured to apply logical AND or OR to get the match result. Please see the example within Interface Management.

Configuration

- Lock interface database with FPP_CMD_IF_LOCK_SESSION.
- 2. Use FPP_CMD_PHY_IF + FPP_ACTION_UPDATE to set a physical interface(s) to FPP_IF_OP_FLEXIBLE_ROUTER operation mode.
- 3. Use FPP_CMD_LOG_IF + FPP_ACTION_REGISTER to create new logical interface(s) if needed.
- 4. Optionally, if Flexible Parser is desired to be used as a classification rule, create table(s) according to Flexible Parser description.
- 5. Configure existing logical interface(s) (set match rules and arguments) via FPP_CMD_LOG_IF + FPP_ACTION_UPDATE.
- 6. Unlock interface database with FPP_CMD_IF_UNLOCK_SESSION.



Note that Flexible Router can be used to implement certain form of IPv4/IPv6 Router (TCP/UDP) as well as L2 Bridge (Switch). Such usage is of course not recommended since both mentioned features exist as fully optimized implementation and usage of Flexible Router this way would pointlessly affect forwarding performance.

5.1.7.5 IPsec Offload

Introduction

The IPsec offload feature is a premium one and requires a special premium firmware version to be available for use. It allows the chosen IP frames to be transparently encoded by the IPsec and IPsec frames to be transparently decoded without the CPU intervention using just the PFE and HSE engines.

The SPD database needs to be established on an interface which contains entries describing frame match criteria together with the SA ID reference to the SA established within the HSE describing the IPsec processing criteria. Frames matching the criteria are then processed by the HSE according to the chosen SA and returned for the classification via physical interface of UTIL PE. Normal classification follows the IPsec processing thus the decrypted packets can be e.g. routed.

Configuration

- 1. Use (repeatedly) the FPP_CMD_SPD command with FPP_ACTION_REGISTER action to set the SPD entries
- 2. Optionally the FPP_CMD_SPD command with FPP_ACTION_DEREGISTER action can be used to delete SPD entries

The HSE also requires the configuration via interfaces of the HSE firmware which is out of the scope of this document. The SAs referenced within the SPD entries must exist prior creation of the respective SPD entry.

5.1.7.6 Egress QoS

Introduction

The egress QoS allows user to prioritize, aggregate and shape traffic intended to leave the accelerator via physical interface. Each physical interface contains dedicated QoS block with specific number of schedulers, shapers and queues. Following applies for the S32G2/PFE:

- Number of queues: 8
- Maximum queue depth: 255
- Probability zones per queue: 8
- Number of schedulers: 2
- Number of scheduler inputs: 8
- Allowed data sources which can be connected to the scheduler inputs:



Source	Description			
0 - 7	Queue 0 - 7			
8	Output of Scheduler 0			
255	Invalid			


- Number of shapers: 4
- Allowed shaper positions:

Position	Description
0	Output of Scheduler 1 (QoS master output)
1 - 8	Input 0 - 7 of Scheduler 1
9 - 16	Input 0 - 7 of Scheduler 0
255	Invalid, Shaper disconnected

Note that only shapers connected to a common scheduler inputs are aware of each other and do share the 'conflicting transmission' signal.

Configuration

By default, the egress QoS topology looks like this:

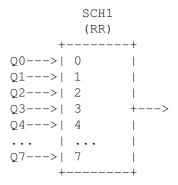

meaning that all queues are connected to Scheduler 1 and the scheduler discipline is set to Round Robin. Rate mode is set to Data Rate (bps). Queues are in Tail Drop Mode.

To **list queue** properties:

1. Read queue properties via FPP_CMD_QOS_QUEUE + FPP_ACTION_QUERY.

To **list scheduler** properties:

1. Read scheduler properties via FPP_CMD_QOS_SCHEDULER + FPP_ACTION_QUERY.

To **list shaper** properties:

Read shaper properties via FPP_CMD_QOS_SHAPER + FPP_ACTION_QUERY.



To **modify queue** properties:

- 1. Read scheduler properties via FPP_CMD_QOS_QUEUE + FPP_ACTION_QUERY.
- 2. Modify desired properties.
- 3. Write modifications using FPP_CMD_QOS_QUEUE + FPP_ACTION_UPDATE.


To **modify scheduler** properties (read-modify-write):

- 1. Read scheduler properties via FPP_CMD_QOS_SCHEDULER + FPP_ACTION_QUERY.
- 2. Modify desired properties.
- 3. Write modifications using FPP_CMD_QOS_SCHEDULER + FPP_ACTION_UPDATE.

To **modify shaper** properties (read-modify-write):


- 1. Read shaper properties via FPP_CMD_QOS_SHAPER + FPP_ACTION_QUERY.
- 2. Modify desired properties.
- 3. Write modifications using FPP_CMD_QOS_SCHEDULER + FPP_ACTION_UPDATE.

To **change QoS topology** to following example form:

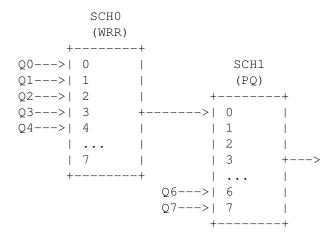

1. Please see the FPP_CMD_QOS_SCHEDULER for full C example (fpp_cmd_qos_scheduler.c).

To add traffic shapers:

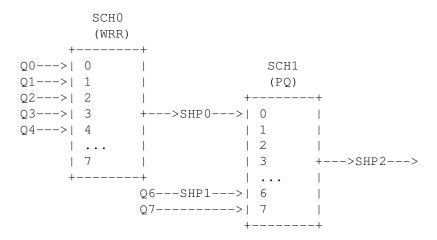



1. Please see the FPP_CMD_QOS_SHAPER for full C example (fpp_cmd_qos_shaper.c).

Files

- file fpp_ext.h

 Extension of the legacy fpp.h.
- file libfci.h Generic LibFCI header file.

Macros

- #define FPP_CMD_PHY_IF

 FCI command for working with physical interfaces.
- #define FPP_CMD_LOG_IF FCI command for working with logical interfaces.
- #define FPP_CMD_IF_LOCK_SESSION FCI command to perform lock on interface database.
- #define FPP_CMD_IF_UNLOCK_SESSION FCI command to perform unlock on interface database.
- #define FPP_CMD_L2_BD VLAN-based L2 bridge domain management.
- #define FPP_CMD_FP_TABLE

 Administers the Flexible Parser tables.
- #define FPP_CMD_FP_RULE

 Administers the Flexible Parser rules.
- #define FPP_ACTION_USE_RULE
 Flexible Parser specific 'use' action for FPP_CMD_FP_TABLE.
- #define FPP_ACTION_UNUSE_RULE Flexible Parser specific 'unuse' action for FPP_CMD_FP_TABLE.
- #define FPP_CMD_FP_FLEXIBLE_FILTER

 Uses flexible parser to filter out frames from further processing.
- #define FPP_CMD_DATA_BUF_PUT FCI command to send an arbitrary data to the accelerator.
- #define FPP_CMD_DATA_BUF_AVAIL

 Event reported when accelerator wants to send a data buffer to host.
- #define FPP_CMD_ENDPOINT_SHUTDOWN Notify client about endpoint shutdown event.
- #define FPP_CMD_SPD

 Configures the SPD (Security Policy Database) for IPsec.
- #define FPP_CMD_QOS_QUEUE Management of QoS queues.
- #define FPP_CMD_QOS_SCHEDULER Management of QoS scheduler.
- #define FPP_CMD_QOS_SHAPER Management of QoS shaper.
- #define FCI_CFG_FORCE_LEGACY_API



Changes the LibFCI API so it is more compatible with legacy implementation.

- #define FPP_CMD_IPV4_CONNTRACK_CHANGE
- #define FPP_CMD_IPV6_CONNTRACK_CHANGE
- #define CTCMD_FLAGS_ORIG_DISABLED Disable connection originator.
- #define CTCMD_FLAGS_REP_DISABLED Disable connection replier.

Enumerations

```
enum fpp_if_flags_t {
 FPP_IF_ENABLED, FPP_IF_PROMISC,
 FPP_IF_MATCH_OR, FPP_IF_DISCARD,
 FPP_IF_MIRROR }
    Interface flags.
enum fpp_phy_if_op_mode_t {
 FPP_IF_OP_DISABLED, FPP_IF_OP_DEFAULT,
 FPP_IF_OP_BRIDGE, FPP_IF_OP_ROUTER,
 FPP_IF_OP_VLAN_BRIDGE, FPP_IF_OP_FLEXIBLE_ROUTER }
    Physical if modes.
• enum fpp if m rules t {
 FPP_IF_MATCH_TYPE_ETH, FPP_IF_MATCH_TYPE_VLAN,
 FPP_IF_MATCH_TYPE_PPPOE, FPP_IF_MATCH_TYPE_ARP,
 FPP_IF_MATCH_TYPE_MCAST, FPP_IF_MATCH_TYPE_IPV4,
 FPP_IF_MATCH_TYPE_IPV6, FPP_IF_MATCH_RESERVED7,
 FPP_IF_MATCH_RESERVED8, FPP_IF_MATCH_TYPE_IPX,
 FPP_IF_MATCH_TYPE_BCAST, FPP_IF_MATCH_TYPE_UDP,
 FPP_IF_MATCH_TYPE_TCP, FPP_IF_MATCH_TYPE_ICMP,
 FPP_IF_MATCH_TYPE_IGMP, FPP_IF_MATCH_VLAN,
 FPP IF MATCH PROTO, FPP IF MATCH SPORT,
 FPP_IF_MATCH_DPORT, FPP_IF_MATCH_SIP6,
 FPP_IF_MATCH_DIP6, FPP_IF_MATCH_SIP,
 FPP_IF_MATCH_DIP, FPP_IF_MATCH_ETHTYPE,
 FPP_IF_MATCH_FP0, FPP_IF_MATCH_FP1,
 FPP_IF_MATCH_SMAC, FPP_IF_MATCH_DMAC,
 FPP IF MATCH HIF COOKIE}
    Match rules. Can be combined using bitwise OR.
enum fpp_phy_if_block_state_t {
 BS_NORMAL, BS_BLOCKED,
 BS_LEARN_ONLY, BS_FORWARD_ONLY }
    Interface blocking state.

    enum fpp l2 bd flags t{FPP L2BR DOMAIN DEFAULT, FPP L2BR DOMAIN FALLBACK

    L2 bridge domain flags.
enum fpp_fp_rule_match_action_t {
 FP_ACCEPT, FP_REJECT,
 FP_NEXT_RULE }
```



Specifies the Flexible Parser result on the rule match.

- enum fpp_fp_offset_from_t {
 FP_OFFSET_FROM_L2_HEADER, FP_OFFSET_FROM_L3_HEADER,
 FP_OFFSET_FROM_L4_HEADER }
 - Specifies how to calculate the frame data offset.
- enum fpp_spd_action_t
 Sets the action to be done for frames matching the SPD entry criteria.
- enum fpp_spd_flags_t Flags values to be used in fpp_spd_cmd_t structure .flags field.
- enum fci_mcast_groups_t { FCI_GROUP_NONE, FCI_GROUP_CATCH } List of supported multicast groups.
- enum fci_client_type_t { FCI_CLIENT_DEFAULT } List of supported FCI client types.
- enum fci_cb_retval_t { FCI_CB_STOP, FCI_CB_CONTINUE } The FCI callback return values.

Functions

- FCI_CLIENT * fci_open (fci_client_type_t type, fci_mcast_groups_t group) Creates new FCI client and opens a connection to FCI endpoint.
- int fci_close (FCI_CLIENT *client)

 Disconnects from FCI endpoint and destroys FCI client instance.
- int fci_catch (FCI_CLIENT *client)

 Catch and process all FCI messages delivered to the FCI client.
- int fci_cmd (FCI_CLIENT *client, unsigned short fcode, unsigned short *cmd_buf, unsigned short cmd_len, unsigned short *rep_buf, unsigned short *rep_len)

 *Run an FCI command with optional data response.
- int fci_query (FCI_CLIENT *this_client, unsigned short fcode, unsigned short cmd_len, unsigned short *pcmd, unsigned short *rsplen, unsigned short *rsp_data)

 *Run an FCI command with data response.
- int fci_write (FCI_CLIENT *client, unsigned short fcode, unsigned short cmd_len, unsigned short *cmd_buf)

 *Run an FCI command.
- int fci_register_cb (FCI_CLIENT *client, fci_cb_retval_t(*event_cb)(unsigned short fcode, unsigned short len, unsigned short *payload))

 Register event callback function.
- int fci_fd (FCI_CLIENT *this_client)

 Obsolete function, shall not be used.

5.1.8 Defines



5.1.8.1 FPP_CMD_PHY_IF

#define FPP_CMD_PHY_IF

FCI command for working with physical interfaces.

Note

Command is defined as extension of the legacy fpp.h.

Interfaces are needed to be known to FCI to support insertion of routes and conntracks. Command can be used to get operation mode, mac address and operation flags (enabled, promisc).

Command can be used with various .action values:

- FPP_ACTION_UPDATE: Updates properties of an existing physical interface.
- FPP_ACTION_QUERY: Gets head of list of existing physical interfaces properties.
- FPP_ACTION_QUERY_CONT: Gets next item from list of existing physical interfaces. Shall be called after FPP_ACTION_QUERY was called. On each call it replies with properties of the next interface in the list.

Note

Precondition to use the query is to atomically lock the access with FPP CMD IF LOCK SESSION.

Command Argument Type: fpp_phy_if_cmd_t

Action FPP_ACTION_UPDATE

Update interface properties. Set fpp_phy_if_cmd_t.action to FPP_ACTION_UPDATE and fpp_phy_if_cmd_t.name to name of the desired interface to be updated. Rest of the fpp_phy_if_cmd_t members will be considered to be used as the new interface properties. It is recommended to use read-modify-write approach in combination with FPP_ACTION_QUERY and FPP_ACTION_QUERY_CONT.

Action FPP_ACTION_QUERY and FPP_ACTION_QUERY_CONT

Get interface properties. Set fpp_phy_if_cmd_t.action to FPP_ACTION_QUERY to get first interface from the list of physical interfaces or FPP_ACTION_QUERY_CONT to get subsequent entries. Response data type for query commands is of type fpp_phy_if_cmd_t.

For operation modes see fpp_phy_if_op_mode_t. For operation flags see fpp_if_flags_t.

Possible command return values are:

- FPP_ERR_OK: Success.
- FPP_ERR_IF_ENTRY_NOT_FOUND: Last entry in the query session.



- FPP_ERR_IF_WRONG_SESSION_ID: Someone else is already working with the interfaces.
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.

Examples

```
fpp_cmd_phy_if.c.
```

5.1.8.2 FPP_CMD_LOG_IF

```
#define FPP_CMD_LOG_IF
```

FCI command for working with logical interfaces.

Note

Command is defined as extension of the legacy fpp.h.

Command can be used to update match rules of logical interface or for adding egress interfaces. It can also update operational flags (enabled, promisc, match). Following values of .action are supported:

- FPP_ACTION_REGISTER: Creates a new logical interface.
- FPP_ACTION_DEREGISTER: Destroys an existing logical interface.
- FPP_ACTION_UPDATE: Updates properties of an existing logical interface.
- FPP_ACTION_QUERY: Gets head of list of existing logical interfaces parameters.
- FPP_ACTION_QUERY_CONT: Gets next item from list of existing logical interfaces. Shall be called after FPP_ACTION_QUERY was called. On each call it replies with properties of the next interface.

Precondition to use the query is to atomic lock the access with FPP_CMD_IF_LOCK_SESSION. Command Argument Type: fpp_log_if_cmd_t

Action FPP_ACTION_REGISTER

To create a new logical interface the FPP_CMD_LOG_IF command expects following values to be set in the command argument structure:

The interface *logif1* will be created as child of *emac0* without any configuration and disabled. Names of available physical interfaces can be obtained via FPP_CMD_PHY_IF + FPP_ACTION_QUERY + FPP_ACTION_QUERY_CONT.



Action FPP_ACTION_DEREGISTER

Items to be set in command argument structure to remove a logical interface:

Action FPP_ACTION_UPDATE

To update logical interface properties just set fpp_log_if_cmd_t.action to FPP_ACTION_UPDATE and fpp_log_if_cmd_t.name to the name of logical interface which you wish to update. Rest of the fpp_log_if_cmd_t structure members will be considered to be used as the new interface properties. It is recommended to use read-modify-write approach in combination with FPP_ACTION_QUERY and FPP_ACTION_QUERY_CONT.

For match rules see (fpp_if_m_rules_t). For match rules arguments see (fpp_if_m_args_t). Possible command return values are:

- FPP_ERR_OK: Update successful.
- FPP_ERR_IF_ENTRY_NOT_FOUND: If corresponding logical interface doesn't exit.
- FPP_ERR_IF_RESOURCE_ALREADY_LOCKED: Someone else is already configuring the interfaces.
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.

Action FPP_ACTION_QUERY and FPP_ACTION_QUERY_CONT

Get interface properties. Set fpp_log_if_cmd_t.action to FPP_ACTION_QUERY to get first interface from the list of all logical interfaces or FPP_ACTION_QUERY_CONT to get subsequent entries. Response data type for query commands is of type fpp_log_if_cmd_t.

Possible command return values are:

- FPP_ERR_OK: Success.
- FPP_ERR_IF_ENTRY_NOT_FOUND: Last entry in the query session.
- FPP_ERR_IF_WRONG_SESSION_ID: Someone else is already working with the interfaces.
- FPP ERR IF MATCH UPDATE FAILED: Update of match flags has failed.
- FPP_ERR_IF_EGRESS_UPDATE_FAILED: Update of egress interfaces has failed.
- FPP_ERR_IF_EGRESS_DOESNT_EXIST: Egress interface provided in command doesn't exist.
- FPP_ERR_IF_OP_FLAGS_UPDATE_FAILED: Operation flags update has failed (PROMISC/ENABLE/MATCH).
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.



Examples

fpp_cmd_log_if.c.

5.1.8.3 FPP_CMD_IF_LOCK_SESSION

```
#define FPP_CMD_IF_LOCK_SESSION
```

FCI command to perform lock on interface database.

The reason for it is guaranteed atomic operation between fci/rpc/platform.

Note

Command is defined as extension of the legacy fpp.h.

Possible command return values are:

- FPP_ERR_OK: Lock successful
- FPP_ERR_IF_RESOURCE_ALREADY_LOCKED: Database was already locked by someone else

Examples

fpp_cmd_log_if.c, and fpp_cmd_phy_if.c.

5.1.8.4 FPP_CMD_IF_UNLOCK_SESSION

```
#define FPP_CMD_IF_UNLOCK_SESSION
```

FCI command to perform unlock on interface database.

The reason for it is guaranteed atomic operation between fci/rpc/platform.

Note

Command is defined as extension of the legacy fpp.h.

Possible command return values are:

- FPP_ERR_OK: Lock successful
- FPP_ERR_IF_WRONG_SESSION_ID: The lock wasn't locked or was locked in different session and will not be unlocked.

Examples

fpp_cmd_log_if.c, and fpp_cmd_phy_if.c.



5.1.8.5 FPP_CMD_L2_BD

```
#define FPP_CMD_L2_BD
```

VLAN-based L2 bridge domain management.

Bridge domain can be used to include a set of physical interfaces and isolate them from another domains using VLAN. Command can be used with various .action values:

- FPP_ACTION_REGISTER: Create a new bridge domain.
- FPP_ACTION_DEREGISTER: Delete bridge domain.
- FPP_ACTION_UPDATE: Update a bridge domain meaning that will rewrite domain properties except of VLAN ID.
- FPP_ACTION_QUERY: Gets head of list of registered domains.
- FPP_ACTION_QUERY_CONT: Get next item from list of registered domains. Shall be called after FPP_ACTION_QUERY was called. On each call it replies with parameters of next domain. It returns FPP_ERR_RT_ENTRY_NOT_FOUND when no more entries exist.

Command Argument Type: fpp_l2_bd_cmd_t

Action FPP ACTION REGISTER

Items to be set in command argument structure:

```
fpp_12_bd_cmd_t cmd_data =
 // Register new bridge domain
 .action = FPP_ACTION_REGISTER,
 // VLAN ID associated with the domain (network endian)
 .vlan = ....
 // Action to be taken when destination MAC address (uni-cast) of a packet
 // matching the domain is found in the MAC table: 0 - Forward, 1 - Flood,
 // 2 - Punt, 3 - Discard
 .ucast hit = \dots
 // Action to be taken when destination MAC address (uni-cast) of a packet
 \ensuremath{//} matching the domain is not found in the MAC table.
 .ucast_miss = ...,
 // Multicast hit action
  .mcast_hit = ...,
 // Multicast miss action
 .mcast_miss = ...
```

Possible command return values are:

- FPP ERR OK: Domain added.
- FPP ERR WRONG COMMAND PARAM: Unexpected argument.
- FPP_ERR_L2BRIDGE_DOMAIN_ALREADY_REGISTERED: Given domain already registered.
- FPP ERR INTERNAL FAILURE: Internal FCI failure.

Action FPP_ACTION_DEREGISTER

Items to be set in command argument structure:



```
fpp_12_bd_cmd_t cmd_data =
{
    // Delete bridge domain
    .action = FPP_ACTION_DEREGISTER,
    // VLAN ID associated with the domain to be deleted (network endian)
    .vlan = ...,
}:
```

Possible command return values are:

- FPP_ERR_OK: Domain removed.
- FPP_ERR_WRONG_COMMAND_PARAM: Unexpected argument.
- FPP_ERR_L2BRIDGE_DOMAIN_NOT_FOUND: Given domain not found.
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.

Action FPP_ACTION_UPDATE

Items to be set in command argument structure:

```
fpp_12_bd_cmd_t cmd_data =
 // Update bridge domain
 .action = FPP_ACTION_UPDATE,
 // VLAN ID associated with the domain to be updated (network endian)
  .vlan = ...,
 // New unicast hit action (0 - Forward, 1 - Flood, 2 - Punt, 3 - Discard)
 .ucast hit = ....
 // New unicast miss action
 .ucast_miss = ...
 // New multicast hit action
 .mcast_hit = ...,
 // New multicast miss action
 .mcast_miss = ...,
 // New port list (network endian). Bitmask where every set bit represents
 // ID of physical interface being member of the domain. For instance bit
 // (1 « 3), if set, says that interface with ID=3 is member of the domain.
 // Only valid interface IDs are accepted by the command. If flag is set,
 // interface is added to the domain. If flag is not set and interface
 // has been previously added, it is removed. The IDs are given by the
 // related FCI endpoint and related networking HW. Interface IDs can be
 // obtained via FPP_CMD_PHY_IF.
  .if_list = ...,
 // Flags marking interfaces listed in @c if_list to be 'tagged' or
 // 'untagged' (network endian). If respective flag is set, corresponding
 // interface within the @c if_list is treated as 'untagged' meaning that
 // the VLAN tag will be removed. Otherwise it is configured as 'tagged'.
 // Note that only interfaces listed within the @c if_list are taken into
 // account.
  .untag_if_list = ...,
```

Possible command return values are:

- FPP_ERR_OK: Domain updated.
- FPP_ERR_WRONG_COMMAND_PARAM: Unexpected argument.
- FPP_ERR_L2BRIDGE_DOMAIN_NOT_FOUND: Given domain not found.
- FPP ERR INTERNAL FAILURE: Internal FCI failure.

Action FPP_ACTION_QUERY and FPP_ACTION_QUERY_CONT

Items to be set in command argument structure:

2019-2020 NXP Public 38



Response data type for queries: fpp_l2_bd_cmd_t

Response data provided (all values in network byte order):

```
// VLAN ID associated with domain (network endian)
rsp_data.vlan;
// Action to be taken when destination MAC address (uni-cast) of a packet
// matching the domain is found in the MAC table: 0 - Forward, 1 - Flood,
// 2 - Punt, 3 - Discard
rsp_data.ucast_hit;
// Action to be taken when destination MAC address (uni-cast) of a packet
// matching the domain is not found in the MAC table.
rsp data.ucast miss;
// Multicast hit action.
rsp_data.mcast_hit;
// Multicast miss action.
rsp_data.mcast_miss;
// Bitmask where every set bit represents ID of physical interface being member
// of the domain. For instance bit (1 	imes 3), if set, says that interface with ID=3
// is member of the domain.
rsp_data.if_list;
// Similar to @c if_list but this interfaces are configured to be VLAN 'untagged'.
rsp_data.untag_if_list;
// See the fpp_12_bd_flags_t.
rsp_data.flags;
```

Possible command return values are:

- FPP_ERR_OK: Response buffer written.
- FPP_ERR_L2BRIDGE_DOMAIN_NOT_FOUND: No more entries.
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.

5.1.8.6 FPP_CMD_FP_TABLE

```
#define FPP CMD FP TABLE
```

Administers the Flexible Parser tables.

The Flexible Parser table is an ordered set of Flexible Parser rules which are matched in the order of appearance until match occurs or end of the table is reached. The following actions can be done on the table:

- FPP_ACTION_REGISTER: Create a new table with a given name.
- FPP_ACTION_DEREGISTER: Destroy an existing table.
- FPP_ACTION_USE_RULE: Add a rule into the table at specified position.
- FPP ACTION UNUSE RULE: Remove a rule from the table.
- FPP ACTION QUERY: Return the first rule in the table.
- FPP_ACTION_QUERY_CONT: Return the next rule in the table.

The Flexible Parser starts processing the table from the 1st rule in the table. If there is no match the Flexible Parser always continues with the rule following the currently processed



rule. The processing ends once rule match happens and the rule action is one of the FP_ACCEPT or FP_REJECT and the respective value is returned. REJECT is also returned after the last rule in the table was processed without any match. The Flexible Parser may branch to arbitrary rule in the table if some rule matches and the action is FP_NEXT_RULE. Note that loops are forbidden.

See the FPP_CMD_FP_RULE and fpp_fp_rule_props_t for the detailed description of how the rules are being matched.

Action FPP_ACTION_REGISTER

Items to be set in command argument structure:

Action FPP_ACTION_DEREGISTER

Items to be set in command argument structure:

Action FPP ACTION USE RULE

Items to be set in command argument structure:

Note

Single rule can be member of only one table.

Action FPP_ACTION_UNUSE_RULE

Items to be set in command argument structure:

Action FPP_ACTION_QUERY

Items to be set in command argument structure:

2019-2020 NXP Public 40



Response data type for queries: fpp_fp_rule_cmd_t

Response data provided:

Note

All data is provided in the network byte order.

Action FPP_ACTION_QUERY_CONT

Items to be set in command argument structure:

Response data is provided in the same form as for FPP ACTION QUERY action.

5.1.8.7 FPP_CMD_FP_RULE

```
#define FPP_CMD_FP_RULE
```

Administers the Flexible Parser rules.

Each Flexible Parser rule consists of a condition specified by data, mask and offset triplet and action to be performed. If 32-bit frame data at given offset masked by mask is equal to the specified data masked by the same mask then the condition is true. An invert flag may be set to invert the condition result. The rule action may be either accept, reject or next_rule which means to continue with a specified rule.

The rule administering command may be one of the following actions:

- FPP_ACTION_REGISTER: Create a new rule.
- FPP_ACTION_DEREGISTER: Delete an existing rule.
- FPP_ACTION_QUERY: Return the first rule (among all existing rules).
- FPP_ACTION_QUERY_CONT: Return the next rule.

Action FPP_ACTION_REGISTER

Items to be set in command argument structure:

```
fpp_fp_rule_cmd_t cmd_data =
{
    // Creates a new rule
    .action = FPP_ACTION_REGISTER,
    // Unique up-to-15-character rule identifier
    .r.rule_name = "rule_name",
```



```
// 32-bit data to match with the frame data at given offset (network endian)
.r.data = htonl(0x08000000),
// 32-bit mask to apply on the frame data and .r.data before comparison (network endian)
.r.mask = htonl(0xFFFF0000),
// Offset of the frame data to be compared (network endian)
.r.offset = htonl(12),
// Invert match or not (values 0 or 1)
.r.invert = 0,
// How to calculate the offset
.r.match_action = FP_OFFSET_FROM_L2_HEADER,
// Action to be done on match
.r.offset_from = FP_ACCEPT,
// Identifier of the next rule to use when match_action == FP_NEXT_RULE
.r.next_rule_name = "rule_name2"
:
```

This example is used to match and accept all IPv4 frames (16-bit value 0x0800 at bytes 12 and 13, when starting bytes counting from 0).

Note

All values are specified in the network byte order.

Warning

It is forbidden to create rule loops using the *next_rule* feature.

Action FPP_ACTION_DEREGISTER

```
Items to be set in command argument structure:
```

Action FPP_ACTION_QUERY

Items to be set in command argument structure:

Response data type for queries: fpp_fp_rule_cmd_t

Response data provided:

Note

All data is provided in the network byte order.



Action FPP_ACTION_QUERY_CONT

Items to be set in command argument structure:

Response data is provided in the same form as for FPP_ACTION_QUERY action.

5.1.8.8 FPP_CMD_FP_FLEXIBLE_FILTER

```
#define FPP_CMD_FP_FLEXIBLE_FILTER
```

Uses flexible parser to filter out frames from further processing.

Allows registration of a Flexible Parser table (see FPP_CMD_FP_TABLE) as a filter which:

- FPP_ACTION_REGISTER: Use the specified table as a Flexible Filter (replace old table by a new one if already configured).
- FPP_ACTION_DEREGISTER: Disable Flexible Filter, no table will be used as Flexible Filter.

The Flexible Filter examines received frames before any other processing and discards those which have REJECT result from the configured Flexible Parser.

See the FPP_CMD_FP_TABLE for flexible parser behavior description.

Action FPP_ACTION_REGISTER

Items to be set in command argument structure:

```
fpp_flexible_filter_cmd_t cmd_data =
{
    // Set the specified table as Flexible Filter
    .action = FPP_ACTION_REGISTER,
    // Name of the Flexible Parser table to be used to filter the frames
    .table_name = "table_name"
}
```

Action FPP_ACTION_DEREGISTER

Items to be set in command argument structure:

```
fpp_flexible_filter_cmd_t cmd_data =
{
    // Disable the Flexible Filter
    .action = FPP_ACTION_DEREGISTER,
}
```

5.1.8.9 FPP CMD DATA BUF PUT

```
#define FPP_CMD_DATA_BUF_PUT
```

FCI command to send an arbitrary data to the accelerator.



Command is intended to be used to send custom data to the accelerator. Format of the command argument is given by the fpp_buf_cmd_t structure which also defines the maximum payload length. Subsequent commands are not successful until the accelerator reads and acknowledges the current request.

Items to be set in command argument structure:

```
fpp_buf_cmd_t cmd_data =
{
   // Specify buffer payload
   .payload = ...,
   // Payload length in number of bytes
   .len = ...,
}.
```

Possible command return values are:

- FPP_ERR_OK: Data written and available to the accelerator
- FPP_ERR_AGAIN: Previous command has not been finished yet
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure

5.1.8.10 FPP CMD DATA BUF AVAIL

```
#define FPP_CMD_DATA_BUF_AVAIL
```

Event reported when accelerator wants to send a data buffer to host.

Indication of this event also carries the buffer payload and payload length. Both are available via the event callback arguments (see the callback type and arguments within description of fci_register_cb()).

5.1.8.11 FPP_CMD_SPD

```
#define FPP_CMD_SPD
```

Configures the SPD (Security Policy Database) for IPsec.

Note

The feature is available only for some Premium firmware versions and it shall not be used with firmware not supporting the IPsec to avoid undefined behavior.

The command is connected with fpp_spd_cmd_t type and allows complete SPD management which involves insertion of an entry at a given position (FPP_ACTION_REGISTER), removal of an entry at a given position (FPP_ACTION_DEREGISTER) and reading the database data (FPP_ACTION_QUERY and FPP_ACTION_QUERY_CONT).

Action FPP_ACTION_REGISTER

The FPP_ACTION_REGISTER action adds an entry at a given position into the SPD belonging to a given physical interface. The SPD is created if the entry is the 1st one and the position is ignored in such case. Creation of the SPD enables the IPsec processing for given interface.



Items to be set in command argument structure:

```
fpp_spd_cmd_t cmd_data =
   // Set the new rule in SPD
  .action = FPP_ACTION_REGISTER,
   // Name of the physical interface which SPD shall be modified
   .name = "emac0",
   // Add as a 4th rule (1st rule used position 0), current 4th rule will follow the newly
      added rule
   .position = 3,
   // Set the traffic matching criteria
  .saddr = 0xC0A80101, //192.168.1.1
   .daddr = 0xC0A80102, //192.168.1.2
                    //UDP
//Source port - not set, see the .flags
//Destination port - not set, see the .flags
   .protocol = 17,
  .sport = 0,
   .dport = 0,
   // Set ports as opaque i.e. ignored, missing FPP_SPD_FLAG_IPv6 means IPv4 traffic
  .flags = FPP_SPD_FLAG_SPORT_OPAQUE | FPP_SPD_FLAG_DPORT_OPAQUE
                        //SPI to match in ESP or AH header (used only for action
   .spi = 1,
      FPP_SPD_ACTION_PROCESS_DECODE)
  // Set action for matching traffic
   .spd_action = FPP_SPD_ACTION_PROCESS_DECODE, //Do IPsec decoding
   .sa_id = 1,
                      //HSE SAD entry ID to be used to process the traffic
```

Action FPP ACTION DEREGISTER

The FPP_ACTION_DEREGISTER action removes an entry at a given position in the SPD belonging to a given physical interface. The SPD is destroyed if the entry is the last one which disables the IPsec support on the given interface.

Items to be set in command argument structure:

```
fpp_flexible_filter_cmd_t cmd_data =
{
    // Disable the Flexible Filter
    .action = FPP_ACTION_DEREGISTER,
    // Name of the physical interface which SPD shall be modified
    .name = "emac0",
    // Remove the 4th rule (1st rule used position 0)
    .position = 3,
}
```

Action FPP_ACTION_QUERY

Items to be set in command argument structure:

Response data type for queries: fpp_spd_cmd_t

Response data provided has the same format as FPP_ACTION_REGISTER action.

Note

All data is provided in the network byte order.

Action FPP_ACTION_QUERY_CONT

Items to be set in command argument structure:



5.1.8.12 FPP_CMD_QOS_QUEUE

```
#define FPP_CMD_QOS_QUEUE
```

Management of QoS queues.

Command can be used with following .action values:

- FPP_ACTION_UPDATE: Update queue configuration
- FPP_ACTION_QUERY: Get queue properties

Command Argument Type: fpp_qos_queue_cmd_t

Action FPP_ACTION_UPDATE

To update queue properties just set

- fpp_qos_queue_cmd_t.action to FPP_ACTION_QUERY
- fpp_qos_queue_cmd_t.if_name to name of the physical interface and
- fpp_qos_queue_cmd_t.id to the queue ID.

Rest of the fpp_qos_queue_cmd_t structure members will be considered to be used as the new queue properties. It is recommended to use read-modify-write approach in combination with FPP_ACTION_QUERY.

Action FPP_ACTION_QUERY

Get current queue properties. Set

- fpp_qos_queue_cmd_t.action to FPP_ACTION_QUERY
- fpp_qos_queue_cmd_t.if_name to name of the physical interface and
- fpp_qos_queue_cmd_t.id to the queue ID.

Response data type for the query command is fpp_qos_scheduler_cmd_t.

Possible command return values are:

- FPP ERR OK: Success.
- FPP_ERR_QUEUE_NOT_FOUND: Queue not found.
- FPP_ERR_WRONG_COMMAND_PARAM: Invalid argument/value.



• FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.

Examples

fpp_cmd_qos_queue.c.

5.1.8.13 FPP CMD QOS SCHEDULER

#define FPP_CMD_QOS_SCHEDULER

Management of QoS scheduler.

Command can be used with following .action values:

- FPP_ACTION_UPDATE: Update scheduler configuration
- FPP_ACTION_QUERY: Get scheduler properties

Command Argument Type: fpp_qos_scheduler_cmd_t

Action FPP_ACTION_UPDATE

To update scheduler properties just set

- fpp_qos_scheduler_cmd_t.action to FPP_ACTION_QUERY
- fpp_qos_scheduler_cmd_t.if_name to name of the physical interface and
- fpp_qos_scheduler_cmd_t.id to the scheduler ID.

Rest of the fpp_qos_scheduler_cmd_t structure members will be considered to be used as the new scheduler properties. It is recommended to use read-modify-write approach in combination with FPP_ACTION_QUERY.

Action FPP_ACTION_QUERY

Get current scheduler properties. Set

- fpp_qos_scheduler_cmd_t.action to FPP_ACTION_QUERY
- fpp_qos_scheduler_cmd_t.if_name to name of the physical interface and
- fpp_gos_scheduler_cmd_t.id to the scheduler ID.

Response data type for the query command is fpp_qos_scheduler_cmd_t.

Possible command return values are:

- FPP_ERR_OK: Success.
- FPP_ERR_SCHEDULER_NOT_FOUND: Scheduler not found.



- FPP_ERR_WRONG_COMMAND_PARAM: Invalid argument/value.
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.

Examples

fpp_cmd_qos_scheduler.c.

5.1.8.14 FPP_CMD_QOS_SHAPER

```
#define FPP_CMD_QOS_SHAPER
```

Management of QoS shaper.

Command can be used with following .action values:

- FPP_ACTION_UPDATE: Update scheduler configuration
- FPP_ACTION_QUERY: Get scheduler properties

Command Argument Type: fpp_qos_shaper_cmd_t

Action FPP_ACTION_UPDATE

To update scheduler properties just set

- fpp_qos_shaper_cmd_t.action to FPP_ACTION_QUERY
- fpp_qos_shaper_cmd_t.if_name to name of the physical interface and
- fpp_qos_shaper_cmd_t.id to the shaper ID.

Rest of the fpp_qos_shaper_cmd_t structure members will be considered to be used as the new shaper properties. It is recommended to use read-modify-write approach in combination with FPP_ACTION_QUERY.

Action FPP_ACTION_QUERY

Get current scheduler properties. Set

- fpp_qos_shaper_cmd_t.action to FPP_ACTION_QUERY
- fpp_qos_shaper_cmd_t.if_name to name of the physical interface and
- fpp_qos_shaper_cmd_t.id to the shaper ID.

Response data type for the query command is fpp_qos_shaper_cmd_t.

Possible command return values are:

• FPP_ERR_OK: Success.



- FPP_ERR_SHAPER_NOT_FOUND: Shaper not found.
- FPP_ERR_WRONG_COMMAND_PARAM: Invalid argument/value.
- FPP_ERR_INTERNAL_FAILURE: Internal FCI failure.

Examples

fpp_cmd_qos_shaper.c.

5.1.8.15 FCI_CFG_FORCE_LEGACY_API

```
#define FCI_CFG_FORCE_LEGACY_API
```

Changes the LibFCI API so it is more compatible with legacy implementation.

LibFCI API was modified to avoid some inconvenient properties. Here are the points the legacy API differs in:

1. With legacy API, argument rsp_data of function fci_query shall be provided shifted by two bytes this way:

```
reply_struct_t rsp_data;
retval = fci_query(this_client, fcode, cmd_len, &pcmd, &rsplen, (unsigned short
*)(&rsp_data) + lu);
```

Where reply_struct_t is the structure type depending on command being called.

2. In legacy API, macros FPP_CMD_IPV4_CONNTRACK_CHANGE and FPP_CMD_IPV6_CONNTRACK_CHANGE are defined in application files. In current API they are defined here in libfci.h.

Warning

It is not recommended to enable this feature.

5.1.8.16 FPP CMD IPV4 CONNTRACK CHANGE

```
#define FPP_CMD_IPV4_CONNTRACK_CHANGE
```

5.1.8.17 FPP_CMD_IPV6_CONNTRACK_CHANGE

#define FPP_CMD_IPV6_CONNTRACK_CHANGE



5.1.8.18 CTCMD_FLAGS_REP_DISABLED

#define CTCMD_FLAGS_REP_DISABLED

Disable connection replier.

Used to create uni-directional connections (see FPP_CMD_IPV4_CONNTRACK, FPP_CMD_IPV4_CONNTRACK)

Examples

fpp_cmd_ipv4_conntrack.c, and fpp_cmd_ipv6_conntrack.c.

5.1.9 Enums

5.1.9.1 fpp_if_flags_t

enum fpp_if_flags_t

Interface flags.

Enumerator

FPP_IF_ENABLED	If set, interface is enabled
FPP_IF_PROMISC	If set, interface is promiscuous
FPP_IF_MATCH_OR	Result of match is logical OR of rules, else AND
FPP_IF_DISCARD	Discard matching frames
FPP_IF_MIRROR	If set mirroring is enabled

5.1.9.2 fpp_phy_if_op_mode_t

enum fpp_phy_if_op_mode_t

Physical if modes.

Enumerator

FPP_IF_OP_DISABLED	Disabled
FPP_IF_OP_DEFAULT	Default operational mode
FPP_IF_OP_BRIDGE	L2 bridge
FPP_IF_OP_ROUTER	L3 router
FPP_IF_OP_VLAN_BRIDGE	L2 bridge with VLAN
FPP_IF_OP_FLEXIBLE_ROUTER	Flexible router

2019-2020 NXP Public 50



5.1.9.3 fpp_if_m_rules_t

enum fpp_if_m_rules_t

Match rules. Can be combined using bitwise OR.

Enumerator

FPP_IF_MATCH_TYPE_ETH	Match ETH Packets
FPP_IF_MATCH_TYPE_VLAN	Match VLAN Tagged Packets
FPP_IF_MATCH_TYPE_PPPOE	Match PPPoE Packets
FPP_IF_MATCH_TYPE_ARP	Match ARP Packets
FPP_IF_MATCH_TYPE_MCAST	Match Multicast (L2) Packets
FPP_IF_MATCH_TYPE_IPV4	Match IPv4 Packets
FPP_IF_MATCH_TYPE_IPV6	Match IPv6 Packets
FPP_IF_MATCH_RESERVED7	Reserved
FPP_IF_MATCH_RESERVED8	Reserved
FPP_IF_MATCH_TYPE_IPX	Match IPX Packets
FPP_IF_MATCH_TYPE_BCAST	Match Broadcast (L2) Packets
FPP_IF_MATCH_TYPE_UDP	Match UDP Packets
FPP_IF_MATCH_TYPE_TCP	Match TCP Packets
FPP_IF_MATCH_TYPE_ICMP	Match ICMP Packets
FPP_IF_MATCH_TYPE_IGMP	Match IGMP Packets
FPP_IF_MATCH_VLAN	Match VLAN ID
FPP_IF_MATCH_PROTO	Match IP Protocol
FPP_IF_MATCH_SPORT	Match L4 Source Port
FPP_IF_MATCH_DPORT	Match L4 Destination Port
FPP_IF_MATCH_SIP6	Match Source IPv6 Address
FPP_IF_MATCH_DIP6	Match Destination IPv6 Address
FPP_IF_MATCH_SIP	Match Source IPv4 Address
FPP_IF_MATCH_DIP	Match Destination IPv4 Address
FPP_IF_MATCH_ETHTYPE	Match EtherType
FPP_IF_MATCH_FP0	Match Packets Accepted by Flexible Parser 0
FPP_IF_MATCH_FP1	Match Packets Accepted by Flexible Parser 1
FPP_IF_MATCH_SMAC	Match Source MAC Address
FPP_IF_MATCH_DMAC	Match Destination MAC Address
FPP_IF_MATCH_HIF_COOKIE	Match HIF header cookie value
	<u> </u>

5.1.9.4 fpp_phy_if_block_state_t

enum fpp_phy_if_block_state_t

Interface blocking state.



Enumerator

BS_NORMAL	Learning and forwarding enabled
BS_BLOCKED	Learning and forwarding disabled
BS_LEARN_ONLY	Learning enabled, forwarding disabled
BS_FORWARD_ONLY	Learning disabled, forwarding enabled

5.1.9.5 fpp_l2_bd_flags_t

enum fpp_12_bd_flags_t

L2 bridge domain flags.

Enumerator

FPP_L2BR_DOMAIN_DEFAULT	Domain type is default
FPP_L2BR_DOMAIN_FALLBACK	Domain type is fallback

5.1.9.6 fpp_fp_rule_match_action_t

enum fpp_fp_rule_match_action_t

Specifies the Flexible Parser result on the rule match.

Enumerator

FP_ACCEPT	Flexible parser result on rule match is ACCEPT
FP_REJECT	Flexible parser result on rule match is REJECT
FP_NEXT_RULE	On rule match continue matching by the specified rule

5.1.9.7 fpp_fp_offset_from_t

enum fpp_fp_offset_from_t

Specifies how to calculate the frame data offset.

The offset may be calculated either from the L2, L3 or L4 header beginning. The L2 header beginning is also the Ethernet frame beginning because the Ethernet frame begins with the L2 header. This offset is always valid however if the L3 or L4 header is not recognized then the rule is always skipped as not-matching.

2019-2020 NXP Public 52



Enumerator

FP_OFFSET_FROM_L2_HEADER	Calculate offset from the L2 header (frame beginning)
FP_OFFSET_FROM_L3_HEADER	Calculate offset from the L3 header
FP_OFFSET_FROM_L4_HEADER	Calculate offset from the L4 header

5.1.9.8 fci_mcast_groups_t

enum fci_mcast_groups_t

List of supported multicast groups.

An FCI client instance can be member of a multicast group. It means it can send and receive multicast messages to/from another group members (another FCI instances or FCI endpoints). This can be in most cases used by FCI endpoint to notify all associated FCI instances about some event has occurred.

Note

Each group is intended to be represented by a single bit flag (max 32-bit, so it is possible to have max 32 multicast groups). Then, groups can be combined using bitwise OR operation.

Enumerator

FCI_GROUP_NONE	Default MCAST group value, no group, for sending FCI commands
FCI_GROUP_CATCH	MCAST group for catching events

5.1.9.9 fci_client_type_t

enum fci_client_type_t

List of supported FCI client types.

FCI client can specify using this type to which FCI endpoint shall be connected.

Enumerator



5.1.9.10 fci_cb_retval_t

```
enum fci_cb_retval_t
```

The FCI callback return values.

These return values shall be used in FCI callback (see fci_register_cb). It tells fci_catch function whether it should return or continue.

Enumerator

FCI_CB_STOP	Stop waiting for events and exit fci_catch function
FCI_CB_CONTINUE	Continue waiting for next events

5.1.10 Functions

5.1.10.1 fci_open()

Creates new FCI client and opens a connection to FCI endpoint.

Binds the FCI client with FCI endpoint. This enables sending/receiving data to/from the endpoint. Refer to the remaining API for possible communication options.

Parameters

in	type	Client type. Default value is FCI_CLIENT_DEFAULT. See fci_client_type_t.
in	group	A 32-bit multicast group mask. Each bit represents single multicast
		address. FCI instance will listen to specified multicast addresses as well it
		will send data to all specified multicast groups. See fci_mcast_groups_t.

Returns

The FCI client instance or NULL if failed

5.1.10.2 fci_close()

Disconnects from FCI endpoint and destroys FCI client instance.

Terminate the FCI client and release all allocated resources.



Parameters

in client The FCI client instanc

Returns

0 if success, error code otherwise

5.1.10.3 fci_catch()

Catch and process all FCI messages delivered to the FCI client.

Function is intended to be called in its own thread. It waits for message/event reception. If there is an event callback associated with the FCI client, assigned by function fci_register_cb(), then, when message is received, the callback is called to process the data. As long as there is no error and the callback returns FCI_CB_CONTINUE, fci_catch() continues waiting for another message. Otherwise it returns.

Note

This is a blocking function.

Multicast group FCI_GROUP_CATCH shall be used when opening the client for catching messages

See also

```
fci_register_cb()
```

Parameters

in	client	The FCI client instance
----	--------	-------------------------

Returns

0 if success, error code otherwise



5.1.10.4 fci_cmd()

```
int fci_cmd (
    FCI_CLIENT * client,
    unsigned short fcode,
    unsigned short * cmd_buf,
    unsigned short cmd_len,
    unsigned short * rep_buf,
    unsigned short * rep_len )
```

Run an FCI command with optional data response.

This routine can be used when one need to perform any command either with or without data response. If the command responded with some data structure the structure is written into the rep_buf. The length of the returned data structure (number of bytes) is written into rep_len.

Note

The rep_buf buffer must be aligned to 4.

Parameters

in	client	The FCI client instance
in	fcode	Command to be executed. Available commands are listed in
		Commands Summary.
in	cmd_buf	Pointer to structure holding command arguments.
in	cmd_len	Length of the command arguments structure in bytes.
out	rep_buf	Pointer to memory where the data response shall be written. Can
		be NULL.
in,out	rep_len	Pointer to variable where number of response bytes shall be
		written.

Return values

<0	Failed to execute the command.
>=0	Command was executed with given return value (FPP_ERR_OK for success).

5.1.10.5 fci_query()

2019-2020 NXP Public 56



```
unsigned short * rsplen,
unsigned short * rsp_data )
```

Run an FCI command with data response.

This routine can be used when one need to perform a command which is resulting in a data response. It is suitable for various 'query' commands like reading of whole tables or structured entries from the endpoint.

Note

If either rsp_data or rsplen is NULL pointer, the response data is discarded.

Parameters

in	this_client	The FCI client instance
in	fcode	Command to be executed. Available commands are listed in
		Commands Summary.
in	cmd_len	Length of the command arguments structure in bytes
in	pcmd	Pointer to structure holding command arguments.
out	rsplen	Pointer to memory where length of the data response will be
		provided
out	rsp_data	Pointer to memory where the data response shall be written.

Return values

<0	Failed to execute the command.
>=0	Command was executed with given return value (FPP_ERR_OK for success).

Examples

fpp_cmd_ip_route.c, fpp_cmd_log_if.c, fpp_cmd_phy_if.c, fpp_cmd_qos_queue.c, fpp_cmd_qos_scheduler.c, and fpp_cmd_qos_shaper.c.

5.1.10.6 fci_write()

Run an FCI command.

Similar as the fci_query() but without data response. The endpoint receiving the command is still responsible for generating response but the response is not delivered to the caller.



Parameters

ir	client	The FCI client instance
ir	fcode	Command to be executed. Available commands are listed in
		Commands Summary.
ir	cmd_len	Length of the command arguments structure in bytes
ir	cmd_buf	Pointer to structure holding command arguments

Return values

<0	Failed to execute the command.	
>=0	Command was executed with given return value (FPP_ERR_OK for success).	

Examples

fpp_cmd_ip_route.c, fpp_cmd_ipv4_conntrack.c, fpp_cmd_ipv6_conntrack.c, fpp_cmd_log_if.c, fpp_cmd_phy_if.c, fpp_cmd_qos_queue.c, fpp_cmd_qos_scheduler.c, and fpp_cmd_qos_shaper.c.

5.1.10.7 fci_register_cb()

Register event callback function.

FCI endpoint can send various asynchronous messages to the FCI client. In such case, a callback registered via this function is executed if fci_catch() is running.

Parameters

in	client	The FCI client instance
in	event_cb	The callback function to be executed. When called then fcode
		specifies event code (available events are listed in Events summary),
		payload is pointer to event payload and the len is number of bytes
		in the payload buffer.

Returns

0 if success, error code otherwise

Note

In order to continue receiving messages, the callback function shall always return FCI_CB_CONTINUE. Any other value will cause the fci_catch to return.

2019-2020 NXP Public 58



Chapter 6

Data Structure Documentation

6.1 FCI_CLIENT Struct Reference

The FCI client representation type.

#include <libfci.h>

6.1.1 Detailed Description

The FCI client representation type.

This is the FCI instance representation. It is used by the rest of the API to communicate with associated endpoint. The endpoint can be a standalone application/driver taking care of HW configuration tasks and shall be able to interpret commands sent via the LibFCI API.

Examples

fpp_cmd_ip_route.c, fpp_cmd_ipv4_conntrack.c, fpp_cmd_ipv6_conntrack.c, fpp_cmd_log_if.c, fpp_cmd_phy_if.c, fpp_cmd_qos_queue.c, fpp_cmd_qos_scheduler.c, and fpp_cmd_qos_shaper.c.

The documentation for this struct was generated from the following file:

• libfci.h

6.2 fpp_algo_stats_t Struct Reference

Algorithm statistics.

```
#include <fpp_ext.h>
```

Data Fields

- uint32_t processed
- uint32_t accepted



- uint32_t rejected
- uint32_t discarded

6.2.1 Detailed Description

Algorithm statistics.

Statistics used by algorithms in class (eg. log ifs).

Note

All statistics counters are in network byte order.

6.2.2 Field Documentation

6.2.2.1 processed

uint32_t processed

Number of frames processed regardless the result

6.2.2.2 accepted

uint32_t accepted

Number of frames matching the selection criteria

6.2.2.3 rejected

uint32_t rejected

Number of frames not matching the selection criteria

6.2.2.4 discarded

uint32_t discarded

Number of frames marked to be dropped

The documentation for this struct was generated from the following file:

• fpp_ext.h

6.3 fpp_buf_cmd_t Struct Reference

Argument structure for the FPP_CMD_DATA_BUF_PUT command.

#include <fpp_ext.h>

2019-2020 NXP Public 60



Data Fields

- uint8_t payload [64]
- uint8_t len

6.3.1 Detailed Description

Argument structure for the FPP_CMD_DATA_BUF_PUT command.

6.3.2 Field Documentation

6.3.2.1 payload

```
uint8_t payload[64]
```

The payload area

6.3.2.2 len

```
uint8_t len
```

Payload length in number of bytes

The documentation for this struct was generated from the following file:

• fpp_ext.h

6.4 fpp_ct6_cmd_t Struct Reference

Data structure used in various functions for IPv6 conntrack management.

```
#include <fpp.h>
```

Data Fields

- uint16_t action
- uint32_t saddr [4]
- uint32_t daddr [4]
- uint16_t sport
- uint16_t dport
- uint32_t saddr_reply [4]
- uint32_t daddr_reply [4]
- uint16_t sport_reply
- uint16_t dport_reply



- uint16_t protocol
- uint16_t flags
- uint32_t route_id
- uint32_t route_id_reply

6.4.1 Detailed Description

Data structure used in various functions for IPv6 conntrack management.

It can be used:

• for command buffer in functions fci_write, fci_query or fci_cmd, with FPP_CMD_IPV6_CONNTRACK command.

Examples

fpp_cmd_ipv6_conntrack.c.

6.4.2 Field Documentation

6.4.2.1 action

uint16_t action

Action to perform

Examples

fpp_cmd_ipv6_conntrack.c.

6.4.2.2 saddr

uint32_t saddr[4]

Source IP address

6.4.2.3 daddr

uint32_t daddr[4]

Destination IP address

6.4.2.4 sport

uint16_t sport

Source port



6.4.2.5 dport

uint16_t dport

Destination port

6.4.2.6 saddr_reply

```
uint32_t saddr_reply[4]
```

Source IP address in 'reply' direction

6.4.2.7 daddr_reply

```
uint32_t daddr_reply[4]
```

Destination IP address in 'reply' direction

6.4.2.8 sport_reply

```
uint16_t sport_reply
```

Source port in 'reply' direction

6.4.2.9 dport_reply

```
uint16_t dport_reply
```

Destination port in 'reply' direction

6.4.2.10 protocol

uint16_t protocol

Protocol ID: TCP, UDP

6.4.2.11 flags

```
uint16_t flags
```

Flags. See FPP_CMD_IPV6_CONNTRACK.

6.4.2.12 route_id

```
uint32_t route_id
```

Associated route ID. See FPP_CMD_IP_ROUTE.



6.4.2.13 route_id_reply

```
uint32_t route_id_reply
```

Route for 'reply' direction. Applicable only for bi-directional connections.

The documentation for this struct was generated from the following file:

• fpp.h

6.5 fpp_ct_cmd_t Struct Reference

Data structure used in various functions for conntrack management.

```
#include <fpp.h>
```

Data Fields

- uint16_t action
- uint32 t saddr
- uint32_t daddr
- uint16_t sport
- uint16_t dport
- uint32_t saddr_reply
- uint32_t daddr_reply
- uint16_t sport_reply
- uint16_t dport_reply
- uint16_t protocol
- uint16_t flags
- uint32_t route_id
- uint32_t route_id_reply

6.5.1 Detailed Description

Data structure used in various functions for conntrack management.

It can be used:

• for command buffer in functions fci_write, fci_query or fci_cmd, with FPP_CMD_IPV4_CONNTRACK command.

Examples

```
fpp_cmd_ipv4_conntrack.c.
```

6.5.2 Field Documentation



6.5.2.1 action

uint16_t action

Action to perform

Examples

fpp_cmd_ipv4_conntrack.c.

6.5.2.2 saddr

uint32_t saddr

Source IP address

6.5.2.3 daddr

uint32_t daddr

Destination IP address

6.5.2.4 sport

uint16_t sport

Source port

6.5.2.5 dport

uint16_t dport

Destination port

6.5.2.6 saddr_reply

uint32_t saddr_reply

Source IP address in 'reply' direction

6.5.2.7 daddr_reply

uint32_t daddr_reply

Destination IP address in 'reply' direction



6.5.2.8 sport_reply

```
uint16_t sport_reply
```

Source port in 'reply' direction

6.5.2.9 dport_reply

```
uint16_t dport_reply
```

Destination port in 'reply' direction

6.5.2.10 protocol

```
uint16_t protocol
```

Protocol ID: TCP, UDP

6.5.2.11 flags

```
uint16_t flags
```

Flags. See FPP_CMD_IPV4_CONNTRACK.

6.5.2.12 route id

```
uint32_t route_id
```

Associated route ID. See FPP_CMD_IP_ROUTE.

6.5.2.13 route_id_reply

```
uint32_t route_id_reply
```

Route for 'reply' direction. Applicable only for bi-directional connections.

The documentation for this struct was generated from the following file:

• fpp.h

6.6 fpp_fp_rule_cmd_t Struct Reference

Arguments for the FPP_CMD_FP_RULE command.

```
#include <fpp_ext.h>
```

Data Fields

- uint16_t action
- fpp_fp_rule_props_t r



6.6.1 Detailed Description

Arguments for the FPP_CMD_FP_RULE command.

6.6.2 Field Documentation

6.6.2.1 action

```
uint16_t action
```

Action to be done

6.6.2.2 r

```
fpp_fp_rule_props_t r
```

Parameters of the rule

The documentation for this struct was generated from the following file:

fpp_ext.h

6.7 fpp_fp_rule_props_t Struct Reference

Properties of the Flexible parser rule.

```
#include <fpp_ext.h>
```

6.7.1 Detailed Description

Properties of the Flexible parser rule.

```
The rule match can be described as:
```

```
((frame_data[offset] & mask) == (data & mask)) ? match = true : match = false;
match = (invert ? !match : match);
```

Value of match being equal to true causes:

- Flexible Parser to stop and return ACCEPT
- Flexible Parser to stop and return REJECT
- Flexible Parser to set the next rule to rule specified in next_rule_name

The documentation for this struct was generated from the following file:

• fpp_ext.h



6.8 fpp_fp_table_cmd_t Struct Reference

Arguments for the FPP_CMD_FP_TABLE command.

```
#include <fpp_ext.h>
```

Data Fields

- uint16 taction
- uint8_t table_name [16]
- uint8_t rule_name [16]
- uint16_t position
- fpp_fp_rule_props_t r

6.8.1 Detailed Description

Arguments for the FPP_CMD_FP_TABLE command.

6.8.2 Field Documentation

6.8.2.1 action

uint16_t action

Action to be done

6.8.2.2 table_name

```
uint8_t table_name[16]
```

Name of the table to be administered by the action

6.8.2.3 rule_name

```
uint8_t rule_name[16]
```

Name of the rule to be added/removed to/from the table

6.8.2.4 position

uint16_t position

Position where to add rule (network endian)



6.8.2.5 r

```
fpp_fp_rule_props_t r
```

Properties of the rule - used as query result

The documentation for this struct was generated from the following file:

• fpp_ext.h

6.9 fpp_if_m_args_t Struct Reference

Match rules arguments.

```
#include <fpp_ext.h>
```

Data Fields

- uint16_t vlan
- uint16_t ethtype
- uint16_t sport
- uint16_t dport
- uint8_t proto
- uint8_t smac [6]
- uint8_t dmac [6]
- char fp_table0 [16]
- char fp_table1 [16]
- uint32_t hif_cookie
- struct { } v4
- struct { } **v6**

6.9.1 Detailed Description

Match rules arguments.

Every value corresponds to specified match rule (fpp_if_m_rules_t).

6.9.2 Field Documentation



6.9.2.1 vlan

```
uint16_t vlan
VLAN ID (FPP_IF_MATCH_VLAN)
Examples
```

fpp_cmd_log_if.c.

6.9.2.2 ethtype

```
uint16_t ethtype
```

EtherType (FPP_IF_MATCH_ETHTYPE)

6.9.2.3 sport

```
uint16_t sport
```

L4 source port number (FPP_IF_MATCH_SPORT)

6.9.2.4 dport

```
uint16_t dport
```

L4 destination port number (FPP_IF_MATCH_DPORT)

6.9.2.5 v4

```
struct { ... } v4
```

IPv4 source and destination address (FPP_IF_MATCH_SIP, FPP_IF_MATCH_DIP)

Examples

fpp_cmd_log_if.c.

6.9.2.6 v6

```
struct { ... } v6
```

IPv6 source and destination address (FPP_IF_MATCH_SIP6, FPP_IF_MATCH_DIP6)

6.9.2.7 proto

```
uint8_t proto
```

IP protocol (FPP_IF_MATCH_PROTO)



6.9.2.8 smac

```
uint8_t smac[6]
```

Source MAC Address (FPP_IF_MATCH_SMAC)

6.9.2.9 dmac

```
uint8_t dmac[6]
```

Destination MAC Address (FPP_IF_MATCH_DMAC)

6.9.2.10 fp_table0

```
char fp_table0[16]
```

Flexible Parser table 0 (FPP_IF_MATCH_FP0)

6.9.2.11 fp_table1

```
char fp_table1[16]
```

Flexible Parser table 1 (FPP_IF_MATCH_FP1)

6.9.2.12 hif_cookie

```
uint32_t hif_cookie
```

HIF header cookie (FPP_IF_MATCH_HIF_COOKIE)

The documentation for this struct was generated from the following file:

• fpp_ext.h

6.10 fpp_l2_bd_cmd_t Struct Reference

Data structure to be used for command buffer for L2 bridge domain control commands.

```
#include <fpp_ext.h>
```

Data Fields

- uint16_t action
- uint16_t vlan
- uint8_t ucast_hit
- uint8_t ucast_miss
- uint8_t mcast_hit
- uint8_t mcast_miss
- uint32_t if_list



- uint32_t untag_if_list
- fpp_l2_bd_flags_t flags

6.10.1 Detailed Description

Data structure to be used for command buffer for L2 bridge domain control commands. It can be used:

• for command buffer in functions fci_write or fci_cmd, with commands: FPP_CMD_L2_BD.

6.10.2 Field Documentation

6.10.2.1 action

uint16_t action

Action to be executed (register, unregister, query, ...)

6.10.2.2 vlan

uint16_t vlan

VLAN ID associated with the bridge domain (network endian)

6.10.2.3 ucast hit

```
uint8_t ucast_hit
```

Action to be taken when destination MAC address (uni-cast) of a packet matching the domain is found in the MAC table (network endian): 0 - Forward, 1 - Flood, 2 - Punt, 3 - Discard

6.10.2.4 ucast_miss

```
uint8_t ucast_miss
```

Action to be taken when destination MAC address (uni-cast) of a packet matching the domain is not found in the MAC table

6.10.2.5 mcast_hit

uint8_t mcast_hit

Multicast hit action



6.10.2.6 mcast miss

```
uint8_t mcast_miss
```

Multicast miss action

6.10.2.7 if list

```
uint32_t if_list
```

Port list (network endian). Bitmask where every set bit represents ID of physical interface being member of the domain. For instance bit (1 « 3), if set, says that interface with ID=3 is member of the domain. Only valid interface IDs are accepted by the command. If flag is set, interface is added to the domain. If flag is not set and interface has been previously added, it is removed. The IDs are given by the related FCI endpoint and related networking HW. Interface IDs can be obtained via FPP_CMD_PHY_IF.

6.10.2.8 untag_if_list

```
uint32_t untag_if_list
```

Flags marking interfaces listed in if_list to be 'tagged' or 'untagged' (network endian). If respective flag is set, corresponding interface within the if_list is treated as 'untagged' meaning that the VLAN tag will be removed. Otherwise it is configured as 'tagged'. Note that only interfaces listed within the if_list are taken into account.

6.10.2.9 flags

```
fpp_l2_bd_flags_t flags
See the fpp_l2_bd_flags_t
```

The documentation for this struct was generated from the following file:

• fpp_ext.h

6.11 fpp_log_if_cmd_t Struct Reference

Data structure to be used for logical interface commands.

```
#include <fpp_ext.h>
```

Data Fields

- uint16 t action
- char name [IFNAMSIZ]
- uint32_t id
- char parent_name [IFNAMSIZ]
- uint32_t parent_id



- uint32_t egress
- fpp_if_flags_t flags
- fpp_if_m_rules_t match
- fpp_if_m_args_t arguments
- fpp_algo_stats_t stats

6.11.1 Detailed Description

Data structure to be used for logical interface commands.

Usage:

- As command buffer in functions fci_write, fci_query or fci_cmd, with FPP_CMD_LOG_IF command.
- As reply buffer in functions fci_query or fci_cmd, with FPP_CMD_LOG_IF command.

Examples

fpp_cmd_log_if.c.

6.11.2 Field Documentation

6.11.2.1 action

uint16_t action

Action

Examples

fpp_cmd_log_if.c.

6.11.2.2 name

char name[IFNAMSIZ]

Interface name

Examples

fpp_cmd_log_if.c.



6.11.2.3 id

```
uint32_t id
```

Interface ID (network endian)

6.11.2.4 parent_name

```
char parent_name[IFNAMSIZ]
```

Parent physical interface name

Examples

```
fpp_cmd_log_if.c.
```

6.11.2.5 parent_id

```
uint32_t parent_id
```

Parent physical interface ID (network endian)

6.11.2.6 egress

```
uint32_t egress
```

Egress interfaces in the form of mask (to get egress id: egress & (1 < id)) must be stored in network order (network endian)

Examples

```
fpp_cmd_log_if.c.
```

6.11.2.7 flags

```
fpp_if_flags_t flags
```

Interface flags from query or flags to be set (network endian)

Examples

```
fpp_cmd_log_if.c.
```



6.11.2.8 match

```
fpp_if_m_rules_t match
```

Match rules from query or match rules to be set (network endian)

Examples

```
fpp_cmd_log_if.c.
```

6.11.2.9 arguments

```
fpp_if_m_args_t arguments
```

Arguments for match rules (network endian)

Examples

```
fpp_cmd_log_if.c.
```

6.11.2.10 stats

```
fpp_algo_stats_t stats
```

Logical interface statistics

The documentation for this struct was generated from the following file:

• fpp_ext.h

6.12 fpp_phy_if_cmd_t Struct Reference

Data structure to be used for physical interface commands.

```
#include <fpp_ext.h>
```

Data Fields

- uint16_t action
- char name [IFNAMSIZ]
- uint32_t id
- fpp_if_flags_t flags
- fpp_phy_if_op_mode_t mode
- fpp_phy_if_block_state_t block_state
- uint8_t mac_addr [6]
- char mirror [IFNAMSIZ]
- fpp_phy_if_stats_t stats



6.12.1 Detailed Description

Data structure to be used for physical interface commands.

Usage:

- As command buffer in functions fci_write, fci_query or fci_cmd, with FPP_CMD_PHY_IF command.
- As reply buffer in functions fci_query or fci_cmd, with FPP_CMD_PHY_IF command.

Examples

```
fpp_cmd_phy_if.c.
```

6.12.2 Field Documentation

6.12.2.1 action

```
uint16_t action
```

Action

Examples

```
fpp_cmd_phy_if.c.
```

6.12.2.2 name

```
char name[IFNAMSIZ]
```

Interface name

Examples

```
fpp_cmd_phy_if.c.
```

6.12.2.3 id

```
uint32_t id
```

Interface ID (network endian)

Examples

```
fpp_cmd_phy_if.c.
```



6.12.2.4 flags

```
fpp_if_flags_t flags
```

Interface flags (network endian)

Examples

fpp_cmd_phy_if.c.

6.12.2.5 mode

```
fpp_phy_if_op_mode_t mode
```

Phy if mode (network endian)

Examples

fpp_cmd_phy_if.c.

6.12.2.6 block_state

```
fpp_phy_if_block_state_t block_state
```

Phy if block state

6.12.2.7 mac_addr

```
uint8_t mac_addr[6]
```

Phy if MAC (network endian)

6.12.2.8 mirror

```
char mirror[IFNAMSIZ]
```

Name of interface to mirror the traffic to

6.12.2.9 stats

```
fpp_phy_if_stats_t stats
```

Physical interface statistics

The documentation for this struct was generated from the following file:

• fpp_ext.h



6.13 fpp_phy_if_stats_t Struct Reference

Physical interface statistics.

```
#include <fpp_ext.h>
```

Data Fields

- uint32_t ingress
- uint32_t egress
- uint32_t malformed
- uint32_t discarded

6.13.1 Detailed Description

Physical interface statistics.

Statistics used by physical interfaces (EMAC, HIF).

Note

All statistics counters are in network byte order.

6.13.2 Field Documentation

6.13.2.1 ingress

```
uint32_t ingress
```

Number of ingress frames for the given interface

6.13.2.2 egress

```
uint32_t egress
```

Number of egress frames for the given interface

6.13.2.3 malformed

```
uint32_t malformed
```

Number of ingress frames with detected error (i.e. checksum)



6.13.2.4 discarded

```
uint32_t discarded
```

Number of ingress frames which were discarded

The documentation for this struct was generated from the following file:

• fpp_ext.h

6.14 fpp_qos_queue_cmd_t Struct Reference

```
Argument of the FPP_CMD_QOS_QUEUE command.
```

```
#include <fpp_ext.h>
```

Data Fields

- uint16_t action
- char if_name [IFNAMSIZ]
- uint8 t id
- uint8_t mode
- uint32_t min
- uint32_t max
- uint8_t zprob [32]

6.14.1 Detailed Description

Argument of the FPP_CMD_QOS_QUEUE command.

Examples

fpp_cmd_qos_queue.c.

6.14.2 Field Documentation

6.14.2.1 action

```
uint16_t action
```

Action

Examples

fpp_cmd_qos_queue.c.



6.14.2.2 if_name

```
char if_name[IFNAMSIZ]
```

Interface name

Examples

fpp_cmd_qos_queue.c.

6.14.2.3 id

```
uint8_t id
```

Queue ID. IDs start with 0 and maximum value depends on the number of available queues within the given interface .if_name. See Egress QoS.

Examples

fpp_cmd_qos_queue.c.

6.14.2.4 mode

uint8_t mode

Queue mode:

- 0 Disabled. Queue will drop all packets.
- 1 Default. HW implementation-specific. Normally not used.
- 2 Tail drop
- 3 WRED

Examples

fpp_cmd_qos_queue.c.

6.14.2.5 min

```
uint32_t min
```

Minimum threshold (network endian). Value is .mode-specific:

- Disabled, Default: n/a
- Tail drop: n/a



• WRED: Threshold in number of packets in the queue at which the WRED lowest drop probability zone starts, i.e. if queue fill level is below this threshold the drop probability is 0%.

Examples

fpp_cmd_qos_queue.c.

6.14.2.6 max

```
uint32_t max
```

Maximum threshold (network endian). Value is .mode-specific:

- Disabled, Default: n/a
- Tail drop: The queue length in number of packets. Queue length is the number of packets the queue can accommodate before drops will occur.
- WRED: Threshold in number of packets in the queue at which the WRED highest drop probability zone ends, i.e. if queue fill level is above this threshold the drop probability is 100%.

Examples

fpp_cmd_qos_queue.c.

6.14.2.7 zprob

```
uint8_t zprob[32]
```

WRED drop probabilities for all probability zones in [%]. The lowest probability zone is .zprob[0]. Only valid for .mode = WRED. Value 255 means 'invalid'. Number of zones per queue is implementation-specific. See the Egress QoS.

Examples

```
fpp_cmd_qos_queue.c.
```

The documentation for this struct was generated from the following file:

• fpp_ext.h

6.15 fpp_qos_scheduler_cmd_t Struct Reference

Argument of the FPP_CMD_QOS_SCHEDULER command.

```
#include <fpp_ext.h>
```



Data Fields

- uint16_t action
- char if_name [IFNAMSIZ]
- uint8_t id
- uint8_t mode
- uint8_t algo
- uint32_t input_en
- uint32_t input_w [32]
- uint8_t input_src [32]

6.15.1 Detailed Description

Argument of the FPP_CMD_QOS_SCHEDULER command.

Examples

fpp_cmd_qos_scheduler.c.

6.15.2 Field Documentation

6.15.2.1 action

uint16_t action

Action

Examples

fpp_cmd_qos_scheduler.c.

6.15.2.2 if_name

char if_name[IFNAMSIZ]

Name of physical interface owning the scheduler

Examples

fpp_cmd_qos_scheduler.c.



6.15.2.3 id

uint8_t id

Scheduler ID. IDs start with 0 and maximum value depends on the number of available schedulers within the given interface .if_name. See Egress QoS.

Examples

fpp_cmd_qos_scheduler.c.

6.15.2.4 mode

uint8_t mode

Scheduler mode:

- 0 Scheduler disabled
- 1 Data rate (payload length)
- 2 Packet rate (number of packets)

Examples

fpp_cmd_qos_scheduler.c.

6.15.2.5 algo

uint8_t algo

Scheduler algorithm:

- 0 PQ (Priority Queue). Input with the highest priority is serviced first. Input 0 has the **lowest** priority.
- 1 DWRR (Deficit Weighted Round Robin)
- 2 RR (Round Robin)
- 3 WRR (Weighted Round Robin)

Examples

fpp_cmd_qos_scheduler.c.



6.15.2.6 input_en

```
uint32_t input_en
```

Input enable bitfield (network endian). When a bit n is set it means that scheduler input n is enabled and connected to traffic source defined by .source[n]. Number of inputs is implementation-specific. See the Egress QoS.

Examples

fpp_cmd_qos_scheduler.c.

6.15.2.7 input_w

```
uint32_t input_w[32]
```

Input weight (network endian). Scheduler algorithm-specific:

- PQ, RR n/a
- WRR, DWRR Weight in units given by scheduler . mode

Examples

fpp_cmd_qos_scheduler.c.

6.15.2.8 input_src

```
uint8_t input_src[32]
```

Traffic source ID per scheduler input. Scheduler traffic sources are implementation-specific. See the Egress QoS.

Examples

```
fpp_cmd_qos_scheduler.c.
```

The documentation for this struct was generated from the following file:

• fpp_ext.h

6.16 fpp_qos_shaper_cmd_t Struct Reference

Argument of the FPP_CMD_QOS_SHAPER command.

```
#include <fpp_ext.h>
```



Data Fields

- uint16_t action
- char if_name [IFNAMSIZ]
- uint8_t id
- uint8_t position
- uint8_t mode
- uint32_t isl
- int32_t max_credit
- int32_t min_credit

6.16.1 Detailed Description

Argument of the FPP_CMD_QOS_SHAPER command.

Examples

fpp_cmd_qos_shaper.c.

6.16.2 Field Documentation

6.16.2.1 action

uint16_t action

Action

Examples

fpp_cmd_qos_shaper.c.

6.16.2.2 if_name

char if_name[IFNAMSIZ]

Interface name

Examples

fpp_cmd_qos_shaper.c.



6.16.2.3 id

```
uint8_t id
```

Shaper ID. IDs start with 0 and maximum value depends on the number of available shapers within the given interface .if_name. See Egress QoS.

Examples

```
fpp_cmd_qos_shaper.c.
```

6.16.2.4 position

```
uint8_t position
```

Position of the shaper

Examples

```
fpp_cmd_qos_shaper.c.
```

6.16.2.5 mode

uint8_t mode

Shaper mode:

- 0 Shaper disabled
- 1 Data rate. The isl is in units of bits-per-second and max_credit with min_credit are numbers of bytes.
- 2 Packet rate. The isl is in units of packets-per-second and max_credit with min_credit are number of packets.

Examples

```
fpp_cmd_qos_shaper.c.
```

6.16.2.6 isl

```
uint32_t isl
```

Idle slope in units per second (network endian)

Examples

fpp_cmd_qos_shaper.c.



6.16.2.7 max credit

```
int32_t max_credit
```

Max credit (network endian)

Examples

fpp_cmd_qos_shaper.c.

6.16.2.8 min_credit

```
int32_t min_credit
```

Min credit (network endian)

Examples

```
fpp_cmd_qos_shaper.c.
```

The documentation for this struct was generated from the following file:

• fpp_ext.h

6.17 fpp_rt_cmd_t Struct Reference

Structure representing the command to add or remove a route.

```
#include <fpp.h>
```

Data Fields

- uint16_t action
- uint8_t dst_mac [6]
- char output_device [IFNAMSIZ]
- uint32_t id
- uint32_t flags

6.17.1 Detailed Description

Structure representing the command to add or remove a route.

Data structure to be used for command buffer for route commands. It can be used:

• as command buffer in functions fci_write, fci_query or fci_cmd, with FPP_CMD_IP_ROUTE command.



• as reply buffer in functions fci_query or fci_cmd, with FPP_CMD_IP_ROUTE command.

Examples

fpp_cmd_ip_route.c.

6.17.2 Field Documentation

6.17.2.1 action

uint16_t action

Action to perform

Examples

fpp_cmd_ip_route.c.

6.17.2.2 dst_mac

uint8_t dst_mac[6]

Destination MAC address (network endian)

Examples

fpp_cmd_ip_route.c.

6.17.2.3 output_device

char output_device[IFNAMSIZ]

Name of egress physical interface

Examples

fpp_cmd_ip_route.c.



6.17.2.4 id

```
uint32_t id
```

Unique route identifier

Examples

fpp_cmd_ip_route.c.

6.17.2.5 flags

```
uint32_t flags
```

Flags (network endian). 1 for IPv4 route, 2 for IPv6.

Examples

```
fpp_cmd_ip_route.c.
```

The documentation for this struct was generated from the following file:

• fpp.h

6.18 fpp_spd_cmd_t Struct Reference

Argument structure for the FPP_CMD_SPD command.

```
#include <fpp_ext.h>
```

Data Fields

- uint16_t action
- char name [IFNAMSIZ]
- uint16_t position
- uint32_t saddr [4]
- uint32_t daddr [4]
- uint16_t sport
- uint16_t dport
- uint8_t protocol
- uint32_t sa_id
- uint32_t spi
- fpp_spd_action_t spd_action

6.18.1 Detailed Description

Argument structure for the FPP_CMD_SPD command.



6.18.2 Field Documentation

6.18.2.1 action

uint16_t action

Action

6.18.2.2 name

char name[IFNAMSIZ]

Interface name

6.18.2.3 position

uint16_t position

Rule position (0 = 1st one, X = insert before Xth rule, if X > count then add as a last one)

6.18.2.4 saddr

uint32_t saddr[4]

Source IP address (IPv4 uses only 1st word)

6.18.2.5 daddr

uint32_t daddr[4]

Destination IP address (IPv4 uses only 1st word)

6.18.2.6 sport

uint16_t sport

Source port

6.18.2.7 dport

uint16_t dport

Destination port

6.18.2.8 protocol

uint8_t protocol

Protocol ID: TCP, UDP



6.18.2.9 sa_id

```
uint32_t sa_id
```

SAD entry identifier (used only for actions SPD_ACT_PROCESS_ENCODE)

6.18.2.10 spi

```
uint32_t spi
```

SPI to match if action is FPP_SPD_ACTION_PROCESS_DECODE

6.18.2.11 spd_action

```
fpp_spd_action_t spd_action
```

Action to be done on the frame

The documentation for this struct was generated from the following file:

• fpp_ext.h

6.19 fpp_timeout_cmd_t Struct Reference

Timeout command argument.

```
#include <fpp.h>
```

6.19.1 Detailed Description

Timeout command argument.

Data structure to be used for command buffer for timeout settings. It can be used:

• for command buffer in functions fci_write, fci_query or fci_cmd, with FPP_CMD_IPV4_SET_TIMEOUT command.

The documentation for this struct was generated from the following file:

• fpp.h



Chapter 7

File Documentation

7.1 fpp.h File Reference

```
The legacy FCI API.
#include "pfe_cfg.h"
#include <stdint.h>
```

Data Structures

- struct fpp_ct_cmd_t

 Data structure used in various functions for conntrack management.
- struct fpp_ct6_cmd_t

 Data structure used in various functions for IPv6 conntrack management.
- struct fpp_rt_cmd_t
 Structure representing the command to add or remove a route.
- struct fpp_timeout_cmd_t

 Timeout command argument.

Macros

- #define FPP_ACTION_REGISTER

 Generic 'register' action for FPP_CMD_*.
- #define FPP_ACTION_DEREGISTER
 Generic 'deregister' action for FPP_CMD_*.
- #define FPP_ACTION_UPDATE

 Generic 'update' action for FPP_CMD_*.
- #define FPP_ACTION_QUERY Generic 'query' action for FPP_CMD_*.
- #define FPP_ACTION_QUERY_CONT Generic 'query continue' action for FPP_CMD_*.
- #define FPP_CMD_IPV4_CONNTRACK
 Specifies FCI command for working with IPv4 tracked connections.



- #define FPP_CMD_IPV6_CONNTRACK

 Specifies FCI command for working with IPv6 tracked connections.
- #define FPP_CMD_IP_ROUTE

 Specifies FCI command for working with routes.
- #define FPP_CMD_IPV4_RESET

 Specifies FCI command that clears all IPv4 routes (see FPP_CMD_IP_ROUTE) and conntracks

 (see FPP_CMD_IPV4_CONNTRACK)
- #define FPP_CMD_IPV6_RESET

 Specifies FCI command that clears all IPv6 routes (see FPP_CMD_IP_ROUTE) and conntracks

 (see FPP_CMD_IPV6_CONNTRACK)
- #define FPP_CMD_IPV4_SET_TIMEOUT Specifies FCI command for setting timeouts of conntracks.

7.1.1 Detailed Description

The legacy FCI API.

This file origin is the fpp.h file from CMM sources.

7.1.2 Macro Definition Documentation

7.1.2.1 FPP CMD IPV4 CONNTRACK

```
#define FPP_CMD_IPV4_CONNTRACK
```

Specifies FCI command for working with IPv4 tracked connections.

This command can be used with various values of .action:

- FPP_ACTION_REGISTER: Defines a connection and binds it to previously created route(s).
- FPP_ACTION_DEREGISTER: Deletes previously defined connection.
- FPP_ACTION_QUERY: Gets parameters of existing connection. It creates a snapshot of all active conntrack entries and replies with first of them.
- FPP_ACTION_QUERY_CONT: Shall be called periodically after FPP_ACTION_QUERY was called. On each call it replies with parameters of next connection. It returns FPP_ERR_CT_ENTRY_NOT_FOUND when no more entries exist.

Command Argument Type: fpp_ct_cmd_t

Action FPP_ACTION_REGISTER

Items to be set in command argument structure:

```
fpp_ct_cmd_t cmd_data =
{
```

2019-2020 NXP Public 94



```
// Register new conntrack
.action = FPP_ACTION_REGISTER,
// Source IPv4 address (network endian)
// Destination IPv4 address (network endian)
.daddr = ...,
// Source port (network endian)
.sport = ....
// Destination port (network endian)
.dport = ...,
// Reply source IPv4 address (network endian). Used for NAT, otherwise equals .daddr
.saddr_reply = ...,
// Reply destination IPv4 address (network endian). Used for NAT, otherwise equals .saddr
.daddr_reply = ...,
// Reply source port (network endian). Used for NAT, otherwise equals .dport
.sport reply = ....
// Reply destination port (network endian). Used for NAT, otherwise equals .sport
.dport reply = ...
// IP protocol ID (17=UDP, 6=TCP, ...)
.protocol = ...,
// Bidirectional/Single direction (network endian)
.flags = \dots,
// ID of route previously created with .FPP_CMD_IP_ROUTE command (network endian)
// ID of reply route previously created with .FPP_CMD_IP_ROUTE command (network endian)
.route_id_reply = ...
```

By default the connection is created as bi-directional. It means that two routing table entries are created at once: one for standard flow given by .saddr, .daddr, .sport, .dport, and .protocol and one for reverse flow defined by .saddr_reply, .daddr_reply, .sport_reply and .dport_reply. To create single-directional connection, either:

- set .flags |= CTCMD_FLAGS_REP_DISABLED and don't set route_id_reply, or
- set .flags |= CTCMD_FLAGS_ORIG_DISABLED and don't set route_id.

To configure NAT-ed connection, set reply addresses and/or ports different than original addresses and ports. To achieve NAPT (also called PAT), use daddr_reply, dport_reply, and sport_reply:

- daddr_reply != saddr: Source address of packets in original direction will be changed from saddr to daddr_reply. In case of bi-directional connection, destination address of packets in reply direction will be changed from daddr_reply to saddr.
- 2. dport_reply != sport: Source port of packets in original direction will be changed from sport to dport_reply. In case of bi-directional connection, destination port of packets in reply direction will be changed from dport_reply to sport.
- 3. saddr_reply != daddr: Destination address of packets in original direction will be changed from daddr to saddr_reply. In case of bi-directional connection, source address of packets in reply direction will be changed from saddr_reply to daddr.
- 4. sport_reply != dport: Destination port of packets in original direction will be changed from dport to sport_reply. In case of bi-directional connection, source port of packets in reply direction will be changed from sport_reply to dport.



Action FPP_ACTION_DEREGISTER

Items to be set in command argument structure:

```
fpp_ct_cmd_t cmd_data =
  .action = FPP_ACTION_DEREGISTER, // Deregister previously created conntrack
                                     // Source IPv4 address (network endian)
 .saddr = ...,
  .daddr = ...,
                                     // Destination IPv4 address (network endian)
  .sport = ...,
                                     // Source port (network endian)
 .dport = ...,
                                     // Destination port (network endian)
 .saddr_reply = ...,
                                    // Reply source IPv4 address (network endian)
 .sadur_reply = ...,
.sport_reply = ...,
'-ort_reply = ...,
                                    // Reply destination IPv4 address (network endian)
                                    // Reply source port (network endian)
 .dport_reply = ...,
                                    // Reply destination port (network endian)
 .protocol = ...,
                                     // IP protocol ID
```

Action FPP ACTION QUERY and FPP ACTION QUERY CONT

Items to be set in command argument structure:

Response data type for queries: fpp_ct_cmd_t

Response data provided:

Examples

fpp_cmd_ipv4_conntrack.c.

7.1.2.2 FPP CMD IPV6 CONNTRACK

```
#define FPP_CMD_IPV6_CONNTRACK
```

Specifies FCI command for working with IPv6 tracked connections.

This command can be used with various values of .action:

- FPP_ACTION_REGISTER: Defines a connection and binds it to previously created route(s).
- FPP_ACTION_DEREGISTER: Deletes previously defined connection.
- FPP_ACTION_QUERY: Gets parameters of existing connection. It creates a snapshot of all active conntrack entries and replies with first of them.
- FPP_ACTION_QUERY_CONT: Shall be called periodically after FPP_ACTION_QUERY was called. On each call it replies with parameters of

2019-2020 NXP Public 96



next connection. It returns FPP_ERR_CT_ENTRY_NOT_FOUND when no more entries exist.

Command Argument Type: fpp_ct6_cmd_t

Action FPP_ACTION_REGISTER

Items to be set in command argument structure:

```
fpp_ct6_cmd_t cmd_data =
 // Register new conntrack
 .action = FPP_ACTION_REGISTER,
 // Source IPv6 address, (network endian)
 .saddr[0..3] = ...,
 // Destination IPv6 address, (network endian)
  .daddr[0..3] = ...,
 // Source port (network endian)
 .sport = ...,
 // Destination port (network endian)
 .dport = ...,
 // Reply source IPv6 address (network endian). Used for NAT, otherwise equals .daddr
  .saddr_reply[0..3] = ...,
 // Reply destination IPv6 address (network endian). Used for NAT, otherwise equals .saddr
 .daddr reply[0..3] = ...,
 // Reply source port (network endian). Used for NAT, otherwise equals .dport
 .sport_reply = ...,
 // Reply destination port (network endian). Used for NAT, otherwise equals .sport
  .dport_reply = ...
 // IP protocol ID (17=UDP, 6=TCP, ...)
 .protocol = ...,
 // Bidirectional/Single direction (network endian)
 // ID of route previously created with .FPP_CMD_IP_ROUTE command (network endian)
 .route_id = ...,
 // ID of reply route previously created with .FPP_CMD_IP_ROUTE command (network endian)
 .route_id_reply = ...
```

By default the connection is created as bi-directional. It means that two routing table entries are created at once: one for standard flow given by .saddr, .daddr, .sport, .dport, and .protocol and one for reverse flow defined by .saddr_reply, .daddr_reply, .sport_reply and .dport_reply. To create single-directional connection, either:

- set .flags |= CTCMD_FLAGS_REP_DISABLED and don't set route_id_reply, or
- set .flags |= CTCMD_FLAGS_ORIG_DISABLED and don't set route_id.

To configure NAT-ed connection, set reply addresses and/or ports different than original addresses and ports. To achieve NAPT (also called PAT), use daddr_reply, dport_reply, and sport_reply:

- daddr_reply != saddr: Source address of packets in original direction will be changed from saddr to daddr_reply. In case of bi-directional connection, destination address of packets in reply direction will be changed from daddr_reply to saddr.
- 2. dport_reply != sport: Source port of packets in original direction will be changed from sport to dport_reply. In case of bi-directional connection, destination port of packets in reply direction will be changed from dport_reply to sport.



- 3. saddr_reply != daddr: Destination address of packets in original direction will be changed from daddr to saddr_reply. In case of bi-directional connection, source address of packets in reply direction will be changed from saddr_reply to daddr.
- 4. sport_reply != dport: Destination port of packets in original direction will be changed from dport to sport_reply. In case of bi-directional connection, source port of packets in reply direction will be changed from sport_reply to dport.

Action FPP_ACTION_DEREGISTER

Items to be set in command argument structure:

```
fpp_ct6_cmd_t cmd_data =
{
    .action = FPP_ACTION_DEREGISTER, // Deregister previously created conntrack
    .saddr[0..3] = ..., // Source IPv6 address, (network endian)
    .daddr[0..3] = ..., // Destination IPv6 address, (network endian)
    .sport = ..., // Source port (network endian)
    .dport = ..., // Destination port (network endian)
    .saddr_reply[0..3] = ..., // Reply source IPv6 address (network endian)
    .sport_reply = ..., // Reply destination IPv6 address (network endian)
    .sport_reply = ..., // Reply source port (network endian)
    .dport_reply = ..., // Reply destination port (network endian)
    .protocol = ..., // IP protocol ID
};
```

Action FPP_ACTION_QUERY and FPP_ACTION_QUERY_CONT

Items to be set in command argument structure:

Response data type for queries: fpp_ct6_cmd_t

Response data provided (all values in network byte order):

Examples

fpp_cmd_ipv6_conntrack.c.

7.1.2.3 FPP_CMD_IP_ROUTE

```
#define FPP_CMD_IP_ROUTE
```

Specifies FCI command for working with routes.

2019-2020 NXP Public 98



Routes are representing direction where matching traffic shall be forwarded to. Every route specifies egress physical interface and MAC address of next network node. This command can be used with various values of .action:

- FPP_ACTION_REGISTER: Defines a new route.
- FPP_ACTION_DEREGISTER: Deletes previously defined route.
- FPP_ACTION_QUERY: Gets parameters of existing routes. It creates a snapshot of all active route entries and replies with first of them.
- FPP_ACTION_QUERY_CONT: Shall be called periodically after FPP_ACTION_QUERY was called. On each call it replies with parameters of next route. It returns FPP_ERR_RT_ENTRY_NOT_FOUND when no more entries exist.

Command Argument Type: fpp_rt_cmd_t

Action FPP_ACTION_REGISTER

Items to be set in command argument structure:

Action FPP_ACTION_DEREGISTER

Items to be set in command argument structure:

```
fpp_rt_cmd_t cmd_data =
{
    .action = FPP_ACTION_DEREGISTER, // Deregister a route
    .id = ... // Unique route identifier (network endian)
}.
```

Action FPP_ACTION_QUERY and FPP_ACTION_QUERY_CONT

Items to be set in command argument structure:

Examples

fpp_cmd_ip_route.c.



7.1.2.4 FPP_CMD_IPV4_RESET

```
#define FPP_CMD_IPV4_RESET
```

Specifies FCI command that clears all IPv4 routes (see FPP_CMD_IP_ROUTE) and conntracks (see FPP_CMD_IPV4_CONNTRACK)

This command uses no arguments.

Command Argument Type: none (cmd_buf = NULL; cmd_len = 0;)

Examples

```
fpp_cmd_ip_route.c.
```

7.1.2.5 FPP_CMD_IPV6_RESET

```
#define FPP_CMD_IPV6_RESET
```

Specifies FCI command that clears all IPv6 routes (see FPP_CMD_IP_ROUTE) and conntracks (see FPP_CMD_IPV6_CONNTRACK)

This command uses no arguments.

Command Argument Type: none (cmd_buf = NULL; cmd_len = 0;)

Examples

```
fpp_cmd_ip_route.c.
```

7.1.2.6 FPP CMD IPV4 SET TIMEOUT

```
#define FPP_CMD_IPV4_SET_TIMEOUT
```

Specifies FCI command for setting timeouts of conntracks.

This command sets timeout for conntracks based on protocol. Three kinds of protocols are distinguished: TCP, UDP and others. For each of them timeout can be set independently. For UDP it is possible to set different value for bidirectional and single-directional connection. Default timeout value is 5 days for TCP, 300s for UDP and 240s for others.

Newly created connections are being created with new timeout values already set. Previously created connections have their timeout updated with first received packet.

Command Argument Type: fpp_timeout_cmd_t

Items to be set in command argument structure:

```
fpp_timeout_cmd_t cmd_data =
{
    // IP protocol to be affected. Either 17 for UDP, 6 for TCP or 0 for others.
    .protocol;
    // Use 0 for normal connections, 1 for 4over6 IP tunnel connections.
    .sam_4o6_timeout;
    // Timeout value in seconds.
    .timeout_value1;
```

2019-2020 NXP Public 100



```
// Optional timeout value which is valid only for UDP connections. If the value is set
// (non zero), then it affects unidirectional UDP connections only.
.timeout_value2;
```

7.2 fpp_ext.h File Reference

Extension of the legacy fpp.h.

Data Structures

- struct fpp_if_m_args_t Match rules arguments.
- struct fpp_phy_if_stats_t Physical interface statistics.
- struct fpp_algo_stats_t Algorithm statistics.
- struct fpp_phy_if_cmd_t

 Data structure to be used for physical interface commands.
- struct fpp_log_if_cmd_t

 Data structure to be used for logical interface commands.
- struct fpp_l2_bd_cmd_t

 Data structure to be used for command buffer for L2 bridge domain control commands.
- struct fpp_fp_rule_props_t

 Properties of the Flexible parser rule.
- struct fpp_fp_rule_cmd_t
 Arguments for the FPP_CMD_FP_RULE command.
- struct fpp_fp_table_cmd_t
 Arguments for the FPP_CMD_FP_TABLE command.
- struct fpp_buf_cmd_t

 Argument structure for the FPP_CMD_DATA_BUF_PUT command.
- struct fpp_spd_cmd_t

 Argument structure for the FPP_CMD_SPD command.
- struct fpp_qos_queue_cmd_t

 Argument of the FPP_CMD_QOS_QUEUE command.
- struct fpp_qos_scheduler_cmd_t
 Argument of the FPP_CMD_QOS_SCHEDULER command.
- struct fpp_qos_shaper_cmd_t Argument of the FPP_CMD_QOS_SHAPER command.

Macros

- #define FPP_CMD_PHY_IF FCI command for working with physical interfaces.
- #define FPP_CMD_LOG_IF
 FCI command for working with logical interfaces.



- #define FPP_CMD_IF_LOCK_SESSION
 FCI command to perform lock on interface database.
- #define FPP_CMD_IF_UNLOCK_SESSION FCI command to perform unlock on interface database.
- #define FPP_CMD_L2_BD VLAN-based L2 bridge domain management.
- #define FPP_CMD_FP_TABLE

 Administers the Flexible Parser tables.
- #define FPP_CMD_FP_RULE

 Administers the Flexible Parser rules.
- #define FPP_ACTION_USE_RULE Flexible Parser specific 'use' action for FPP_CMD_FP_TABLE.
- #define FPP_ACTION_UNUSE_RULE Flexible Parser specific 'unuse' action for FPP_CMD_FP_TABLE.
- #define FPP_CMD_FP_FLEXIBLE_FILTER

 Uses flexible parser to filter out frames from further processing.
- #define FPP_CMD_DATA_BUF_PUT FCI command to send an arbitrary data to the accelerator.
- #define FPP_CMD_DATA_BUF_AVAIL

 Event reported when accelerator wants to send a data buffer to host.
- #define FPP_CMD_ENDPOINT_SHUTDOWN Notify client about endpoint shutdown event.
- #define FPP_CMD_SPD

 Configures the SPD (Security Policy Database) for IPsec.
- #define FPP_CMD_QOS_QUEUE Management of QoS queues.
- #define FPP_CMD_QOS_SCHEDULER Management of QoS scheduler.
- #define FPP_CMD_QOS_SHAPER

 Management of QoS shaper.

Enumerations

```
    enum fpp_if_flags_t {
        FPP_IF_ENABLED, FPP_IF_PROMISC,
        FPP_IF_MATCH_OR, FPP_IF_DISCARD,
        FPP_IF_MIRROR }
        Interface flags.
    enum fpp_phy_if_op_mode_t {
        FPP_IF_OP_DISABLED, FPP_IF_OP_DEFAULT,
        FPP_IF_OP_BRIDGE, FPP_IF_OP_ROUTER,
        FPP_IF_OP_VLAN_BRIDGE, FPP_IF_OP_FLEXIBLE_ROUTER }
        Physical if modes.
    enum fpp_if_m_rules_t {
        FPP_IF_MATCH_TYPE_ETH, FPP_IF_MATCH_TYPE_VLAN,
```

FPP_IF_MATCH_TYPE_PPPOE, FPP_IF_MATCH_TYPE_ARP, FPP_IF_MATCH_TYPE_MCAST, FPP_IF_MATCH_TYPE_IPV4,



```
FPP IF MATCH TYPE IPV6, FPP IF MATCH RESERVED7,
 FPP IF MATCH RESERVED8, FPP IF MATCH TYPE IPX,
 FPP_IF_MATCH_TYPE_BCAST, FPP_IF_MATCH_TYPE_UDP,
 FPP IF MATCH TYPE TCP, FPP IF MATCH TYPE ICMP,
 FPP IF MATCH TYPE IGMP, FPP IF MATCH VLAN,
 FPP_IF_MATCH_PROTO, FPP_IF_MATCH_SPORT,
 FPP_IF_MATCH_DPORT, FPP_IF_MATCH_SIP6,
 FPP_IF_MATCH_DIP6, FPP_IF_MATCH_SIP,
 FPP_IF_MATCH_DIP, FPP_IF_MATCH_ETHTYPE,
 FPP_IF_MATCH_FP0, FPP_IF_MATCH_FP1,
 FPP IF MATCH SMAC, FPP IF MATCH DMAC,
 FPP IF MATCH HIF COOKIE}
    Match rules. Can be combined using bitwise OR.
• enum fpp phy if block state t {
 BS_NORMAL, BS_BLOCKED,
 BS_LEARN_ONLY, BS_FORWARD_ONLY }
    Interface blocking state.
• enum fpp_l2_bd_flags_t { FPP_L2BR_DOMAIN_DEFAULT, FPP_L2BR_DOMAIN_FALLBACK
 }
    L2 bridge domain flags.
enum fpp_fp_rule_match_action_t {
 FP_ACCEPT, FP_REJECT,
 FP NEXT RULE }
    Specifies the Flexible Parser result on the rule match.
• enum fpp_fp_offset_from_t {
 FP_OFFSET_FROM_L2_HEADER, FP_OFFSET_FROM_L3_HEADER,
 FP OFFSET FROM L4 HEADER }
    Specifies how to calculate the frame data offset.
• enum fpp spd action t
    Sets the action to be done for frames matching the SPD entry criteria.
enum fpp_spd_flags_t
    Flags values to be used in fpp_spd_cmd_t structure .flags field.
```

7.2.1 Detailed Description

Extension of the legacy fpp.h.

All FCI commands and related elements not present within the legacy fpp.h shall be put into this file. All macro values (uint16_t) shall have the upper nibble set to b1111 to ensure no conflicts with the legacy macro values.

Note

Documentation is part of libfci.h.

7.3 libfci.h File Reference

Generic LibFCI header file.



Macros

- #define FCI_CFG_FORCE_LEGACY_API

 Changes the LibFCI API so it is more compatible with legacy implementation.
- #define FPP_CMD_IPV4_CONNTRACK_CHANGE
- #define FPP_CMD_IPV6_CONNTRACK_CHANGE
- #define CTCMD_FLAGS_ORIG_DISABLED Disable connection originator.
- #define CTCMD_FLAGS_REP_DISABLED Disable connection replier.

Enumerations

- enum fci_mcast_groups_t { FCI_GROUP_NONE, FCI_GROUP_CATCH } List of supported multicast groups.
- enum fci_client_type_t { FCI_CLIENT_DEFAULT } List of supported FCI client types.
- enum fci_cb_retval_t { FCI_CB_STOP, FCI_CB_CONTINUE } The FCI callback return values.

Functions

- FCI_CLIENT * fci_open (fci_client_type_t type, fci_mcast_groups_t group) Creates new FCI client and opens a connection to FCI endpoint.
- int fci_close (FCI_CLIENT *client)

 Disconnects from FCI endpoint and destroys FCI client instance.
- int fci_catch (FCI_CLIENT *client)

 Catch and process all FCI messages delivered to the FCI client.
- int fci_cmd (FCI_CLIENT *client, unsigned short fcode, unsigned short *cmd_buf, unsigned short cmd_len, unsigned short *rep_buf, unsigned short *rep_len)

 *Run an FCI command with optional data response.
- int fci_query (FCI_CLIENT *this_client, unsigned short fcode, unsigned short cmd_len, unsigned short *pcmd, unsigned short *rsplen, unsigned short *rsp_data) Run an FCI command with data response.
- int fci_write (FCI_CLIENT *client, unsigned short fcode, unsigned short cmd_len, unsigned short *cmd_buf)

 *Run an FCI command.
- int fci_register_cb (FCI_CLIENT *client, fci_cb_retval_t(*event_cb)(unsigned short fcode, unsigned short len, unsigned short *payload))

 Register event callback function.
- int fci_fd (FCI_CLIENT *this_client)

 Obsolete function, shall not be used.



7.3.1 Detailed Description

Generic LibFCI header file.

This file contains generic API and API description



Chapter 8

Example Documentation

8.1 fpp_cmd_ip_route.c

```
* Copyright 2020 NXP
 \star NXP Confidential. This software is owned or controlled by NXP and may
 \star only be used strictly in accordance with the applicable license terms
 * found at https://www.nxp.com/docs/en/disclaimer/LA_OPT_NXP_SW.html.
 * =============== */
#include <stdio.h>
#include <stdlib.h>
#include <arpa/inet.h>
#include <errno.h>
#include "libfci.h"
#include "fpp.h"
#include "fpp_ext.h"
#include "fci_examples.h"
              Reset IPv4 and IPv6 router
 * @param[in] cl The FCI client instance
void fci_router_reset(FCI_CLIENT *cl)
   int ret;
   ret = fci_write(cl, FPP_CMD_IPV4_RESET, 0, NULL);
    if (FPP_ERR_OK != ret)
       printf("FPP_CMD_IPV4_RESET failed: %d\n", ret);
   ret = fci_write(cl, FPP_CMD_IPV6_RESET, 0, NULL);
    if (FPP_ERR_OK != ret)
       printf("FPP_CMD_IPV6_RESET failed: %d\n", ret);
}
 * @brief
               Register two IPv4 routes
              Function registers two IPv4 routes: one targeting emac0 and the second
 * @details
               one emacl. Traffic matching respective route will be forwarded via
               physical interface given by 'fpp_rt_cmd_t.output_device' while its source
               MAC address will be replaced by MAC address of the output interface and
               destination MAC address will be replaced by 'fpp_rt_cmd_t.dst_mac'.
 * @param[in]
              cl The FCI client instance
void fci_router_register_ipv4_routes(FCI_CLIENT *cl)
   int ret;
   fpp_rt_cmd_t r1 =
       /* Register new route */
       .action = FPP_ACTION_REGISTER,
```

2019-2020 NXP Public 106



```
/\star Destination MAC address to be used for packets matching the route \star/
        .dst_mac = \{0x00, 0xaa, 0xbb, 0xcc, 0xdd, 0xee\},
        /* Egress physical interface */
        .output_device = "emac0",
        /* Unique route identifier */
        .id = htonl(123),
        /* Use IPv4 addressing */
        .flags = htonl(1)
    fpp_rt_cmd_t r2 =
        .action = FPP_ACTION_REGISTER,
        .dst_mac = {0x00, 0x11, 0x22, 0x33, 0x44, 0x55}, .output_device = "emac1",
        .id = htonl(456),
        .flags = htonl(1),
    /* Register route "r1" */
    ret = fci_write(cl, FPP_CMD_IP_ROUTE, sizeof(r1), (void *)&r1);
    if (FPP_ERR_OK != ret)
    {
        printf("FPP_CMD_IP_ROUTE[FPP_ACTION_REGISTER] failed: %d\n", ret);
    /* Register route "r2" */
    ret = fci_write(cl, FPP_CMD_IP_ROUTE, sizeof(r2), (void *)&r2);
    if (FPP_ERR_OK != ret)
    {
        printf("FPP_CMD_IP_ROUTE[FPP_ACTION_REGISTER] failed: %d\n", ret);
        return:
}
                Register two IPv6 routes
                Function registers two IPv6 routes: one targeting emac0 and the second
* @details
                one emacl. Traffic matching respective route will be forwarded via
                physical interface given by 'fpp_rt_cmd_t.output_device' while its source
                MAC address will be replaced by MAC address of the output interface and
                destination MAC address will be replaced by 'fpp_rt_cmd_t.dst_mac'.
* @param[in]
              cl The FCI client instance
void fci_router_register_ipv6_routes(FCI_CLIENT *cl)
    fpp_rt_cmd_t r1 =
        /* Register new route */
        .action = FPP_ACTION_REGISTER,
        /\star Destination MAC address to be used for packets matching the route \star/
        .dst_mac = \{0x00, 0xaa, 0xbb, 0xcc, 0xdd, 0xee\},
        /* Egress physical interface */
        .output_device = "emac0",
        /* Unique route identifier */
        .id = htonl(111),
        /* Use IPv6 addressing */
        .flags = hton1(2)
    };
    fpp_rt_cmd_t r2 =
        .action = FPP_ACTION_REGISTER,
        .dst_mac = {0x00, 0x11, 0x22, 0x33, 0x44, 0x55}, .output_device = "emac1",
        .id = htonl(222),
        .flags = htonl(2),
    /* Register route "r1" */
    ret = fci_write(cl, FPP_CMD_IP_ROUTE, sizeof(r1), (void *)&r1);
    if (FPP_ERR_OK != ret)
    {
        printf("FPP_CMD_IP_ROUTE[FPP_ACTION_REGISTER] failed: %d\n", ret);
        return;
    /* Register route "r2" */
```



```
ret = fci_write(cl, FPP_CMD_IP_ROUTE, sizeof(r2), (void *)&r2);
    if (FPP_ERR_OK != ret)
    {
        printf("FPP_CMD_IP_ROUTE[FPP_ACTION_REGISTER] failed: %d\n", ret);
        return;
    }
}
/*
 * @brief
              Print all IPv4 routes
 * @param[in]
              cl The FCI client instance
void fci_router_print_ipv4_routes(FCI_CLIENT *cl)
    fpp_rt_cmd_t cmd;
    fpp_rt_cmd_t rep;
    unsigned short rep_len;
    cmd.action = FPP_ACTION_QUERY;
    ret = fci_query(cl, FPP_CMD_IP_ROUTE, sizeof(cmd), (void *)&cmd, &rep_len, (void *)&rep);
    while (FPP_ERR_OK == ret)
    {
        if (1 == ntohl(rep.flags))
        {
            printf("%03d: %s (%02x:%02x:%02x:%02x:%02x), flags: 0x%x\n",
                ntohl(rep.id), rep.output_device, rep.dst_mac[0], rep.dst_mac[1],
                    rep.dst_mac[2], rep.dst_mac[3], rep.dst_mac[4], rep.dst_mac[5],
ntohl(rep.flags));
        cmd.action = FPP_ACTION_QUERY_CONT;
        ret = fci_query(cl, FPP_CMD_IP_ROUTE, sizeof(cmd), (void *)&cmd, &rep_len, (void
       *)&rep);
    }
 * @brief
               Print all IPv6 routes
 * @param[in]
               cl The FCI client instance
void fci_router_print_ipv6_routes(FCI_CLIENT *cl)
    int ret;
    fpp_rt_cmd_t cmd;
    fpp_rt_cmd_t rep;
    unsigned short rep_len;
    cmd.action = FPP_ACTION_QUERY;
    ret = fci_query(cl, FPP_CMD_IP_ROUTE, sizeof(cmd), (void *)&cmd, &rep_len, (void *)&rep);
    while (FPP_ERR_OK == ret)
    {
        if (2 == ntohl(rep.flags))
            printf("%03d: %s (%02x:%02x:%02x:%02x:%02x), flags: 0x%x\n",
                ntohl(rep.id), rep.output_device, rep.dst_mac[0], rep.dst_mac[1],
                    rep.dst_mac[2], rep.dst_mac[3], rep.dst_mac[4], rep.dst_mac[5],
                        ntohl(rep.flags));
        cmd.action = FPP_ACTION_QUERY_CONT;
        ret = fci_query(cl, FPP_CMD_IP_ROUTE, sizeof(cmd), (void *)&cmd, &rep_len, (void
       *)&rep);
    }
}
                Remove routes created by fci_router_register_ipv4_routes()
 * @brief
               cl The FCI client instance
 * @param[in]
void fci_router_remove_ipv4_routes(FCI_CLIENT *cl)
    int ret;
    fpp_rt_cmd_t cmd;
    cmd.action = FPP_ACTION_DEREGISTER;
    cmd.id = htonl(123);
    ret = fci_write(cl, FPP_CMD_IP_ROUTE, sizeof(cmd), (void *)&cmd);
    if (FPP_ERR_OK != ret)
    {
        printf("FPP_CMD_IP_ROUTE[FPP_ACTION_DEREGISTER] failed: %d\n", ret);
```



```
cmd.id = htonl(456);
   ret = fci_write(cl, FPP_CMD_IP_ROUTE, sizeof(cmd), (void *)&cmd);
    if (FPP_ERR_OK != ret)
        printf("FPP_CMD_IP_ROUTE[FPP_ACTION_DEREGISTER] failed: %d\n", ret);
}
 * @brief
               Remove routes created by fci_router_register_ipv6_routes()
 * @param[in] cl The FCI client instance
void fci_router_remove_ipv6_routes(FCI_CLIENT *cl)
   int ret;
   fpp_rt_cmd_t cmd;
    cmd.action = FPP_ACTION_DEREGISTER;
   cmd.id = htonl(111);
   ret = fci_write(cl, FPP_CMD_IP_ROUTE, sizeof(cmd), (void *)&cmd);
    if (FPP_ERR_OK != ret)
       printf("FPP_CMD_IP_ROUTE[FPP_ACTION_DEREGISTER] failed: %d\n", ret);
   }
   cmd.id = htonl(222);
    ret = fci_write(cl, FPP_CMD_IP_ROUTE, sizeof(cmd), (void *)&cmd);
    if (FPP_ERR_OK != ret)
       printf("FPP_CMD_IP_ROUTE[FPP_ACTION_DEREGISTER] failed: %d\n", ret);
    }
}
```

8.2 fpp_cmd_ipv4_conntrack.c

```
Copyright 2020 NXP
\star NXP Confidential. This software is owned or controlled by NXP and may
\star only be used strictly in accordance with the applicable license terms
* \quad \text{found at $https://www.nxp.com/docs/en/disclaimer/LA\_OPT\_NXP\_SW.html.} \\
#include <stdio.h>
#include <stdlib.h>
#include <arpa/inet.h>
#include <errno.h>
#include "libfci.h"
#include "fpp.h"
#include "fpp_ext.h"
#include "fci_examples.h"
               Register two UPD connections to be fast-forwarded
* @details
             Add 2 routing table entries (conntracks). Traffic matching
              respective conntrack will be forwarded via physical interface
               given by matching route (fpp_rt_cmd_t.output_device) while its
               source MAC address will be replaced by MAC address of the output
               interface and destination MAC address will be replaced by the
               one defined by route (fpp_rt_cmd_t.dst_mac).
               In case of no hit, packet will be sent to default logical
               interface (to host). Host can configure slow-path routing using
               standard OS-provided mechanisms to route rest of traffic (e.g.
               ICMP).
* @param[in]
             cl The FCI client instance
void fci_router_register_ipv4_conntracks(FCI_CLIENT *cl)
   int ret;
   fpp_ct_cmd_t ct1 =
       /* New connection */
       .action = FPP_ACTION_REGISTER,
```



}

/* Source IP address: 11.41.48.100 */

```
.saddr = htonl(0x0b293064),
        /* Destination IP address: 12.41.48.100 */
        .daddr = htonl(0x0c293064),
        /* Source L4 port */
        .sport = htons(11),
        /* Destination L4 port */
        .dport = ht.ons(12).
        /\star Source IP address in reply direction. Equal to 'daddr' to disable
           replacement. */
        .saddr_reply = htonl(0x0c293064),
        /* Destination IP address in reply direction. Same as 'saddr' to
           disable replacement. */
        .daddr_reply = htonl(0x0b293064),
        /* Source L4 port in reply direction. Equal to 'dport' to disable
           replacement. */
        .sport_reply = htons(12),
        /\star~ Destination L4 port in reply direction. Equal to 'sport' to disable
           replacement.*/
        .dport_reply = htons(11),
        /* Protocol ID: UDP */
        .protocol = 17,
        /* Flags: Do not open reply connection */
        .flags = htons(CTCMD_FLAGS_REP_DISABLED),
        /\star Associated route (456=emac1). This route will be used to forward
           packets matching this tracked connection (SIP+DIP+SPORT+DPORT+PROTO).
           Route must exist. To create a route see the FPP_CMD_IP_ROUTE. */
        .route id = htonl(456).
    }:
   fpp_ct_cmd_t ct2 =
        .action = FPP_ACTION_REGISTER,
        /* Source IP address: 12.41.48.100 */
        .saddr = htonl(0x0c293064),
        /\star Destination IP address: 11.41.48.100 \star/
        .daddr = htonl(0x0b293064),
        .sport = htons(12),
        .dport = htons(11),
        .saddr_reply = htonl(0x0b293064),
        .daddr_reply = htonl(0x0c293064),
        .sport_reply = htons(11),
        .dport_reply = htons(12),
        .protocol = 17,
        .flags = htons(CTCMD_FLAGS_REP_DISABLED),
        .route id = htonl(123),
   };
    /* Register connection "ct1" */
   ret = fci_write(cl, FPP_CMD_IPV4_CONNTRACK, sizeof(ct1), (void *)&ct1);
    if (0 != ret)
    {
       printf("FPP_CMD_IPV4_CONNTRACK[FPP_ACTION_REGISTER] failed: %d\n", ret);
        return:
    /* Register connection "ct2" */
   ret = fci_write(cl, FPP_CMD_IPV4_CONNTRACK, sizeof(ct2), (void *)&ct2);
   if (0 != ret.)
       printf("FPP_CMD_IPV4_CONNTRACK[FPP_ACTION_REGISTER] failed: %d\n", ret);
        return:
   }
/*
* @brief
                Register two UPD connections to be fast-forwarded with NAT
* @details
               Add 2 routing table entries (conntracks). Traffic matching
                respective conntrack will be forwarded via physical interface
                given by matching route (fpp_rt_cmd_t.output_device) while its
                source MAC address will be replaced by MAC address of the output
                interface and destination MAC address will be replaced by the
                one defined by route (fpp_rt_cmd_t.dst_mac). Additionally, source
                and destination IP address will be replaced using '.daddr_reply'
                and '.saddr_reply' as well as source and destination port number
                will be replaced by '.dport_reply' and '.sport_reply' values.
```



```
In case of no hit, packet will be sent to default logical
                interface (to host). Host can configure slow-path routing using
                standard OS-provided mechanisms to route rest of traffic (e.g.
                ICMP).
               cl The FCI client instance
* @param[in]
void fci_router_register_ipv4_conntracks_nat(FCI_CLIENT *cl)
    fpp_ct_cmd_t ct1 =
        /* New connection */
        .action = FPP_ACTION_REGISTER,
        /* Source IP address: 11.41.48.100 */
        .saddr = htonl(0x0b293064),
        /* Destination IP address: 12.41.48.100 */
        .daddr = hton1(0x0c293064),
        /* Source L4 port */
        .sport = htons(11),
        /* Destination L4 port */
        .dport = htons(12),
        /\star Source IP address in reply direction. Destination IP address of
            routed packet will be replaced by this value (120.41.48.100). */
        .saddr_reply = htonl(0x78293064),
        /\star Destination IP address in reply direction. Source IP address of
            routed packet will be replaced by this value (110.41.48.100). \star/
        .daddr_reply = htonl(0x6e293064),
        /\star Source L4 port in reply direction. Destination port of routed packet
            will be replaced by this value. */
            .sport_reply = htons(120),
        /\star Destination L4 port in reply direction. Source port or routed packet
           will be replaced by this value. \star/
        .dport_reply = htons(110),
        /* Protocol ID: UDP */
        .protocol = 17,
        /* Flags: Do not open reply connection */
        .flags = htons(CTCMD FLAGS REP DISABLED),
        /\star Associated route (456=emac1). This route will be used to forward
            packets matching this tracked connection (SIP+DIP+SPORT+DPORT+PROTO).
            Route must exist. To create a route see the FPP_CMD_IP_ROUTE. \star/
        .route_id = htonl(456),
    };
    fpp_ct_cmd_t ct2 =
        .action = FPP ACTION REGISTER,
        /* Source IP address: 120.41.48.100 */
        .saddr = htonl(0x78293064),
        /* Destination IP address: 110.41.48.100 */
        .daddr = htonl(0x6e293064),
        .sport = htons(120),
        .dport = htons(110),
        .saddr_reply = htonl(0x0b293064),
        .daddr_reply = htonl(0x0c293064),
        .sport_reply = htons(11),
        .dport_reply = htons(12),
        .protocol = 17,
        .flags = htons(CTCMD_FLAGS_REP_DISABLED),
        .route_id = htonl(123)
    /* Register connection "ct1" */
    ret = fci_write(cl, FPP_CMD_IPV4_CONNTRACK, sizeof(ct1), (void *)&ct1);
    if (0 != ret)
    {
        printf("FPP_CMD_IPV4_CONNTRACK[FPP_ACTION_REGISTER] failed: %d\n", ret);
    /* Register connection "ct2" */
    ret = fci_write(cl, FPP_CMD_IPV4_CONNTRACK, sizeof(ct2), (void *)&ct2);
    if (0 != ret)
    {
       printf("FPP_CMD_IPV4_CONNTRACK[FPP_ACTION_REGISTER] failed: %d\n", ret);
       return:
    }
```



```
* @brief
               Register bi-directional UPD connection to be fast-forwarded
               Add 2 routing table entries with a single conntrack. Traffic
 * @details
               matching respective conntrack will be forwarded via physical
                interface given by matching route defined for both, the
               original as well as reply direction.
               In case of no hit, packet will be sent to default logical
                interface (to host). Host can configure slow-path routing using
                standard OS-provided mechanisms to route rest of traffic (e.g.
               cl The FCI client instance
* @param[in]
void fci_router_register_bd_ipv4_conntrack(FCI_CLIENT *cl)
    int ret;
   fpp_ct_cmd_t ct1 =
        /* New connection */
        .action = FPP_ACTION_REGISTER,
        /* Source IP address: 11.41.48.100 */
        .saddr = htonl(0x0b293064),
        /* Destination IP address: 12.41.48.100 */
        .daddr = hton1(0x0c293064),
        /* Source L4 port */
        .sport = htons(11),
        /* Destination L4 port */
        .dport = ht.ons(12).
        /* Source IP address in reply direction. Equal to 'daddr' to
           disable NAT */
        .saddr_reply = htonl(0x0c293064),
        /* Destination IP address in reply direction. Same as 'saddr' to
           disable NAT. */
        .daddr_reply = htonl(0x0b293064),
        /* Source L4 port in reply direction. Equal to 'dport' to disable
           replacement. */
        .sport_reply = htons(12),
        /* Destination L4 port in reply direction. Equal to 'sport' to disable
           replacement.*/
        .dport_reply = htons(11),
        /* Protocol ID: UDP */
        .protocol = 17,
        /* Flags: None. Create bi-directional connection. */
        .flags = htons(0).
        /\star Associated route (123=emac0, 456=emac1). This routes will be used to
           forward packets matching this tracked connection either in original
           or opposite, reply direction. Routes must exist. To create a route
           see the FPP_CMD_IP_ROUTE. */
        .route_id = htonl(456),
        .route_id_reply = htonl(123)
   /* Register connection "ct1" */
   ret = fci_write(cl, FPP_CMD_IPV4_CONNTRACK, sizeof(ct1), (void *)&ct1);
    if (0 != ret)
    {
       printf("FPP_CMD_IPV4_CONNTRACK[FPP_ACTION_REGISTER] failed: %d\n", ret);
   }
* @brief
               Configure IPv4 router
* @details
               Create routes and conntracks to fast-forward traffic between
                EMACO and EMAC1. Put both EMACs to Router mode and enable them.
* @param[in]
               cl The FCI client instance
void fci_setup_ipv4_router(FCI_CLIENT *cl)
   /* Reset the router */
   fci_router_reset(cl);
    /* Create routes */
   fci_router_register_ipv4_routes(cl);
    /* Create conntracks */
```



```
fci_router_register_ipv4_conntracks(cl);
    /* Set interface mode */
    fci_phy_if_set_mode(cl, "emac0", FPP_IF_OP_ROUTER);
fci_phy_if_set_mode(cl, "emac1", FPP_IF_OP_ROUTER);
    /\star Enable interfaces \star/
    fci_phy_if_enable(cl, "emac0");
    fci_phy_if_enable(cl, "emacl");
        Now traffic received via EMACO or EMAC1 and matching conntracks will be
        routed via interfaces defined by routes.
 * @brief
                Configure IPv4 router with NAT
 * @details
                Create routes and conntracks to fast-forward traffic between
                EMACO and EMAC1 and modify IP addresses and port numbers. Put
                both EMACs to Router mode and enable them.
               cl The FCI client instance
 * @param[in]
void fci_setup_ipv4_router_nat(FCI_CLIENT *cl)
    /* Reset the router */
    fci_router_reset(cl);
    /* Create routes */
    fci_router_register_ipv4_routes(cl);
    /* Create conntracks with NAT enabled */
    fci_router_register_ipv4_conntracks_nat(cl);
    /* Set interface mode */
    fci_phy_if_set_mode(cl, "emac0", FPP_IF_OP_ROUTER);
fci_phy_if_set_mode(cl, "emac1", FPP_IF_OP_ROUTER);
    /* Enable interfaces */
    fci_phy_if_enable(cl, "emac0");
    fci_phy_if_enable(cl, "emac1");
    /*
        Now traffic received via EMAC0 or EMAC1 and matching conntracks will be
        routed via interfaces defined by routes. Each routed packet will be
        modified in way that its source and destination IP address and source
        and destination port numbers will be replaced using configured values.
 * @brief
                Configure IPv4 router using bi-directional conntrack
                Create routes and conntrack to fast-forward traffic between
 * @details
                EMACO and EMAC1. Put both EMACs to Router mode and enable them.
 * @param[in] cl The FCI client instance
void fci_setup_ipv4_router_bd(FCI_CLIENT *cl)
    /* Reset the router */
    fci_router_reset(cl);
    /* Create routes */
    fci_router_register_ipv4_routes(cl);
    /* Create bi-directional conntrack */
    fci_router_register_bd_ipv4_conntrack(cl);
    /* Set interface mode */
    fci_phy_if_set_mode(cl, "emac0", FPP_IF_OP_ROUTER);
    fci_phy_if_set_mode(cl, "emac1", FPP_IF_OP_ROUTER);
    /* Enable interfaces */
    fci_phy_if_enable(cl, "emac0");
    fci_phy_if_enable(cl, "emac1");
        Now traffic received via EMACO or EMAC1 and matching conntrack in both
        directions will be routed via interfaces defined by routes.
}
```

8.3 fpp_cmd_ipv6_conntrack.c



```
\star NXP Confidential. This software is owned or controlled by NXP and may
\star only be used strictly in accordance with the applicable license terms
 * found at https://www.nxp.com/docs/en/disclaimer/LA_OPT_NXP_SW.html.
* ------ * /
#include <stdio.h>
#include <stdlib.h>
#include <arpa/inet.h>
#include <errno.h>
#include "libfci.h"
#include "fpp.h"
#include "fpp_ext.h"
#include "fci_examples.h"
               Register two UPD connections to be fast-forwarded
* @details
               Add 2 routing table entries (conntracks). Traffic matching
               respective conntrack will be forwarded via physical interface
               given by matching route (fpp_rt_cmd_t.output_device) while its
               source MAC address will be replaced by MAC address of the output
               interface and destination MAC address will be replaced by the
               one defined by route (fpp_rt_cmd_t.dst_mac).
               In case of no hit, packet will be sent to default logical
               interface (to host). Host can configure slow-path routing using
               standard OS-provided mechanisms to route rest of traffic (e.g.
              cl The FCI client instance
* @param[in]
void fci_router_register_ipv6_conntracks(FCI_CLIENT *cl)
    int ret;
   fpp_ct6_cmd_t ct1 =
       /* New connection */
       .action = FPP_ACTION_REGISTER,
       /* Source IP address: ::aaaa */
       .saddr[0] = htonl(0),
       .saddr[1] = htonl(0),
       .saddr[2] = htonl(0),
       .saddr[3] = htonl(0x0000aaaa),
       /* Destination IP address: ::bbbb */
       .daddr[0] = htonl(0),
       .daddr[1] = htonl(0),
       .daddr[2] = htonl(0),
       .daddr[3] = htonl(0x0000bbbb),
       /* Source L4 port */
       .sport = htons(10),
       /\star Destination L4 port \star/
        .dport = htons(11),
       /* Source IP address in reply direction. Equal to 'daddr' to disable
           replacement. */
        .saddr_reply[0] = htonl(0),
       .saddr_reply[1] = htonl(0),
        .saddr_reply[2] = htonl(0),
        .saddr_reply[3] = htonl(0x0000bbbb),
       /\star Destination IP address in reply direction. Same as 'saddr' to
           disable replacement. */
        .daddr_reply[0] = htonl(0),
       .daddr_reply[1] = htonl(0),
        .daddr_reply[2] = htonl(0),
        .daddr_reply[3] = htonl(0x0000aaaa),
       /\star Source L4 port in reply direction. Equal to 'dport' to disable
           replacement. */
        .sport_reply = htons(11),
        /* Destination L4 port in reply direction. Equal to 'sport' to disable
           replacement.*/
        .dport_reply = htons(10),
        /* Protocol ID: UDP */
       .protocol = 17,
       /\star Flags: Do not open reply connection \star/
        .flags = htons(CTCMD_FLAGS_REP_DISABLED),
       /* Associated route (222=emac1). This route will be used to forward
           packets matching this tracked connection (SIP+DIP+SPORT+DPORT+PROTO).
```



```
.route_id = htonl(222),
    fpp_ct6_cmd_t ct2 =
        .action = FPP_ACTION_REGISTER,
        /* Source IP address: ::bbbb */
        .saddr[0] = htonl(0),
        .saddr[1] = htonl(0),
        .saddr[2] = htonl(0),
        .saddr[3] = htonl(0x0000bbbb),
        /* Destination IP address: ::aaaa */
        .daddr[0] = htonl(0),
        .daddr[1] = htonl(0),
        .daddr[2] = htonl(0),
        .daddr[3] = htonl(0x0000aaaa),
        .sport = htons(11),
        .dport = htons(10),
        .saddr_reply[0] = htonl(0),
        .saddr_reply[1] = htonl(0),
        .saddr_reply[2] = htonl(0),
        .saddr_reply[3] = htonl(0x0000aaaa),
        .daddr_reply[0] = htonl(0),
        .daddr_reply[1] = htonl(0),
        .daddr_reply[2] = htonl(0),
        .daddr_reply[3] = htonl(0x0000bbbb),
        .sport_reply = htons(10),
        .dport_reply = htons(11),
        .protocol = 17,
        .flags = htons(CTCMD_FLAGS_REP_DISABLED),
        .route_id = htonl(111)
   };
    /* Register connection "ct1" */
   ret = fci_write(cl, FPP_CMD_IPV6_CONNTRACK, sizeof(ct1), (void *)&ct1);
   if (0 != ret)
    {
       printf("FPP_CMD_IPV6_CONNTRACK[FPP_ACTION_REGISTER] failed: %d\n", ret);
       return:
    /* Register connection "ct2" */
   ret = fci_write(cl, FPP_CMD_IPV6_CONNTRACK, sizeof(ct2), (void *)&ct2);
   if (0 != ret)
       printf("FPP_CMD_IPV6_CONNTRACK[FPP_ACTION_REGISTER] failed: %d\n", ret);
       return:
    }
}
* @brief
                Register bi-directional UPD connection to be fast-forwarded
* @details
               Add 2 routing table entries with a single conntrack. Traffic
               matching respective conntrack will be forwarded via physical
                interface given by matching route defined for both, the
                original as well as reply direction. Traffic matching
                respective direction will be forwarded via physical interface
                given by matching route (fpp_rt_cmd_t.output_device) while its
                source MAC address will be replaced by MAC address of the output
                interface and destination MAC address will be replaced by the
               one defined by route (fpp_rt_cmd_t.dst_mac).
               In case of no hit, packet will be sent to default logical
                interface (to host). Host can configure slow-path routing using
               standard OS-provided mechanisms to route rest of traffic (e.g.
               ICMP).
              cl The FCI client instance
* @param[in]
void fci_router_register_bd_ipv6_conntrack(FCI_CLIENT *cl)
   fpp_ct6_cmd_t ct1 =
        /* New connection */
        .action = FPP_ACTION_REGISTER,
        /* Source IP address: ::aaaa */
```

Route must exist. To create a route see the FPP_CMD_IP_ROUTE. */



.saddr[0] = htonl(0),

```
.saddr[1] = htonl(0),
        .saddr[2] = htonl(0),
        .saddr[3] = htonl(0x0000aaaa),
        /* Destination IP address: ::bbbb */
        .daddr[0] = htonl(0),
        .daddr[1] = htonl(0),
        .daddr[2] = htonl(0),
        .daddr[3] = htonl(0x0000bbbb),
        /* Source L4 port */
        .sport = htons(10),
        /* Destination L4 port */
        .dport = htons(11),
        /* Source IP address in reply direction. Same as 'saddr' to
            disable replacement. */
        .saddr_reply[0] = htonl(0),
        .saddr_reply[1] = htonl(0),
        .saddr_reply[2] = htonl(0),
        .saddr_reply[3] = htonl(0x0000bbbb),
        /* Destination IP address in reply direction. Same as 'saddr' to
            disable replacement. */
        .daddr_reply[0] = htonl(0),
        .daddr_reply[1] = htonl(0),
        .daddr_reply[2] = htonl(0),
        .daddr_reply[3] = htonl(0x0000aaaa),
        /\star~ Source L4 port in reply direction. Equal to 'dport' to disable
            replacement. */
        .sport_reply = htons(11),
        /\star Destination L4 port in reply direction. Equal to 'dport' to disable
            replacement. */
        .dport_reply = htons(10),
        /* Protocol ID: UDP */
        .protocol = 17,
        /* Flags: Create connection also in reply direction */
        .flags = htons(0),
        /\star Associated route (111=emac0, 222=emac1). This route will be used to forward
            packets matching this tracked connection (SIP+DIP+SPORT+DPORT+PROTO).
            Route must exist. To create a route see the FPP_CMD_IP_ROUTE. */
        .route_id = htonl(222),
        .route_id_reply = htonl(111),
    /* Register connection "ct1" */
   ret = fci_write(cl, FPP_CMD_IPV6_CONNTRACK, sizeof(ct1), (void *)&ct1);
    if (0 != ret)
    {
       printf("FPP_CMD_IPV6_CONNTRACK[FPP_ACTION_REGISTER] failed: %d\n", ret);
    }
* @brief
               Configure IPv6 router
                Create routes and conntracks to fast-forward traffic between
* @details
                EMACO and EMAC1. Put both EMACs to Router mode and enable them.
* @param[in]
               cl The FCI client instance
void fci_setup_ipv6_router(FCI_CLIENT *cl)
    /* Reset the router */
    fci_router_reset(cl);
    /* Create routes */
    fci_router_register_ipv6_routes(cl);
    /* Create conntracks */
    fci_router_register_ipv6_conntracks(cl);
    /* Set interface mode */
    fci_phy_if_set_mode(cl, "emac0", FPP_IF_OP_ROUTER);
    fci_phy_if_set_mode(cl, "emac1", FPP_IF_OP_ROUTER);
    /* Enable interfaces */
    fci_phy_if_enable(cl, "emac0");
    fci_phy_if_enable(cl, "emac1");
        Now traffic received via EMACO or EMAC1 and matching conntracks will be
        routed via interfaces defined by routes.
```



```
}
 * @brief
                Configure IPv6 router using bi-directional conntrack
                 Create routes and conntrack to fast-forward traffic between
                EMACO and EMAC1 and modify IP addresses and port numbers. Put
                both EMACs to Router mode and enable them.
 * @param[in] cl The FCI client instance
void fci_setup_ipv6_router_bd(FCI_CLIENT *cl)
    /* Reset the router */
    fci_router_reset(cl);
    /* Create routes */
    fci_router_register_ipv6_routes(cl);
    /* Create bi-directional conntrack */
    fci_router_register_bd_ipv6_conntrack(cl);
    /* Set interface mode */
    fci_phy_if_set_mode(cl, "emac0", FPP_IF_OP_ROUTER);
fci_phy_if_set_mode(cl, "emac1", FPP_IF_OP_ROUTER);
    /* Enable interfaces */
    fci_phy_if_enable(cl, "emac0");
fci_phy_if_enable(cl, "emac1");
        Now traffic received via EMACO or EMAC1 and matching conntracks will be
        routed via interfaces defined by routes. Each routed packet will be
        modified in way that its source and destination IP address and source
        and destination port numbers will be replaced using configured values.
}
```

8.4 fpp_cmd_log_if.c

```
* Copyright 2020 NXP
\star NXP Confidential. This software is owned or controlled by NXP and may
\star only be used strictly in accordance with the applicable license terms
* found at https://www.nxp.com/docs/en/disclaimer/LA_OPT_NXP_SW.html.
* ========== */
#include <stdio.h>
#include <stdlib.h>
#include <arpa/inet.h>
#include <errno.h>
#include <string.h>
#include "libfci.h"
#include "fpp.h"
#include "fpp_ext.h"
#include "fci_examples.h"
             Print all logical interfaces
   @param[in] cl The FCI client instance
void fci_log_if_print_all(FCI_CLIENT *cl)
   fpp_log_if_cmd_t rep, cmd;
   unsigned short replen;
   int ret;
   /\star Get exclusive access to interfaces \star/
   if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL)))
       printf("FPP_CMD_IF_LOCK_SESSION failed: %d\n", ret);
   }
   else
       /* Get all interfaces */
       cmd.action = FPP_ACTION_QUERY;
       ret = fci_query(cl, FPP_CMD_LOG_IF, sizeof(cmd), (unsigned short *)&cmd,
                  &replen, (unsigned short *)&rep);
       while (FPP_ERR_OK == ret)
```



```
printf("%02d %s (%-5s): Flags: 0x%04x, Egress: 0x%08x, MatchRules: 0x%08x\n",
                        ntohl(rep.id), rep.name, rep.parent_name, rep.flags,
                                ntohl(rep.egress), ntohl(rep.match));
            cmd.action = FPP_ACTION_QUERY_CONT;
            ret = fci_query(cl, FPP_CMD_LOG_IF, sizeof(cmd), (unsigned short *)&cmd,
                        &replen, (unsigned short *)&rep);
        /* Unlock interfaces */
        if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL)))
            printf("FPP_CMD_IF_UNLOCK_SESSION failed: %d\n", ret);
   }
}
* @brief
                Create IPC channel
* @details
                Add logical interface on hif0 to send certain traffic to hif2. This allows
                setup of IPC channel between two host cores. Packets transmitted by host CPU
                via HIF channel 0 will be classified and in case that they contain destination
                IP address equal to 14.41.48.1 OR VLAN tag equal to 123, they will be
                forwarded to HIF channel 2, otherwise they will follow the default path.
                In case the host sitting on hif2 would require similar packet distribution
                to hif0, another logical interface needs to be created on hif2.
                This example utilizes the Flexible Router operation mode of hif0.
                cl The FCI client instance
* @param[in]
void fci_add_ipc_log_if(FCI_CLIENT *cl)
    fpp_log_if_cmd_t cmd = {0};
    int ret;
    int dst_id = fci_phy_if_get_id(cl, "hif2");
    if (dst_id < 0)
        printf("Could not get destination interface ID\n");
        return:
    /* Get exclusive access to interfaces */
    if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL)))
    {
       printf("FPP_CMD_IF_LOCK_SESSION failed: %d\n", ret);
    }
    else
        /* Add logical interface to 'src' physical interface */
        cmd.action = FPP_ACTION_REGISTER;
        strncpy(cmd.name, "ipc0", sizeof(cmd.name)-1);
strncpy(cmd.parent_name, "hif0", sizeof(cmd.parent_name)-1);
        ret = fci_write(cl, FPP_CMD_LOG_IF, sizeof(cmd), (unsigned short *)&cmd);
        if (FPP_ERR_OK != ret)
            printf("ipc0 could not be created: %d\n", ret);
        }
        else
        {
            /* Configure the new interface */
            cmd.action = FPP_ACTION_UPDATE;
            cmd.match = htonl(FPP_IF_MATCH_DIP|FPP_IF_MATCH_VLAN);
            cmd.arguments.v4.dip = htonl(0x0e293001); /* 14.41.48.1 */
            cmd.arguments.vlan = htons(123);
            cmd.flags = FPP_IF_ENABLED|FPP_IF_MATCH_OR;
            cmd.egress = htonl(1 « dst_id);
            ret = fci_write(cl, FPP_CMD_LOG_IF, sizeof(cmd), (unsigned short *)&cmd);
            if (FPP_ERR_OK != ret)
            {
                printf("Can't update: %d\n", ret);
           Unlock interfaces */
          (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL)))
            printf("FPP_CMD_IF_UNLOCK_SESSION failed: %d\n", ret);
```



```
/\star Configure pfe0 to start using logical interface-based
        classification of ingress traffic (Flexible Router) */
    fci_phy_if_set_mode(cl, "hif0", FPP_IF_OP_FLEXIBLE_ROUTER);
    /\star Enable the hif0 and hif2 \star/
    fci_phy_if_enable(cl, "hif0");
    fci_phy_if_enable(cl, "hif2");
}
               Delete a logical interface
* @param[in] cl The FCI client instance
* @param[in] name Name of the logical interface to remove
void fci_log_if_del(FCI_CLIENT *cl, char *name)
    fpp_log_if_cmd_t cmd = {0};
    int ret;
    /* Get exclusive access to interfaces */
    if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL)))
        printf("FPP_CMD_IF_LOCK_SESSION failed: %d\n", ret);
    }
    else
        /* Remove logical interface */
        cmd.action = FPP_ACTION_DEREGISTER;
        strncpy(cmd.name, name, sizeof(cmd.name)-1);
        ret = fci_write(cl, FPP_CMD_LOG_IF, sizeof(cmd), (unsigned short *)&cmd);
        if (FPP_ERR_OK != ret)
            printf("ipc0 could not be deleted: %d\n", ret);
        /* Unlock interfaces */
        if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL)))
            printf("FPP_CMD_IF_UNLOCK_SESSION failed: %d\n", ret);
    }
}
```

8.5 fpp_cmd_phy_if.c

```
______
* Copyright 2020 NXP
\star NXP Confidential. This software is owned or controlled by NXP and may
* only be used strictly in accordance with the applicable license terms
* found at https://www.nxp.com/docs/en/disclaimer/LA_OPT_NXP_SW.html.
#include <stdio.h>
#include <stdlib.h>
#include <arpa/inet.h>
#include <errno.h>
#include <string.h>
#include "libfci.h"
#include "fpp.h"
#include "fpp_ext.h"
#include "fci_examples.h"
* @brief
             Get QUERY response by interface name
* @param[in] cl The FCI client instance
* @param[in] name Physical interface name
* @return
             1 if success, zero otherwise
int fci_phy_if_get_by_name(FCI_CLIENT *cl, char *name, fpp_phy_if_cmd_t *phy_if)
   fpp_phy_if_cmd_t rep = {0}, cmd = {0};
```



```
unsigned short replen;
   int ret, retval = 0;
   /\star~ Get exclusive access to interfaces \star/
    if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL)))
       printf("FPP_CMD_IF_LOCK_SESSION failed: %d\n", ret);
   }
   else
    {
        /* Get all interfaces */
       cmd.action = FPP_ACTION_QUERY;
       ret = fci_query(cl, FPP_CMD_PHY_IF, sizeof(cmd), (unsigned short *)&cmd,
       &replen, (unsigned short *)&rep);
while (FPP_ERR_OK == ret)
        {
           if (0 == strcmp(name, rep.name))
               memcpy(phy_if, &rep, sizeof(*phy_if));
               retval = 1;
               break;
            }
           else
            {
               cmd.action = FPP_ACTION_QUERY_CONT;
               ret = fci_query(cl, FPP_CMD_PHY_IF, sizeof(cmd), (unsigned short *)&cmd,
                           &replen, (unsigned short *)&rep);
            }
        /* Unlock interfaces */
       if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL)))
           printf("FPP_CMD_IF_UNLOCK_SESSION failed: %d\n", ret);
   return retval:
}
void fci_phy_if_enable(FCI_CLIENT *cl, char *name)
    fpp_phy_if_cmd_t cmd;
   int ret:
   if (fci_phy_if_get_by_name(cl, name, &cmd))
    {
        /\star Get exclusive access to interfaces \star/
        if (FPP_ERR_OK != fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL))
        {
           printf("FPP_CMD_IF_LOCK_SESSION failed\n");
       else
        {
            cmd.action = FPP_ACTION_UPDATE;
           cmd.flags |= FPP_IF_ENABLED;
            if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_PHY_IF, sizeof(cmd),
                                        (unsigned short *) & cmd)))
               printf("%s enable failed: %d\n", name, ret);
           }
        /* Unlock interfaces */
        if (FPP_ERR_OK != fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL))
           printf("FPP_CMD_IF_UNLOCK_SESSION failed\n");
   }
   else
       printf("%s not found\n", name);
}
```



```
* @brief
              Disable physical interface
 * @param[in]
              name Physical interface name
void fci_phy_if_disable(FCI_CLIENT *cl, char *name)
    fpp_phy_if_cmd_t cmd;
   int ret;
    if (fci_phy_if_get_by_name(cl, name, &cmd))
        cmd.action = FPP_ACTION_UPDATE;
       cmd.flags &= ~FPP_IF_ENABLED;
        /\star Get exclusive access to interfaces \star/
        if (FPP_ERR_OK != fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL))
        {
           printf("FPP_CMD_IF_LOCK_SESSION failed\n");
        }
       else
           if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_PHY_IF, sizeof(cmd),
                                            (unsigned short *)&cmd)))
               printf("%s disable failed: %d\n", name, ret);
        }
        /* Unlock interfaces */
        if (FPP_ERR_OK != fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL))
           printf("FPP_CMD_IF_UNLOCK_SESSION failed\n");
    }
    else
    {
       printf("%s not found\n", name);
}
/*
               Print all physical interfaces
 * @param[in] The FCI client instance
void fci_phy_if_print_all(FCI_CLIENT *cl)
    fpp_phy_if_cmd_t rep = {0}, cmd = {0};
   unsigned short replen;
    int ret;
    /\star Get exclusive access to interfaces \star/
    if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL)))
       printf("FPP_CMD_IF_LOCK_SESSION failed: %d\n", ret);
    }
    else
    {
        /* Get all interfaces */
        cmd.action = FPP_ACTION_QUERY;
        ret = fci_query(cl, FPP_CMD_PHY_IF, sizeof(cmd), (unsigned short *)&cmd,
                   &replen, (unsigned short *)&rep);
        while (FPP_ERR_OK == ret)
           printf("%02d %-5s: Mode: 0x%x, Flags: 0x%04x\n",
                      ntohl(rep.id), rep.name, rep.mode, rep.flags);
           cmd.action = FPP_ACTION_QUERY_CONT;
           ret = fci_query(cl, FPP_CMD_PHY_IF, sizeof(cmd), (unsigned short *)&cmd,
                       &replen, (unsigned short *)&rep);
    /* Unlock interfaces */
    if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL)))
    {
        printf("FPP_CMD_IF_UNLOCK_SESSION failed: %d\n", ret);
```



```
* \operatorname{@param[in]} name Name of physical interface
              Physical interface ID (in host byte order) or -1 if failed.
 * @return
int fci_phy_if_get_id(FCI_CLIENT *cl, char *name)
   fpp_phy_if_cmd_t rep = {0};
   int ret;
   /* Get reply data by name */
   if (fci_phy_if_get_by_name(cl, name, &rep))
       ret = ntohl(rep.id);
   }
   else
   {
       ret = -1;
   return ret;
}
* @param[in] mode New operation mode to be set
void fci_phy_if_set_mode(FCI_CLIENT *cl, char *name, fpp_phy_if_op_mode_t mode)
   fpp_phy_if_cmd_t rep;
   int ret;
   /* Get interface reply by name */
   if (fci_phy_if_get_by_name(cl, name, &rep))
       /* Get exclusive access to interfaces */
       if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_LOCK_SESSION, 0, NULL)))
           printf("FPP_CMD_IF_LOCK_SESSION failed: %d\n", ret);
       }
       else
       {
           /\star Change the mode \star/
           rep.action = FPP_ACTION_UPDATE;
           rep.mode = mode;
           if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_PHY_IF,
                                     sizeof(rep), (unsigned short *)&rep)))
              printf("Mode change failed: %d\n", ret);
           /* Unlock interfaces */
           if (FPP_ERR_OK != (ret = fci_write(cl, FPP_CMD_IF_UNLOCK_SESSION, 0, NULL)))
               printf("FPP_CMD_IF_UNLOCK_SESSION failed: %d\n", ret);
   }
   else
       printf("%s not found\n", name);
}
```

8.6 fpp_cmd_qos_queue.c

2019-2020 NXP Public 122



```
#include <stdio.h>
#include <stdlib.h>
#include <arpa/inet.h>
#include <errno.h>
#include <string.h>
#include "libfci.h"
#include "fpp.h"
#include "fpp_ext.h"
#include "fci_examples.h"
/*
* @brief
               Get queue properties
* @param[in] cl The FCI client instance
* @param[in]
              phy_if Name of physical interface containing the queue
* @param[in]
               id ID of the queue to get. There can be multiple queue instances
                  associated with a physical interface and this index allows to
                  select a particular one.
* @param[out] queue The query response structure where the shaper properties will be
                   written.
               1 if success, 0 otherwise
* @return
int fci_qos_queue_get(FCI_CLIENT *cl, char *phy_if, uint8_t id, fpp_qos_queue_cmd_t *queue)
   fpp_qos_queue_cmd_t cmd;
   unsigned short replen = sizeof(*queue);
   int ret;
   cmd.action = FPP_ACTION_QUERY;
   strncpy(cmd.if_name, phy_if, sizeof(cmd.if_name)-1);
   cmd.id = id:
   ret = fci_query(cl, FPP_CMD_QOS_QUEUE, sizeof(cmd), (unsigned short *)&cmd,
           &replen, (unsigned short *)queue);
   if (FPP_ERR_OK != ret)
       printf("FPP_CMD_QOS_QUEUE[FPP_ACTION_QUERY] failed: %d\n", ret);
        return 0;
   return 1;
               Print queue properties
* @brief
* @param[in]
              cl The FCI client instance
              phy_if Name of physical interface containing the queue
* @param[in]
               id ID of the queue to get. There can be multiple queue instances
* @param[in]
                  associated with a physical interface and this index allows to
                  select a particular one.
void fci_queue_print(FCI_CLIENT *cl, char *phy_if, uint8_t id)
    fpp_qos_queue_cmd_t queue;
   static const char *modes[] = {"Disabled", "Default", "Tail Drop", "WRED"};
   int ii = OU;
    /* Get queue properties into "queue" */
   if (0 == fci_qos_queue_get(cl, phy_if, id, &queue))
    {
       printf("[%s] Queue %d not found\n", phy_if, id);
       return:
   }
   else
       printf("[%s] Queue %d\n", phy_if, id);
       printf(" Mode : %s\n", modes[queue.mode]);
       if (queue.mode != 0)
        {
           printf(" Min : %d\n", ntohl(queue.min));
           printf(" Max : %d\n", ntohl(queue.max));
            if (queue.mode == 3)
                while (queue.zprob[ii] != 255)
```



```
printf(" Zone[%d].Probability: %d%\n", ii, queue.zprob[ii]);
                    ii++;
               }
           }
       }
   }
}
* @brief
               Set queue mode
* @param[in]
               cl The FCI client instance
* @param[in]
               phy_if Name of physical interface containing the queue
               id ID of the queue to get. There can be multiple queue instances
* @param[in]
                  associated with a physical interface and this index allows to
                   select a particular one.
* @param[in]
               mode Queue mode. See the fpp_qos_queue_cmd_t.
               \min Minimum threshold. See the fpp_qos_queue_cmd_t.
* @param[in]
* @param[in]
               max Maximum threshold. See the fpp_qos_queue_cmd_t.
               1 if success, 0 otherwise
* @return
* /
int fci_queue_set_mode(FCI_CLIENT *cl, char *phy_if, uint8_t id, uint8_t mode, uint32_t min,
      uint32_t max)
   fpp_qos_queue_cmd_t cmd = {0};
   int ret;
   cmd.action = FPP_ACTION_UPDATE;
   strncpy(cmd.if_name, phy_if, sizeof(cmd.if_name)-1);
   cmd.id = id;
   cmd.mode = mode:
   cmd.min = htonl(min);
   cmd.max = htonl(max);
   memset(cmd.zprob, 0, sizeof(cmd.zprob));
   ret = fci_write(cl, FPP_CMD_QOS_QUEUE, sizeof(cmd), (unsigned short *)&cmd);
   if (FPP_ERR_OK != ret)
       printf("FPP_CMD_QOS_QUEUE[FPP_ACTION_UPDATE] failed: %d\n", ret);
       return 0:
   }
   else
    {
       return 1;
* @brief
              Set WRED zone probability
* @param[in] cl The FCI client instance
* @param[in]
              phy_if Name of physical interface containing the queue
* @param[in]
               id ID of the queue to get. There can be multiple queue instances
                  associated with a physical interface and this index allows to
                  select a particular one.
* @param[in]
               zone WRED zone index. See @ref egress_qos for number of zones per queue.
* @param[in]
               prob New WRED zone drop probability in [%]
               1 if success, 0 otherwise
* @return
int fci_queue_set_wred_zone_probability(FCI_CLIENT *cl, char *phy_if, uint8_t id, uint8_t
      zone, uint8_t prob)
   fpp_qos_queue_cmd_t queue;
   int ret;
   if (zone >= 32)
    {
       return 0;
   }
    if (0 == fci_qos_queue_get(cl, phy_if, id, &queue))
    {
        return 0;
   }
   else
        queue.action = FPP_ACTION_UPDATE;
        queue.zprob[zone] = prob;
```



```
ret = fci_write(cl, FPP_CMD_QOS_QUEUE, sizeof(queue), (unsigned short *)&queue);
if (FPP_ERR_OK != ret)
{
    printf("FPP_CMD_QOS_QUEUE[FPP_ACTION_UPDATE] failed: %d\n", ret);
    return 0;
}
else
{
    return 1;
}
}
```

8.7 fpp_cmd_qos_scheduler.c

```
* Copyright 2020 NXP
\star NXP Confidential. This software is owned or controlled by NXP and may
\star only be used strictly in accordance with the applicable license terms
  found at https://www.nxp.com/docs/en/disclaimer/LA_OPT_NXP_SW.html.
+ ==========+ +/
#include <stdio.h>
#include <stdlib.h>
#include <arpa/inet.h>
#include <errno.h>
#include <string.h>
#include "libfci.h"
#include "fpp.h"
#include "fpp_ext.h"
#include "fci_examples.h"
* @brief
              Get scheduler properties
* @param[in] cl The FCI client instance
\star @param[in] \; phy_if Name of physical interface containing the scheduler
              id ID of the scheduler to get. There can be multiple scheduler instances
                associated with a physical interface and this index allows to select
                  a particular one.
\star @param[out] sch The query response structure where the scheduler properties will be
                  written.
             1 if success, 0 otherwise
int fci_qos_scheduler_get(FCI_CLIENT *cl, char *phy_if, uint8_t id, fpp_qos_scheduler_cmd_t
   fpp_qos_scheduler_cmd_t cmd;
   unsigned short replen = sizeof(*sch);
   int ret:
   cmd.action = FPP_ACTION_QUERY;
   strncpy(cmd.if_name, phy_if, sizeof(cmd.if_name)-1);
   cmd.id = id;
   ret = fci_query(cl, FPP_CMD_QOS_SCHEDULER, sizeof(cmd), (unsigned short *)&cmd,
           &replen, (unsigned short *)sch);
   if (FPP_ERR_OK != ret)
       printf("FPP_CMD_QOS_SCHEDULER[FPP_ACTION_QUERY] failed: %d\n", ret);
   return 1;
* @brief
              Print scheduler properties
             cl The FCI client instance
* @param[in]
* @param[in]
              phy_if Name of physical interface containing the scheduler
              id ID of the scheduler to get. There can be multiple scheduler instances
* @param[in]
```



```
associated with a physical interface and this index allows to select
                   a particular one.
void fci_qos_scheduler_print(FCI_CLIENT *cl, char *phy_if, uint8_t id)
    fpp_qos_scheduler_cmd_t sch;
    static const char *modes[] = {"Disabled", "Data Rate", "Packet Rate"};
    static const char *algos[] = {"PQ", "DWRR", "RR", "WRR"};
    /\star Get scheduler properties into "sch" \star/
    if (0 == fci_qos_scheduler_get(cl, phy_if, id, &sch))
    {
       printf("[%s] Scheduler %d not found\n", phy_if, id);
       return;
    }
    else
        printf("[%s] Scheduler %d (%s/%s)\n",
                phy_if, id, algos[sch.algo], modes[sch.mode]);
        for (ii=0U; ii<32U; ii++)</pre>
            if (ntohl(sch.input_en) & (1U « ii))
            {
                printf(" Input %02d: Source: %d, Weight: %d\n",
                        ii, sch.input_src[ii], ntohl(sch.input_w[ii]));
            }
    }
    return;
}
* @brief
               Change scheduler algorithm
* @param[in]
               cl The FCI client instance
* @param[in]
               phy_if Name of physical interface containing the scheduler
               \operatorname{id} ID of the scheduler to get. There can be multiple scheduler instances
* @param[in]
                  associated with a physical interface and this index allows to select
                   a particular one.
* @param[in]
              algo The new algorithm value. See the fpp_qos_scheduler_cmd_t.
* @return
               1 if success, 0 otherwise
int fci_qos_scheduler_set_algo(FCI_CLIENT *cl, char *phy_if, uint8_t id, uint8_t algo)
    fpp_qos_scheduler_cmd_t sch;
   int ret, retval = 0;
    /* Get scheduler properties into "sch" */
    if (0 == fci_qos_scheduler_get(cl, phy_if, id, &sch))
    {
        retval = 0;
    }
   else
    {
        /\star Modify the response to form UPDATE command \star/
        sch.action = FPP_ACTION_UPDATE;
       sch.algo = algo;
        ret = fci_write(cl, FPP_CMD_QOS_SCHEDULER, sizeof(sch), (unsigned short *)&sch);
        if (FPP_ERR_OK != ret)
        {
            printf("FPP_CMD_QOS_SCHEDULER[FPP_ACTION_UPDATE] failed: %d\n", ret);
            retval = 0;
        }
        else
        {
            retval = 1;
    }
    return retval;
```

Set example topology 1

* @brief



```
* @details
               Function will create following QoS configuration:
* @verbatim
                          (WRR)
                 Q0--->| 0
                                            SCH1
                 01--->| 1
                                            (PQ)
                 Q2--->| 2
                 Q3--->| 3
                                        ->| 0
                 Q4--->| 4
                                         | 1
                                         | 2
                       1 7
                                         | 3
                                   Q6--->| 6
                                   07--->| 7
  @endverbatim
phy_if Name of physical interface to be configured
* @param[in]
* @return
               1 if success, 0 otherwise
int fci_qos_scheduler_set_topo1(FCI_CLIENT *cl, char *phy_if)
   fpp_qos_scheduler_cmd_t sch;
   int ret;
   /* Scheduler 0 */
   ret = fci_qos_scheduler_get(cl, phy_if, 0U, &sch);
   if (0 == ret)
    {
       return 0;
    }
   else
    {
       sch.action = FPP_ACTION_UPDATE;
       sch.mode = 2U;
       sch.algo = 3U;
       sch.input_en = htonl(0x1fU);
       sch.input_src[0] = 0U;
       sch.input_src[1] = 1U;
       sch.input_src[2] = 2U;
       sch.input_src[3] = 3U;
       sch.input_src[4] = 4U;
       sch.input_w[0] = htonl(1U);
       sch.input_w[1] = htonl(10U);
       sch.input_w[2] = htonl(100U);
       sch.input_w[3] = htonl(500U);
       sch.input_w[4] = htonl(200U);
       /* Set new Scheduler 0 configuration */
       ret = fci_write(cl, FPP_CMD_QOS_SCHEDULER, sizeof(sch), (unsigned short *)&sch);
       if (FPP ERR OK != ret)
       {
           printf("FPP_CMD_QOS_SCHEDULER[FPP_ACTION_UPDATE] failed: %d\n", ret);
           return 0;
   }
    /* Scheduler 1 */
   ret = fci_qos_scheduler_get(cl, phy_if, 1U, &sch);
   if (0 == ret)
    {
       return 0;
   }
   else
    {
       sch.action = FPP_ACTION_UPDATE;
       sch.mode = 1U;
       sch.algo = OU;
       sch.input_en = htonl((1U«0)|(1U«6)|(1U«7));
       sch.input_src[0] = 8U;
       sch.input_src[6] = 6U;
```



```
sch.input_src[7] = 7U;
        /\star Set new Scheduler 1 configuration \star/
        ret = fci_write(cl, FPP_CMD_QOS_SCHEDULER, sizeof(sch), (unsigned short *)&sch);
        if (FPP_ERR_OK != ret)
            printf("FPP_CMD_QOS_SCHEDULER[FPP_ACTION_UPDATE] failed: %d\n", ret);
            return 0:
   }
    return 1;
}
* @brief
              Set example topology 2
* @details
               Function will create following QoS configuration:
* @verbatim
                           (WRR)
                  00--->| 0
                                                   SCH1
                  Q1--->| 1
                                                   (PO)
                  Q2--->| 2
                  03--->| 3
                                  +--->SHP0--->| 0
                  Q4--->| 4
                                              | 1
                        | ...
| 7
                                                | 2
                                                         +--->SHP2--->
                                                1 3
                                                | ...
                                  06---SHP1--->| 6
                                  Q7---->| 7
  @endverbatim
* @param[in] cl The FCI client instance
* @param[in] phy_if Name of physical interface to be configured
               1 if success, 0 otherwise
* @return
int fci_qos_scheduler_set_topo2(FCI_CLIENT *cl, char *phy_if)
   int ret;
    ret = fci_qos_scheduler_set_topo1(cl, phy_if);
    if (0 == ret)
    {
        return 0;
   }
   else
    {
        /* Add Shaper 0:
             - TX Rate : 500Mbps
               - Idle slope: 50Mbps
- Max credit: 1522
                - Min credit: -1522
        */
        ret = fci_shaper_enable(cl, phy_if, OU, true, 50000000U, 1522, -1522, 1U);
        if (0 == ret)
        {
            return 0;
        /* Add Shaper 1:
             - TX Rate : 500Mbps
- Idle slope: 100Mbps
                - Max credit: 1522
                - Min credit: -1522
         */
        ret = fci_shaper_enable(cl, phy_if, 1U, true, 100000000U, 1522, -1522, 7U);
        if (0 == ret)
        {
            return 0;
        }
        /* Add Shaper 2:
                - TX Rate : 1Gbps
```



8.8 fpp_cmd_qos_shaper.c

```
* Copyright 2020 NXP
\star NXP Confidential. This software is owned or controlled by NXP and may
\star only be used strictly in accordance with the applicable license terms
  found at https://www.nxp.com/docs/en/disclaimer/LA_OPT_NXP_SW.html.
+ ==========+ +/
#include <stdio.h>
#include <stdlib.h>
#include <arpa/inet.h>
#include <errno.h>
#include <string.h>
#include "libfci.h"
#include "fpp.h"
#include "fpp_ext.h"
#include "fci_examples.h"
* @brief
              Get shaper properties
* @param[in] cl The FCI client instance
* @param[in]
             phy_if Name of physical interface containing the shaper
              id ID of the shaper to get. There can be multiple shaper instances
                associated with a physical interface and this index allows to select
                  a particular one.
\star @param[out] shp The query response structure where the shaper properties will be
                  written.
* @return
             1 if success, 0 otherwise
int fci_qos_shaper_get(FCI_CLIENT *cl, char *phy_if, uint8_t id, fpp_qos_shaper_cmd_t *shp)
   fpp_qos_shaper_cmd_t cmd;
   unsigned short replen = sizeof(*shp);
   int ret;
   cmd.action = FPP_ACTION_QUERY;
   strncpy(cmd.if_name, phy_if, sizeof(cmd.if_name)-1);
   cmd.id = id;
   ret = fci_query(cl, FPP_CMD_QOS_SHAPER, sizeof(cmd), (unsigned short *)&cmd,
           &replen, (unsigned short *)shp);
   if (FPP_ERR_OK != ret)
       printf("FPP_CMD_QOS_SHAPER[FPP_ACTION_QUERY] failed: %d\n", ret);
       return 0;
   return 1;
* @brief
              Print shaper properties
* @param[in] cl The FCI client instance
              phy_if Name of physical interface containing the shaper
* @param[in]
              id ID of the shaper to get. There can be multiple shaper instances
                  associated with a physical interface and this index allows to select
```



```
a particular one.
void fci_shaper_print(FCI_CLIENT *cl, char *phy_if, uint8_t id)
    fpp_qos_shaper_cmd_t shp;
    static const char *modes[] = {"Disabled", "Data Rate", "Packet Rate"};
    /* Get shaper properties into "shp" */
    if (0 == fci_qos_shaper_get(cl, phy_if, id, &shp))
        printf("[%s] Shaper %d not found\n", phy_if, id);
       return:
    }
    else
    {
        printf("[%s] Shaper %d\n", phy_if, id);
       printf(" Mode
                            : %s\n", modes[shp.mode]);
        if (shp.mode != 0)
            printf(" Position : %d\n", shp.position);
            printf(" Idle Slope: %d\n", ntohl(shp.isl));
            printf(" MAX Credit: %d\n", ntohl(shp.max_credit));
printf(" MIN Credit: %d\n", ntohl(shp.min_credit));
    }
}
* @brief
               Enable shaper and connect it at given position
               cl The FCI client instance
* @param[in]
* @param[in]
                phy_if Name of physical interface containing the shaper
               id ID of the shaper to get. There can be multiple shaper instances
* @param[in]
                   associated with a physical interface and this index allows to select
                   a particular one.
               bps When TRUE the shaper works with bits-per-second otherwise it works
* @param[in]
                    with packets-per-second.
                isl Idle slope
* @param[in]
* @param[in]
               max Max credit
* @param[in]
               min Min credit
               pos Shaper position within the QoS topology
* @parma[in]
* @return
                1 if success, 0 otherwise
int fci_shaper_enable(FCI_CLIENT *cl, char *phy_if, uint8_t id, bool bps,
        uint32_t isl, int32_t max, int32_t min, uint8_t pos)
    fpp_qos_shaper_cmd_t cmd;
   int ret;
    cmd.action = FPP_ACTION_UPDATE;
    strncpy(cmd.if_name, phy_if, sizeof(cmd.if_name)-1);
   cmd.id = id;
    cmd.mode = (bps) ? 1U : 2U;
    cmd.position = pos;
   cmd.isl = htonl(isl);
    cmd.max_credit = htonl(max);
   cmd.min_credit = htonl(min);
    ret = fci_write(cl, FPP_CMD_QOS_SHAPER, sizeof(cmd), (unsigned short *)&cmd);
    if (FPP_ERR_OK != ret)
       printf("FPP_CMD_QOS_SCHEDULER[FPP_ACTION_UPDATE] failed: %d\n", ret);
        return 0;
    }
   else
    {
        return 1;
}
* @brief
               Disable shaper
               Shaper will stop process traffic. Useful for topology diagnostics.
* @details
* @param[in]
               cl The FCI client instance
                phy_if Name of physical interface containing the shaper
* @param[in]
* @param[in]
                id ID of the shaper to get. There can be multiple shaper instances
```



```
associated with a physical interface and this index allows to select
                  a particular one.
               1 if success, 0 otherwise
* @return
int fci_shaper_disable(FCI_CLIENT *cl, char *phy_if, uint8_t id)
   fpp_qos_shaper_cmd_t cmd = {0};
   int ret;
   cmd.action = FPP_ACTION_UPDATE;
   strncpy(cmd.if_name, phy_if, sizeof(cmd.if_name)-1);
   cmd.id = id;
   cmd.mode = 0;
   /\star This is optional to disconnect the shaper from its position \star/
   cmd.position = 255;
   ret = fci_write(cl, FPP_CMD_QOS_SHAPER, sizeof(cmd), (unsigned short *)&cmd);
   if (FPP_ERR_OK != ret)
       printf("FPP_CMD_QOS_SCHEDULER[FPP_ACTION_UPDATE] failed: %d\n", ret);
       return 0;
   }
   else
       return 1;
   }
```



Index

accepted	rpp_aigo_stats_t, 60
fpp_algo_stats_t, 60	fpp_phy_if_stats_t, 79
action	dmac
fpp_ct6_cmd_t, 62	fpp_if_m_args_t, 71
fpp_ct_cmd_t, 64	dport
fpp_fp_rule_cmd_t, 67	fpp_ct6_cmd_t, 62
fpp_fp_table_cmd_t, 68	fpp_ct_cmd_t, 65
fpp_l2_bd_cmd_t, 72	fpp_if_m_args_t, 70
fpp_log_if_cmd_t, 74	fpp_spd_cmd_t, 91
fpp_phy_if_cmd_t, 77	dport_reply
fpp_qos_queue_cmd_t, 80	fpp_ct6_cmd_t, 63
fpp_qos_scheduler_cmd_t, 83	fpp_ct_cmd_t, 66
fpp_qos_shaper_cmd_t, 86	dst_mac
fpp_rt_cmd_t, 89	fpp_rt_cmd_t, 89
fpp_spd_cmd_t, 91	0.000.00
algo	egress
fpp_qos_scheduler_cmd_t, 84	fpp_log_if_cmd_t, 75
arguments	fpp_phy_if_stats_t, 79
fpp_log_if_cmd_t, 76	ethtype
	fpp_if_m_args_t, 70
block_state	fci_catch
fpp_phy_if_cmd_t, 78	LibFCI, 55
BS_BLOCKED	FCI_CB_CONTINUE
LibFCI, 52	LibFCI, 54
BS_FORWARD_ONLY	fci_cb_retval_t
LibFCI, 52	LibFCI, 53
BS_LEARN_ONLY	FCI_CB_STOP
LibFCI, 52	LibFCI, 54
BS_NORMAL	FCI_CFG_FORCE_LEGACY_API
LibFCI, 52	LibFCI, 49
CTCMD_FLAGS_REP_DISABLED	FCI_CLIENT, 59
LibFCI, 49	FCI_CLIENT_DEFAULT
Libr Ci, 43	LibFCI, 53
daddr	fci_client_type_t
fpp_ct6_cmd_t, 62	LibFCI, 53
fpp_ct_cmd_t, 65	fci_close
fpp_spd_cmd_t, 91	LibFCI, 54
daddr_reply	fci_cmd
fpp_ct6_cmd_t, 63	LibFCI, 55
fpp_ct_cmd_t, 65	FCI_GROUP_CATCH
discarded	LibFCI, 53



FCI_GROUP_NONE	len, 61
LibFCI, 53	payload, 61
fci_mcast_groups_t	FPP_CMD_DATA_BUF_AVAIL
LibFCI, 53	LibFCI, 44
fci_open	FPP_CMD_DATA_BUF_PUT
LibFCI, 54	LibFCI, 43
fci_query	FPP_CMD_FP_FLEXIBLE_FILTER
LibFCI, 56	LibFCI, 43
fci_register_cb	FPP_CMD_FP_RULE
LibFCI, 58	LibFCI, 41
fci_write	FPP_CMD_FP_TABLE
LibFCI, 57	LibFCI, 39
flags	FPP_CMD_IF_LOCK_SESSION
fpp_ct6_cmd_t, 63	LibFCI, 36
fpp_ct_cmd_t, 66	FPP_CMD_IF_UNLOCK_SESSION
fpp_l2_bd_cmd_t, 73	LibFCI, 36
fpp_log_if_cmd_t, 75	FPP_CMD_IP_ROUTE
fpp_phy_if_cmd_t, 77	fpp.h, 98
fpp_rt_cmd_t, 90	FPP_CMD_IPV4_CONNTRACK
FP_ACCEPT	fpp.h, 94
LibFCI, 52	FPP_CMD_IPV4_CONNTRACK_CHANGE
FP_NEXT_RULE	LibFCI, 49
LibFCI, 52	FPP_CMD_IPV4_RESET
FP_OFFSET_FROM_L2_HEADER	fpp.h, 99
LibFCI, 53	FPP_CMD_IPV4_SET_TIMEOUT
FP_OFFSET_FROM_L3_HEADER	fpp.h, 100
LibFCI, 53	FPP_CMD_IPV6_CONNTRACK
FP_OFFSET_FROM_L4_HEADER	fpp.h, 96
LibFCI, 53	FPP_CMD_IPV6_CONNTRACK_CHANGE
FP_REJECT	LibFCI, 49
LibFCI, 52	FPP_CMD_IPV6_RESET
fp_table0	fpp.h, 100
fpp_if_m_args_t, 71	FPP_CMD_L2_BD
fp_table1	LibFCI, 36
fpp_if_m_args_t, 71	FPP_CMD_LOG_IF
fpp.h, 93	LibFCI, 34
FPP_CMD_IP_ROUTE, 98	FPP_CMD_PHY_IF
FPP_CMD_IPV4_CONNTRACK, 94	LibFCI, 32
FPP CMD IPV4 RESET, 99	FPP_CMD_QOS_QUEUE
FPP_CMD_IPV4_SET_TIMEOUT, 100	LibFCI, 46
FPP_CMD_IPV6_CONNTRACK, 96	FPP_CMD_QOS_SCHEDULER
FPP_CMD_IPV6_RESET, 100	LibFCI, 47
fpp_algo_stats_t, 59	FPP_CMD_QOS_SHAPER
accepted, 60	LibFCI, 48
discarded, 60	FPP_CMD_SPD
processed, 60	LibFCI, 44
rejected, 60	fpp_ct6_cmd_t, 61
fpp buf cmd t, 60	action, 62



dmac, 71
dport, 70
ethtype, 70
fp_table0, 71
fp_table1, 71
hif_cookie, 71
proto, 70
smac, 70
sport, 70
v4, 70
v6, 70
vlan, 69
fpp_if_m_rules_t
LibFCI, 50
FPP_IF_MATCH_DIP
LibFCI, 51
FPP_IF_MATCH_DIP6
LibFCI, 51
FPP_IF_MATCH_DMAC
LibFCI, 51
FPP_IF_MATCH_DPORT
LibFCI, 51
FPP_IF_MATCH_ETHTYPE
LibFCI, 51
FPP_IF_MATCH_FP0
LibFCI, 51
FPP_IF_MATCH_FP1
LibFCI, 51
FPP_IF_MATCH_HIF_COOKIE
LibFCI, 51
FPP_IF_MATCH_OR
LibFCI, 50
FPP_IF_MATCH_PROTO
LibFCI, 51
FPP_IF_MATCH_RESERVED7
LibFCI, 51
FPP_IF_MATCH_RESERVED8
LibFCI, 51
FPP_IF_MATCH_SIP
LibFCI, 51
FPP_IF_MATCH_SIP6
LibFCI, 51
FPP_IF_MATCH_SMAC
LibFCI, 51
FPP_IF_MATCH_SPORT
LibFCI, 51
FPP_IF_MATCH_TYPE_ARP
LibFCI, 51



FPP_IF_MATCH_TYPE_BCAST	ucast_hit, 72
LibFCI, 51	ucast_miss, 72
FPP_IF_MATCH_TYPE_ETH	untag_if_list, 73
LibFCI, 51	vlan, 72
FPP_IF_MATCH_TYPE_ICMP	fpp_l2_bd_flags_t
LibFCI, 51	LibFCI, 52
FPP_IF_MATCH_TYPE_IGMP	FPP_L2BR_DOMAIN_DEFAULT
LibFCI, 51	LibFCI, 52
FPP_IF_MATCH_TYPE_IPV4	FPP_L2BR_DOMAIN_FALLBACK
LibFCI, 51	LibFCI, 52
FPP_IF_MATCH_TYPE_IPV6	fpp_log_if_cmd_t, 73
LibFCI, 51	action, 74
FPP_IF_MATCH_TYPE_IPX	arguments, 76
LibFCI, 51	egress, 75
FPP_IF_MATCH_TYPE_MCAST	flags, 75
LibFCI, 51	id, 74
FPP_IF_MATCH_TYPE_PPPOE	match, 75
LibFCI, 51	name, 74
FPP IF MATCH TYPE TCP	parent_id, 75
LibFCI, 51	parent_name, 75
FPP_IF_MATCH_TYPE_UDP	stats, 76
LibFCI, 51	fpp_phy_if_block_state_t
FPP_IF_MATCH_TYPE_VLAN	LibFCI, 51
LibFCI, 51	fpp_phy_if_cmd_t, 76
FPP_IF_MATCH_VLAN	action, 77
LibFCI, 51	block_state, 78
FPP_IF_MIRROR	flags, 77
LibFCI, 50	id, 77
FPP_IF_OP_BRIDGE	mac_addr, 78
LibFCI, 50	mirror, 78
FPP_IF_OP_DEFAULT	mode, 78
LibFCI, 50	name, 77
FPP_IF_OP_DISABLED	stats, 78
LibFCI, 50	fpp_phy_if_op_mode_t
FPP_IF_OP_FLEXIBLE_ROUTER	LibFCI, 50
LibFCI, 50	fpp_phy_if_stats_t, 79
FPP_IF_OP_ROUTER	discarded, 79
LibFCI, 50	egress, 79
FPP_IF_OP_VLAN_BRIDGE	ingress, 79
LibFCI, 50	malformed, 79
FPP_IF_PROMISC	fpp_qos_queue_cmd_t, 80
LibFCI, 50	action, 80
fpp_l2_bd_cmd_t, 71	id, 81
action, 72	if_name, 80
flags, 73	max, 82
if_list, 73	min, 81
mcast_hit, 72	mode, 81
mcast_mis, 72 mcast_miss, 72	zprob, 82
1110ast_111108, 14	∠ρισυ, <mark>σ∠</mark>



fpp_qos_scheduler_cmd_t, 82	fpp_l2_bd_cmd_t, 73
action, 83	if_name
algo, 84	fpp_qos_queue_cmd_t, 80
id, 83	fpp_qos_scheduler_cmd_t, 83
if_name, 83	fpp_qos_shaper_cmd_t, 86
input_en, 84	ingress
input_src, 85	fpp_phy_if_stats_t, 79
input_w, 85	input_en
mode, 84	fpp_qos_scheduler_cmd_t, 84
fpp_qos_shaper_cmd_t, 85	input_src
action, 86	fpp_qos_scheduler_cmd_t, 85
id, 86	input_w
if_name, 86	fpp_qos_scheduler_cmd_t, 85
isl, 87	isl
max_credit, 87	fpp_qos_shaper_cmd_t, 87
min_credit, 88	
mode, 87	len
position, 87	fpp_buf_cmd_t, 61
fpp_rt_cmd_t, 88	LibFCI, 16
action, 89	BS_BLOCKED, 52
dst_mac, 89	BS_FORWARD_ONLY, 52
flags, 90	BS_LEARN_ONLY, 52
id, 89	BS_NORMAL, 52
output_device, 89	CTCMD_FLAGS_REP_DISABLED, 49
fpp_spd_cmd_t, 90	fci_catch, 55
action, 91	FCI_CB_CONTINUE, 54
daddr, 91	fci_cb_retval_t, 53
dport, 91	FCI_CB_STOP, 54
name, 91	FCI_CFG_FORCE_LEGACY_API, 49
position, 91	FCI_CLIENT_DEFAULT, 53
protocol, 91	fci_client_type_t, 53
sa_id, 91	fci_close, 54
saddr, 91	fci_cmd, 55
spd_action, 92	FCI_GROUP_CATCH, 53
spi, 92	FCI_GROUP_NONE, 53
sport, 91	fci_mcast_groups_t, 53
fpp_timeout_cmd_t, 92	fci_open, 54
ipp_timeout_cma_t, 32	fci_query, <mark>56</mark>
hif_cookie	fci_register_cb, 58
fpp_if_m_args_t, 71	fci_write, 57
11 0	FP_ACCEPT, 52
id	FP_NEXT_RULE, 52
fpp_log_if_cmd_t, 74	FP_OFFSET_FROM_L2_HEADER, 53
fpp_phy_if_cmd_t, 77	FP_OFFSET_FROM_L3_HEADER, 53
fpp_qos_queue_cmd_t, 81	FP_OFFSET_FROM_L4_HEADER, 53
fpp_qos_scheduler_cmd_t, 83	FP_REJECT, 52
fpp_qos_shaper_cmd_t, 86	FPP_CMD_DATA_BUF_AVAIL, 44
fpp_rt_cmd_t, 89	FPP_CMD_DATA_BUF_PUT, 43
if list	FPP CMD FP FLEXIBLE FILTER, 43



FPP_CMD_FP_RULE, 41	FPP_IF_MATCH_TYPE_UDP, 51
FPP_CMD_FP_TABLE, 39	FPP_IF_MATCH_TYPE_VLAN, 51
FPP_CMD_IF_LOCK_SESSION, 36	FPP_IF_MATCH_VLAN, 51
FPP_CMD_IF_UNLOCK_SESSION, 36	FPP_IF_MIRROR, 50
FPP_CMD_IPV4_CONNTRACK_CHANGE,	FPP_IF_OP_BRIDGE, 50
49	FPP_IF_OP_DEFAULT, 50
FPP_CMD_IPV6_CONNTRACK_CHANGE,	
49	FPP_IF_OP_FLEXIBLE_ROUTER, 50
FPP_CMD_L2_BD, 36	FPP_IF_OP_ROUTER, 50
FPP_CMD_LOG_IF, 34	FPP_IF_OP_VLAN_BRIDGE, 50
FPP_CMD_PHY_IF, 32	FPP_IF_PROMISC, 50
FPP_CMD_QOS_QUEUE, 46	fpp_l2_bd_flags_t, 52
FPP_CMD_QOS_SCHEDULER, 47	FPP_L2BR_DOMAIN_DEFAULT, 52
FPP_CMD_QOS_SHAPER, 48	FPP_L2BR_DOMAIN_FALLBACK, 52
FPP_CMD_SPD, 44	fpp_phy_if_block_state_t, 51
fpp_fp_offset_from_t, 52	fpp_phy_if_op_mode_t, 50
fpp_fp_rule_match_action_t, 52	libfci.h, 103
FPP_IF_DISCARD, 50	,
FPP_IF_ENABLED, 50	mac_addr
fpp_if_flags_t, 50	fpp_phy_if_cmd_t, 78
	malformed
fpp_if_m_rules_t, 50	fpp_phy_if_stats_t, 79
FPP_IF_MATCH_DIP, 51	match
FPP_IF_MATCH_DIP6, 51	fpp_log_if_cmd_t, 75
FPP_IF_MATCH_DMAC, 51	max
FPP_IF_MATCH_DPORT, 51	fpp_qos_queue_cmd_t, 82
FPP_IF_MATCH_ETHTYPE, 51	max_credit
FPP_IF_MATCH_FP0, 51	fpp_qos_shaper_cmd_t, 87
FPP_IF_MATCH_FP1, 51	mcast_hit
FPP_IF_MATCH_HIF_COOKIE, 51	fpp_l2_bd_cmd_t, 72
FPP_IF_MATCH_OR, 50	mcast_miss
FPP_IF_MATCH_PROTO, 51	fpp_l2_bd_cmd_t, 72
FPP_IF_MATCH_RESERVED7, 51	min
FPP_IF_MATCH_RESERVED8, 51	fpp_qos_queue_cmd_t, 81
FPP_IF_MATCH_SIP, 51	min_credit
FPP_IF_MATCH_SIP6, 51	fpp_qos_shaper_cmd_t, 88
FPP_IF_MATCH_SMAC, 51	mirror
FPP_IF_MATCH_SPORT, 51	fpp_phy_if_cmd_t, 78
FPP_IF_MATCH_TYPE_ARP, 51	mode
FPP_IF_MATCH_TYPE_BCAST, 51	fpp_phy_if_cmd_t, 78
FPP_IF_MATCH_TYPE_ETH, 51	fpp_qos_queue_cmd_t, 81
FPP_IF_MATCH_TYPE_ICMP, 51	fpp_qos_scheduler_cmd_t, 84
FPP_IF_MATCH_TYPE_IGMP, 51	fpp_qos_shaper_cmd_t, 87
FPP_IF_MATCH_TYPE_IPV4, 51	
FPP_IF_MATCH_TYPE_IPV6, 51	name
FPP_IF_MATCH_TYPE_IPX, 51	fpp_log_if_cmd_t, 74
FPP_IF_MATCH_TYPE_MCAST, 51	fpp_phy_if_cmd_t, 77
FPP_IF_MATCH_TYPE_PPPOE, 51	fpp_spd_cmd_t, 91
FPP IF MATCH TYPE TCP, 51	output device



fpp_rt_cmd_t, 89	fpp_spd_cmd_t, 92
	sport
parent_id	fpp_ct6_cmd_t, 62
fpp_log_if_cmd_t, 75	fpp_ct_cmd_t, 65
parent_name	fpp_if_m_args_t, 70
fpp_log_if_cmd_t, 75	fpp_spd_cmd_t, 91
payload	sport_reply
fpp_buf_cmd_t, 61	fpp_ct6_cmd_t, 63
position	fpp_ct_cmd_t, 65
fpp_fp_table_cmd_t, 68	stats
fpp_qos_shaper_cmd_t, 87	fpp_log_if_cmd_t, 76
fpp_spd_cmd_t, 91	fpp_phy_if_cmd_t, 78
processed	tabla nama
fpp_algo_stats_t, 60	table_name
proto	fpp_fp_table_cmd_t, 68
fpp_if_m_args_t, 70	ucast_hit
protocol	fpp_l2_bd_cmd_t, 72
fpp_ct6_cmd_t, 63	ucast_miss
fpp_ct_cmd_t, 66	fpp_l2_bd_cmd_t, 72
fpp_spd_cmd_t, 91	untag_if_list
r	fpp_l2_bd_cmd_t, 73
fpp_fp_rule_cmd_t, 67	11
fpp_fp_table_cmd_t, 68	v4
rejected	fpp_if_m_args_t, 70
fpp_algo_stats_t, 60	v6
route_id	fpp_if_m_args_t, 70
fpp_ct6_cmd_t, 63	vlan
fpp_ct_cmd_t, 66	fpp_if_m_args_t, 69
route_id_reply	fpp_l2_bd_cmd_t, 72
fpp_ct6_cmd_t, 63	znroh
fpp_ct_cmd_t, 66	zprob fpp_qos_queue_cmd_t, 82
rule_name	ipp_qos_queue_ciiiu_t, 82
fpp_fp_table_cmd_t, 68	
ipp_ip_table_cmd_t, 66	
sa_id	
fpp_spd_cmd_t, 91	
saddr	
fpp_ct6_cmd_t, 62	
fpp_ct_cmd_t, 65	
fpp_spd_cmd_t, 91	
saddr_reply	
fpp_ct6_cmd_t, 63	
fpp_ct_cmd_t, 65	
smac	
fpp_if_m_args_t, 70	
spd_action	
fpp_spd_cmd_t, 92	
spi	
•	