# **Chapter 6: Multiplexing**

## **Outline**

## 6.1 MULTIPLEXING

## 6-1 MULTIPLEXING

As data and telecommunications use increases, so does traffic. We can accommodate this increase by

- a) <u>adding individual links</u> each time a new channel is needed, or
- b) <u>installing higher-bandwidth links</u> and use them to carry multiple signals.

General idea: when the <u>link bandwidth</u> of a medium linking two devices is <u>greater than</u> the <u>bandwidth</u> <u>requirements of the devices</u>, the link can be <u>shared</u>.

Figure 6.1: Dividing a link into channels

Multiplexing is a set of techniques that allow the simultaneous transmission of multiple signals across a single data link.


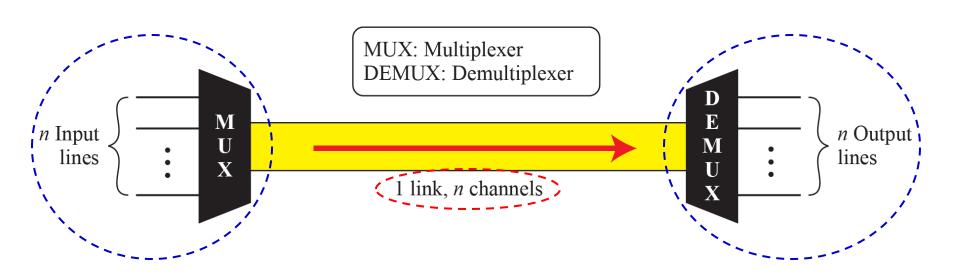



Figure 6.2: Categories of multiplexing

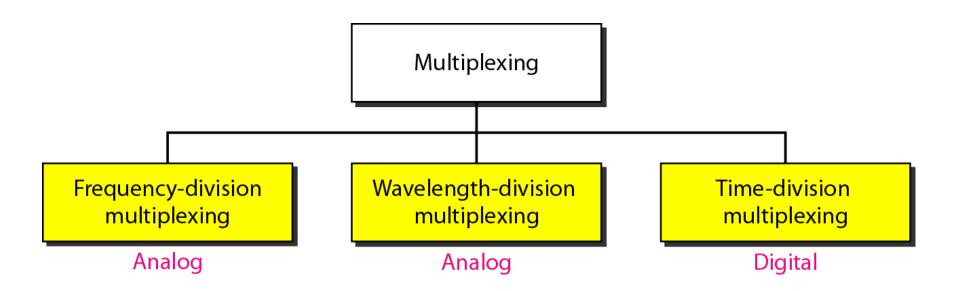

# 6.1.1 Frequency-Division Multiplexing

Frequency-division multiplexing (FDM) is an <u>analog</u> multiplexing technique that can be applied when the <u>bandwidth of a link</u> is <u>greater</u> than the <u>combined bandwidths</u> of the signals to be transmitted.

In FDM, signals generated by each sending device are modulated to different carrier frequencies. The carrier frequencies are separated by sufficient bandwidth (also known as guard bands) to prevent signals from overlapping. It is important that the carrier frequencies do not interfere with the original frequencies.

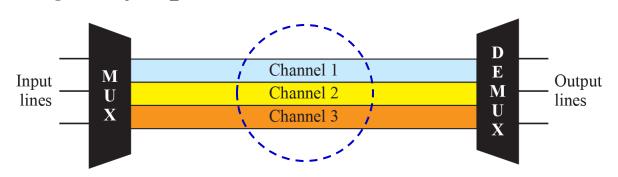


## Example

Assume that a voice channel occupies a bandwidth of 4 kHz. We need to combine three voice channels into a link with a bandwidth of 12 kHz, from 20 to 32 kHz. Show the <u>FDM</u> configuration, assuming there are no guard bands.

### **Solution**

We modulate each of the three voice channels to a different carrier frequency, as shown in the FDM configuration below:

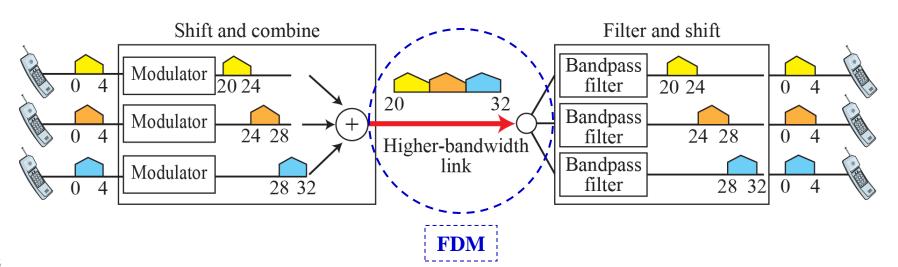


## Example

Five channels, each with a 100 kHz bandwidth, are to be multiplexed together. What is the minimum bandwidth of the link if there is a need for a guard band of 10 kHz between the channels to prevent interference?

### **Solution**

For five channels, we need at least four guard bands. This means that the required bandwidth is at least  $(5\times100) + (4\times10) = 540$  kHz.

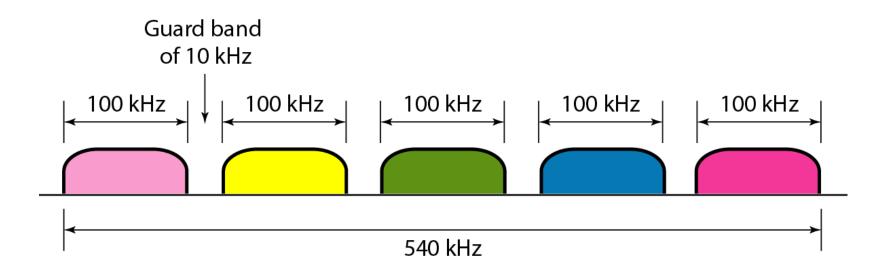

# 6.1.2 Wavelength-Division Multiplexing

Wavelength-division multiplexing (WDM) is an analog multiplexing technique used to combine optical signals to take advantage of the high data rate capability of fiber optic cable.

WDM is a complex technology, but the basic idea is simple: <u>combine multiple light sources</u> (i.e., <u>different wavelengths</u>) into <u>one single light</u> at the multiplexer and do the reverse at the demultiplexer.


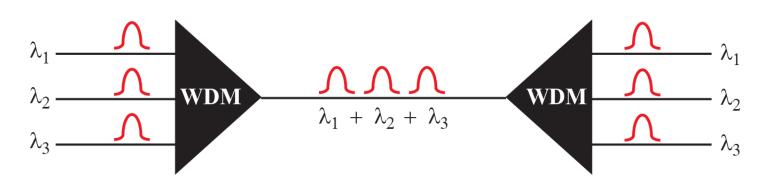



Figure 6.10: Wavelength-division multiplexing

The implementation of <u>combining and splitting of light sources</u> can be handled by <u>prisms</u>: a multiplexing prism combines several input beams of light into one output beam and a demultiplexing prism reverses the process:

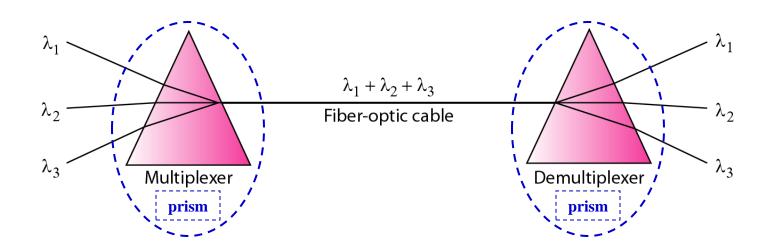


# 6.1.3 Time-Division Multiplexing

Time-division multiplexing (TDM), synchronous or statistical, is a digital multiplexing technique that allows several connections to share the high bandwidth of a link. Instead of sharing a portion of the frequency spectrum as in FDM, time is shared. Each connection occupies a portion of time in the link.

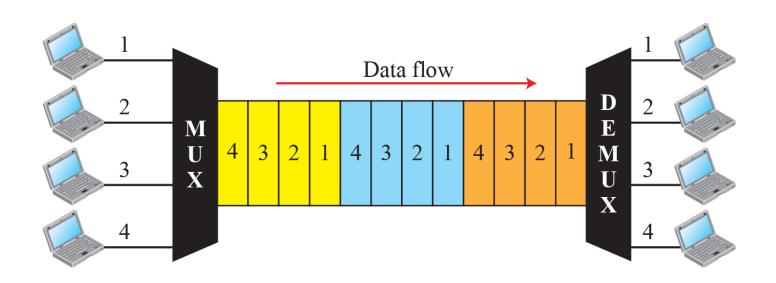

### Figure 6.13: Synchronous time-division multiplexing

In <u>synchronous</u> TDM, each input connection has an <u>allotment</u> in the output frame <u>even if it's not sending data</u>.

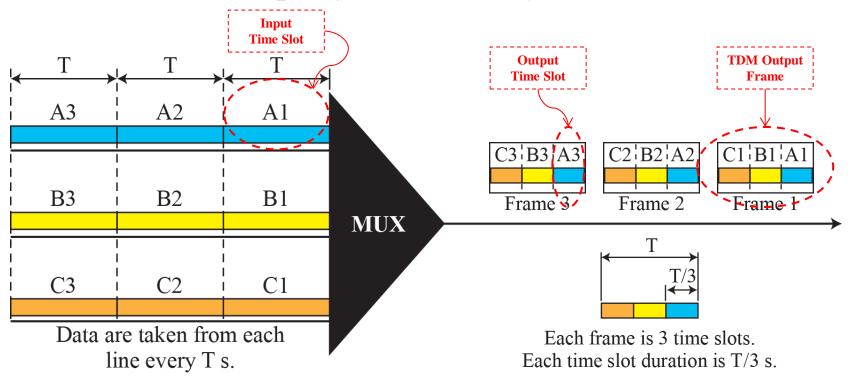


#### **Notes:**

- 1) The duration of each <u>TDM Output Frame</u> (a complete cycle of time slots) is *T* (same as the duration of an Input Time Slot).
- 2) The duration of an <u>Output Time Slot</u> is <u>n times shorter</u> than the duration of an <u>Input Time Slot</u>, i.e., if the duration of the Input Time Slot is T, the duration of each Output Time Slot is T/n.
- 3) The <u>data rate</u> of the <u>output link</u> is <u>n times</u> the data rate of <u>an input connection</u> to ensure the flow of data.

### Figure 6.22: Framing bits


Framing bits are added to each frame to allow the demultiplexer to separate the time slots accurately in the implementation of synchronous TDM.

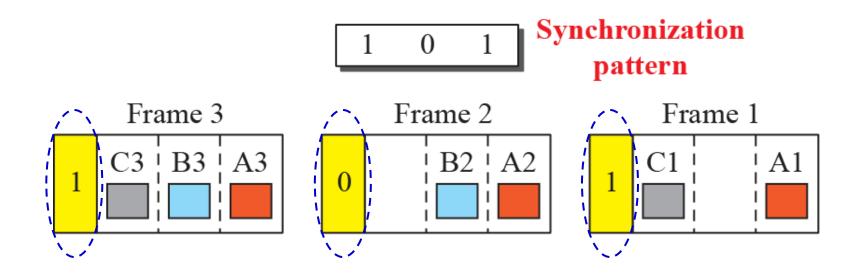

If the <u>multiplexer</u> and <u>demultiplexer</u> are not <u>synchronized</u>, a bit belonging to one channel may be received by the wrong channel.

# Example

Consider the following synchronous TDM system. The data rate for each input connection is 1 kbps. If 1 bit at a time is multiplexed, what is the duration of (a) each input time slot (b) each output time slot and (c) each output frame?

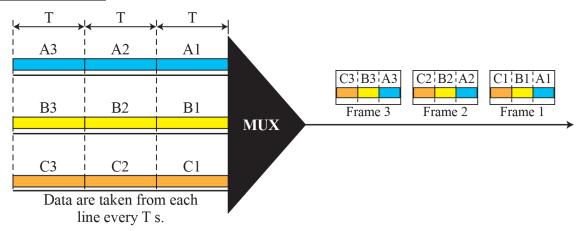


#### **Solution**

- (a) The data rate of each input connection is 1 kbps. If 1 bit at a time is multiplexed, the duration of each input time slot is 1/1000 s (1 ms).
- (b) For a synchronous TDM with 3 input connections, the duration of each output time slot is 1/3 of the input time slot, i.e., 1/3 ms.
- (c) Each frame carries three output time slots. The duration of each frame is
- $3 \times 1/3$  ms, or 1 ms (which is the same as the duration of an input time slot).

## Problem

Four channels are multiplexed using synchronous TDM. Each channel sends 100 bytes/s and we multiplex 1 byte per channel. Determine (a) the <u>size</u> of the <u>TDM frame</u> (b) the <u>TDM frame</u> rate (c) the <u>duration</u> of a <u>TDM frame</u> and (d) the <u>bit rate</u> for the <u>link</u>.

#### **Solution**

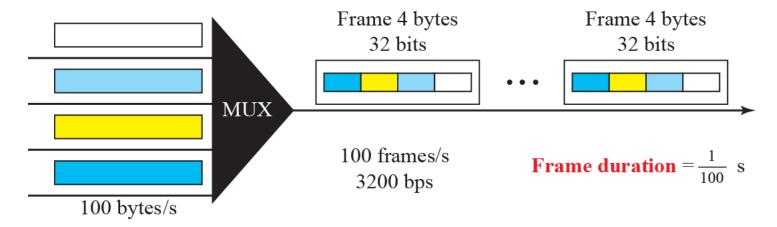

- (a) Each TDM frame carries 1 byte from each channel. Therefore, the size of each TDM frame is 4 bytes, or 32 bits.
- (b) The TDM frame rate is 100 frames per second.
- (c) With a frame rate of 100 frames/s, the duration of a TDM frame is 1/100 s.
- (d) The bit rate for the link is  $100 \times 32 = 3200$  bps.

## Problem

We have four sources, each creating 250 8-bit characters per second. The interleaved unit is 1 character and 1 synchronizing bit is added to each TDM frame. Determine


- (a) the <u>data rate</u> of <u>each source</u>
- (b) the <u>duration of each character</u> in <u>each source</u>
- (c) the <u>TDM frame rate</u>
- (d) the <u>number of bits</u> in each <u>TDM frame</u>
- (e) the <u>data rate</u> of the <u>link</u>.

#### **Solution**

- (a) The data rate of each source is  $250 \times 8 = 2000$  bps.
- (b) Each source sends 250 characters per second. The duration of each character is 1/250 s.
- (c) The link needs to send 250 frames per second (with duration of 1/250 s).
- (d) Each frame carries 4 characters and 1 extra synchronizing bit. The number of bits in each TDM frame is  $(4 \times 8) + 1 = 33$  bits.
- (e)The link sends 250 frames per second, and each frame contains 33 bits. The data rate of the link is  $250 \times 33 = 8250$  bps.


### Figure 6.18: Statistical time-division multiplexing

Synchronized TDM can be <u>inefficient</u>. If a source does not have data to send, the corresponding slot in the output frame is empty.

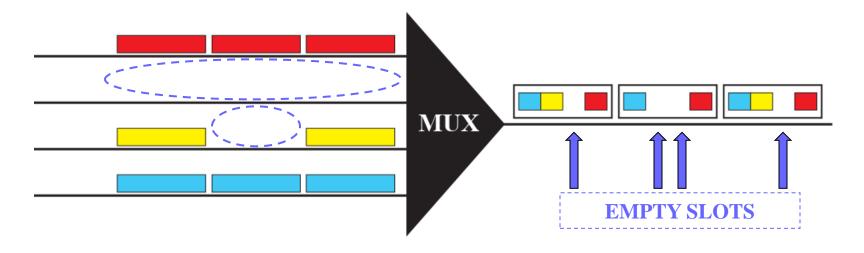

In <u>statistical</u> TDM, slots are <u>dynamically allocated</u> to improve bandwidth efficiency. Only when an input line has data to send is it given a slot in the output frame. Note that the <u>number of slots</u> in each frame may be <u>less</u> than the <u>number of input lines</u>.

### Figure 6.26: TDM comparison

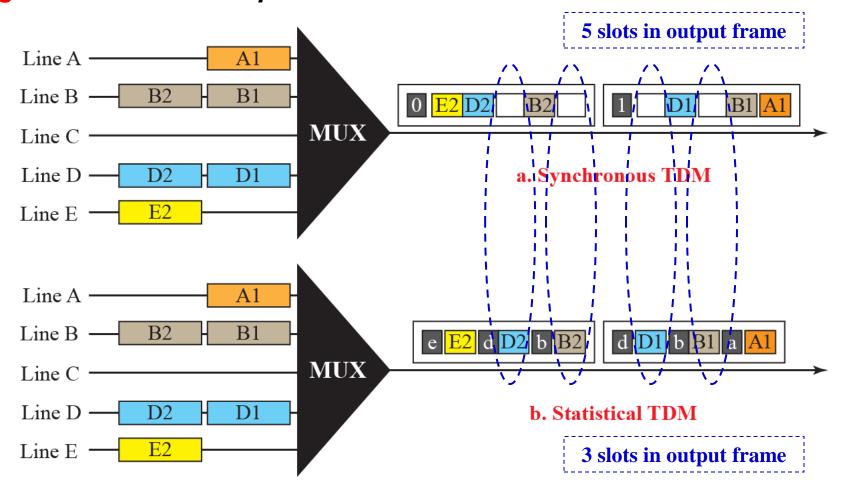

#### **Additional notes:**

- 1) In <u>synchronous</u> TDM, there is <u>no</u> need for <u>addressing</u>; whereas an output frame in <u>statistical</u> TDM needs to carry <u>data</u> as well as the <u>address</u> of the destination.
- 2) The <u>output frames</u> in <u>statistical</u> TDM need not be synchronized and hence no synchronization <u>framing bits</u> are required.