
ASSEMBLY TUTORIAL

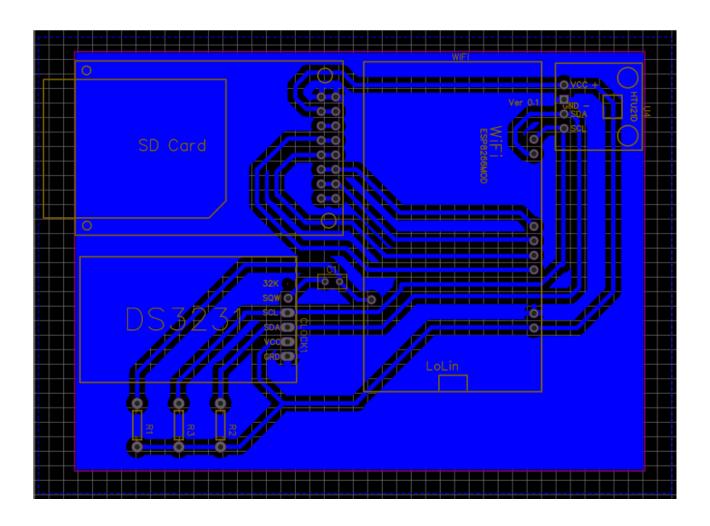

Sumário

1	PCE	B Board	2
2	Inst	alling Arduino	2
3	Sett	ing up the Environment	2
	3.1	Add ESP8266 Board URL	2
	3.2	Install ESP8266 Drivers	2
	3.3	Install Required Libraries	3
4	Uplo	pading the Sketch	4
	4.1	Select the Right Devices	4
	4.2	Upload the Code	6

1 PCB Board

In order to make things more practical, you can demand a PCB board using the gerber files of the project. Also, you can modify the original design at https://oshwlab.com/gui.br57/low-cost-weather-station.


2 Installing Arduino

Arduino IDE provide a safe environment to work with development boards, which includes drivers, libraries, and etc. You can find the arduino installer at https://www.arduino.cc/en/software. If you are using Windows 10, just download it from windows store.

3 Setting up the Environment


3.1 Add ESP8266 Board URL


In your Arduino IDE, go to File> Preferences and enter http://arduino.esp8266.com/stable/package_esp8266com_index.json into the "Additional Boards Manager URLs" field as shown in the figure below. Then, click the "OK" button:

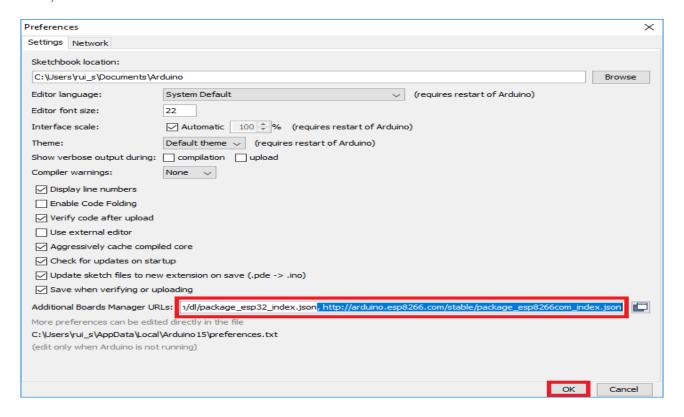

3.2 Install ESP8266 Drivers

Open the Boards Manager. Go to Tools > Board > Boards Manager.

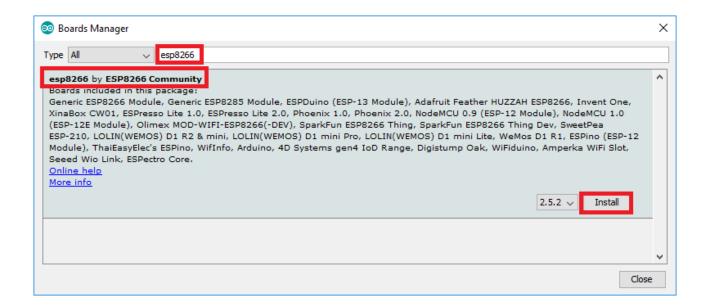

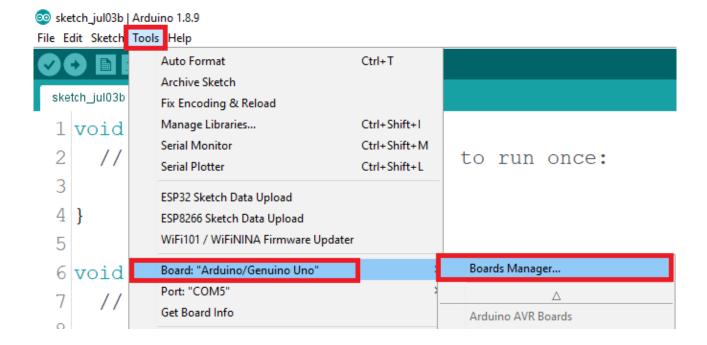


3.3 Install Required Libraries

In order to upload the code we've developed we have to install the list of the following libraries:

- · RTC by Makuna
- Arduino Web Sockets by Gill Maimon
- Adafruit HTU21DF by Adafruit

Go to Tools > Manage Libraries. Type the name of the library and install it as the following example:

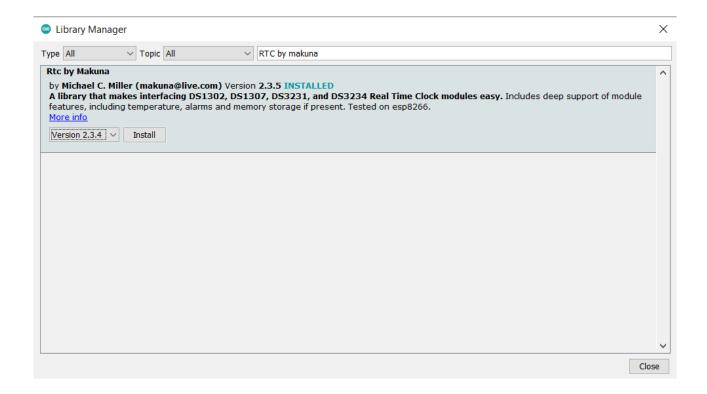


4 Uploading the Sketch


4.1 Select the Right Devices

Since we're using an ESP-12E NodeMCU Kit, uploading the sketch is very simple. Plug your board to your computer, make sure you have the right board selected, and select the correct USB port:

🥯 sketch_jul03b | Arduino 1.8.9

File Edit Sketch Tools Help

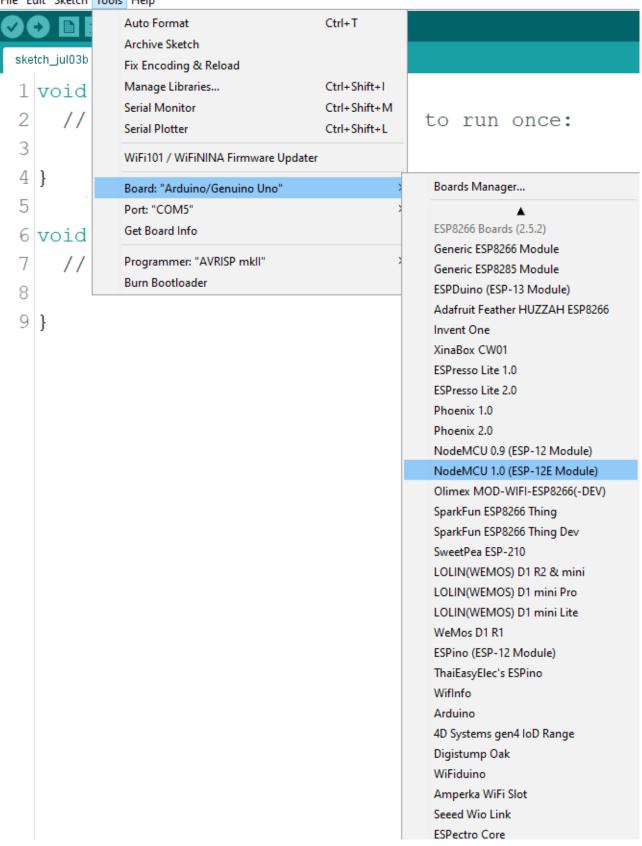


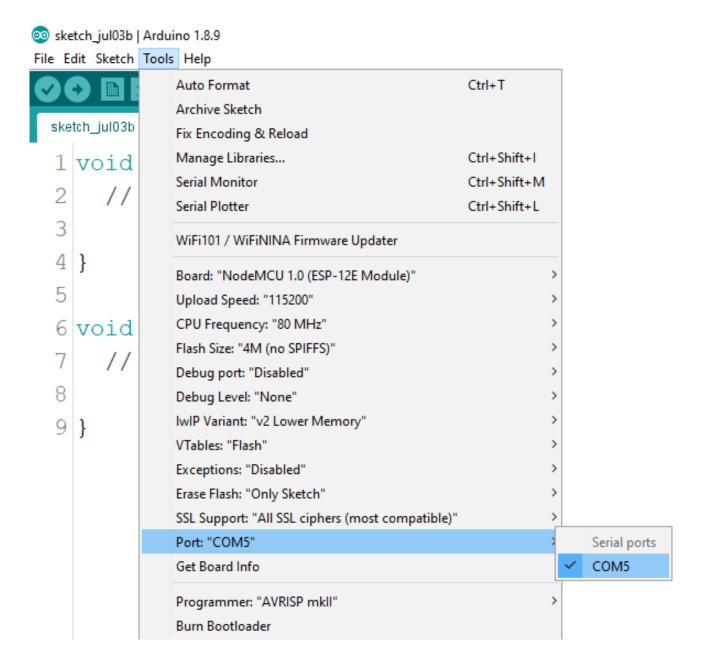

4.2 Upload the Code

The first code we must upload is the code to reset the first position of EEPROM. This is a simple code, and we use it just to let the program know if it's the first time the device has been turned on.

So go to File > Open... and open the resetEEPROM file.

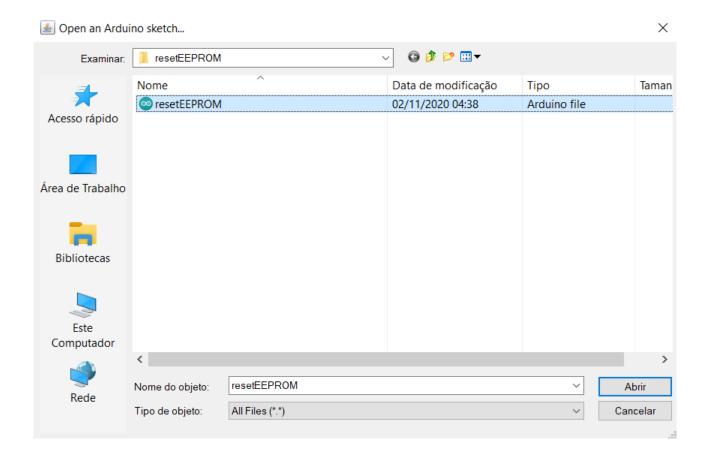

Then you can click in the Upload Button to upload the code.

resetEEPROM | Arduino 1.8.13 (Windows Store 1.8.42.0)

File Edit Sketch Tools Help

```
resetEEPROM

#include <EEPROM.h>

void setup() {
    // put your setup code here, to run once:
    EEPROM.begin(4);
    EEPROM.write(0,0);
    EEPROM.commit();
}

void loop() {
    // put your main code here, to run repeatedly:
}
```

After that you can upload the other code, which implement the features we expect from our device. To do this, just repeat the last step opening the source file.

After uploading the last code, you have 5 seconds to unplug the board in order to not initiate a cycle of measuring. This means that after this time the device will run all routines and execute the first cycle of measurements and tasks.