




ENGAGED INTO EACH DOOR

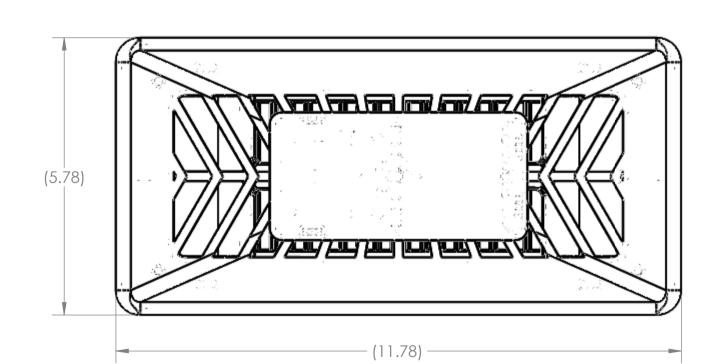

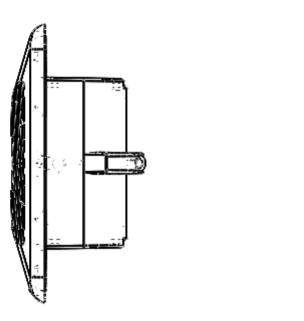

FACEPLATE MOUNTING / SCREW, 4 PLACES

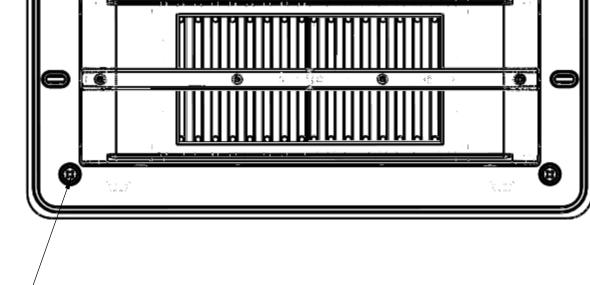

GENERAL NOTES

- 1. SEE ARENA PLM FOR PART NUMBER REFERENCE DESIGNATORS AND CURRENT REVISIONS.
- [♠] CALLOUTS ARE APPLIED TO TOLERANCES THAT MAY
 REQUIRE SPECIAL QUALITY CONTROL PROCESSES.
 QUALITY CONTROL INSTRUCTIONS ARE OUTSIDE THE
 SCOPE OF THIS DRAWING AND ARE DEFINED BY EXTERNAL
 DOCUMENTATION TO BE AGREED TO WITH THE
 MANUFACTURER.
- 3. ALL DIMENSIONS AND TOLERANCES MUST BE HELD REGARDLESS OF THE USE OF QUALITY CONTROL SYMBOLS
- (X.XX) DIMENSIONS ARE USED AS REFERENCE ONLY AND ARE NOT SUBJECT TO TOLERANCES.
 UNLESS OTHERWISE SPECIFIED, ALL DIMENSIONS AND
- 5. UNLESS OTHERWISE SPECIFIED, ALL DIMENSIONS AND TOLERANCES ARE APPLICABLE AT 20 DEGREES CELCIUS (68 DEGREES FAHRENHEIT) IN ACCORDANCE WITH ANSI/ASME B89.6.2
- 6. ALL HOMOGENOUS MATERIALS AND PROCESSES IN THIS DRAWING SHALL BE COMPLIANT TO THE EU ROHS DIRECTIVE 2011/65/EC
- 7. REFER TO DETAILED WORK INSTRUCTIONS FOR ASSEMBLY SPECIFICATIONS SUCH AS SCREW TORQUE AND GLUE VOLUME.

ASSEMBLY INSTRUCTIONS:

- 1. INSERT THE DRIVETRAIN INSERT INTO THE MAIN BODY. MAKE SURE TO ROUTE THE PRESSURE SENSOR CABLE THROUGH THE HOLE IN
- THE OUTER BOX AS SHOWN.
 ONCE THE DRIVETRAIN IS INSERTED, SNAP THE MOTOR SIDE AND BUSHING SIDE NUTS INTO THE FLEX FOORS. USE A TOOL TO FULLY
- ENGAGE THE NUT MUSHROOM FEATURE INTO THE DOOR.
 SECURE THE DRIVETRAIN INSERT TO THE MAIN BODY USING #228X1/4" SCREWS IN 8 PLACES. TORQUE SCREWS TO SPEC GIVEN IN
 THE DETAILED WORK INSTRUCTIONS.
- 4. ROUTE THE MOTOR AND PRESSURE SENSOR WIRES THROUGH THE HOLE IN THE FLOOR FACEPLATE.
- 5. MOUNT THE FLOOR FACEPLATE TO THE MAIN BODY USING #6-19X1/4" SCREWS IN 4 PLACES. TORQUE SCREWS TO SPEC GIVEN IN THE DETAILED WORK INSTRUCTIONS.
- 6. USE TAPE TO SECURE THE VENT BOARD COVER IN PLACE INSIDE THE FLOOR FACEPLATE. DO NOT ENGAGE SNAP FIT FEATURES.
- 7. USE TAPE TO SECURE THE PRESSURE SENSOR COVER ONTO THE BACK OF THE MAIN BODY AS SHOWN.
- 8. BATTERY PACK SHIPPED ALONGSIDE VENT IN PULP PACKAGING.
- DO NOT INSTALL.

 9. MAGNETICALLY ATTACH THE FLOOR FACEPLATE COVER ONTO
- THE FLOOR FACEPLATE.
- 10. PULP PACKAGING NOT SHOWN, SEE DETAILED WORK INSTRUCTIONS FOR PACKAGING ASSEMBLY INSTRUCTIONS.

DRAV	VING NO. 201-00018							
REV	DESCRIPTION	ECO	DATE	BY	DO NOT SCALE DRAWING. WORK TO DIMENSION IF PLATING IS SPECIFIED, ALL DIMENSIONS TO BE MET AFTER PLATING UNLESS OTHERWISE SPECIFIED. 1. PERMISSIBLE TOLERANCES 2. ALL RIGHT ANGLES=90° 3. DIMENSIONS GIVEN IN INCHES CONCENTRICITY=0.010 T.I.R.			
Α	INITIAL RELEASE (FROM 900-00012 DRAWING)	000082	02/26/16	AK				
В	REMOVE SCREWS (603-00019) FROM PSC	000085	3/15/16	AK				
					NOTICE: CHANGES TO MATERIAL, DESIGN, CONFIGURATION OR PROCESS MAY NOT BE	DESIGN	CTQ	CLASSIFICATION OF CHARACTERISTIS
					MADE WITHOUT NOTIFICATION TO ECOVENT.	*	**	(CRITICAL)
MATERIAL:				ALL MATERIALS AND PROCESSES MUST BE COMPLIANT WITH ENVIRONMENTAL LAWS AND	+	* *	(MAJOR)	
			REULATIONS AS REFERENCED IN XXXXX	REVIEW:	DATE:			
				TITLE: VENT 10X4 FLOOR	2 A1 6			
FINISH	DESCRIPTION				PART NO. 900-00012	SHEET 1 OF 1	ecc	vent
					SCALE: 1:2 THIS DOCUMENT IS THE PROPERTY OF ECOVENT, NEITHER THIS DOCUMENT NOR ANY INFORMATION CONTAINED HERIN MAY BE USED, REPRODUCED OR DISCLOSED TO THIRD PARTIES WITHOUT ECOVENT WRITTEN CONSENT.			