• introduces the unit step, unit ramp and dirac delta functions • presents the sampling and sifting properties of the delta function and Colophon

Elementary Signals


The preparatory reading for this section is Chapter_1 of {% cite karris %} which begins with a discussion of the elementary signals that may be applied to electrical circuits

- concludes with examples of how other useful signals can be synthesised from these elementary signals.
- This page is downloadable as a PDF file.
- An annotatable worksheet for this presentation is available as Worksheet 3.


• The source code for this page is content/elementary_signals/index.ipynb.


• You can view the notes for this presentation as a webpage (HTML).

- Consider the network shown below, where the switch is closed at time t = T and all components are ideal.

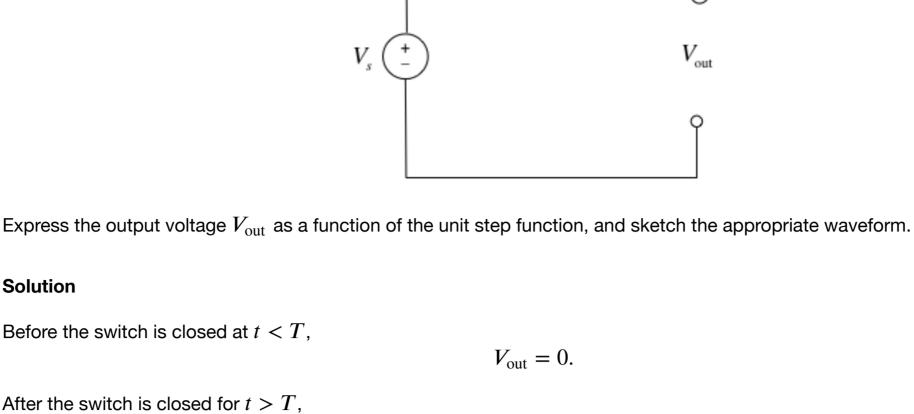


Solution

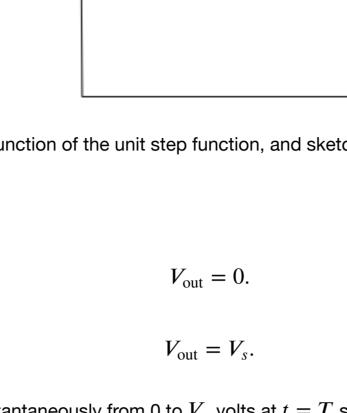

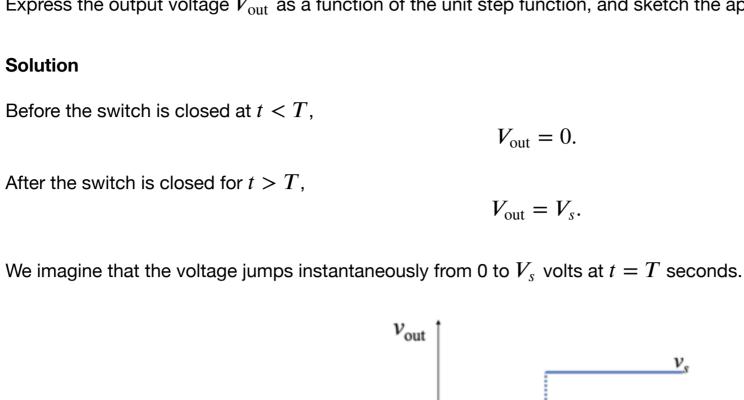

The Unit Step Function $u_0(t) = \begin{cases} 0 & t < 0 \\ 1 & t > 0 \end{cases}$

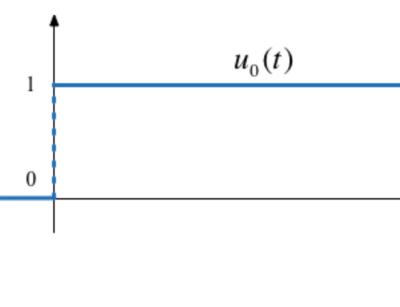

Created file '/Users/eechris/dev/eg-247-textbook/content/elementary_signals/plot_heaviside.m'

In Matlab, we use the heaviside function (named after Oliver Heaviside). %%file plot_heaviside.m In [2]:

ezplot(heaviside(t),[-1,1])

We call this type of signal a step function.

0.8

0.4

0.2

0

1.5

0.5

0

','latex')

0

-0.5

-1

-1.5

-2

that the signal is mirrored about the y axis.

In [7]: T = 1; % again to make the signal plottable.

-0.5

0

Time Delay and Advance

Sketch $u_0(t-T)$ and $u_0(t+T)$

0.8

0.6

0

-1

0.8

In [5]:

Note that the signal is scaled in the *y* direction.

In Matlab

syms t

ans =

In [3]:

heaviside(0)

plot_heaviside

0.5000


0.6

heaviside(t)

-1 -0.8 -0.6 -0.4 -0.2 0 0.2 0.4 0.6 0.8 t

ezplot(-A*u0(t),[-1,1]),grid,title('Amplitude scaling and mirroring \$\$-Au_0(t)\$\$','interpreter

Amplitude scaling and mirroring $-Au_0(t)$

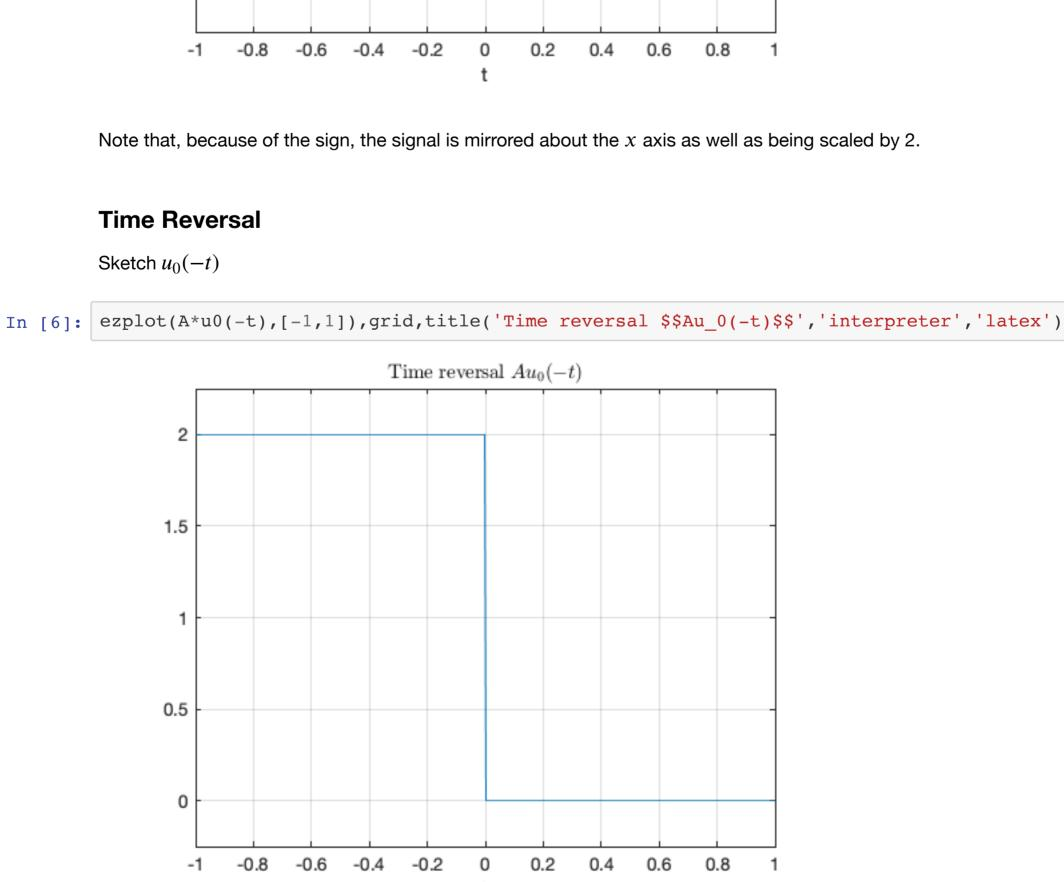

0.4 0.2

0.5

Time advance $u_0(t+T)$

This is a *time delay* ... note for $u_0(t-T)$ the step change occurs T seconds **later** than it does for $u_0(t)$.


In [8]: ezplot(u0(t + T),[-2,1]),grid,title('Time advance \$\$u_0(t + T)\$\$','interpreter','latex')

1.5

Time delay $u_0(t - T)$

The sign on the function argument -t causes the whole signal to be reversed in time. Note that another way of looking at this is

ezplot(u0(t - T),[-1,2]),grid,title('Time delay \$\$u 0(t - T)\$\$','interpreter','latex')

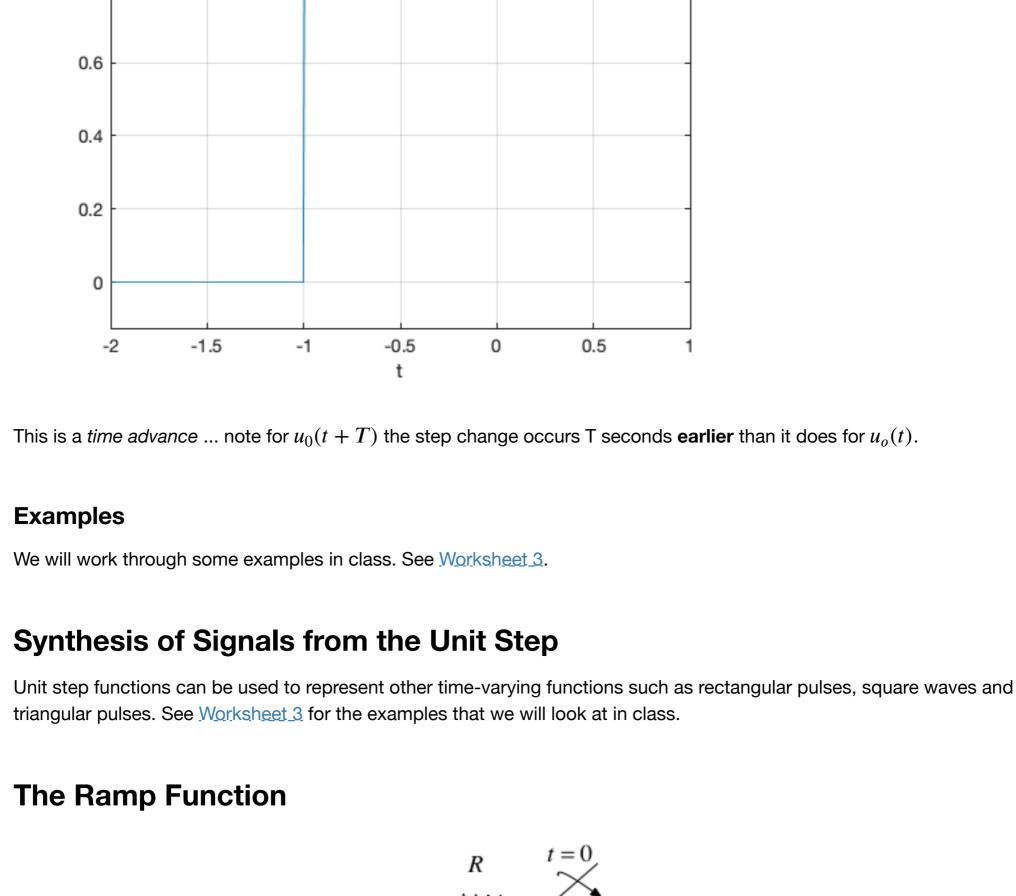

In the circuit shown above i_s is a constant current source and the switch is closed at time t=0.

Since the switch closes at t = 0, we can express the current $i_c(t)$ as

So, the voltage across the capacitor can be represented as

ezplot(vc(t),[-1,4]),grid,title('A ramp function')

where τ is a dummy variable.

and if $v_c(t) = 0$ for t < 0 we have

In [12]: C = 1; is = 1;

vc(t)=(is/C)*t*u0(t);

1.5

1

0.5

0

-1

-0.5

implements a simple integrator circuit).

The unit ramp function is defined as

0

Details are given in equations 1.26—1.29 in Karris.

terms of the unit step function and hence derive an expression for $v_L(t)$.

The Dirac Delta Function

0.5

When the current through the capacitor $i_c(t) = i_s$ is a constant and the voltage across the capacitor is

 $v_c(t) = \frac{1}{C} \int_{-\infty}^{t} i_c(\tau) \ d\tau$

 $i_c(t) = i_s u_0(t)$

 $v_c(t) = \frac{i_s}{C} \int_{-\infty}^t u_0(\tau) \ d\tau = \underbrace{\frac{i_s}{C}} \int_{-\infty}^0 0 \ d\tau + \frac{i_s}{C} \int_0^t 1 \ d\tau$

 $v_C(t) = \frac{i_s}{C} t u_0(t)$

3.5 3 2.5 2

To sketch the wave form, let's arbitrarily let C and i_s be one and then plot with MATLAB.

A ramp function

1.5

t

2

2.5

This type of signal is called a ramp function. Note that it is the integral of the step function (the resistor-capacitor circuit

 $u_1(t) = \int_{-\infty}^{t} u_0(\tau) d\tau$

 $u_1(t) = \begin{cases} 0 & t < 0 \\ t & t \ge 0 \end{cases}$

 $u_0(t) = \frac{d}{dt}u_1(t)$

 $u_{n-1} = \frac{1}{n} \frac{d}{dt} u_n(t)$

3

3.5

Higher order functions of t can be generated by the repeated integration of the unit step function. For future reference, you should determine $u_2(t)$, $u_3(t)$ and $u_n(t)$ for yourself and make a note of the general rule:

Solution

Thus

and

In [11]: syms is L;

vL(t) =

L*is*dirac(t)

or, when a = 0,

The delta function

SO

and

Note

In the circuit shown above, the switch is closed at time t = 0 and $i_L(t) = 0$ for t < 0. Express the inductor current $i_L(t)$ in

Important properties of the delta function **Sampling Property**

delta function is not zero.

Sifting Property

 $t=\alpha$.

MATLAB Confirmation

vL(t) = is * L * diff(u0(t))

Note that we can't plot dirac(t) in MATLAB with ezplot.

The sampling property of the delta function states that

You should work through the proof for youself.

The sifting property of the delta function states that

You should also work through the proof for yourself.

Higher Order Delta Fuctions the nth-order delta function is defined as the nth derivative of $u_0(t)$, that is $\delta^n(t) = \frac{d^n}{dt^n} [u_0(t)]$

The study of descrete-time (sampled) systems is based on this property.

By a procedure similar to the derivation of the sampling property we can show that Also, derivation of the sifting property can be extended to show that **Summary**

function. sampling theory. **Examples** We will do some of these in class. See worksheet3. **Homework**

These are for you to do later for further practice. See <u>Homework 1</u>.

References

{% bibliography --cite %}

• That unit ramp function $u_1(t)$ is the integral of the step function.

In this chapter we have looked at some elementary signals and the theoretical circuits that can be used to generate them. **Takeaways** • You should note that the unit step is the *heaviside function* $u_0(t)$. • Many useful signals can be synthesized by use of the unit step as a "gating function" in combination with other signals • The *Dirac delta* function $\delta(t)$ is the derivative of the unit step function. We sometimes refer to it as the *unit impulse*

• The delta function has sampling and sifting properties that will be useful in the development of time convolution and

The function $\delta'(t)$ is called the *doublet*, $\delta''(t)$ is called the *triplet* and so on. $f(t)\delta'(t-a) = f(a)\delta'(t-a) - f'(t)\delta(t-a)$ $\int_{-\infty}^{\infty} f(t)\delta^{n}(t-\alpha)dt = (-1)^{n} \frac{d^{n}}{dt^{n}} [f(t)] \bigg|_{t=\alpha}$

 $f(t)\delta(t-a) = f(a)\delta(t-a)$

 $f(t)\delta(t) = f(0)\delta(t)$

Multiplication of any function f(t) by the delta function $\delta(t)$ results in sampling the function at the time instants for which the

 $\int_{-\infty}^{\infty} f(t)\delta(t-\alpha)dt = f(\alpha)$

That is, if multiply any function f(t) by $\delta(t-\alpha)$, and integrate from $-\infty$ to $+\infty$, we will get the value of f(t) evaluated at