# **Worksheet 14**

### To accompany Chapter 5.3 Fourier Transforms for Circuit and LTI Systems Analysis

This worksheet can be downloaded as a PDF\_file. We will step through this worksheet in class.

An annotatable copy of the notes for this presentation will be distributed before the second class meeting as Worksheet 14 in the Week 7: Classroom Activities section of the Canvas site. I will also distribute a copy to your personal Worksheets section of the OneNote Class Notebook so that you can add your own notes using OneNote.

You are expected to have at least watched the video presentation of Chapter 5.3 of the notes before coming to class. If you haven't watch it afterwards!

After class, the lecture recording and the annotated version of the worksheets will be made available through Canvas.

**The System Function** 

 $h(t) * u(t) = \int_{-\infty}^{\infty} h(t - \tau)u(\tau) d\tau.$ 

We let

Then by the time convolution property  $h(t) * u(t) = g(t) \Leftrightarrow G(\omega) = H(\omega). U(\omega)$ 

g(t) = h(t) \* u(t)

We call  $H(\omega)$  the system function.

We note that the system function  $H(\omega)$  and the impulse response h(t) form the Fourier transform pair  $h(t) \Leftrightarrow H(\omega)$ 

transforms of  $H(\omega)$  and  $U(\omega)$  to obtain  $G(\omega)$ . Then we take the inverse Fourier transform of  $G(\omega)$  to obtain the response g(t).


# 2. Transform $u(t) \to U(\omega)$

3. Compute  $G(\omega) = H(\omega)$ .  $U(\omega)$ 4. Find  $\mathcal{F}^{-1}\left\{G(\omega)\right\} \to g(t)$ 

**Examples** 

# **Example 1**

Linear Network ult) = 2[u04)+ 40(+-3) 7

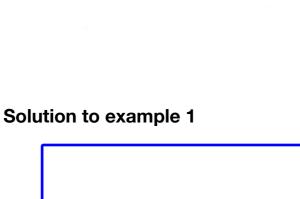





# U1 = fourier(2\*heaviside(t),t,w)

In [ ]: y1 = simplify(ifourier(Y1,w,t)) Get y2

In [ ]: y2 = subs(y1,t,t-3)

title('Solution to Example 1') ylabel('y(t)') xlabel('t [s]') grid

Which after gathering terms gives  $y(t) = 3(1 - 3e^{-2t})u_0(t) - 3(1 - 3e^{-2(t-3)})u_0(t - 3)$ Example 2 Karris example 8.9: for the circuit shown below, use the Fourier transfrom method, and the system function  $H(\omega)$  to compute

y = 3\*heaviside(t) - 3\*heaviside(t - 3) + 3\*heaviside(t - 3)\*exp(6 - 2\*t) - 3\*exp(-2\*t)\*



# title('Solution to Example 2') ylabel('v\_{out}(t) [V]')

xlabel('t [s]')

See ft3\_ex2.m

Example 3

result with Matlab.

grid

H = j\*w/(j\*w + 2)

In []: Vin = fourier(5\*exp(-3\*t)\*heaviside(t),t,w)

vout = -5\*exp(-3\*t)\*heaviside(t)\*(2\*exp(t) - 3)Which after gathering terms gives  $v_{\text{out}} = 5 \left( 3e^{-3t} - 2e^{-2t} \right) u_0(t)$ 

Karris example 8.10: for the linear network shown below, the input-output relationship is:

Vin (+1 = 3e-26 Solution to example 3

 $\frac{d}{dt}v_{\text{out}} + 4v_{\text{out}} = 10v_{\text{in}}$ 

where  $v_{\rm in}=3e^{-2t}$  . Use the Fourier transform method, and the system function  $H(\omega)$  to compute the output  $v_{\rm out}$  . Verify the

In [ ]: Vout=simplify(H\*Vin) In [ ]: vout = simplify(ifourier(Vout,w,t))

title('Solution to Example 3')

15\*exp(-4\*t)\*heaviside(t)\*(exp(2\*t) - 1)

ylabel('v\_{out}(t) [V]')

xlabel('t [s]')

Result is equiavlent to:

Note from tables of integrals

Solution to example 4

See ft3\_ex3.m

H = 10/(j\*w + 4)

Plot result

In [ ]: ezplot(vout)

grid

Matlab verification of example 3

Which after gathering terms gives  $v_{\text{out}}(t) = 15 \left( e^{-2t} \right) - e^{-4t} \right) u_0(t)$ **Example 4** 

the resistor for  $0 < t < \infty$ , and verify the result using Parseval's theorem. Verify the result with Matlab.

Karris example 8.11: the voltage across a 1  $\Omega$  resistor is known to be  $V_R(t)=3e^{-2t}u_0(t)$ . Compute the energy dissipated in

 $\int \frac{1}{a^2 + x^2} \, dx = \frac{1}{a} \arctan \frac{x}{a} + C.$ 

Calcuate energy from time function In []: Vr = 3\*exp(-2\*t)\*heaviside(t);R = 1;

Wr = int(Pr,t,0,inf)

Calculate using Parseval's theorem

In [ ]: Wr=2/(2\*pi)\*int(Fw2,w,0,inf)

See Worked Solutions in the Week 7 Section of the OneNote Class Notebook.

See ft3 ex4.m **Solutions** 

System response from system impulse response Recall that the convolution integral of a system with impulse response h(t) and input u(t) is

**Obtaining system response** 

If we know the impulse resonse h(t), we can compute the system response g(t) of any input u(t) by multiplying the Fourier 1. Transform  $h(t) \rightarrow H(\omega)$ 

Karris example 8.8: for the linear network shown below, the impulse response is  $h(t) = 3e^{-2t}$ . Use the Fourier transform to compute the response y(t) when the input  $u(t) = 2[u_0(t) - u_0(t-3)]$ . Verify the result with MATLAB.

Matlab verification of example 1 In [ ]: syms t w In []: H = fourier(3\*exp(-2\*t)\*heaviside(t),t,w)

In [ ]: Y1=simplify(H\*U1)

Substitute t - 3 into t.

heaviside(t)

In [ ]: y = y1 - y2Plot result In [ ]: ezplot(y)

See ft3\_ex1.m Result is equivalent to:

 $V_L(t)$ . Assume  $i_L(0^-)=0$ . Verify the result with Matlab.

Solution to example 2

Matlab verification of example 2

In [ ]: syms t w

In [ ]: Vout=simplify(H\*Vin) In [ ]: vout = simplify(ifourier(Vout, w, t)) Plot result In [ ]: ezplot(vout)

Result is equivalent to:

In [ ]: syms t w In [ ]: Vin = fourier(3\*exp(-2\*t)\*heaviside(t),t,w)

Matlab verification of example 4 In [ ]: syms t w

 $Pr = Vr^2/R$ 

In [ ]: | Fw = fourier(Vr,t,w)

In [ ]:  $Fw2 = simplify(abs(Fw)^2)$