## • The source code for this page is <u>elementary\_signals/index.ipynb</u>. • You can view the notes for this presentation as a webpage (HTML). • This page is downloadable as a PDF file. Consider the network shown in below where the switch is closed at time t = T and all components are ideal. Express the output voltage $V_{ m out}$ as a function of the unit step function, and sketch the appropriate waveform. **Solution** Before the switch is closed at t < T: $V_{\rm out}=0.$ After the switch is closed for t > T: $V_{\rm out} = V_s$ . We imagine that the voltage jumps instantaneously from 0 to $V_s$ volts at t=T seconds as shown below. We call this type of signal a step function. **The Unit Step Function** $u_0(t)$

In Matlab

File plot\_heaviside.m

heaviside(0)

ezplot(heaviside(t),[-1,1])

syms t

In [2]: plot\_heaviside

ans =

0.5000

8.0

0.4

0.2

1.5

In [3]:

**Elementary Signals** 

Colophon

The preparatory reading for this section is <a href="Chapter1">Chapter 1</a> of {cite} karris which

• presents the sampling and sifting properties of the delta function and

An annotatable worksheet for this presentation is available as Worksheet 3.

• introduces the unit step, unit ramp and dirac delta functions

• begins with a discussion of the elementary signals that may be applied to electrical circuits

• concludes with examples of how other useful signals can be synthesised from these elementary signals.


In Matlab, we use the heaviside function (named after Oliver Heaviside). In [1]: imatlab\_export\_fig('print-svg') % Static svg figures. heaviside(t)

**Simple Signal Operations Amplitude Scaling** Sketch  $Au_0(t)$  and  $-Au_0(t)$ syms t; u0(t) = heaviside(t); % rename heaviside function for ease of use A = 2; % so signal can be plotted ezplot(A\*u0(t),[-1,1]),grid,title('Amplitude scaling \$\$Au\_0(t)\$\$','interpreter','latex') Amplitude scaling  $Au_0(t)$ 

In [4]: ezplot(-A\*u0(t),[-1,1]),grid,title('Amplitude scaling and mirroring \$\$-Au\_0(t)\$\$','interpreter','latex')

Note that, so that it can be plotted, Matlab defines the *heaviside function* slightly differently from the mathematically ideal unit step:


heaviside(t) =  $\begin{cases} 0 & t < 0 \\ 1/2 & t = 0 \\ 1 & t > 0 \end{cases}$ 

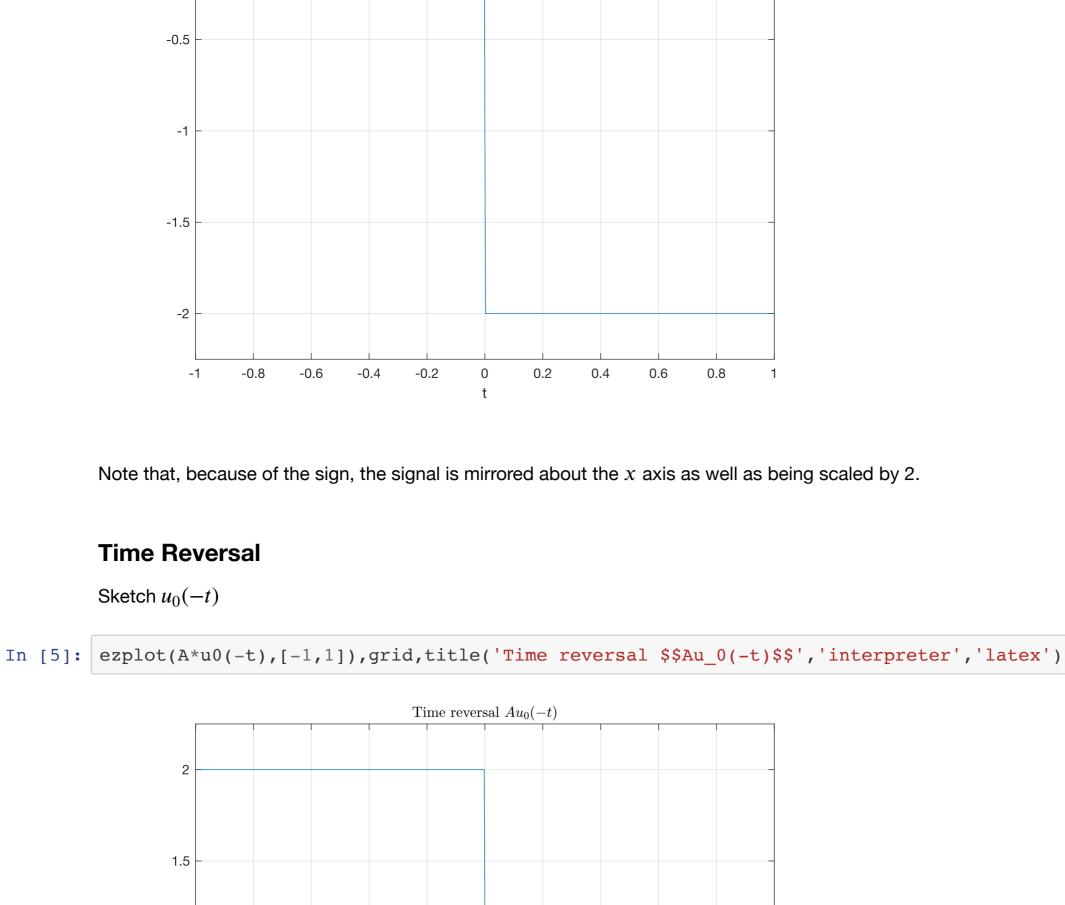

-0.2

Amplitude scaling and mirroring  $-Au_0(t)$ 

Note that the signal is scaled in the y direction.

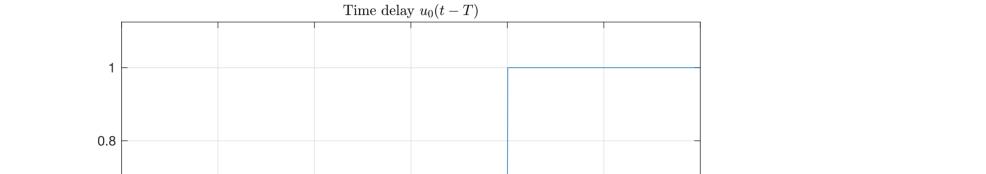

1.5

2

0.5

Time advance  $u_0(t+T)$ 

This is a *time delay* ... note for  $u_0(t-T)$  the step change occurs T seconds **later** than it does for  $u_0(t)$ .

In [7]: ezplot(u0(t + T),[-2,1]),grid,title('Time advance \$\$u\_0(t + T)\$\$','interpreter','latex')

ezplot(u0(t - T),[-1,2]),grid,title('Time delay \$\$u\_0(t - T)\$\$','interpreter','latex')

0.2

about the y axis.

0.6

0.2

-1

0.8

0.6

where au is a dummy variable.

and if  $v_c(t) = 0$  for t < 0 we have

2.5

1.5

0.5

SO

and

The unit ramp function is defined as


-0.5

**Time Delay and Advance** 

Sketch  $u_0(t-T)$  and  $u_0(t+T)$ 

In [6]: T = 1; % again to make the signal plottable.

The sign on the function argument -t causes the whole signal to be reversed in time. Note that another way of looking at this is that the signal is mirrored

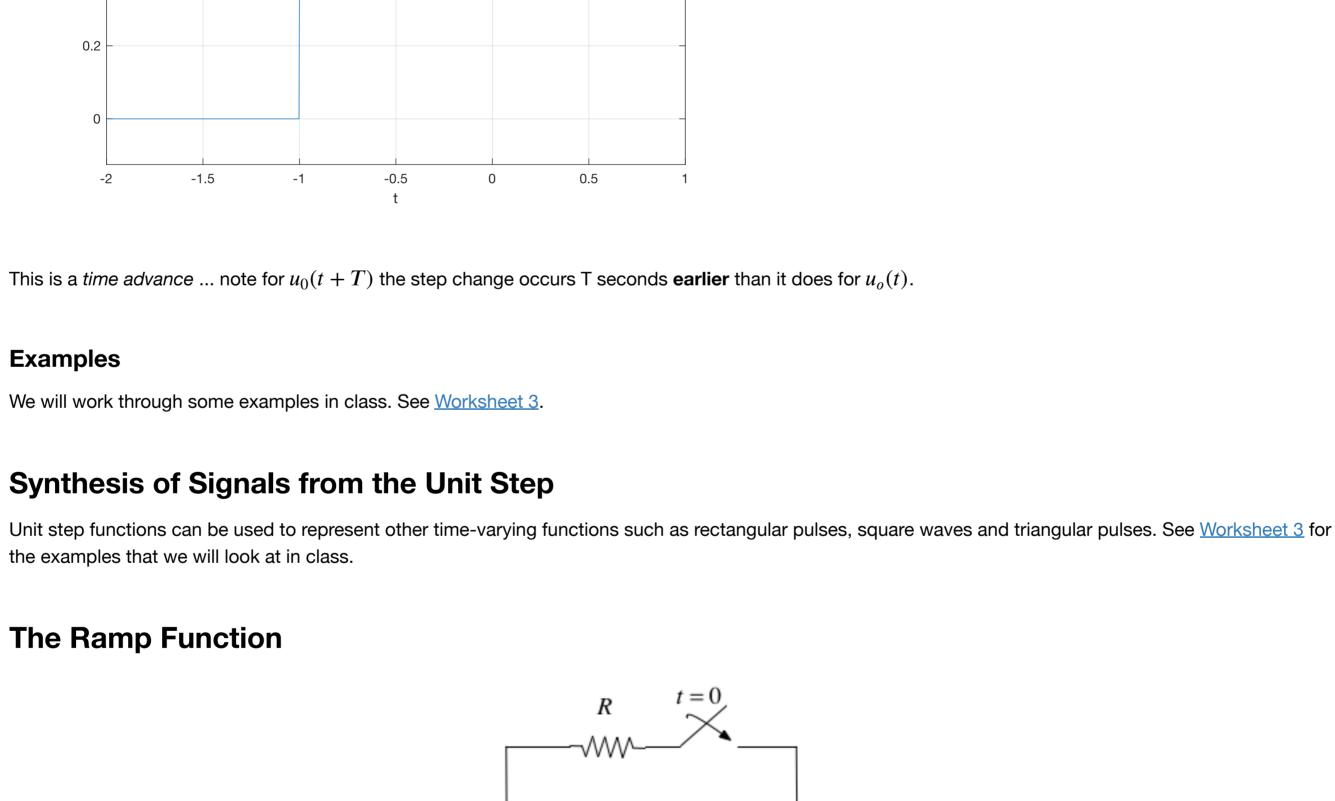

In the circuit shown above  $i_s$  is a constant current source and the switch is closed at time t = 0.

Since the switch closes at t=0, we can express the current  $i_c(t)$  as

So, the voltage across the capacitor can be represented as

ezplot(vc(t),[-1,4]),grid,title('A ramp function')

When the current through the capacitor  $i_c(t) = i_s$  is a constant and the voltage across the capacitor is

 $v_c(t) = \frac{1}{C} \int_{-\infty}^t i_c(\tau) \ d\tau$ 

 $i_c(t) = i_s u_0(t)$ 

 $v_c(t) = \frac{i_s}{C} \int_{-\infty}^t u_0(\tau) \ d\tau = \frac{i_s}{C} \int_{-\infty}^0 0 \ d\tau + \frac{i_s}{C} \int_0^t 1 \ d\tau$ 

 $v_C(t) = \frac{i_s}{C} t u_0(t)$ 

**Note** that in this as in other examples throughout these notes, and in published tables of transforms, the inclusion of  $u_0(t)$  in  $v_c(t)$  acts as a "gating function"

This type of signal is called a ramp function. Note that it is the integral of the step function (the resistor-capacitor circuit implements a simple integrator circuit).

that limits the definition of the signal to the causal range  $0 \le t < \infty$ . To sketch the wave form, let's arbitrarily let C and  $i_s$  be one and then plot with MATLAB. In [8]: C = 1; is = 1; vc(t)=(is/C)\*t\*u0(t);

A ramp function

 $u_1(t) = \int_0^t u_0(\tau) d\tau$  $u_1(t) = \begin{cases} 0 & t < 0 \\ t & t \ge 0 \end{cases}$  $u_0(t) = \frac{d}{dt}u_1(t)$  $u_{n-1} = \frac{1}{n} \frac{d}{dt} u_n(t)$ 

**MATLAB Confirmation** 

vL(t) = is \* L \* diff(u0(t))

Sketch of the delta function

The delta function

and

In [9]: syms is L;

vL(t) =

L\*is\*dirac(t)

**Sampling Property** 

or, when a = 0,

**Sifting Property** 

**Higher Order Delta Fuctions** 

The function  $\delta'(t)$  is called the *doublet*,  $\delta''(t)$  is called the *triplet* and so on.

The sampling property of the delta function states that

The unit impulse or the delta function, denoted as  $\delta(t)$ , is the derivative of the unit step.

This function is tricky because  $u_0(t)$  is discontinuous at t=0 but it must have the properties

 $f(t)\delta(t) = f(0)\delta(t)$ Multiplication of any function f(t) by the delta function  $\delta(t)$  results in sampling the function at the time instants for which the delta function is not zero. The study of descrete-time (sampled) systems is based on this property. You should work through the proof for youself. The sifting property of the delta function states that  $\int_{-\infty}^{\infty} f(t)\delta(t-\alpha)dt = f(\alpha)$ 

By a procedure similar to the derivation of the sampling property we can show that  $f(t)\delta'(t-a) = f(a)\delta'(t-a) - f'(t)\delta(t-a)$ Also, derivation of the sifting property can be extended to show that  $\int_{-\infty}^{\infty} f(t)\delta^n(t-\alpha)dt = (-1)^n \frac{d^n}{dt^n} [f(t)]\Big|_{t=\alpha}$ **Summary** 

**Examples** 

Homework

Note Higher order functions of t can be generated by the repeated integration of the unit step function. For future reference, you should determine  $u_2(t)$ ,  $u_3(t)$  and  $u_n(t)$  for yourself and make a note of the general rule: Details are given in equations 1.26—1.29 in Karris. **The Dirac Delta Function** In the circuit shown above, the switch is closed at time t = 0 and  $i_L(t) = 0$  for t < 0. Express the inductor current  $i_L(t)$  in terms of the unit step function and hence derive an expression for  $v_L(t)$ . **Solution**  $v_L(t) = L \frac{di_L}{dt}$ Because the switch closes instantaneously at t = 0 $i_L(t) = i_s u_0(t)$ Thus  $v_L(t) = i_s L \frac{d}{dt} u_0(t).$ To solve this problem we need to invent a function that represents the derivative of the unit step function. This function is called  $\delta(t)$  or the *dirac delta* function (named after Paul Dirac).

Note that we can't plot dirac(t) in MATLAB with ezplot. Important properties of the delta function

 $f(t)\delta(t-a) = f(a)\delta(t-a)$ 

 $\int \delta(\tau)d\tau = u_0(t)$ 

 $\delta(t) = 0 \ \forall \ t \neq 0.$ 

That is, if multiply any function f(t) by  $\delta(t-\alpha)$ , and integrate from  $-\infty$  to  $+\infty$ , we will get the value of f(t) evaluated at  $t=\alpha$ . You should also work through the proof for yourself. the nth-order delta function is defined as the nth derivative of  $u_0(t)$ , that is  $\delta^n(t) = \frac{d^n}{dt^n} [u_0(t)]$ 

In this chapter we have looked at some elementary signals and the theoretical circuits that can be used to generate them. **Takeaways** • You should note that the unit step is the *heaviside function*  $u_0(t)$ . • Many useful signals can be synthesized by use of the unit step as a "gating function" in combination with other signals • That unit ramp function  $u_1(t)$  is the integral of the step function. • The *Dirac delta* function  $\delta(t)$  is the derivative of the unit step function. We sometimes refer to it as the *unit impulse function*. • The delta function has sampling and sifting properties that will be useful in the development of time convolution and sampling theory.

We will do some of these in class. See Worksheet 3. These are for you to do later for further practice. See Homework 1. References See Bibliography