• presents the sampling and sifting properties of the delta function and • concludes with examples of how other useful signals can be synthesised from these elementary signals. Colophon

Solution

After the switch is closed for t > T,

Elementary Signals The preparatory reading for this section is Chapter_1 of {% cite karris %} which


 begins with a discussion of the elementary signals that may be applied to electrical circuits • introduces the unit step, unit ramp and dirac delta functions

- You can view the notes for this presentation as a webpage (HTML). • This page is downloadable as a PDF file.


An annotatable worksheet for this presentation is available as Worksheet 3.

• The source code for this page is content/elementary_signals/index.ipynb.


Consider the network shown below, where the switch is closed at time t = T and all components are ideal.

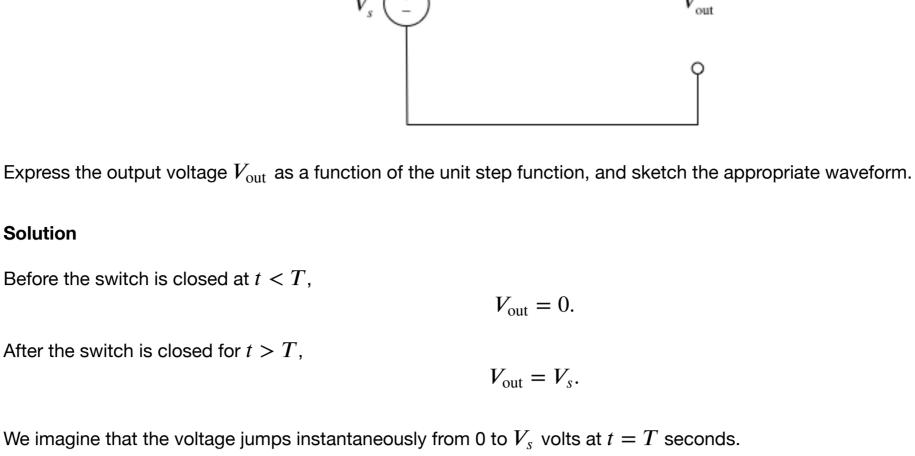

Before the switch is closed at t < T,

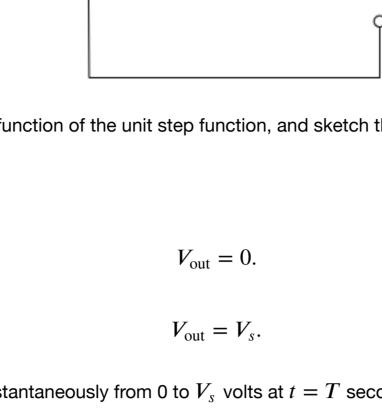

We call this type of signal a step function.

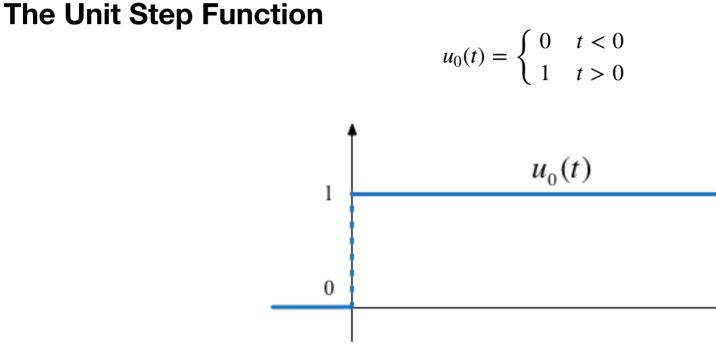

In Matlab In Matlab, we use the heaviside function (named after Oliver Heaviside).

ezplot(heaviside(t),[-1,1])heaviside(0) Created file '/Users/eechris/dev/eg-247-textbook/content/elementary_signals/plot_heaviside.m'

%%file plot_heaviside.m

In [2]:

In [3]:

syms t

ans =

plot_heaviside

0.5000

0.8

0.2

0

-1

0.5

0

','latex')

0

-0.5

-1

-1.5

-2

-0.8

Sketch $u_0(t-T)$ and $u_0(t+T)$

0.8

0.6

0.4

0.2

0

0.8

0.6

0.4

0.2

0

Examples

-2

and if $v_c(t) = 0$ for t < 0 we have

In [12]: C = 1; is = 1;

vc(t)=(is/C)*t*u0(t);

3.5

3

2.5

2

1.5

1

0.5

0

-1

SO

and

Solution

Thus

and

The delta function

Sketch of the delta function

-0.5

implements a simple integrator circuit).

The unit ramp function is defined as

0

0.5

So, the voltage across the capacitor can be represented as

ezplot(vc(t),[-1,4]),grid,title('A ramp function')

-1.5

In [7]: T = 1; % again to make the signal plottable.

-0.6

-0.4

-0.2

0

0.2

0.4

0.6

0.8

In [5]:

0.6 0.4

-0.2

0.2

0.6


0.8

heaviside(t)

-1 -0.8 -0.6 -0.4 -0.2 0 0.2 0.4 0.6 0.8 t Note that the signal is scaled in the *y* direction.

ezplot(-A*u0(t),[-1,1]),grid,title('Amplitude scaling and mirroring \$\$-Au_0(t)\$\$','interpreter

Amplitude scaling and mirroring $-Au_0(t)$

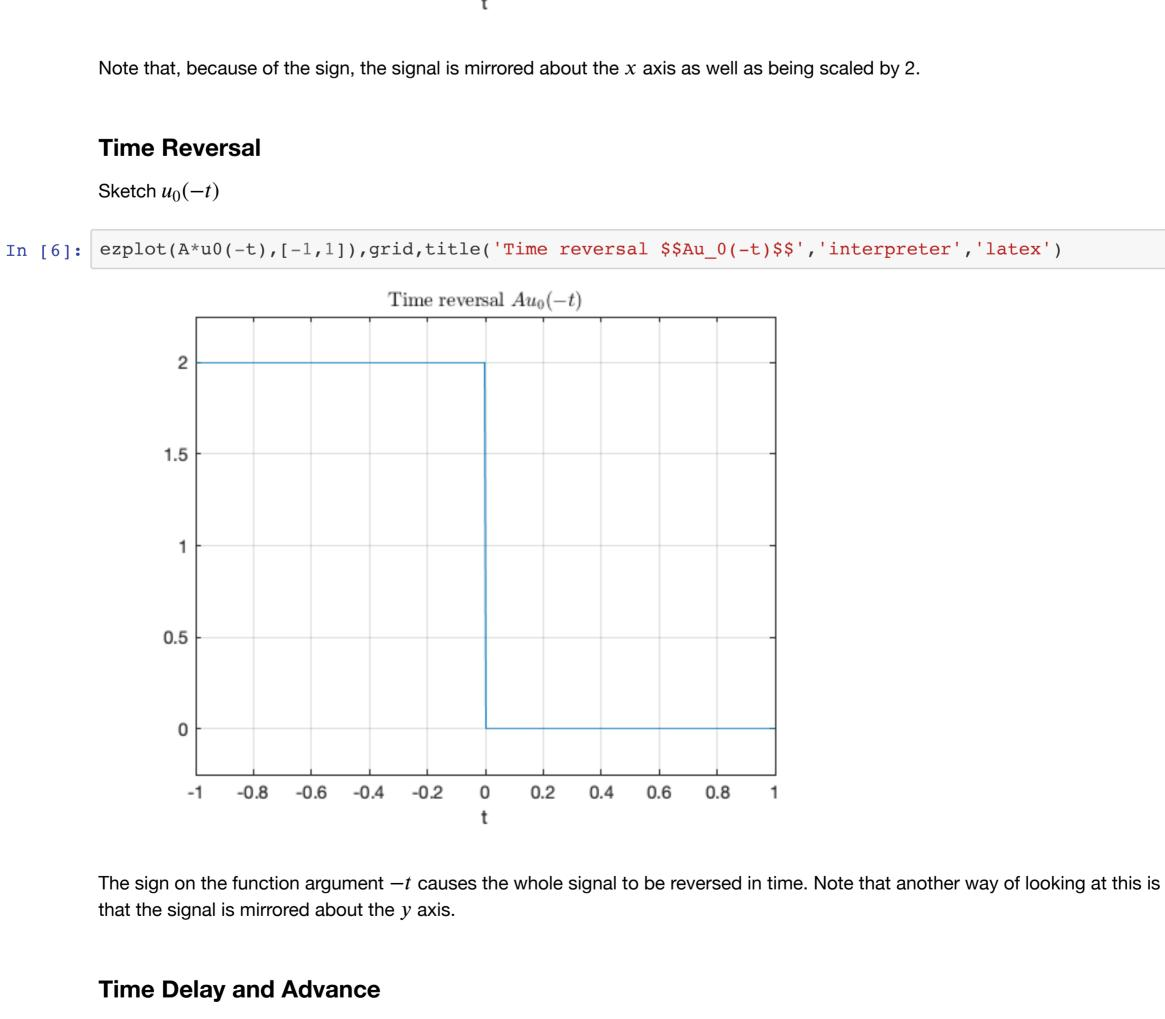

-0.5 0 0.5 1.5 -1

Time advance $u_0(t+T)$

-0.5

t

0

0.5

-1


We will work through some examples in class. See Worksheet 3.

This is a *time delay* ... note for $u_0(t-T)$ the step change occurs T seconds **later** than it does for $u_0(t)$.

In [8]: ezplot(u0(t + T),[-2,1]),grid,title('Time advance \$\$u_0(t + T)\$\$','interpreter','latex')

ezplot(u0(t - T),[-1,2]),grid,title('Time delay \$\$u_0(t - T)\$\$','interpreter','latex')

Time delay $u_0(t - T)$

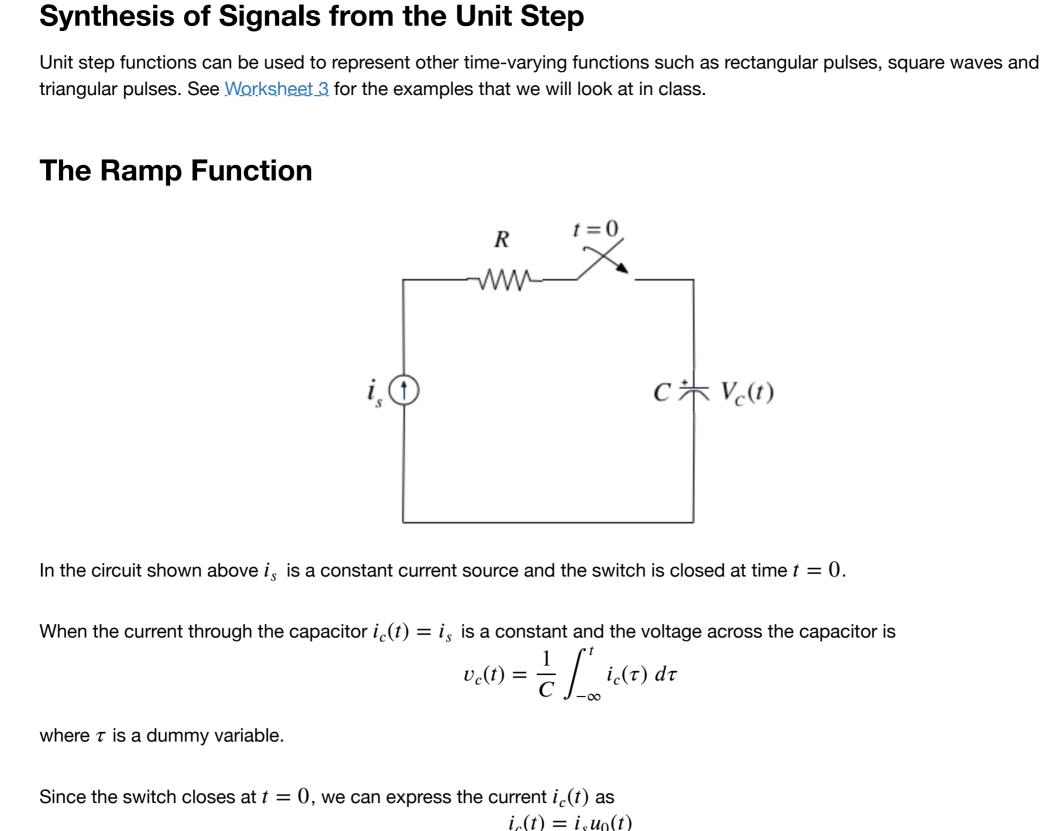

 $v_c(t) = \frac{i_s}{C} \int_{-\infty}^t u_0(\tau) \ d\tau = \underbrace{\frac{i_s}{C}} \int_{-\infty}^0 0 \ d\tau + \frac{i_s}{C} \int_0^t 1 \ d\tau$

 $v_C(t) = \frac{i_s}{C} t u_0(t)$

Note that in this as in other examples throughout these notes, and in published tables of transforms, the inclusion of $u_0(t)$ in

 $v_c(t)$ acts as a "gating function" that limits the definition of the signal to the causal range $0 \le t < \infty$.

To sketch the wave form, let's arbitrarily let C and i_s be one and then plot with MATLAB.

A ramp function

1.5

t

1

2


2.5

This type of signal is called a ramp function. Note that it is the integral of the step function (the resistor-capacitor circuit

 $u_1(t) = \int_{-\infty}^t u_0(\tau) d\tau$

3

3.5

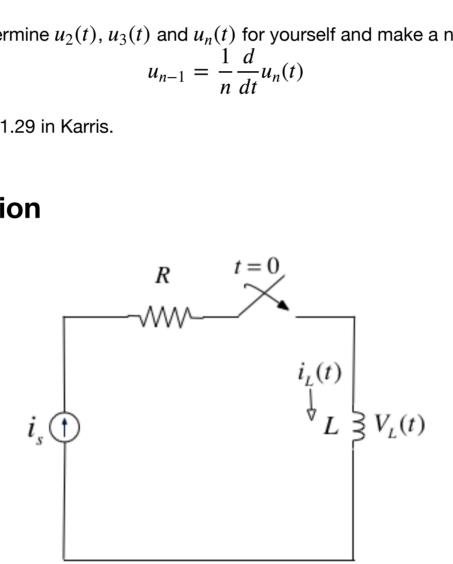

In the circuit shown above, the switch is closed at time t = 0 and $i_L(t) = 0$ for t < 0. Express the inductor current $i_L(t)$ in

 $v_L(t) = L \frac{di_L}{dt}$

 $i_L(t) = i_s u_0(t)$

 $v_L(t) = i_s L \frac{d}{dt} u_0(t).$

To solve this problem we need to invent a function that represents the derivative of the unit step function. This function is called

 $\int_{0}^{t} \delta(\tau)d\tau = u_0(t)$

 $\delta(t) = 0 \ \forall \ t \neq 0.$

terms of the unit step function and hence derive an expression for $v_L(t)$.

Because the switch closes instantaneously at t = 0

 $\delta(t)$ or the dirac delta function (named after Paul Dirac).

function.

{% bibliography --cite %}

You should also work through the proof for yourself. **Higher Order Delta Fuctions**

 $t = \alpha$.

References

Examples We will do some of these in class. See worksheet3. **Homework** These are for you to do later for further practice. See Homework 1.

• You should note that the unit step is the *heaviside function* $u_0(t)$. • Many useful signals can be synthesized by use of the unit step as a "gating function" in combination with other signals • The Dirac delta function $\delta(t)$ is the derivative of the unit step function. We sometimes refer to it as the unit impulse • The delta function has sampling and sifting properties that will be useful in the development of time convolution and

 $\delta^n(t) = \frac{d^n}{dt^n} [u_0(t)]$ $f(t)\delta'(t-a) = f(a)\delta'(t-a) - f'(t)\delta(t-a)$ Also, derivation of the sifting property can be extended to show that $\int_{-\infty}^{\infty} f(t)\delta^{n}(t-\alpha)dt = (-1)^{n} \frac{d^{n}}{dt^{n}} [f(t)] \bigg|_{t=\alpha}$ **Summary** In this chapter we have looked at some elementary signals and the theoretical circuits that can be used to generate them. **Takeaways**

That is, if multiply any function f(t) by $\delta(t-\alpha)$, and integrate from $-\infty$ to $+\infty$, we will get the value of f(t) evaluated at

 $u_1(t) = \begin{cases} 0 & t < 0 \\ t & t \ge 0 \end{cases}$ $u_0(t) = \frac{d}{dt}u_1(t)$ Note Higher order functions of t can be generated by the repeated integration of the unit step function. For future reference, you should determine $u_2(t)$, $u_3(t)$ and $u_n(t)$ for yourself and make a note of the general rule: Details are given in equations 1.26-1.29 in Karris. The Dirac Delta Function

In [11]: syms is L; vL(t) = is * L * diff(u0(t))vL(t) =L*is*dirac(t) Note that we can't plot dirac(t) in MATLAB with ezplot.

The unit impulse or the delta function, denoted as $\delta(t)$, is the derivative of the unit step.

This function is tricky because $u_0(t)$ is discontinuous at t=0 but it must have the properties

the nth-order delta function is defined as the nth derivative of $u_0(t)$, that is The function $\delta'(t)$ is called the *doublet*, $\delta''(t)$ is called the *triplet* and so on. By a procedure similar to the derivation of the sampling property we can show that

• That unit ramp function $u_1(t)$ is the integral of the step function. sampling theory.

MATLAB Confirmation Important properties of the delta function **Sampling Property** The sampling property of the delta function states that $f(t)\delta(t-a) = f(a)\delta(t-a)$ or, when a = 0, $f(t)\delta(t) = f(0)\delta(t)$ Multiplication of any function f(t) by the delta function $\delta(t)$ results in sampling the function at the time instants for which the delta function is not zero. The study of descrete-time (sampled) systems is based on this property. You should work through the proof for youself. **Sifting Property** The sifting property of the delta function states that $\int_{-\infty}^{\infty} f(t)\delta(t-\alpha)dt = f(\alpha)$