


Star 1000

Model 1500




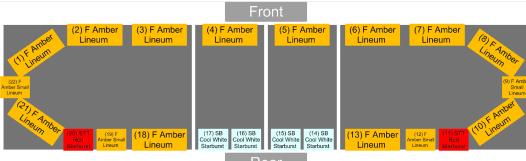

Light Head Type and Style Amber Lineum Position 01 Amber Lineum Amber Lineum Position 04 Position 05 Position 06 Position 07 Position 07 Position 08 Position 09 Position 10 Position 11 Position 12 Position 12 Position 13 Position 14 Position 15 Position 16 Position 16 Position 17 Position 17 Position 18 Position 19 Position 19 Position 19 Position 19 Position 20 Position 21 Position 21 Position 21 Position 21 Position 22 Position 21 Position 22 Position 21 Position 21 Position 22 Position 21 Amber Small Lineum	Amperage 0.550
--	--

Customer	Order Number / PO	Order Date Jun 23, 2015
Order Notes		


Model 1500 Production Copy - Bill of Materials

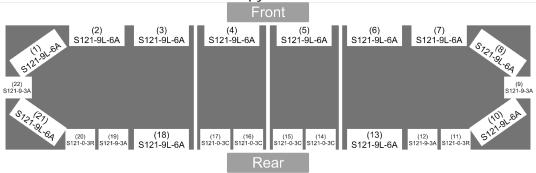


Quantity	Component	Description
12	S121-9L-6A	Amber Lineum
4	S121-9-3A	Amber Small Lineum
2	S121-0-3R	Red Starburst
4	S121-0-3C	Cool White Starburst

Passenger

Wiring Diagram

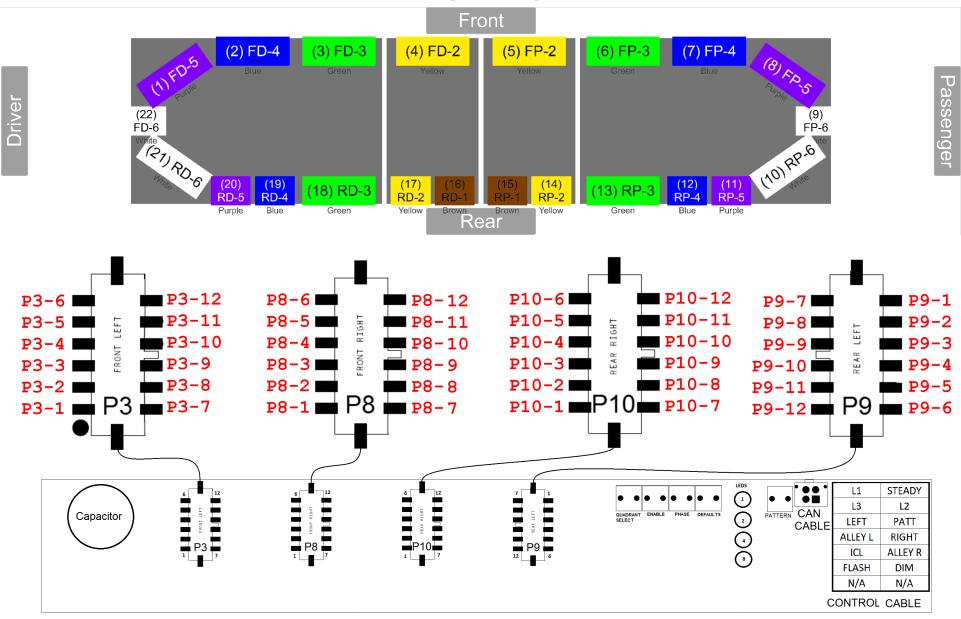

Bar Programming

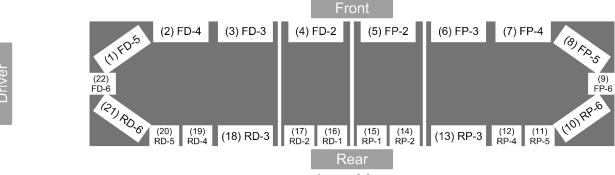

Rear

Input Map

Default Program

Takedown / Work Lights Flashing Alley & Pursuit Pattern Dimmer Turn Right Right Alley Level 1 Level 2 Brake Lights
ICL
Turn Left
Left Alley

Default Program

Function Definitions

Function	Positions		Dottorn(s)
Function	Phase A	Phase B	Pattern(s)
Takedown / Work Lights	RP-1,	RP-1, RD-1	
Level 1	RP-2 thru -4, RP-6	RD-2 thru -4, RD-6	Slow Triple
Level 2	FP-2 thru -6, RP-2 thru -4, RP-6	FD-2 thru -6, RD-2 thru -4, RD-6	Quadruple w/ Post Pop
Left Alley	FD-6		Steady Burn
Right Alley	FP-6		Steady Burn
ICL	FP-5	FD-5	Flicker
Dimmer	FD-2 thru -6, FP-2 thru -6, RP-1 thru -6, RD-1 thru -6		Steady Burn
Flashing Pursuit	RP-1, RD-1		Fast Triple
Flashing Alley	FP-6	FD-6	Flicker
Turn Left	RD-5		Steady Burn
Turn Right	RP-5		Steady Burn
Brake Lights	RP-5, RD-5		Steady Burn