


Star 1000

STAR**SIGNAL**

Model 1500

From (2) F Amber Lineum (3) F Amber Lineum (4) F Amber Lineum

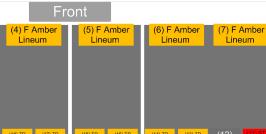


Passenger

Rear

Position 01 Position 02 Position 03 Position 04 Position 05 Position 07 Position 08 Position 09 Position 10	Light Head Type and Style Amber Lineum Cool White Starburst Amber Lineum Red Starburst	Amperage 0.550 0.550 0.550 0.550 0.550 0.550 0.550 0.550 0.550 0.550 0.550
Position 12 Position 13 Position 14 Position 15 Position 16 Position 17 Position 18 Position 20 Position 20 Position 21 Position 22 Position 23 Position 24	Amber Small Lineum Cool White Starburst	0.550 0.550 0.550 0.550 0.550 0.550 0.550 0.550 0.550

Customer	Order Number / PO	Order Date
		Jun 23, 2015
Order Notes		


Model 1500 Production Copy - Bill of Materials

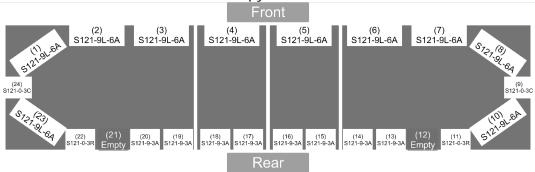


Quantity	Component	Description
10	S121-9L-6A	Amber Lineum
2	S121-0-3C	Cool White Starburst
2	S121-0-3R	Red Starburst
8	S121-9-3A	Amber Small Lineum

Passenger

Wiring Diagram

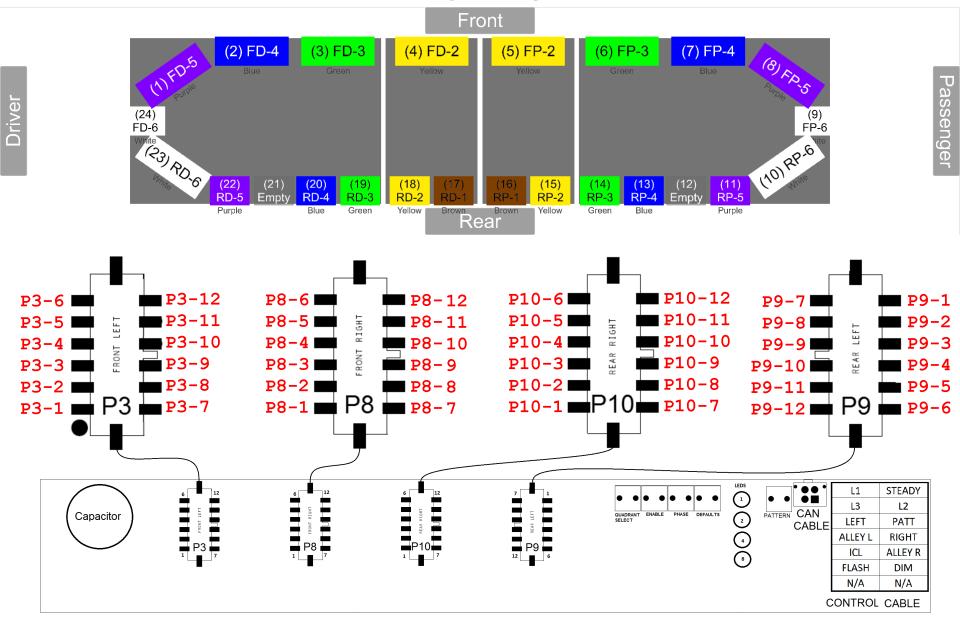

Bar Programming

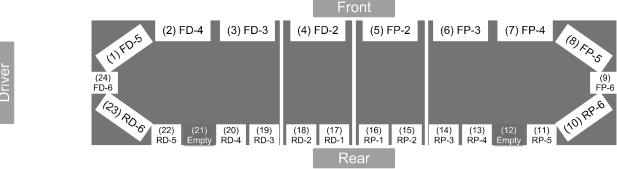

Rear

Input Map

Default Program

Takedown / Work Lights Flashing Alley & Pursuit Pattern Turn Right Right Alley Direct Right Level 1 Level 2 Brake Lights Turn Left Left Alley Direct Left

Default Program

Function Definitions

Function	Positions		D-11(-)
	Phase A	Phase B	Pattern(s)
Takedown / Work Lights			Steady Burn
Level 1	RP-1 thru -6	RD-1 thru -6	Slow Triple
Level 2	FP-2 thru -6, RP-5 thru -6	FD-2 thru -6, RD-5 thru -6	Quadruple w/ Post Pop
Direct Left	RP-1 thru -4, RD-1 thru -4		Snake
Direct Right	RP-1 thru -4, RD-1 thru -4		Snake
Left Alley			Steady Burn
Right Alley			Steady Burn
Flashing Pursuit			
Flashing Alley			
Turn Left	RD-5		Steady Burn
Turn Right	RP-5		Steady Burn
Brake Lights	RP-5, RD-5		Steady Burn