


Star 1000

STARSIGNAL VEHICLE PRODUCTS

Model 1300

Driver

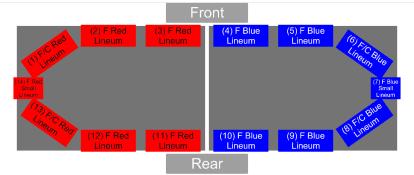


'assenger

		Light Head Type and Style	Amperage
Position	01	Red Lineum	0.550
Position	02	Red Lineum	0.550
Position	03	Red Lineum	0.550
Position	04	Blue Lineum	0.550
Position	05	Blue Lineum	0.550
Position	06	Blue Lineum	0.550
Position	07	Blue Small Lineum	0.550
Position	8 0	Blue Lineum	0.550
Position	09	Blue Lineum	0.550
Position	10	Blue Lineum	0.550
Position	11	Red Lineum	0.550
Position	12	Red Lineum	0.550
Position	13	Red Lineum	0.550
Position	14	Red Small Lineum	0.550


Customer	Order Number / PO	Order Date Jun 23, 2015
Order Notes		

Model 1300 Production Copy - Bill of Materials

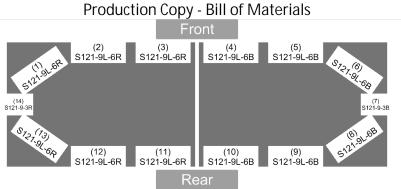


Quantity	Component	Description
6	S121-9L-6R	Red Lineum
6	S121-9L-6B	Blue Lineum
1	S121-9-3B	Blue Small Lineum
1	S121-9-3R	Red Small Lineum

Wiring Diagram

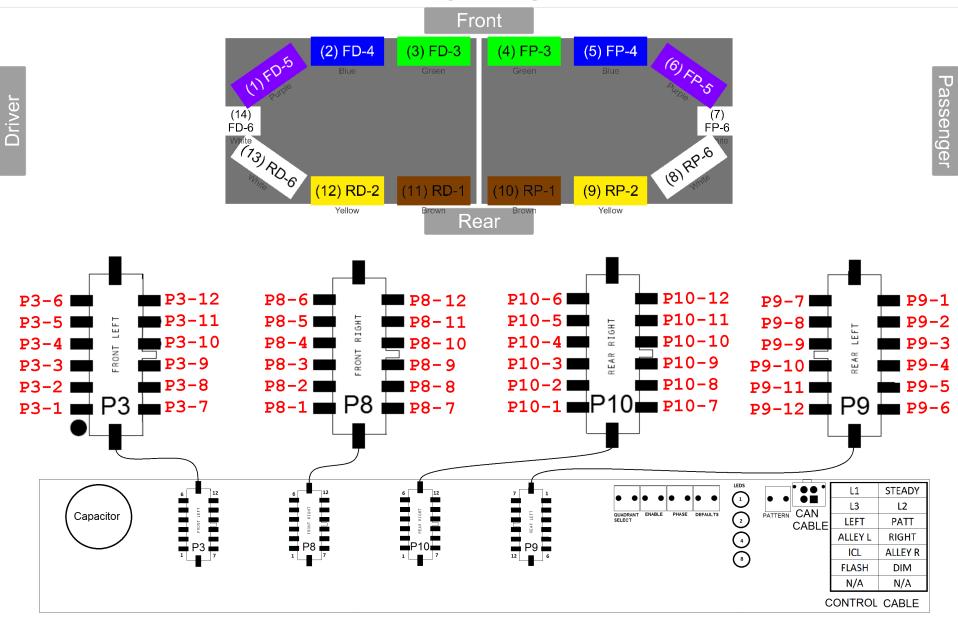

Bar Programming

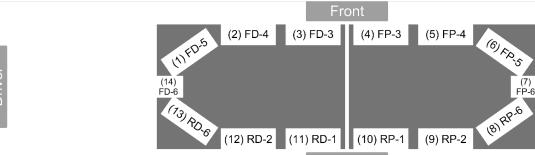

assenger

Rear

Input Map

Default Program 1 Level 1 Takedown / Work Lights
Level 2 Flashing Alley & Pursuit
Level 3 Pattern
ICL Dimmer
Direct Left Direct Right
Left Alley Right Alley

Default Program 1

Function Definitions

Function	Positions		Dottorn(s)
FUNCTION	Phase A	Phase B	Pattern(s)
Takedown / Work Lights		Steady Burn	
Level 1	RP-1 thru -2, RP-6	RD-1 thru -2, RD-6	Slow Triple
Level 2	FP-3 thru -5	FD-3 thru -5	Quadruple w/ Post Pop
Level 3	FP-3 thru -5, RP-1 thru -2, RP-6	FD-3 thru -5, RD-1 thru -2, RD-6	Random 2
Direct Left	RP-1 thru -2, RD-1 thru -2		Snake
Direct Right	RP-1 thru -2, RD-1 thru -2		Snake
Left Alley	FD-6		Steady Burn
Right Alley	FP-6		Steady Burn
ICL	FP-5	FD-5	Flicker
Dimmer	FD-3 thru -6, FP-3 thru -6, RP-1 thru -2, RP-6, RD-1 thru -2, RD-6		Steady Burn
Flashing Pursuit			
Flashing Alley	FP-6	FD-6	Flicker