Rhino FFB Clone DIY Assembly Instructions

Introduction and Notes

- This instruction set is for a DIY clone version of the VPForceControls force feedback joystick base.
- This build is based on the motor kit from VPForce, 2x57BLF03 + USB kit.
- Belt sizes are based on 74tx12t pulleys.
- All 3d Printed parts are adapted from the Mabo1972s design Github. https://github.com/mabo1972/FFB-Joystick-Base-Plywood
- Links for parts purchase have not been provided due to possible vendor changes and people needing to source from many countries. Therefore I have tried to use the most correct and common names for parts.
- Parts have been sourced from Amazon, Digikey and the Nutty Company, but can likely be found elsewhere.
- All instructions are based on the included parts list and required 3d Printed parts in this guide and Github.
- These instructions include the 20 degree throw limiters which can be omitted if desired, and the spacer printed to then mount the boot assembly.

• BUILD NOTES

- The E-Stop button interrupts the **POSITIVE** side of the power to the motors via the Mainboard
- o **POLARITY MATTERS.** Pay attention to motor power connections!
- Motor data cable polarity is already correct with included cables. BE SURE THEY ARE PLUGGED INTO THE PROPER DATA PORT FOR EACH MOTOR. Motors are labeled.
- The USB connector in the VPForce kit is already terminated properly. Just plug it into the proper port on the main board.
- O CLEAN UP ALL PRINTED PARTS and test fit. **ESPECIALLY THE BEARING** POSTS AND GIMBAL ENDS.
- Watch the following video for some basics about the kit from VPForce
 - o Technical Intro Video

These instructions assume you are familiar with things like bearings, soldering, basic circuit wiring and 3D printing.

1

12/27/2023

Parts List


Electronics

- (1) 2x57BLF03 + USB kit from VPforce
- (1) Cuedevices MD-50PL100 is required to terminate grip connection
- (1) XH2.5 JST connector kit
 - o 2P for Fan and 5P for Grip Wire
- (1) 22mm Latching Emergency Stop Push Button
- (2) 10K Ohm Rotary Potentiometer
- (1) 80mm x 15mm PC cooling Fan
- (1) 5.5mm x 2.1mm 2 Pin DC Power Female Panel Mount Jack Socket Connector
- (1) 20VDC 9a Power Supply with 5.5mm male plug


Bearings, Screws and Mecahnicals

- (8) 15x24x5mm 6802RS Bearing (Gimbal Pillow Block Bearings)
- (2) 5x16x5mm F625ZZ Flanged Bearing (Core Joint to Stick Adapter Bearings)
- (4) 40x52x7mm 68082RS Bearing (Gimbal Arm to Case Bearings)
- (1) M5x60 Socket Head Screw (Stick Connector to Core Joint)
- (2) M5 Nut (Stick Connector to Core Joint)
- (3) M5 washer (Stick Connector to Core Joint)
- (4) M5x10 Button Head Socket Cap Screw (Stick Core to Pillow Block Bearings)
- (8) M5x10 Button Head Socket Cap Screw (Stick Connector to Gimbal Pillow Blocks)
- (12) M4x35 Socket Head Screw (74T Pulleys)
- (4) M4x35 Boot Clamp Assembly
- (12) M4 Nut (74T Pulley to Main Gimbal Mounts)
- (24) M4 washer (74T Pulleys)
- (40) M4x12 Flat Head Socket Cap Screw (Case Edges)
- (8) M6x16 Button Head Socket Cap Screw (Motor Mounts)
- (20) M3x16 Socket Head Screw (Bearing Retainers and Boot Collar)
- (4) M3x30 Socket Head Screw (Cooling Fan)
- (16) M3 Nut (Cooling Fan and Bearing Retainers)
- (4) M3 washer (Cooling Fan)
- (2) HTD-15 12tooth Aluminum Pulley 8mm Bore WITH GRUB SCREWS
- (1) 420-5M-15 HTD 420mm Timing Belt (Roll)
- (1) 465-5M-15 HTD 465mm Timing Belt (Pitch)


Printed Parts Reference

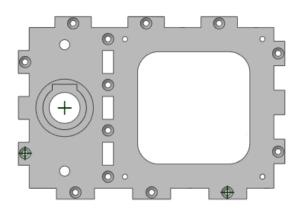


Top Panel

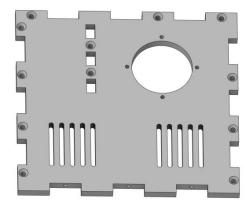


Left Panel

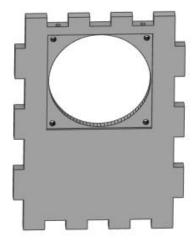


Front Panel

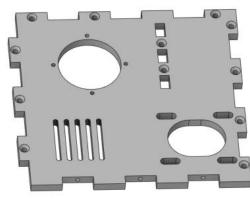


Right Panel

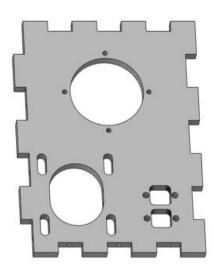


Rear Panel

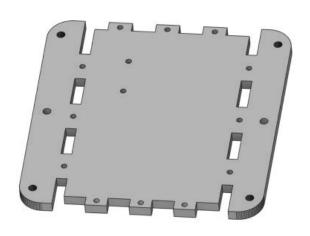

Bottom Panel

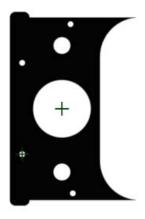

Top Panel Cover

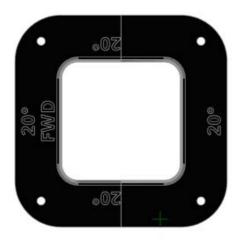

Throw Limiters



Boot Clamps



Stick Boot Collar



Inner Bearing Retainers

Knobs



Outer Bearing Retainers




Mid Outer Bearing Retainer and Mainboard mount






Thrustmaster Stick Connector

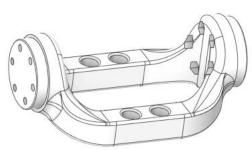

Gimbal Frames (X2)




Core Joint and Stick Connector Gimbal Pillow Blocks (X4)

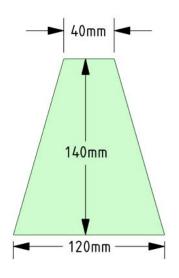

Boot Template


5 12/27/2023

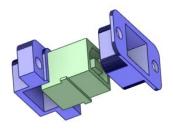

USB Plug Retainer



Power Socket Retainer

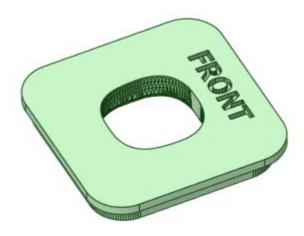


Centering Tool

Assembly

Electrical Connections


- 5pin mini din soldered to 5pin JST for grip buttons
- Fan(s) soldered to 2pin JST plug and connected to main board
- Potentiometers connected to 3pin JST on main board
- Power positive soldered to E-Stop switch and then connected to main board terminal
- Power ground soldered to power plug and then connected to main board terminal
- Motor Power leads connected to main board terminals
- Motor Data leads plugged into corresponding 2pin JST on main board

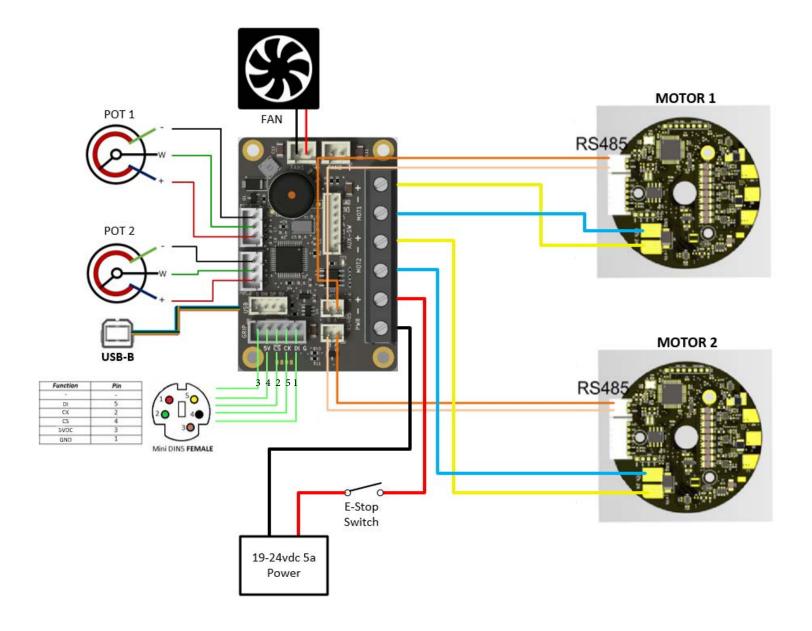

8

12/27/2023


• Below is shift register wiring to the VPC mainboard, if using a shift register.

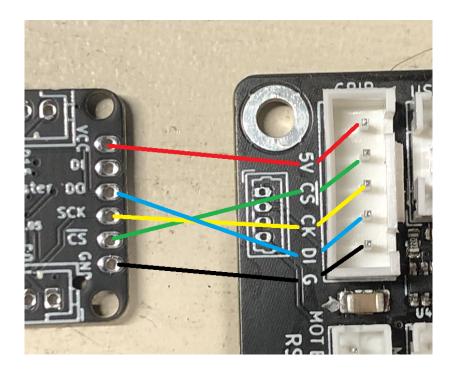

• Insert two 6802 bearings into all four Core Joint Pillow Blocks

The bearing faces should be flush with the outer faces of the Pillow

Block

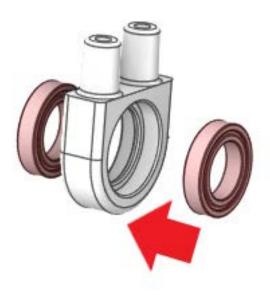


Mount Pillow Block/Bearing Assemblies onto Thrustmaster Stick Connector

• Slide one Pillow Block/Bearing Assembly onto each bearing post of the Thrustmaster Stick Connector


SUPPORT THE BEARING POSTS ON THE STICK FROM THE INSIDE (GREEN ARROW) AS YOU SLIDE THE PILLOW BLOCKS ON TO PREVENT BREAKING THE STICK AT THE FORK.

- Secure with 19mm washers and M4x10 screws
- The Pillow Blocks should spin freely when secured

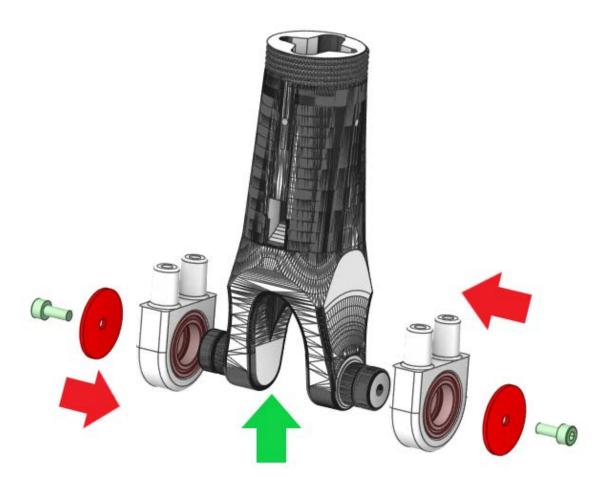


Mount Pillow Block/Bearing Assemblies onto Core Joint

- Slide one Pillow Block/Bearing Assembly onto each bearing post of the Core Joint
- Secure with 19mm washers and M4x10 screws
- The Pillow Blocks should spin freely when secured

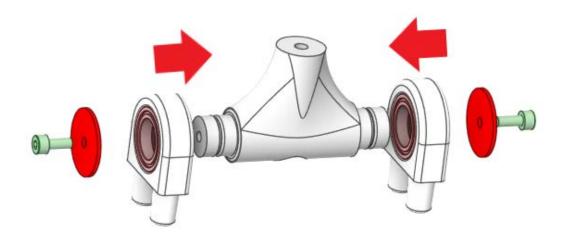


Assemble Stick Connector/Core Joint

- Wire the 5pin mini din connector for the grip wiring to the JST connector for the mainboard.
 - o Be sure to extend the wires for enough reach to the mainboard.
 - o Extend the wires and solder them to the loose wires for the JST connector.
 - o Run the extended wires through the stick connector and out the front hole.
 - Insert the wires into the connector in the proper locations in the JST connector based on the diagrams
- Mount TM Stick Connector to Core Joint as shown
- Insert M5x60 bolt into Core Joint
- Snug an M5 nut and washer down onto Core Joint
- Place an M5 washer on top of M5 nut
- Place TPU bumper on Core Joint around M5 Nut and Washers
- Snap F625ZZ bearing into base of Stick Connector
- Press Stick Connector onto Core Joint
- Drop second F625ZZ bearing into Stick Connector and press down as shown
- Place a dab of loctite into the M5 nut
- Place a dab of loctite into the M5 nut
- Drop M5 washer onto M5x60 Bolt and thread M5 Nut onto Bolt and make snug (no need to HULK it down)
- DO NOT USE A WASHER DIAMETER WHICH REACHES THE OUTER BEARING RACE EDGE AS THIS WILL LOCK UP THE JOINT
- IT NEEDS TO BE ABLE TO ROTATE SLIGHTLY

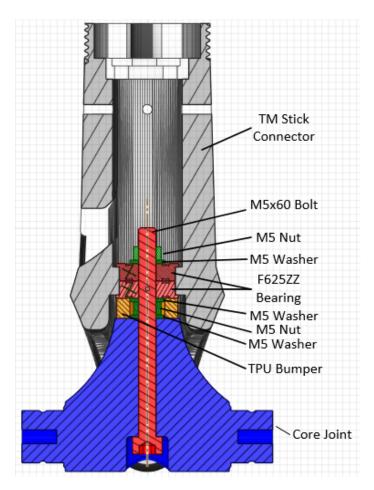


STEP 5 Prep Gimbal Frames

- Press a 6808 bearing on to each end of the Roll and Pitch Gimbal Frames
- The Gimbal face which mates to the pulleys should extend beyond the bearing face and the bearings should be fully seated against the frame
- Glue (6) M4 nuts into the Gimbal Frame recesses
- You only need to glue nuts into one side of the frame where the pulley will mount

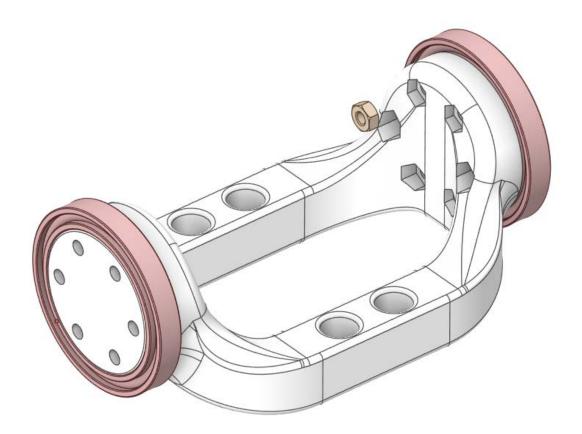


Mount The Roll Gimbal Frame to Pillow Block/Bearing Assemblies

- Push down and mount Roll Gimbal Frame to the Pillow Block/Bearing Assemblies
- Be sure to position the end of the Gimbal Frame with the nuts glued in from Step5, to the REAR (opposite of the hole in the Stick Adapter)
- Secure Pillow Blocks with (2) M5 bolts each

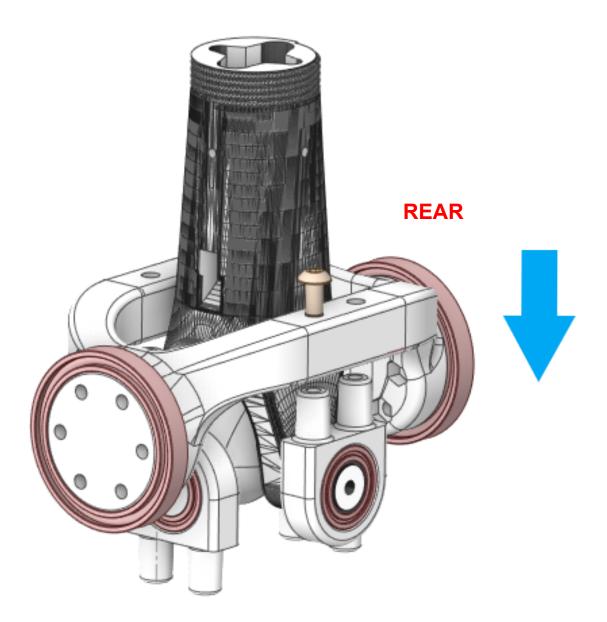


Mount The Pitch Gimbal Frame to Pillow Block/Bearing Assemblies

- Be sure to position the end of the Gimbal Frame with the nuts glued in from Step5, to the RIGHT
- Push down and mount the Pitch Gimbal frame into Pillow Block/Bearing Assemblies
- Secure Pillow Blocks with (2) M5 bolts each
- Run the Grip Button Wire down through the center of the Gimbal Assembly

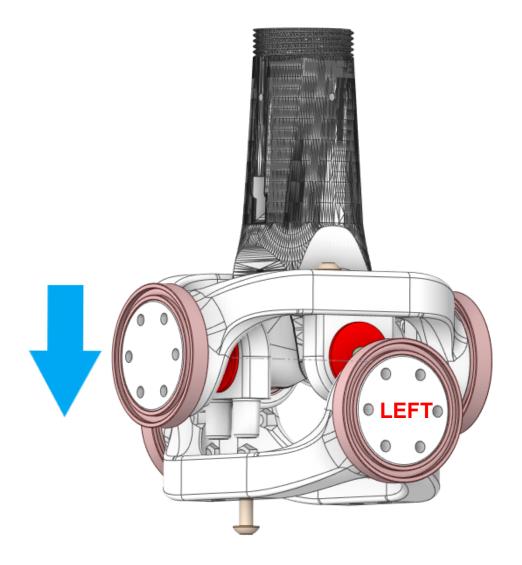



• Slide the Gimbal Group into the Rear, Mid, and Right Panel mounting holes

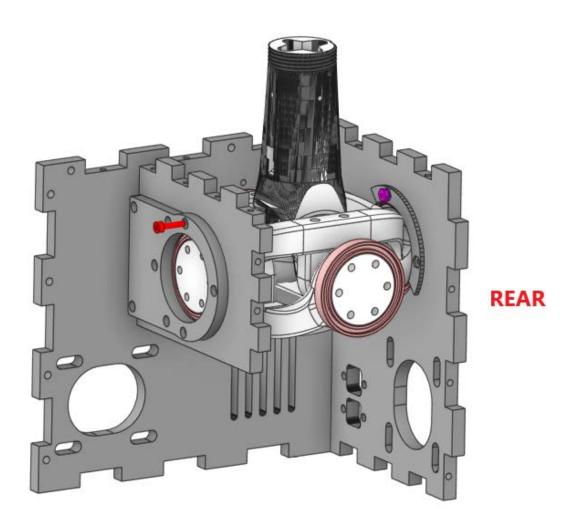

Install Stick/Gimbal Assembly into Base Box (cont)

- Secure the Mid Panel with (2) M4x8 screws and the mid, right and rear Gimbal Bearings Retainers using (4) M3x16 screws and M3 nuts each
- Squeeze the outer retainer rings flush against the case panels while tightening retainer screws

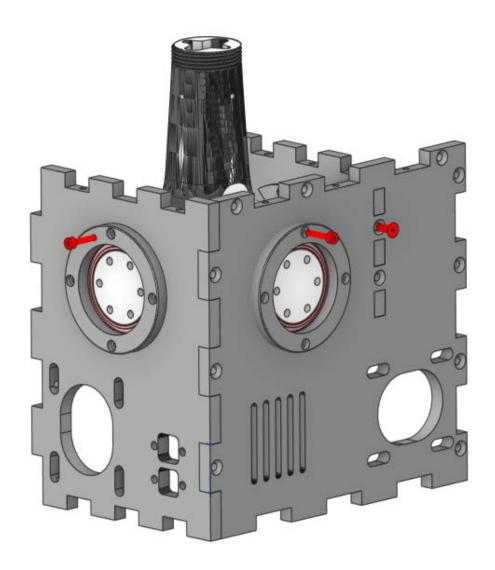

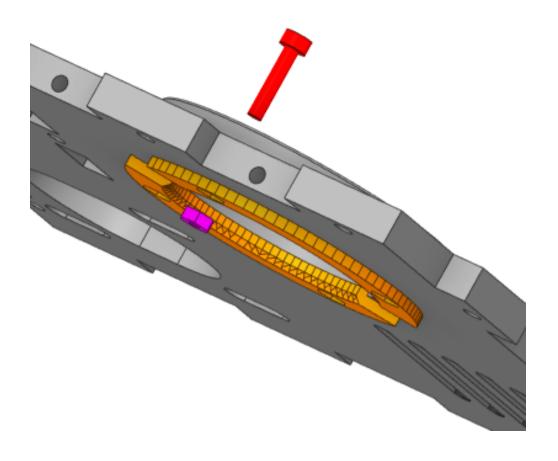


Gimbal Bearing Retainer assembly detail

• Mount the motors to Right and Rear Panel with (4) M6x16 screws each , snug but not tight (you will adjust position later)


MOTORS ARE MAKRED "PITCH ID2" and "ROLL ID1" BE SURE TO MOUNT THEM PROPERLY, AS NEATNESS COUNTS.

- The <u>Pitch</u> motor mounts to the Right panel
- The Roll motor mounts to the Rear Panel

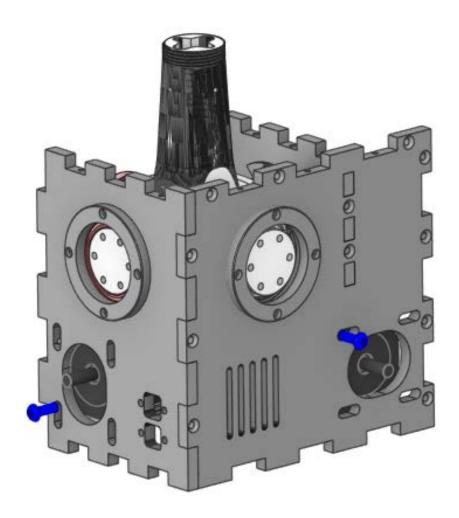


STEP 11 Install Left Panel and Mainboard


- Mount Left Panel to rear and mid panels with (6) M4x8 screws and secure Gimbal Bearing with Retainer and (4) M3x14 screws and M3 nuts
- Glue Mainboard Mount into Gimbal Bearing Inner Retainer
- Mount Mainboard with (4) M3x4 screws
- Connect power wires from both Motors to the Mainboard
- Connect the data wire leads from both Motors to the Mainboard
- Route the Grip Wire between the Mid Panel and Pitch Motor to connect to the Mainboard

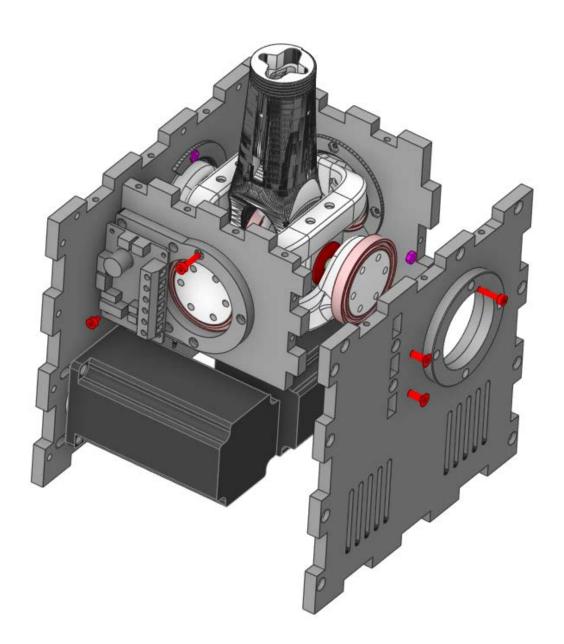


STEP 12 Mount reset switch and potentiometers to Top Panel

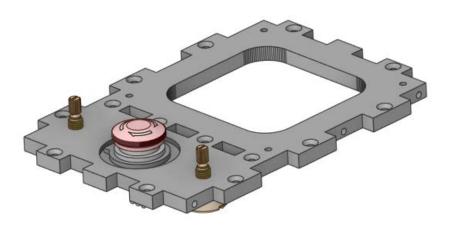


STEP 13 Mount fan and grill to Front Panel with (4) M3x30 screws and M3 nuts

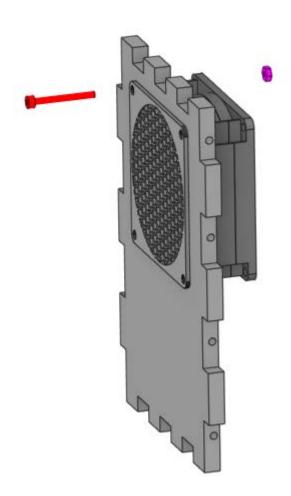


- Secure the Top Panel only with (10) M4x8 screws
- Connect E-Stop switch plug
- Make sure the wires to the potentiometers and E-Stop switch are tucked as close to the Mid Panel as possible to be clear of fan when installed

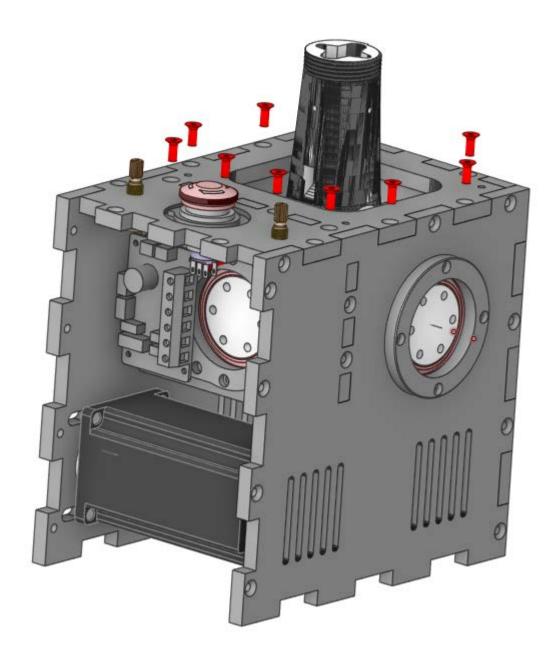


- Press the Power Socket into the retainer plate
- Insert the Plug and Plate into the Rear Plate
- Secure with (2) M3x16 screws and M3 washers and nuts
- Snap the USB plug into the outer retainer plate and insert into the Rear Plate
- Slide the inner retainer over the USB plug
- Secure with (2) M3x16 screws and M3 washers and nuts
- Connect the positive connection for the Power Socket to one leg of the E-Stop Switch
- Plug the JST connector end of the USB Socket into the Mainboard

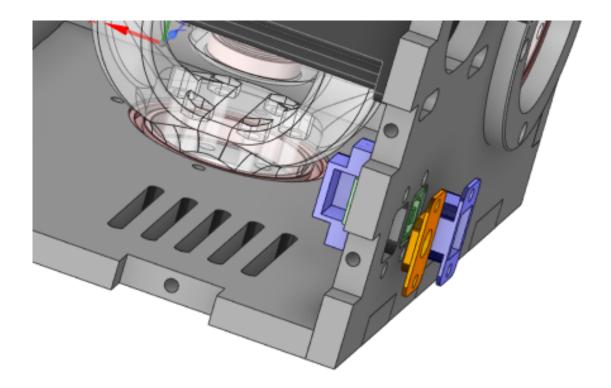


- Plug the JST connector for the Fan into the Mainboard
- Mount Front Panel to the Top and Side Panels.
- Only secure with M4x8 screws on the Left and Right Panels

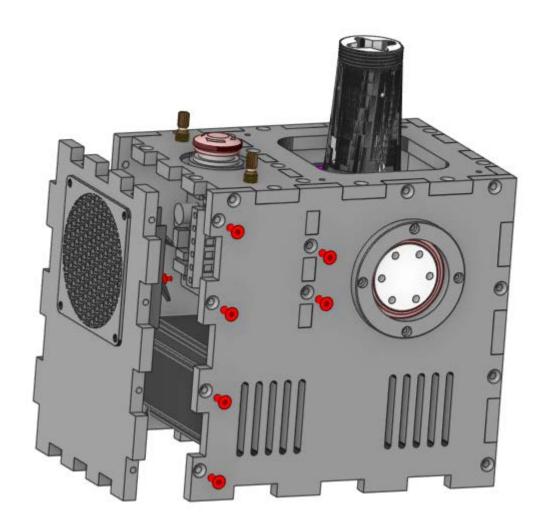


• Secure Bottom Panel with (12) M4x8 screws

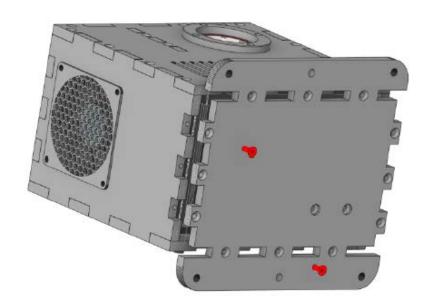


- Mount pitch and roll Gimbal 74T pulley to gimbals with (6) M4x35 screws each
- Use one or two washers on the screw head to keep screw end from contacting the Gimbal on the inside
- Install the motor drive pulley on the motor shaft
- Align the pulley so the outer lip of the drive pulley is in line with the outer lip of the Gimbal Pulley
- Use blue loctite on the drive pulley grub screws and secure it to the flat of the motor shaft

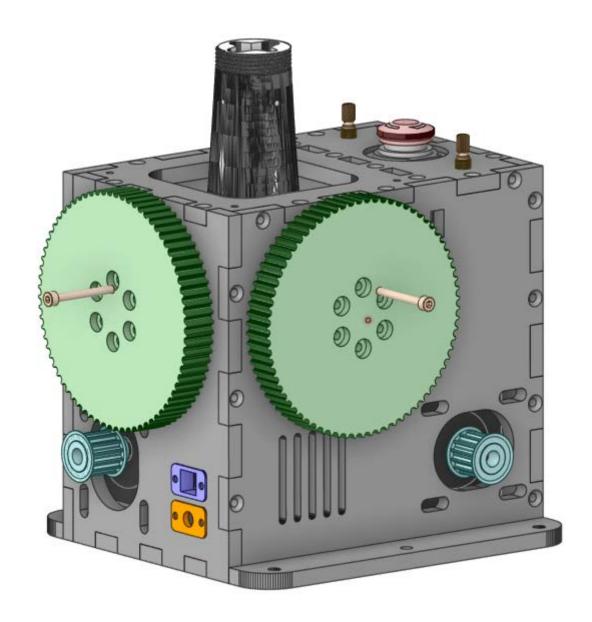


- Glue E-Stop guard into slot on top panel Mount top panel cover corner guard to top panel

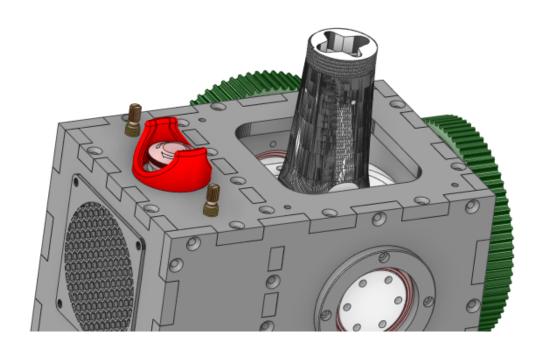

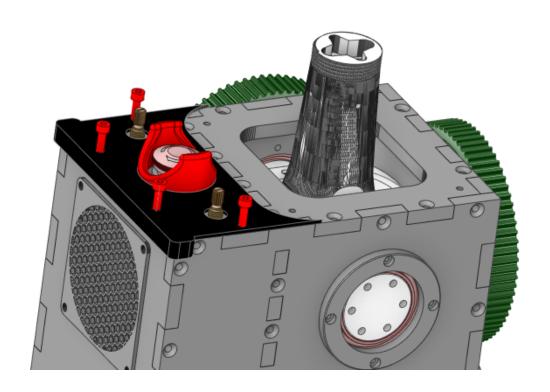

28 12/27/2023 • Slide the Centering Tool over the stick connector as shown

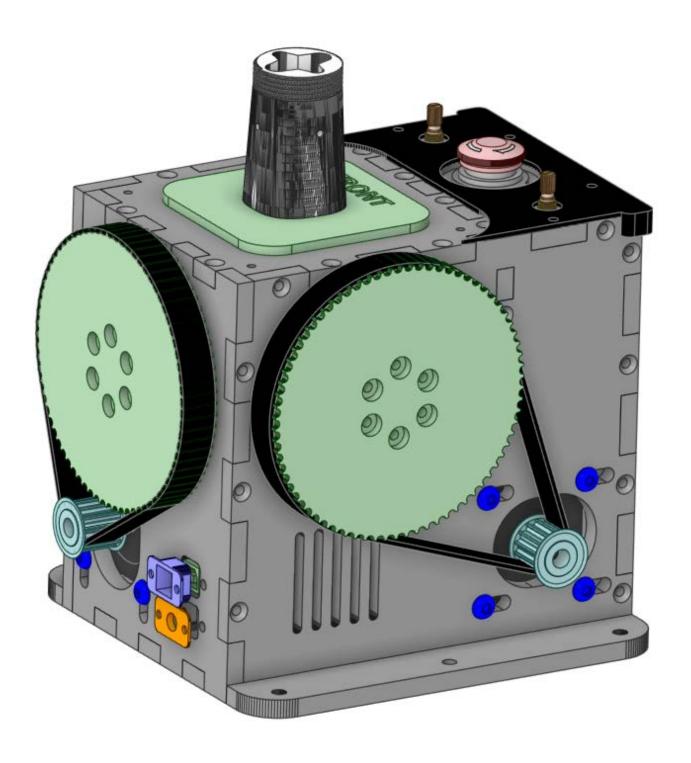



Belts install and Motor Centering

Congratulations, you made it this far!


Now it is time to connect the stick base to power and your PC USB port.

- Install and open the latest VPForce FFB Configurator
- With the Emergency Stop Switch Depressed, plug the 24V power into the base
- Plug in the USB connector to the base, the base should beep and be detected by the PC
- Twist the Emergency Stop Switch to unlock it and energize the motors
- Loosen the PITCH (side) motor mount bolts and slide the Motor as close to the Gimbal Pulley as possible
- Make sure the Centering Tool is pressed firmly against the Top Panel
- Slide the Pitch Belt over the pulleys. Motor pulley first, then Gimbal Pulley.
- Slide the Motor away from the Gimbal Pulley to tension the belt as much as you can by hand and tighten the Motor mount bolts. Tighten the bolts furthest from the Gimbal Pulley first, and then those closer. This will add a little more tension to the belt as you tighten.
- Repeat the process for the Roll pulleys
- Once all the motor mount bolts are tight, in the VPC software:
 - Click "Auto Calibrate"
 - In the FFB Axes Setup section
 - Set the X:min and Y:min to 0
 - > Set X:max and Y:max to 4096
 - o Click on "Auto Calibrate", "Apply Settings" and then "Store Settings"
- Raw X and Y Values in the left panel should be very close to 2000
- Remove the Centering Tool
- Move on to install the Limiter and boot before final axes calibration
- Final Axes calibration is outlined in the VPForce Manual <LINK HERE>

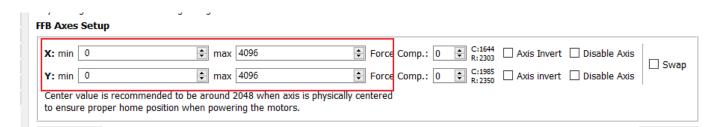


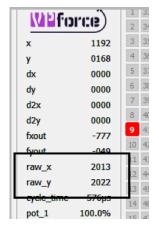

• Place Throw Limiters into the opening in the Top Panel

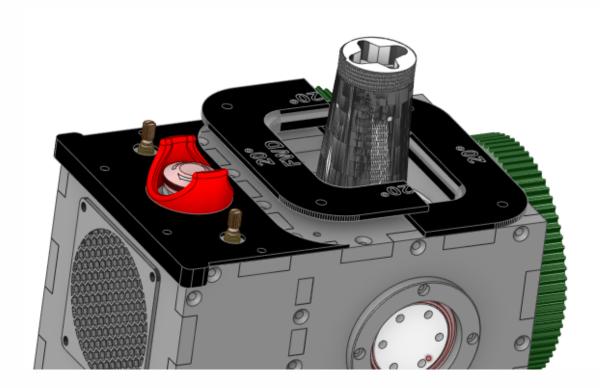


- Stitch together 4 panels of the textile of your choice based on the template measurements
- Be sure to sew the panels together inside out

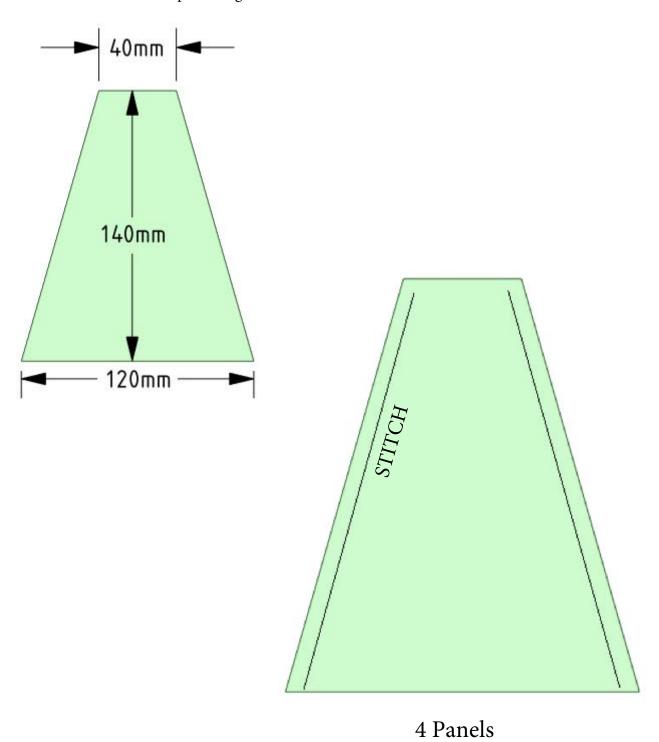

Boot Clamp Install (Cont)

- Place lower boot clamp on top panel
- Turn boot inside out
- Slide top of boot over stick connector and between Collar and ck
- Punch holes into boot to secure with boot ring and (4) M3x16 screws
- Fold boot down and hot glue to lower boot clamp leaving enough slack for full stick deflection
- Punch holes in boot for clamp mount screws
- Trim excess boot material from outside of lower clamp

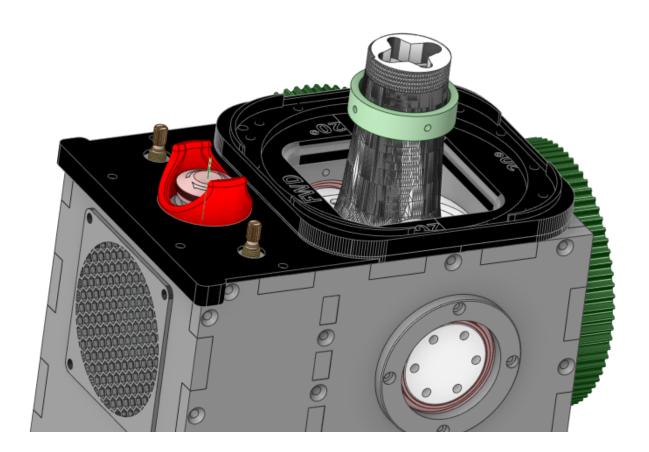

• Place upper boot clamp on top panel and secure with (4) M4x35 bolts

