Project 1: Hello World Electronic Lock

Cal Poly CPE EE 329 Spring 2018 April 23, 2018

Colleen Lau
Jonathan Richarte

https://youtu.be/9kewU8t7C_M

Purpose:

The purpose this project was to integrate the LCD and the keypad to create an electronic lock. The system is interfaced to an LCD that will display whether the user entered a correct or an incorrect key code on the keypad.

System Requirements:



- 1. Shall display LOCKED ENTER KEY on an LCD screen until the user enters the correct 4 digit key
- 2. Shall display the pressed keys of the keypad on the bottom row after KEY
- 3. Shall display HELLO WORLD if the key was corrected
- 4. Shall display the same LOCKED ENTER KEY screen and wait for a new key sequence if incorrect
- 5. Shall clear if the * key is pressed and display the LOCKED ENTER KEY screen until a new key sequence is entered

System Specification:

Component	Specifications 2.2	Value		
MSP432	Variant	MSP-EXP432P401R		
	Part Number	296-39653-ND		
	Input Power	5V		
	Vcc	5V		
LCD	Variant	LCD NHD-0216HZ-FSW-FBW-33V3C File		
	Part Number	113803-15-04-24		
	Lines	2 lines		
	Character Size	5 dots wide, 8 dots tall		
	Character per line	16 characters		
	Mode of operation	Nibble mode (4 bits)		
Keypad	Variant	12 Button Solid Plastic		
	Part Number	COM-08653		
	Number of Keys	12		
	Matrix (Columns * Rows)	3*4		
	Output Type	Matrix		

System Architecture:

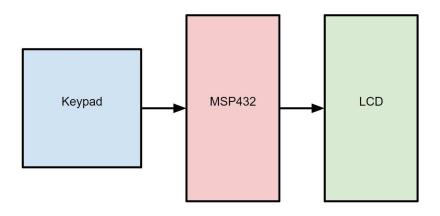


Figure 1: Overall system block diagram

Component Design:

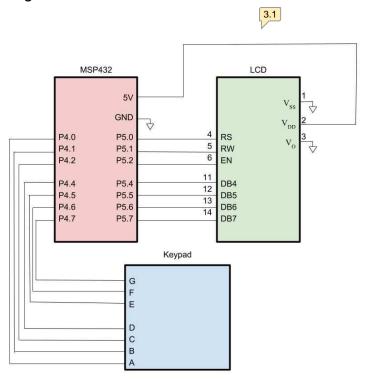


Figure 2: Schematic diagram of Keypad, MSP432, LCD

Bill of Materials:

Item #	Part Description	Supplier Name	Quantity	Price (\$)	Extended Price (\$)
1	MSP LaunchPad*	Texas Instruments	1	13.03	13.03
2	16x2 LCD Module*	Lumex Opto/Components In	1	6.01	6.01
3	12-key Keypad*	Adafruit Industries LLC	1	3.55	3.55
4	6" M/M Jumpers (Strip of 10)	Amazon	0.625	6.99	4.36875
5	6" M/F Jumpers (Strip of 10)	Amazon	0.625	-	125
* Pa	* Part Numbers can be found in Table 1: System Specifications				26.96

Table 2: Bill of Materials

System In 4.2 ration:

Development Process:

In order to build the system, the LCD utilized Port 4 and the keypad utilized Port 5. The LCD and keypad were first both tested separately with simple test code. The LCD was verified to print "Hello", and the keypad was verified to light up an LED on the MSP432.

Once both systems were working successfully on their own, they were integrated using a simple program that used the LCD to display numbers pressed on the keypad. The code for the combination lock program was developed independently of the hardware for unit testing. It was written in C and used the flowchart shown in Figure 2 as its design.

Once the hardware and software were both verified to be working, the process moved to integrating them. This involved constructing code to interpret keypad input in a format the software could understand, and moving software output onto the screen.

Significant Bugs and how we solved them:

Figuring what value the keypad returned was an issue. We solved by trial and error of lighting an LED when a specific value was read and testing every key to see what value that key corresponded to.

Project Demonstration:



https://youtu.be/9kewU8t7C_M

Conclusion:

Project 1's goal was to design an electronic lock using the LCD screen and the 12-key keypad. The system interfaced the MSP432 to take in the input from the keypad and display a message on the LCD indicating whether or not the user entered the correct code. To accomplish this, software needed to handle both keypad inputs and LCD outputs, as well as the underlying logic to create a locking system. This software had to interface timing constraints of the external hardware with the speed of the processor to constraints of the external hardware with the speed of the processor to constraints of the external hardware with the speed of the processor to constraints of the external hardware with the speed of the processor to constraints of the external hardware with the speed of the processor to constraints of the external hardware with the speed of the processor to constraints of the external hardware with the speed of the processor to constraints of the external hardware with the speed of the processor to constraints of the external hardware with the speed of the processor to constraints of the external hardware with the speed of the processor to constraints of the external hardware with the speed of the processor to constraints of the external hardware with the speed of the processor to constraints of the external hardware with the speed of the processor to constraints of the external hardware with the speed of the processor to constraints of the external hardware with the speed of the processor to constraints of the external hardware with the speed of the processor to constraints of the external hardware with the speed of the processor to constraints of the external hardware with the speed of the processor to the external hardware with the speed of the processor to the external hardware with the speed of the processor to the external hardware with the speed of the processor to the external hardware with the speed of the processor to the processor to the external hardware with the speed of the processor to the proces

The project could be improved by adding an extra prompt for the user to know if their code was incorrect. It could also allow for reprogramming the lock code using only the hardware rather than changing software aspects.

The system could also be better designed for the real world by creating a custom PCB to house both the LCD and keypad without excess wiring. The system could be redesigned to run off a standard supply voltage to allow for battery power rather than USB power.

In addition, several improvements could be made to the software. The unlock key is currently stored in a standard character array, which is insecure and easy to access. A future implementation should contain security features to protect the password and prevent unauthorized access. The system also currently blocks waiting for input, and repeatedly probes the keypad for key presses. A future system could save power by using interrupts to read keypad actions and entering a low power mode between key presses.

 $P8 - > SEL0 = 0 \times 00;$

MAIN.C

```
#include "msp.h"
#include "LCD.h"
#include "keypad.h"
#include "delay.h"
/* sets all ports to GPIO, sets the DIR of all ports
* to out, and all outputs are low. We do not want floating pins
static void clear pins() {
    P1->SEL0 = 0x00;
    P1->SEL1 = 0x00;
    P1->DIR = 0xFF; 6.2
    P1->OUT = 0x00;
    P2 - > SEL0 = 0 \times 00;
    P2 -> SEL1 = 0 \times 00;
    P2->DIR = 0xFF;
    P2->OUT = 0x00;
    P3->SEL0 = 0x00;
    P3 - > SEL1 = 0 \times 00;
    P3->DIR = 0xFF;
    P3->OUT = 0x00;
    P4 -> SEL0 = 0 \times 00;
    P4->SEL1 = 0x00;
    P4->DIR = 0xFF;
    P4->OUT = 0x00;
    P5->SEL0 = 0x00;
    P5->SEL1 = 0x00;
    P5->DIR = 0xFF;
    P5->OUT = 0x00;
    P6->SEL0 = 0x00;
    P6->SEL1 = 0x00;
    P6->DIR = 0xFF;
    P6->OUT = 0x00;
    P7->SEL0 = 0x00;
    P7->SEL1 = 0x00;
    P7->DIR = 0xFF;
    P7->OUT = 0x00;
```

```
P8 - > SEL1 = 0 \times 00;
    P8->DIR = 0xFF;
    P8->OUT = 0x00;
    P9->SEL0 = 0x00;
    P9 - > SEL1 = 0 \times 00;
    P9->DIR = 0xFF;
    P9->OUT = 0x00;
   P10->SEL0 = 0x00;
    P10->SEL1 = 0x00;
   P10->DIR = 0xFF;
   P10->OUT = 0x00;
}
static void Write Lock Msg() {
    Clear LCD();
    Write_string_LCD("LOCKED");
    New Line();
    Write string LCD("ENTER KEY");
}
static void Write Success Msg() {
    Clear LCD();
    Write string LCD("Hello World");
// adds a flashy effect for different stages in the application
static void flash LEDs(Byte value, int time, int loop) {
    int i;
    for (i = 0; i < loop; i++) {</pre>
        P2->OUT |= value;
        delay ms(time, FREQ 3 MHz);
        P2->OUT &= ~value;
        delay ms(time, FREQ 3 MHz);
}
void main(void) {
    Byte button;
    int key = 0, key len = 1000;
    WDT A->CTL = WDT A CTL PW | WDT A CTL HOLD; // stop watchdog timer
    clear pins(); // set all pins to output to avoid floating pins
    init pins LCD();
```

```
Startup LCD();
   Clear LCD();
   Home LCD();
   Write Lock Msg();
   flash LEDs (0x07, 500, 3);
   while(1) {
       button = get keypad button();
       if (button != 0) {      // a button was pressed
           if (button == '*') { // reset screen
               Write Lock Msg();
               flash LEDs (0x06, 100, 3);
                                // reset our state variables
               key = 0;
               key len = 1000;
           else if (key len != 0) {    // still have room for more numbers
               Write char LCD(button); // writes the number pressed
               delay ms(200, FREQ 3 MHz); // debounce
               // adds the number to the proper position
               key += (button - '0') * key len;
                // moves our position in 'key' down by ten
               key len = 10;
               flash LEDs (0x05, 25, 4);
       else if (key len == 0) {      // get here once 4 numbers are pressed
           if (key == KEY) {
               Write Success Msg(); // check if it's the proper key
               flash LEDs (0x02, 100, 5);
           else {
               Write Lock Msg();
               flash LEDs (0x01, 100, 5);
           key = 0; // reset our values, for the next time someone attempts
           key len = 1000;
       }
   }
}
```

init pins keypad();

```
#ifndef DELAY_H
#define DELAY_H

#define FREQ_1_5_MHz 1500000
#define FREQ_3_MHz 3000000
#define FREQ_6_MHz 6000000
#define FREQ_12_MHz 12000000
#define FREQ_24_MHz 24000000
#define FREQ_48_MHz 48000000

void delay_ms(int ms, int freq);

void delay_us(int ms, int freq);
#endif
```

DELAY.C

```
#include "msp.h"
#include "delay.h"
static void set DCO(int freq) {
    CS->KEY = CS KEY VAL;
    CS \rightarrow CTL0 = 0;
    if (freq == FREQ 1 5 MHz)
      CS->CTL0 = CS CTL0 DCORSEL 0;
    else if (freq == FREQ 3 MHz)
       CS->CTL0 = CS CTL0 DCORSEL 1;
    else if (freq == FREQ 6 MHz)
       CS->CTL0 = CS CTL0 DCORSEL 2;
    else if (freq == FREQ 12 MHz)
       CS->CTL0 = CS CTL0 DCORSEL 3;
    else if (freq == FREQ 24 MHz)
       CS->CTL0 = CS CTL0 DCORSEL 4;
    else if (freq == FREQ 48 MHz) {
       // setting Vcore to level 1 for 48 MHz operation
       while (PCM->CTL1 & PCM CTL1 PMR BUSY);
       PCM->CTL0 = PCM CTL0 KEY VAL | PCM CTL0 AMR 1;
       while (PCM->CTL1 & PCM CTL1 PMR BUSY);
       // configure flash wait-state to 1 for both banks 0 & 1
       FLCTL->BANKO RDCTL = (FLCTL->BANKO RDCTL &
           \sim (FLCTL BANKO RDCTL WAIT MASK)) | FLCTL BANKO RDCTL WAIT 1;
```

```
FLCTL->BANK1 RDCTL = (FLCTL->BANK1 RDCTL &
                     ~(FLCTL_BANK1_RDCTL_WAIT_MASK)) | FLCTL_BANK1_RDCTL_WAIT_1;
        CS->CTL0 = CS CTL0 DCORSEL 5;
     \texttt{CS->CTL1} \ \&=\ {}^{\sim}\ (\texttt{CS}\ \texttt{CTL1}\ \texttt{SELM}\ \texttt{MASK}\ |\ \texttt{CS}\ \texttt{CTL1}\ \texttt{DIVM}\ \texttt{MASK})\ |\ \texttt{CS}\ \texttt{CTL1}\ \texttt{SELM}\ 3; 
    CS \rightarrow KEY = 0;
}
// Delay milliseconds function
void delay ms(int ms, int freq) {
   int i, j;
   set DCO(freq);
   for (i = 0; i < ms; i++)</pre>
       for (j = .001 * freq / 10; j > 0; j--); // delay 1 ms (approx)
// delay microseconds function
void delay us(int us, int freq) {
   int i, j;
   set DCO(freq);
   for (i = 0; i < us; i++)
       for (j = .00001 * freq / 10; j > 0; j--); // delay 1 us (approx)
                                    LCD.H
#ifndef LCD H
#define LCD H
void init pins LCD();
void Startup LCD();
void Clear LCD();
void Home LCD();
void Write char LCD(char c);
void Write string LCD(char *str);
```

```
void New_Line();
#endif
```

LCD.C

```
#include "msp.h"
#include "delay.h"
typedef unsigned char Byte;
// set E(4.6) high, delay, then set it low
static void Send Nybble() {
    P4->OUT |= BIT6;
    delay_ms(2, FREQ_3_MHz);
    P4->OUT &= ~BIT6;
// sets DB7-DB4 accordingly
static void Send Upper Four(Byte byte) {
    P4->OUT &= ~(0x0F);
    P4->OUT \mid = (byte >> 4);
}
static void Send Command(Byte byte) {
    P4->OUT &= \sim (BIT5 | BIT4); // set both RS and R/W low
    // send upper nybble
    P4->OUT &= \sim (0x0F);
    P4->OUT \mid = (byte >> 4);
    Send Nybble();
    // send lower nybble
    P4->OUT &= ~(OxOF);
    P4->OUT \mid = (byte \& 0x0F);
    Send Nybble();
}
/* The following is assumed:
* P4.7 is NO CONNECTION
* P4.6 is E
 * P4.5 is RS
 * P4.4 is R/W
```

```
* P4.3 is DB7
 * P4.2 is DB6
 * P4.1 is DB5
 * P4.0 is DB4
 * setup all of P4 as GPIO, even though we wont use 4.7
void init pins LCD() {
    P4 -> SEL0 = 0 \times 00;
    P4->SEL1= 0x00;
    P4->DIR = 0xFF; // All pins are output
}
void Startup LCD() {
    P4->OUT &= \sim (BIT5 | BIT4); // set RS and R/W low
    Send Upper Four (0x00);
    delay ms (100, FREQ 3 MHz);
    Send Upper Four (0x30); // wake-up
    delay ms(30, FREQ 3 MHz);
    Send Nybble();
    delay ms(10, FREQ 3 MHz);
    Send Nybble();
    delay ms(10, FREQ 3 MHz);
    Send Nybble();
    delay ms(10, FREQ 3 MHz);
    Send Upper Four (0x20);
    Send Nybble();
    Send Command (0x28);
    Send Command (0 \times 10);
    Send Command (0x0F);
    Send Command (0x06);
}
void Clear LCD() {
    Send Command (0x01);
    delay ms(10, FREQ 3 MHz);
}
void Home LCD() {
    Send Command (0 \times 02);
    delay ms(10, FREQ 3 MHz);
void Write char LCD(char c) {
```

```
P4->OUT |= BIT5; // set RS high
    P4->OUT &= \simBIT4; // set R/W low
    // send upper nybble
    P4->OUT &= ~(OxOF);
    P4->OUT \mid = (c >> 4);
    Send Nybble();
    // send lower nybble
    P4->OUT &= ~(OxOF);
    P4->OUT |= (c \& 0x0F);
    Send Nybble();
}
// Writes a string to the LCD
void Write string LCD(char *str) {
    while(*str != '\0')
        Write char LCD(*(str++));
}
// Moves the cursor to the beginning of the second line
void New Line() {
    Send Command(0xC0);
    delay ms(10, FREQ 3 MHz);
}
```

KEYPAD.H

```
#ifndef KEYPAD_H
#define KEYPAD_H

// password
#define KEY 3491

typedef unsigned char Byte;

void init_pins_keypad();

Byte get_keypad_button();

#endif
```

KEYPAD.C

```
#include "msp.h"
#include "delay.h"
#define ONE 1
#define TWO 2
#define THREE 3
#define FOUR 5
#define FIVE 6
#define SIX 7
#define SEVEN 9
#define EIGHT 10
#define NINE 11
#define STAR 13
#define ZERO 14
#define HASHTAG 15
typedef unsigned char Byte;
/* uses all of P5 but 5.3
* 5.0 to 5.2 are the Columns
* 5.4 to 5.7 are the rows
 * 5.0 - C
 * 5.1 - A
 * 5.2 - E
 * 5.3 - NO CONNECTION
 * 5.4 - B
 * 5.5 - G
 * 5.6 - F
 * 5.7 - D
void init pins keypad() {
    P5->SEL0 = 0x00;
    P5->SEL1 = 0x00;
    P5->DIR = 0 \times 00; // set all pins as input
    P5->REN = 0x07; // only need internal resistors for 5.0 - 5.2
    P5->OUT = 0x07; // pull-up resistor for 5.0 - 5.2
}
/* values returned by get keypad button have a weird offset
* this corrects that offset and will return the ascii value of 'byte'
static Byte translate(Byte byte) {
    if (byte == ONE) return '1';
    else if (byte == TWO) return '2';
```

```
else if (byte == THREE) return '3';
   else if (byte == FOUR) return '4';
   else if (byte == FIVE) return '5';
   else if (byte == SIX) return '6';
   else if (byte == SEVEN) return '7';
   else if (byte == EIGHT) return '8';
   else if (byte == NINE) return '9';
   else if (byte == ZERO) return '0';
   else if (byte == STAR) return '*';
   else if (byte == HASHTAG) return '#';
   return 0;
}
/* returns the position of the button that was pressed
Byte get keypad button() {
   int row, col;
   char row select[] = \{0x10, 0x20, 0x40, 0x80\}; /* one row is active */
   /* check to see any key pressed */
   P5->DIR \mid= 0xF0; /* make all row pins output */
                          /* drive all row pins low */
   P5->OUT &= \sim 0 \times F0;
   if (col == 0x07)
                        /st if all columns are high st/
                           /* no key pressed */
   /* If a key is pressed, it gets here to find out which key.
    * It activates one row at a time and read the input to see
    * which column is active. */
   for (row = 0; row < 4; row++) {
      P5->DIR \&= \sim 0 \times F0;
                                /* disable all rows */
       P5->DIR |= row_select[row]; /* enable one row at a time */
       P5->OUT &= ~row_select[row];    /* drive the active row low */
      /\!\!^{\star} if one of the input is low, some key is pressed. \!\!^{\star}/\!\!
       if (col != 0x07) break;
   }
                           /* drive all rows high before disable them */
   P5->OUT \mid = 0xF0;
   P5->DIR &= \sim 0 \times F0; /* disable all rows */
```

```
if (row == 4) return 0;  /* if we get here, no key is pressed */

/* gets here when one of the rows has key pressed,
  * check which column it is
  */

if (col == 0x06) return translate(row * 4 + 1);  /* key in column 0 */

if (col == 0x05) return translate(row * 4 + 2);  /* key in column 1 */

if (col == 0x03) return translate(row * 4 + 3);  /* key in column 2 */

return 0; /* to be safe */
}
```

Index of comments

- 2.1 organize requirements grouped by larger req's, with sub-req's listed after. e.g.
 - The system shall

have a password

- The password shall be four numbers
- The password shall be entered using the keypad
- etc...
- 2.2 nice! need clock freq tho (-1)
- Component design should include algorithms and flowcharts, detailing the flow of the software. Note that this will likely require multiple flowcharts (ISR's should always be seperate) (-3)
 - Missing component figures for the keypad and LCD. This could include the schematics found in each devices datasheet, and just be copied in (-2)
- 4.1 good table, but use the same formatting for all the tables in your report
- System integration should include a *detailed* explanation of what your process was and how you built it. This includes describing how each component works in software (including smaller flowcharts if needed, like the LCD setup) and hardware, what utilities were used to go about this, and screenshots or examples showing your work (-7)
 - For future work, I would list each "step" and describe the hardware and software development. For this assignment, it would have 4 sections for software delay counters, LCD integration and control, keypad integration, and user interface. Each of these would have two subheadings for hardware and software.
 - Also describe how the system works even for the stuff in old labs. Someone who has no idea what the class is should read it and understand what you did, and recreate it as well.
 - No description of the LCD timing diagram, or the keypad integration (-5)
- 4.3 put in appendix
- Need at least 3 strong concluding arguments. This means you should have 3 paragraphs that each discuss a particular aspect of the lab (what worked/didn't work and why, what you could have changed to make it work better, etc.) Follow the report guidelines! (-4)
 - Conclusion follows the intentions well, however alot of the things you mentioned should have been talked about further in the system integration (Testing, bugs, how the system works on the component level).
- 5.2 no references (-2)
- In the future, you need more comments. Not just for functions, but for each section of code that has a purpose (or each instruction of significance). No mark down this time, but in the future yes. If you are wondering about this ask during lab.
 - nice color though
- 6.2 ew. do this better