Processor Programming Reference (PPR) for AMD Family 17h Models 01h,08h, Revision B2 Processors

Legal Notices

© 2017-2019 Advanced Micro Devices, Inc. All rights reserved.

The information contained herein is for informational purposes only, and is subject to change without notice. While every precaution has been taken in the preparation of this document, it may contain technical inaccuracies, omissions and typographical errors, and AMD is under no obligation to update or otherwise correct this information. Advanced Micro Devices, Inc. makes no representations or warranties with respect to the accuracy or completeness of the contents of this document, and assumes no liability of any kind, including the implied warranties of noninfringement, merchantability or fitness for particular purposes, with respect to the operation or use of AMD hardware, software or other products described herein. No license, including implied or arising by estoppel, to any intellectual property rights is granted by this document. Terms and limitations applicable to the purchase or use of AMD's products are as set forth in a signed agreement between the parties or in AMD's Standard Terms and Conditions of Sale.

Trademarks:

AMD, the AMD Arrow logo, and combinations thereof are trademarks of Advanced Micro Devices, Inc.

3DNow! is a trademark of Advanced Micro Devices, Incorporated.

AGESA is a trademark of Advanced Micro Devices, Incorporated.

AMD Secure Encrypted Virtualization is a trademark of Advanced Micro Devices, Incorporated.

AMD Secure Memory Encryption is a trademark of Advanced Micro Devices, Incorporated.

AMD Virtualization is a trademark of Advanced Micro Devices, Incorporated.

ARM is a registered trademark of ARM Limited.

DesignWare is a registered trademark of Synopsys Incorporated.

MMX is a trademark of Intel Corporation.

Microsoft is a registered trademark of Microsoft Corporation.

PCI Express is a registered trademark of PCI-SIG Corporation.

PCIe is a registered trademark of PCI-SIG Corporation.

Ultrabook is a registered trademark of Intel Corporation.

Windows is a registered trademark of Microsoft Corporation.

Other product names used in this publication are for identification purposes only and may be trademarks of their respective companies.

Reverse engineering or disassembly is prohibited.

USE OF THIS PRODUCT IN ANY MANNER THAT COMPLIES WITH THE MPEG ACTUAL OR DE FACTO VIDEO AND/OR AUDIO STANDARDS IS EXPRESSLY PROHIBITED WITHOUT ALL NECESSARY LICENSES UNDER APPLICABLE PATENTS. SUCH LICENSES MAY BE ACQUIRED FROM VARIOUS THIRD PARTIES INCLUDING, BUT NOT LIMITED TO, IN THE MPEG PATENT PORTFOLIO, WHICH LICENSE IS AVAILABLE FROM MPEG LA, L.L.C., 6312 S. FIDDLERS GREEN CIRCLE, SUITE 400E, GREENWOOD VILLAGE, COLORADO 80111.

List of Chapters

- 1 Overview
- 2 Core Complex (CCX)
- 3 Reliability, Availability, and Serviceability (RAS) Features
- 4 System Management Unit (SMU)
- 5 Advanced Platform Management Link (APML)
- 6 SB Temperature Sensor Interface (SB-TSI)
- 7 UMC

List of Namespaces List of Definitions Memory Map - MSR Memory Map - SMN 1

Table of Contents

Over	view			
1.1	1.1 Intended Audience			
1.2	Reference Documents			
	1.2.1 Documentation Conventions			
1.3	Conventions			
	1.3.1 Numbering			
	1.3.2 Arithmetic And Logical Operators			
	1.3.2.1 Operator Precedence and Associativity			
	1.3.3 Register Mnemonics			
	1.3.3.1 Logical Mnemonic			
	1.3.3.2 Physical Mnemonic			
	1.3.4 Register Format			
	1.3.4.1 A Register is a group of Register Instances			
	1.3.4.2 Register Physical Mnemonic, Title, and Name			
	1.3.4.3 Full Width Register Attributes			
	1.3.4.4 Register Description			
	1.3.4.5 Register Instance Table			
	1.3.4.5.1 Content Ordering in a Row			
	1.3.4.5.2 Multiple Instances Per Row			
	1.3.4.5.3 MSR Access Method			
	1.3.4.5.3.1 MSR Per-Thread Example			
	1.3.4.5.3.2 MSR Range Example			
	1.3.4.5.4 BAR Access Method			
	1.3.4.5.4.1 BAR as a Register Reference			
	1.3.4.5.5 PCICFG Access Method			
	1.3.4.5.5.1 PCICFG Bus Implied to be 00h			
	1.3.4.5.6 Data Port Access Method			
	1.3.4.6 Register Field Format			
	1.3.4.7 Simple Register Field Format			
	1.3.4.8 Complex Register Field Format			
	1.3.4.9 Field Name is Reserved			
	1.3.4.10 Field Access Type			
	1.3.4.10.1 Conditional Access Type Expression			
	1.3.4.11 Field Reset			
	1.3.4.12 Field Initialization			
	1.3.4.13 Field Check			
	1.3.4.14 Field Valid Values			
1.4	Definitions			
1.5	Changes Between Revisions and Product Variations			
	1.5.1 Revision Conventions			
1.6	Package			
	1.6.1 Package type			
1.7	Processor Overview			
	1.7.1 Features			
1.8	System Overview			
	1.8.1 AM4 Desktop			
	1.8.2 SP3 MCM Server Single-Socket			
	1.8.2.1 SP3 1P Coherent Interconnect Topology			
	1.8.2.2 SP3 1P Memory Support			
	1.8.2.3 SP3 1P I/O Support			

1.8.3 Mixed Processor Revision Support

2 Core Complex (CCX)

2.1

Processor x	x86 Core
2.1.1 Co	ore Functional Information
2.1.2 Co	ore Definitions
2.1.3 Se	cure Virtual Machine Mode (SVM)
2.1.3.1	BIOS support for SVM Disable
2.1.3.1.1	Enable AMD Virtualization TM
2.1.3.1.2	Disable AMD Virtualization TM
2.1.3.1.3	Disable AMD Virtualization™, with a user supplied key
	emory Encryption
	fective Frequency
	ldress Space
2.1.6.1	Virtual Address Space
2.1.6.2	Physical Address Space
2.1.6.3	System Address Map
2.1.6.3.1	Memory Access to the Physical Address Space
2.1.6.3.1.1	Determining Memory Type
	onfiguration Space
2.1.7.1	MMIO Configuration Coding Requirements
2.1.7.2	MMIO Configuration Ordering
2.1.7.3	Processor Configuration Space
	CI Configuration Legacy Access
	stem Software Interaction With SMT Enabled
	gister Sharing
	mers
2.1.12 Int	
2.1.12.1	System Management Mode (SMM)
2.1.12.1.1	SMM Overview
2.1.12.1.2	
2.1.12.1.3	8
2.1.12.1.4	SMM Initial State
2.1.12.1.5	SMM Save State
2.1.12.1.6	System Management State
2.1.12.1.7	Exceptions and Interrupts in SMM
2.1.12.1.8	The Protected ASeg and TSeg Areas
2.1.12.1.9	SMM Special Cycles
2.1.12.1.10	Locking SMM
2.1.12.2	Local APIC
2.1.12.2.1	Local APIC Functional Description
2.1.12.2.1.1	Detecting and Enabling
2.1.12.2.1.2	
2.1.12.2.1.3	· · · · · · · · · · · · · · · · · · ·
2.1.12.2.1.4	
2.1.12.2.1.5	Logical Destination Mode
2.1.12.2.1.6	Interrupt Delivery
2.1.12.2.1.7	Vectored Interrupt Handling
2.1.12.2.1.8	Interrupt Masking
2.1.12.2.1.9	Spurious Interrupts
2.1.12.2.1.10	
2.1.12.2.1.11	
2.1.12.2.1.12	· · · · · · · · · · · · · · · · · · ·
2.1.12.2.1.13	-
	r

3

3.1.5

```
2.1.12.2.1.14
                        Generalized Local Vector Table
      2.1.12.2.1.15
                        State at Reset
                     Local APIC Registers
      2.1.12.2.2
      2.1.13
               CPUID Instruction
                  CPUID Instruction Functions
      2.1.13.1
      2.1.14
               MSR Registers
      2.1.14.1
                  MSRs - MSR0000 xxxx
      2.1.14.2
                  MSRs - MSRC000_0xxx
      2.1.14.2.1
                     MSRs - MSRC000_2xxx
      2.1.14.3
                  MSRs - MSRC001_0xxx
      2.1.14.4
                  MSRs - MSRC001 1xxx
      2.1.15
               Performance Monitor Counters
      2.1.15.1
                  RDPMC Assignments
      2.1.15.2
                  Performance Measurement
      2.1.15.3
                  Large Increment per Cycle Events
                  Core Performance Monitor Counters
      2.1.15.4
      2.1.15.4.1
                     Floating Point (FP) Events
      2.1.15.4.2
                     LS Events
                     IC and BP Events
      2.1.15.4.3
      2.1.15.4.4
                     DE Events
      2.1.15.4.5
                     EX (SC) Events
                     L2 Cache Events.
      2.1.15.4.6
      2.1.15.5
                  L3 Cache Performance Monitor Counters
      2.1.15.5.1
                     L3 Cache PMC Events
      2.1.16
               Instruction Based Sampling (IBS)
Reliability, Availability, and Serviceability (RAS) Features
       Machine Check Architecture
3.1
      3.1.1
               Overview
      3.1.1.1
                  Legacy Machine Check Architecture
      3.1.1.2
                  Machine Check Architecture Extensions
      3.1.1.3
                  Use of MCA Information
      3.1.1.3.1
                     Error Management
      3.1.1.3.2
                     Fault Management
      3.1.2
               Machine Check Registers
      3.1.2.1
                  Global Registers
      3.1.2.2
                  Machine Check Banks
      3.1.2.2.1
                     Legacy MCA Registers
      3.1.2.2.2
                     Legacy MCA MSRs
                     MCAX Registers
      3.1.2.2.3
      3.1.2.2.4
                     MCAX MSRs
      3.1.2.3
                  Access Permissions
      3.1.3
               Machine Check Errors
      3.1.3.1
                  Error Severities
      3.1.3.2
                  Exceptions and Interrupts
      3.1.3.3
                  Error Codes
                  Extended Error Codes
      3.1.3.4
      3.1.3.5
                  DOER and SEER State
      3.1.3.6
                  MCA Overflow Recovery
      3.1.3.7
                  MCA Recovery
      3.1.4
               Machine Check Features
                  Error Thresholding
      3.1.4.1
      3.1.4.2
                  Error Simulation
```

Software Guidelines

	3.1.5.1	Recognizing MCAX Support
	3.1.5.2	Communicating MCAX Support
	3.1.5.3	Machine Check Initialization
	3.1.5.4	Determining Bank Count
	3.1.5.5	Determining Bank Type
	3.1.5.6	Recognizing Error Type
	3.1.5.7	Machine Check Error Handling
3.2	Machir	ne Check Architecture Implementation
	3.2.1	Implemented Machine Check Banks
	3.2.2	Implemented Machine Check Bank Registers
	3.2.3	Mapping of Banks to Blocks
	3.2.4	Decoding Error Type
	3.2.5	MCA Banks
	3.2.5.1	LS
	3.2.5.2	IF
	3.2.5.3	L2
	3.2.5.4	DE
	3.2.5.5	
	3.2.5.6	
		L3 Cache
	3.2.5.8	
	3.2.5.9	
		UMC
	3.2.5.11	
-		gement Unit (SMU)
4.1		Registers
4.3	4.1.1	MP Configuration Unit Registers
4.2		al (THM)
A dry	4.2.1	Registers tform Management Link (APML)
5.1		
J.1	5.1.1	Definitions
5.2		is Characteristics
٥.۷	5.2.1	
		I2C Support
5.3		ocessor Information
0.0	5.3.1	SBI Processor Pins
	5.3.1.1	Physical Layer Characteristics
	5.3.2	Processor States
5.4	SBI Pro	
3	5.4.1	
	5.4.2	
	5.4.2.1	
	5.4.2.1.1	
	5.4.2.1.2	
	5.4.2.2	
	5.4.2.2.1	-
5.5	SBI Ph	ysical Interface
	5.5.1	
	5.5.2	
	5.5.3	_
SB T	emperatu	re Sensor Interface (SB-TSI)
6.1		

	6.1.1	Definitions	
6.2	SB-TSI Protocol		
	6.2.1	SB-TSI Send/Receive Byte Protocol	
	6.2.1.1	SB-TSI Address Pointer	
	6.2.2	SB-TSI Read/Write Byte Protocol	
	6.2.3	Alert Behavior	
	6.2.4	Atomic Read Mechanism	
	6.2.5	SB-TSI Temperature and Threshold Encodings	
	6.2.6	SB-TSI Temperature Offset Encoding	
6.3	SB-TS	I Physical Interface	
	6.3.1	SB-TSI SMBus Address	
	6.3.2	SB-TSI Bus Timing	
	6.3.3	SB-TSI Bus Electrical Parameters	
	6.3.4	Pass-FET Option	
6.4	SB-TS	I Registers	

7 UMC

- 7.1 UMC Overview
 - 7.1.1 UMC Frequency Support

List of Figures

Figure 1:	Register Physical Mnemonic, Title, and Name
Figure 2:	Full Width Register Attributes
Figure 3:	Register Description
Figure 4:	Register Instance Table: Content Ordering in a Row
Figure 5:	Register Instance Table: MSR Example
Figure 6:	Register Instance Table: MSR Range Example
Figure 7:	Register Instance Table: BAR as Register Reference
Figure 8:	Register Instance Table: Bus Implied to be 00h
Figure 9:	Register Instance Table: Data Port Select

Figure 10: Simple Register Field Example

Figure 11: Register Field Sub-Row for {Reset,AccessType,Init,Check}

Figure 12: Register Field Sub-Row for Description
Figure 13: Register Field Sub-Row for Valid Value Table
Figure 14: Register Field Sub-Row for Valid Bit Table
Figure 15: Family 17h Models 00h-0Fh Processor Overview
Figure 16: 1P System Block Diagram

Figure 16: 1P System Block Diagram Figure 17: Register Sharing Domains Figure 18: Instance Parameters Figure 19: SBI Transmission Protocol

Figure 20: Pass FET Implementation
Figure 21: RTS Thermal Management Example
Figure 22: SB-TSI Thermal Management Example

Figure 23: Alert Assertion Diagram
Figure 24: Pass FET Implementation

List of Tables

Table 1:	Reference Documents Listing
Table 2:	Arithmetic and Logical Operator Definitions
Table 3:	Function Definitions
Table 4:	Operator Precedence and Associativity
Table 5:	Register Mnemonic Definitions
Table 6:	Logical Mnemonic Definitions
Table 7:	Physical Mnemonic Definitions
Table 8:	AccessType Definitions
Table 9:	Reset Type Definitions
Table 10:	Init Type Definitions
Table 11:	Definitions
Table 12:	Package Definitions
Table 13:	AM4 1P Capabilities
Table 14:	SP3 1P Capabilities
Table 15:	Definitions
Table 16:	SMM Initial State
Table 17:	SMM Save State
Table 18:	ICR Valid Combinations
Table 19:	Guidance for Common Performance Statistics with Complex Event Selects
Table 20:	Machine Check Terms and Acronyms
Table 21:	Legacy MCA MSR Layout
Table 22:	MCAX MSR Layout
Table 23:	MCAX Implementation-Specific Register Layout
Table 24:	Error Overwrite Priorities
Table 25:	Error Scope Hierarchy
Table 26:	Error Code Types
Table 27:	Error code: transaction type (TT)
Table 28:	Error codes: cache level (LL)
Table 29:	Error codes: memory transaction type (RRRR)
Table 30:	Blocks Capable of Supporting MCA Banks
Table 31:	Legacy MCA Registers
Table 32:	MCAX Registers
Table 33:	MCA Bank to Block Mapping
Table 34:	MCA_STATUS_LS[ErrorCodeExt] Decode
Table 35:	MCA_ADDR_LS Register
Table 36:	MCA_SYND_LS Register
Table 37:	MCA_STATUS_IF[ErrorCodeExt] Decode
Table 38:	MCA_ADDR_IF Register
Table 39:	MCA_SYND_IF Register
Table 40:	MCA_STATUS_L2[ErrorCodeExt] Decode
Table 41:	MCA_ADDR_L2 Register
Table 42:	MCA_SYND_L2 Register
Table 43:	MCA_STATUS_DE[ErrorCodeExt] Decode
Table 44:	MCA_ADDR_DE Register
Table 45:	MCA_SYND_DE Register
Table 46:	MCA_STATUS_EX[ErrorCodeExt] Decode
Table 47:	MCA_ADDR_EX Register
Table 48:	MCA_SYND_EX Register

MCA_STATUS_FP[ErrorCodeExt] Decode

MCA_ADDR_FP Register

Table 49: Table 50:

Table 51:	MCA_SYND_FP Register
Table 52:	MCA_STATUS_L3[ErrorCodeExt] Decode
Table 53.	MCA ADDR 1.3 Register

Table 53: MCA_ADDR_L3 Register
Table 54: MCA_SYND_L3 Register

Table 55: MCA_STATUS_CS[ErrorCodeExt] Decode

Table 56: MCA_ADDR_CS Register Table 57: MCA_SYND_CS Register

Table 58: MCA_STATUS_PIE[ErrorCodeExt] Decode

Table 59: MCA_ADDR_PIE Register
Table 60: MCA_SYND_PIE Register

Table 61: MCA_STATUS_UMC[ErrorCodeExt] Decode

Table 62: MCA_ADDR_UMC Register Table 63: MCA_SYND_UMC Register

Table 64: MCA_STATUS_PB[ErrorCodeExt] Decode

Table 65: MCA_ADDR_PB Register Table 66: MCA_SYND_PB Register

Table 67: List of Acronyms and Terms used in Thermal (THM)

Table 68: APML Definitions
Table 69: SB-TSI Definitions

Table 70: SB-TSI CPU Temperature and Threshold Encoding Examples

Table 71: SB-TSI Temperature Offset Encoding Examples

Table 72: SB-TSI Address Encodings

1 Overview

1.1 Intended Audience

This document provides the processor behavioral definition and associated design notes. It is intended for platform designers and for programmers involved in the development of BIOS functions, drivers, and operating system kernel modules.

1.2 Reference Documents

Table 1: Reference Documents Listing

Term	Description
docAPM1	AMD64 Architecture Programmer's Manual Volume 1: Application Programming, order# 24592.
docAPM2	AMD64 Architecture Programmer's Manual Volume 2: System Programming, order# 24593.
docAPM3	AMD64 Architecture Programmer's Manual Volume 3: Instruction-Set Reference, order# 24594.
docAPM4	AMD64 Architecture Programmer's Manual Volume 4: 128-Bit and 256-Bit Media Instructions, order# 26568.
docAPM5	AMD64 Architecture Programmer's Manual Volume 5: 64-Bit Media and x87 Floating-Point Instructions, order# 26569.
docACPI	Advanced Configuration and Power Interface (ACPI) Specification. http://www.acpi.info .
docIOMMU	AMD I/O Virtualization Technology Specification, order# 48882.
docI2C	I2C Bus Specification. http://www.nxp.com/documents/user_manual/UM10204.pdf
docJEDEC	JEDEC Standards. http://www.jedec.org .
docPCIe	PCI Express® Specification. http://www.pcisig.org .
docPCIlb	PCI Local Bus Specification. http://www.pcisig.org .
docRAS	RAS Feature Enablement for AMD Family 17h Models 00h-0Fh, order# 55987.
docRevG	Revision Guide for AMD Family 17h Models 00h-0Fh Processors, order# 55449.
docAM4	Socket AM4 Processor Functional Data Sheet, order# 55509.

1.2.1 **Documentation Conventions**

When referencing information found in external documents listed in Reference Documents, the "=>" operator is used. This notation represents the item to be searched for in the reference document. For example:

docExDoc => Header1 => Header2

is to have the reader use the search facility when opening referenced document "docExDoc" and search for "Header2". "Header2" may appear more than once in "docExDoc", therefore, referencing the one that follows "Header1". In that case, the easiest way to get to Header2 is to use the search to locate Header1, then again to locate "Header2".

1.3 Conventions

1.3.1 Numbering

- Binary numbers: Binary numbers are indicated either by appending a "b" at the end (e.g., 0110b) or by verilog syntax (e.g., 4'b0110).
- Hexadecimal numbers: Hexadecimal numbers are indicated by appending an "h" to the end (e.g., 45F8h) or by verilog syntax (e.g., 16'h45F8).
- Decimal numbers: A number is decimal if not specified to be binary or hex.
- Exception: Physical register mnemonics are implied to be hex without the h suffix.
- Underscores in numbers: Underscores are used to break up numbers to make them more readable. They do not imply any operation (e.g., 0110_1100).

1.3.2 Arithmetic And Logical Operators

In this document, formulas generally follow Verilog conventions for logic equations.

Table 2: Arithmetic and Logical Operator Definitions

Operator	Definition		
{}	Concatenation. Curly brackets are used to indicate a group of bits that are concatenated together.		
	Each set of bits is separated by a comma (e.g., {Addr[3:2], Xlate[3:0]} represents a 6-bit values;		
	the two MSBs are Addr[3:2] and the four LSBs are Xlate[3:0]).		
1	Bitwise OR (e.g., 01b 10b == 11b).		
	Logical OR (e.g., 01b 10b == 1b). It treats a multi-bit operand as 1 if >= 1 and produces a 1-bit		
	result.		
&	Bitwise AND (e.g., 01b & 10b == 00b).		
&&	Logical AND (e.g., 01b && 10b == 1b). It treats a multi-bit operand as 1 if >= 1 and produces a 1-		
	bit result.		
٨	Bitwise exclusive-OR (e.g., 01b ^ 10b == 11b). Sometimes used as "raised to the power of" as		
	well, as indicated by the context in which it is used (e.g., $2^2 = 4$).		
~	Bitwise NOT (also known as one's complement). (e.g., ~10b == 01b).		
!	Logical NOT (e.g., $!10b == 0b$). It treats a multi-bit operand as 1 if $>= 1$ and produces a 1-bit		
	result.		
<, <=, >,	Relational. Less than, Less than or equal, greater, greater than or equal, equal, and not		
>=, ==, !=	equal.		
+, -, *, /,	Arithmetic. Addition, subtraction, multiplication, division, and modulus.		
%			
<<	Bitwise left shift. Shift left first operand by the number of bits specified by the 2nd		
	operand (e.g., 01b << 01b == 10b).		
>>	Bitwise right shift. Shift right first operand by the number of bits specified by the 2nd		
	operand (e.g., 10b >> 01b == 01b).		
?:	Ternary conditional (e.g., condition? value if true: value if false).		

Table 3: Function Definitions

Term	Description	
ABS	ABS(integer expression): Remove sign from signed value.	
FLOOR	FLOOR(integer expression): Rounds real number down to nearest integer.	
CEIL	CEIL(real expression): Rounds real number up to nearest integer.	
MIN	MIN(integer expression list): Picks minimum integer or real value of comma separated list.	
MAX	MAX(integer expression list): Picks maximum integer or real value of comma separated list.	
COUNT	COUNT(integer expression): Returns the number of binary 1's in the integer.	
ROUND	ROUND(real expression): Rounds to the nearest integer; halfway rounds away from zero.	
UNIT	UNIT(register field reference): Input operand is a register field reference that contains a valid values table	

	that defines a value with a unit (e.g., clocks, ns, ms, etc). This function takes the value in the register field and
	returns the value associated with the unit (e.g., If the field had a valid value definition where 1010b was
	defined as 5 ns). Then if the field had the value of 1010b, then UNIT() would return the value 5.
POW	POW(base, exponent): POW(x,y) returns the value x to the power of y.

1.3.2.1 Operator Precedence and Associativity

This document follows C operator precedence and associativity. The following table lists operator precedence (highest to lowest). Their associativity indicates in what order operators of equal precedence in an expression are applied. Parentheses are also used to group subexpressions to force a different precedence; such parenthetical expressions can be nested and are evaluated from inner to outer (e.g., " $X = A \parallel B \& C$ " is the same as " $X = A \parallel (B \& C)$ ").

Table 4: Operator Precedence and Associativity

Operator	Description	Associativity
!, ~	Logical negation/bitwise complement	right to left
*, /, %	Multiplication/division/modulus	left to right
+, -	Addition/subtraction	left to right
<<,>>	Bitwise shift left, Bitwise shift right	left to right
< , <=, >,	Relational operators	left to right
>=, ==, !=		
&	Bitwise AND	left to right
٨	Bitwise exclusive OR	left to right
	Bitwise inclusive OR	left to right
&&	Logical AND	left to right
	Logical OR	left to right
?:	Ternary conditional	right to left

1.3.3 Register Mnemonics

A register mnemonic is a short name that uniquely refers to a register, either all instances of that register, some instances, or a single instance.

Every register instance can be expressed in 2 forms, logical and physical, as defined below.

Table 5: Register Mnemonic Definitions

Term	Description			
logical mnemonic	The register mnemonic format that describes the register functionally, what namespace to			
	which the register belongs, a name for the register that connotes its function, and optionally,			
	named parameters that indicate the different function of each instance (e.g.,			
	Link::Phy::PciDevVendIDF3). See 1.3.3.1 [Logical Mnemonic].			
physical mnemonic	The register mnemonic that is formed based on the physical address used to access the			
	register (e.g., D18F3x00). See 1.3.3.2 [Physical Mnemonic].			

1.3.3.1 Logical Mnemonic

The logical mnemonic format consists of a register namespace, a register name, and optionally a register instance specifier (e.g., register namespace::register name register instance specifier).

For Unb::PciDevVendIDF3:

- The register namespace is Unb, which is the UNB IP register namespace.
- The register name is PciDevVendIDF3, which reads as PCICFG device and vendor ID in Function 3.
- There is no register instance specifier because there is just a single instance of this register.

For Dct::Phy::CalMisc2_dct[1:0]_chiplet[BCST,3:0]_pad[BCST,11:0]:

- The register namespace is Dct::Phy, which is the DCT PHY register namespace.
- The register name is CalMisc2, which reads as miscellaneous calibration register 2.
- The register instance specifier is _dct[1:0]_chiplet[BCST,3:0]_pad[BCST,11:0], which indicates that there are 2 DCTPHY instances, each IP for this register has 5 chiplets (0-3 and BCST), and for each chiplet 13 pads (0-11 and BCST). This register has 130 instances. (2*5*13)

Table 6: Logical Mnemonic Definitions

Term	Description
register namespace	A namespace for which the register name must be unique. A register namespace indicates to which IP it belongs and an IP may have multiple namespaces. A namespace is a string that supports a list of "::" separated names. The convention is for the list of names to be hierarchical, with the most significant name first and the least significant name last (e.g., Link::Phy::Rx is the RX component in the Link PHY).
register name	A name that cannotes the function of the register.
register instance specifier	The register instance specifier exists when there is more than one instance for a register. The register instance specifier consists of one or more register instance parameter specifier (e.g., The register instance specifierdct[1:0]_chiplet[BCST,3:0]_pad[BCST,11:0] consists of 3 register instance parameter specifiers,dct[1:0],chiplet[BCST,3:0], andpad[BCST,11:0]).
register instance parameter specifier	A register instance parameter specifier is of the form _register parameter name[register parameter value list] (e.g., The register instance parameter specifier _dct[1:0] has a register parameter name of dct (The DCT PHY instance name) and a register parameter value list of "1:0" or 2 instances of DCT PHY).
register parameter name	A register parameter name is the name of the number of instances at some level of the logical hierarchy (e.g., The register parameter name dct specifies how many instances of the DCT PHY exist).
register parameter value list	The register parameter value list is the logical name for each instance of the register parameter name (e.g., For _dct[1:0], there are 2 DCT PHY instances, with the logical names 0 and 1, but it should be noted that the logical names 0 and 1 can correspond to physical values other than 0 and 1). It is the purpose of the AddressMappingTable to map these register parameter values to physical address values for the register.

1.3.3.2 Physical Mnemonic

The physical register mnemonic format varies by the access method. The following table describes the supported physical register mnemonic formats.

Table 7: Physical Mnemonic Definitions

Term	Description
PCICFG	The PCICFG, or PCI defined configuration space, physical register mnemonic format
	is of the form DXFYxZZZ.
BAR	The BAR, or base address register, physical register mnemonic format is of the form
	PREFIXxZZZ.
MSR	The MSR, or x86 model specific register, physical register mnemonic format is of the

	form MSRXXXX_XXXX, where XXXX_XXXX is the hexadecimal MSR number. This space is accessed through x86 defined RDMSR and WRMSR instructions.
PMC	The PMC, or x86 performance monitor counter, physical register mnemonic format is any of the forms {PMCxXXX, L2IPMCxXXX, NBPMCxXXX}, where XXX is the performance monitor select.
CPUID	The CPUID, or x86 processor identification state, physical register mnemonic format is of the form CPUID FnXXXX_XXXX_EiX[_xYYY], where XXXX_XXXX is the hex value in the EAX and YYY is the hex value in ECX.

1.3.4 Register Format

A register is a group of register instances that have the same field format (same bit indices and field names).

1.3.4.1 A Register is a group of Register Instances

All instances of a register:

- Have the same:
 - Field bit indices and names
 - Field titles, descriptions, valid values.
 - Register title
 - Register description
- Fields may have different: (instance specific)
 - Access Type. See 1.3.4.10 [Field Access Type].
 - Reset. See 1.3.4.11 [Field Reset].
 - Init. See 1.3.4.12 [Field Initialization].
 - Check. See 1.3.4.13 [Field Check].

1.3.4.2 Register Physical Mnemonic, Title, and Name

A register definition is identified by a table that starts with a heavy bold line. The information above the bold line in order is:

- 1. The physical mnemonic of the register.
 - A register that has multiple instances, may have instances that have different access methods, each with it's own physical mnemonic format.
 - In the event that there are multiple physical mnemonic formats, the physical mnemonic format chosen is the most commonly used physical mnemonic.
 - The physical mnemonic is not intended to represent the physical mnemonics of all instances of the register. It is only a visual aid to identify a register when scanning down a list, for readers that prefer to find registers by physical mnemonic. If "..." occurs in the physical mnemonic, the range is first ... last. There is no implication as to how many instances exist between first and last. See 1.3.4.5 [Register Instance Table].
- 2. The register title in brackets.
- 3. The register name in parenthesis.

Physical M	nemonic Title Name
MSR00	00_0010 [Time Stamp Counter] (TSC)
Read-w	rite,Volatile. Reset: 0000_0000_0000_0000h.
Core::X86:	:Msr::TSC_lthree[1:0]_core[3:0]_thread[1:0]; MSR00000010
Bits	Description
63:0	TSC: time stamp counter. Read-write, Volatile. Reset: 0. The TSC increments at the P0 frequency. The
	TSC counts at the same rate in all P-states, all C states, S0, or S1. A read of this MSR in guest mode is
	affected by Core::X86::Msr::TscRateMsr. The value (TSC/TSCRatio) is the TSC P0 frequency based
	value (as if TSCRatio == 1.0) when (TSCRatio != 1.0).

Figure 1: Register Physical Mnemonic, Title, and Name

1.3.4.3 Full Width Register Attributes

The first line that follows the bold line contains the attributes that apply to all fields of the register. This row is rendered as a convenience to the reader and replicates content that exists in the register field.

- AccessType: If all non-reserved fields of a register have the same access type, then the access type is rendered in this row.
 - The supported access types are specified by 1.3.4.10 [Field Access Type].
 - The example figure shows that the access type "Read-write, Volatile" applies to all non-reserved fields of the register.
- Reset: If all non-reserved fields of a register have a constant reset and are all the same type (Warm, Cold, Fixed), then the full width register reset is rendered in this row. The example figure shows the reset "0000_0000_0000_0000h". See 1.3.4.11 [Field Reset].
 - The value zero (0) is assumed for display purposes for all reserved fields.
- If none of the above content is rendered, then this row of the register is not rendered.

MISIKOOO	o_voro [Time Stamp Counter] (13C)			
Read-wri	Read-write, Volatile. Reset: 0000_0000_0000_0000h.			
Core::X86::N	Msr::TSC_lthree[1:0]_core[3:0]_thread[1:0]; MSR00000010			
Bits	Description			
63:0	TSC : time stamp counter . Read-write, Volatile. Reset: 0. The TSC increments at the P0 frequency. The			
	TSC counts at the same rate in all P-states, all C states, S0, or S1. A read of this MSR in guest mode is			
	affected by Core::X86::Msr::TscRateMsr. The value (TSC/TSCRatio) is the TSC P0 frequency based			
	value (as if TSCRatio == 1.0) when (TSCRatio != 1.0).			

Figure 2: Full Width Register Attributes

MSR0000 0010 [Time Stamp Counter] (TSC)

1.3.4.4 Register Description

The register description is optional and appears after the "full width register attributes" row and before the "register instance table" rows. The register description can be one or more paragraphs.

Pcil	Dev	Vei	ıdID	F3	[D	ev	ice/	Ven	dor	ID)	
		-	_	-	_		_					

Read-onl	y. Reset: 0000_1022h.
A register	r description.
That can	be multiple paragraphs.
Link::Phy::T	x::PciDevVendIDF3; D18F3x00
Bits	Description
31:16	DeviceID: device ID. Read-only. Reset: Fixed,0000h.
15:0	VendorID: vendor ID. Read-only. Reset: Fixed,1022h. Init: 1234h.

Figure 3: Register Description

1.3.4.5 Register Instance Table

The zero or more rows of 8-pt font before the Bits/Description row is the register instance table.

The register instance table can generally be described as follows:

- Each row describes the access method of one or more register instances.
- If a row describes two or more instances, then the logical instance range, left to right, corresponds to the physical range, left to right.
- The absence of register instance rows indicates that the register exists for documentation purposes, and no access method is described for the register.

Because there are multiple access methods for all the registers, each of the following subsections describes an aspect of the register instance table in isolation.

1.3.4.5.1 Content Ordering in a Row

Content in a register instance table row is ordered as follows:

- The text up to the first semicolon is the logical mnemonic.
 - See 1.3.3.1 [Logical Mnemonic].
- The text after the first semicolon is the physical mnemonic.
 - See 1.3.3.2 [Physical Mnemonic].
- Optionally, content after the physical mnemonic provides additional information about the access method for the register instances in the row.

BXXD00F0x000 (NB_VENDOR_ID)

Read-only. Reset: 1022h.
Vendor ID Register
IOHC::NB_VENDOR_ID_aliasHOS[T; BXXD00F0x000; BXX=IOHC::NB_BUS_NUM_CNTL_aliasSMN[NB_BUS_NUM]
IOHC::NB_VENDOR_ID_aliasSMN; NBCFGx00000000; NBCFG=13B0_0000h

Figure 4: Register Instance Table: Content Ordering in a Row

1.3.4.5.2 Multiple Instances Per Row

Multiple instances in a row is represented by a single dimension "range" in the logical mnemonic and the physical mnemonic.

The single dimension order of instances is the same for both the logical and physical mnemonic. The first logical

mnemonic is associated with the first physical mnemonic, so forth for the 2nd, up until the last.

- Brackets indicates a list, most significant to least significant.
- The ":" character indicates a continuous range between 2 values.
- The "," character separates non-contiguous values.
- There are some cases where more than one logical mnemonic maps to a single physical mnemonic.

Note that it is implied that the MSR {lthree,core,thread} parameters are not part of a range.

Example:

NAMESP::REGNAME_inst[BLOCK[5:0],BCST]_aliasHOST; FFF1x00000088_x[000[B:6]_0001,00000000]

- There are 7 instances.
- NAMESP is the namespace.
- 6 instances are represented by the sub-range 000[B:6]_0001.
- instBCST corresponds to FFF1x00000088 x00000000.
- inst BLOCK 0 corresponds to FFF1x00000088 x00060001.
- •
- _inst BLOCK 5 corresponds to FFF1x00000088_x000B0001.

1.3.4.5.3 MSR Access Method

The MSR parameters {lthree,core,thread} are implied by the identity of the core on which the RDMSR/WRMSR is being executed, and therefore are not represented in the physical mnemonic.

MSRs that are:

- per-thread have the {lthree,core,thread} parameters.
- per-core do not have the thread parameter.
- per-L3 do not have the {core,thread} parameters.
- common to all L3's do not have the {lthree,core,thread} parameters.

1.3.4.5.3.1 MSR Per-Thread Example

An MSR that is per-thread has all three {lthree,core,thread} parameters and all instances have the same physical mnemonic.

MSR0000_0010 [Time Stamp Counter] (TSC)

Read-wri	Read-write, Volatile. Reset: 0000_0000_0000_0000h.		
Core::X86::N	//sr::TSC_lthree[1:0]_core[3:0]_thread[1:0];[MSR00000010]		
Bits	Description		
63:0	TSC: time stamp counter. Read-write, Volatile. Reset: 0. The TSC increments at the P0 frequency. The		
	TSC counts at the same rate in all P-states, all C states, S0, or S1. A read of this MSR in guest mode is		
	affected by Core::X86::Msr::TscRateMsr. The value (TSC/TSCRatio) is the TSC P0 frequency based		
	value (as if TSCRatio == 1.0) when (TSCRatio != 1.0).		

Figure 5: Register Instance Table: MSR Example

1.3.4.5.3.2 MSR Range Example

An MSR can exist as a range for a parameter other than the {lthree,core,thread} parameters.

In the following example the n parameter is a range. The _n0 value corresponds to MSR0000_0201, and so on.

MSR0000_0201 [Variable-Size MTRRs Mask] (MtrrVarMask)

Reset: 0000_0000_0000_0000h.	
Core::X86::Msr::MtrrVarMask_n[7:0]_lthree[1:0]_core[3:0]; MSR0000_020[[F,D,B,9,7,5,3,1]]	
 	

Figure 6: Register Instance Table: MSR Range Example

1.3.4.5.4 BAR Access Method

The BAR access method is indicated by a physical mnemonic that has the form PREFIXxNUMBER.

• Example: APICx0000. The BAR prefix is "APIC".

The BAR prefix represents either a constant or an expression that consists of a register reference.

1.3.4.5.4.1 BAR as a Register Reference

A relocatable BAR is when the base of an IP is not a constant.

• The prefix NTBPRIBAR0 represents the base of the IP, the value of which comes from the register NBIFEPFNCFG::BASE_ADDR_1_aliasHOST_instNBIF0_func1[BASE_ADDR].

NTBPRIBAR0x00000 (NTB_SMU_PCTRL0)

Reset: 0000_0000h.
NTB::NTB_SMU_PCTRL0_aliasHOSTPRI; NTBPRIBAR0x00000; NTBPRIBAR0=NBIFEPFNCFG::BASE_ADDR_1_aliasHOST_instNBIF0_func1[BASE_ADDR]
NTB::NTB_SMU_PCTRL0_aliasHOSTSEC;\NTBSECBAR0x\000000;\NTBSECBAR0=NBIFEPFNCFG::BASE ADDR 1 aliasHOST inst\NBIF2 func1[BASE ADDR]
NTB::NTB_SMU_PCTRL0_aliasSMN; NTBx00000000; NTB=0400_0000h

Figure 7: Register Instance Table: BAR as Register Reference

1.3.4.5.5 PCICFG Access Method

The PCICFG access method is indicated by a physical mnemonic that has the form DXXFXxNUMBER. There are 2 cases:

- Bus omitted and implied to be 00h.
- Bus represented as BXX and indicates that the bus is indicated by a register field.

Example:

- Example: D18F0x000. (The bus, when omitted, is implied to be 00h)
- Example: BXXD0F0x000. (The bus as an expression that includes a register reference)

1.3.4.5.5.1 PCICFG Bus Implied to be 00h

Example:

• The absence of a B before the D14 implies that the bus is 0.

```
FCH::ITF::LPC::PciDevVendID_aliasHOST, D14F3x000
```

Figure 8: Register Instance Table: Bus Implied to be 00h

1.3.4.5.6 Data Port Access Method

A data port requires that the data port select be written before the register is accessed via the data port.

Example:

- The data port select value follows the "x".
- The data port select register follows the "DataPortWrite=".

```
DF::FabricBlockInstanceCount_inst[PIE0,BCST]_aliasHOST; D18F0x040_x[00050001,00000000]; DataPortWrite=DF::FabricConfigAccessControl

DF::FabricBlockInstanceCount_inst[PIE0,BCST]_aliasSMN; DFF0x000000040_x[00050001,00000000]; DFF0=0001_C000h;

DataPortWrite=DF::FabricConfigAccessControl
```

Figure 9: Register Instance Table: Data Port Select

1.3.4.6 Register Field Format

The register field definition are all rows that follow the Bits/Description row. Each field row represents the definition of a bit range, with the bit ranges ordered from most to least significant. There are 2 columns, with the left column defining the field bit range, and the right column containing the field definition.

There are 2 field definition formats, simple and complex. If the description can be described in the simple one paragraph format then the simple format is used, else the complex format is used.

1.3.4.7 Simple Register Field Format

The simple register format compresses all content into a single paragraph with the following implied order:

- 1. Field name (required)
 - Allowed to be Reserved. See 1.3.4.9 [Field Name is Reserved].
 - "FFXSE" in the example figure.
- 2. Field title
 - "fast FXSAVE/FRSTOR enable" in the example figure.
- 3. Field Access Type. See 1.3.4.10 [Field Access Type].
 - In the example figure the access type is "Read-write".
- 4. Field Reset. See 1.3.4.11 [Field Reset].
 - In the example figure the reset is warm reset and "0".
- 5. Field Init. See 1.3.4.12 [Field Initialization].
- 6. Field Check. See 1.3.4.13 [Field Check].
- 7. Field Valid Values, if the valid values are single bit (E.g. 0=, 1=). See 1.3.4.14 [Field Valid Values].
 - In the example figure the 1= definition begins with "Enables" and ends with "mechanism".
 - In the example figure there is no 0= definition.
- 8. Field description, if it is a single paragraph.
 - In the example figure the field description begins with "This is" and ends with "afterwards".

All fields that don't exist are omitted.

14 **FFXSE**: **fast FXSAVE/FRSTOR enable**: Read-write Reset: 0. 1=Enables the fast FXSAVE/FRSTOR mechanism. A 64-bit operating system may enable the fast FXSAVE/FRSTOR mechanism if (Core::X86::Cpuid::FeatureExtIdEdx[FFXSR] == 1). This bit is set once by the operating system and its value is not changed afterwards.

Figure 10: Simple Register Field Example

1.3.4.8 **Complex Register Field Format**

Content that can't be expressed in the single paragraph format is broken out to a separate sub-row (a definition column row).

Additional sub-rows are added in the following order:

- 1. Complex expression for {Reset, Access Type, Init, Check}.
- 2. Instance specific {Reset,AccessType,Init,Check} values.
- 3. Description, if more than 1 paragraph.
- 4. Valid values, if more than 0=/1=. Or a Valid bit table. (see figure)

The following figure highlights a complex access type specification.

Ī	63:0	APerfReadOnly: read-only actual core clocks counter. Reset: 0. This register increments in
		proportion to the actual number of core clocks cycles while the core is in C0. See
		Core::X86::Msr::MPerfReadOnly. This register is not affected by writes to Core::X86::Msr::APERF.
		AccessType: Core::X86::Msr::HWCR[EffFreqReadOnlyLock] ? Read-only,Volatile : Read-
	Ļ	write, Volatile.

Figure 11: Register Field Sub-Row for {Reset,AccessType,Init,Check}

The following figure highlights a complex description specification.

	·
4	INVDWBINVD: INVD to WBINVD conversion. Read-write. Reset: 1. Check: 1. 1=Convert INVD to
	WBINVD.
Description : This bit is required to be set for normal operation when any of the following are t	
	 An L2 is shared by multiple threads.

- An L3 is shared by multiple cores.
- CC6 is enabled.
- Probe filter is enabled.

Figure 12: Register Field Sub-Row for Description

The following figure highlights a complex valid value table, used either when the field is more than 1 bit or when the definition is more than a single sentence.

2:1	CpuWdtTimeBase: CPU watchdog timer time base. Read-write. Reset: 0. Specifies the time base for the timeout period specified in CpuWdtCountSel.		
1 (ValidValues:		
	Value	Description	
	00ь	1.31ms	
	01b	1.28us	
	10b	Reserved (5ns)	
	11b	Reserved	

Figure 13: Register Field Sub-Row for Valid Value Table

The following figure highlights a valid bit table which is used when each bit has a specific function.

55:52	Reserved	l.	
51:48	SliceMask. Read-write. Reset: 0.		
1 (ValidValues:		
	Bit	Description	
	[0]	L3 Slice 0 mask.	
	[1]	L3 Slice 1 mask.	
	[2]	L3 Slice 2 mask.	
	[3]	L3 Slice 3 mask.	

Figure 14: Register Field Sub-Row for Valid Bit Table

1.3.4.9 Field Name is Reserved

When a register field name is Reserved, and it does not explicitly specify an access type, then the implied access type is "Reserved-write-as-read".

- The Reserved-write-as-read access type is:
 - · Reads must not depend on the read value.
 - Writes must only write the value that was read.

1.3.4.10 Field Access Type

The AccessType keyword is optional and specifies the access type for a register field. The access type for a field is a comma separated list of the following access types.

Table 8: AccessType Definitions

Term	Description
Read-only	Readable; writes are ignored.
Read-write	Readable and writable.
Read	Readable; must be associated with one of the following {Write-once, Write-1-only, Write-1-to-clear, Error-on-write}.
Write-once	Capable of being written once; all subsequent writes have no effect. If not associated with Read, then reads are undefined.
Write-only	Writable. Reads are undefined.
Write-1-only	Writing a 1 sets to a 1; Writing a 0 has no effect. If not associated with Read, then reads are undefined.
Write-1-to-clear	Writing a 1 clears to a 0; Writing a 0 has no effect. If not associated with Read, then reads are undefined.
Write-0-only	Writing a 0 clears to a 0; Writing a 1 has no effect. If not associated with Read, then reads are undefined.
Error-on-read	Error occurs on read.
Error-on-write	Error occurs on write.
Error-on-write-0	Error occurs on bitwise write of 0.
Error-on-write-1	Error occurs on bitwise write of 1.
Inaccessible	Not readable or writable (e.g., Hide ? Inaccessible : Read-Write).
Configurable	Indicates that the access type is configurable as described by the documentation.
Unpredictable	The behavior of both reads and writes is unpredictable.
Reserved-write-	Reads are undefined. Must always write 1.
as-1	

Reserved-write-	Reads are undefined. Must always write 0.
as-0	
Volatile	Indicates that a register field value may be modified by hardware, firmware, or microcode when
	fetching the first instruction and/or might have read or write side effects. No read may depend on
	the results of a previous read and no write may be omitted based on the value of a previous read or
	write.

1.3.4.10.1 Conditional Access Type Expression

The ternary operator can be used to express an access type that is conditional on an expression that can contain any of the following:

- A register field value
- A constant
- A definition

1.3.4.11 Field Reset

The Reset keyword is optional and specifies the value for a register field at the time that hardware exits reset, before firmware initialization initiates.

Unless preceded by one of the following prefixes, the reset value is called warm reset and the value is applied at both warm and cold reset.

Table 9: Reset Type Definitions

Type	Description
Cold	Cold reset. The value is applied only at cold reset.
Fixed	The value applies at all time.

1.3.4.12 Field Initialization

The Init keyword is optional and specifies an initialization recommendation for a register field.

If present, then there is an optional prefix that specifies the owner of the initialization. See Table 10 [Init Type Definitions].

• Example: Init: BIOS,2'b00. //A initialization recommendation for a field to be programmed by BIOS.

Table 10: Init Type Definitions

Type	Description
BIOS	Initialized by AMD provided AMD Generic Encapsulated Software Architecture (AGESA TM) x86 software.
SBIOS	Initialized by OEM or IBV provided x86 software, also called Platform BIOS.
OS	Initialized by OS or Driver.

1.3.4.13 Field Check

The Check keyword is optional and specifies the value that is recommended for firmware/software to write for a register field. It is a recommendation, not a requirement, and may not under all circumstances be what software programs.

1.3.4.14 Field Valid Values

A register can optionally have either a valid values table or a valid bit table:

- A valid values table specifies the definition for specific field values.
- A valid bit table specifies the definition for specific field bits.

1.4 Definitions

Table 11: Definitions

Table 11: Definitions			
Term	Description 1997 1997 1997 1997 1997 1997 1997 199		
AGESATM	AMD Generic Encapsulated Software Architecture.		
APML	Advanced Platform Management Link.		
BCD	Binary Coded Decimal number format.		
BCS	Base Configuration Space.		
BIST	Built-In Self-Test. Hardware within the processor that generates test patterns and verifies that		
D . IIID	they are stored correctly (in the case of memories) or received without error (in the case of links).		
Boot VID	Boot Voltage ID. This is the VDD and VDDNB voltage level that the processor requests from the		
C	external voltage regulator during the initial phase of the cold boot sequence.		
C-states	These are ACPI defined core power states. C0 is operational. All other C-states are low-power		
COL	states in which the processor is not executing code. See docACPI.		
COF	Current operating frequency of a given clock domain.		
Cold reset	PWROK is deasserted and RESET_L is asserted.		
DID	Divisor Identifier. Specifies the post-PLL divisor used to reduce the COF.		
Doubleword	A 32-bit value.		
DW	Doubleword.		
ECS	Extended Configuration Space.		
EDC	Electrical design current. Indicates the maximum current the voltage rail can demand for a short,		
	thermally insignificant time.		
FCH	The integrated platform subsystem that contains the IO interfaces and bridges them to the system		
	BIOS. Previously included in the Southbridge.		
FDS	Functional Data Sheet. There is one FDS for each package type. See docSAM4.		
FID	Frequency Identifier. Specifies the PLL frequency multiplier for a given clock domain.		
GB	Gbyte or Gigabyte; 1,073,741,824 bytes.		
GT/s	Giga-Transfers per second.		
HTC	Hardware Thermal Control.		
HTC-active state	Hardware-controlled lower-power, lower performance state used to reduce temperature.		
IO configuration	Access to configuration space though IO ports CF8h and CFCh.		
IP	In electronic design, a semiconductor Intellectual Property, IP, or IP block is a reusable unit of		
	logic, cell, or integrated circuit layout design that is the intellectual property of one party.		
KB	Kbyte or Kilobyte; 1024 bytes.		
Master abort	This is a PCI-defined term that is applied to transactions on other than PCI buses. It indicates that		
	the transaction is terminated without affecting the intended target; reads return all 1s; write are		
	discarded; the master abort error code is returned in the response, if applicable; master abort error		
	bits are set if applicable.		
MB	Megabyte; 1024 KB.		
MMIO	Memory-Mapped Input-Output range. This is physical address space that is mapped to the IO		
	functions such as the IO links or MMIO configuration.		
MMIO	Access to configuration space through memory space.		
configuration			

Node	A node, is an integrated circuit device that includes one to 8 cores (one or two Core Complexes).
OW	Octword. An 128-bit value.
Processor	A package containing one or more Nodes. See Node.
QW	Quadword. A 64-bit value.
RX	Receiver.
REFCLK	Reference clock. Refers to the clock frequency (100 MHz) or the clock period (10 ns) depending on the context used.
Shutdown	A state in which the affected core waits for either INIT, RESET, or NMI. When shutdown state is entered, a shutdown special cycle is sent on the IO links.
SMAF	System Management Action Field. This is the code passed from the SMC to the processors in STPCLK assertion messages.
SMC	System Management Controller. This is the platform device that communicates system management state information to the processor through an IO link, typically the system IO hub.
Speculative event	A performance monitor event counter that counts all occurrences of the event even if the event occurs during speculative code execution.
TCC	Temperature Calculation Circuit.
Tctl	Processor Temperature control value.
TDC	Thermal Design Current.
TDP	Thermal Design Power. A power consumption parameter that is used in conjunction with thermal specifications to design appropriate cooling solutions for the processor.
Token	A scheduler entry used in various DF queues to track outstanding requests.
TX	Transmitter.
UMI	Unified Media Interface. The link between the processor and the FCH.
VDD	Main power supply to the processor core logic.
VID	Voltage level identifier.
Warm reset	RESET_L is asserted only (while PWROK stays high).
XBAR	Cross bar; command packet switch.
PCIe ®	PCI Express.

1.5 Changes Between Revisions and Product Variations

1.5.1 Revision Conventions

The processor revision is specified by CPUID_Fn00000001_EAX (FamModStep) or CPUID_Fn80000001_EAX (FamModStepExt). This document uses a revision letter instead of specific model numbers. Where applicable, the processor stepping is indicated after the revision letter. All behavior marked with a revision letter apply to future revisions unless they are superseded by a change in a later revision. See the revision guide in 1.2 [Reference Documents] for additional information about revision determination.

1.6 Package

1.6.1 Package type

The following packages are supported.

Table 12: Package Definitions

Term	Description

	Desktop, single die, single socket. For client platform DDR4. AM4 = (Core::X86::Cpuid::BrandId[PkgType] == 02h).
SP3	Server, four die MCM, single and dual socket.
SP3r2	High performance desktop, 4-die, single socket, lidded LGA.

1.7 Processor Overview

1.7.1 Features

Family 17h Models 00h-0Fh are a microprocessor System-On-a-Chip (SOC) featuring AMD x86 cores. It also uses a scalable data fabric (SDF), integrated IO, and integrated southbridge control hub, SCH where no supporting chipset is necessary.

- CPU:
 - 2 Core Complexes (CCX). The Core represents the x86 ISA core from AMD designed for FX and 7th generation APU offerings.
 - Supports Simultaneous Multithreading over previous generations clusters.
 - Each core complex consists of:
 - 4 cores where each core may run in single-thread mode (1T) or two-thread SMT mode (2T) for a total of up to 8 threads per complex
 - 512KB of L2 per core for a total of 2MB L2 per complex
 - 4MB L2 total
 - 8MB of L3 shared across all cores within the complex
 - 16MB L3 total
- Scalable Data Fabric. This provides the data path that connects the compute complexes, the I/O interfaces, and the memory interfaces to each other.
 - Handles request, response, and data traffic
 - Handles probe traffic to facilitate coherency, including a probe filter supporting up to 512GB per DRAM channel
 - Handles interrupt request routing (APIC)
- Memory interface
 - 2 Unified Memory Controllers (UMC), each supporting one DRAM channel
 - 2 DDR4 PHYs. Each PHY supports:
 - 64-bit data plus ECC
 - 1 DRAM channel per PHY
 - 2 DIMMs per channel
 - DDR4 transfer rates from 1333MT/s to 3200MT/s
 - UDIMM,SODIMM
- PSP and SMU
 - MP0 (PSP) and MP1 (SMU) microcontrollers
 - This document refers to the AMD Secure Processor technology as Platform Security Processor (PSP).
 - Thermal monitoring
 - Fuses
 - Clock control
- NBIO
 - 2 SYSHUBs
 - 1 IOHUB
 - Two 8x16 PCIe® controllers supporting Gen1/Gen2/Gen3. Note that SATA Express is supported by combining an x2 PCIe® port and two SATA ports on the same 2 lanes.
- Enterprise 12G (E12G) Combo PHYs, PCS, and UPI muxing

- 6 x4 PHYs plus 5 x2 PHYs
- PHYs can support the following controller types: PCIe®, WAFL, xGMI, SATA, and Ethernet (SGMII 1000/100/10, 10GBASE-KR, 1000BASE-KX protocols). In addition, SATA Express can be supported by combining PCIe® and SATA controllers on the same lanes with a GPIO for a device to indicate its controller type.
- PHY muxing is provided that allows different package or board configurations to enable a single PHY to support functionality from multiple on-die controllers
- Fusion Controller Hub (FCH) or southbridge (SB))
 - ACPI
 - CLKGEN/CGPLL for refclk generation
 - eMMC
 - GPIOs (varying number depending on muxing)
 - (6 ports)
 - LPC
 - Real-Time Clock (RTC)
 - SMBus (2 ports)
 - SPI/eSPI
 - UART (4 ports)
- Azalia
 - High Definition Audio
- · Ethernet complex
 - Up to 4 lanes of 10/100/1000 SGMII, or 10GBASE-KR, or 1000BASE-KX Ethernet operation
 - 2 instances of a "lite" controller configuration
 - 2 instances of a "heavy" controller configuration
- SATA
 - Up to 8 lanes of SATA Gen1/Gen2/Gen3, also provides the legacy SATA support for SATAe ports
- SGPIO
- USB3.0
 - 4 ports of USB3 SuperSpeed
 - includes support for legacy USB speeds

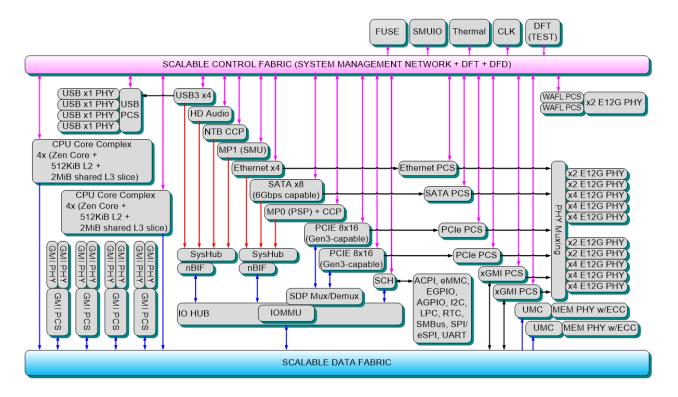


Figure 15: Family 17h Models 00h-0Fh Processor Overview

1.8 System Overview

1.8.1 AM4 Desktop

AM4 is a single-socket client infrastructure supporting DDR4 and PCIe $^{\otimes}$ for non-coherent I/O communication. The AM4 package is a lidded μ PGA package that supports AMD Family 17h Models 00h-0Fh die, and Family 17h Models 70h - 7Fh,.

Table 13: AM4 1P Capabilities

	AM4 1P Configuration
Module Type	Single or multi-die, micro pin grid array common socket
	infrastructure with other AM4 products
Cores / module	8
Memory channel/module	2
Max DIMMs/channel	2
DIMM Type	1.2V up to DDR4-3200
Combo links/module (note1)	PHY groupings of 16 lanes may each have a
	maximum of 8 PCIe® ports, where a port consists of a
	power-of-2 lanes (x1, x2, x4, x8, x16) or a SATA
	Express port
Max PCIe®/module	24 lanes: 16 for dGPU, 4 for IO expander, 4 for storage
	(NVMe or 2 ports SATA Express)
Max SATA/ module (note2)	Up to 4 Gen 3
Native I/O	USB3/2, SPI, LPC, I2C, RTC, Power control, etc.
Notes:	•

Notes:

1.8.2 SP3 MCM Server Single-Socket

SP3-based one socket systems target a new paradigm of high end single socket commercial servers. These servers have a large number of memory channels, memory capacity, and I/O ports and target the following form factors:

- 1U traditional rack servers.
- · Blade servers.
- Multi node, 1P "twins" type of shared infrastructure servers.
- EATX or EATX+ servers.

The characteristics and capabilities of the SP3 product in 1 socket systems are shown in the following table:

Table 14: SP3 1P Capabilities

	SP3 1P Configuration
Module Type	4 die MCM socketed LGA
Module size, pad pitch	58.5 x 75.4 @ 1.00 x 0.87mm pitch

^{1:} Combo links can take the form of PCIe®, SATA, SATA Express with configuration restrictions

^{2:} These functions are in lieu of PCIe® on those ports (e.g., a group of 8 SATA displaces 8 PCIe® lanes).

Socket size	78.9 x 119.3 mm, heatsink actuated
Cores / module	32 (8 per die)
Memory chan/module	2 (2 per die)
Max DIMMs/channel	2
DIMM Type	R/LR/NV DIMM, 3DS
Combo links/module (note1)	Eight – 16 bit links (2 per die)
xGMI links (16 bit)	N/A
Max PCIe®/module	128 lanes (32 per die)
Max SATA/module (note2)	32
Max 10GigE/module (note2)	16 (note3)
Native I/O	USB3/2, SPI, LPC, UART, I2C, RTC, Power control, etc.

Notes

- 1: Combo links can take the form of PCIe®, SATA, SATA Express, 10GBASE-KR, 1000BASE-KX, SGMII with configuration restrictions.
- 2: These functions are in lieu of PCIe® on those ports (e.g., a group of 8 SATA displaces 8 PCIe® lanes).
- 3: Half of the Ethernet ports have 16 TX/RX DMA queues (WHQL compliant for 10GBASE-KR or SGMII or 1000BASE-KX). Half have 2 TX/RX DMA queues (WHQL compliant for SGMII or 1000BASE-KX only).

1.8.2.1 SP3 1P Coherent Interconnect Topology

Referring to 1P System Block Diagram below: Each of the 4 dies on the SP3 MCM is interconnected by one GMI link on the substrate, creating a fully connected 4-die topology. Since this is deployed as a 1P server, xGMI mode is not utilized. Instead, the links can be deployed to double the I/O connectivity.

1.8.2.2 SP3 1P Memory Support

Each die on the MCM system generates two memory channels resulting in 16 memory channels in a two socket system. Each channel can accommodate two DDR4 DIMM connectors. DDR3 is not supported. The supported DIMM types are:

- One and two rank DDR4 RDIMMs.
- Four and eight physical rank DDR4 LRDIMMs.
- DDR4 3DS DIMMs.
- NVDIMM-Ns.

1.8.2.3 SP3 1P I/O Support

The I/O interfaces for the Family 17h Models 00h-0Fh die are configurable and extremely flexible. Each die generates two 16 bit "combo" links, one is type A and the other is type B.

Type A links can be configured to support:

- One 16-lane PCIe® Gen3 controller with 8 ports.
- Up to eight SATA 3 ports.
- Up to four 10Gbps-capable Ethernet ports.
- Up to two SATA Express ports.

Type B links can support:

• One 16 lane PCIe® gen 3 controller with 8 ports.

This configuration capability of the links is shown in the Link Capabilities figure below.

In one socket systems, there are 8 links, 4 type A and 4 type B, all of which can be used as I/O. As an example, a one socket system that maximizes PCIe® connectivity can support up to 128 lanes of PCIe® Gen3. This can be divided up into smaller link widths as long as there are no more than 8 ports per 16-lane group.

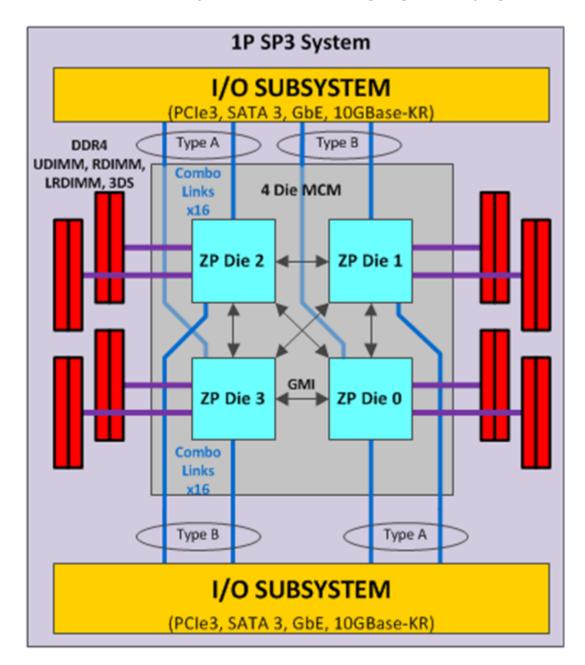


Figure 16: 1P System Block Diagram

1.8.3 Mixed Processor Revision Support

AMD Family 17h processors with different OPNs or different revisions cannot be mixed in a multiprocessor system. If an

unsupported configuration is detected, BIOS should configure the BSP as a single processor system and signal an error.

2 Core Complex (CCX)

2.1 Processor x86 Core

2.1.1 Core Functional Information

2.1.2 Core Definitions

Table 15: Definitions

Table 13. Definition	
Term	Description
CCX	Core Complex where more than one core shares L3 resources.
Core	The instruction execution unit of the processor when the term Core is used in a x86 core context.
CoreCOF	Core current operating frequency in MHz. CoreCOF = (Core::X86::Msr::PStateDef[CpuFid[7:0]]/Core::X86::Msr::PStateDef[CpuDfsId])*200.
CPL	Current Privilege Level of the running task when the term CPL is used in a x86 core context.
CpuCoreNum	Specifies the core number.
IBS	Instruction based sampling.
IO configuration	Access to configuration space through IO ports CF8h and CFCh.
IORR	IO range register.
L1 cache	The level 1 caches (instruction cache and the data cache).
L2 cache	The level 2 caches.
L3	Level 3 Cache. The L3 term is also in Addrmaps to enumerate CCX units.
L3 cache	Level 3 Cache.
Linear (virtual)	The address generated by a core after the segment is applied.
address	
LINT	Local interrupt.
Logical address	The address generated by a core before the segment is applied.
LVT	Local vector table. A collection of APIC registers that define interrupts for local events (e.g., APIC[530:500] [Extended Interrupt [3:0] Local Vector Table]).
Micro-op	Micro-op. Instructions have variable-length encoding and many perform multiple primitive operations. The processor does not execute these complex instructions directly, but, instead, decodes them internally into simpler fixed-length instructions called macro-ops. Processor schedulers subsequently break down macro-ops into sequences of even simpler instructions called micro-ops, each of which specifies a single primitive operation.
MTRR	Memory-type range register. The MTRRs specify the type of memory associated with various memory ranges.
NTA	Non-Temporal Access.
PTE	Page table entry.
SMI	System management interrupt.
Speculative event	A performance monitor event counter that counts all occurrences of the event even if the event
	occurs during speculative code execution.
SVM	Secure virtual machine.
BSC	Boot strap core. Core 0 of the BSP.
BSP	Boot strap processor.

Canonical-address	An address in which the state of the most-significant implemented bit is duplicated in all the remaining higher-order bits, up to bit 63.
CMP	Specifies the core number.
#GP	A general-protection exception.
#GP(0)	Notation indicating a general-protection exception (#GP) with error code of 0.
NBC	NBC = (CPUID Fn00000001_EBX[LocalApicId[3:0]]==0). Node Base Core. The lowest
	numbered core in the node.
SMM	System Management Mode.
SMT	Simultaneous multithreading. See Core::X86::Cpuid::CoreId[ThreadsPerCore].
Thread	One architectural context for instruction execution.
WDT	Watchdog timer. A timer that detects activity and triggers an error if a specified period of time expires without the activity.

2.1.3 Secure Virtual Machine Mode (SVM)

Support for SVM mode is indicated by Core::X86::Cpuid::FeatureExtIdEcx[SVM].

2.1.3.1 BIOS support for SVM Disable

The BIOS should include the following user setup options to enable and disable AMD Virtualization™ technology.

2.1.3.1.1 Enable AMD VirtualizationTM

- Core::X86::Msr::VM_CR[SvmeDisable] = 0.
- Core::X86::Msr::VM_CR[Lock] = 1.
- Core::X86::Msr::SvmLockKey[SvmLockKey] = 0000_0000_0000_0000h.

2.1.3.1.2 Disable AMD VirtualizationTM

- Core::X86::Msr::SvmLockKey[SvmLockKey] = 0000 0000 0000 0000h.
- Core::X86::Msr::VM CR[SvmeDisable] = 1.
- Core::X86::Msr::VM_CR[Lock] = 1.

The BIOS may also include the following user setup options to disable AMD Virtualization technology.

2.1.3.1.3 Disable AMD Virtualization™, with a user supplied key

- Core::X86::Msr::VM_CR[SvmeDisable] = 1.
- Core::X86::Msr::VM_CR[Lock] = 1.
- Core::X86::Msr::SvmLockKey[SvmLockKey] programmed with value supplied by user. This value should be stored in NVRAM.

2.1.4 Memory Encryption

For details of the memory encryption, see docAPM2 section Secure Encrypted Virtualization. See docAPM2 section Enabling Memory Encryption Extensions for details about enabling memory encryption extensions.

2.1.5 Effective Frequency

The effective frequency interface allows software to discern the average, or effective, frequency of a given core over a configurable window of time. This provides software a measure of actual performance rather than forcing software to assume the current frequency of the core is the frequency of the last P-state requested. Core::X86::Msr::MPERF is incremented by hardware at the P0 frequency while the core is in C0. Core::X86::Msr::APERF increments in proportion to the actual number of core clocks cycles while the core is in C0.

The following procedure calculates effective frequency using Core::X86::Msr::MPERF and Core::X86::Msr::APERF:

- 1. At some point in time, write 0 to both MSRs.
- 2. At some later point in time, read both MSRs.
- 3. Effective frequency = (value read from Core::X86::Msr::APERF / value read from Core::X86::Msr::MPERF) * P0 frequency.

Additional notes:

- The amount of time that elapses between steps 1 and 2 is determined by software.
- It is software's responsibility to disable interrupts or any other events that may occur in between the write of Core::X86::Msr::MPERF and the write of Core::X86::Msr::APERF in step 1 or between the read of Core::X86::Msr::MPERF and the read of Core::X86::Msr::APERF in step 2.
- The behavior of Core::X86::Msr::MPERF and Core::X86::Msr::APERF may be modified by Core::X86::Msr::HWCR[EffFreqCntMwait].
- The effective frequency interface provides +/- 50MHz accuracy if the following constraints are met:
 - Effective frequency is read at most one time per millisecond.
 - When reading or writing Core::X86::Msr::MPERF and Core::X86::Msr::APERF software executes only MOV instructions, and no more than 3 MOV instructions, between the two RDMSR or WRMSR instructions.
 - Core::X86::Msr::MPERF and Core::X86::Msr::APERF are invalid if an overflow occurs.

2.1.6 Address Space

2.1.6.1 Virtual Address Space

The processor supports 48-bit address bits of virtual memory space (256 TB) as indicated by Core::X86::Cpuid::LongModeInfo.

2.1.6.2 Physical Address Space

The processor supports a 48-bit physical address space. See Core::X86::Cpuid::LongModeInfo. The processor master aborts the following upper-address transactions (to address PhysAddr):

• Link or core requests with non-zero PhysAddr[63:48].

2.1.6.3 System Address Map

The processor defines a reserved memory address region starting at FFFD_0000_0000h and extending up to FFFF_FFFF. System software must not map memory into this region. Downstream host accesses to the reserved address region results in a page fault. Upstream system device accesses to the reserved address region results in an undefined operation.

2.1.6.3.1 Memory Access to the Physical Address Space

All memory accesses to the physical address space from a core are sent to its associated Data Fabric (DF). All memory accesses from a link are routed through the DF. An IO link access to physical address space indicates

to the DF the cache attribute (Coherent or Non-coherent, based on bit[0] of the Sized Read and Write commands).

A core access to physical address space has two important attributes that must be determined before issuing the access to the NB: the memory type (e.g., WB, WC, UC; as described in the MTRRs) and the access destination (DRAM or MMIO).

If the memory map maps a region as DRAM that is not populated with real storage behind it, then that area of DRAM must be mapped as UC memtype.

This mechanism is managed by the BIOS and does not require any setup or changes by system software.

2.1.6.3.1.1 Determining Memory Type

The memory type for a core access is determined by the highest priority of the following ranges that the access falls in: 1=Lowest priority.

- 1. The memory type as determined by architectural mechanisms.
 - See the APM2 chapter titled "Memory System", sections "Memory-Type Range Registers" and "Page-Attribute Table Mechanism".
 - See the APM2 chapter titled "Nested Paging", section "Combining Memory Types, MTRRs".
 - See Core::X86::Msr::MTRRdefType, Core::X86::Msr::MtrrVarBase, Core::X86::Msr::MtrrVarMask, Core::X86::Msr::MtrrFix_64K and Core::X86::Msr::MtrrFix_16K_0 through Core::X86::Msr::MtrrFix_4K_7.
- 2. TSeg & ASeg SMM mechanism. (see Core::X86::Msr::SMMAddr and Core::X86::Msr::SMMMask)
- 3. CR0[CD]: If (CR0[CD]==1) then MemType=CD.
- 4. MMIO configuration space, APIC space.
 - MMIO APIC space and MMIO config space must not overlap.
 - MemType=UC.
- 5. If ("In SMM Mode"&& ~((Core::X86::Msr::SMMMask[AValid] && "The address falls within the ASeg region") || (Core::X86::Msr::SMMMask[TValid] && "The address falls within the TSeg region"))) then MemType=CD.

2.1.7 Configuration Space

PCI-defined configuration space was originally defined to allow up to 256 bytes of register space for each function of each device; these first 256 bytes are called base configuration space (BCS). It was expanded to support up to 4096 bytes per function; bytes 256 through 4095 are called extended configuration space (ECS).

The processor includes configuration space registers located in both BCS and ECS. Processor configuration space is accessed through bus 0, devices 18h to 1Fh, where device 18h corresponds to node 0 and device 1Fh corresponds to node 7. See 2.1.7.3 [Processor Configuration Space].

Configuration space is accessed by the processor through two methods as follows:

- IO-space configuration: IO instructions to addresses CF8h and CFCh.
 - Enabled through IO::IoCfgAddr[ConfigEn], which allows access to BCS.
 - Use of IO-space configuration can be programmed to generate GP faults through Core::X86::Msr::HWCR[IoCfgGpFault].
 - SMI trapping for these accesses is specified by Core::X86::Msr::SMI_ON_IO_TRAP_CTL_STS and Core::X86::Msr::SMI_ON_IO_TRAP.
- MMIO configuration: configuration space is a region of memory space.
 - The base address and size of this range is specified by Core::X86::Msr::MmioCfgBaseAddr. The size is controlled by the number of configuration-space bus numbers supported by the system. Accesses to this range are converted configuration space as follows:
 - Address[31:0] = {0h, bus[7:0], device[4:0], function[2:0], offset[11:0]}.

The BIOS may use either configuration space access mechanism during boot. Before booting the OS, BIOS must disable IO access to ECS, enable MMIO configuration and build an ACPI defined MCFG table. BIOS ACPI code must use MMIO to access configuration space.

2.1.7.1 MMIO Configuration Coding Requirements

MMIO configuration space accesses must use the uncacheable (UC) memory type. Instructions used to read MMIO configuration space are required to take the following form: mov eax/ax/al, any_address_mode;

Instructions used to write MMIO configuration space are required to take the following form: mov any address mode, eax/ax/al;

No other source/target registers may be used other than eax/ax/al.

In addition, all such accesses are required not to cross any naturally aligned DW boundary. Access to MMIO configuration space registers that do not meet these requirements result in undefined behavior

2.1.7.2 MMIO Configuration Ordering

Since MMIO configuration cycles are not serializing in the way that IO configuration cycles are, their ordering rules relative to posted may result in unexpected behavior.

Therefore, processor MMIO configuration space is designed to match the following ordering relationship that exists naturally with IO-space configuration: if a core generates a configuration cycle followed by a posted write cycle, then the posted write is held in the processor until the configuration cycle completes. As a result, any unexpected behavior that might have resulted if the posted-write cycle were to pass MMIO configuration cycle is avoided.

2.1.7.3 Processor Configuration Space

Accesses to unimplemented registers of implemented functions are ignored: writes dropped; reads return 0. Accesses to unimplemented functions also ignored: writes are dropped; however, reads return all F's. The processor does not log any master abort events for accesses to unimplemented registers or functions.

Accesses to device numbers of devices not implemented in the processor are routed based on the configuration map registers. If such requests are master aborted, then the processor can log the event.

2.1.8 PCI Configuration Legacy Access

IOx0CF8 [IO-Space Configuration Address] (IO::IoCfgAddr)

Read-write. Reset: 0000 0000h.

IO::IoCfgAddr, and IO::IoCfgData are used to access system configuration space, as defined by the PCI specification. IO::IoCfgAddr provides the address register and IO::IoCfgData provides the data port. Software sets up the configuration address by writing to IO::IoCfgAddr. Then, when an access is made to IO::IoCfgData, the processor generates the corresponding configuration access to the address specified in IO::IoCfgAddr. See 2.1.7 [Configuration Space].

IO::IoCfgAddr may only be accessed through aligned, DW IO reads and writes; otherwise, the accesses are passed to the appropriate IO link. Accesses to IO::IoCfgAddr and IO::IoCfgData received from an IO link are treated as all other IO transactions received from an IO link. IO::IoCfgAddr and IO::IoCfgData in the processor are not accessible from an IO link.

_aliasIO;	x0CF8; IO=0000_0000h				
Bits	Description				
31	ConfigEn: configuration space enable. Read-write. Reset: 0. 0=IO read and write accesses are passed to the				
	appropriate IO link and no configuration access is generated. 1=IO read and write accesses to IO::IoCfgData are				
	translated into configuration cycles at the configuration address specified by this register.				
30:28	Reserved.				
27:24	24 ExtRegNo : extended register number . Read-write. Reset: 0h. ExtRegNo provides bits[11:8] and RegNo				
	provides bits[7:2] of the byte address of the configuration register.				
23:16	BusNo: bus number. Read-write. Reset: 00h. Specifies the bus number of the configuration cycle.				
15:11	Device: device number . Read-write. Reset: 00h. Specifies the device number of the configuration cycle.				
10:8	Function . Read-write. Reset: 0h. Specifies the function number of the configuration cycle.				
7:2	RegNo: register address. Read-write. Reset: 00h. See IO::IoCfgAddr[ExtRegNo].				
1:0	Reserved.				

IOx0CFC [IO-Space Configuration Data Port] (IO::IoCfgData)		
Read-	Read-write. Reset: 0000_0000h.	
_aliasIO	; IOx0CFC; IO=0000_0000h	
Bits	Bits Description	
31:0	31:0 Data . Read-write. Reset: 0000_0000h. See IO::IoCfgAddr.	

2.1.9 System Software Interaction With SMT Enabled

If Core::X86::Cpuid::CoreId[ThreadsPerCore] > 0, then SMT is enabled in all cores in the system. When SMT is enabled, the resources of each core are dynamically balanced among the hardware threads executing on that core. The number of hardware threads (hereafter "threads") supported by a single core when SMT is enabled is reported in Core::X86::Cpuid::CoreId[ThreadsPerCore]. System software that is SMT-aware may take advantage of the knowledge that core resources are being shared among multiple threads when scheduling tasks to be run by each thread on each core. System software that is not SMT-aware sees each thread as an independent core.

2.1.10 Register Sharing

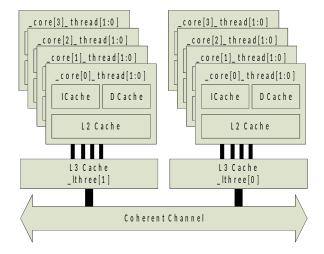


Figure 17: Register Sharing Domains

MSR0000_0010 [Time Stamp Counter] (TSC)

	Read-write, Volatile. Reset: 0000 0000 0000_0000h.		
Core::X86::1	Msr::TS <mark>C_lthree[1:0]_core[3:0]_thread[1:0],</mark> MSR00000010		
Bits	S Description		
63:0	TSC: time stamp counter. Read-write, Volatile. Reset: 0. The TSC increments at the P0 frequency. The		
	TSC counts at the same rate in all P-states, all C states, S0, or S1. A read of this MSR in guest mode is		
	affected by Core::X86::Msr::TscRateMsr. The value (TSC/TSCRatio) is the TSC P0 frequency based		

Figure 18: Instance Parameters

Instances of core registers are designated as lthree[n:0]_core[n:0]_thread[1:0]. Core registers may be shared at various levels of hierarchy as one register instance per die, per L3 complex, per core or per thread. The absence of the instance parameter _thread[1:0] signifies that there is not a specific instance of said register per thread and thus the register is shared between thread 1 and thread 0. Similarly, the absence of the instance parameter _core[n:0] signifies that there is not a specific instance of said register per core and thus the register is shared by all cores in that L3 complex, and so on. Software must coordinate writing to shared registers with other threads in the same sharing hierarchy level.

2.1.11 Timers

Each core includes the following timers. These timers do not vary in frequency regardless of the current P-state or C-state.

- Core::X86::Msr::TSC; the TSC increments at the rate specified by the P0 Pstate
- The APIC timer (Core::X86::Apic::TimerInitialCount and Core::X86::Apic::TimerCurrentCount), which increments at the rate of 2xCLKIN; the APIC timer may increment in units of between 1 and 8.

2.1.12 Interrupts

2.1.12.1 System Management Mode (SMM)

System management mode (SMM) is typically used for system control activities such as power management. These activities are typically transparent to the operating system.

2.1.12.1.1 SMM Overview

SMM is entered by a core on the next instruction boundary after a system management interrupt (SMI) is received and recognized. A core may be programmed to broadcast a special cycle to the system, indicating that it is entering SMM mode. The core then saves its state into the SMM memory state save area and jumps to the SMI service routine (or SMI handler). The pointer to the SMI handler is specified by MSRs. The code and data for the SMI handler are stored in the SMM memory area, which may be isolated from the main memory accesses.

The core returns from SMM by executing the RSM instruction from the SMI handler. The core restores its state from the SMM state save area and resumes execution of the instruction following the point where it entered SMM. The core may be programmed to broadcast a special bus cycle to the system, indicating that it is exiting SMM mode.

2.1.12.1.2 Mode and Default Register Values

The software environment after entering SMM has the following characteristics:

• Addressing and operation is in Real mode.

- A far jump, call or return in the SMI handler can only address the lower 1M of memory, unless the SMI handler first switches to protected mode.
- If (Core::X86::Msr::SMM_BASE[SmmBase]>=0010_0000h) then:
 - The value of the CS selector is undefined upon SMM entry.
 - The undefined CS selector value should not be used as the target of a far jump, call, or return.
- 4-Gbyte segment limits.
- Default 16-bit operand, address, and stack sizes (instruction prefixes can override these defaults).
- Control transfers that do not override the default operand size truncate the EIP to 16 bits.
- Far jumps or calls cannot transfer control to a segment with a base address requiring more than 20 bits, as in Real mode segment-base addressing, unless a change is made into protected mode.
- Interrupt vectors use the Real mode interrupt vector table.
- The IF flag in EFLAGS is cleared (INTR is not recognized).
- The TF flag in EFLAGS is cleared.
- The NMI and INIT interrupts are masked.
- Debug register DR7 is cleared (debug traps are disabled).

The SMM base address is specified by Core::X86::Msr::SMM_BASE[SmmBase]. Important offsets to the base address pointer are:

- Core::X86::Msr::SMM_BASE[SmmBase] + 8000h: SMI handler entry point.
- Core::X86::Msr::SMM BASE[SmmBase] + FE00h FFFFh: SMM state save area.

2.1.12.1.3 SMI Sources And Delivery

The processor accepts SMIs as link-defined interrupt messages only. The core/node destination of these SMIs is a function of the destination field of these messages. However, the expectation is that all such SMI messages are specified to be delivered globally (to all cores of all nodes).

There are also several local events that can trigger SMIs. However, these local events do not generate SMIs directly. Each of them triggers a programmable IO cycle that is expected to target the SMI command port in the IO hub and trigger a global SMI interrupt message back to the coherent fabric.

Local sources of SMI events that generate the IO cycle specified in Core::X86::Msr::SmiTrigIoCycle are:

- In the core, as specified by:
 - Core::X86::Msr::McExcepRedir.
 - Core::X86::Msr::SMI_ON_IO_TRAP.
- All local APIC LVT registers programmed to generate SMIs.

The status for these is stored in Core::X86::Smm::LocalSmiStatus.

2.1.12.1.4 SMM Initial State

After storing the save state, execution starts at Core::X86::Msr::SMM_BASE[SmmBase] + 08000h. The SMM initial state is specified in the following table.

Table 16: SMM Initial State

Register	SMM Initial State
CS	SmmBase[19:4]
DS	0000h
ES	0000h
FS	0000h

GS	0000h
SS	0000h
General-Purpose Registers	Unmodified
EFLAGS	0000_0002h
RIP	0000_0000_0000_8000h
CR0	Bits 0, 2, 3, and 31 cleared (PE, EM, TS, and PG); remainder is unmodified
CR4	0000_0000_0000_0000h
GDTR	Unmodified
LDTR	Unmodified
IDTR	Unmodified
TR	Unmodified
DR6	Unmodified
DR7	0000_0000_0000_0400h
EFER	All bits are cleared except bit 12 (SVME) which is unmodified.

2.1.12.1.5 SMM Save State

In the following table, the offset field provides the offset from the SMM base address specified by Core::X86::Msr::SMM_BASE[SmmBase].

Table 17: SMM Save State

Offset	Size	Conten	ts	Access
FE00h	Word	ES	Selector	Read-only
FE02h	6 Bytes		Reserved	
FE08h	Quadword		Descriptor in memory format	
FE10h	Word	CS	Selector	Read-only
FE12h	6 Bytes		Reserved	
FE18h	Quadword		Descriptor in memory format	
FE20h	Word	SS	Selector	Read-only
FE22h	6 Bytes		Reserved	
FE28h	Quadword		Descriptor in memory format	
FE30h	Word	DS	Selector	Read-only
FE32h	6 Bytes		Reserved	
FE38h	Quadword		Descriptor in memory form	
FE40h	Word	FS	Selector	Read-only
FE42h	2 Bytes		Reserved	
FE44h	Doublewor d		FS Base {16'b[47], 47:32}(note 1)	
FE48h	Quadword	1	Descriptor in memory format	
FE50h	Word	GS	Selector	Read-only
FE52h	2 Bytes	1	Reserved	
FE54h	Doublewor d		GS Base {16'b[47], 47:32}(note 1)	
FE58h	Quadword]	Descriptor in memory format	
FE60h	4 Bytes	GDTR	Reserved	Read-only
FE64h	Word]	Limit	
FE66h	2 Bytes	1	Reserved	

FE68h	Quadword		Descriptor in memory format	
FE70h	Word	LDTR	Selector	Read-only
FE72h	Word	1	Attributes	
FE74h	Doublewor	1	Limit	
	d			
FE78h	Quadword	1	Base	
FE80h	4 Bytes	IDTR	Reserved	Read-only
FE84h	Word	1	Limit	
FE86h	2 Bytes	1	Reserved	
FE88h	Quadword	1	Base	
FE90h	Word	TR	Selector	Read-only
FE92h	Word	1	Attributes	
FE94h	Doublewor]	Limit	
	d]		
FE98h	Quadword		Base	
FEA0h	Quadword		TART_RIP	
FEA8h	Quadword		TART_RCX	
FEB0h	Quadword		TART_RSI	
FEB8h	Quadword		TART_RDI	
FEC0h	Doublewor	Core::X	86::Smm::TrapOffset [SMM IO Trap Offset]	Read-only
	d			
FEC4	Doublewor	Core::X	86::Smm::LocalSmiStatus	Read-only
	d			
FEC8h	Byte		86::Smm::IoRestart	Read-write
FEC9h	Byte		86::Smm::AutoHalt	Read-write
FECAh	Byte		86::Smm::NmiMask	Read-write
FECBh	5 Bytes	Reserve	d	
FED0h	Quadword	EFER		Read-only
FED8h	Quadword		86::Smm::SvmState	Read-only
FEE0h	Quadword	-	MCB physical address	Read-only
FEE8h	Quadword		rtual Interrupt Control	Read-only
FEF0h	16 Bytes	Reserve	-	
FEFCh		Core::X	86::Smm::SmmRevID	Read-only
	d			
FF00h	Doublewor	Core::X	86::Smm::SmmBase	Read-write
FF04h	d 28 Bytes	Reserve	d	
FF20h	Quadword	Guest PA		Read-only
FF28h	Quadword		ER (note 2)	- Redu only
FF30h	Quadword		24 (note 2)	
FF38h	Quadword		CR3 (note 2)	
FF40h	Quadword		80 (note 2)	
FF48h	Quadword	CR4	(1101.6.2)	
FF50h	Quadword	CR3		
FF58h	Quadword	CR0		
FF60h	Quadword	DR7	Read-only	
FF68h	Quadword	DR6	Ixcau-only	
FF70h	Quadword	RFLAG	Read-write	
FF78h	Quadword	RIP	Read-write	
FF80h	Quadword	R15	ixeau-wille	
1.1.0011	Quauwoid	1713		

TT001	6 1 1		
FF88h	Quadword	R14	,
FF90h	Quadword	R13	
FF98h	Quadword	R12	
FFA0h	Quadword	R11	
FFA8h	Quadword	R10	
FFB0h	Quadword	R9	
FFB8h	Quadword	R8	
FFC0h	Quadword	RDI	Read-write
FFC8h	Quadword	RSI	
FFD0h	Quadword	RBP	
FFD8h	Quadword	RSP	
FFE0h	Quadword	RBX	
FFE8h	Quadword	RDX	
FFF0h	Quadword	RCX	
FFF8h	Quadword	RAX	

Notes:

- 1. This notation specifies that bit[47] is replicated in each of the 16 MSBs of the DW (sometimes called sign extended). The 16 LSBs contain bits[47:32].
- 2. Only used for an SMI in guest mode with nested paging enabled.

The SMI save state includes most of the integer execution unit. Not included in the save state are: the floating point state, MSRs, and CR2. In order to be used by the SMI handler, these must be saved and restored. The save state is the same, regardless of the operating mode (32-bit or 64-bit).

2.1.12.1.6 System Management State

The following are offsets in the SMM save state area.

SMMxFEC0 [SMM IO Trap Offset] (Core::X86::Smm::TrapOffset)

Read-only, Volatile. Reset: 0000 0000h.

If the assertion of SMI is recognized on the boundary of an IO instruction, Core::X86::Smm::TrapOffset contains information about that IO instruction. For example, if an IO access targets an unavailable device, the system can assert SMI and trap the IO instruction. Core::X86::Smm::TrapOffset then provides the SMI handler with information about the IO instruction that caused the trap. After the SMI handler takes the appropriate action, it can reconstruct and then reexecute the IO instruction from SMM. Or, more likely, it can use Core::X86::Smm::IoRestart to cause the core to reexecute the IO instruction immediately after resuming from SMM.

CACCUI	the 10 instruction immediately differ resuming from 51/11/1.				
Bits	Description				
31:16	Port: trapped IO port address. Read-only, Volatile. Reset: 0000h. This provides the address of the IO				
	instruction.				
15:12	BPR: IO breakpoint match. Read-only, Volatile. Reset: 0h.				
11	TF : EFLAGS TF value . Read-only, Volatile. Reset: 0.				
10:7	Reserved.				
6	SZ32: size 32 bits. Read-only, Volatile. Reset: 0. 1=Port access was 32 bits.				
5	SZ16: size 16 bits. Read-only, Volatile. Reset: 0. 1=Port access was 16 bits.				
4	SZ8: size 8 bits. Read-only, Volatile. Reset: 0. 1=Port access was 8 bits.				
3	REP: repeated port access. Read-only, Volatile. Reset: 0.				
2	STR: string-based port access. Read-only, Volatile. Reset: 0.				
1	V : IO trap word valid . Read-only, Volatile. Reset: 0. 0=The other fields of this offset are not valid. 1=The core				
	entered SMM on an IO instruction boundary; all information in this offset is valid.				
0	RW : port access type . Read-only, Volatile. Reset: 0. 0=IO write (OUT instruction). 1=IO read (IN instruction).				

SMMxFEC4 [Local SMI Status] (Core::X86::Smm::LocalSmiStatus)

Read-only, Volatile. Reset: 0000 0000h.

This offset stores status bits associated with SMI sources local to the core. For each of these bits, 1=The associated mechanism generated an SMI.

mecha	mechanism generated an SMI.			
Bits	S Description			
31:9	9 Reserved.			
8	MceRedirSts: machine check exception redirection status. Read-only, Volatile. Reset: 0. This bit is associated			
	with the SMI source specified in Core::X86::Msr::McExcepRedir[RedirSmiEn].			
7:4	Reserved.			
3:0	IoTrapSts : IO trap status . Read-only, Volatile. Reset: 0h. Each of these bits is associated with each of the			
	respective SMI sources specified in Core::X86::Msr::SMI_ON_IO_TRAP.			

SMMxFEC8 [IO Restart Byte] (Core::X86::Smm::IoRestart)

Read-write. Reset: 00h.

If the core entered SMM on an IO instruction boundary, the SMI handler may write this to FFh. This causes the core to re-execute the trapped IO instruction immediately after resuming from SMM. The SMI handler should only write to this byte if Core::X86::Smm::TrapOffset[V] == 1; otherwise, the behavior is undefined.

If a second SMI is asserted while a valid IO instruction is trapped by the first SMI handler, the core services the second SMI prior to re-executing the trapped IO instruction. Core::X86::Smm::TrapOffset[V] == 0 during the second entry into SMM, and the second SMI handler must not rewrite this byte.

If there is a simultaneous SMI IO instruction trap and debug breakpoint trap, the processor first responds to the SMI and postpones recognizing the debug exception until after resuming from SMM. If debug registers other than DR6 and DR7 are used while in SMM, they must be saved and restored by the SMI handler. If Core::X86::Smm::IoRestart is set to FFh when the RSM instruction is executed, the debug trap does not occur until after the IO instruction is re-executed.

Bits	Description
7:0	RST: SMM IO Restart Byte. Read-write. Reset: 00h.

SMMxFEC9 [Auto Halt Restart Offset] (Core::X86::Smm::AutoHalt)

Read-	-write. Reset: 00h.			
Bits	Bits Description			
7:1	Reserved.			
0	HLT : halt restart . Read-write. Reset: 0. 0=Entered SMM on a normal x86 instruction boundary. 1=Entered			
	SMM from the Halt state. Upon SMM entry, this bit indicates whether SMM was entered from the Halt state.			
	Before returning from SMM, this bit can be written by the SMI handler to specify whether the return from SMM			
	should take the processor back to the Halt state or to the instruction-execution state specified by the SMM state			
	save area (normally, the instruction after the halt). Clearing this bit the returns to the instruction specified in the			
	SMM save state. Setting this bit returns to the halt state. If the return from SMM takes the processor back to the			
	Halt state, the HLT instruction is not refetched and re-executed. However, the Halt special bus cycle is broadcast			
	and the processor enters the Halt state.			

SMMxFECA [NMI Mask] (Core::X86::Smm::NmiMask)

Read-	write. Reset: 00h.		
Bits Description			
7:1 Reserved.			
0	NmiMask: NMI Mask. Read-write. Reset: 0. 0=NMI not masked. 1=NMI masked. Specifies whether NMI was		
	masked upon entry to SMM.		

SMMxFED8 [SMM SVM State] (Core::X86::Smm::SvmState)

Read-only, Volatile. Reset: 0000_0000_0000_0000h.

This offset stores the SVM state of the processor upon entry into SMM.

Bits	Descripti	on		
63:5	Reserved.			
4	SmmFro	mSev. Read-only, Volatile. Reset: 0. 1= SMM was entered while executing on a guest with SEV enabled.		
3	HostEfla	gesIF: host EFLAGS IF. Read-only, Volatile. Reset: 0.		
2:0	SvmState	e. Read-only, Volatile. Reset: 0h.		
	ValidValues:			
	Value Description			
	0h	SMM entered from a non-guest state.		
	1h	Reserved.		
2h SMM entered from a guest state.		SMM entered from a guest state.		
	5h-3h Reserved.			
	6h	SMM entered from a guest state with nested paging enabled.		
	7h	Reserved.		

SMMxFEFC [SMM Revision Identifier] (Core::X86::Smm::SmmRevID)

Read-	Read-only. Reset: 0003_0064h.		
This o	This offset stores the SVM state of the processor upon entry into SMM.		
Bits	Bits Description		
31:18	Reserved.		
17	BRL . Read-only. Reset: 1. 1=Base relocation supported.		
16	IOTrap. Read-only. Reset: 1. 1=IO trap supported.		
15:0	Revision. Read-only. Reset: 0064h.		

SMMxFE00 [SMM Base Address] (Core::X86::Smm::SmmBase)

Read-	Read-write, Volatile. Reset: 0000_0000_0000_0000h.		
This offset stores the base of the SMM-State of the processor upon entry into SMM.			
Bits	Description		
63:32	Reserved.		
31:0	SmmBase. Read-write, Volatile. Reset: 0000_0000h. See Core::X86::Msr::SMM_BASE[SmmBase].		

2.1.12.1.7 Exceptions and Interrupts in SMM

When SMM is entered, the core masks INTR, NMI, SMI, and INIT interrupts. The core clears the IF flag to disable INTR interrupts. To enable INTR interrupts within SMM, the SMM handler must set the IF flag to 1.

Generating an INTR interrupt can be used for unmasking NMI interrupts in SMM. The core recognizes the assertion of NMI within SMM immediately after the completion of an IRET instruction. Once NMI is recognized within SMM, NMI recognition remains enabled until SMM is exited, at which point NMI masking is restored to the state it was in before entering SMM.

While in SMM, the core responds to STPCLK interrupts, as well as to all exceptions that may be caused by the SMI handler.

2.1.12.1.8 The Protected ASeg and TSeg Areas

These ranges are controlled by Core::X86::Msr::SMMAddr and Core::X86::Msr::SMMMask; see those registers for details.

2.1.12.1.9 SMM Special Cycles

Special cycles can be initiated on entry and exit from SMM to acknowledge to the system that these transitions are occurring. These are controlled by Core::X86::Msr::HWCR[RsmSpCycDis,SmiSpCycDis].

2.1.12.1.10 Locking SMM

The SMM registers (Core::X86::Msr::SMMAddr and Core::X86::Msr::SMMMask) can be locked from being altered by setting Core::X86::Msr::HWCR[SmmLock]. SBIOS must lock the SMM registers after initialization to prevent unexpected changes to these registers.

2.1.12.2 **Local APIC**

2.1.12.2.1 Local APIC Functional Description

The local APIC contains logic to receive interrupts from a variety of sources and to send interrupts to other local APICs, as well as registers to control its behavior and report status. Interrupts can be received from:

- IO devices including the IO hub (IO APICs)
- Other local APICs (inter-processor interrupts)
- APIC timer
- Thermal events
- Performance counters
- Legacy local interrupts from the IO hub (INTR and NMI)
- APIC internal errors

The APIC timer, thermal events, performance counters, local interrupts, and internal errors are all considered local interrupt sources, and their routing is controlled by local vector table entries. These entries assign a message type and vector to each interrupt, allow them to be masked, and track the status of the interrupt.

IO and inter-processor interrupts have their message type and vector assigned at the source and are unaltered by the local APIC. They carry a destination field and a mode bit that together determine which local APIC(s) accepts them. The destination mode (DM) bit specifies if the interrupt request packet should be handled in physical or logical destination mode.

2.1.12.2.1.1 Detecting and Enabling

APIC is detected and enabled via Core::X86::Cpuid::FeatureIdEdx[APIC].

The local APIC is enabled via Core::X86::Msr::APIC BAR[ApicEn]. Reset forces APIC disabled.

2.1.12.2.1.2 APIC Register Space

MMIO APIC space:

- Memory mapped to a 4 KB range. The memory type of this space is the UC memory type. The base address of this range is specified by {Core::X86::Msr::APIC_BAR[ApicBar[47:12]],000h}.
- The mnemonic is defined to be APICXXX; XXX is the byte address offset from the base address.
- MMIO APIC registers memory in xAPIC mode is defined by the register starting with Core::X86::Apic::ApicId at offset (Core::X86::Msr::APIC_BAR[ApicBar[47:12]] + 20h) ending with
 - Core::X86::Apic::ExtendedInterruptLvtEntries at offsets Core::X86::Msr::APIC BAR[ApicBar[47:12]] + 533h.
- Treated as normal memory space when APIC is disabled, as specified by Core::X86::Msr::APIC BAR[ApicEn].

2.1.12.2.1.3 ApicId Enumeration Requirements

Note: Family 17h processors do not require contiguous ApicId assignments. Operating systems are expected to use Core::X86::Cpuid::SizeId[ApicIdSize], the number of least significant bits in the Initial APIC ID that indicate core ID within a processor, in constructing per-core CPUID masks. Core::X86::Cpuid::SizeId[ApicIdSize] determines the maximum number of cores (MNC) that the processor could theoretically support, not the actual number of cores that are actually implemented or enabled on the processor, as indicated by Core::X86::Cpuid::SizeId[NC].

Each Core::X86::Apic::ApicId[ApicId] register is preset as follows:

- ApicId[6] = Socket ID.
- ApicId[5:4] = Node ID.
- ApicId[3] = Logical CCX L3 complex ID
- ApicId[2:0]= (SMT) ? {LogicalCoreID[1:0],ThreadId} : {1'b0,LogicalCoreID[1:0]}.

2.1.12.2.1.4 Physical Destination Mode

The interrupt is only accepted by the local APIC whose Core::X86::Apic::ApicId[ApicId] matches the destination field of the interrupt. Physical mode allows up to 255 APICs to be addressed individually.

2.1.12.2.1.5 Logical Destination Mode

A local APIC accepts interrupts selected by Core::X86::Apic::LocalDestination and the destination field of the interrupt using either cluster or flat format as configured by Core::X86::Apic::DestinationFormat[Format].

If flat destinations are in use, bits[7:0] of Core::X86::Apic::LocalDestination[Destination] are checked against bits[7:0] of the arriving interrupt's destination field. If any bit position is set in both fields, the local APIC is a valid destination. Flat format allows up to 8 APICs to be addressed individually.

If cluster destinations are in use, bits[7:4] of Core::X86::Apic::LocalDestination[Destination] are checked against bits[7:4] of the arriving interrupt's destination field to identify the cluster. If all of bits[7:4] match, then bits[3:0] of Core::X86::Apic::LocalDestination[Destination] and the interrupt destination are checked for any bit positions that are set in both fields to identify processors within the cluster. If both conditions are met, the local APIC is a valid destination. Cluster format allows 15 clusters of 4 APICs each to be addressed.

2.1.12.2.1.6 Interrupt Delivery

SMI, NMI, INIT, Startup, and External interrupts are classified as non-vectored interrupts.

When an APIC accepts a non-vectored interrupt, it is handled directly by the processor instead of being queued in the APIC. When an APIC accepts a fixed or lowest-priority interrupt, it sets the bit in Core::X86::Apic::InterruptRequest corresponding to the vector in the interrupt. For local interrupt sources, this comes from the vector field in that interrupt's local vector table entry. The corresponding bit in Core::X86::Apic::TriggerMode is set if the interrupt is level-triggered and cleared if edge-triggered. If a subsequent interrupt with the same vector arrives when the corresponding bit in Core::X86::Apic::InterruptRequest[RequestBits] is already set, the two interrupts are collapsed into one. Vectors 15-0 are reserved.

2.1.12.2.1.7 Vectored Interrupt Handling

Core::X86::Apic::TaskPriority and Core::X86::Apic::ProcessorPriority each contain an 8-bit priority divided into a main priority (bits[7:4]) and a priority sub-class (bits[3:0]). The task priority is assigned by software to set a threshold priority

at which the processor is interrupted.

The processor priority is calculated by comparing the main priority (bits[7:4]) of Core::X86::Apic::TaskPriority[Priority] to bits[7:4] of the 8-bit encoded value of the highest bit set in Core::X86::Apic::InService. The processor priority is the higher of the two main priorities.

The processor priority is used to determine if any accepted interrupts (indicated by

Core::X86::Apic::InterruptRequest[RequestBits]) are high enough priority to be serviced by the processor. When the processor is ready to service an interrupt, the highest bit in Core::X86::Apic::InterruptRequest[RequestBits] is cleared, and the corresponding bit is set in Core::X86::Apic::InServiceBits].

When the processor has completed service for an interrupt, it performs a write to Core::X86::Apic::EndOfInterrupt, clearing the highest bit in Core::X86::Apic::InService[InServiceBits] and causing the next-highest interrupt to be serviced. If the corresponding bit in Core::X86::Apic::TriggerMode[TriggerModeBits] is set, a write to Core::X86::Apic::EndOfInterrupt is performed on all APICs to complete service of the interrupt at the source.

2.1.12.2.1.8 Interrupt Masking

Interrupt masking is controlled by the Core::X86::Apic::ExtendedApicControl. If

Core::X86::Apic::ExtendedApicControl[IerEn] is set, Core::X86::Apic::InterruptEnable are used to mask interrupts. Any bit in Core::X86::Apic::InterruptEnable[InterruptEnableBits] that is clear indicates the corresponding interrupt is masked. A masked interrupt is not serviced and the corresponding bit in Core::X86::Apic::InterruptRequest[RequestBits] remains set.

2.1.12.2.1.9 Spurious Interrupts

In the event that the task priority is set to or above the level of the interrupt to be serviced, the local APIC delivers a spurious interrupt vector to the processor, as specified by Core::X86::Apic::SpuriousInterruptVector.

Core::X86::Apic::EndOfInterrupt occurs.

2.1.12.2.1.10 Spurious Interrupts Caused by Timer Tick Interrupt

A typical interrupt is asserted until it is serviced. An interrupt is deasserted when software clears the interrupt status bit within the interrupt service routine. Timer tick interrupt is an exception, since it is deasserted regardless of whether it is serviced or not.

The processor is not always able to service interrupts immediately (i.e., when interrupts are masked by clearing EFLAGS.IM).

If the processor is not able to service the timer tick interrupt for an extended period of time, the INTR caused by the first timer tick interrupt asserted during that time is delivered to the local APIC in ExtInt mode and latched, and the subsequent timer tick interrupts are lost. The following cases are possible when the processor is ready to service interrupts:

- An ExtInt interrupt is pending, and INTR is asserted. This results in timer tick interrupt servicing. This occurs 50 percent of the time.
- An ExtInt interrupt is pending, and INTR is deasserted. The processor sends the interrupt acknowledge cycle, but when the PIC receives it, INTR is deasserted, and the PIC sends a spurious interrupt vector. This occurs 50 percent of the time.

There is a 50 percent probability of spurious interrupts to the processor.

2.1.12.2.1.11 Lowest-Priority Interrupt Arbitration

Fixed and non-vectored interrupts are accepted by their destination APICs without arbitration.

Delivery of lowest-priority interrupts requires all APICs to arbitrate to determine which one accepts the interrupt. If Core::X86::Apic::SpuriousInterruptVector[FocusDisable] is clear, then the focus processor for an interrupt always accepts the interrupt. A processor is the focus of an interrupt if it is already servicing that interrupt (corresponding bit in Core::X86::Apic::InService[InServiceBits] is set) or if it already has a pending request for that interrupt (corresponding bit in Core::X86::Apic::InterruptRequest[RequestBits] is set). If Core::X86::Apic::ExtendedApicControl[IerEn] is set the interrupt must also be enabled in Core::X86::Apic::InterruptEnable[InterruptEnableBits] for a processor to be the focus processor. If there is no focus processor for an interrupt, or focus processor checking is disabled, then each APIC calculates an arbitration priority value, stored in Core::X86::Apic::ArbitrationPriority, and the one with the lowest result accepts the interrupt.

The arbitration priority value is calculated by comparing Core::X86::Apic::TaskPriority[Priority] with the 8-bit encoded value of the highest bit set in Core::X86::Apic::InterruptRequest[RequestBits] (IRRVec) and the 8-bit encoded value of the highest bit set Core::X86::Apic::InService[InServiceBits] (ISRVec). If Core::X86::Apic::ExtendedApicControl[IerEn] is set the IRRVec and ISRVec are based off the highest enabled interrupt. The main priority bits[7:4] are compared as follows:

```
if ((TaskPriority[Priority[7:4]] >= InterruptRequest[IRRVec[7:4]])
&&(TaskPriority[Priority[7:4]] > InService[ISRVec[7:4]])) {
ArbitrationPriority[Priority] = TaskPriority[Priority]
} elsif { (InterruptRequest[IRRVec[7:4]] > InService[ISRVec[7:4]])
ArbitrationPriority[Priority] = {InterruptRequest[IRRVec[7:4]],0h}
} else {
ArbitrationPriority[Priority] = {InService[ISRVect[7:4]],0h}
}
```

2.1.12.2.1.12 Inter-Processor Interrupts

The Core::X86::Apic::InterruptCommandLow and Core::X86::Apic::InterruptCommandHigh provide a mechanism for generating interrupts in order to redirect an interrupt to another processor, originate an interrupt to another processor, or allow a processor to interrupt itself. A write to register Core::X86::Apic::InterruptCommandLow causes an interrupt to be generated with the properties specified by the Core::X86::Apic::InterruptCommandLow and Core::X86::Apic::InterruptCommandHigh fields.

Message type (bits[10:8]) == 011b (Remote Read) is deprecated.

Not all combinations of ICR fields are valid. Only the following combinations are valid: Note: x indicates a don't care.

Table 18: ICR	Valıd	Combinations
---------------	-------	--------------

Message Type	Trigger Mode	Level	Destination Shorthand
Fixed	Edge	X	X
	Level	Assert	X
Lowest Priority, SMI,	Edge	X	Destination or all
NMI, INIT			excluding self
	Level	Assert	Destination or all
			excluding self
Startup	X	X	Destination or all
			excluding self

2.1.12.2.1.13 APIC Timer Operation

The local APIC contains a 32-bit timer, controlled by Core::X86::Apic::TimerLvtEntry,

Core::X86::Apic::TimerInitialCount, and Core::X86::Apic::TimerDivideConfiguration. The processor bus clock is divided by the value in Core::X86::Apic::TimerDivideConfiguration[Div[3:0]] to obtain a time base for the timer. When

Core::X86::Apic::TimerInitialCount[Count] is written, the value is copied into Core::X86::Apic::TimerCurrentCount.

Core::X86::Apic::TimerCurrentCount[Count] is decremented at the rate of the divided clock. When the count reaches 0, a

timer interrupt is generated with the vector specified in Core::X86::Apic::TimerLvtEntry[Vector]. If

Core::X86::Apic::TimerLvtEntry[Mode] specifies periodic operation, Core::X86::Apic::TimerCurrentCount[Count] is reloaded with the Core::X86::Apic::TimerInitialCount[Count] value, and it continues to decrement at the rate of the divided clock. If Core::X86::Apic::TimerLvtEntry[Mask] is set, timer interrupts are not generated.

2.1.12.2.1.14 Generalized Local Vector Table

All LVTs (Core::X86::Apic::ThermalLvtEntry to Core::X86::Apic::LVTLINT, and

Core::X86::Apic::ExtendedInterruptLvtEntries) support a generalized message type as follows:

- 000b=Fixed
- 010b=SMI
- 100b=NMI
- 111b=ExtINT
- All other messages types are reserved.

2.1.12.2.1.15 State at Reset

At power-up or reset, the APIC is hardware disabled (Core::X86::Msr::APIC_BAR[ApicEn] == 0) so only SMI, NMI, INIT, and ExtInt interrupts may be accepted.

The APIC can be software disabled through Core::X86::Apic::SpuriousInterruptVector[APICSWEn]. The software disable has no effect when the APIC is hardware disabled.

When a processor accepts an INIT interrupt, the APIC is reset as at power-up, with the exception that:

- Core::X86::Apic::ApicId is unaffected.
- Pending APIC register writes complete.

2.1.12.2.2 Local APIC Registers

APIC	APICx020 [APIC ID] (Core::X86::Apic::ApicId)		
Read-	Read-only.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; APICx020; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]] , 000h}		
Bits	Description		
31:24	ApicId : APIC ID . Read-only. Reset: XXh. The reset value varies based on core number. See 2.1.12.2.1.3 [ApicId		
	Enumeration Requirements].		
23:0	Reserved.		

APIC	APICx030 [APIC Version] (Core::X86::Apic::ApicVersion)		
Read-	Read-only.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; APICx030; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]] , 000h}		
Bits	Bits Description		
31	ExtApicSpace : extended APIC register space present . Read-only. Reset: 1. 1=Indicates the presence of		
	extended APIC register space starting at Core::X86::Apic::ExtendedApicFeature.		
30:25	Reserved.		

24	DirectedEoiSupport : directed EOI support . Read-only. Reset: Fixed,0. 0=Directed EOI capability not
	supported.
23:16	MaxLvtEntry . Read-only. Reset: XXh. Specifies the number of entries in the local vector table minus one.
15:8	Reserved.
7:0	Version . Read-only. Reset: 10h. Indicates the version number of this APIC implementation.

APICx080 [Task Priority] (Core::X86::Apic::TaskPriority)

	2 03 1		
Read-	Read-write. Reset: 0000_0000h.		
_lthree[1	:0]_core[3:0]_thread[1:0]; APICx080; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]] , 000h}		
Bits	Description		
31:8	Reserved.		
7:0	Priority . Read-write. Reset: 00h. This field is assigned by software to set a threshold priority at which the core is		
	interrupted.		

APICx090 [Arbitration Priority] (Core::X86::Apic::ArbitrationPriority)

Read-only, Volatile. Reset: 0000_0000h.		
_lthree[1	L:0]_core[3:0]_thread[1:0]; APICx090; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}	
Bits	Description	
31:8	Reserved.	
7:0	Priority . Read-only, Volatile. Reset: 00h. Indicates the current priority for a pending interrupt, or a task or	
	interrupt being serviced by the core. The priority is used to arbitrate between cores to determine which accepts a	
	lowest-priority interrupt request.	

APICx0A0 [Processor Priority] (Core::X86::Apic::ProcessorPriority)

_ 1 1 771 11 7 2000 00001		
Read-only, Volatile. Reset: 0000_0000h.		
_lthree[:	1:0]_core[3:0]_thread[1:0]; APICx0A0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]] , 000h}	
Bits	Bits Description	
31:8	Reserved.	
7:0	Priority . Read-only, Volatile. Reset: 00h. Indicates the core's current priority servicing a task or interrupt, and is	
	used to determine if any pending interrupts should be serviced. It is the higher value of the task priority value and	
	the current highest in-service interrupt.	

APICx0B0 [End of Interrupt] (Core::X86::Apic::EndOfInterrupt)

Write-only.			
This register is written by the software interrupt handler to indicate the servicing of the current interrupt is complete.			
_lthree[1:0]_core[3:0]_thread[1:0]; APICx0B0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}			
Bits Description			
31:0 Reserved. Write-only.			

APICx0C0 [Reserved] (Core. X86. Anic. RemoteRead)

AFICAUCU [Reserved] (CoreApicRemoteread)				
Read-only. Reset: 0000_0000h.				
Remote Read is deprecated.				
_lthree[1:0]_core[3:0]_thread[1:0]; APICx0C0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}				
Bits Description				
31:0 Reserved. Read-only. Reset: 0000_0000h.				

APICx0D0 [Logical Destination] (Core::X86::Apic::LocalDestination)

Read-	write, Volatile. Reset: 0000_0000h.		
_lthree[1	_tthree[1:0]_core[3:0]_thread[1:0]; APICx0D0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
Bits	Description		
31:24	Destination . Read-write, Volatile. Reset: 00h. This APIC's destination identification. Used to determine which		
	interrupts should be accepted.		
23:0	Reserved.		

APIC	PICx0E0 [Destination Format] (Core::X86::Apic::DestinationFormat)						
Read-v	ead-write. Reset: F000_0000h.						
Only supported in xAPIC mode.							
_lthree[1	:0]_core[3:0]_	thread[1:0]; APICx0E0; APIC={Core::X86::Msr:::APIC_BAR[ApicBar[47:12]], 000h}					
Bits	Descripti	on					
31:28	Format.	ormat . Read-write. Reset: Fh. Controls which format to use when accepting interrupts with a logical destination					
	mode.						
	ValidValues:						
	Value Description						
	Oh Cluster destinations are used.						
	Eh-1h Reserved.						
	Fh Flat destinations are used.						
27:0	Reserved.						

APICx0F0 [Spurious-Interrupt Vector] (Core::X86::Apic::SpuriousInterruptVector)

	- 1 1 1 /				
Reset:	Reset: 0000_00FFh.				
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; APICx0F0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]] , 000h}				
Bits	Description				
31:10	Reserved.				
9	FocusDisable . Read-write. Reset: 0. 1=Disable focus core checking during lowest-priority arbitrated interrupts.				
8	APICSWEn : APIC software enable . Read-write, Volatile. Reset: 0. 0=SMI, NMI, INIT, LINT[1:0], and Startup				
	interrupts may be accepted; pending interrupts in Core::X86::Apic::InService and				
	Core::X86::Apic::InterruptRequest are held, but further fixed, lowest-priority, and ExtInt interrupts are not				
	accepted. All LVT entry mask bits are set and cannot be cleared.				
7:0	Vector . Read-write, Volatile. Reset: FFh. The vector that is sent to the core in the event of a spurious interrupt.				

APICx1[0...7]0 [In-Service] (Core::X86::Apic::InService)

Read-only, Volatile. Reset: 0000_0000h. The in-service registers provide a bit per interrupt to indicate that the corresponding interrupt is being serviced by the core. The first 16 InServiceBits of the first Core::X86::Apic::InService register are reserved. lthree[1:0]_core[3:0]_thread[1:0]_n0; APICx100; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h} lthree[1:0]_core[3:0]_thread[1:0]_n1; APICx110; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h} lthree[1:0]_core[3:0]_thread[1:0]_n2; APICx120; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]] , 000h} lthree[1:0]_core[3:0]_thread[1:0]_n3; APICx130; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h} lthree[1:0]_core[3:0]_thread[1:0]_n4; APICx140; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h} lthree[1:0]_core[3:0]_thread[1:0]_n5; APICx150; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h} lthree[1:0]_core[3:0]_thread[1:0]_n6; APICx160; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h} lthree[1:0]_core[3:0]_thread[1:0]_n7; APICx170; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h} Bits Description 31:0 **InServiceBits**. Read-only, Volatile. Reset: 0000 0000h. These bits are set when the corresponding interrupt is being serviced by the core.

APICx1[8F]0 [Trigger Mode] (Core::X86::Apic::TriggerMode)					
Read-only, Volatile. Reset: 0000_0000h.					
The trigger mode registers provide a bit per interrupt to indicate the assertion mode of each interrupt. The first 16					
TriggerModeBits of the each thread's APIC[1F0:180] registers are reserved.					
_lthree[1:0]_core[3:0]_thread[1:0]_n0; APICx180; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}					
_lthree[1:0]_core[3:0]_thread[1:0]_n1; APICx190; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]] , 000h}					
_lthree[1:0]_core[3:0]_thread[1:0]_n2; APICx1A0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}					
_lthree[1:0]_core[3:0]_thread[1:0]_n3; APICx1B0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]] , 000h}					
_lthree[1:0]_core[3:0]_thread[1:0]_n4; APICx1C0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]] , 000h}					
_lthree[1:0]_core[3:0]_thread[1:0]_n5; APICx1D0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}					
_lthree[1:0]_core[3:0]_thread[1:0]_n6; APICx1E0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}					
_lthree[1:0]_core[3:0]_thread[1:0]_n7; APICx1F0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]] , 000h}					

Bits	Description
31:0	TriggerModeBits . Read-only, Volatile. Reset: 0000_0000h. The corresponding trigger mode bit is updated when
	an interrupt is accepted. 1=Level-triggered interrupt. 0=Edge-triggered interrupt.

APICx2[0...7]0 [Interrupt Request] (Core::X86::Apic::InterruptRequest)

Rea	d-	only.	Rese	t: 00	00_0	0000h.	
m1							

The interrupt request registers provide a bit per interrupt to indicate that the corresponding interrupt has been accepted by the APIC. The first 16 RequestBits of the first Core::X86::Apic::InterruptRequest register are reserved.

lthree[1:0] core[3:0] thread[1:0] n0; APICx200; APIC={Core::X86::Msr::APIC BAR[ApicBar[47:12]], 000h}

lthree[1:0] core[3:0] thread[1:0] n1; APICx210; APIC={Core::X86::Msr::APIC BAR[ApicBar[47:12]], 000h}

lthree[1:0] core[3:0] thread[1:0] n2; APICx220; APIC={Core::X86::Msr::APIC BAR[ApicBar[47:12]], 000h}

lthree[1:0]_core[3:0]_thread[1:0]_n3; APICx230; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}

lthree[1:0]_core[3:0]_thread[1:0]_n4; APICx240; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}

lthree[1:0]_core[3:0]_thread[1:0]_n5; APICx250; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}

lthree[1:0]_core[3:0]_thread[1:0]_n6; APICx260; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h} lthree[1:0]_core[3:0]_thread[1:0]_n7; APICx270; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}

Bits Description

31:0 **RequestBits**. Read-only. Reset: 0000_0000h. The corresponding request bit is set when the an interrupt is accepted by the APIC.

APICx280 [Error Status] (Core::X86::Apic::ErrorStatus)

Writes to this register trigger an update of the register state. The value written by software is arbitrary. Each write causes the internal error state to be loaded into this register, clearing the internal error state. Consequently, a second write prior to the occurrence of another error causes the register to be overwritten with cleared data.

_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; APICx280; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]] , 000h}				
Bits	Description				
31:8	Reserved.				
7	IllegalRegAddr : illegal register address . Read-write. Reset: 0. This bit indicates that an access to a nonexistent				
	register location within this APIC was attempted. Can only be set in xAPIC mode.				
6	RcvdIllegalVector : received illegal vector . Read-write. Reset: 0. This bit indicates that this APIC has received a				
	message with an illegal vector (00h to 0Fh for fixed and lowest priority interrupts).				
5	SentIllegalVector . Read-write. Reset: 0. This bit indicates that this APIC attempted to send a message with an				
	illegal vector (00h to 0Fh for fixed and lowest priority interrupts).				
4	Reserved.				
3	RcvAcceptError : receive accept error . Read-write. Reset: 0. This bit indicates that a message received by this				
	APIC was not accepted by this or any other APIC.				
2	SendAcceptError . Read-write. Reset: 0. This bit indicates that a message sent by this APIC was not accepted by				
	any APIC.				
1:0	Reserved.				

APICx300 [Interrupt Command Low] (Core::X86::Apic::InterruptCommandLow)

		- · · · · · · · · · · · · · · · · · · ·					
Reset: 0000_0000h.							
_lthree[1	lthree[1:0]_core[3:0]_thread[1:0]; APICx300; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}						
Bits	Descripti	Description					
31:20	Reserved.						
19:18	DestShrt	hnd: destination shorthand. Read-write. Reset: 0h.					
	Description : Provides a quick way to specify a destination for a message.						
	If all including self or all excluding self is used, then destination mode is ignored and physical is automatically						
	used.						
	ValidValues:						
	Value Description						
	0h No shorthand (Destination field).						
	1h	Self.					

	2h	All including self.					
	3h All excluding self. (This sends a message with a destination encoding of all 1s, so if lowest prio						
		used the message could end up being reflected back to this APIC.)					
17:16	RemoteR	RemoteRdStat. Read-only. Reset: 0h.					
	ValidValu	les:					
	Value	Description					
	0h	Read was invalid.					
	1h	Delivery pending.					
	2h	Delivery complete and access was valid.					
	3h	Reserved.					
15	٠.	ger mode . Read-write. Reset: 0. 0=Edge triggered. 1=Level triggered. Indicates how this interrupt is					
	triggered.						
		ad-write. Reset: 0. 0=Deasserted. 1=Asserted.					
13	Reserved.						
12		interrupt delivery status . Read-only. Reset: 0. 0=Idle. 1=Send pending. In xAPIC mode this bit is set to					
		e that the interrupt has not yet been accepted by the destination core(s). Software may repeatedly write					
44		86::Apic::InterruptCommandLow without polling the DS bit; all requested IPIs are delivered.					
11		ination mode. Read-write. Reset: 0. 0=Physical. 1=Logical.					
10:8	8 71						
	ValidValues:						
	Value	Description					
	0h	Fixed					
	1h Lowest Priority.						
	2h SMI						
	3h Reserved.						
	4h NMI						
	5h	INIT					
	6h	Startup					
	7h External interrupt.						

APICx310 [Interrupt Command High] (Core::X86::Apic::InterruptCommandHigh)

Vector. Read-write. Reset: 00h. The vector that is sent for this interrupt source.

Read-	Read-write. Reset: 0000_0000h.				
_lthree[1	::0]_core[3:0]_thread[1:0]; APICx310; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]] , 000h}				
Bits	Description				
31:24	DestinationField . Read-write. Reset: 00h. The destination encoding used when				
	Core::X86::Apic::InterruptCommandLow[DestShrthnd] is 00b.				
23:0	Reserved.				

APICx320 [LVT Timer] (Core::X86::Apic::TimerLvtEntry)

Reset: 0001_0000h.			
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; APICx320; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]] , 000h}		
Bits	S Description		
31:18	Reserved.		
17	Mode . Read-write. Reset: 0. 0=One-shot. 1=Periodic.		
16	Mask. Read-write. Reset: 1. 0=Not masked. 1=Masked.		
15:13	Reserved.		
12	DS : interrupt delivery status . Read-only, Volatile. Reset: 0. 0=Idle. 1=Send pending. (Indicates that the interrupt		
	has not yet been accepted by the core.)		
11	Reserved.		

10:8	MsgType: message type. Read-write. Reset: 0h. See2.1.12.2.1.14 [Generalized Local Vector Table].
7:0	Vector . Read-write. Reset: 00h. Interrupt vector number.

APICx330 [LVT Thermal Sensor] (Core::X86::Apic::ThermalLvtEntry)

11110	THE TEMES OF THE TIME SCHOOL (COTCOM SPECTAL THE TIME THE TIME TO		
Reset: 0001_0000h.			
_lthree[1:0]_core[3:0]_thread[1:0]; APICx330; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}			
Bits Description			
31:17	Reserved.		
16	Mask. Read-write. Reset: 1. 0=Not masked. 1=Masked.		
15:13	Reserved.		
12	12 DS : interrupt delivery status . Read-only, Volatile. Reset: 0. 0=Idle. 1=Send pending. (Indicates that the interrupt		
	has not yet been accepted by the core.)		
11	Reserved.		
10:8	MsgType : message type . Read-write. Reset: 0h. See2.1.12.2.1.14 [Generalized Local Vector Table].		
7:0	Vector . Read-write. Reset: 00h. Interrupt vector number.		

APICx340 [LVT Performance Monitor] (Core::X86::Apic::PerformanceCounterLvtEntry)

Docote	በበበ1	0000h	
Reserv	1111111	UUUUU	

Interrupts for this local vector table are caused by overflows of:

- Core::X86::Msr::PERF_LEGACY_CTL(Performance Event Select [3:0]).
- Core::X86::Msr::PERF_CTL(Performance Event Select [5:0]).

_lthree[1:0]_core[3:0]_thread[1:0]; APICx340; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
Bits	Description	
31:17	Reserved.	
16	Mask. Read-write. Reset: 1. 0=Not masked. 1=Masked.	
15:13	Reserved.	
12	DS : interrupt delivery status . Read-only, Volatile. Reset: 0. 0=Idle. 1=Send pending. Indicates that the interrupt	
	has not yet been accepted by the core.	
11	Reserved.	
10:8	MsgType : message type . Read-write. Reset: 0h. See2.1.12.2.1.14 [Generalized Local Vector Table].	
7:0	Vector . Read-write. Reset: 00h. Interrupt vector number.	

APICx3[5...6]0 [LVT LINT[1:0]] (Core::X86::Apic::LVTLINT)

Reset:	Reset: 0001_0000h.		
	:0]_core[3:0]_thread[1:0]_n0; APICx350; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
_lthree[1	:0]_core[3:0]_thread[1:0]_n1; APICx360; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
Bits	ds Description		
31:17	Reserved.		
16	Mask. Read-write. Reset: 1. 0=Not masked. 1=Masked.		
15	TM : trigger mode . Read-write. Reset: 0. 0=Edge. 1=Level.		
14	RmtIRR . Read-only, Volatile. Reset: 0. If trigger mode is level, remote Core::X86::Apic::InterruptRequest is set		
	when the interrupt has begun service. Remote Core::X86::Apic::InterruptRequest is cleared when the end of		
	interrupt has occurred.		
13	Reserved. Read-write. Reset: 0.		
12	DS : interrupt delivery status . Read-only, Volatile. Reset: 0. 0=Idle. 1=Send pending. (Indicates that the interrupt		
	has not yet been accepted by the core.)		
11	Reserved.		
10:8	MsgType : message type . Read-write. Reset: 0h. See2.1.12.2.1.14 [Generalized Local Vector Table].		
7:0	Vector . Read-write. Reset: 00h. Interrupt vector number.		

APICx370 [LVT Error] (Core::X86::Apic::ErrorLvtEntry)

Reset:	Reset: 0001_0000h.		
_lthree[1:0]_core[3:0]_thread[1:0]; APICx370; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}			
Bits	ts Description		
31:17	Reserved.		
16	Mask. Read-write. Reset: 1. 0=Not masked. 1=Masked.		
15:13	13 Reserved.		
12	DS : interrupt delivery status . Read-only, Volatile. Reset: 0. 0=Idle. 1=Send pending. (Indicates that the interrupt		
	has not yet been accepted by the core.)		
11	Reserved.		
10:8	MsgType : message type . Read-write. Reset: 0h. See 2.1.12.2.1.14 [Generalized Local Vector Table].		
7:0	Vector . Read-write. Reset: 00h. Interrupt vector number.		

APICx380 [Timer Initial Count] (Core::X86::Apic::TimerInitialCount)

Read-write, Volatile. Reset: 0000_0000h.			
_lthree[1	_three[1:0]_core[3:0]_thread[1:0]; APICx380; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]] , 000h}		
Bits	Description Description		
31:0	:0 Count . Read-write, Volatile. Reset: 0000_0000h. The value copied into the current count register when the timer		
	is loaded or reloaded.		

APICx390 [Timer Current Count] (Core::X86::Apic::TimerCurrentCount)

Read-only, Volatile. Reset: 0000_0000h.			
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; APICx390; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]] , 000h}		
Bits	Description		
	Count . Read-only, Volatile. Reset: 0000_0000h. The current value of the counter.		

$APICx3E0\ [Timer\ Divide\ Configuration]\ (Core::X86::Apic::Timer\ Divide\ Configuration)$

Read-	ad-write. Reset: 0000_0000h.		
_lthree[1	e[1:0]_core[3:0]_thread[1:0]; APICx3E0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
Bits	Descripti	ion	
31:4	Reserved.	•	
3:0	Div[3:0]. Read-write. Reset: 0h. Div[2] is unused.		
	ValidValı	ues:	
	Value	Description	
	0h	Divide by 2.	
	1h	Divide by 4.	
	2h	Divide by 8.	
	3h	Divide by 16.	
	7h-4h	Reserved.	
	8h	Divide by 32.	
	9h	Divide by 64.	
	Ah	Divide by 128.	
	Bh	Divide by 1.	
	Fh-Ch	Reserved.	

APICx400 [Extended APIC Feature] (Core::X86::Apic::ExtendedApicFeature)

Read-	Read-only. Reset: 0004_0007h.		
_lthree[1	l:0]_core[3:0]_thread[1:0]; APICx400; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
Bits	Description		
31:24	Reserved.		
23:16	ExtLvtCount : extended local vector table count . Read-only. Reset: 04h. This specifies the number of extended		
	LVT registers (Core::X86::Apic::ExtendedInterruptLvtEntries) in the local APIC.		

15:3	Reserved.	
2	ExtApicIdCap: extended APIC ID capable . Read-only. Reset: 1. 1=The processor is capable of supporting an	
	8-bit APIC ID, as controlled by Core::X86::Apic::ExtendedApicControl[ExtApicIdEn].	
1	SeoiCap: specific end of interrupt capable. Read-only. Reset: 1. 1=The	
	Core::X86::Apic::SpecificEndOfInterrupt is present.	
0	IerCap: interrupt enable register capable . Read-only. Reset: 1. This bit indicates that the	
	Core::X86::Apic::InterruptEnable are present. See2.1.12.2.1.8 [Interrupt Masking].	

APICx410 [Extended APIC Control] (Core::X86::Apic::ExtendedApicControl)

Read-	Read-write. Reset: 0000_0000h.	
_lthree[1:0]_core[3:0]_thread[1:0]; APICx410; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
Bits	Description	
31:3	Reserved.	
2	ExtApicIdEn: extended APIC ID enable. Read-write. Reset: 0. 1=Enable 8-bit APIC ID;	
	Core::X86::Apic::ApicId[ApicId] supports an 8-bit value; an interrupt broadcast in physical destination mode	
	requires that the IntDest[7:0]=1111_1111b (instead of xxxx_1111b); a match in physical destination mode occurs	
	when $(IntDest[7:0] == ApicId[7:0])$ instead of $(IntDest[3:0] == ApicId[3:0])$.	
1	SeoiEn. Read-write. Reset: 0. 1=Enable SEOI generation when a write to	
	Core::X86::Apic::SpecificEndOfInterrupt is received.	
0	IerEn . Read-write. Reset: 0. 1=Enable writes to the interrupt enable registers.	

APICx420 [Specific End Of Interrupt] (Core::X86::Apic::SpecificEndOfInterrupt)

71110	11 10x420 [Specific End Of Interrupt] (GorexovxpicSpecificEndOffitterrupt)	
Read-write. Reset: 0000_0000h.		1
_lthree[1	l:0]_core[3:0]_thread[1:0]; APICx420; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]] , 000h}	
Bits	Description	
31:8	Reserved.	
7:0	EoiVec : end of interrupt vector . Read-write. Reset: 00h. A write to this field causes an end of interrupt cycle to	
	be performed for the vector specified in this field. The behavior is undefined if no interrupt is pending for the	
	specified interrupt vector.	

APICx4[8...F]0 [Interrupt Enable] (Core::X86::Apic::InterruptEnable)

Read-write. Reset: FFFF_FFFFh.		
_lthree[1:0]_core[3:0]_thread[1:0]_n0; APICx480; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
_lthree[1:0]_core[3:0]_thread[1:0]_n1; APICx490; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
[lthree[1:0]_core[3:0]_thread[1:0]_n2; APICx4A0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
_lthree[1:0]_core[3:0]_thread[1:0]_n3; APICx4B0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
_lthree[1:0]_core[3:0]_thread[1:0]_n4; APICx4C0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
_lthree[1:0]_core[3:0]_thread[1:0]_n5; APICx4D0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]] , 000h}		
_lthree[1:0]_core[3:0]_thread[1:0]_n6; APICx4E0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
_tthree[1:0]_core[3:0]_thread[1:0]_n7; APICx4F0; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]], 000h}		
Bits Description		
O4 O T		

31:0 **InterruptEnableBits**. Read-write. Reset: FFFF_FFFFh. The interrupt enable bits can be used to enable each of the 256 interrupts.

APICx5[0...3]0 [Extended Interrupt Local Vector Table] (Core::X86::Apic::ExtendedInterruptLvtEntries)

Reset: 0001_0000h.

Assignments conventions:

- APIC500 provides a local vector table entry for IBS.
- APIC510 provides a local vector table entry for error thresholding. See Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]
- APIC520 provides a local vector table entry for Deferred errors. See MCi_CONFIGIDeferredIntType1.

_

_lthree[1	:0]_core[3:0]_thread[1:0]_n3; APICx530; APIC={Core::X86::Msr::APIC_BAR[ApicBar[47:12]] , 000h}
Bits	Description
31:17	Reserved.
16	Mask. Read-write. Reset: 1. 0=Not masked. 1=Masked.
15:13	Reserved.
12	DS : interrupt delivery status . Read-only, Volatile. Reset: 0. 0=Idle. 1=Send pending. Indicates that the interrupt
	has not yet been accepted by the core.
11	Reserved.
10:8	MsgType : message type . Read-write. Reset: 0h. See2.1.12.2.1.14 [Generalized Local Vector Table].
7:0	Vector . Read-write. Reset: 00h. Interrupt vector number.

2.1.13 **CPUID Instruction**

Processor feature capabilities and configuration information are provided through the CPUID instruction. The information is accessed by (1) selecting the CPUID function setting EAX and optionally ECX for some functions, (2) executing the CPUID instruction, and (3) reading the results in the EAX, EBX, ECX, and EDX registers. The syntax CPUID $FnXXXX_XXX_EiX[_xYYY]$ refers to the function where EAX == X, and optionally ECX == Y, and the registers specified by EiX. EiX can be any single register such as {EAX, EBX, ECX, and EDX}, or a range of registers, such as E[C,B,A]X. Undefined function numbers return 0's in all 4 registers.

Unless otherwise specified, single-bit feature fields are encoded as 1=Feature is supported by the processor; 0=Feature is not supported by the processor.

2.1.13.1 **CPUID Instruction Functions**

Unless otherwise specified, single-bit feature fields are encoded as 1=Feature is supported by the processor; 0=Feature is not supported by the processor. CPUID functions not listed are reserved.

The following provides processor specific details about CPUID.

CPUID_Fn0000000_EAX [Processor Vendor and Largest Standard Function Number] (Core::X86::Cpuid::LargFuncNum)	
Read-only. Reset: Fixed,0000_000Dh.	
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000000_EAX	
Bits Description	
31:0 LFuncStd : largest standard function . Read-only. Reset: Fixed,0000_000Dh. The largest CPUID standard	
function input value supported by the processor implementation.	

CPUID_Fn00000000_EBX [Processor Vendor (ASCII Bytes [3:0])] (Core::X86::Cpuid::ProcVendEbx)		
Read-only. Reset: Fixed,6874_7541h.		
Core::X86::Cpuid::ProcVendEbx and Core::X86::Cpuid::ProcVendExtEbx return the same value.		
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000000_EBX		
Bits Description		
31:0 Vendor . Read-only. Reset: Fixed,6874_7541h. ASCII Bytes [3:0] ("h t u A") of the string "AuthenticAMD".		

CPUID_Fn0000000_ECX [Processor Vendor (ASCII Bytes [11:8])] (Core::X86::Cpuid::ProcVendEcx)

Read-only. Reset: Fixed,444D_4163h.	
Core::X86::Cpuid::ProcVendEcx and Core::X86::Cpuid::ProcVendExtEcx return the same value.	
_tthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000000_ECX	
Bits	Description
31:0	Vendor . Read-only. Reset: Fixed.444D 4163h. ASCII Bytes [11:8] ("D M A c") of the string "AuthenticAMD".

CPUID_Fn00000000 EDX [Processor Vendor (ASCII Bytes [7:4])] (Core::X86::Cpuid::ProcVendEdx)

CPUID_FH00000000_EDX [Processor Vendor (ASCII Bytes [7:4])] (Core::A86::Cpuid::ProcvendEdx)	
Read-only. Reset: Fixed,6974_6E65h.	
Core::X86::Cpuid::ProcVendEdx and Core::X86::Cpuid::ProcVendExtEdx return the same value.	
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000000_EDX	
Bits Description	
31:0 Vendor . Read-only. Reset: Fixed,6974_6E65h. ASCII Bytes [7:4] ("i t n e") of the string "AuthenticAMD".	

CPUID_Fn00000001_EAX [Family, Model, Stepping Identifiers] (Core::X86::Cpuid::FamModStep)

Read-only.

Core::X86::Cpuid::FamModStep and Core::X86::Cpuid::FamModStepExt return the same value.

Family: Is an 8-bit value and is defined as: Family[7:0]=({0000b,BaseFamily[3:0]}+ExtendedFamily[7:0]).

• E.g., If BaseFamily[3:0] == Fh and ExtendedFamily[7:0] == 08h, then Family[7:0] = 17h.

Model: Is an 8-bit value and is defined as: Model[7:0]={ExtendedModel[3:0],BaseModel[3:0]}.

- E.g., If ExtendedModel[3:0] == 1h and BaseModel[3:0] == 8h, then Model[7:0] = 18h.
- Model numbers vary with product.

Model numbers are are assigned a letter, 0h = "A", 1h = "B", and so on. Model and Stepping form the Revision. E.g., B2. _lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000001_EAX

Bits	Description
31:28	Reserved.
27:20	ExtFamily: extended family. Read-only. Reset: 08h. See Family above.
19:16	ExtModel: extended model. Read-only. Reset: 0h. See Model above.
15:12	Reserved.
11:8	BaseFamily . Read-only. Reset: Fh. See Family description above.
7:4	BaseModel. Read-only. Reset: Xh. Model numbers vary with product.
3:0	Stepping . Read-only. Reset: 2h. Processor stepping (revision) for a specific model.

CPUID_Fn00000001_EBX [LocalApicId, LogicalProcessorCount, CLFlush] (Core::X86::Cpuid::FeatureIdEbx)

Read-only.	
_lthree[1	:0]_core[3:0]_thread[1:0]; CPUID_Fn00000001_EBX
Bits	Description
31:24	LocalApicId. Read-only. Reset: XXh. Initial local APIC physical ID.
23:16	LogicalProcessorCount : logical processor count . Read-only. Reset: Fixed,(Core::X86::Cpuid::SizeId[NC] + 1).
	Specifies the number of threads in the processor as Core::X86::Cpuid::SizeId[NC]+1.
15:8	CLFlush. Read-only. Reset: Fixed,08h. CLFLUSH size in quadwords.
7:0	Reserved.

CPUID Fn00000001 ECX [Feature Identifiers] (Core::X86::Cpuid::FeatureIdEcx)

	/	
Read-only.		
These values can be over-written by Core::X86::Msr::CPUID_Features.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000001_ECX	
Bits	Description	
31	Reserved. Read-only. Reset: Fixed,0. Reserved for use by hypervisor to indicate guest status.	
30	RDRAND. Read-only. Reset: Fixed,1. RDRAND instruction support.	

29	F16C . Read-only. Reset: Fixed,1. Half-precision convert instruction support.		
28	AVX. Read-only. Reset: Fixed,1. AVX instruction support.		
27	OSXSAVE . Read-only. Reset: X. 1=The OS has enabled support for XGETBV/XSETBV instructions to query		
	processor extended states. OS enabled support for XGETBV/XSETBV.		
26	XSAVE . Read-only. Reset: Fixed,1. 1=Support provided for the XSAVE, XRSTOR, XSETBV, and XGETBV		
	instructions and the XFEATURE_ENABLED_MASK register. XSAVE (and related) instruction support.		
25	AES : AES instruction support. Read-only. Reset: X. AES instruction support.		
24	Reserved.		
23	POPCNT . Read-only. Reset: Fixed,1. POPCNT instruction.		
22	MOVBE. Read-only. Reset: Fixed,1. MOVBE instruction support.		
21	X2APIC . Read-only. Reset: Fixed,0. x2APIC capability.		
20	SSE42 . Read-only. Reset: Fixed,1. SSE4.2 instruction support.		
19	SSE41 . Read-only. Reset: Fixed,1. SSE4.1 instruction support.		
18	Reserved.		
17	PCID . Read-only. Reset: Fixed,0. Process context identifiers support.		
16:14	Reserved.		
13	CMPXCHG16B. Read-only. Reset: Fixed,1. CMPXCHG16B instruction.		
12	FMA . Read-only. Reset: Fixed,1. FMA instruction support.		
11:10	Reserved.		
9	SSSE3 . Read-only. Reset: Fixed,1. Supplemental SSE3 extensions.		
8:4	Reserved.		
3	Monitor . Read-only. Reset: !Core::X86::Msr::HWCR[MonMwaitDis]. Monitor/Mwait instructions.		
2	Reserved.		
1	PCLMULQDQ . Read-only. Reset: X. PCLMULQDQ instruction support.		
0	SSE3. Read-only. Reset: Fixed,1. SSE3 extensions.		

CPUID_Fn00000001_EDX [Feature Identifiers] (Core::X86::Cpuid::FeatureIdEdx)

CI CID_I NOVVOVOI_EDM [I cutaire lucitamers] (CoreMoon eparami cutaire lucitamers)			
Read-o	only.		
These values can be over-written by Core::X86::Msr::CPUID_Features.			
_lthree[1	:0]_core[3:0]_thread[1:0]; CPUID_Fn00000001_EDX		
Bits	Description		
31:29	Reserved.		
28	HTT . Read-only. Reset: Fixed,(Core::X86::Cpuid::SizeId[NC] != 0). 0=Single thread product		
	(Core::X86::Cpuid::SizeId[NC]==0). 1=Multi thread product (Core::X86::Cpuid::SizeId[NC] != 0). Hyper-		
	threading technology.		
27	Reserved.		
26	SSE2. Read-only. Reset: Fixed,1. SSE2: SSE2 extensions.		
25	SSE. Read-only. Reset: Fixed,1. SSE extensions.		
24	FXSR . Read-only. Reset: Fixed,1. FXSAVE and FXRSTOR instructions.		
23	MMX. Read-only. Reset: Fixed,1. MMX™ instructions		
22:20	Reserved.		
19	CLFSH . Read-only. Reset: Fixed,1. CLFLUSH instruction.		
18	Reserved.		
17	PSE36 . Read-only. Reset: Fixed,1. Page-size extensions.		
16	PAT . Read-only. Reset: Fixed,1. Page attribute table.		
15	CMOV. Read-only. Reset: Fixed,1. Conditional move instructions, CMOV, FCOMI, FCMOV.		
14	MCA. Read-only. Reset: Fixed,1. Machine check architecture, MCG_CAP.		
13	PGE . Read-only. Reset: Fixed,1. Page global extension, CR4.PGE.		
12	MTRR. Read-only. Reset: Fixed,1. Memory-type range registers.		

11	SysEnterSysExit. Read-only. Reset: Fixed,1. SYSENTER and SYSEXIT instructions.		
10	Reserved.		
9	APIC : advanced programmable interrupt controller (APIC) exists and is enabled. Read-only. Reset: X.		
	Core::X86::Msr::APIC_BAR[ApicEn].		
8	CMPXCHG8B. Read-only. Reset: Fixed,1. CMPXCHG8B instruction.		
7	MCE. Read-only. Reset: Fixed,1. Machine check exception, CR4.MCE.		
6	PAE . Read-only. Reset: Fixed,1. physical-address extensions (PAE).		
5	MSR. Read-only. Reset: Fixed,1. AMD model-specific registers (MSRs), with RDMSR and WRMSR		
	instructions.		
4	TSC . Read-only. Reset: Fixed,1. Time Stamp Counter, RDTSC/RDTSCP instructions, CR4.TSD.		
3	PSE . Read-only. Reset: Fixed,1. Page-size extensions (4 MB pages).		
2	DE . Read-only. Reset: Fixed,1. Debugging extensions, IO breakpoints, CR4.DE.		
1	VME. Read-only. Reset: Fixed,1. Virtual-mode enhancements.		
0	FPU . Read-only. Reset: Fixed,1. x87 floating point unit on-chip.		

CPUID_Fn00000005_EAX [Monitor/MWait] (Core::X86::Cpuid::MonMWaitEax)

Read-only. Reset: Fixed,0000_0040h.		
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000005_EAX		
Bits	Description	
31:16	Reserved.	
15:0	MonLineSizeMin . Read-only. Reset: Fixed,0040h. Smallest monitor-line size in bytes.	

CPUID_Fn00000005_EBX [Monitor/MWait] (Core::X86::Cpuid::MonMWaitEbx)

Read-only. Reset: Fixed,0000_0040h.		
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000005_EBX		
Bits	Description	
31:16	Reserved.	
15:0	MonLineSizeMax. Read-only. Reset: Fixed,0040h. Largest monitor-line size in bytes.	

CPUID_Fn00000005_ECX [Monitor/MWait] (Core::X86::Cpuid::MonMWaitEcx)

Read-	Read-only. Reset: Fixed,0000_0003h.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000005_ECX		
Bits	Description		
31:2	Reserved.		
1	IBE. Read-only. Reset: Fixed,1. Interrupt break-event.		
0	EMX . Read-only. Reset: Fixed,1. Enumerate MONITOR/MWAIT extensions.		

CPUID_Fn00000005_EDX [Monitor/MWait] (Core::X86::Cpuid::MonMWaitEdx)

Read-	Read-only. Reset: Fixed,0000_0011h.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000005_EDX		
Bits	Description		
31:8	Reserved.		
7:4	MWaitC1SubStates . Read-only. Reset: Fixed,1h. Number of C1 sub-cstates supported by MWAIT.		
3:0	MWaitC0SubStates . Read-only. Reset: Fixed,1h. Number of C0 sub-cstates supported by MWAIT.		

CPUID_Fn0000006_EAX [Thermal and Power Management] (Core::X86::Cpuid::ThermalPwrMgmtEax)

	<u> </u>
Read-	only. Reset: Fixed,0000_0004h.
_lthree[1	L:0]_core[3:0]_thread[1:0]; CPUID_Fn00000006_EAX
Bits	Description
31:3	Reserved.
2	ARAT : always running APIC timer. Read-only. Reset: Fixed,1. 1=Indicates support for APIC timer always
	running feature.

	ı
1 0	D 1
1 .(1)	Reserved.
1.0	INCOCIVEU.

CPUID_Fn00000006_EBX [Thermal and Power Management] (Core::X86::Cpuid::ThermalPwrMgmtEbx)

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000006_EBX

Bits Description 31:0 Reserved.

CPUID_Fn0000006_ECX [Thermal and Power Management] (Core::X86::Cpuid::ThermalPwrMgmtEcx)

Read-only. Reset: Fixed,0000_0001h.

These values can be over-written by Core::X86::Msr::CPUID PWR THERM.

lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000006_ECX

Bits Description

31:1 Reserved.

EffFreq: effective frequency interface. Read-only. Reset: Fixed,1. 1=Indicates presence of Core::X86::Msr::MPERF and Core::X86::Msr::APERF.

CPUID_Fn0000006_EDX [Thermal and Power Management] (Core::X86::Cpuid::ThermalPwrMgmtEdx)

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000006_EDX

Bits Description

31:0 Reserved.

CPUID_Fn00000007_EAX_x00 [Structured Extended Feature Identifiers]

(Core::X86::Cpuid::StructExtFeatIdEax0)

Read-only. Reset: Fixed,0000 0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000007_EAX_x00

Bits | Description

31:0 **StructExtFeatIdMax**. Read-only. Reset: Fixed,0000_0000h. The largest CPUID Fn0000_0007 sub-function supported by the processor implementation.

CPUID_Fn00000007_EBX_x00 [Structured Extended Feature Identifiers]

(Core::X86::Cpuid::StructExtFeatIdEbx0)

- 1 1	_		2000	04401
Read-only.	Recet	Hived	7090	(11 A 9h

lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000007_EBX_x00

Bits	Description

31:30 Reserved.

29 **SHA**. Read-only. Reset: Fixed,1.

28:24 Reserved.

23 **CLFSHOPT**. Read-only. Reset: Fixed,1. Optimized Cache Line Flush.

22:21 Reserved.

20 **SMAP**. Read-only. Reset: Fixed,1. Secure Mode Access Prevention is supported.

19 **ADX**. Read-only. Reset: Fixed,1. ADCX and ADOX are present.

18 **RDSEED**. Read-only. Reset: Fixed,1. RDSEED is present.

17:9 Reserved.

8 **BMI2**. Read-only. Reset: Fixed,1. Bit manipulation group 2 instruction support.

7 **SMEP**. Read-only. Reset: Fixed,1. Supervisor Mode Execution protection.

6 Reserved.

5 **AVX2**. Read-only. Reset: Fixed,1. AVX extension support.

4 Reserved.

BMI1. Read-only. Reset: Fixed,1. Bit manipulation group 1 instruction support.

2:1 Reserved.

FSGSBASE. Read-only. Reset: Fixed,1. FS and GS base read write instruction support.

CPUID_Fn00000007_ECX_x00 [Structured Extended Feature Identifier]

(Core::X86::Cpuid::StructExtFeatIdEcx0)

lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000007_ECX_x00

Bits Description

31:0 | Reserved.

CPUID_Fn0000007_EDX_x00 [Structured Extended Feature Identifiers]

(Core::X86::Cpuid::StructExtFeatIdEdx0)

lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn00000007_EDX_x00

Bits Description

31:0 Reserved.

CPUID_Fn0000000B_EAX [Extended Topology Enumeration] (Core::X86::Cpuid::ExtTopEnumEax)

Read-only. Reset: Fixed,0000 0000h.

lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000B_EAX

Bits Description

31:0 Reserved. Read-only. Reset: Fixed,0000 0000h.

CPUID_Fn0000000B_EBX [Extended Topology Enumeration] (Core::X86::Cpuid::ExtTopEnumEbx)

Read-only. Reset: Fixed,0000_0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000B_EBX

Bits Description

31:0 Reserved. Read-only. Reset: Fixed,0000_0000h.

CPUID_Fn0000000B_ECX [Extended Topology Enumeration] (Core::X86::Cpuid::ExtTopEnumEcx)

Read-only. Reset: Fixed,0000_0000h.

lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000B_ECX

Bits Description

31:0 Reserved. Read-only. Reset: Fixed,0000_0000h.

CPUID_Fn0000000B_EDX [Extended Topology Enumeration] (Core::X86::Cpuid::ExtTopEnumEdx)

Read-only. Reset: Fixed,0000 0000h.

lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000B_EDX

Bits Description

31:0 Reserved. Read-only. Reset: Fixed,0000_0000h.

CPUID_Fn000000D_EAX_x00 [Processor Extended State Enumeration]

(Core::X86::Cpuid::ProcExtStateEnumEax00)

Read-only. Reset: Fixed,0000_0007h.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000D_EAX_x00

Bits | Description

31:0 **XFeatureSupportedMask[31:0]**. Read-only. Reset: Fixed,0000_0007h. Each set bit indicates the corresponding bit in register XCR0[31:0] is settable.

ValidValues:

Bit	Name	Description	
[0]	X87	X87 Support.	
[1]	SSE	128-bit SSE Support.	
[2]	AVX	256-bit AVX support.	
[31:3]		Reserved.	

CPUID_Fn000000D_EBX_x00 [Processor Extended State Enumeration]

(Core::X86::Cpuid::ProcExtStateEnumEbx00)

Read-	ead-only,Volatile.		
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000D_EBX_x00			
Bits	ts Description		
31:0	30 XFeatureEnabledSizeMax. Read-only, Volatile. Reset: XXXX_XXXXh.		
	Description : Size in bytes of an uncompacted XSAVE/XRSTOR area for all features enabled in the XCR0		
	register.		
	IF (XCR0[MPK]==1)		
	return EBX=0000_0360h // legacy header + X87/SSE + AVX + MPK size		
	ELSIF (XCR0[AVX]==1)		
	return EBX=0000_0340h // legacy header + X87/SSE + AVX size		
	ELSE		
	return EBX=0000_0240h // legacy header + X87/SSE size		
	END		

CPUID_Fn000000D_ECX_x00 [Processor Extended State Enumeration] (Core::X86::Cpuid::ProcExtStateEnumEcx00)

Read-only. Reset: Fixed,0000_0360h.		
_lthree[1	L:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000D_ECX_x00	
Bits	Description	
31:0	XFeatureSupportedSizeMax . Read-only. Reset: Fixed,0000_0360h. Size of legacy header + X87/SSE + AVX +	
	MPK.	

CPUID_Fn000000D_EDX_x00 [Processor Extended State Enumeration]

(Core::X86::Cpuid::ProcExtStateEnumEdx00)

((
Read-only. Reset: Fixed,0000_0000h.			
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000D_EDX_x00		1	
Bits Description			
31:0 XFeatureSupportedMask[63:32] . Read-only. Reset: Fixed,0000_0000h. Each set bit indicates the corresponding			
	bit in register XCR0[63:32] is settable.		

CPUID_Fn000000D_EAX_x01 [Processor Extended State Enumeration] (Core::X86::Cpuid::ProcExtStateEnumEax01)

Read-	Read-only. Reset: Fixed,0000_000Fh.		
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000D_EAX_x01			
Bits	Description		
31:4	Reserved.		
3	XSAVES . Read-only. Reset: Fixed,1. XSAVES,XRSTORS, and IA32_XSS supported.		
2	XGETBV . Read-only. Reset: Fixed,1. XGETBV with ECX=1 supported.		
1	XSAVEC. Read-only. Reset: Fixed,1. XSAVEC and compact XRSTOR supported.		
0	XSAVEOPT . Read-only. Reset: Fixed,1. XSAVEOPT is available.		

CPUID_Fn000000D_EBX_x01 [Processor Extended State Enumeration] (Core::X86::Cpuid::ProcExtStateEnumEbx01)

	,		
Read-	Read-only, Volatile.		
_lthree[1	:0]_core[3:0]_	_thread[1:0]; CPUID_Fn0000000D_EBX_x01	
Bits	Description		
31:0	31:0 XFeatureEnabledSizeMax . Read-only, Volatile. Reset: XXXX_XXXh. Reset is 512 + ((XCR0[AVX])? 256		
	0).		
	ValidValues:		
	Value	Description	
	0000_0	Reserved.	
	23Fh-		

0000_0	
000h	
0000_0	legacy header + FPU/SSE size; (XCR0[AVX]==0)
240h	
0000_0	Reserved.
33Fh-	
0000_0	
241h	
0000_0	legacy header + FPU/SSE + AVX size; (XCR0[AVX]==1)
340h	
FFFF_F	Reserved.
FFFh-	
0000_0	
341h	

CPUID_Fn000000D_ECX_x01 [Processor Extended State Enumeration]

(Core::X86::Cpuid::ProcExtStateEnumEcx01)

((
Read-only. Reset: Fixed,0000_0000h.			
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000D_ECX_x01		
Bits Description			
31:0	Reserved. Read-only. Reset: Fixed,0000_0000h.		

CPUID_Fn000000D_EDX_x01 [Processor Extended State Enumeration]

(Core::X86::Cpuid::ProcExtStateEnumEdx01)

Read-only. Reset: Fixed,0000_0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000D_EDX_x01

Bits Description

31:0 Reserved. Read-only. Reset: Fixed,0000_0000h.

CPUID_Fn000000D_EAX_x02 [Processor Extended State Enumeration]

(Core::X86::Cpuid::ProcExtStateEnumEax02)

Read-only. Reset: Fixed,0000_0100h.
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn000000D_EAX_x02

Bits Description

31:0 YmmSaveStateSize. Read-only. Reset: Fixed,0000_0100h. YMM save state byte size.

CPUID_Fn000000D_EBX_x02 [Processor Extended State Enumeration]

(Core::X86::Cpuid::ProcExtStateEnumEbx02)

Read-only. Reset: Fixed,0000_0240h.
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn000000D_EBX_x02

Bits Description

31:0 YmmSaveStateOffset. Read-only. Reset: Fixed,0000_0240h. YMM save state byte offset.

CPUID_Fn000000D_ECX_x02 [Processor Extended State Enumeration]

(Core::X86::Cpuid::ProcExtStateEnumEcx02)

	Read-	d-only. Reset: Fixed,0000_0000h.		
_lthree[1:0]_cor		:0]_core[3:0]_thread[1:0];		
	Bits	Description		
	31:0	Reserved. Read-only. Reset: Fixed,0000_0000h.		

CPUID_Fn000000D_EDX_x02 [Processor Extended State Enumeration]

(Core::X86::Cpuid::ProcExtStateEnumEdx02)			
Read-only. Reset: Fixed,0000_0000h.			
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn0000000D_EDX_x02			
Bits Description			
31:0 Reserved. Read-only. Reset: Fixed,0000_0000h.		Reserved. Read-only. Reset: Fixed,0000_0000h.	

CPUID_Fn8000000_EAX [Largest Extended Function Number] (Core::X86::Cpuid::LargExtFuncNum) Read-only. Reset: Fixed,8000_001Fh. _lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000000_EAX Bits Description 31:0 LFuncExt: largest extended function. Read-only. Reset: Fixed,8000_001Fh. The largest CPUID extended function input value supported by the processor implementation.

CPUID_Fn80000000_EBX [Processor Vendor (ASCII Bytes [3:0])] (Core::X86::Cpuid::ProcVendExtEbx) Read-only. Reset: Fixed,6874_7541h. Core::X86::Cpuid::ProcVendEbx and Core::X86::Cpuid::ProcVendExtEbx return the same value. _lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000000_EBX Bits Description 31:0 Vendor. Read-only. Reset: Fixed,6874_7541h. ASCII Bytes [3:0] ("h t u A") of the string "AuthenticAMD".

CPUID_Fn80000000_ECX [Processor Vendor (ASCII Bytes [11:8])] (Core::X86::Cpuid::ProcVendExtEcx) Read-only. Reset: Fixed,444D_4163h. Core::X86::Cpuid::ProcVendEcx and Core::X86::Cpuid::ProcVendExtEcx return the same value. _lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000000_ECX Bits Description 31:0 Vendor. Read-only. Reset: Fixed,444D_4163h. ASCII Bytes [11:8] ("D M A c") of the string "AuthenticAMD".

CPUID_Fn8000000_EDX [Processor Vendor (ASCII Bytes [7:4])] (Core::X86::Cpuid::ProcVendExtEdx) Read-only. Reset: Fixed,6974_6E65h. Core::X86::Cpuid::ProcVendEdx and Core::X86::Cpuid::ProcVendExtEdx return the same value. _lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000000_EDX Bits Description 31:0 Vendor. Read-only. Reset: Fixed,6974_6E65h. ASCII Bytes [7:4] ("i t n e") of the string "AuthenticAMD".

CPUID_Fn80000001_EAX [Family, Model, Stepping Identifiers] (Core::X86::Cpuid::FamModStepExt) Read-only. Core::X86::Cpuid::FamModStep and Core::X86::Cpuid::FamModStepExt return the same value. See Core::X86::Cpuid::FamModStep. lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000001_EAX Bits Description 31:28 Reserved. 27:20 **ExtFamily**: **extended family**. Read-only. Reset: 08h. See Core::X86::Cpuid::FamModStep description of Family. 19:16 ExtModel: extended model. Read-only. Reset: 0h. See Core::X86::Cpuid::FamModStep description of ExtModel. 15:12 Reserved. 11:8 **BaseFamily**. Read-only, Reset: Fh. See Core::X86::Cpuid::FamModStep description of Family. **BaseModel**. Read-only. Reset: Xh. Model numbers vary with product. 7:4 **Stepping**. Read-only. Reset: 2h. Processor stepping (revision) for a specific model. 3:0

CPUID_FR800000001_EBX [Brandid identifier] (Core::x80::Cpuid::Brandid)	
Read-only.	
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000001_EBX	

CDITE E 00000001 EDV ED ITILI 20 1/C VOC C 1 D ITI

Bits	Description		
31:28	PkgType: package type. Read-only. Reset: Xh. Specifies the package type.		
	ValidValues:		
	Value	Description	
	1h-0h	Reserved.	
	2h	AM4	
	Fh-3h	Reserved.	
27:0	Reserved.		

CPUI	CPUID_Fn80000001_ECX [Feature Identifiers] (Core::X86::Cpuid::FeatureExtIdEcx)			
Read-	Read-only.			
These	These values can be over-written by Core::X86::Msr::CPUID_ExtFeatures.			
	ree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000001_ECX			
	Description			
	Reserved.			
29	MwaitExtended . Read-only. Reset: !Core::X86::Msr::HWCR[MonMwaitDis]. 1=MWAITX and MONITORX			
	capability is supported.			
28	PerfCtrExtLLC: Last Level Cache performance counter extensions. Read-only. Reset: Fixed,1. 1=Indicates			
	support for Core::X86::Msr::ChL3PmcCfg and Core::X86::Msr::ChL3Pmc L3 performance counter extensions.			
	L3 performance counter extensions support. See 2.1.15.5 [L3 Cache Performance Monitor Counters] and 2.1.15			
27	[Performance Monitor Counters].			
27	PerfTsc. Read-only. Reset: Fixed,0. Performance time-stamp counter supported.			
26	DataBreakpointExtension . Read-only. Reset: Fixed,1. 1=Indicates data breakpoint support for Core::X86::Msr::DR0_ADDR_MASK, Core::X86::Msr::DR1_ADDR_MASK,			
	Core::X86::Msr::DR2_ADDR_MASK, Core::X86::Msr::DR3_ADDR_MASK.			
25:24	Reserved.			
23.24	PerfCtrExtCore: core performance counter extensions support. Read-only. Reset: Fixed,1. 1=Indicates			
23	support for Core::X86::Msr::PERF_CTL and Core::X86::Msr::PERF_CTR. See See 2.1.15.4 [Core Performance			
	Monitor Counters] and 2.1.15 [Performance Monitor Counters].			
22	TopologyExtensions: topology extensions support. Read-only. Reset: Fixed,1. 1=Indicates support for			
	Core::X86::Cpuid::CachePropEax0 and Core::X86::Cpuid::ExtApicId.			
21:18	Reserved.			
17	TCE. Read-only. Reset: Fixed,1. Translation cache extension.			
16	FMA4. Read-only. Reset: Fixed,0. Four-operand FMA instruction support.			
15	LWP. Read-only. Reset: Fixed,0. Lightweight profiling support.			
14	Reserved.			
13	WDT. Read-only. Reset: Fixed,1. Watchdog timer support.			
12	SKINIT. Read-only. Reset: Fixed,1. SKINIT and STGI support.			
11	XOP . Read-only. Reset: Fixed,0. Extended operation support.			
10	IBS. Read-only. Reset: 0. Instruction Based Sampling.			
9	OSVW. Read-only. Reset: Fixed,1. OS Visible Work-around support.			
8	ThreeDNowPrefetch. Read-only. Reset: Fixed,1. Prefetch and PrefetchW instructions.			
7	MisAlignSse. Read-only. Reset: Fixed,1. Misaligned SSE Mode.			
6	SSE4A . Read-only. Reset: Fixed,1. EXTRQ, INSERTQ, MOVNTSS, and MOVNTSD instruction support.			
5	ABM : advanced bit manipulation . Read-only. Reset: Fixed,1. LZCNT instruction support.			
4	AltMovCr8. Read-only. Reset: Fixed,1. LOCK MOV CR0 means MOV CR8.			
3	ExtApicSpace . Read-only. Reset: Fixed,1. Extended APIC register space.			
2	SVM : Secure Virtual Mode feature . Read-only. Reset: Fixed,1. Indicates support for: VMRUN, VMLOAD,			
	VMSAVE, CLGI, VMMCALL, and INVLPGA.			
1	CmpLegacy . Read-only. Reset: Fixed,(Core::X86::Cpuid::SizeId[NC] > 0). 0=Single core product			

	(Core::X86::Cpuid::SizeId[NC] == 0). 1=Multi core product (Core::X86::Cpuid::SizeId[NC] !=0). Core multi-
	processing legacy mode.
0	LahfSahf . Read-only. Reset: Fixed,1. LAHF and SAHF instruction support in 64-bit mode.

CPUID Fn80000001 EDX [Feature Identifiers] (Core::X86::Cpuid::FeatureExtIdEdx)

CPUI	CPUID_Fn80000001_EDX [Feature Identifiers] (Core::X86::Cpuid::FeatureExtIdEdx)		
Read-	only.		
	values can be over-written by Core::X86::Msr::CPUID_ExtFeatures.		
	1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000001_EDX		
	Description		
31	ThreeDNow. Read-only. Reset: Fixed,0. 3DNow!™ instructions.		
30	ThreeDNowExt . Read-only. Reset: Fixed,0. AMD extensions to 3DNow! instructions.		
29	LM. Read-only. Reset: Fixed,1. Long Mode.		
28	Reserved.		
27	RDTSCP. Read-only. Reset: Fixed,1. RDTSCP instruction.		
26	Page1GB. Read-only. Reset: Fixed,1. 1-GB large page support		
25	FFXSR . Read-only. Reset: Fixed,1. FXSAVE and FXRSTOR instruction optimizations.		
24	FXSR . Read-only. Reset: Fixed,1. FXSAVE and FXRSTOR instructions.		
23	MMX. Read-only. Reset: Fixed,1. MMX instructions.		
22	MmxExt. Read-only. Reset: Fixed,1. AMD extensions to MMX instructions.		
21	Reserved.		
20	NX. Read-only. Reset: Fixed,1. No-execute page protection.		
19:18	Reserved.		
17	PSE36 . Read-only. Reset: Fixed,1. Page-size extensions.		
16	PAT. Read-only. Reset: Fixed,1. Page attribute table.		
15	CMOV . Read-only. Reset: Fixed,1. Conditional move instructions, CMOV, FCOMI, FCMOV.		
14	MCA. Read-only. Reset: Fixed,1. Machine check architecture, MCG_CAP		
13	PGE . Read-only. Reset: Fixed,1. Page global extension, CR4.PGE.		
12	MTRR. Read-only. Reset: Fixed,1. Memory-type range registers.		
11	SysCallSysRet. Read-only. Reset: Fixed,1. SYSCALL and SYSRET instructions.		
10	Reserved.		
9	APIC: advanced programmable interrupt controller (APIC) exists and is enabled. Read-only. Reset: X.		
	Reset is Core::X86::Msr::APIC_BAR[ApicEn].		
8	CMPXCHG8B. Read-only. Reset: Fixed,1. CMPXCHG8B instruction.		
7	MCE. Read-only. Reset: Fixed,1. Machine Check Exception, CR4.MCE.		
6	PAE. Read-only. Reset: Fixed,1. Physical-address extensions (PAE).		
5	MSR . Read-only. Reset: Fixed,1. Model-specific registers (MSRs), with RDMSR and WRMSR instructions.		
4	TSC . Read-only. Reset: Fixed,1. Time stamp counter, RDTSC/RDTSCP instructions, CR4.TSD		
3	PSE . Read-only. Reset: Fixed,1. Page-size extensions (4 MB pages).		
2	DE . Read-only. Reset: Fixed,1. Debugging extensions, IO breakpoints, CR4.DE.		
1			
1	VME. Read-only. Reset: Fixed,1. Virtual-mode enhancements.		

CPUID_Fn80000002_EAX [Processor Name String Identifier (Bytes [3:0])] (Core::X86::Cpuid::ProcNameStr0Eax)

(0010	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
Read-only.	
Is an alias of Core::X86::Msr::ProcNameString_n0.	
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000002_EAX	
Bits	Description
31:24	ProcNameByte3 . Read-only. Reset: Core::X86::Msr::ProcNameString_n0[CpuNameString3]. Processor name,
	byte3.

byte 4.

23:	16	ProcNameByte2 . Read-only. Reset: Core::X86::Msr::ProcNameString_n0[CpuNameString2]. Processor name,
		byte2.
15	8:8	ProcNameByte1 . Read-only. Reset: Core::X86::Msr::ProcNameString_n0[CpuNameString1]. Processor name,
		byte1.
7:	:0	ProcNameByte0 . Read-only. Reset: Core::X86::Msr::ProcNameString_n0[CpuNameString0]. Processor name,
		byte0.

CPUID_Fn80000002_EBX [Processor Name String Identifier (Bytes [7:4])] (Core::X86::Cpuid::ProcNameStr0Ebx)

Read-only.
Is an alias of Core::X86::Msr::ProcNameString_n0.
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000002_EBX
Bits Description
31:24 ProcNameByte7 . Read-only. Reset: Core::X86::Msr::ProcNameString_n0[CpuNameString7]. Processor name,
byte 7.
23:16 ProcNameByte6 . Read-only. Reset: Core::X86::Msr::ProcNameString_n0[CpuNameString6]. Processor name,
byte 6.
15:8 ProcNameByte5 . Read-only. Reset: Core::X86::Msr::ProcNameString_n0[CpuNameString5]. Processor name,
byte 5.
7:0 ProcNameByte4 . Read-only. Reset: Core::X86::Msr::ProcNameString_n0[CpuNameString4]. Processor name,

CPUID_Fn80000002_ECX [Processor Name String Identifier (Bytes [11:8])] (Core::X86::Cpuid::ProcNameStr0Ecx)

Read-only.	
Is an alias of Core::X86::Msr::ProcNameString_n1.	
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000002_ECX	
Bits Description	
31:24 ProcNameByte11 . Read-only. Reset: Core::X86::Msr::ProcNameString_n1[CpuNameString3]. Processor name	e,
byte 11.	
23:16 ProcNameByte10 . Read-only. Reset: Core::X86::Msr::ProcNameString_n1[CpuNameString2]. Processor name	e,
byte 10.	
15:8 ProcNameByte9 . Read-only. Reset: Core::X86::Msr::ProcNameString_n1[CpuNameString1]. Processor name	,
byte 9.	
7:0 ProcNameByte8 . Read-only. Reset: Core::X86::Msr::ProcNameString_n1[CpuNameString0]. Processor name	,
byte 8.	

CPUID_Fn80000002_EDX [Processor Name String Identifier (Bytes [15:12])] (Core::X86::Cpuid::ProcNameStr0Edx)

(Core::X86::Cpuid::ProcNameStruEdx)	
Read-only.	
Is an alias of Core::X86::Msr::ProcNameString_n1.	
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000002_EDX	
Bits Description	
31:24 ProcNameByte15 . Read-only. Reset: Core::X86::Msr::ProcNameString_n1[CpuNameString7]. Processor nan	ie,
byte 15.	
23:16 ProcNameByte14 . Read-only. Reset: Core::X86::Msr::ProcNameString_n1[CpuNameString6]. Processor nan	ie,
byte 14.	
15:8 ProcNameByte13 . Read-only. Reset: Core::X86::Msr::ProcNameString_n1[CpuNameString5]. Processor name	ie,
byte 13.	
7:0 ProcNameByte12 . Read-only. Reset: Core::X86::Msr::ProcNameString_n1[CpuNameString4]. Processor name	ıe,
byte 12.	

CPUID_Fn80000003_EAX [Processor Name String Identifier (Bytes [19:16])] (Core::X86::Cpuid::ProcNameStr1Eax)

(0010	(Corenzion eparanti vertamesa 12ax)	
Read-	only.	
Is an a	Is an alias of Core::X86::Msr::ProcNameString_n2.	
_lthree[1	:0]_core[3:0]_thread[1:0]; CPUID_Fn80000003_EAX	
Bits	Description	
31:24	ProcNameByte19 . Read-only. Reset: Core::X86::Msr::ProcNameString_n2[CpuNameString3]. Processor name,	
	byte 19.	
23:16	ProcNameByte18 . Read-only. Reset: Core::X86::Msr::ProcNameString_n2[CpuNameString2]. Processor name,	
	byte 18.	
15:8	ProcNameByte17 . Read-only. Reset: Core::X86::Msr::ProcNameString_n2[CpuNameString1]. Processor name,	
	byte 17.	
7:0	ProcNameByte16 . Read-only. Reset: Core::X86::Msr::ProcNameString_n2[CpuNameString0]. Processor name,	
	byte 16.	

CPUID_Fn80000003_EBX [Processor Name String Identifier (Bytes [23:20])] (Core::X86::Cpuid::ProcNameStr1Ebx)

Read-only.	
Is an alias of Core::X86::Msr::ProcNameString_n2.	
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000003_EBX	
Bits Description	
31:24 ProcNameByte23 . Read-only. Reset: Core::X86::Msr::ProcNameString_n2[C	puNameString7]. Processor name,
byte 23.	
23:16 ProcNameByte22 . Read-only. Reset: Core::X86::Msr::ProcNameString_n2[C	puNameString6]. Processor name,
byte 22.	
15:8 ProcNameByte21 . Read-only. Reset: Core::X86::Msr::ProcNameString_n2[C	puNameString5]. Processor name,
byte 21.	
7:0 ProcNameByte20 . Read-only. Reset: Core::X86::Msr::ProcNameString_n2[C	puNameString4]. Processor name,
byte 20.	-

CPUID_Fn80000003_ECX [Processor Name String Identifier (Bytes [27:24])] (Core::X86::Cpuid::ProcNameStr1Ecx)

Read-	only.	
Is an a	Is an alias of Core::X86::Msr::ProcNameString_n3.	
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000003_ECX	
Bits	Description	
31:24	ProcNameByte27 . Read-only. Reset: Core::X86::Msr::ProcNameString_n3[CpuNameString3]. Processor name,	
	byte 27.	
23:16	ProcNameByte26 . Read-only. Reset: Core::X86::Msr::ProcNameString_n3[CpuNameString2]. Processor name,	
	byte 26.	
15:8	ProcNameByte25 . Read-only. Reset: Core::X86::Msr::ProcNameString_n3[CpuNameString1]. Processor name,	
	byte 25.	
7:0	ProcNameByte24. Read-only. Reset: Core::X86::Msr::ProcNameString_n3[CpuNameString0]. Processor name,	
	byte 24.	

CPUID_Fn80000003_EDX [Processor Name String Identifier (Bytes [31:28])] (Core::X86::Cpuid::ProcNameStr1Edx)

Read-only.
Is an alias of Core::X86::Msr::ProcNameString_n3.
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000003_EDX
Bits Description
31:24 ProcNameByte31 . Read-only. Reset: Core::X86::Msr::ProcNameString_n3[CpuNameString7]. Processor name,

	byte 31.
23:16	ProcNameByte30 . Read-only. Reset: Core::X86::Msr::ProcNameString_n3[CpuNameString6]. Processor name,
	byte 30.
15:8	ProcNameByte29 . Read-only. Reset: Core::X86::Msr::ProcNameString_n3[CpuNameString5]. Processor name,
	byte 29.
7:0	ProcNameByte28 . Read-only. Reset: Core::X86::Msr::ProcNameString_n3[CpuNameString4]. Processor name,
	byte 28.

CPUID_Fn80000004_EAX [Processor Name String Identifier (Bytes [35:32])] (Core::X86::Cpuid::ProcNameStr2Eax)

Read-	only.	
Is an a	Is an alias of Core::X86::Msr::ProcNameString_n4.	
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000004_EAX	
Bits	Description	
31:24	ProcNameByte35 . Read-only. Reset: Core::X86::Msr::ProcNameString_n4[CpuNameString3]. Processor name,	
	byte 35.	
23:16	ProcNameByte34 . Read-only. Reset: Core::X86::Msr::ProcNameString_n4[CpuNameString2]. Processor name,	
	byte 34.	
15:8	ProcNameByte33 . Read-only. Reset: Core::X86::Msr::ProcNameString_n4[CpuNameString1]. Processor name,	
	byte 33.	
7:0	ProcNameByte32 . Read-only. Reset: Core::X86::Msr::ProcNameString_n4[CpuNameString0]. Processor name,	
	byte 32.	

CPUID_Fn80000004_EBX [Processor Name String Identifier (Bytes [39:36])] (Core::X86::Cpuid::ProcNameStr2Ebx)

Read-o	only.	
Is an a	Is an alias of Core::X86::Msr::ProcNameString_n4.	
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000004_EBX	
Bits	Description	
31:24	ProcNameByte39 . Read-only. Reset: Core::X86::Msr::ProcNameString_n4[CpuNameString7]. Processor name,	
	byte 39.	
23:16	ProcNameByte38 . Read-only. Reset: Core::X86::Msr::ProcNameString_n4[CpuNameString6]. Processor name,	
	byte 38.	
15:8	ProcNameByte37 . Read-only. Reset: Core::X86::Msr::ProcNameString_n4[CpuNameString5]. Processor name,	
	byte 37.	
7:0	ProcNameByte36 . Read-only. Reset: Core::X86::Msr::ProcNameString_n4[CpuNameString4]. Processor name,	
	byte 36.	

CPUID_Fn80000004_ECX [Processor Name String Identifier (Bytes [43:40])] (Core::X86::Cpuid::ProcNameStr2Ecx)

(wasowepanewa room unineous == uni,	
Read-	only.	
Is an a	Is an alias of Core::X86::Msr::ProcNameString_n5.	
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000004_ECX	
Bits	Description	
31:24	ProcNameByte43 . Read-only. Reset: Core::X86::Msr::ProcNameString_n5[CpuNameString3]. Processor name,	
	byte 43.	
23:16	ProcNameByte42 . Read-only. Reset: Core::X86::Msr::ProcNameString_n5[CpuNameString2]. Processor name,	
	byte 42.	
15:8	ProcNameByte41 . Read-only. Reset: Core::X86::Msr::ProcNameString_n5[CpuNameString1]. Processor name,	
	byte 41.	
7:0	ProcNameByte40 . Read-only. Reset: Core::X86::Msr::ProcNameString_n5[CpuNameString0]. Processor name,	
	byte 40.	

CPUID_Fn80000004_EDX [Processor Name String Identifier (Bytes [47:44])]
(Core::X86::Cpuid::ProcNameStr2Edx)

(0010	mion opinion for time or in the contract of th	
Read-	only.	
Is an a	Is an alias of Core::X86::Msr::ProcNameString_n5.	
_lthree[1	:0]_core[3:0]_thread[1:0]; CPUID_Fn80000004_EDX	
Bits	Description	
31:24	ProcNameByte47 . Read-only. Reset: Core::X86::Msr::ProcNameString_n5[CpuNameString7]. Processor name,	
	byte 47.	
23:16	ProcNameByte46 . Read-only. Reset: Core::X86::Msr::ProcNameString_n5[CpuNameString6]. Processor name,	
	byte 46.	
15:8	ProcNameByte45 . Read-only. Reset: Core::X86::Msr::ProcNameString_n5[CpuNameString5]. Processor name,	
	byte 45.	
7:0	ProcNameByte44 . Read-only. Reset: Core::X86::Msr::ProcNameString_n5[CpuNameString4]. Processor name,	
	byte 44.	

CPUID Fn80000005 EAX [L1 TLB 2M/4M Identifiers] (Core::X86::Cpuid::L1Tlb2M4M)

CFUL	CFOID_F100000005_EAX [LT 1LD 2W/4W Identifiers] (CoreX00CpuidLT1102W4W)	
Read-	only.	
This fo	This function provides the processor's first level cache and TLB characteristics for each core.	
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000005_EAX	
Bits	Description	
31:24	L1DTlb2and4MAssoc: data TLB associativity for 2 MB and 4 MB pages. Read-only. Reset: Fixed,FFh. See	
	Core::X86::Cpuid::L1DcId[L1DcAssoc].	
23:16	L1DTlb2and4MSize: data TLB number of entries for 2 MB and 4 MB pages. Read-only. Reset: Fixed,64.	
	The value returned is for the number of entries available for the 2 MB page size; 4 MB pages require two 2 MB	
	entries, so the number of entries available for the 4 MB page size is one-half the returned value.	
15:8	L1ITlb2and4MAssoc: instruction TLB associativity for 2 MB and 4 MB pages. Read-only. Reset: Fixed,FFh.	
	See Core::X86::Cpuid::L1DcId[L1DcAssoc].	
7:0	L1ITlb2and4MSize: instruction TLB number of entries for 2 MB and 4 MB pages. Read-only. Reset:	
	Fixed,64. The value returned is for the number of entries available for the 2 MB page size; 4 MB pages require	
	two 2 MB entries, so the number of entries available for the 4 MB page size is one-half the returned value.	

CPUID_Fn80000005_EBX [L1 TLB 4K Identifiers] (Core::X86::Cpuid::L1Tlb4K)

Read-only.	
See Core::X86::Cpuid::L1Tlb2M4M.	
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000005_EBX	
its Description	
:24 L1DTlb4KAssoc . Read-only. Reset: Fixed,FFh. Data TLB associativity for 4 KB pages. See	
Core::X86::Cpuid::L1DcId[L1DcAssoc].	
:16 L1DTlb4KSize . Read-only. Reset: Fixed,64. Data TLB number of entries for 4 KB pages.	
5:8 L1ITlb4KAssoc . Read-only. Reset: Fixed,FFh. Instruction TLB associativity for 4 KB pages. See	
Core::X86::Cpuid::L1DcId[L1DcAssoc].	
:0 L1ITlb4KSize . Read-only. Reset: Fixed,64. Instruction TLB number of entries for 4 KB pages.	

CPUID_Fn80000005_ECX [L1 Data Cache Identifiers] (Core::X86::Cpuid::L1DcId)

Read-only.	
This function provides first level cache characteristics for each core.	
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000005_ECX	
Bits Description	
B1:24 L1DcSize . Read-only. Reset: Fixed,32. L1 data cache size in KB.	
23:16 L1DcAssoc . Read-only. Reset: Fixed,8. L1 data cache associativity.	
ValidValues:	

5h-0h Reserved.

	Value	Description
	00h	Reserved
	01h	1 way (direct mapped)
	02h	2 way
	03h	3 way
	FEh-	<value> way</value>
	04h	
	FFh	Fully associative
15:8	L1DcLin	esPerTag. Read-only. Reset: Fixed,01h. L1 data cache lines per tag.
7:0	L1DcLin	eSize. Read-only. Reset: Fixed,64. L1 data cache line size in bytes.

CPUID En80000005 EDX [L1 Instruction Cache Identifiers] (Core.: X86::Cnuid::L1IcId)

CPUID	CPUID_Fn80000005_EDX [L1 Instruction Cache Identifiers] (Core::X86::Cpuid::L11c1d)		
Read-or	Read-only.		
This fur	This function provides first level cache characteristics for each core.		
_lthree[1:0)]_core[3:0]_	thread[1:0]; CPUID_Fn80000005_EDX	
Bits I	Descripti	on	
31:24 I	L1IcSize.	Read-only. Reset: Fixed,64. L1 instruction cache size KB.	
23:16 I	3:16 L1IcAssoc . Read-only. Reset: Fixed,4. L1 instruction cache associativity.		
	ValidValı	ies:	
	Value	Description	
	00h	Reserved	
	01h	1 way (direct mapped)	
	02h	2 way	
	03h	3 way	
	04h	4 way	
	FEh-	<value> way</value>	
	05h		
	FFh	Fully associative	
15:8 I	L1IcLine	sPerTag. Read-only. Reset: Fixed,01h. L1 instruction cache lines per tag.	
7:0 I	L1IcLine	Size. Read-only. Reset: Fixed,64. L1 instruction cache line size in bytes.	

CPUII	D_Fn8000	00006_EAX [L2 TLB 2M/4M Identifiers] (Core::X86::Cpuid::L2Tlb2M4M)		
Read-o	Read-only.			
This fu	This function provides the processor's second level cache and TLB characteristics for each core.			
_lthree[1	:0]_core[3:0]_	_thread[1:0]; CPUID_Fn80000006_EAX		
Bits	Descripti	on		
31:28	L2DTlb2	and4MAssoc: L2 data TLB associativity for 2 MB and 4 MB pages. Read-only. Reset: Xh.		
	ValidValu	ues:		
	Value	Description		
	1h-0h	Reserved.		
	2h	2 ways		
	3h	3 ways		
	Fh-4h	Reserved.		
27:16	L2DTlb2	and4MSize: L2 data TLB number of entries for 2 MB and 4 MB pages. Read-only. Reset:		
	Fixed,153	36. The value returned is for the number of entries available for the 2 MB page size; 4 MB pages require		
	two 2 ME	B entries, so the number of entries available for the 4 MB page size is one-half the returned value.		
15:12	L2ITlb2a	and4MAssoc: L2 instruction TLB associativity for 2 MB and 4 MB pages. Read-only. Reset: Fixed,6.		
	ValidValu	ues:		
	Value	Description		

	6h	8 ways
	Fh-7h	Reserved.
11:0	L2ITlb2a	and4MSize: L2 instruction TLB number of entries for 2 MB and 4 MB pages. Read-only. Reset:
	Fixed,102	4. The value returned is for the number of entries available for the 2 MB page size; 4 MB pages require
	two 2 MF	sentries, so the number of entries available for the 4 MR page size is one-half the returned value

two 2 MB entries, so the number of entries available for the 4 MB page size is one-half the returned value. CPUID_Fn80000006_EBX [L2 TLB 4K Identifiers] (Core::X86::Cpuid::L2Tlb4K) Read-only. This function provides the processor's second level cache and TLB characteristics for each core. _lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000006_EBX Bits Description 31:28 **L2DTlb4KAssoc**. Read-only. Reset: Xh. L2 data TLB associativity for 4 KB pages. ValidValues: Value Description 4h-0h Reserved. 5h 6 ways 6h 8 ways Fh-7h Reserved. 27:16 **L2DTlb4KSize**. Read-only. Reset: Fixed,1536. L2 data TLB number of entries for 4 KB pages. 15:12 **L2ITlb4KAssoc**. Read-only. Reset: Fixed,6. L2 instruction TLB associativity for 4 KB pages. ValidValues: Value Description 5h-0h Reserved. 6h 8 ways Fh-7h Reserved. 11.0 I DITIBAK Size Read-only Reset Fixed 1024 I.2 instruction TLB number of entries for 4 KB pages

11:0	L2ITIb4ł	KSize . Read-only. Reset: Fixed,1024. L2 instruction TLB number of entries for 4 KB pages.
CPUII	D_Fn8000	00006_ECX [L2 Cache Identifiers] (Core::X86::Cpuid::L2CacheId)
Read-c	only.	
		ovides second level cache characteristics for each core.
		_thread[1:0]; CPUID_Fn80000006_ECX
	Descripti	
31:16		Read-only. Reset: Fixed,0200h. L2 cache size in KB.
	ValidValu	
	Value	Description
	00FFh-	Reserved.
	0000h	
	0100h	256 KB
	01FFh-	Reserved.
	0101h	
	0200h	512 KB
	03FFh-	Reserved.
	0201h	
	0400h	1 MB
	07FFh-	Reserved.
	0401h	
	0800h	2 MB
	FFFFh-	Reserved.
	0801h	
15:12	L2Assoc.	Read-only. Reset: Fixed,6. L2 cache associativity.

ValidVal	ues:
Value	Description
0h	Disabled.
1h	1 way (direct mapped)
2h	2 ways
3h	Reserved.
4h	4 ways
5h	Reserved.
6h	8 ways
7h	Reserved.
8h	16 ways
9h	Reserved.
Ah	32 ways
Bh	48 ways
Ch	64 ways
Dh	96 ways
Eh	128 ways
Fh	Fully associative
1:8 L2Lines	PerTag. Read-only. Reset: Fixed,1h. L2 cache lines per tag.
:0 L2LineS	ize. Read-only. Reset: Fixed,64. L2 cache line size in bytes.

CPUID Fn80000006 EDX [L3 Cache Identifiers] (Core::X86::Cpuid::L3CacheId)

CPUI	D_Fn8000	00006_EDX [L3 Cache Identifiers] (Core::X86::Cpuid::L3CacheId)	
Read-	Read-only.		
This fu	This function provides third level cache characteristics shared by all cores of a processor.		
	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000006_EDX		
Bits	Descripti	on	
31:18	L3Size: I	L3 cache size . Read-only. Reset: XXXXh. The L3 cache size in 512 KB units.	
	ValidValu	ues:	
	Value	Description	
	0000h	Disabled.	
	3FFFh-	(<value> *0.5) MB</value>	
	0001h		
17:16	Reserved.		
15:12	L3Assoc.	Read-only. Reset: Xh. L3 cache associativity.	
	ValidValues:		
	Value	Description	
	7h-0h	Reserved.	
	8h	16 Ways	
	9h	Reserved.	
	Ah	32 Ways	
	Bh	48 Ways	
	Ch	64 Ways	
	Dh	96 Ways	
	Eh	128 Ways	
	Fh	Reserved.	
11:8	L3LinesI	PerTag. Read-only. Reset: Fixed,1h. L3 cache lines per tag.	
7:0	L3LineSi	ize. Read-only. Reset: Fixed,64. L3 cache line size in bytes.	

CPUID_Fn80000007_EAX [Reserved] (Core::X86::Cpuid::ProcFeedbackCap)

Read-only. Reset: Fixed,0000_0000h.		
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000007_EAX		
	its Description	
Bits	Description	

CPUID_Fn80000007_EBX [RAS Capabilities] (Core::X86::Cpuid::RasCap)

01 01	creating and the control of the cont			
Read-	Read-only.			
_lthree[:	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000007_EBX			
Bits	Description			
31:4	Reserved.			
3	ScalableMca . Read-only. Reset: Fixed,1. 0=Scalable MCA is not supported. 1=Scalable MCA is supported. See			
	3.1.1.2 [Machine Check Architecture Extensions] and MCA_CONFIG[McaX] for the respective bank.			
2	HWA . Read-only. Reset: Fixed,0. Hardware assert supported.			
1	SUCCOR: Software uncorrectable error containment and recovery capability. Read-only. Reset: X. The			
	processor supports software containment of uncorrectable errors through context synchronizing data poisoning			
	and deferred error interrupts; MSR Core::X86::Msr::McaIntrCfg, MCA_STATUS[Deferred] and			
	MCA_STATUS[Poison] exist.			
0	McaOverflowRecov: MCA overflow recovery support. Read-only. Reset: Fixed,1. 0=MCA overflow			
	conditions require software to shut down the system. 1=MCA overflow conditions (MCi_STATUS[Overflow] ==			
	1) are not fatal; software may safely ignore such conditions. See 3.1 [Machine Check Architecture].			

CPUID_Fn80000007_ECX [Advanced Power Management Information] (Core::X86::Cpuid::ApmInfoEcx)

Read	Read-only. Reset: Fixed,0000_0000h.		
_lthree[[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000007_ECX		
Bits	Description		
31:0	CpuPwrSampleTimeRatio . Read-only. Reset: Fixed,0000_0000h. Specifies the ratio of the compute unit power		
	accumulator sample period to the TSC counter period.		

CPUID Fn80000007 EDX [Advanced Power Management Information] (Core::X86::Cpuid::ApmInfoEdx)

CPUID_Fn80000007_EDX [Advanced Power Management Information] (Core::X86::Cpuid::ApmInfoEdx)		
Read-only.		
This function provides advanced power management feature identifiers.		
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000007_EDX		
Bits Description		
31:15 Reserved.		
14 RAPL . Read-only. Reset: Fixed,1. Running average power limit.		
13 ConnectedStandby . Read-only. Reset: Fixed,1. Connected Standby.		
12 ProcPowerReporting . Read-only. Reset: Fixed,0. Core power reporting interface supported.		
11 ProcFeedbackInterface: processor feedback interface . Read-only. Reset: Fixed,0. 1=Indicates support for		
processor feedback interface; Core::X86::Cpuid::ProcFeedbackCap.		
10 EffFreqRO : read-only effective frequency interface . Read-only. Reset: Fixed,1. Indicates presence of		
Core::X86::Msr::MPerfReadOnly and Core::X86::Msr::APerfReadOnly.		
9 CPB : core performance boost . Read-only. Reset: 0. 1=Indicates presence of Core::X86::Msr::HWCR[CpbDi	is]	
and support for core performance boost.		
8 TscInvariant : TSC invariant . Read-only. Reset: Fixed,1. The TSC rate is invariant.		
7 HwPstate : hardware P-state control. Read-only. Reset: Fixed,1. Core::X86::Msr::PStateCurLim,		
Core::X86::Msr::PStateCtl and Core::X86::Msr::PStateStat exist.		
6 OneHundredMHzSteps . Read-only. Reset: Fixed,0. : 100 MHz multiplier Control.		
5 Reserved.		
4 TM. Read-only. Reset: Fixed,1. Hardware thermal control (HTC)		
3 TTP . Read-only. Reset: Fixed,1. THERMTRIP.		
2 VID: Voltage ID control. Read-only. Reset: Fixed,0. Function replaced by HwPstate.		

1	FID: Frequency ID control. Read-only. Reset: Fixed,0. Function replaced by HwPstate.
0	TS. Read-only. Reset: Fixed,1. Temperature sensor.

CPUID_Fn80000008_EAX [Long Mode Address Size Identifiers] (Core::X86::Cpuid::LongModeInfo)

CPUL	D_FN8UUU	00008_EAX [Long Mode Address Size Identiners] (Core::X86::Cpuid::LongModeInfo)		
Read-only. Reset: Fixed,0000_3030h.				
This p	rovides inf	formation about the maximum physical and linear address width supported by the processor.		
_lthree[1	:0]_core[3:0]_	_thread[1:0]; CPUID_Fn80000008_EAX		
Bits	Descripti	on		
31:24	Reserved.			
23:16	GuestPhysAddrSize . Read-only. Reset: Fixed,00h. Maximum guest physical byte address size in bits.			
	ValidValues:			
	Value Description			
	00h	The maximum guest physical address size defined by PhysAddrSize.		
	FFh-	The maximum guest physical address size defined by GuestPhysAddrSize.		
	01h			
15:8	LinAddr	Size. Read-only. Reset: Fixed,30h. Maximum linear byte address size in bits.		
7:0	PhysAdd	rSize. Read-only. Reset: Fixed,30h. Maximum physical byte address size in bits.		

CPUID_Fn80000008_EBX [Extended Feature Extensions ID EBX] (Core::X86::Cpuid::FeatureExtIdEbx)

Read-	Read-only. Reset: Fixed,0000_0007h.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000008_EBX		
Bits	Description		
31:3	Reserved.		
2	RstrFpErrPtrs . Read-only. Reset: Fixed,1. 1=FXSAVE, XSAVE, FXSAVEOPT, XSAVEC, XSAVES always		
	save error pointers and FXRSTOR, XRSTOR, XRSTORS always restore error pointers is supported.		
1	InstRetCntMsr: instructions retired count support. Read-only. Reset: Fixed,1.		
	1=Core::X86::Msr::IRPerfCount supported.		
0	CLZERO : Clear Zero Instruction . Read-only. Reset: Fixed,1. CLZERO instruction zero's out the 64 byte cache		
	line specified in RAX. Note: CLZERO instruction operations are cache-line aligned and RAX[5:0] is ignored.		

CPUID_Fn80000008_ECX [Size Identifiers] (Core::X86::Cpuid::SizeId)

Ci Cid_Thoughouto_LCX [Size identifiers] (CoreXooCptataSizeta)			
Read-	Read-only.		
This p	This provides information about the number of threads supported by the processor.		
_lthree[1	:0]_core[3:0]_thread[1:0]; CPUID_Fn80000008_ECX		
Bits	Description		
31:18	Reserved.		
17:16	PerfTscSize: performance time-stamp counter size. Read-only. Reset: Fixed,0h.		
15:12	ApicIdSize: APIC ID size. Read-only. Reset: Xh. The number of bits in the initial		
	Core::X86::Apic::ApicId[ApicId] value that indicate thread ID within a package.		
11:8	Reserved.		
7:0	NC : number of threads - 1 . Read-only. Reset: XXh. The number of threads in the package is NC+1 (eg., if		
	NC=0, then there is one thread).		

CPUID_Fn8000000A_EAX [SVM Revision and Feature Identification] (Core::X86::Cpuid::SvmRevFeatIdEax)

Read-	Read-only. Reset: Fixed,0000_0001h.		
This p	This provides SVM revision. If (Core::X86::Cpuid::FeatureExtIdEcx[SVM] == 0) then		
Core::	Core::X86::Cpuid::SvmRevFeatIdEax is reserved.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000000A_EAX		
Bits	Description		
31:8	Reserved.		
7:0	SvmRev. Read-only. Reset: Fixed,01h. SVM revision.		

CPUID_Fn8000000A_EBX [SVM Revision and Feature Identification] (Core::X86::Cpuid::SvmRevFeatIdEbx)

Read-only, Volatile. Reset: 0000 8000h.

This provides SVM revision and feature information. If (Core::X86::Cpuid::FeatureExtIdEcx[SVM] == 0) then Core::X86::Cpuid::SvmRevFeatIdEbx is reserved.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000000A_EBX

Bits Description

31:0 **NASID**: number of address space identifiers (ASID). Read-only, Volatile. Reset: 0000 8000h.

CPUID_Fn8000000A_EDX [SVM Revision and Feature Identification] (Core::X86::Cpuid::SvmRevFeatIdEdx)

Read-only. Reset: Fixed.0001 B4FFh.

This provides SVM feature information. If (Core::X86::Cpuid::FeatureExtIdEcx[SVM] == 0) then

Core::X86::Cpuid::SvmRevFeatIdEdx is reserved.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000000A_EDX

Bits Description

- 31:17 Reserved.
- 16 **vGIF**. Read-only. Reset: Fixed,1. Virtualized GIF.
- 15 **V_VMSAVE_VMLOAD**. Read-only. Reset: Fixed,1. Virtualized VMLOAD and VMSAVE.
- 14 Reserved.
- AVIC: AMD virtual interrupt controller. Read-only. Reset: Fixed,1. 1=Support indicated for SVM mode virtualized interrupt controller; Indicates support for Core::X86::Msr::AvicDoorbell.
- 12 **PauseFilterThreshold.** Read-only. Reset: Fixed,1. PAUSE filter threshold.
- 11 Reserved.
- 10 **PauseFilter**. Read-only. Reset: Fixed,1. Pause intercept filter.
- 9:8 Reserved.
- 7 **DecodeAssists**. Read-only. Reset: Fixed,1. Decode assists.
- 6 **FlushByAsid**. Read-only. Reset: Fixed,1. Flush by ASID.
- 5 **VmcbClean**. Read-only. Reset: Fixed,1. VMCB clean bits.
- 4 **TscRateMsr: MSR based TSC rate control**. Read-only. Reset: Fixed,1. 1=Indicates support for TSC ratio Core::X86::Msr::TscRateMsr.
- 3 **NRIPS**. Read-only. Reset: Fixed,1. NRIP Save.
- 2 **SVML**. Read-only. Reset: Fixed,1. SVM lock.
- 1 **LbrVirt**. Read-only. Reset: Fixed,1. LBR virtualization.
- 0 **NP**. Read-only. Reset: Fixed,1. Nested Paging.

CPUID_Fn80000019_EAX [L1 TLB 1G Identifiers] (Core::X86::Cpuid::L1Tlb1G)

Read-only.

This function provides first level TLB characteristics for 1GB pages.

lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000019_EAX

Bits Description

- 31:28 **L1DTlb1GAssoc**: **L1 data TLB associativity for 1 GB pages**. Read-only. Reset: Fixed,Fh. See Core::X86::Cpuid::L2CacheId[L2Assoc].
- 27:16 **L1DTlb1GSize**. Read-only. Reset: Fixed,64. L1 data TLB number of entries for 1 GB pages.
- 15:12 **L1ITlb1GAssoc**. Read-only. Reset: Fixed,Fh. L1 instruction TLB associativity for 1 GB pages. See Core::X86::Cpuid::L2CacheId[L2Assoc].
- 11:0 **L1ITlb1GSize**. Read-only. Reset: Fixed,64. L1 instruction TLB number of entries for 1 GB pages.

CPUID_Fn80000019_EBX [L2 TLB 1G Identifiers] (Core::X86::Cpuid::L2Tlb1G)

Read-only. Reset: Fixed,0000_0000h.

This provides 1 GB paging information. The associativity fields are defined by Core::X86::Cpuid::L2Tlb2M4M,

Core::X86::Cpuid::L2Tlb4K, Core::X86::Cpuid::L2CacheId and Core::X86::Cpuid::L3CacheId.

_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn80000019_EBX

Bits	Description
31:28	L2DTlb1GAssoc. Read-only. Reset: Fixed,0h. L2 data TLB associativity for 1 GB pages. See
	Core::X86::Cpuid::L2CacheId[L2Assoc].
27:16	L2DTlb1GSize . Read-only. Reset: Fixed,000h. L2 data TLB number of entries for 1 GB pages.
15:12	L2ITlb1GAssoc . Read-only. Reset: Fixed,0h. L2 instruction TLB associativity for 1 GB pages. See
	Core::X86::Cpuid::L2CacheId[L2Assoc].
11:0	L2ITlb1GSize . Read-only. Reset: Fixed,000h. L2 instruction TLB number of entries for 1 GB pages.

CPUID_Fn8000001A_EAX [Performance Optimization Identifiers] (Core::X86::Cpuid::PerfOptId)

	1		
Read-	Read-only. Reset: Fixed,0000_0003h.		
This f	This function returns performance related information.		
_lthree[1	1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001A_EAX		
Bits	Description		
31:3	Reserved.		
2	FP256 . Read-only. Reset: Fixed,0. 256-bit AVX instructions are executed with full-width internal operations and		
	pipelines rather than decomposing them into internal 128-bit suboperations.		
1	MOVU. Read-only. Reset: Fixed,1. MOVU SSE instructions are more efficient and should be preferred to SSE		
	MOVL/MOVH. MOVUPS is more efficient than MOVLPS/MOVHPS. MOVUPD is more efficient than		
	MOVLPD/MOVHPD.		
0	FP128 . Read-only. Reset: Fixed,1. 128-bit SSE (multimedia) instructions are executed with full-width internal		
	operations and pipelines rather than decomposing them into internal 64-bit suboperations.		

CPUID_Fn8000001B_EAX [Instruction Based Sampling Identifiers] (Core::X86::Cpuid::IbsIdEax)

CICI	D_Filotococotib_LAX [filstruction based Sampling Identifiers] (CoreXooCpuidibsidLax)	
Read-only. Reset: Fixed,0000_03FFh.		
This function returns IBS feature information.		
_lthree[1	:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001B_EAX	
Bits	Description	
31:11	Reserved.	
10	IbsOpData4 . Read-only. Reset: Fixed,0. IBS op data 4 MSR supported.	
9	IbsFetchCtlExtd : IBS fetch control extended MSR supported . Read-only. Reset: Fixed,1. Indicates support for	
	Core::X86::Msr::IC_IBS_EXTD_CTL.	
8	OpBrnFuse : fused branch micro-op indication supported . Read-only. Reset: Fixed,1. Indicates support for	
	Core::X86::Msr::IBS_OP_DATA[IbsOpBrnFuse].	
7	RipInvalidChk: invalid RIP indication supported. Read-only. Reset: Fixed,1. Indicates support for	
	Core::X86::Msr::IBS_OP_DATA[IbsRipInvalid].	
6	OpCntExt : IbsOpCurCnt and IbsOpMaxCnt extend by 7 bits . Read-only. Reset: Fixed,1. Indicates support	
	for Core::X86::Msr::IBS_OP_CTL[IbsOpCurCnt[26:20],IbsOpMaxCnt[26:20]].	
5	BrnTrgt. Read-only. Reset: Fixed,1. Branch target address reporting supported.	
4	OpCnt . Read-only. Reset: Fixed,1. Op counting mode supported.	
3	RdWrOpCnt. Read-only. Reset: Fixed,1. Read write of op counter supported.	
2	OpSam . Read-only. Reset: Fixed,1. IBS execution sampling supported.	
1	FetchSam . Read-only. Reset: Fixed,1. IBS fetch sampling supported.	
0	IBSFFV. Read-only. Reset: Fixed,1. IBS feature flags valid.	

CPUID_Fn8000001D_EAX_x00 [Cache Properties (DC)] (Core::X86::Cpuid::CachePropEax0)

Core::X86::Cpuid::CachePropEax0 reports topology information for the DC. If (Core::X86::Cpuid::FeatureExtIdEcx[TopologyExtensions] == 0) then CPUID Fn8000001D_E[D,C,B,A]X are reserved.

_lthree[1	hree[1:0]_core[3:0]; CPUID_Fn8000001D_EAX_x00	
Bits	Description	
31:26	Reserved.	

25:14	NumShai	ringCache: number of logical processors sharing cache. Read-only. Reset: XXXh. The number of
	logical pro	ocessors sharing this cache is NumSharingCache+1.
13:10	Reserved.	
9	FullyAsso	ociative: fully associative cache. Read-only. Reset: Fixed,0. 1=Cache is fully associative.
8	SelfInitia	lization : cache is self-initializing . Read-only. Reset: Fixed,1. 1=Cache is self initializing; cache does
	not need s	software initialization.
7:5	CacheLe	vel: cache level. Read-only. Reset: Fixed,1h. Identifies the cache level.
	ValidValu	les:
	Value	Description
	0h	Reserved.
	1h	Level 1
	2h	Level 2
	3h	Level 3
	7h-4h	Reserved.
4:0	CacheTy	pe: cache type. Read-only. Reset: Fixed,01h. Identifies the type of cache.
	ValidValu	ies:
	Value	Description
	00h	Null; no more caches.
	01h	Data cache.
	02h	Instruction cache.
	03h	Unified cache.
	1Fh-04h	Reserved.

CPUID_Fn8000001D_EAX_x01 [Cache Properties (IC)] (Core::X86::Cpuid::CachePropEax1)

	_	
Read-only.		
Core::X86::Cpuid::CachePropEax1 reports topology information for the IC. See Core::X86::Cpuid::CachePropEax0.		
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EAX_x01		
Bits Description		
31:26 Reserved.		
25:14 NumSharingCache: number of logical processors sharing cache. Read-only. Reset: XXXh. See		
Core::X86::Cpuid::CachePropEax0[NumSharingCache].		
13:10 Reserved.		
9 FullyAssociative : fully associative cache . Read-only. Reset: Fixed,0. See		
Core::X86::Cpuid::CachePropEax0[FullyAssociative].		
8 SelfInitialization : cache is self-initializing . Read-only. Reset: Fixed,1. See		
Core::X86::Cpuid::CachePropEax0[SelfInitialization].		
7:5 CacheLevel : cache level . Read-only. Reset: Fixed,1h. Identifies the cache level. See		
Core::X86::Cpuid::CachePropEax0[CacheLevel].		
4:0 CacheType : cache type . Read-only. Reset: Fixed,02h. See Core::X86::Cpuid::CachePropEax0[CacheType].		

CPUID_Fn8000001D_EAX_x02 [Cache Properties (L2)] (Core::X86::Cpuid::CachePropEax2)

Read-	Read-only.		
Core::	Core::X86::Cpuid::CachePropEax2 reports topology information for the L2. See Core::X86::Cpuid::CachePropEax0.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EAX_x02		
Bits	Description		
31:26	Reserved.		
25:14	NumSharingCache: number of logical processors sharing cache. Read-only. Reset: XXXh.		
	Core::X86::Cpuid::CachePropEax0[NumSharingCache].		
13:10	Reserved.		
9	FullyAssociative: fully associative cache. Read-only. Reset: Fixed,0.		

	Core::X86::Cpuid::CachePropEax0[FullyAssociative].
8	SelfInitialization: cache is self-initializing. Read-only. Reset: Fixed,1.
	Core::X86::Cpuid::CachePropEax0[SelfInitialization].
7:5	CacheLevel: cache level. Read-only. Reset: Fixed,2h. Identifies the cache level.
	Core::X86::Cpuid::CachePropEax0[CacheLevel].
4:0	CacheType : cache type . Read-only. Reset: Fixed,03h. Core::X86::Cpuid::CachePropEax0[CacheType].

CPUID_Fn8000001D_EAX_x03 [Cache Properties (L3)] (Core::X86::Cpuid::CachePropEax3)

Read-	Read-only.		
Core::	Core::X86::Cpuid::CachePropEax3 reports topology information for the L3.		
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EAX_x03			
Bits	Description		
31:26	Reserved.		
25:14	NumSharingCache: number of logical processors sharing cache. Read-only. Reset: XXXh. The number of		
	logical processors sharing this cache is NumSharingCache+1.		
13:10	Reserved.		
9	FullyAssociative: fully associative cache. Read-only. Reset: Fixed,0.		
	Core::X86::Cpuid::CachePropEax0[FullyAssociative].		
8	SelfInitialization: cache is self-initializing. Read-only. Reset: Fixed,1.		
	Core::X86::Cpuid::CachePropEax0[SelfInitialization].		
7:5	CacheLevel: cache level. Read-only. Reset: Fixed,3h. Identifies the cache level.		
	Core::X86::Cpuid::CachePropEax0[CacheLevel].		
4:0	CacheType : cache type . Read-only. Reset: Fixed,03h. Core::X86::Cpuid::CachePropEax0[CacheType].		

CPUID_Fn8000001D_EAX_x04 [Cache Properties Null] (Core::X86::Cpuid::CachePropEax4)

Read-	Read-only. Reset: Fixed,0000_0000h.		
Core::	Core::X86::Cpuid::CachePropEax4 reports done/null. See Core::X86::Cpuid::CachePropEax0.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EAX_x04		
Bits	Description		
31:5	Reserved.		
4:0	CacheType: cache type. Read-only. Reset: Fixed,00h. Core::X86::Cpuid::CachePropEax0[CacheType].		

CPUID_Fn8000001D_EBX_x00 [Cache Properties (DC)] (Core::X86::Cpuid::CachePropEbx0)

Read-	Read-only. Reset: Fixed,01C0_003Fh.	
Core::X86::Cpuid::CachePropEbx0 reports topology information for the DC. See Core::X86::Cpuid::CachePropEax0.		
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EBX_x00		
Bits	Bits Description	
31:22	CacheNumWays: cache number of ways. Read-only. Reset: Fixed,007h. Cache number of ways is	
	CacheNumWays + 1.	
21:12	CachePhysPartitions: cache physical line partitions. Read-only. Reset: Fixed,000h. Cache partitions is	
	CachePhysPartitions + 1.	
11:0 CacheLineSize : cache line size in bytes . Read-only. Reset: Fixed,03Fh. Cache line size in bytes is		
	CacheLineSize + 1.	

CPUID_Fn8000001D_EBX_x01 [Cache Properties (IC)] (Core::X86::Cpuid::CachePropEbx1)

Read-only. Reset: Fixed,00C0_003Fh.		
Core::X86::Cpuid::CachePropEbx1 reports topology information for the IC. See Core::X86::Cpuid::CachePropEax0.		
lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EBX_x01		
Bits Description		
31:22 CacheNumWays: cache number of ways. Read-only. Reset: Fixed,003h.		
Core::X86::Cpuid::CachePropEbx0[CacheNumWays].		
21:12 CachePhysPartitions: cache physical line partitions. Read-only. Reset: Fixed,000h.		

Core::X86::Cpuid::CachePropEbx0[CachePhysPartitions].		Core::X86::Cpuid::CachePropEbx0[CachePhysPartitions].
	11:0	CacheLineSize: cache line size in bytes. Read-only. Reset: Fixed,03Fh.
		Core::X86::Cpuid::CachePropEbx0[CacheLineSize].

CPUID_Fn8000001D_EBX_x03 [Cache Properties (L3)] (Core::X86::Cpuid::CachePropEbx3)

Core::X86::Cpuid::CachePropEbx0[CacheLineSize].

Read-	Read-only. Reset: Fixed,03C0_003Fh.		
Core::X86::Cpuid::CachePropEbx3 reports topology information for the L3. See Core::X86::Cpuid::CachePropEax0			
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EBX_x03		
Bits	Bits Description		
31:22	CacheNumWays: cache number of ways. Read-only. Reset: Fixed,00Fh. See		
	Core::X86::Cpuid::CachePropEbx0[CacheNumWays].		
21:12	CachePhysPartitions: cache physical line partitions. Read-only. Reset: Fixed,000h. See		
	Core::X86::Cpuid::CachePropEbx0[CachePhysPartitions].		
11:0	CacheLineSize: cache line size in bytes. Read-only. Reset: Fixed,03Fh. See		
	Core··X86··Cnuid··CachePronEbx0[CacheLineSize]		

CPUID_Fn8000001D_EBX_x04 [Cache Properties Null] (Core::X86::Cpuid::CachePropEbx4)

Read-only. Reset: Fixed,0000_0000h.			
Core::X86::Cpuid::CachePropEax4 reports done/null. See Core::X86::Cpuid::CachePropEax0.			
_lthree[1	:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EBX_x04		
Bits	Description		
31:0	Reserved. Read-only. Reset: Fixed,0000_0000h.		

CPUID Fn8000001D ECX x00 [Cache Properties (DC)] (Core::X86::Cpuid::CachePropEcx0)

Read-	Read-only. Reset: Fixed,0000_003Fh.		
Core::	Core::X86::Cpuid::CachePropEcx0 reports topology information for the DC. See Core::X86::Cpuid::CachePropEax0.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_ECX_x00		
Bits	Description		
31:0	CacheNumSets: cache number of sets. Read-only. Reset: Fixed,0000_003Fh. Cache number of sets is		
	CacheNumSets+1.		

CPUID_Fn8000001D_ECX_x01 [Cache Properties (IC)] (Core::X86::Cpuid::CachePropEcx1)		
Read-only. Reset: Fixed,0000_00FFh.		
Core::X86::Cpuid::CachePropEcx1 reports topology information for the IC. See Core::X86::Cpuid::CachePropEax0.		
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_ECX_x01		
Bits Description		
31:0 CacheNumSets: cache number of sets. Read-only. Reset: Fixed,0000_00FFh. See		

CPUID_Fn8000001D_ECX_x02 [Cache Properties (L2)] (Core::X86::Cpuid::CachePropEcx2)

Core::X86::Cpuid::CachePropEcx0[CacheNumSets].

Read-only. Reset: Fixed,0000_03FFh.			
Core::	Core::X86::Cpuid::CachePropEcx2 reports topology information for the L2. See Core::X86::Cpuid::CachePropEax0.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_ECX_x02		
Bits	Description Description		
31:0	CacheNumSets: cache number of sets. Read-only. Reset: Fixed,0000_03FFh. See		
	Core::X86::Cpuid::CachePropEcx0[CacheNumSets].		

CPUI	CPUID_Fn8000001D_ECX_x03 [Cache Properties (L3)] (Core::X86::Cpuid::CachePropEcx3)		
Read-	Read-only.		
	Core::X86::Cpuid::CachePropEcx3 reports topology information for the L3.		
		thread[1:0]; CPUID_Fn8000001D_ECX_x03	
Bits	Descripti		
31:0		mSets: cache number of sets. Read-only. Reset: 0000_XXXXh. See	
	Core::X8	6::Cpuid::CachePropEcx0[CacheNumSets].	
	ValidValı	ues:	
	Value	Description	
	0000_0	Reserved.	
	FFEh-		
	0000_0		
	000h		
	0000_0	4096 L3 Cache Sets.	
	FFFh		
	0000_1	Reserved.	
	FFEh-		
	0000_1		
	000h		
	0000_1	8192 L3 Cache Sets.	
	FFFh		
	FFFF_F	Reserved.	
	FFFh-		
	0000_2		
	000h		

CPUID_Fn8000001D_ECX_x04 [Cache Properties Null] (Core::X86::Cpuid::CachePropEcx4)

Read-only. Reset: Fixed,0000_0000h.		
Core::X86::Cpuid::CachePropEax3 reports done/null. See Core::X86::Cpuid::CachePropEax0.		
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_ECX_x04		
Bits Description		
31:0 CacheNumSets . Read-only. Reset: Fixed,0000 0000h. Cache number of sets.		

CPUID_Fn8000001D_EDX_x00 [Cache Properties (DC)] (Core::X86::Cpuid::CachePropEdx0)			
Read-	Read-only. Reset: Fixed,0000_0000h.		
Core::	X86::Cpuid::CachePropEdx0 reports topology information for the DC. See Core::X86::Cpuid::CachePropEax0.		
_lthree[1	L:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EDX_x00		
Bits	Description		
31:2	2 Reserved.		
1	CacheInclusive : cache inclusive . Read-only. Reset: Fixed,0. 0=Cache is not inclusive of lower cache levels.		
	1=Cache is inclusive of lower cache levels.		
0	0 WBINVD : Write-Back Invalidate/Invalidate . Read-only. Reset: Fixed,0. 0=WBINVD/INVD invalidates all		
	lower level caches of non-originating cores sharing this cache. 1=WBINVD/INVD not ensured to invalidate all		
	lower level caches of non-originating cores sharing this cache.		

CPUID_Fn8000001D_EDX_x01 [Cache Properties (IC)] (Core::X86::Cpuid::CachePropEdx1)		
Read-only. Reset: Fixed,0000_0000h.		
Core::X86::Cpuid::CachePropEdx1 reports topology information for the IC. See Core::X86::Cpuid::CachePropEax0.		
_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EDX_x01		
Bits Description		
31:2 Reserved.		
1 CacheInclusive : cache inclusive . Read-only. Reset: Fixed,0. See		
Core::X86::Cpuid::CachePropEdx0[CacheInclusive].		
0 WBINVD : Write-Back Invalidate/Invalidate . Read-only. Reset: Fixed,0. 0=WBINVD/INVD invalidates all		

lower level caches of non-originating cores sharing this cache. 1=WBINVD/INVD may not invalidate all lower level caches of non-originating cores sharing this cache. See Core::X86::Cpuid::CachePropEdx0[WBINVD].

CPUID_Fn8000001D_EDX_x02 [Cache Properties (L2)] (Core::X86::Cpuid::CachePropEdx2)

Read-	Read-only. Reset: Fixed,0000_0002h.		
Core::	Core::X86::Cpuid::CachePropEdx2 reports topology information for the L2. See Core::X86::Cpuid::CachePropEax0.		
_lthree[1	1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EDX_x02		
Bits	Bits Description		
31:2	Reserved.		
1	CacheInclusive: cache inclusive. Read-only. Reset: Fixed,1. See		
	Core::X86::Cpuid::CachePropEdx0[CacheInclusive].		
0	0 WBINVD : Write-Back Invalidate/Invalidate . Read-only. Reset: Fixed,0. 0=WBINVD/INVD invalidates all		
	lower level caches of non-originating cores sharing this cache. 1=WBINVD/INVD may not invalidate all lower		
	level caches of non-originating cores sharing this cache.		

CPUID_Fn8000001D_EDX_x03 [Cache Properties (L3)] (Core::X86::Cpuid::CachePropEdx3)

Read-	Read-only. Reset: Fixed,0000_0001h.		
Core::	X86::Cpuid::CachePropEdx3 reports reports topology information for the L3. See		
	X86::Cpuid::CachePropEax0.		
_lthree[1	1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EDX_x03		
Bits	Description		
31:2	Reserved.		
1	CacheInclusive: cache inclusive. Read-only. Reset: Fixed,0. See		
	Core::X86::Cpuid::CachePropEdx0[CacheInclusive].		
0	0 WBINVD : Write-Back Invalidate/Invalidate . Read-only. Reset: Fixed,1. 0=WBINVD/INVD invalidates all		
	lower level caches of non-originating cores sharing this cache. 1=WBINVD/INVD may not invalidate all lower		
	level caches of non-originating cores sharing this cache.		

CPUID Fn8000001D FDX x04 [Cache Properties Null] (Core::X86::Cpuid::CachePropEdx4)

GI GID_PHO000001D_LDX_X04 [Cache 1 Toper ites Null] (GoreX00CptiidCacher Topedx4)			
Read-only. Reset: Fixed,0000_0000h.			
Core::X86::Cpuid::CachePropEax3 reports done/null. See Core::X86::Cpuid::CachePropEax0.			
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001D_EDX_x04		
Bits	Description		
31:0	Reserved. Read-only. Reset: Fixed,0000_0000h.		

CPUID_Fn8000001E_EAX [Extended APIC ID] (Core::X86::Cpuid::ExtApicId)

Read-	Read-only.		
If Cor	If Core::X86::Cpuid::FeatureExtIdEcx[TopologyExtensions] == 0 then CPUID Fn8000001E_E[D,C,B,A]X are reserved.		
If (Co	re::X86::Msr::APIC_BAR[ApicEn] == 0) then Core::X86::Cpuid::ExtApicId[ExtendedApicId] is reserved.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001E_EAX		
Bits	Bits Description		
31:0	ExtendedApicId : extended APIC ID . Read-only. See 2.1.12.2.1.3 [ApicId Enumeration Requirements].		
	Reset: Core::X86::Msr::APIC_BAR[ApicEn]? Fixed, {00_0000h, Core::X86::Apic::ApicId[ApicId]}:		

Fixed,0000_0000h.

CPUID_Fn8000001E_EBX [Core Identifiers] (Core::X86::Cpuid::CoreId)

	• • • • • • • • • • • • • • • • • • • •		
Read-	Read-only.		
See Co	ore::X86::Cpuid::ExtApicId.		
_lthree[1	:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001E_EBX		
Bits	Description		
31:16	16 Reserved.		
15:8	ThreadsPerCore : threads per core . Read-only. Reset: XXh. The number of threads per core is		
	ThreadsPerCore+1.		
7:0	7:0 CoreId : core ID . Read-only. Reset: Fixed,XXh.		
	Description : For Family 17, Model 1, Revision 1 and later:		
	CoreId = $({2'b0, DieId[1:0], LogicalComplexId[0], LogicalThreadId[2:0]} >> SMT)$.		

CPUID Fn8000001E ECX [Node Identifiers] (Core::X86::Cpuid::NodeId)

O_ 0_	er orb_r novovorierr [rivate ratematicis] (coremitous eparatirivatera)		
Read-o	Read-only.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001E_ECX		
Bits	Descripti	on	
31:11	Reserved		
10:8	NodesPer	r Processor: Node per processor . Read-only. Reset: XXXb.	
	ValidValues:		
	Value Description		
	0h	1 node per processor.	
	1h	2 nodes per processor.	
	2h	Reserved.	
	3h	4 nodes per processor.	
	7h-4h	Reserved.	
7:0	0 NodeId: Node ID. Read-only. Reset: Fixed,XXh.		
	Description : For Family 17, Model 1, Revision 1 and later:		
	{5'b00000,1'b[SOCKET_ID],2'b[DIE_ID]}.		

CPUID_Fn8000001F_EAX [AMD Secure Encryption EAX] (Core::X86::Cpuid::SecureEncryptionEax)

Read-	Read-only. Reset: Fixed,0000_000Fh.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001F_EAX		
Bits	Bits Description		
31:4	Reserved.		
3	SevEs. Read-only. Reset: Fixed,1. Secure Encrypted ES.		
2	VmPgFlush: VM Page Flush MSR is supported. Read-only. Reset: Fixed,1. See		
	Core::X86::Msr::VMPAGE_FLUSH.		
1	SEV. Read-only. Reset: Fixed,1. Secure Encrypted Virtualization supported.		
0	SME. Read-only. Reset: Fixed,1. Secure Memory Encryption supported.		

CPUID_Fn8000001F_EBX [AMD Secure Encryption EBX] (Core::X86::Cpuid::SecureEncryptionEbx)

Read-	Read-only. Reset: 0000_016Fh.		
_lthree[1	:0]_core[3:0]_threa	d[1:0]; CPUID_Fn8000001F_EBX	
Bits	Bits Description		
31:12	Reserved.		
11:6	MemEncryptPhysAddWidth . Read-only. Reset: 05h. Reduction of physical address space in bits when memory		
	encryption is enabled (0 indicates no reduction).		
	ValidValues:		
	Value Description		

	00h	Physical Address width is not reduced.
	01h	Physical Address width is reduced by one.
	02h	Physical Address width is reduced by two.
	03h	Physical Address width is reduced by three.
	04h	Physical Address width is reduced by four.
	05h	Physical Address width is reduced by five.
	3Fh-06h	Reserved.
5:0	CBit. Read-only. Reset: 2Fh. Page table bit number used to enable memory encryption.	

Read-only. Reset: 0000_000Fh. __lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001F_ECX Bits Description 31:0 NumEncryptedGuests. Read-only. Reset: 0000_000Fh. Indicates the maximum ASID value that may be used for an SEV-enabled guest.

CPUID_Fn8000001F_EDX [Minimum ASID] (Core::X86::Cpuid::SecureEncryptionEdx)			
Read-	Read-only.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; CPUID_Fn8000001F_EDX		
Bits	ts Description		
31:0	31:0 MinimumSEVASID: Minimum SEV enabled, SEV-ES disabled ASID. Read-only. Reset: 0000_000Xh.		
	Indicates the minimum ASID value that must be used for an SEV-enabled, SEV-ES-disabled guest.		

2.1.14 MSR Registers

2.1.14.1 MSRs - MSR0000_xxxx

See 1.3.3 [Register Mnemonics] for a description of the register naming convention. MSRs are accessed through x86 WRMSR and RDMSR instructions.

MSR	MSR0000_0010 [Time Stamp Counter] (Core::X86::Msr::TSC)	
Read-	Read-write, Volatile. Reset: 0000_0000_0000_0000h.	
The T	The TSC uses a common reference for all sockets, cores and threads.	
_lthree[1	1:0]_core[3:0]_thread[1:0]; MSR0000_0010	
Bits	Description	
63:0	TSC: time stamp counter . Read-write, Volatile. Reset: 0000_0000_0000h. The TSC increments at the P0	
	frequency. The TSC counts at the same rate in all P-states, all C states, S0, or S1. A read of this MSR in guest	
	mode is affected by Core::X86::Msr::TscRateMsr. The value (TSC/TSCRatio) is the TSC P0 frequency based	
	value (as if TSCRatio == 1.0) when (TSCRatio != 1.0).	

MSR0000_001B [APIC Base Address] (Core::X86::Msr::APIC_BAR)		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSR0000_001B	
Bits	Description	
63:48	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0000h.	
47:12	ApicBar[47:12]: APIC base address register . Read-write. Reset: 0_000F_EE00h. Specifies the base address,	
	physical address [47:12], for the APICXX register set in xAPIC mode. See 2.1.12.2.1.2 [APIC Register Space].	
11	ApicEn : APIC enable . Read-write. Reset: 0. 0=Disable Local Apic. 1=Local APIC is enabled in xAPIC mode.	
	See 2.1.12.2.1.2 [APIC Register Space].	
10	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0.	

9	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0.
8	BSC : boot strap core . Read-write, Volatile. Reset: X. 0=The core is not the boot core of the BSP. 1=The core is
	the boot core of the BSP.
7:0	Reserved. Read-only, Error-on-write-1. Reset: Fixed, 00h.

MSR0000 002A [Cluster ID] (Core::X86::Msr::EBL_CR_POWERON)

	, , , , , , , , , , , , , , , , , , ,	
Writes	Writes to this register result in a GP fault with error code 0.	
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSR0000_002A	
Bits	Description	
63:18	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0000_0000h.	
17:16	ClusterID. Read, Error-on-write. Reset: 0h. The field does not affect hardware.	
15:0	Reserved. Read-only, Error-on-write-1. Reset: Fixed, 0000h.	

MSR0000_008B [Patch Level] (Core::X86::Msr::PATCH_LEVEL)

Read,I	Read,Error-on-write,Volatile. Reset: 0000_0000_00000_0000h.	
_lthree[1	_lthree[1:0]_core[3:0]; MSR0000_008B	
Bits	Description	
63:32	Reserved.	
31:0	PatchLevel . Read, Error-on-write, Volatile. Reset: 0000_0000h. This returns an identification number for the	
	microcode patch that has been loaded. If no patch has been loaded, this returns 0.	

MSR0000_00E7 [Max Performance Frequency Clock Count] (Core::X86::Msr::MPERF)

Read-	write, Volatile. Reset: 0000_0000_0000_0000h.	
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSR0000_00E7	
Bits	Description	
63:0	MPERF : maximum core clocks counter. Read-write, Volatile. Reset: 0000_0000_0000_0000h. Incremented by	
	hardware at the P0 frequency while the core is in C0. This register does not increment when the core is in the	
	stop-grant state. In combination with Core::X86::Msr::APERF, this is used to determine the effective frequency	
	of the core. A read of this MSR in guest mode is affected by Core::X86::Msr::TscRateMsr. This field uses	
	software P-state numbering. See Core::X86::Msr::HWCR[EffFreqCntMwait], 2.1.5 [Effective Frequency]	

MSR0000_00E8 [Actual Performance Frequency Clock Count] (Core::X86::Msr::APERF)

Read-	write, Volatile. Reset: 0000_0000_0000_0000h.
_lthree[1	:0]_core[3:0]_thread[1:0]; MSR0000_00E8
Bits	Description
63:0	APERF : actual core clocks counter. Read-write, Volatile. Reset: 0000_0000_0000_0000h. This register
	increments in proportion to the actual number of core clocks cycles while the core is in C0. The register does not
	increment when the core is in the stop-grant state. See Core::X86::Msr::MPERF.

MSR0000_00FE [MTRR Capabilities] (Core::X86::Msr::MTRRcap)

Read,I	Read,Error-on-write. Reset: 0000_0000_0000_0508h.	
_lthree[1	_lthree[1:0]_core[3:0]; MSR0000_00FE	
Bits	Description	
63:11	Reserved.	
10	MtrrCapWc: write-combining memory type. Read, Error-on-write. Reset: 1. 1=The write combining memory	
	type is supported.	
9	Reserved.	
8	MtrrCapFix: fixed range register. Read, Error-on-write. Reset: 1. 1=Fixed MTRRs are supported.	
7:0	MtrrCapVCnt: variable range registers count. Read, Error-on-write. Reset: 08h. Specifies the number of	
	variable MTRRs supported.	

MSR0000_0174 [SYSENTER CS] (Core::X86::Msr::SYSENTER_CS)

Read-write. Reset: 0000_0000_0000_0000h.

_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSR0000_0174	
Bits	Description	
63:16	Reserved.	
15:0	SysEnterCS : SYSENTER target CS . Read-write. Reset: 0000h. Holds the called procedure code segment.	

MSR0000_0175 [SYSENTER ESP] (Core::X86::Msr::SYSENTER_ESP)

Read-	Read-write. Reset: 0000_0000_0000_0000h.	
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSR0000_0175	
Bits	Description	
63:32	Reserved.	
31:0	SysEnterESP: SYSENTER target SP. Read-write. Reset: 0000_0000h. Holds the called procedure stack	
	pointer.	

MSR0000_0176 [SYSENTER EIP] (Core::X86::Msr::SYSENTER_EIP)

Read-	Read-write. Reset: 0000_0000_0000_0000h.	
_lthree[1:0]_core[3:0]_thread[1:0]; MSR0000_0176		
Bits	Description	
63:32	Reserved.	
31:0	SysEnterEIP: SYSENTER target IP. Read-write. Reset: 0000_0000h. Holds the called procedure instruction	
	pointer.	

MSR0000_0179 [Global Machine Check Capabilities] (Core::X86::Msr::MCG_CAP)

_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSR0000_0179	
Bits	Description	
63:9	Reserved.	
	McgCtlP: MCG_CTL register present. Read-only, Error-on-write. Reset: Fixed, 1. 1=The machine check control	
	registers (MCi_CTL) are present. See 3.1 [Machine Check Architecture].	
7:0	Count . Read-only, Error-on-write, Volatile. Reset: XXh. Indicates the number of error reporting banks visible to	
	each core.	

MSR0000_017A [Global Machine Check Status] (Core::X86::Msr::MCG_STAT)

Read-write, Volatile. Reset: 0000_0000_0000_0000h.			
See 3.1 [Machine Check Architecture].			
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSR0000_017A		
Bits	S Description		
63:3	Reserved.		
2	2 MCIP : machine check in progress . Read-write, Volatile. Reset: 0. 1=A machine check is in progress. Machine		
	check progress.		
1	EIPV : error instruction pointer valid . Read-write, Volatile. Reset: 0. 1=The instruction pointer that was pushed		
	onto the stack by the machine check mechanism references the instruction that caused the machine check error.		
0	RIPV : restart instruction pointer valid . Read-write, Volatile. Reset: 0. 0=The interrupt was not precise and/or		
	the process (task) context may be corrupt; continued operation of this process may not be possible without		
	intervention, however system processing or other processes may be able to continue with appropriate software		
	clean up. 1=Program execution can be reliably restarted at the EIP address on the stack.		

MSR0000_017B [Global Machine Check Exception Reporting Control] (Core::X86::Msr::MCG_CTL)

Read-write. Reset: 0000_0000_0000_0000h.

This register controls enablement of the individual error reporting banks; see 3.1 [Machine Check Architecture]. When a machine check register bank is not enabled in MCG_CTL, errors for that bank are not logged or reported, and actions enabled through the MCA are not taken; each MCi_CTL register identifies which errors are still corrected when MCG_CTL[i] is disabled.

lthree[1:0]_core[3:0]_thread[1:0]; MSR0000_017B

Bits Description

63:23	Reserved.
22:0	MCnEn . Read-write. Reset: 00_0000h. 1=The MC0 machine check register bank is enabled.

MSR0000 01D9 [Debug Control] (Core::X86::Msr::DBG_CTL_MSR)

_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSR0000_01D9		
Bits	Description		
63:7	Reserved.		
6	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0.		
5:2	PB : performance monitor pin control . Read-write. Reset: 0h. This field does not control any hardware.		
1	BTF . Read-write. Reset: 0. 1=Enable branch single step.		
0	LBR . Read-write. Reset: 0. 1=Enable last branch record.		

MSR0000_01DB [Last Branch From IP] (Core::X86::Msr::BR_FROM)

Read,Error-on-write,Volatile. Reset: 0000_0000_0000_0000h.		
_lthree[1:0]_core[3:0]_thread[1:0]; MSR0000_01DB		
Bits	Description	
63:0	LastBranchFromIP . Read,Error-on-write,Volatile. Reset: 0000_0000_0000_0000h. Loaded with the segment	
	offset of the branch instruction.	

MSR0000_01DC [Last Branch To IP] (Core::X86::Msr::BR_TO)

Read,Error-on-write,Volatile. Reset: 0000_0000_0000h.			
_lthree	_lthree[1:0]_core[3:0]_thread[1:0]; MSR0000_01DC		
Bits	Description		
63:0	LastBranchToIP . Read,Error-on-write,Volatile. Reset: 0000_0000_0000h. Holds the target RIP of the last		
	branch that occurred before an exception or interrupt.		

MSR0000_01DD [Last Exception From IP] (Core::X86::Msr::LastExcpFromIp)

Moreovo_vibb [Lust Exception 110m ii] (CorextovvisiLustExcept 10mip)			
	Read,Error-on-write,Volatile. Reset: 0000_0000_0000_0000h.		
ĺ	_lthree[1:0]_core[3:0]_thread[1:0]; MSR0000_01DD		
	Bits	Description	
	63:0	LastIntFromIP . Read,Error-on-write,Volatile. Reset: 0000_0000_0000h. Holds the source RIP of the last	
		branch that occurred before the exception or interrupt.	

MSR0000_01DE [Last Exception To IP] (Core::X86::Msr::LastExcpToIp)

Read,Error-on-write,Volatile. Reset: 0000_0000_0000_0000h.			
_lthree[_lthree[1:0]_core[3:0]_thread[1:0]; MSR0000_01DE		
Bits	S Description		
63:0	LastIntToIP . Read,Error-on-write,Volatile. Reset: 0000_0000_0000h. Holds the target RIP of the last		
	branch that occurred before the exception or interrupt.		

MSR0000_020[0...E] [Variable-Size MTRRs Base] (Core::X86::Msr::MtrrVarBase)

Each MTRR (Core::X86::Msr::MtrrVarBase, Core::X86::Msr::MtrrFix_64K through Core::X86::Msr::MtrrFix_4K_7, or Core::X86::Msr::MTRRdefType) specifies a physical address range and a corresponding memory type (MemType) associated with that range. Setting the memory type to an unsupported value results in a #GP.

The variable-size MTRRs come in pairs of base and mask registers (MSR0000_0200 and MSR0000_0201 are the first pair, etc.). Variables MTRRs are enabled through Core::X86::Msr::MTRRdefType[MtrrDefTypeEn]. A core access--with address CPUAddr--is determined to be within the address range of a variable-size MTRR if the following equation is true:

CPUAddr[47:12] & PhyMask[47:12] == PhyBase[47:12] & PhyMask[47:12].

For example, if the variable MTRR spans 256 KB and starts at the 1 MB address the PhyBase would be set to 0_010_0000h and the PhyMask to F_FFFC_0000h (with zeros filling in for bits[11:0]). This results in a range from

0_001	0_0010_0000h to 0_0013_FFFFh.			
_lthree[1	_lthree[1:0]_core[3:0]_n0; MSR0000_0200			
	_lthree[1:0]_core[3:0]_n1; MSR0000_0202			
		n2; MSR0000_0204		
		n3; MSR0000_0206		
		_n4; MSR0000_0208		
		n5; MSR0000_020A n6; MSR0000_020C		
	_lthree[1:0]_core[3:0]_n7; MSR0000_020E			
Bits	Descripti			
63:48	Reserved.	Read-only,Error-on-write-1. Reset: Fixed,0000h.		
47:12	7:12 PhyBase: base address . Read-write. Reset: X_XXXX_XXXXh.			
11:3	Reserved. Read-only,Error-on-write-1. Reset: Fixed,000h.			
2:0	2:0 MemType : memory type . Read-write. Reset: XXXb. Address range from 00000h to 0FFFFh.			
	ValidValues:			
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		

MSR0000_020[1...F] [Variable-Size MTRRs Mask] (Core::X86::Msr::MtrrVarMask)

	= 1 10		
_lthree[1	:0]_core[3:0]_n0; MSR0000_0201		
_lthree[1	_lthree[1:0]_core[3:0]_n1; MSR0000_0203		
_lthree[1	:0]_core[3:0]_n2; MSR0000_0205		
	:0]_core[3:0]_n3; MSR0000_0207		
_lthree[1	:0]_core[3:0]_n4; MSR0000_0209		
_lthree[1	_lthree[1:0]_core[3:0]_n5; MSR0000_020B		
	_lthree[1:0]_core[3:0]_n6; MSR0000_020D		
_lthree[1	:0]_core[3:0]_n7; MSR0000_020F		
Bits	Description		
63:48	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0000h.		
47:12	PhyMask: address mask. Read-write. Reset: X_XXXX_XXXXh.		
11	Valid : valid . Read-write. Reset: X. 1=The variable-size MTRR pair is enabled.		
10:0	Reserved. Read-only,Error-on-write-1. Reset: Fixed,000h.		

MSR0000_0250 [Fixed-Size MTRRs] (Core::X86::Msr::MtrrFix_64K)

See Core::X86::Msr::MtrrVarBase for general MTRR information. Fixed MTRRs are enabled through Core::X86::Msr::MTRRdefType[MtrrDefTypeFixEn,MtrrDefTypeEn]. For addresses below 1MB, the appropriate Fixed MTRRs override the default access destination. Each fixed MTRR includes two bits, RdDram and WrDram, that determine the destination based on the access type. Writing reserved MemType values causes an error-on-write.

uetem	determine the destination based on the access type. Writing reserved Memitype values causes an error-on-write.		
_lthree[1	_lthree[1:0]_core[3:0]_nSIZE64K; MSR0000_0250		
Bits	Description		
63:61	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h.		
60	RdDram_64K_70000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
	range are marked as destined for DRAM.		
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
59	WrDram_64K_70000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
	the range are marked as destined for DRAM.		
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		

	Core	5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
58:56	MemType_64K_70000: memory type. Read-write. Reset: XXXb.			
30.30	ValidValues:			
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
55.53		Read-only,Error-on-write-1. Reset: Fixed,0h.		
52		_64K_60000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
) _		marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
51	WrDram	_64K_60000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
	the range	are marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
50:48		e_64K_60000: memory type. Read-write. Reset: XXXb.		
	ValidValu			
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
		Read-only,Error-on-write-1. Reset: Fixed,0h.		
		_64K_50000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
	range are marked as destined for DRAM.			
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
43		_64K_50000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
		are marked as destined for DRAM.		
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
42:40				
42.40	MemType_64K_50000: memory type. Read-write. Reset: XXXb. ValidValues:			
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
	711	INCOCI Y CU,		

36	RdDram_64K_40000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM.			
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
35	WrDram	_64K_40000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
	the range	are marked as destined for DRAM.		
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
34:32	MemType_64K_40000: memory type. Read-write. Reset: XXXb.			
	ValidValues:			
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
31:29	Reserved.	Read-only,Error-on-write-1. Reset: Fixed,0h.		
28	RdDram_64K_30000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the			
		marked as destined for DRAM.		
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
27		_64K_30000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
	the range	are marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.				
26:24	MemType_64K_30000: memory type. Read-write. Reset: XXXb.			
	ValidValues:			
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
23:21	Reserved.	Read-only,Error-on-write-1. Reset: Fixed,0h.		
20		_64K_20000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
		marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
19		_64K_20000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
		are marked as destined for DRAM.		
	-	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
10 : 5		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
18:16	MemType_64K_20000: memory type. Read-write. Reset: XXXb.			
	ValidValues:			

es to the set:
set:
sses to
sses to
set:
set:
es to the
set:
sses to
set:
ict.
1.

MSR0000_0258 [Fixed-Size MTRRs] (Core::X86::Msr::MtrrFix_16K_0)

See Core::X86::Msr::MtrrVarBase for general MTRR information. Fixed MTRRs are enabled through Core::X86::Msr::MTRRdefType[MtrrDefTypeFixEn,MtrrDefTypeEn]. For addresses below 1MB, the appropriate Fixed

MTRRs override the default access destination. Each fixed MTRR includes two bits, RdDram and WrDram, that determine the destination based on the access type. Writing reserved MemType values causes an error-on-write.

lthree[1:0]_core[3:0]_nSIZE16K0; MSR0000_0258

Bits	Description
63:61	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h.
60	RdDram_16K_9C000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to
	the range are marked as destined for DRAM.
	AccessType: Corou Y96: Mcru SVS, CEC[MtrrEivDramModEn] 2 Dood verito: Dood Error on verito 1, Docot

AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.

WrDram_16K_9C000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM.

AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.

58:56 **MemType_16K_9C000**: **memory type**. Read-write. Reset: XXXb.

ValidValues:

Value	Description
0h	UC or uncacheable.
1h	WC or write combining.
3h-2h	Reserved.
4h	WT or write through.
5h	WP or write protect.
6h	WB or write back.
7h	Reserved.

55:53 Reserved. Read-only, Error-on-write-1. Reset: Fixed, 0h.

RdDram_16K_98000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM.

AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.

WrDram_16K_98000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM.

AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.

50:48 **MemType_16K_98000**: **memory type**. Read-write. Reset: XXXb.

ValidValues:

Value	Description
0h	UC or uncacheable.
1h	WC or write combining.
3h-2h	Reserved.
4h	WT or write through.
5h	WP or write protect.
6h	WB or write back.
7h	Reserved.

47:45 Reserved. Read-only, Error-on-write-1. Reset: Fixed, 0h.

RdDram_16K_94000: **read DRAM**. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM.

AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.

		_16K_94000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
the range are marked as destined for DRAM. AccessType: Core: Y86::Mer::SVS_CEC[MtrrEixDramModEnl 2 Read syrite: Read Error on syrite 1 R				
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
42:40				
42:40	ValidValı			
	Value	Description Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
39:37		Read-only,Error-on-write-1. Reset: Fixed,0h.		
		_16K_90000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
30	range are	marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
35		_16K_90000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
		are marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
34:32	MemTyp	e_16K_90000: memory type. Read-write. Reset: XXXb.		
	ValidValues:			
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
31:29	Reserved.	Read-only,Error-on-write-1. Reset: Fixed,0h.		
28		_16K_8C000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to		
		are marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
27	WrDram_16K_8C000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to			
	the range are marked as destined for DRAM.			
AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Rese				
26.24	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
20:24	MemType_16K_8C000: memory type. Read-write. Reset: XXXb. ValidValues:			
	Value 0h	Description UC or uncacheable.		
	1h			
	3h-2h	WC or write combining. Reserved.		
	4h	WT or write through.		
	411	w i or write unough.		

	5h WP or write protect.				
	6h	WB or write back.			
	7h	Reserved.			
23:21	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h.				
20	RdDram_16K_88000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM.				
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
	Core::X80	5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
19		_16K_88000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM.			
		AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
18:16	MemTyp	e_16K_88000: memory type. Read-write. Reset: XXXb.			
	ValidValı	U U A			
	Value	Description			
	0h	UC or uncacheable.			
	1h	WC or write combining.			
	3h-2h	Reserved.			
	4h	WT or write through.			
	5h	WP or write protect.			
	6h	WB or write back.			
	7h	Reserved.			
15.12					
12	Reserved. Read-only, Error-on-write-1. Reset: Fixed,0h.				
12	RdDram_16K_84000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM.				
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.				
11	WrDram_16K_84000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to				
		are marked as destined for DRAM.			
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:				
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Kead-write : Read,Error-on-write-1. Reset:				
10:8		e_16K_84000: memory type. Read-write. Reset: XXXb.			
10.0	ValidValues:				
	Value	Description			
	0h	UC or uncacheable.			
	1h	WC or write combining.			
	3h-2h	Reserved.			
	4h	WT or write through.			
	5h	WP or write protect.			
	6h	WB or write back.			
	7h	Reserved.			
7.5					
7:5		Read-only, Error-on-write-1. Reset: Fixed,0h.			
4	RdDram_16K_80000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the				
	range are marked as destined for DRAM. Address range from 80000h to 83FFFh.				
	Core::X86::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:				
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.				
3	WrDram	_16K_80000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to			
		are marked as destined for DRAM. Address range from 80000h to 83FFFh.			

	Core::X86::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.					
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:					
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.				
2:0	MemType_16K_80000: memory type. Read-write. Reset: XXXb. Address range from 80000h to 83FFFh.					
	ValidValu	ues:				
	Value Description					
	Oh UC or uncacheable.					
	1h WC or write combining.					
	3h-2h Reserved.					
	4h WT or write through.					
	5h WP or write protect.					
	6h WB or write back.					
	7h Reserved.					

MSR0000_0259 [Fixed-Size MTRRs] (Core::X86::Msr::MtrrFix_16K_1)

See Core::X86::Msr::MtrrVarBase for general MTRR information. Fixed MTRRs are enabled through Core::X86::Msr::MTRRdefType[MtrrDefTypeFixEn,MtrrDefTypeEn]. For addresses below 1MB, the appropriate Fixed MTRRs override the default access destination. Each fixed MTRR includes two bits, RdDram and WrDram, that determine the destination based on the access type. Writing reserved MemType values causes an error-on-write.

lthree[1.	01 core	3.01 nSI	7F16K1.	MSR0000_	0259
		J.0 _11J1	LLIUILI,	TATOTOOOO_	_0233

	<u> </u>
Bits	Description
63:61	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h.
60	RdDram_16K_BC000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to
	the range are marked as destined for DRAM.
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
59	WrDram_16K_BC000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
	the range are marked as destined for DRAM.
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
	Core··X86··Msr··SYS_CFG[MtrrFixDramModEn] ? X · Fixed 0

58:56 MemType_16K_BC000: memory type. Read-write. Reset: XXXb.

ValidValues:

vana varaes.	
Value	Description
0h	UC or uncacheable.
1h	WC or write combining.
3h-2h	Reserved.
4h	WT or write through.
5h	WP or write protect.
6h	WB or write back.
7h	Reserved.

55:53 Reserved. Read-only, Error-on-write-1. Reset: Fixed, 0h.

RdDram_16K_B8000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM.

AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.

WrDram_16K_B8000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM.

AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.

50:48 **MemType_16K_B8000**: **memory type**. Read-write. Reset: XXXb.

	ValidValu	les:
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
47:45	Reserved.	Read-only,Error-on-write-1. Reset: Fixed,0h.
44		_16K_B4000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to
		are marked as destined for DRAM.
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
	Core::X80	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
43	WrDram	_16K_B4000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
	the range	are marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
42:40	<i>J</i> 1	e_16K_B4000: memory type. Read-write. Reset: XXXb.
	ValidValu	
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
39:37		Read-only,Error-on-write-1. Reset: Fixed,0h.
36		
the range are marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
35		_16K_B0000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
	the range are marked as destined for DRAM.	
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
34:32	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 32 MemType_16K_B0000: memory type. Read-write. Reset: XXXb.	
34:32	ValidValues:	
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	· ·
	6h	WP or write protect. WB or write back.
	7h	
21.20		Reserved.
		Read-only,Error-on-write-1. Reset: Fixed,0h.
28	KaDram	_16K_AC000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to

	the range are marked as destined for DRAM.				
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.				
27	WrDram_16K_AC000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to				
	the range	are marked as destined for DRAM.			
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.				
26:24	MemType_16K_AC000: memory type. Read-write. Reset: XXXb.				
	ValidValues:				
	Value Description				
	0h	UC or uncacheable.			
	1h	WC or write combining.			
	3h-2h	Reserved.			
	4h	WT or write through.			
	5h	WP or write protect.			
	6h	WB or write back.			
	7h	Reserved.			
22.21		Read-only,Error-on-write-1. Reset: Fixed,0h.			
20.21		_16K_A8000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to			
20		are marked as destined for DRAM.			
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
19		_16K_A8000: write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to			
		are marked as destined for DRAM.			
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.				
	MemType_16K_A8000: memory type. Read-write. Reset: XXXb.				
10.10	ValidValı				
	Value Description				
	0h	UC or uncacheable.			
	1h	WC or write combining.			
	3h-2h	Reserved.			
	4h	WT or write through.			
	5h	WP or write protect.			
	6h	WB or write back.			
	7h	Reserved.			
15.10					
12	RdDram_16K_A4000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to				
	the range are marked as destined for DRAM. AccessType: Core: Y86::Msr::SYS_CEC[MtrrEixDramModEn] 2 Read write: Read Error on write 1. Reset:				
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.				
11	WrDram_16K_A4000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to				
	the range are marked as destined for DRAM.				
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:				
		e_16K_A4000: memory type. Read-write. Reset: XXXb.			
10.0	ValidValı	U U I			
	Value	Description Description			
	0h	UC or uncacheable.			
	UII	OC of uncacheupic.			

	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
7:5	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.
4	RdDram	_16K_A0000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to
		are marked as destined for DRAM. Address range from A0000h to A3FFFh.
		6::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
3		_16K_A0000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
		are marked as destined for DRAM. Address range from A0000h to A3FFFh.
		6::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
2:0		e_16K_A0000 : memory type . Read-write. Reset: XXXb. Address range from A0000h to A3FFFh.
	ValidValues:	
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.

MSR0000_0268 [Fixed-Size MTRRs] (Core::X86::Msr::MtrrFix_4K_0)

See Core::X86::Msr::MtrrVarBase for general MTRR information. Fixed MTRRs are enabled through Core::X86::Msr::MTRRdefType[MtrrDefTypeFixEn,MtrrDefTypeEn]. For addresses below 1MB, the appropriate Fixed MTRRs override the default access destination. Each fixed MTRR includes two bits, RdDram and WrDram, that determine the destination based on the access type. Writing reserved MemType values causes an error-on-write.

detern	etermine the destination based on the access type. Writing reserved MemType values causes an error-on-write.		
_lthree[1	_lthree[1:0]_core[3:0]_nSIZE4K0; MSR0000_0268		
Bits	Description		
63:61	Reserved.	Read-only,Error-on-write-1. Reset: Fixed,0h.	
60	RdDram	_4K_C7000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
	range are	marked as destined for DRAM.	
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
59	WrDram	_4K_C7000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
	the range	are marked as destined for DRAM.	
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
58:56	MemTyp	e_4K_C7000: memory type. Read-write. Reset: XXXb.	
	ValidValues:		
	Value Description		
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	

	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
55:53	Reserved	Read-only,Error-on-write-1. Reset: Fixed,0h.
52	RdDram range are	_4K_C6000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM.
	Core::X8	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
51		_4K_C6000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
50:48		e_4K_C6000: memory type. Read-write. Reset: XXXb.
	ValidVal	
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
17:15		Read-only,Error-on-write-1. Reset: Fixed,0h.
44		_4K_C5000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
44		marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
43		_4K_C5000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
		are marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
42:40		e_4K_C5000: memory type. Read-write. Reset: XXXb.
	ValidVal	
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
39:37	Reserved	Read-only,Error-on-write-1. Reset: Fixed,0h.
36	RdDram	_4K_C4000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM.
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
35	WrDram	1_4K_C4000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM.
	are runge	are manned to declined for Data from

		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
24.22		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
34:32		e_4K_C4000: memory type. Read-write. Reset: XXXb.
	ValidValı	
	Value	Description LIG
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
31:29		. Read-only,Error-on-write-1. Reset: Fixed,0h.
28		_4K_C3000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
		marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
27		_4K_C3000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
26.24		e_4K_C3000: memory type. Read-write. Reset: XXXb.
20.21	ValidValı	, , , , , , , , , , , , , , , , , , ,
	Value	Description
	Oh	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
22.21		Read-only,Error-on-write-1. Reset: Fixed,0h.
20.21		_4K_C2000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
20		marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
19		1_4K_C2000: write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
		are marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
18:16	MemType_4K_C2000: memory type. Read-write. Reset: XXXb.	
	ValidValues:	
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	OH	WD of write back.

es to the eset:
eset:
eset:
sses to
sses to
set:
es to the
eset:
sses to
set:
set.
h.

MSR0000_0269 [Fixed-Size MTRRs] (Core::X86::Msr::MtrrFix_4K_1)

See Core::X86::Msr::MtrrVarBase for general MTRR information. Fixed MTRRs are enabled through Core::X86::Msr::MTRRdefType[MtrrDefTypeFixEn,MtrrDefTypeEn]. For addresses below 1MB, the appropriate Fixed MTRRs override the default access destination. Each fixed MTRR includes two bits, RdDram and WrDram, that determine the destination based on the access type. Writing reserved MemType values causes an error-on-write.

lthree[1:0]	core[3:0]	nSIZE4K1;	MSR0000	0269

Bits	Description
63:61	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h.

60	RdDram_4K_CF000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM.			
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
59		_4K_CF000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
	the range	are marked as destined for DRAM.		
	Core::X80	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
58:56		e_4K_CF000: memory type. Read-write. Reset: XXXb.		
	ValidValu	les:		
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
FF.F2				
		Read-only,Error-on-write-1. Reset: Fixed,0h.		
52	range are	_4K_CE000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
51	WrDram	_4K_CE000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
	the range	are marked as destined for DRAM.		
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X80	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
50:48	MemTyp	e_4K_CE000: memory type. Read-write. Reset: XXXb.		
	ValidValı	ies:		
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
		Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
47.45				
		Read-only,Error-on-write-1. Reset: Fixed,0h.		
44		_4K_CD000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
		marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
- 10		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
43	the range	_4K_CD000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
42:40	MemTyp	e_4K_CD000: memory type. Read-write. Reset: XXXb.		
	ValidValu	ies:		
	Value	Description		
		-		

	_	
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
39:37	Reserved.	Read-only,Error-on-write-1. Reset: Fixed,0h.
36	RdDram	_4K_CC000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
		marked as destined for DRAM.
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
	Core::X80	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
35		_4K_CC000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
		are marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
34:32		e_4K_CC000: memory type. Read-write. Reset: XXXb.
	ValidValu	
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
31:29		Read-only,Error-on-write-1. Reset: Fixed,0h.
28		_4K_CB000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
27	WrDram	_4K_CB000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
		are marked as destined for DRAM.
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
	Core::X80	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
26:24	MemTyp	e_4K_CB000: memory type. Read-write. Reset: XXXb.
	ValidValu	
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
23:21	Reserved.	Read-only,Error-on-write-1. Reset: Fixed,0h.
20		_4K_CA000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
	range are	marked as destined for DRAM.
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:

		5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
19		_4K_CA000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
10.10				
18:16		e_4K_CA000: memory type. Read-write. Reset: XXXb.		
	ValidValues:			
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
15:13	Reserved.	Read-only,Error-on-write-1. Reset: Fixed,0h.		
12		_4K_C9000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
		marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		S::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
11		_4K_C9000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
		are marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
10:8		e_4K_C9000: memory type. Read-write. Reset: XXXb.		
	ValidValu			
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	1h 3h-2h	WC or write combining. Reserved.		
	1h 3h-2h 4h	WC or write combining. Reserved. WT or write through.		
	1h 3h-2h 4h 5h	WC or write combining. Reserved. WT or write through. WP or write protect.		
	1h 3h-2h 4h 5h 6h	WC or write combining. Reserved. WT or write through. WP or write protect. WB or write back.		
	1h 3h-2h 4h 5h 6h 7h	WC or write combining. Reserved. WT or write through. WP or write protect. WB or write back. Reserved.		
	1h 3h-2h 4h 5h 6h 7h Reserved.	WC or write combining. Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h.		
7:5 4	1h 3h-2h 4h 5h 6h 7h Reserved.	WC or write combining. Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 4K_C8000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
	1h 3h-2h 4h 5h 6h 7h Reserved. RdDram	WC or write combining. Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 4K_C8000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM. Address range from C8000 to C8FFF.		
	1h 3h-2h 4h 5h 6h 7h Reserved. RdDram range are Core::X86	WC or write combining. Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 4K_C8000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM. Address range from C8000 to C8FFF. S::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.		
	1h 3h-2h 4h 5h 6h 7h Reserved. RdDram range are Core::X80 AccessTy	WC or write combining. Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. _4K_C8000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM. Address range from C8000 to C8FFF. 5::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
4	1h 3h-2h 4h 5h 6h 7h Reserved. RdDram range are Core::X80 AccessTy Core::X80	WC or write combining. Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 4K_C8000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM. Address range from C8000 to C8FFF. S::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: S::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
	1h 3h-2h 4h 5h 6h 7h Reserved. RdDram range are Core::X80 AccessTy Core::X80	WC or write combining. Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 4K_C8000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM. Address range from C8000 to C8FFF. 5::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 4K_C8000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
4	1h 3h-2h 4h 5h 6h 7h Reserved. RdDram range are Core::X80 AccessTy Core::X80 WrDram the range	WC or write combining. Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 4K_C8000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM. Address range from C8000 to C8FFF. S::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn]? Read-write: Read,Error-on-write-1. Reset: S::Msr::SYS_CFG[MtrrFixDramModEn]? X: Fixed,0. 4K_C8000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. Address range from C8000 to C8FFF.		
4	1h 3h-2h 4h 5h 6h 7h Reserved. RdDram range are Core::X80 AccessTy Core::X80 WrDram the range Core::X80	WC or write combining. Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 4K_C8000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM. Address range from C8000 to C8FFF. S::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn]? X : Fixed,0. 4K_C8000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. Address range from C8000 to C8FFF. S::Msr::SYS_CFG[MtrrFixDramModEn]? X : Fixed,0. 4K_C8000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. Address range from C8000 to C8FFF. S::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.		
4	1h 3h-2h 4h 5h 6h 7h Reserved. RdDram range are Core::X80 AccessTy Core::X80 WrDram the range Core::X80 AccessTy	Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 4K_C8000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM. Address range from C8000 to C8FFF. S::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn]? X : Fixed,0. 4K_C8000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. Address range from C8000 to C8FFF. S::Msr::SYS_CFG[MtrrFixDramModEn]? X : Fixed,0. 4K_C8000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. Address range from C8000 to C8FFF. S::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
3	1h 3h-2h 4h 5h 6h 7h Reserved. RdDram range are Core::X80 AccessTy Core::X80 AccessTy Core::X80 AccessTy Core::X80	Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 4K_C8000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM. Address range from C8000 to C8FFF. 5::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn]? X : Fixed,0. 4K_C8000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. Address range from C8000 to C8FFF. 5::Msr::SYS_CFG[MtrrFixDramModEn]? X : Fixed,0. 4K_C8000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. Address range from C8000 to C8FFF. 5::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn]? Read-write: Read,Error-on-write-1. Reset: 5::Msr::SYS_CFG[MtrrFixDramModEn]? X : Fixed,0.		
3	1h 3h-2h 4h 5h 6h 7h Reserved. RdDram range are Core::X80 AccessTy Core::X80 AccessTy Core::X80 AccessTy Core::X80 MemTyp	Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 4K_C8000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM. Address range from C8000 to C8FFF. Si:Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 4K_C8000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. Address range from C8000 to C8FFF. Si:Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 4K_C8000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. Address range from C8000 to C8FFF. Si:Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Si:Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. e_4K_C8000: memory type. Read-write. Reset: XXXb. Address range from C8000 to C8FFF.		
3	1h 3h-2h 4h 5h 6h 7h Reserved. RdDram range are Core::X80 AccessTy Core::X80 WrDram the range Core::X80 AccessTy Core::X80 MemTyp ValidValue	Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 4K_C8000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM. Address range from C8000 to C8FFF. Si:Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn]? Read-write: Read,Error-on-write-1. Reset: Si:Msr::SYS_CFG[MtrrFixDramModEn]? X: Fixed,0. 4K_C8000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. Address range from C8000 to C8FFF. Si:Msr::SYS_CFG[MtrrFixDramModEn] masks reads of the stored value. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] nasks reads of the stored value. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn]? Read-write: Read,Error-on-write-1. Reset: Si:Msr::SYS_CFG[MtrrFixDramModEn]? X: Fixed,0. e_4K_C8000: memory type. Read-write. Reset: XXXb. Address range from C8000 to C8FFF. les:		
3	1h 3h-2h 4h 5h 6h 7h Reserved. RdDram range are Core::X80 AccessTy Core::X80 AccessTy Core::X80 AccessTy Core::X80 MemTyp	Reserved. WT or write through. WP or write protect. WB or write back. Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h. 4K_C8000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM. Address range from C8000 to C8FFF. Si:Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 4K_C8000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. Address range from C8000 to C8FFF. Si:Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. 4K_C8000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM. Address range from C8000 to C8FFF. Si:Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Si:Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0. e_4K_C8000: memory type. Read-write. Reset: XXXb. Address range from C8000 to C8FFF.		

	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.

MSR0000_026A [Fixed-Size MTRRs] (Core::X86::Msr::MtrrFix_4K_2)

See Core::X86::Msr::MtrrVarBase for general MTRR information. Fixed MTRRs are enabled through Core::X86::Msr::MTRRdefType[MtrrDefTypeFixEn,MtrrDefTypeEn]. For addresses below 1MB, the appropriate Fixed MTRRs override the default access destination. Each fixed MTRR includes two bits, RdDram and WrDram, that determine the destination based on the access type. Writing reserved MemType values causes an error-on-write.

		nSIZE4K2; MSR0000_026A	
	Descripti		
	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h.		
60		_4K_D7000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
		marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
59		4K_D7000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
		are marked as destined for DRAM.	
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
58:56	MemTyp	e_4K_D7000: memory type. Read-write. Reset: XXXb.	
	ValidValı	ues:	
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
55:53	Reserved	Read-only,Error-on-write-1. Reset: Fixed,0h.	
52	RdDram	_4K_D6000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
	range are	marked as destined for DRAM.	
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
51		_4K_D6000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
		are marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
50:48	MemTyp	e_4K_D6000: memory type. Read-write. Reset: XXXb.	

50:40	Mem Type_4K_D6000: Memory type. Read-write. Reset: AAAb.
	\[\frac{1}{2} \fr

ValidValı	ıes:
Value	De

Value	Description	
0h	0h UC or uncacheable.	
1h	WC or write combining.	
3h-2h	Reserved.	
4h	WT or write through.	
5h	WP or write protect.	

	C1	Trum 1 1 1			
	6h	WB or write back.			
	7h	Reserved.			
47:45		Read-only,Error-on-write-1. Reset: Fixed,0h.			
44		_4K_D5000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM.			
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
43		_4K_D5000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM.			
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.				
42:40	MemType_4K_D5000: memory type. Read-write. Reset: XXXb.				
	ValidValı	V V.			
	Value	Description			
	0h	UC or uncacheable.			
	1h	WC or write combining.			
	3h-2h	Reserved.			
	4h	WT or write through.			
	5h	WP or write protect.			
	6h	WB or write back.			
	7h	Reserved.			
20.27					
		Read-only,Error-on-write-1. Reset: Fixed,0h.			
36	RdDram_4K_D4000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM.				
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.				
35		_4K_D4000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM.			
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
34:32	MemType_4K_D4000: memory type. Read-write. Reset: XXXb.				
	ValidValues:				
	Value	Description			
	0h	UC or uncacheable.			
	1h	WC or write combining.			
	3h-2h	Reserved.			
	4h	WT or write through.			
	5h	WP or write protect.			
	6h	WB or write back.			
	7h	Reserved.			
21,20					
	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h.				
28	RdDram_4K_D3000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM.				
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.				
27		_4K_D3000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to			
		are marked as destined for DRAM. pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
	3010210	onition 10_of Official Installination 11.11 incustor			

26:24	MemTyp	e_4K_D3000: memory type. Read-write. Reset: XXXb.
1	ValidValu	ies:
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
		Read-only,Error-on-write-1. Reset: Fixed,0h.
20		_4K_D2000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
_		marked as destined for DRAM.
	Core::X80	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
19		_4K_D2000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
-		are marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
10.10		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
18:16		e_4K_D2000: memory type. Read-write. Reset: XXXb.
	ValidValu	
	Value	Description I.G. or you perhaph lea
	0h	UC or uncacheable.
	1h 3h-2h	WC or write combining. Reserved.
	311-211 4h	
	5h	WT or write through. WP or write protect.
	6h	WB or write back.
	7h	Reserved.
15.12		Read-only,Error-on-write-1. Reset: Fixed,0h.
		_4K_D1000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
		marked as destined for DRAM.
-		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
11		_4K_D1000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
		are marked as destined for DRAM.
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
10:8	MemTyp	e_4K_D1000: memory type. Read-write. Reset: XXXb.
	ValidValues:	
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
7:5	Reserved.	Read-only,Error-on-write-1. Reset: Fixed,0h.

		_4K_D0000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
	range are marked as destined for DRAM. Address range from D0000h to D0FFFh.		
	Core::X86::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.		
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
3	WrDram	1_4K_D0000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
	the range	are marked as destined for DRAM. Address range from D0000h to D0FFFh.	
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.	
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
2:0	MemTyp	e_4K_D0000 : memory type . Read-write. Reset: XXXb. Address range from D0000h to D0FFFh.	
	ValidVal	ValidValues:	
	Value	Description	
	0h	UC or uncacheable.	
	1h	IAIC or verito combining	
	111	WC or write combining.	
	3h-2h	Reserved.	
		Ü	
	3h-2h	Reserved.	
	3h-2h 4h	Reserved. WT or write through.	

MSR0000_026B [Fixed-Size MTRRs] (Core::X86::Msr::MtrrFix_4K_3)

See Core::X86::Msr::MtrrVarBase for general MTRR information. Fixed MTRRs are enabled through Core::X86::Msr::MTRRdefType[MtrrDefTypeFixEn,MtrrDefTypeEn]. For addresses below 1MB, the appropriate Fixed MTRRs override the default access destination. Each fixed MTRR includes two bits, RdDram and WrDram, that determine the destination based on the access type. Writing reserved MemType values causes an error-on-write.

lthree[1:0]_core[3:0]_nSIZE4K3; MSR0000_026B

7h

Bits	Descripti	Description		
63:61	Reserved.	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h.		
60	RdDram_4K_DF000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the			
	range are	marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X80	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
59		_4K_DF000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
	the range	are marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
58:56	MemTyp	e_4K_DF000: memory type. Read-write. Reset: XXXb.		
	ValidValu	les:		
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		

55:53 Reserved. Read-only, Error-on-write-1. Reset: Fixed, 0h.

Reserved.

RdDram_4K_DE000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM.

		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
51	WrDram	_4K_DE000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
	the range	are marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
50:48		e_4K_DE000: memory type. Read-write. Reset: XXXb.
	ValidValu	
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
47:45	Reserved.	. Read-only,Error-on-write-1. Reset: Fixed,0h.
44		_4K_DD000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
		marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
43		_4K_DD000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
		are marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
42.40		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
42:40	ValidValı	e_4K_DD000: memory type. Read-write. Reset: XXXb.
	Value	Description
	Oh	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
39:37		Read-only,Error-on-write-1. Reset: Fixed,0h.
36		_4K_DC000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
30		marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
35		_4K_DC000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
		are marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
34:32	MemTyp	e_4K_DC000: memory type. Read-write. Reset: XXXb.
	ValidValu	ues:
	Value	Description
		-
	0h	UC or uncacheable.

	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
31:29	Reserved.	Read-only,Error-on-write-1. Reset: Fixed,0h.
28		_4K_DB000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
		marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
27	WrDram	_4K_DB000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
		are marked as destined for DRAM.
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
	Core::X80	5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
26:24	MemTyp	e_4K_DB000: memory type. Read-write. Reset: XXXb.
	ValidValu	ies:
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
23:21		Read-only,Error-on-write-1. Reset: Fixed,0h.
20		_4K_DA000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
20		marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
19		_4K_DA000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
		are marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
18:16		e_4K_DA000: memory type. Read-write. Reset: XXXb.
	ValidValı	les:
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
15:13		Read-only,Error-on-write-1. Reset: Fixed,0h.
		_4K_D9000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
12		marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
11		_4K_D9000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to

	the range are marked as destined for DRAM.		
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
10:8	0:8 MemType_4K_D9000: memory type. Read-write. Reset: XXXb.		
	ValidValı		
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
7:5		Read-only,Error-on-write-1. Reset: Fixed,0h.	
4		_4K_D8000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
		marked as destined for DRAM. Address range from D8000h to D8FFFh.	
		6::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
3		_4K_D8000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
		are marked as destined for DRAM. Address range from D8000h to D8FFFh.	
	Core::X86::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value. AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
2:0		e_4K_D8000: memory type. Read-write. Reset: XXXb. Address range from D8000h to D8FFFh.	
2.0	ValidValues:		
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
	/ 11	reserved.	

MSR0000_026C [Fixed-Size MTRRs] (Core::X86::Msr::MtrrFix_4K_4)

See Core::X86::Msr::MtrrVarBase for general MTRR information. Fixed MTRRs are enabled through Core::X86::Msr::MTRRdefType[MtrrDefTypeFixEn,MtrrDefTypeEn]. For addresses below 1MB, the appropriate Fixed MTRRs override the default access destination. Each fixed MTRR includes two bits, RdDram and WrDram, that determine the destination based on the access type. Writing reserved MemType values causes an error-on-write.

_lthree[1	_tthree[1:0]_core[3:0]_nSIZE4K4; MSR0000_026C		
Bits	Description		
63:61	Reserved. Read-only, Error-on-write-1. Reset: Fixed, 0h.		
60	RdDram_4K_E7000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
	range are marked as destined for DRAM.		
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
59	WrDram_4K_E7000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
	the range are marked as destined for DRAM.		
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		

	CorovX86	5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
58:56	MemType_4K_E7000: memory type. Read-write. Reset: XXXb.		
30.30	ValidValues:		
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
55.53		Read-only,Error-on-write-1. Reset: Fixed,0h.	
52		_4K_E6000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
32	range are	marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
51		_4K_E6000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM.	
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
50:48		e_4K_E6000: memory type. Read-write. Reset: XXXb.	
	ValidValı		
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
47:45	Reserved.	Read-only,Error-on-write-1. Reset: Fixed,0h.	
		_4K_E5000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
	range are marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
43		_4K_E5000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
		are marked as destined for DRAM.	
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
42:40		e_4K_E5000: memory type. Read-write. Reset: XXXb.	
	ValidValues:		
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	

	_		
	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h.		
36	range are	_4K_E4000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM.	
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
35		_4K_E4000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
33		are marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
24.22		e_4K_E4000: memory type. Read-write. Reset: XXXb.	
34.32	ValidValı		
		Description	
	Oh	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
		Read-only,Error-on-write-1. Reset: Fixed,0h.	
28		_4K_E3000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
		marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
27		_4K_E3000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
		are marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
26:24		e_4K_E3000: memory type. Read-write. Reset: XXXb.	
	ValidValues:		
		Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
23:21		Read-only,Error-on-write-1. Reset: Fixed,0h.	
20.21		_4K_E2000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
20		marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
19	WrDram	_4K_E2000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
		are marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
18:16		e_4K_E2000: memory type. Read-write. Reset: XXXb.	
	ValidValues:		

	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
15:13		Read-only,Error-on-write-1. Reset: Fixed,0h.
		_4K_E1000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
		marked as destined for DRAM.
-	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn]? Read-write: Read,Error-on-write-1. Reset:
	Core::X86	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
11	WrDram	_4K_E1000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
_		are marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
10:8		e_4K_E1000: memory type. Read-write. Reset: XXXb.
	ValidValu	
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
		Read-only,Error-on-write-1. Reset: Fixed,0h.
4		_4K_E0000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
		marked as destined for DRAM. Address range from E0000h to E0FFFh. 5::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.
-		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
3		4K_E0000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
	the range	are marked as destined for DRAM. Address range from E0000h to E0FFFh.
	Core::X86	6::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
2:0	<u> </u>	
	ValidValu	
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.

MSR0000_026D [Fixed-Size MTRRs] (Core::X86::Msr::MtrrFix_4K_5)

See Core::X86::Msr::MtrrVarBase for general MTRR information. Fixed MTRRs are enabled through Core::X86::Msr::MTRRdefType[MtrrDefTypeFixEn,MtrrDefTypeEn]. For addresses below 1MB, the appropriate Fixed MTRRs override the default access destination. Each fixed MTRR includes two bits, RdDram and WrDram, that determine the destination based on the access type. Writing reserved MemType values causes an error-on-write.

_lthree[1	three[1:0]_core[3:0]_nSIZE4K5; MSR0000_026D		
Bits	Description		
63:61	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h.		
60	RdDram_4K_EF000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
	range are marked as destined for DRAM.		
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
59	WrDram_4K_EF000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
	the range are marked as destined for DRAM.		
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
50.56	MomType AV FE000; mamory type Dood vyrite Decet YYYb		

58:56 **MemType_4K_EF000**: **memory type**. Read-write. Reset: XXXb.

ValidValues:

,	
Value	Description
0h	UC or uncacheable.
1h	WC or write combining.
3h-2h	Reserved.
4h	WT or write through.
5h	WP or write protect.
6h	WB or write back.
7h	Reserved.

55:53 Reserved. Read-only, Error-on-write-1. Reset: Fixed, 0h.

RdDram 4K EE000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM.

AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.

51 WrDram_4K_EE000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM.

AccessType: Core::X86::Msr::SYS CFG[MtrrFixDramModEn]? Read-write: Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn]? X : Fixed,0.

50:48 **MemType_4K_EE000**: **memory type**. Read-write. Reset: XXXb.

ValidValues:

Value	Description
0h	UC or uncacheable.
1h	WC or write combining.
3h-2h	Reserved.
4h	WT or write through.
5h	WP or write protect.
6h	WB or write back.
7h	Reserved.

47:45 Reserved. Read-only, Error-on-write-1. Reset: Fixed, 0h.

RdDram 4K ED000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM.

AccessType: Core::X86::Msr::SYS CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS CFG[MtrrFixDramModEn] ? X : Fixed,0.

43 WrDram_4K_ED000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write the range are marked as destined for DRAM.			
AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1.			
Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
42:40		e_4K_ED000: memory type. Read-write. Reset: XXXb.	
	ValidValı	V V.	
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
39:37	Reserved	Read-only,Error-on-write-1. Reset: Fixed,0h.	
36		_4K_EC000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
	range are	marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
35		4K_EC000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
		are marked as destined for DRAM.	
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
34:32	MemTyp	e_4K_EC000: memory type. Read-write. Reset: XXXb.	
	ValidValu	ues:	
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
31:29	Reserved.	. Read-only,Error-on-write-1. Reset: Fixed,0h.	
28	RdDram	_4K_EB000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
	range are	marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
27		_4K_EB000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
		are marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
26:24	MemType_4K_EB000: memory type. Read-write. Reset: XXXb.		
	ValidValues:		
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	

	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
23:21	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.	
20		_4K_EA000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
		marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
19		_4K_EA000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
		are marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
18:16		e_4K_EA000: memory type. Read-write. Reset: XXXb.	
10,10	ValidValı	V VA	
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	_		
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
		. Read-only,Error-on-write-1. Reset: Fixed,0h.	
12		_4K_E9000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
		marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
11		_4K_E9000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
		are marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
10:8	MemType_4K_E9000: memory type. Read-write. Reset: XXXb.		
	ValidValu		
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
7:5		Read-only,Error-on-write-1. Reset: Fixed,0h.	
4	RdDram_4K_E8000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
,	range are marked as destined for DRAM. Address range from E8000h to E8FFFh.		
		6::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
3		_4K_E8000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
		are marked as destined for DRAM. Address range from E8000h to E8FFFh.	
	00	· ··· · · · · · · · · · · · · · · · ·	

	Core::X86::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.				
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:				
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.				
2:0	MemType_4K_E8000: memory type. Read-write. Reset: XXXb. Address range from E8000h to E8FFFh.				
	ValidValu	ues:			
	Value	Description			
	0h	UC or uncacheable.			
	1h	WC or write combining.			
	3h-2h	Reserved.			
	4h	WT or write through.			
	5h	WP or write protect.			
	6h	WB or write back.			
	7h	Reserved.			

MSR0000_026E [Fixed-Size MTRRs] (Core::X86::Msr::MtrrFix_4K_6)

See Core::X86::Msr::MtrrVarBase for general MTRR information. Fixed MTRRs are enabled through Core::X86::Msr::MTRRdefType[MtrrDefTypeFixEn,MtrrDefTypeEn]. For addresses below 1MB, the appropriate Fixed MTRRs override the default access destination. Each fixed MTRR includes two bits, RdDram and WrDram, that determine the destination based on the access type. Writing reserved MemType values causes an error-on-write.

	determine the destination based on the access type. Writing reserved MemType values causes an error-on-write.			
_lthree[1	_lthree[1:0]_core[3:0]_nSIZE4K6; MSR0000_026E			
Bits	Description			
63:61	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.		
60	RdDram	_4K_F7000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
	range are	marked as destined for DRAM.		
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
59	WrDram_4K_F7000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to			
	the range are marked as destined for DRAM.			
	AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:			
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn]? X : Fixed,0.			
58:56	MemType_4K_F7000: memory type. Read-write. Reset: XXXb.			
	ValidValues:			
	Value Description			
	0h	UC or uncacheable.		

	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
ļL	/ 11	Reserved.

55:53 Reserved. Read-only, Error-on-write-1. Reset: Fixed, 0h.

RdDram_4K_F6000: read DRAM. 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM.

AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.

WrDram_4K_F6000: write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to the range are marked as destined for DRAM.

AccessType: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.

50:48 **MemType_4K_F6000**: **memory type**. Read-write. Reset: XXXb.

	ValidValı	166.
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
47.45		Read-only,Error-on-write-1. Reset: Fixed,0h.
44		_4K_F5000: read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
	range are	marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
43		_4K_F5000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM.
-		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
42.40		e_4K_F5000: memory type. Read-write. Reset: XXXb.
72,70	ValidValı	· · · · · · · · · · · · · · · · · · ·
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
39:37		Read-only,Error-on-write-1. Reset: Fixed,0h.
36	RdDram	_4K_F4000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
		marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
35		_4K_F4000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to are marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
34:32		e_4K_F4000: memory type. Read-write. Reset: XXXb.
	ValidValu	
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
31:29		Read-only,Error-on-write-1. Reset: Fixed,0h.
28	RdDram	_4K_F3000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the

	range are marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
27	WrDram	_4K_F3000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
	the range	are marked as destined for DRAM.
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
26:24	MemTyp	e_4K_F3000: memory type. Read-write. Reset: XXXb.
	ValidValı	les:
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
23.21		Read-only,Error-on-write-1. Reset: Fixed,0h.
20		_4K_F2000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
		marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
19		_4K_F2000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
		are marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
	MemType_4K_F2000: memory type. Read-write. Reset: XXXb.	
•	ValidValues:	
		Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
15:13		Read-only,Error-on-write-1. Reset: Fixed,0h.
12		_4K_F1000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
		marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
11		_4K_F1000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
		are marked as destined for DRAM.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		5::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
		e_4K_F1000: memory type. Read-write. Reset: XXXb.
	ValidValu	· · · ·
	Value	Description
	0h	UC or uncacheable.
		''

	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
7:5	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.	
4		_4K_F0000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM. Address range from F0000h to F0FFF.	
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
3		_4K_F0000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
		are marked as destined for DRAM. Address range from F0000h to F0FFF.	
		6::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
2:0		e_4K_F0000 : memory type . Read-write. Reset: XXXb. Address range from F0000h to F0FFFh.	
	ValidValues:		
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	

MSR0000_026F [Fixed-Size MTRRs] (Core::X86::Msr::MtrrFix_4K_7)

See Core::X86::Msr::MtrrVarBase for general MTRR information. Fixed MTRRs are enabled through Core::X86::Msr::MTRRdefType[MtrrDefTypeFixEn,MtrrDefTypeEn]. For addresses below 1MB, the appropriate Fixed MTRRs override the default access destination. Each fixed MTRR includes two bits, RdDram and WrDram, that

determ	ine the de	stination based on the access type. Writing reserved MemType values causes an error-on-write.	
_lthree[1	_lthree[1:0]_core[3:0]_nSIZE4K7; MSR0000_026F		
Bits	Descripti	on	
63:61	Reserved.	Read-only,Error-on-write-1. Reset: Fixed,0h.	
60		_4K_FF000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
59	WrDram_4K_FF000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
	the range	are marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
	Core::X86	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
58:56	6 MemType_4K_FF000: memory type. Read-write. Reset: XXXb.		
	ValidValues:		
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	

	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
55:53	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0h.		
52	RdDram	_4K_FE000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
		marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
51		_4K_FE000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
		are marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
50:48		e_4K_FE000: memory type. Read-write. Reset: XXXb.	
	ValidValu		
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
47:45	Reserved.	Read-only,Error-on-write-1. Reset: Fixed,0h.	
44	RdDram	_4K_FD000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
	range are	marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
43		_4K_FD000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
		are marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
42:40		e_4K_FD000: memory type. Read-write. Reset: XXXb.	
	ValidValu		
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
39:37	Reserved.	Read-only,Error-on-write-1. Reset: Fixed,0h.	
36	RdDram	_4K_FC000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the	
	range are	marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:	
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.	
35		_4K_FC000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to	
	the range	are marked as destined for DRAM.	

	Λ Τ			
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
34.32		e_4K_FC000: memory type. Read-write. Reset: XXXb.		
34.32	ValidValues:			
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
21.20				
		. Read-only,Error-on-write-1. Reset: Fixed,0h.		
28		_4K_FB000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the marked as destined for DRAM.		
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
27	WrDram	_4K_FB000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
	the range	are marked as destined for DRAM.		
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X8	6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.		
26:24	MemTyp	e_4K_FB000: memory type. Read-write. Reset: XXXb.		
	ValidValı	ues:		
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		
	7h	Reserved.		
23:21	Reserved	Read-only,Error-on-write-1. Reset: Fixed,0h.		
		_4K_FA000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the		
	range are	marked as destined for DRAM.		
	AccessTy	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
	Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.			
19		_4K_FA000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to		
		are marked as destined for DRAM.		
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:		
Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.				
18:16	16 MemType_4K_FA000: memory type. Read-write. Reset: XXXb. ValidValues:			
	Value	Description		
	0h	UC or uncacheable.		
	1h	WC or write combining.		
	3h-2h	Reserved.		
	4h	WT or write through.		
	5h	WP or write protect.		
	6h	WB or write back.		

	7h	Reserved.
15.13		
12	RdDram_4K_F9000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the range are marked as destined for DRAM.	
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset: 6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
11		1_4K_F9000 : write DRAM . 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
11		are marked as destined for DRAM.
)	pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
10:8		e_4K_F9000: memory type. Read-write. Reset: XXXb.
	ValidValı	ues:
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
7:5	Reserved	. Read-only,Error-on-write-1. Reset: Fixed,0h.
4		_4K_F8000 : read DRAM . 0=Read accesses to the range are marked as MMIO. 1=Read accesses to the
		marked as destined for DRAM. Address range from F8000h to F8FFFh.
		6::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
3		_4K_F8000 : write DRAM. 0=Write accesses to the range are marked as MMIO. 1=Write accesses to
		are marked as destined for DRAM. Address range from F8000h to F8FFFh. 6::Msr::SYS_CFG[MtrrFixDramEn,MtrrFixDramModEn] masks reads of the stored value.
		pe: Core::X86::Msr::SYS_CFG[MtrrFixDramModEn] ? Read-write : Read,Error-on-write-1. Reset:
		6::Msr::SYS_CFG[MtrrFixDramModEn] ? X : Fixed,0.
2:0		e_4K_F8000 : memory type . Read-write. Reset: XXXb. Address range from F8000h to F8FFFh.
	ValidValı	· · · ·
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.

MSR0000_0277 [Page Attribute Table] (Core::X86::Msr::PAT)

This re	s register specifies the memory type based on the PAT, PCD, and PWT bits in the virtual address page tables.		
_lthree[1	ee[1:0]_core[3:0]_thread[1:0]; MSR0000_0277		
Bits	Description		
63:59	Reserved. Read-only,Error-on-write-1. Reset: Fixed,00h.		
58:56	PA7MemType . Read-write. Reset: 0h. Default UC. MemType for {PAT, PCD, PWT} = 7h.		
	ValidValues:		
	Value Description		

	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
55:51	Reserved	Read-only,Error-on-write-1. Reset: Fixed,00h.
		Type. Read-write. Reset: 7h. Default UC. MemType for {PAT, PCD, PWT} = 6h.
I	ValidValı	**
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
47.43		Read-only,Error-on-write-1. Reset: Fixed,00h.
		Type. Read-write. Reset: 4h. Default WT. MemType for {PAT, PCD, PWT} = 5h.
42.40	ValidValı	
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
20.25		
		. Read-only,Error-on-write-1. Reset: Fixed,00h.
		Type . Read-write. Reset: 6h. Default WB. MemType for {PAT, PCD, PWT} = 4h.
	ValidValı	
	Value	Description LIG and a second s
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
		. Read-only,Error-on-write-1. Reset: Fixed,00h.
26:24		Type. Read-write. Reset: 0h. Default UC. MemType for {PAT, PCD, PWT} = 3h.
	ValidValu	
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.

	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
23:19	Reserved.	Read-only,Error-on-write-1. Reset: Fixed,00h.
		Type. Read-write. Reset: 7h. Default UC. MemType for {PAT, PCD, PWT} = 2h.
	ValidValu	ues:
	Value	Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
		. Read-only,Error-on-write-1. Reset: Fixed,00h.
10:8		Type. Read-write. Reset: 4h. Default WT. MemType for {PAT, PCD, PWT} = 1h.
	ValidValu	
		1
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.
		. Read-only,Error-on-write-1. Reset: Fixed,00h.
2:0		Type. Read-write. Reset: 6h. MemType for {PAT, PCD, PWT} = 0h.
	ValidValı	
		Description
	0h	UC or uncacheable.
	1h	WC or write combining.
	3h-2h	Reserved.
	4h	WT or write through.
	5h	WP or write protect.
	6h	WB or write back.
	7h	Reserved.

MSR0000_02FF [MTRR Default Memory Type] (Core::X86::Msr::MTRRdefType)

See Co	ee Core::X86::Msr::MtrrVarBase for general MTRR information.	
_lthree[1	1:0]_core[3:0]; MSR0000_02FF	
Bits	Description	
63:12	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0_0000_0000h.	
11	MtrrDefTypeEn: variable and fixed MTRR enable. Read-write. Reset: 0. 0=Fixed and variable MTRRs are not	
	enabled. 1=Core::X86::Msr::MtrrVarBase, and Core::X86::Msr::MtrrFix_64K through	
Core::X86::Msr::MtrrFix_4K_7 are enabled.		
10	MtrrDefTypeFixEn: fixed MTRR enable. Read-write. Reset: 0. 0=Core::X86::Msr::MtrrFix_64K through	
	Core::X86::Msr::MtrrFix_4K_7 are not enabled. 1=Core::X86::Msr::MtrrFix_64K through	
	Core::X86::Msr::MtrrFix_4K_7 are enabled. This field is ignored (and the fixed MTRRs are not enabled) if	
	$Core \cdot X86 \cdot Msr \cdot MTRR def Type[MtrrDef TypeFn] == 0$	

9:8	Reserved. Read-only, Error-on-write-1. Reset: Fixed, 0h.
7:0	MemType: memory type. Read-write. Reset: 00h.
	Description : If MtrrDefTypeEn == 1 then MemType specifies the memory type for memory space that is not
	specified by either the fixed or variable range MTRRs. If MtrrDefTypeEn == 0 then the default memory type for
	all of memory is UC.
	Valid encodings are {00000b, Core::X86::Msr::MtrrFix_64K through Core::X86::Msr::MtrrFix_4K_7[2:0]}.
	Other write values cause a GP(0).

2.1.14.2 MSRs - MSRC000_0xxx

See 1.3.3 [Register Mnemonics] for a description of the register naming convention. MSRs are accessed through x86 WRMSR and RDMSR instructions.

MSRC000_0080 [Extended Feature Enable] (Core::X86::Msr::EFER)			
SKINI	SKINIT Execution: 0000_0000_0000_0000h.		
_lthree[1	:0]_core[3:0]_thread[1:0]; MSRC000_0080		
Bits	Description		
63:16	Reserved. Read-only,Error-on-write-1. Reset: Fixed,0000_0000h.		
15	TCE : translation cache extension enable . Read-write. Reset: 0. 1=Translation cache extension is enabled. PDC		
	entries related to the linear address of the INVLPG instruction are invalidated. If this bit is 0 all PDC entries are		
	invalidated by the INVLPG instruction.		
14	FFXSE : fast FXSAVE/FRSTOR enable . Read-write. Reset: 0. 1=Enables the fast FXSAVE/FRSTOR		
	mechanism. A 64-bit operating system may enable the fast FXSAVE/FRSTOR mechanism if		
	(Core::X86::Cpuid::FeatureExtIdEdx[FFXSR] == 1). This bit is set once by the operating system and its value is		
	not changed afterwards.		
13	LMSLE : long mode segment limit enable . Read-write. Reset: 0. 1=Enables the long mode segment limit check		
	mechanism.		
12	SVME : secure virtual machine (SVM) enable . Reset: Fixed,0. 1=SVM features are enabled.		
	AccessType: Core::X86::Msr::VM_CR[SvmeDisable] ? Read-only,Error-on-write-1 : Read-write.		
11	NXE : no-execute page enable . Read-write. Reset: 0. 1=The no-execute page protection feature is enabled.		
10	LMA : long mode active . Read-only. Reset: 0. 1=Indicates that long mode is active. When writing the EFER		
	register the value of this bit must be preserved. Software must read the EFER register to determine the value of		
	LMA, change any other bits as required and then write the EFER register. An attempt to write a value that differs		
	from the state determined by hardware results in a #GP fault.		
9	Reserved. Read-only, Error-on-write-1. Reset: Fixed, 0.		
8	LME : long mode enable . Read-write. Reset: 0. 1=Long mode is enabled.		
7:1	Reserved. Read-only. Reset: Fixed,00h.		
0	SYSCALL : system call extension enable . Read-write. Reset: 0. 1=SYSCALL and SYSRET instructions are		
	enabled. This adds the SYSCALL and SYSRET instructions which can be used in flat addressed operating		
	systems as low latency system calls and returns.		

MSRC000_0081 [SYSCALL Target Address] (Core::X86::Msr::STAR) Read-write. Reset: 0000_0000_0000_0000h.

This register holds the target address used by the SYSCALL instruction and the code and stack segment selector bases used by the SYSCALL and SYSRET instructions.

_lthree[1:	0]_core[3:0]	_thread[1:0]	; MSRC000_	_0081

_lthree[1	:0]_core[3:0]_thread[1:0]; MSRC000_0081
Bits Description	
63:48	SysRetSel: SYSRET CS and SS. Read-write. Reset: 0000h.
47:32	SysCallSel: SYSCALL CS and SS. Read-write. Reset: 0000h.
31:0	Target: SYSCALL target address. Read-write. Reset: 0000_0000h.

MSRC000_0082 [Long Mode SYSCALL Target Address] (Core::X86::Msr::STAR64)

Read-	ead-write. Reset: 0000_0000_0000_0000h.		
_lthree[1	[1:0]_core[3:0]_thread[1:0]; MSRC000_0082		
Bits	Description		
63:0	LSTAR: long mode target address. Read-write. Reset: 0000_0000_0000h. Target address for 64-bit mode		
	calling programs. The address stored in this register must be in canonical form (if not canonical, a #GP fault		
	occurs)		

MSRC000_0083 [Compatibility Mode SYSCALL Target Address] (Core::X86::Msr::STARCOMPAT)

	<u>-</u>		
Read-	Read-write. Reset: 0000_0000_0000_0000h.		
_lthree[1	1:0]_core[3:0]_thread[1:0]; MSRC000_0083		
Bits	Description		
63:0	CSTAR : compatibility mode target address . Read-write. Reset: 0000_0000_0000_0000h. Target address for		
	compatibility mode. The address stored in this register must be in canonical form (if not canonical, a #GP fault		
	occurs).		

MSRC000_0084 [SYSCALL Flag Mask] (Core::X86::Msr::SYSCALL_FLAG_MASK)

	_lthree[1:0]_core[3:0]_thread[1:0]; MSRC000_0084	
	Bits Description	
63:32 Reserved. Read-only. Reset: Fixed,0000_0000h.		Reserved. Read-only. Reset: Fixed,0000_0000h.
	31:0	Mask: SYSCALL flag mask. Read-write. Reset: 0000_0000h. This register holds the EFLAGS mask used by the
		SYSCALL instruction. 1=Clear the corresponding EFLAGS bit when executing the SYSCALL instruction.

MSRC000_00E7 [Read-Only Max Performance Frequency Clock Count] (Core::X86::Msr::MPerfReadOnly)

R	Reset: 0000_0000_0000_0000h.	
_lt	_lthree[1:0]_core[3:0]_thread[1:0]; MSRC000_00E7	
E	Bits	Description
6	3:0	MPerfReadOnly: read-only maximum core clocks counter. Reset: 0000_0000_0000_0000h. Incremented by
		hardware at the P0 frequency while the core is in C0. In combination with Core::X86::Msr::APerfReadOnly, this
		is used to determine the effective frequency of the core. A read of this MSR in guest mode is affected by
		Core::X86::Msr::TscRateMsr. This field uses software P-state numbering. See
		Core::X86::Msr::HWCR[EffFreqCntMwait], 2.1.5 [Effective Frequency]. This register is not affected by writes to
		Core::X86::Msr::MPERF.
		AccessType: Core::X86::Msr::HWCR[EffFreqReadOnlyLock]? Read-only, Volatile: Read-write, Volatile.

MSRC000_00E8 [Read-Only Actual Performance Frequency Clock Count] (Core::X86::Msr::APerfReadOnly)

	= E
Reset:	0000_0000_0000_0000h.
_lthree[1	:0]_core[3:0]_thread[1:0]; MSRC000_00E8
Bits	Description
63:0	APerfReadOnly : read-only actual core clocks counter . Reset: 0000_0000_0000_0000h. This register
	increments in proportion to the actual number of core clocks cycles while the core is in C0. See
	Core::X86::Msr::MPerfReadOnly. This register is not affected by writes to Core::X86::Msr::APERF.
	AccessType: Core::X86::Msr::HWCR[EffFreqReadOnlyLock]? Read-only,Volatile: Read-write,Volatile.

MSRC000_00E9 [Instructions Retired Performance Count] (Core::X86::Msr::IRPerfCount)

	_ :		
Reset:	Reset: 0000_0000_0000_0000h.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSRC000_00E9		
Bits	Description		
63:0	IRPerfCount : instructions retired counter . Reset: 0000_0000_0000h. Dedicated Instructions Retired		
	register increments on once for every instruction retired. See Core::X86::Msr::HWCR[IRPerfEn].		
	AccessType: Core::X86::Msr::HWCR[EffFreqReadOnlyLock]? Read-only, Volatile: Read-write, Volatile.		

MSRC000_0100 [FS Base] (Core::X86::Msr::FS_BASE)

Read-write. Reset: 0000_0000_0000_0000h.			
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSRC000_0100		
Bits	Description		
63:0	FSBase : expanded FS segment base . Read-write. Reset: 0000_0000_0000h. This register provides access		
	to the expanded 64-bit FS segment base. The address stored in this register must be in canonical form (if not		
	canonical, a #GP fault fill occurs).		

MSRC000 0101 [GS Base] (Core::X86::Msr::GS BASE)

112011	112112000_0101 [00 2 400] (00100011211100_1		
Read-	Read-write. Reset: 0000_0000_0000_0000h.		
_lthree[:	_lthree[1:0]_core[3:0]_thread[1:0]; MSRC000_0101		
Bits	Description		
63:0	GSBase : expanded GS segment base . Read-write. Reset: 0000_0000_0000h. This register provides access		
	to the expanded 64-bit GS segment base. The address stored in this register must be in canonical form (if not		
	canonical, a #GP fault fill occurs).		

MSRC000_0102 [Kernel GS Base] (Core::X86::Msr::KernelGSbase)

Read-write. Reset: 0000_0000_0000_0000h.		
_lthree[1:0]_core[3:0]_thread[1:0]; MSRC000_0102		
Bits	Description	
63:0	KernelGSBase : kernel data structure pointer . Read-write. Reset: 0000_0000_0000_0000h. This register holds	
	the kernel data structure pointer which can be swapped with the GS_BASE register using the SwapGS instruction.	
	The address stored in this register must be in canonical form (if not canonical, a #GP fault occurs).	

MSRC000_0103 [Auxiliary Time Stamp Counter] (Core::X86::Msr::TSC_AUX)

Read-write, Volatile. Reset: 0000_0000_0000_0000h.		
_lthree[1:0]_core[3:0]_thread[1:0]; MSRC000_0103		
Bits	Description	
63:32	Reserved.	
31:0	TscAux : auxiliary time stamp counter data . Read-write, Volatile. Reset: 0000_0000h. It is expected that this is	
	initialized by privileged software to a meaningful value, such as a processor ID. This value is returned in the	
	RDTSCP instruction.	

MSRC000_0104 [Time Stamp Counter Ratio] (Core::X86::Msr::TscRateMsr)

Core::X86::Msr::TscRateMsr allows the hypervisor to control the guest's view of the Time Stamp Counter. It provides a multiplier that scales the value returned when Core::X86::Msr::TSC[TSC], Core::X86::Msr::MPERF[MPERF], and Core::X86::Msr::MPERF[ReadOnly[MPerfReadOnly]] are read by a guest running under virtualization. This allows the hypervisor to provide a consistent TSC, MPERF, and MPerfReadOnly rate for a guest process when moving that process between cores that have a differing P0 rate. The TSC Ratio MSR does not affect the value read from the TSC, MPERF, and MPerfReadOnly MSRs when read when in host mode or when virtualization is not being used or when accessed by code executed in system management mode (SMM) unless the SMM code is executed within a guest container. The TSC Ratio value does not affect the rate of the underlying TSC, MPERF, and MPerfReadOnly counters, or the value that gets written to the TSC, MPERF, and MPerfReadOnly MSRs counters on a write by either the host or the guest. The TSC Ratio MSR contains a fixed-point number in 8.32 format, which is 8 bits of integer and 32 bits of fraction. This number is the ratio of the desired P0 frequency to the P0 frequency of the core. The reset value of the TSC Ratio MSR is 1.0, which results in a guest frequency matches the core P0 frequency.

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC000_0104	
Bits	Description
63:40	Reserved. Read-only,Error-on-write-1. Reset: Fixed,00_0000h.
39:32	TscRateMsrInt : time stamp counter rate integer . Read-write. Reset: 01h. Specifies the integer part of the MSR
	TSC ratio value.
31:0	TscRateMsrFrac : time stamp counter rate fraction . Read-write. Reset: 0000_0000h. Specifies the fractional
	part of the MSR TSC ratio value.

MSR	MSRC000_0410 [MCA Interrupt Configuration] (Core::X86::Msr::McaIntrCfg)	
Read-	Read-write. Reset: 0000_0000_0000_0000h.	
MSRC00	00_0410	
Bits	Description	
63:16	Reserved.	
15:12	ThresholdLvtOffset . Read-write. Reset: 0h. For error thresholding interrupts, specifies the address of the LVT	
	entry in the APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see	
	Core::X86::Apic::ExtendedInterruptLvtEntries).	
11:8	Reserved.	
7:4	DeferredLvtOffset . Read-write. Reset: 0h.	
	Description : For deferred error interrupts, specifies the address of the LVT	
	entry in the APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see	
	APIC[530:500]).	
3:0	Reserved.	

2.1.14.2.1 MSRs - MSRC000_2xxx

The MCA registers including the legacy aliases (MSR0000_000[1:0], MSR0000_04xx) are mapped to MSRC000_2xxx. See 3.2.5 [MCA Banks].

2.1.14.3 MSRs - MSRC001_0xxx

See 1.3.3 [Register Mnemonics] for a description of the register naming convention. MSRs are accessed through x86 WRMSR and RDMSR instructions.

MSRC001_000[03] [Performance Event Select [3:0]] (Core::X86::Msr::PERF_LEGACY_CTL)	
Read-write. Reset: 0000_0000_0000_0000h.	
The legacy alias of Core::X86::Msr::PERF_CTL. See Core::X86::Msr::PERF_CTL.	
_lthree[1:0]_core[3:0]_thread[1:0]_n0; MSRC001_0000	
1:0]_core[3:0]_thread[1:0]_n1; MSRC001_0001	
1:0]_core[3:0]_thread[1:0]_n2; MSRC001_0002	
[:0]_core[3:0]_thread[1:0]_n3; MSRC001_0003	
Description	
Reserved.	
HostGuestOnly: count only host/guest events. Read-write. Reset: 0h.	
Reserved.	
EventSelect[11:8]: performance event select. Read-write. Reset: 0h.	
CntMask: counter mask. Read-write. Reset: 00h.	
Inv: invert counter mask. Read-write. Reset: 0.	
En: enable performance counter. Read-write. Reset: 0.	
Reserved.	
Int: enable APIC interrupt. Read-write. Reset: 0.	
Reserved.	
Edge: edge detect. Read-write. Reset: 0.	
OsUserMode: OS and user mode. Read-write. Reset: 0h.	
UnitMask : event qualification . Read-write. Reset: 00h. When selecting an event for which not all UnitMask bits	
are defined, the undefined UnitMask bits should be set to zero.	
EventSelect[7:0]: event select. Read-write. Reset: 00h.	

MSRC001_000[4...7] [Performance Event Counter [3:0]] (Core::X86::Msr::PERF_LEGACY_CTR)

17:0 Reserved.

Read-write, Volatile. Reset: 0000 0000 0000 0000h.		
The legacy alias of Core::X86::Msr::PERF_CTR. See Core::X86::Msr::PERF_CTR.		
_lthree[1:0]_core[3:0]_thread[1:0]_n0; MSRC001_0004		
_lthree[1:0]_core[3:0]_thread[1:0]_n1; MSRC001_0005		
_lthree[1:0]_core[3:0]_thread[1:0]_n2; MSRC001_0006		
_lthree[1:0]_core[3:0]_thread[1:0]_n3; MSRC001_0007		
Bits Description		
63:48 Reserved.		
47:0 CTR : performance counter value . Read-write, Volatile. Reset: 0000_0000_0000h.		

47:0	47:0 CTR: performance counter value. Read-write, Volatile. Reset: 0000_0000_0000h.		
MSR	MSRC001_0010 [System Configuration] (Core::X86::Msr::SYS_CFG)		
Reset: 0000_0000_0000_0000h.			
_lthree[1	:0]_core[3:0]; MSRC001_0010		
Bits	Description		
63:24	Reserved.		
23	SMEE : secure memory encryption enable . Reset: 0. 0=Memory encryption features are disabled. 1=Memory		
	encryption features are enabled. Once Core::X86::Msr::HWCR[SmmLock] is set, this bit cannot be cleared until a		
	reset. For enabling secure memory encryption see 2.1.4 [Memory Encryption].		
	AccessType: Core::X86::Msr::HWCR_thread0[SmmLock]? Read,Write-1-only: Read-write.		
22	Tom2ForceMemTypeWB: top of memory 2 memory type write back. Read-write. Reset: 0. 1=The default		
	memory type of memory between 4GB and Core::X86::Msr::TOM2 is write back instead of the memory type		
	defined by Core::X86::Msr::MTRRdefType[MemType]. For this bit to have any effect,		
	Core::X86::Msr::MTRRdefType[MtrrDefTypeEn] must be 1. MTRRs and PAT can be used to override this		
	memory type.		
21	MtrrTom2En: MTRR top of memory 2 enable. Read-write. Reset: 0. 0=Core::X86::Msr::TOM2 is disabled. 1=		
	Core::X86::Msr::TOM2 is enabled.		
20	MtrrVarDramEn: MTRR variable DRAM enable. Read-write. Reset: 0. Init: BIOS,1.		
	0=Core::X86::Msr::TOP_MEM and IORRs are disabled. 1=These registers are enabled.		
19	MtrrFixDramModEn: MTRR fixed RdDram and WrDram modification enable. Read-write. Reset: 0.		
	Check: 0. 0=Core::X86::Msr::MtrrFix_64K through Core::X86::Msr::MtrrFix_4K_7 [RdDram,WrDram] read		
	values is masked 00b; writing does not change the hidden value. 1=Core::X86::Msr::MtrrFix_64K through		
	Core::X86::Msr::MtrrFix_4K_7 [RdDram,WrDram] access type is Read-write. Not shared between threads.		
	Controls access to Core::X86::Msr::MtrrFix_64K through Core::X86::Msr::MtrrFix_4K_7 [RdDram ,WrDram].		
	This bit should be set to 1 during BIOS initialization of the fixed MTRRs, then cleared to 0 for operation.		
18	MtrrFixDramEn: MTRR fixed RdDram and WrDram attributes enable. Read-write. Reset: 0. Init: BIOS,1.		
	1=Enables the RdDram and WrDram attributes in Core::X86::Msr::MtrrFix_64K through		
	Core::X86::Msr::MtrrFix_4K_7.		

25	CpbDis : core performance boost disable . Read-write. Reset: 0. 0=CPB is requested to be enabled. 1=CPB is
	disabled. Specifies whether core performance boost is requested to be enabled or disabled. If core performance
	boost is disabled while a core is in a boosted P-state, the core automatically transitions to the highest performance
	non-boosted P-state.
24	TscFreqSel : TSC frequency select . Read-only. Reset: 1. 1=The TSC increments at the P0 frequency.
23:22	Reserved.
21	LockTscToCurrentP0 : lock the TSC to the current P0 frequency . Read-write. Reset: 0. 0=The TSC will count
	at the P0 frequency. 1=The TSC frequency is locked to the current P0 frequency at the time this bit is set and
	remains fixed regardless of future changes to the P0 frequency.
20	IoCfgGpFault : IO-space configuration causes a GP fault . Read-write. Reset: 0. 1=IO-space accesses to
	configuration space cause a GP fault. The fault is triggered if any part of the IO read/write address range is
	between CF8h and CFFh, inclusive. These faults only result from single IO instructions, not to string and REP IO
	instructions. This fault takes priority over the IO trap mechanism described by Core::X86::Msr::SMI_ON_IO_TRAP_CTL_STS.
10	Reserved.
19	
18	McStatusWrEn : machine check status write enable . Read-write. Reset: 0. 0=MCi_STATUS registers are readable; writing a non-zero pattern to these registers causes a general protection fault. 1=MCi_STATUS registers
	are read-write, including reserved fields; do not cause general protection faults; such writes update all
	implemented bits in these registers; All fields of all threshold registers are Read-write when accessed from MSR
	space, including Locked, except BlkPtr which is always read-only; McStatusWrEn does not change the access
	type for the thresholding registers accessed via configuration space.
	Description : McStatusWrEn can be used to debug machine check exception and interrupt handlers.
	See 3.1 [Machine Check Architecture].
17	Wrap32Dis: 32-bit address wrap disable . Read-write. Reset: 0. 1=Disable 32-bit address wrapping. Software
	can use Wrap32Dis to access physical memory above 4 Gbytes without switching into 64-bit mode. To do so,
	software should write a greater-than 4 Gbyte address to Core::X86::Msr::FS_BASE and
	Core::X86::Msr::GS_BASE. Then it would address ±2 Gbytes from one of those bases using normal memory
	reference instructions with a FS or GS override prefix. However, the INVLPG, FST, and SSE store instructions
	generate 32-bit addresses in legacy mode, regardless of the state of Wrap32Dis.
	Reserved.
14	RsmSpCycDis: RSM special bus cycle disable. Reset: 0. 0=A link special bus cycle, SMIACK, is generated on
	a resume from SMI.
	AccessType: Core::X86::Msr::HWCR[SmmLock] ? Read-only : Read-write.
13	SmiSpCycDis: SMI special bus cycle disable. Reset: 0. 0=A link special bus cycle, SMIACK, is generated when
	an SMI interrupt is taken.
10.11	AccessType: Core::X86::Msr::HWCR[SmmLock] ? Read-only : Read-write.
12:11	Reserved.
10	MonMwaitUserEn: MONITOR/MWAIT user mode enable. Read-write. Reset: 0. 0=The MONITOR and
	MWAIT instructions are supported only in privilege level 0; these instructions in privilege levels 1 to 3 cause a
	#UD exception. 1=The MONITOR and MWAIT instructions are supported in all privilege levels. The state of this bit is ignored if MonMwaitDis is set.
9	MonMwaitDis: MONITOR and MWAIT disable. Read-write. Reset: 0. 1=The MONITOR and MWAIT
3	opcodes become invalid. This affects what is reported back through Core::X86::Cpuid::FeatureIdEcx[Monitor].
8	IgnneEm: IGNNE port emulation enable. Read-write. Reset: 0. 1=Enable emulation of IGNNE port.
7	AllowFerrOnNe: allow FERR on NE. Read-write. Reset: 0. 0=Disable legacy FERR signaling and generate
,	FERR exception directly. 1=Legacy FERR signaling.
6:5	Reserved.
4	INVDWBINVD: INVD to WBINVD conversion. Read-write. Reset: 1. Check: 1. 1=Convert INVD to
	WBINVD.
	Description : This bit is required to be set for normal operation when any of the following are true:
	• An L2 is shared by multiple threads.

An L3 is shared by multiple cores.
 CC6 is enabled.
 Probe filter is enabled.

3 TlbCacheDis: cacheable memory disable. Read-write. Reset: 0. 1=Disable performance improvement that assumes that the PML4, PDP, PDE and PTE entries are in cacheable WB DRAM.
Description: Operating systems that maintain page tables in any other memory type must set the TlbCacheDis bit to insure proper operation.

 TlbCacheDis does not override the memory type specified by the SMM ASeg and TSeg memory regions controlled by Core::X86::Msr::SMMAddr Core::X86::Msr::SMMMask.

2:1 Reserved.
SmmLock: SMM code lock. Read, Write-1-only. Reset: 0. Init: BIOS,1. Check: 1. 1=SMM code in the ASeg and TSeg range and the SMM registers are read-only and SMI interrupts are not intercepted in SVM. See 2.1.12.1.10

MSRC001_001[6...8] [IO Range Base] (Core::X86::Msr::IORR_BASE)

Read-write.

Core::X86::Msr::IORR_BASE and Core::X86::Msr::IORR_MASK combine to specify the two sets of base and mask pairs for two IORR ranges. A core access, with address CPUAddr, is determined to be within IORR address range if the following equation is true:

CPUAddr[47:12] & PhyMask[47:12] == PhyBase[47:12] & PhyMask[47:12].

BIOS can use the IORRs to create an IO hole within a range of addresses that would normally be mapped to DRAM. It can also use the IORRs to re-assert a DRAM destination for a range of addresses that fall within a bigger IO hole that overlays DRAM.

_lthree[1:0]_core[3:0]_n0; MSRC001_0016 lthree[1:0]_core[3:0]_n1: MSRC001_0018

[Locking SMM].

_minec[1	.0]_core[5.0]_n1, M5rccoo1_0010
Bits	Description
63:48	Reserved.
47:12	PhyBase: physical base address. Read-write. Reset: X_XXXX_XXXh.
11:5	Reserved.
4	RdMem : read from memory . Read-write. Reset: X. 0=Read accesses to the range are directed to IO. 1=Read
	accesses to the range are directed to system memory.
3	WrMem : write to memory . Read-write. Reset: X. 0=Write accesses to the range are directed to IO. 1=Write
	accesses to the range are directed to system memory.
2:0	Reserved.

MSRC001_001[7...9] [IO Range Mask] (Core::X86::Msr::IORR_MASK)

Read-v	write. Reset: 0000_0000_0000_0000h.
See Co	ore::X86::Msr::IORR_BASE.
_lthree[1	:0]_core[3:0]_n0; MSRC001_0017
_lthree[1	:0]_core[3:0]_n1; MSRC001_0019
Bits	Description
63:48	Reserved.
47:12 PhyMask: physical address mask. Read-write. Reset: 0_0000_0000h.	
11	Valid . Read-write. Reset: 0. 1=The pair of registers that specifies an IORR range is valid.
10:0	Reserved.

MSRC001 001A [Top Of Memory] (Core::X86::Msr::TOP MEM)

WIGHT	Continuity (Concernotivity Concernotivity)
Read-	write.
_lthree[1	L:0]_core[3:0]; MSRC001_001A
Bits	Description
63:48	Reserved.
47:23	TOM[47:23]: top of memory . Read-write. Reset: XXX_XXXXh. Specifies the address that divides between

	MMIO and DRAM. This value is normally placed below 4G. From TOM to 4G is MMIO; below TOM is DRAM.
	See 2.1.6.3 [System Address Map].
22:0	Reserved.

MSRC001_001D [Top Of Memory 2] (Core::X86::Msr::TOM2)

Read-write.	
_lthree[1	:0]_core[3:0]; MSRC001_001D
Bits	Description
63:48	Reserved.
47:23	TOM2[47:23] : second top of memory . Read-write. Reset: XXX_XXXXh. Specifies the address divides between
	MMIO and DRAM. This value is normally placed above 4G. From 4G to TOM2 - 1 is DRAM; TOM2 and above
	is MMIO. See 2.1.6.3 [System Address Map]. This register is enabled by
	Core::X86::Msr::SYS_CFG[MtrrTom2En].
22:0	Reserved.

MSRC001_0022 [Machine Check Exception Redirection] (Core::X86::Msr::McExcepRedir)

Read-write. Reset: 0000_0000_0000_0000h.

CpuNameString0. Read-write. Reset: XXh.

This register can be used to redirect machine check exceptions (MCEs) to SMIs or vectored interrupts. If both RedirSmiEn and RedirVecEn are set, then undefined behavior results.

_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_0022	
Bits	Description	
63:10	Reserved.	
9	RedirSmiEn . Read-write. Reset: 0. 1=Redirect MCEs (that are directed to this core) to generate an SMI-trigger	
	IO cycle via Core::X86::Msr::SmiTrigIoCycle. The status is stored in	
	Core::X86::Smm::LocalSmiStatus[MceRedirSts].	
8	RedirVecEn . Read-write. Reset: 0. 1=Redirect MCEs (that are directed to this core) to generate a vectored	
	interrupt, using the interrupt vector specified in RedirVector.	
7:0	RedirVector. Read-write. Reset: 00h. See RedirVecEn.	

MSRC001_003[0...5] [Processor Name String] (Core::X86::Msr::ProcNameString)

Read-write.

These 6 registers hold the CPUID name string in ASCII. The state of these registers are returned by CPUID instructions, Core::X86::Cpuid::ProcNameStr0Eax through Core::X86::Cpuid::ProcNameStr2Edx. BIOS should set these registers to the product name for the processor as provided by AMD. Each register contains a block of 8 ASCII characters; the least byte corresponds to the first ASCII character of the block; the most-significant byte corresponds to the last character of the block. MSRC001_0030 contains the first block of the name string; MSRC001_0035 contains the last block of the name string.

the block. MSRC001_0030 contains the first block of the name string; MSRC001_0035 contains the last block of the	
name string.	
_lthree[1:0]_core[3:0]_thread[1:0]_n0; MSRC001_0030	
_lthree[1:0]_core[3:0]_thread[1:0]_n1; MSRC001_0031	
_lthree[1:0]_core[3:0]_thread[1:0]_n2; MSRC001_0032	
_lthree[1:0]_core[3:0]_thread[1:0]_n3; MSRC001_0033	
_lthree[1:0]_core[3:0]_thread[1:0]_n4; MSRC001_0034	
_lthree[1:0]_core[3:0]_thread[1:0]_n5; MSRC001_0035	
Bits Description	
63:56 CpuNameString7 . Read-write. Reset: XXh.	
55:48 CpuNameString6 . Read-write. Reset: XXh.	
47:40 CpuNameString5 . Read-write. Reset: XXh.	
39:32 CpuNameString4 . Read-write. Reset: XXh.	
31:24 CpuNameString3. Read-write. Reset: XXh.	
23:16 CpuNameString2. Read-write. Reset: XXh.	
15:8 CpuNameString1. Read-write. Reset: XXh.	

MSRC001_005[0...3] [IO Trap] (Core::X86::Msr::SMI_ON_IO_TRAP)

Read-write. Reset: 0000_0000_0000_0000h.

Core::X86::Msr::SMI_ON_IO_TRAP and Core::X86::Msr::SMI_ON_IO_TRAP_CTL_STS provide a mechanism for executing the SMI handler if a an access to one of the specified addresses is detected. Access address and access type checking is performed before IO instruction execution. If the access address and access type match one of the specified IO address and access types, then: (1) the IO instruction is not executed; (2) any breakpoint, other than the single-step breakpoint, set on the IO instruction is not taken (the single-step breakpoint is taken after resuming from SMM); and (3) issue the SMI-trigger IO cycle specified by Core::X86::Msr::SmiTrigIoCycle if enabled. The status is stored in Core::X86::Smm::LocalSmiStatus[IoTrapSts].

IO-space configuration accesses are special IO accesses. An IO access is defined as an IO-space configuration access when IO instruction address bits[31:0] are CFCh, CFDh, CFEh, or CFFh when IO-space configuration is enabled (IO::IoCfgAddr[ConfigEn]). The access address for a configuration space access is the current value of IO::IoCfgAddr[BusNo,Device,Function,RegNo]. The access address for an IO access that is not a configuration access is equivalent to the IO instruction address, bits[31:0].

The access address is compared with SmiAddr, and the instruction access type is compared with the enabled access types defined by ConfigSMI, SmiOnRdEn, and SmiOnWrEn. Access address bits[23:0] can be masked with SmiMask. IO and configuration space trapping to SMI applies only to single IO instructions; it does not apply to string and REP IO instructions. The conditional GP fault described by Core::X86::Msr::HWCR[IoCfgGpFault] takes priority over this trap.

_lthree[1:0]_core[3:0]_thread[1:0]_n0; MSRC001_0050
_lthree[1:0]_core[3:0]_thread[1:0]_n1; MSRC001_0051
_lthree[1:0]_core[3:0]_thread[1:0]_n2; MSRC001_0052
lthree[1:0] core[3:0] thread[1:0] n3: MSRC001 0053

	_ttillee[1.0]_cole[5.0]_ttilleatt[1.0]_ib5, M5Nc5001_0055	
Bits	Description	
63	SmiOnRdEn: enable SMI on IO read. Read-write. Reset: 0. 1=Enables SMI generation on a read access.	
62	SmiOnWrEn: enable SMI on IO write. Read-write. Reset: 0. 1=Enables SMI generation on a write access.	
61	ConfigSmi : configuration space SMI . Read-write. Reset: 0. 0=IO access (that is not an IO-space configuration	
	access). 1=Configuration access.	
60:56	Reserved.	
55:32	SmiMask[23:0]. Read-write. Reset: 00_0000h. 1=Do not mask address bit. 0=Mask address bit. SMI IO trap	
	mask.	
31:0	SmiAddr[31:0] Read-write Reset: 0000 0000h SMI IO trap address	

MSRC001_0054 [IO Trap Control] (Core::X86::Msr::SMI_ON_IO_TRAP_CTL_STS)

_lthree[1	:0]_core[3:0]_thread[1:0]; MSRC001_0054
Bits	Description
63:32	Reserved. Read-only. Reset: Fixed,0000_0000h.
31:16	Reserved.
15	IoTrapEn : IO trap enable . Read-write. Reset: 0. 1=Enable IO and configuration space trapping specified by
	Core::X86::Msr::SMI_ON_IO_TRAP and Core::X86::Msr::SMI_ON_IO_TRAP_CTL_STS.
14:8	Reserved.
7	SmiEn3. Read-write. Reset: 0. 1=The trap Core::X86::Msr::SMI_ON_IO_TRAP_n[3] is enabled.
6	Reserved.
5	SmiEn2 . Read-write. Reset: 0. 1=The trap Core::X86::Msr::SMI_ON_IO_TRAP_n[2] is enabled.
4	Reserved.
3	SmiEn1. Read-write. Reset: 0. 1=The trap Core::X86::Msr::SMI_ON_IO_TRAP_n[1] is enabled.
2	Reserved.
1	SmiEn0. Read-write. Reset: 0. 1=The trap Core::X86::Msr::SMI_ON_IO_TRAP_n[0] is enabled.
0	Reserved.

MSRC001_0055 [Reserved.] (Core::X86::Msr::IntPend)

Read-only. Reset: Fixed,0000_0000_0000h.
_lthree[1:0]_core[3:0]; MSRC001_0055

]	Bits	Description
(53:0	Reserved. Read-only. Reset: Fixed,0000_0000_0000h.

MSRC001_0056 [SMI Trigger IO Cycle] (Core::X86::Msr::SmiTrigIoCycle)

Read-write. Reset: 0000 0000 0000 0000h.

See 2.1.12.1.3 [SMI Sources And Delivery]. This register specifies an IO cycle that may be generated when a local SMI trigger event occurs. If IoCycleEn is set and there is a local SMI trigger event, then the IO cycle generated is a byte read or write, based on IoRd, to address IoPortAddress. If the cycle is a write, then IoData contains the data written. If the cycle is a read, the value read is discarded. If IoCycleEn is clear and a local SMI trigger event occurs, then undefined behavior results.

DCIIu V	behavior results.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_0056		
Bits	Description		
63:27	Reserved.		
26	IoRd : IO Read . Read-write. Reset: 0. 0=IO write. 1=IO read.		
25	IoCycleEn : IO cycle enable . Read-write. Reset: 0. 1=The SMI trigger IO cycle is enabled to be generated.		
24	Reserved.		
23:16	IoData. Read-write. Reset: 00h.		
15:0	IoPortAddress. Read-write. Reset: 0000h.		

MSRC001_0058 [MMIO Configuration Base Address] (Core::X86::Msr::MmioCfgBaseAddr)

		- 0 /	
	See 2.1.7 [Configuration Space] for a description of MMIO configuration space.		
_lthree[1	_lthree[1:0]_core[3:0]; MSRC001_0058		
Bits	Descripti	on	
63:48	Reserved.	. Read-only. Reset: Fixed,0000h.	
47:20	MmioCfg	gBaseAddr[47:20]: MMIO configuration base address bits[47:20]. Read-write. Reset:	
	XXX_XX	XXXh. Specifies the base address of the MMIO configuration range.	
19:6	Reserved.	. Read-only. Reset: Fixed,0000h.	
5:2	BusRang	e: bus range identifier. Read-write. Reset: 0h. Specifies the number of buses in the MMIO	
		tion space range. The size of the MMIO configuration space is 1 MB times the number of buses.	
	ValidValı	ues:	
	Value	Description	
	0h	1	
	1h	2	
	2h	4	
	3h	8	
	4h	16	
	5h	32	
	6h	64	
	7h	128	
	8h	256	
	Fh-9h	Reserved	
1	Reserved.		
0	Enable. F	Read-write. Reset: 0. 1=MMIO configuration space is enabled.	

MSRC001_0061 [P-state Current Limit] (Core::X86::Msr::PStateCurLim)

_lthree[1	_lthree[1:0]_core[3:0]; MSRC001_0061		
Bits	Description		
63:7	Reserved.		
6:4	PstateMaxVal : P-state maximum value . Read,Error-on-write,Volatile. Reset: XXXb. Specifies the lowest-		
	performance non-boosted P-state (highest non-boosted value) allowed. Attempts to change		

		Core::X86::Msr::PStateCtl[PstateCmd] to a lower-performance P-state (higher value) are clipped to the value of
		this field.
	3	Reserved. Read-only. Reset: Fixed,0.
2	2:0	CurPstateLimit: current P-state limit. Read, Error-on-write, Volatile. Reset: XXXb. Specifies the highest-
		performance P-state (lowest value) allowed. CurPstateLimit is always bounded by
		Core::X86::Msr::PStateCurLim[PstateMaxVal]. Attempts to change the CurPstateLimit to a value greater (lower
		performance) than Core::X86::Msr::PStateCurLim[PstateMaxVal] leaves CurPstateLimit unchanged.

MSRC001_0062 [P-state Control] (Core::X86::Msr::PStateCtl)

_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_0062		
Bits	Description		
63:3	Reserved. Read,Error-on-write-1.		
2:0	PstateCmd : P-state change command . Read-write. Reset: XXXb. Cold reset value varies by product; after a		
	warm reset, value initializes to the P-state the core was in prior to the reset. Writes to this field cause the core to		
	change to the indicated non-boosted P-state number, specified by Core::X86::Msr::PStateDef. 0=P0, 1=P1, etc. P-		
	state limits are applied to any P-state requests made through this register. Reads from this field return the last		
	written value, regardless of whether any limits are applied.		

MSRC001_0063 [P-state Status] (Core::X86::Msr::PStateStat)

	= ' ',		
Read	Read,Error-on-write,Volatile.		
_lthree	_lthree[1:0]_core[3:0]; MSRC001_0063		
Bits	Description		
63:3	Reserved.		
2:0	CurPstate: current P-state. Read, Error-on-write, Volatile. Reset: XXXb. This field provides the frequency		
	component of the current non-boosted P-state of the core (regardless of the source of the P-state change, including		
	Core::X86::Msr::PStateCtl[PstateCmd]. 0=P0, 1=P1, etc. The value of this field is updated when the COF		
	transitions to a new value associated with a P-state.		

MSRC001_006[4...B] [P-state [7:0]] (Core::X86::Msr::PStateDef)

Read-write.

Each of these registers specify the frequency and voltage associated with each of the core P-states.

The CpuVid field in these registers is required to be programmed to the same value in all cores of a processor, but are allowed to be different between processors in a multi-processor system. All other fields in these registers are required to be programmed to the same value in each core of the coherent fabric.

be programmed to the same value in each core of the conferent fabric.
_lthree[1:0]_core[3:0]_thread[1:0]_n0; MSRC001_0064
_lthree[1:0]_core[3:0]_thread[1:0]_n1; MSRC001_0065
_tthree[1:0]_core[3:0]_thread[1:0]_n2; MSRC001_0066
_lthree[1:0]_core[3:0]_thread[1:0]_n3; MSRC001_0067
_lthree[1:0]_core[3:0]_thread[1:0]_n4; MSRC001_0068
_lthree[1:0]_core[3:0]_thread[1:0]_n5; MSRC001_0069
_lthree[1:0]_core[3:0]_thread[1:0]_n6; MSRC001_006A
_tthree[1:0]_core[3:0]_thread[1:0]_n7; MSRC001_006B

Bits Description

- **PstateEn**. Read-write. Reset: X. 0=The P-state specified by this MSR is not valid. 1=The P-state specified by this MSR is valid. The purpose of this register is to indicate if the rest of the P-state information in the register is valid after a reset; it controls no hardware.
- 62:32 Reserved.
- 31:30 **IddDiv**: **current divisor**. Read-write. Reset: XXb. See IddValue.
- 29:22 **IddValue**: **current value**. Read-write. Reset: XXXXXXXXb. After a reset, IddDiv and IddValue combine to specify the expected maximum current dissipation of a single core that is in the P-state corresponding to the MSR number. These values are intended to be used to create ACPI-defined _PSS objects. The values are expressed in amps; they are not intended to convey final product power levels; they may not match the power levels specified in the Power and Thermal Datasheets.
- 21:14 **CpuVid[7:0]**: **core VID**. Read-write. Reset: XXXXXXXXb.

CpuDfsId: core divisor ID. Read-write. Reset: XXXXXXb. Specifies the core frequency divisor; see CpuFid. For values [1Ah:08h], 1/8th integer divide steps supported down to VCO/3.25 (Note, L3/L2 fifo logic related to 4-cycle data heads-up requires core to be 1/3 of L3 frequency or higher). For values [30h:1Ch], 1/4th integer divide steps supported down to VCO/6 (DID[0] should zero if DID[5:0]>1Ah). (Note, core and L3 frequencies below 400MHz are not supported by the architecture). Core supports DID up to 30h, but L3 must be 2Ch (VCO/5.5) or less.

ValidValues:

vana van	vand values:		
Value	Description		
00h	Off		
07h-01h	Reserved.		
08h	VCO/1		
09h	VCO/1.125		
1Ah-	VCO/ <value 8=""></value>		
0Ah			
1Bh	Reserved.		
1Ch	VCO/ <value 8=""></value>		
1Dh	Reserved.		
1Eh	VCO/ <value 8=""></value>		
1Fh	Reserved.		
20h	VCO/ <value 8=""></value>		
21h	Reserved.		
22h	VCO/ <value 8=""></value>		
23h	Reserved.		
24h	VCO/ <value 8=""></value>		
25h	Reserved.		
26h	VCO/ <value 8=""></value>		
27h	Reserved.		
28h	VCO/ <value 8=""></value>		
29h	Reserved.		
2Ah	VCO/ <value 8=""></value>		
2Bh	Reserved.		
2Ch	VCO/ <value 8=""></value>		
3Fh-	Reserved.		
2Dh			

7:0 **CpuFid[7:0]**: **core frequency ID**. Read-write. Reset: XXh. Specifies the core frequency multiplier. The core COF is a function of CpuFid and CpuDid, and defined by CoreCOF.

ValidValues:

Value	Description
0Fh-00h	Reserved.
FFh-	<value>*25</value>
10h	

MSRC001_0073 [C-state Base Address] (Core::X86::Msr::CStateBaseAddr)

Read-write. Reset: 0000_0000_0000_0000h.			
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_0073		
Bits	Bits Description		
63:16	Reserved.		
15:0	CstateAddr : C-state address . Read-write. Reset: 0000h. Specifies the IO addresses trapped by the core for C-		
	state entry requests. A value of 0 in this field specifies that the core does not trap any IO addresses for C-state		
	entry. Writing values greater than FFF8h into this field result in undefined behavior. All other values cause the		

core to trap IO addresses CstateAddr through CstateAddr+7.

MSRC001_0074 [CPU Watchdog Timer] (Core::X86::Msr::CpuWdtCfg)

Read-write. Reset: 0000_0000_0000_0000h.

lthree[1:0] core[3:0]; MSRC001 0074

Bits Description

63:7 Reserved.

6:3 **CpuWdtCountSel: CPU watchdog timer count select.** Read-write. Reset: 0h. CpuWdtCountSel and CpuWdtTimeBase together specify the time period required for the WDT to expire. The time period is ((the multiplier specified by CpuWdtCountSel) * (the time base specified by CpuWdtTimeBase)). The actual timeout period may be anywhere from zero to one increment less than the values specified, due to non-deterministic behavior.

ValidValues:

Value	Description
0h	4095
1h	2047
2h	1023
3h	511
4h	255
5h	127
6h	63
7h	31
8h	8191
9h	16383
Fh-Ah	Reserved

2:1 **CpuWdtTimeBase**: **CPU watchdog timer time base**. Read-write. Reset: 0h. Specifies the time base for the timeout period specified in CpuWdtCountSel.

ValidValues:

	Value	Description		
	0h	1.31ms		
	1h	1.28us		
	3h-2h	Reserved		

0 **CpuWdtEn: CPU watchdog timer enable.** Read-write. Reset: 0. Init: BIOS,1. 1=The WDT is enabled.

MSRC001_0111 [SMM Base Address] (Core::X86::Msr::SMM_BASE)

Reset: 0000 0000 0003 0000h.

This holds the base of the SMM memory region. The value of this register is stored in the save state on entry into SMM (see 2.1.12.1.5 [SMM Save State]) and it is restored on returning from SMM. The 16-bit CS (code segment) selector is loaded with SmmBase[19:4] on entering SMM. SmmBase[3:0] is required to be 0. The SMM base address can be changed in two ways:

- The SMM base address, at offset FF00h in the SMM state save area, may be changed by the SMI handler. The RSM instruction updates SmmBase with the new value.
- Normal WRMSR access to this register.

lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_0111

Bits	Description	
63:32	Reserved.	
31:0	SmmBase . Reset: 0003_0000h.	
	AccessType: Core::X86::Msr::HWCR[SmmLock]? Read-only: Read-write.	

MSRC001_0112 [SMM TSeg Base Address] (Core::X86::Msr::SMMAddr)

Configurable. Reset: 0000 0000 0000 0000h.

See 2.1.12.1 [System Management Mode (SMM)] and 2.1.6.3.1 [Memory Access to the Physical Address Space]. See Core::X86::Msr::SMMMask for more information about the ASeg and TSeg address ranges.

Each CPU access, directed at CPUAddr, is determined to be in the TSeg range if the following is true:

CPUAddr[47:17] & TSegMask[47:17] == TSegBase[47:17] & TSegMask[47:17].

For example, if TSeg spans 256 KB and starts at the 1 MB address. The Core::X86::Msr::SMMAddr[TSegBase[47:17]] would be set to 0010_0000h and the Core::X86::Msr::SMMMask[TSegMask[47:17]] to FFFC_0000h (with zeros filling in for bits[16:0]). This results in a TSeg range from 0010_0000 to 0013_FFFFh.

lthree[1:0] core[3:0]: MSRC001_0112

_iunee[]	1.0]_C01e[3.0], M3KC001_0112
Bits	Description
63:48	Reserved.
47:17	TSegBase[47:17]: TSeg address range base. Configurable. Reset: 0000_0000h. AccessType:
	(Core::X86::Msr::HWCR[SmmLock])? Read-only : Read-write.
16:0	Reserved.

MSRC001_0113 [SMM TSeg Mask] (Core::X86::Msr::SMMMask)

Configurable. Reset: 0000 0000 0000 0000h.

See 2.1.12.1 [System Management Mode (SMM)].

The ASeg address range is located at a fixed address from A0000h–BFFFFh. The TSeg range is located at a variable base (specified by Core::X86::Msr::SMMAddr[TSegBase[47:17]]) with a variable size (specified by

Core::X86::Msr::SMMMask[TSegMask[47:17]]). These ranges provide a safe location for SMM code and data that is not readily accessible by non-SMM applications. The SMI handler can be located in one of these two ranges, or it can be located outside these ranges. These ranges must never overlap each other.

This register specifies how accesses to the ASeg and TSeg address ranges are controlled as follows:

- If [A,T] Valid == 1, then:
 - If in SMM, then:
 - If [A, T]Close == 0, then the accesses are directed to DRAM with memory type as specified in [A, T]MTypeDram.
 - If [A, T]Close == 1, then instruction accesses are directed to DRAM with memory type as specified in [A, T]MTypeDram and data accesses are directed at MMIO space and with attributes based on [A, T]MTypeIoWc.
 - If not in SMM, then the accesses are directed at MMIO space with attributes based on [A,T]MTvpeIoWc.

See 2.1.6.3.1.1 [Determining Memory Type].				
_lthree[1	_lthree[1:0]_core[3:0]; MSRC001_0113			
Bits	Descripti	on		
63:48	Reserved.			
47:17	TSegMas	k[47:17]: TSeg address range mask. Configurable. Reset: 0000_0000h. See		
	Core::X80	6::Msr::SMMAddr. AccessType: (Core::X86::Msr::HWCR[SmmLock])? Read-only: Read-write.		
16:15	16:15 Reserved.			
14:12	4:12 TMTypeDram : TSeg address range memory type . Configurable. Reset: 0h. Specifies the memory type for			
	SMM accesses to the TSeg range that are directed to DRAM. AccessType:			
	(Core::X86::Msr::HWCR[SmmLock])? Read-only : Read-write.			
	ValidValues:			
	Value Description			
	0h UC or uncacheable.			
	1h	WC or write combining.		

	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
11	Reserved		
10:8	AMType	Dram: ASeg Range Memory Type. Configurable. Reset: 0h. Specifies the memory type for SMM	
		to the ASeg range that are directed to DRAM. AccessType: (Core::X86::Msr::HWCR[SmmLock])?	
	Read-only	y : Read-write.	
	ValidValu	ues:	
	Value	Description	
	0h	UC or uncacheable.	
	1h	WC or write combining.	
	3h-2h	Reserved.	
	4h	WT or write through.	
	5h	WP or write protect.	
	6h	WB or write back.	
	7h	Reserved.	
7:6	Reserved		
5	TMType	IoWc: non-SMM TSeg address range memory type. Configurable. Reset: 0. 0=UC (uncacheable).	
		rite combining). Specifies the attribute of TSeg accesses that are directed to MMIO space. AccessType:	
	`	36::Msr::HWCR[SmmLock]) ? Read-only : Read-write.	
4		IoWc: non-SMM ASeg address range memory type. Configurable. Reset: 0. 0=UC (uncacheable).	
	,	write combining). Specifies the attribute of ASeg accesses that are directed to MMIO space. AccessType:	
	`	36::Msr::HWCR[SmmLock]) ? Read-only : Read-write.	
3		send TSeg address range data accesses to MMIO. Configurable. Reset: 0. 1=When in SMM, direct	
		sses in the TSeg address range to MMIO space. See AClose. AccessType:	
2	•	36::Msr::HWCR[SmmLock]) ? Read-only : Read-write. send ASeg address range data accesses to MMIO. Configurable. Reset: 0. 1=When in SMM, direct	
		sses in the ASeg address range to MMIO space. [A,T]Close allows the SMI handler to access the MMIO	
		ated in the same address region as the [A,T]Seg. When the SMI handler is finished accessing the MMIO	
		must clear the bit. Failure to do so before resuming from SMM causes the CPU to erroneously read the	
		from MMIO space. AccessType: (Core::X86::Msr::HWCR[SmmLock])? Read-only : Read-write.	
1		enable TSeg SMM address range. Configurable. Reset: 0. 1=The TSeg address range SMM enabled.	
		pe: (Core::X86::Msr::HWCR[SmmLock]) ? Read-only : Read-write.	
0	AValid: enable ASeg SMM address range . Configurable. Reset: 0. 1=The ASeg address range SMM enabled.		
	AccessTy	pe: (Core::X86::Msr::HWCR[SmmLock]) ? Read-only : Read-write.	

MSRC001	0114 [Virtus	al Machine	Control (Core	e::X86::Msr::VM	(CR)
MOKCOOL	V114 VII tud	ii iviaciiiile	Common (Con	X0UIVISI V IV	LCN

Reset: 0000_0000_0000_0000h.		
_lthree[1	:0]_core[3:0]_thread[1:0]; MSRC001_0114	
Bits	Description	
63:32	Reserved.	
31:5	Reserved. Read-only,Error-on-write-1. Reset: 000_0000h.	
4	SymeDisable : SVME disable . Configurable. Reset: 0. 0=Core::X86::Msr::EFER[SVME] is read-write.	
	1=Core::X86::Msr::EFER[SVME] is Read-only,Error-on-write-1. See Lock for the access type of this field.	
	Attempting to set this field when (Core::X86::Msr::EFER[SVME]==1) causes a #GP fault, regardless of the state	
	of Lock. See the APM2 section titled "Enabling SVM" for software use of this field.	
3 Lock : SVM lock . Read-only, Volatile. Reset: 0. 0=SvmeDisable is read-write. 1=SvmeDisable is read-		
	Core::X86::Msr::SvmLockKey[SvmLockKey] for the condition that causes hardware to clear this field.	

2	Reserved.	
1	InterceptInit : intercept INIT . Read-write, Volatile. Reset: 0. 0=INIT delivered normally. 1=INIT translated into a	
	SX interrupt. This bit controls how INIT is delivered in host mode. This bit is set by hardware when the SKINIT	
	instruction is executed.	
0	Reserved.	

MSRC001_0115 [IGNNE] (Core::X86::Msr::IGNNE)

	,
Reset:	0000_0000_0000_0000h.
_lthree[1	:0]_core[3:0]_thread[1:0]; MSRC001_0115
Bits	Description
63:32	Reserved.
31:1	Reserved. Read-only,Error-on-write-1. Reset: 0000_0000h.
0	IGNNE : current IGNNE state . Read-write. Reset: 0. This bit controls the current state of the processor internal
	IGNNE signal.

MSRC001_0116 [SMM Control] (Core::X86::Msr::SMM_CTL)

Reset: 0000 0000 0000 0000h.

The bits in this register are processed in the order of: SmmEnter, SmiCycle, SmmDismiss, RsmCycle and SmmExit. However, only the following combination of bits may be set in a single write (all other combinations result in undefined behavior):

- SmmEnter and SmiCycle.
- SmmEnter and SmmDismiss.
- SmmEnter, SmiCycle and SmmDismiss.
- SmmExit and RsmCycle.

Software is responsible for ensuring that SmmEnter and SmmExit operations are properly matched and are not nested.

_lthree[1	1:0]_core[3:0]_thread[1:0]; MSRC001_0116		
Bits Description			
63:5	Reserved. Error-on-read,Error-on-write-1. Reset: 000_0000_0000h.		
4	RsmCycle: send RSM special cycle. Reset: 0. 1=Send a RSM special cycle.		
	AccessType: Core::X86::Msr::HWCR[SmmLock]? Error-on-read, Error-on-write: Write-only, Error-on-read.		
3	SmmExit: exit SMM. Reset: 0. 1=Exit SMM.		
	AccessType: Core::X86::Msr::HWCR[SmmLock]? Error-on-read, Error-on-write: Write-only, Error-on-read.		
2	2 SmiCycle: send SMI special cycle. Reset: 0. 1=Send a SMI special cycle.		
	AccessType: Core::X86::Msr::HWCR[SmmLock]? Error-on-read, Error-on-write: Write-only, Error-on-read.		
1	SmmEnter: enter SMM. Reset: 0. 1=Enter SMM.		
	AccessType: Core::X86::Msr::HWCR[SmmLock]? Error-on-read, Error-on-write: Write-only, Error-on-read.		
0	0 SmmDismiss: clear SMI . Reset: 0. 1=Clear the SMI pending flag.		
	AccessType: Core::X86::Msr::HWCR[SmmLock]? Error-on-read, Error-on-write: Write-only, Error-on-read.		

MSRC001_0117 [Virtual Machine Host Save Physical Address] (Core::X86::Msr::VM_HSAVE_PA)

Reset:	0000_0000_0000_0000h.
_lthree[1	:0]_core[3:0]_thread[1:0]; MSRC001_0117
Bits Description	
63:48	Reserved. Read-only, Error-on-write-1. Reset: 0000h.
47:12	VM_HSAVE_PA: physical address of host save area. Read-write. Reset: 0_0000_0000h. This register contains
	the physical address of a 4-KB region where VMRUN saves host state and where vm-exit restores host state from.
	Writing this register causes a #GP if (FFFF_FFFF_Fh >= VM_HSAVE_PA >= FFFD_0000_0h) or if either the
	TSEG or ASEG regions overlap with the range defined by this register.
11:0 Reserved. Read-only, Error-on-write-1. Reset: 000h.	

MSRC001_0118 [SVM Lock Key] (Core::X86::Msr::SvmLockKey)

Read-write. Reset: Fixed,0000_0000 0000 0000h.

_lthree[1	[1:0]_core[3:0]_thread[1:0]; MSRC001_0118	
Bits	Description	
63:0	SvmLockKey: SVM lock key. Read-write. Reset: Fixed,0000_0000_0000h. Writes to this register when	
	(Core::X86::Msr::VM_CR[Lock] == 0) modify SvmLockKey. If ((Core::X86::Msr::VM_CR[Lock] == 1) &&	
	(SvmLockKey!=0) && (The write value == The value stored in SvmLockKey)) for a write to this register then	
	hardware updates Core::X86::Msr::VM_CR[Lock]=0.	

MSRC001_011A [Local SMI Status] (Core::X86::Msr::LocalSmiStatus)

Read-write. Reset: 0000_0000_0000_0000h.

This register returns the same information that is returned in Core::X86::Smm::LocalSmiStatus portion of the SMM save state. The information in this register is only updated when Core::X86::Msr::SMM_CTL[SmmDismiss] is set by software.

lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_011A

_run cc[.oj_core[o.oj_uneud[i.oj, hishcoor_offi	
Bits	Description	
63:32	Reserved.	
31:0	LocalSmiStatus. Read-write. Reset: 0000_0000h. See Core::X86::Smm::LocalSmiStatus.	

MSRC001_011B [AVIC Doorbell] (Core::X86::Msr::AvicDoorbell)

	/		
Reset:	0000_0000_0000_0000h.		
The A	picId is a physical APIC Id; not valid for logical APIC ID.		
See C	e Core::X86::Cpuid::SvmRevFeatIdEdx[AVIC].		
_lthree[1	1:0]_core[3:0]_thread[1:0]; MSRC001_011B		
Bits	Description		
63:8	Reserved. Error-on-read, Error-on-write-1. Reset: 00_0000_0000h.		
7:0	ApicId: APIC ID [7:0]. Write-only, Error-on-read. Reset: 00h.		

MSRC001_011E [VM Page Flush] (Core::X86::Msr::VMPAGE_FLUSH)

Writes to this MSR cause 4KB of encrypted, guest-tagged data to be flushed from caches if present. lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_011E Bits Description 63:12 VirtualAddr. Reset: X_XXXX_XXXX_XXXXh. Guest physical address of page to flush. AccessType: Core::X86::Msr::SYS_CFG[SMEE]? Write-only, Error-on-read: Error-on-read, Error-on-write. **ASID**. Reset: XXXh. ASID to use for flush. Writing reserved values generates #GP. 11:0 AccessType: Core::X86::Msr::SYS CFG[SMEE]? Write-only, Error-on-read: Error-on-read, Error-on-write. ValidValues: Value Description 000h Reserved. 00Fh-Valid ASID 001h FFFh-Reserved. 010h

MSRC001_0130 [Guest Host Communication Block] (Core::X86::Msr::GHCB)

Read-write. Reset: 0000_0000_0000h.	
If Core::X86::Msr::GHCB is accessed in hypervisor mode, #GP is generated.	
_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_0130	
Bits Description	
63:0 GHCBPA . Read-write. Reset: 0000_0000_0000h. Guest physical address of GHCB.	

MSRC001_0131 [SEV Status] (Core::X86::Msr::SEV_Status)

Read,Error-on-write. Reset: 0000_0000_0000_0000h.
lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_0131

Bits	Description
63:2	Reserved.
1	SevEsEnabled . Read,Error-on-write. Reset: 0. 1=The guest was launched with the Sev-ES feature enabled in VMCB offset 90h.
0	SevEnabled . Read,Error-on-write. Reset: 0. 1=The guest was launched with SEV feature enabled in VMCB offset 90h.

MSRC001_0140 [OS Visible Work-around Length] (Core::X86::Msr::OSVW_ID_Length)

Read-write. Reset: 0000_0000_0000_0000h.			
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_0140		
Bits	Description		
63:16	Reserved.		
15:0	OSVWIdLength: OS visible work-around ID length . Read-write. Reset: 0000h. See the Revision Guide for the		
	definition of this field; see 1.2 [Reference Documents].		

MSRC001_0141 [OS Visible Work-around Status] (Core::X86::Msr::OSVW_Status)

Read-	write. Reset: 0000_0000_0000_0000h.
_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_0141
Bits	Description
63:0	OsvwStatusBits: OS visible work-around status bits. Read-write. Reset: 0000_0000_0000_0000h. See the
	Revision Guide for the definition of this field; see 1.2 [Reference Documents].

MSRC001_020[0...A] [Performance Event Select [5:0]] (Core::X86::Msr::PERF_CTL)

WISK	JUU1_UZU[[UA] [Performance Event Select [5:0]] (Core::X80:::WSF::PERF_CTL)	
Read-	write. Rese	et: 0000_0000_0000_0000h.	
See 2.	1.15 [Perfo	ormance Monitor Counters]. Core::X86::Msr::PERF_LEGACY_CTL is an alias of	
MSRC	0001_020[6,4,2,0].	
_lthree[1	:0]_core[3:0]_	_thread[1:0]_n0; MSRC001_0200	
_lthree[1	:0]_core[3:0]_	_thread[1:0]_n1; MSRC001_0202	
		_thread[1:0]_n2; MSRC001_0204	
		_thread[1:0]_n3; MSRC001_0206	
	_lthree[1:0]_core[3:0]_thread[1:0]_n4; MSRC001_0208		
	_lthree[1:0]_core[3:0]_thread[1:0]_n5; MSRC001_020A		
Bits	Descripti	on	
63:42	Reserved.		
41:40	HostGue	stOnly: count only host/guest events. Read-write. Reset: 0h.	
	ValidValu	ues:	
	Value	Description	
	0h	Count all events, irrespective of guest/host.	
	1h	Count guest events if [SVME] == 1.	
	2h	Count host events if [SVME] == 1.	
	3h	Count all guest and host events if [SVME] == 1.	
39:36	Reserved.		
35:32	EventSel	ect[11:8]: performance event select. Read-write. Reset: 0h.	
31:24	CntMask	x: counter mask . Read-write. Reset: 00h. Controls the number of events counted per clock cycle.	
	ValidValı	ues:	

Value	Description		
00h	The corresponding PERF_CTR[5:0] register increments by the number of events occurring in a clock		
	cycle. Maximum number of events in one cycle is 32.		
7Fh-01h	When Inv == 0, the corresponding PERF_CTR[5:0] register increments by 1, if the number of events		
	occurring in a clock cycle is greater than or equal to the CntMask value. When Inv == 1, the		
	corresponding PERF_CTR[5:0] register increments by 1, if the number of events occurring in a clock		
	cycle is less than CntMask value.		

	FFh- 80h	Reserved.	
23		rt counter mask. Read-write. Reset: 0. See CntMask.	
22		le performance counter. Read-write. Reset: 0. 1=Performance event counter is enabled.	
21	Reserved.	•	
20			
19	Reserved		
18	Edge: edge detect. Read-write. Reset: 0. 0=Level detect. 1=Zero-to-one Edge detect. Read-write. The edge count mode increments the counter when a transition happens on the monitored event. If the event selected is changed without disabling the counter, an extra edge is falsely detected when the first event is a static 0 and the second event is a static one. To avoid this false edge detection, disable the counter when changing the event and then enable the counter with a second MSR write.		
17:16	OsUserM	Iode: OS and user mode. Read-write. Reset: 0h.	
	ValidValu		
	Value	Description	
	0h	Count no events.	
	1h	Count user events (CPL>0).	
	2h	Count OS events (CPL=0).	
	3h	Count all events, irrespective of the CPL.	
15:8	event spe- stated, the sub-event UnitMask obvious f	k: event qualification. Read-write. Reset: 00h. Each UnitMask bit further specifies or qualifies the cified by EventSelect. All events selected by UnitMask are simultaneously monitored. Unless otherwise a UnitMask values shown may be combined (logically ORed) to select any desired combination of the s for a given event. In some cases, certain combinations can result in misleading counts, or the a value is an ordinal rather than a bit mask. These situations are described where applicable, or should be room the event descriptions. For events where no UnitMask table is shown, the UnitMask is Unused. ecting an event for which not all UnitMask bits are defined, the undefined UnitMask bits should be set	
7:0	EventSele correspon	ect[7:0]: event select. Read-write. Reset: 00h. EventSelect[11:0] = {EventSelect[11:8], ect[7:0]}. EventSelect specifies the event or event duration in a processor unit to be counted by the ding PERF_CTR[5:0] register. The events are specified in 2.1.15.4 [Core Performance Monitor . Some events are reserved; when a reserved event is selected, the results are undefined.	

MSRC001_020[1...B] [Performance Event Counter [5:0]] (Core::X86::Msr::PERF_CTR)

See Core::X86::Msr::PERF_CTL. Core::X86::Msr::PERF_LEGACY_CTR is an alias of MSRC001_020[7,5,3,1]. Also can be read via x86 instructions RDPMC ECX=[05:00].

_lthree[1:0]_core[3:0]_thread[1:0]_n0; MSRC001_0201

_lthree[1:0]_core[3:0]_thread[1:0]_n1; MSRC001_0203

_lthree[1:0]_core[3:0]_thread[1:0]_n2; MSRC001_0205

_lthree[1:0]_core[3:0]_thread[1:0]_n3; MSRC001_0207

_lthree[1:0]_core[3:0]_thread[1:0]_n4; MSRC001_0209

_lthree[1:0]_core[3:0]_thread[1:0]_n5; MSRC001_020B

Bits Description

63:48 Reserved. Read-only. Reset: Fixed,0000h.

47:0 CTR: performance counter value. Read-write, Volatile. Reset: 0000_0000_0000h.

MSRC001_023[0A] [L3 Performance Event Select [5:0]] (Core::X86::Ms	1CIILSFIIICCIg)

Read-write. Reset: 0000_0000_0000_0000h.
lthree[1:0]_n0; MSRC001_0230
lthree[1:0]_n1; MSRC001_0232
lthree[1:0]_n2; MSRC001_0234

	:0]_n3; MSR0	
	ee[1:0]_n4; MSRC001_0238 ee[1:0]_n5; MSRC001_023A	
	Descripti	
63:56		Iask . Read-write. Reset: 00h. Controls which of the 8 threads in the complex are being counted. One or ads must be selected.
	ValidVal	
	Bit	Description
	[0]	Core 0 Thread 0 mask.
	[1]	Core 0 Thread 1 mask.
	[2]	Core 1 Thread 0 mask.
	[3]	Core 1 Thread 1mask.
	[4]	Core 2 Thread 0 mask.
	[5]	Core 2 Thread 1 mask.
	[6]	Core 3 Thread 0 mask.
	[7]	Core 3 Thread 1 mask.
55:52	Reserved	
51:48	SliceMas	k. Read-write. Reset: 0h. Controls which L3 slices are counting this event. One or more Slices must be
	selected.	Ç .
	ValidVal	ues:
	Bit	Description
	[0]	L3 Slice 0 mask.
	[1]	L3 Slice 1 mask.
	[2]	L3 Slice 2 mask.
	[3]	L3 Slice 3 mask.
47:23	Reserved	
22	Enable: l	Enable L3 performance counter. Read-write. Reset: 0. 1=Enable.
21:16	Reserved	,
15:8		k: event qualification. Read-write. Reset: 00h. Each UnitMask bit further specifies or qualifies the
		cified by EventSelect. All events selected by UnitMask are simultaneously monitored. Unless otherwise
		e UnitMask values shown may be combined (logically ORed) to select any desired combination of the
		s for a given event. In some cases, certain combinations can result in misleading counts, or the
		a value is an ordinal rather than a bit mask. These situations are described where applicable, or should be
		rom the event descriptions. For events where no UnitMask table is shown, the UnitMask is Unused.
	when sel to zero.	ecting an event for which not all UnitMask bits are defined, the undefined UnitMask bits should be set
7:0		: event select. Read-write. Reset: 00h.
7:0	Eventsei	. event select. Read-write. Reset: 0011.

MSRC001_023[1...B] [L3 Performance Event Counter [5:0]] (Core::X86::Msr::ChL3Pmc)

Reset: 0000_0000_0000_0000h.
Also can be read via x86 instructions RDPMC ECX=[0F:0A].
_lthree[1:0]_n0; MSRC001_0231
_lthree[1:0]_n1; MSRC001_0233
_lthree[1:0]_n2; MSRC001_0235
_lthree[1:0]_n3; MSRC001_0237
_lthree[1:0]_n4; MSRC001_0239
_lthree[1:0]_n5; MSRC001_023B
Bits Description
63:49 Reserved.
48 Overflow . Read-write. Reset: 0.
47:32 CountHi . Read-write, Volatile. Reset: 0000h.
31:0 CountLo. Read-write, Volatile. Reset: 0000_0000h.

MSRO	MSRC001_024[06] [Data Fabric Performance Event Select [3:0]] (Core::X86::Msr::DF_PERF_CTL)		
Read-	Read-write. Reset: 0000_0000_0000_0000h.		
See 2.	See 2.1.15 [Performance Monitor Counters].		
Note:	To get meaningful data, each of the counters should be similarly programmed across events selected.		
	RC001_0240		
	RC001_0242 RC001_0244		
	RC001_0244 RC001_0246		
	Description		
	Reserved.		
	EventSelect[13:12]: performance event select. Read-write. Reset: 0h.		
58:36	Reserved.		
35:32	EventSelect[11:8]: performance event select. Read-write. Reset: 0h. See EventSelect[7:0].		
31:23	Reserved.		
22	En : enable performance counter . Read-write. Reset: 0. 1=Performance event counter is enabled.		
21:16	Reserved.		
15:8	UnitMask : event qualification . Read-write. Reset: 00h. Each UnitMask bit further specifies or qualifies the		
	event specified by EventSelect. All events selected by UnitMask are simultaneously monitored. Unless otherwise		
	stated, the UnitMask values shown may be combined (logically ORed) to select any desired combination of the		
	sub-events for a given event. In some cases, certain combinations can result in misleading counts, or the		
	UnitMask value is an ordinal rather than a bit mask. These situations are described where applicable, or should be		
	obvious from the event descriptions. For events where no UnitMask table is shown, the UnitMask is Unused.		
	When selecting an event for which not all UnitMask bits are defined, the undefined UnitMask bits should be set		
	to zero.		
7:0	EventSelect[7:0]: event select. Read-write. Reset: 00h. This field, along with EventSelect[13:12] and		
	EventSelect[11:8] above, combine to form the 14-bit event select field, EventSelect[13:0]. EventSelect specifies		
	the event or event duration in a processor unit to be counted by the corresponding DF_PERF_CTR[3:0] register.		

MSRC001_024[1...7] [Data Fabric Performance Event Counter [3:0]] (Core::X86::Msr::DF_PERF_CTR)

Some events are reserved; when a reserved event is selected, the results are undefined.

See Core::X86::Msr::DF_PERF_CTL. Also can be read via x86 instructions RDPMC ECX=[09:06].			
_n0; MS	_n0; MSRC001_0241		
_n1; MS	RC001_0243		
_n2; MS	RC001_0245		
_n3; MS	RC001_0247		
D.,			
Bits	Description		
	Reserved. Read-only. Reset: Fixed,0000h.		
63:48	*		

MSRC001_0299 [RAPL Power Unit] (Core::X86::Msr::RAPL_PWR_UNIT)

Read-only, Volatile. Reset: 0000_0000_000A_1003h.		
_lthree[1	_lthree[1:0]; MSRC001_0299	
Bits	Descripti	on
63:20	Reserved.	
19:16	TU: Time	Units in seconds . Read-only, Volatile. Reset: Ah. Time information (in Seconds) is based on the
	multiplier	, 1/2^TU; where TU is an unsigned integer. Default value is 1010b, indicating time unit is in 976
	microseco	onds increment.
	ValidValu	ies:
	Value	Description
	Fh-0h	1/2^ <value> Seconds</value>
15:13	Reserved.	

12:8		ergy Status Units . Read-only, Volatile. Reset: 10h. Energy information (in Joules) is based on the ; 1/2^ESU; where ESU is an unsigned integer. Default value is 10000b, indicating energy status unit is
		icro-Joules increment.
	ValidValu	ues:
	Value	Description
	1Fh-00h	1/2^ <value> Joules</value>
7:4	Reserved.	
3:0	PU: Powe	er Units. Read-only, Volatile. Reset: 3h. Power information (in Watts) is based on the multiplier, 1/
	2^PU; wh	ere PU is an unsigned integer. Default value is 0011b, indicating power unit is in 1/8 Watts increment.
	ValidValues:	
	Value	Description
	Fh-0h	1/2^ <value> Watts</value>

MSRC001_029A [Core Energy Status] (Core::X86::Msr::CORE_ENERGY_STAT)			
Read-	Read-only, Volatile. Reset: 0000_0000_0000_0000h.		
_lthree[1	:0]_core[3:0]; MSRC001_029A		
Bits	Description		
63:32	Reserved.		
31:0	TotalEnergyConsumed. Read-only,Volatile. Reset: 0000_0000h.		

MSRO	C001_029B [Package Energy Status] (Core::X86::Msr::PKG_ENERGY_STAT)	
Read-only, Volatile. Reset: 0000_0000_0000_0000h.		
_lthree[1	:0]; MSRC001_029B	
Bits	Description	
63:32	Reserved.	
31:0	TotalEnergyConsumed. Read-only,Volatile. Reset: 0000_0000h.	

2.1.14.4 MSRs - MSRC001_1xxx

See 1.3.3 [Register Mnemonics] for a description of the register naming convention. MSRs are accessed through x86 WRMSR and RDMSR instructions.

	The first and Test instructions.		
MSR	MSRC001_1002 [CPUID Features for CPUID Fn00000007_E[A,B]X] (Core::X86::Msr::CPUID_7_Features)		
Read-	Read-write.		
Core::	Core::X86::Msr::CPUID_7_Features[63:32] provides control over values read from		
Core::	X86::Cpuid::StructExtFeatIdEax0; Core::X86::Msr::CPUID_7_Features[31:0] provides control over values read		
from Core::X86::Cpuid::StructExtFeatIdEbx0.			
_lthree[1	:0]_core[3:0]_thread[1:0]; MSRC001_1002		
Bits	Description		
63:30	Reserved.		
29	SHA. Read-write. Reset: Core::X86::Cpuid::StructExtFeatIdEbx0[SHA].		
28:24	Reserved.		
23	CLFSHOPT . Read-write. Reset: Core::X86::Cpuid::StructExtFeatIdEbx0[CLFSHOPT].		
22:21	Reserved.		
20	SMAP . Read-write. Reset: Core::X86::Cpuid::StructExtFeatIdEbx0[SMAP].		
19	ADX. Read-write. Reset: Core::X86::Cpuid::StructExtFeatIdEbx0[ADX].		
18	RDSEED. Read-write. Reset: Core::X86::Cpuid::StructExtFeatIdEbx0[RDSEED].		
17:9	Reserved.		

8	BMI2. Read-write. Reset: Core::X86::Cpuid::StructExtFeatIdEbx0[BMI2].
7	SMEP . Read-write. Reset: Core::X86::Cpuid::StructExtFeatIdEbx0[SMEP].
6	Reserved.
5	AVX2. Read-write. Reset: Core::X86::Cpuid::StructExtFeatIdEbx0[AVX2].
4	Reserved.
3	BMI1 . Read-write. Reset: Core::X86::Cpuid::StructExtFeatIdEbx0[BMI1].
2:1	Reserved.
0	FSGSBASE . Read-write. Reset: Core::X86::Cpuid::StructExtFeatIdEbx0[FSGSBASE].

MSRC001_1003 [Thermal and Power Management CPUID Features] (Core::X86::Msr::CPUID_PWR_THERM)

Read-	Read-write.		
Core::	Core::X86::Msr::CPUID_PWR_THERM provides control over values read from		
Core::	Core::X86::Cpuid::ThermalPwrMgmtEcx.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_1003		
Bits	Description		
63:1	Reserved.		
0	EffFreq. Read-write. Reset: Core::X86::Cpuid::ThermalPwrMgmtEcx[EffFreq].		

0	EffFreq. Read-write. Reset: Core::X86::Cpuid::ThermalPwrMgmtEcx[EffFreq].		
MSR	MSRC001_1004 [CPUID Features for CPUID Fn00000001_E[C,D]X] (Core::X86::Msr::CPUID_Features)		
Read-	Read-write.		
	X86::Msr::CPUID_Features[63:32] provides control over values read from Core::X86::Cpuid::FeatureIdEcx;		
	X86::Msr::CPUID_Features[31:0] provides control over values read from Core::X86::Cpuid::FeatureIdEdx.		
	:0]_core[3:0]_thread[1:0]; MSRC001_1004		
	Description		
63	Reserved.		
62	RDRAND. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[RDRAND].		
61	F16C . Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[F16C].		
60	AVX. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[AVX].		
59	OSXSAVE . Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[OSXSAVE]. Modifies		
	Core::X86::Cpuid::FeatureIdEcx[OSXSAVE] only if CR4[OSXSAVE].		
58	XSAVE . Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[XSAVE].		
57	AES . Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[AES]. Modifies		
	Core::X86::Cpuid::FeatureIdEcx[AES] only if the reset value is 1.		
56	Reserved.		
55	POPCNT . Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[POPCNT].		
54	MOVBE. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[MOVBE].		
53	Reserved.		
52	SSE42. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[SSE42].		
51	SSE41 . Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[SSE41].		
50	Reserved.		
49	PCID. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[PCID].		
48:46	Reserved.		
45	CMPXCHG16B. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[CMPXCHG16B].		
44	FMA. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[FMA].		
43:42	Reserved.		
41	SSSE3. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[SSSE3].		
40:36	Reserved.		
35	Monitor. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[Monitor]. Modifies		
	Core::X86::Cpuid::FeatureIdEcx[Monitor] only if ~Core::X86::Msr::HWCR[MonMwaitDis].		
34	Reserved.		

33	PCLMULQDQ. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[PCLMULQDQ]. Modifies		
	Core::X86::Cpuid::FeatureIdEcx[PCLMULQDQ] only if the reset value is 1.		
32	SSE3. Read-write. Reset: Core::X86::Cpuid::FeatureIdEcx[SSE3].		
31:29	Reserved.		
28	HTT. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[HTT].		
27	Reserved.		
26	SSE2. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[SSE2].		
25	SSE. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[SSE].		
24	FXSR . Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[FXSR].		
23	MMX: MMX [™] instructions. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[MMX].		
22:20	Reserved.		
19	CLFSH. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[CLFSH].		
18	Reserved.		
17	PSE36 . Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[PSE36].		
16	PAT. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[PAT].		
15	CMOV. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[CMOV].		
14	MCA. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[MCA].		
13	PGE . Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[PGE].		
12	MTRR. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[MTRR].		
11	SysEnterSysExit. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[SysEnterSysExit].		
10	Reserved.		
9	APIC. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[APIC]. Modifies		
	Core::X86::Cpuid::FeatureIdEdx[APIC] only if Core::X86::Msr::APIC_BAR[ApicEn].		
8	CMPXCHG8B . Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[CMPXCHG8B].		
7	MCE. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[MCE].		
6	PAE . Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[PAE].		
5	MSR. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[MSR].		
4	TSC . Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[TSC].		
3	PSE . Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[PSE].		
2	DE . Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[DE].		
1	VME. Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[VME].		
0	FPU . Read-write. Reset: Core::X86::Cpuid::FeatureIdEdx[FPU].		

MSRC001_1005 [CPUID Features for CPUID Fn80000001_E[C,D]X] (Core::X86::Msr::CPUID_ExtFeatures)

MSRC001_1005 [CPOID Features for CPOID Fn80000001_E[C,D]X] (Core::X86::Msr::CPOID_ExtFeatures)		
Read-write.		
Core::X86::Msr::CPUID_ExtFeatures[63:32] provides control over values read from		
Core::X86::Cpuid::FeatureExtIdEcx; Core::X86::Msr::CPUID_ExtFeatures[31:0] provides control over values read from		
ore::X86::Cpuid::FeatureExtIdEdx.		
three[1:0]_core[3:0]_thread[1:0]; MSRC001_1005		
Bits Description		
3:62 Reserved.		
61 MwaitExtended . Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[MwaitExtended].		
60 PerfCtrExtLLC . Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[PerfCtrExtLLC].		
59 PerfTsc . Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[PerfTsc].		
DataBreakpointExtension. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[DataBreakpointExtension]].	
57 Reserved.		
56 PerfCtrExtDF . Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[PerfCtrExtDF].		
55 PerfCtrExtCore . Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[PerfCtrExtCore].		
TopologyExtensions. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[TopologyExtensions].		

53:50	Reserved.		
49	TCE. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[TCE].		
48	FMA4. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[FMA4]. Init: 0.		
47	LWP . Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[LWP].		
46	Reserved.		
45	WDT . Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[WDT].		
44	SKINIT . Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[SKINIT].		
43	XOP . Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[XOP].		
42	IBS . Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[IBS]. Init: BIOS,0. To enable the IBS feature, use		
	BIOS setup option.		
41	OSVW. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[OSVW].		
40	ThreeDNowPrefetch. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[ThreeDNowPrefetch].		
39	MisAlignSse. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[MisAlignSse].		
38	SSE4A. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[SSE4A].		
37	ABM. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[ABM].		
36	AltMovCr8. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[AltMovCr8].		
35	ExtApicSpace. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[ExtApicSpace].		
34	SVM . Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[SVM].		
33	CmpLegacy. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[CmpLegacy].		
32	LahfSahf. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEcx[LahfSahf].		
31	ThreeDNow: 3DNow!™ instructions. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[ThreeDNow].		
30	ThreeDNowExt. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[ThreeDNowExt].		
29	LM. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[LM].		
28	Reserved.		
27	RDTSCP. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[RDTSCP].		
26	Page1GB. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[Page1GB].		
25	FFXSR. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[FFXSR].		
24	FXSR . Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[FXSR].		
23	MMX: MMX [™] instructions. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[MMX].		
22	MmxExt. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[MmxExt].		
21	Reserved.		
20	NX. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[NX].		
19:18	Reserved.		
17	PSE36 . Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[PSE36].		
16	PAT. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[PAT].		
15	CMOV. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[CMOV].		
14	MCA. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[MCA].		
13	PGE. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[PGE].		
12	MTRR. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[MTRR].		
11	SysCallSysRet. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[SysCallSysRet].		
10	Reserved.		
9	APIC. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[APIC].		
8	CMPXCHG8B. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[CMPXCHG8B].		
7	MCE. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[MCE].		
6	PAE. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[PAE].		
5	MSR. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[MSR].		
4	TSC. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[TSC].		
3	PSE. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[PSE].		
2	DE . Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[DE].		

1	VME. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[VME].
0	FPU. Read-write. Reset: Core::X86::Cpuid::FeatureExtIdEdx[FPU].

MSRC001_1019 [Address Mask For DR1 Breakpoint] (Core::X86::Msr::DR1_ADDR_MASK)

Read-write. Reset: 0000_0000_0000_0000h.
Support indicated by Core::X86::Cpuid::FeatureExtIdEcx[DataBreakpointExtension].

lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_1019

Bits Description

63:32 Reserved.

AddrMask: mask for DR linear address data breakpoint DR1. Read-write. Reset: 0000_0000h. 1=Exclude bit into address compare. 0=Include bit into address compare. See Core::X86::Msr::DR1_ADDR_MASK.

AddrMask[11:0] qualifies the DR1 linear address instruction breakpoint, allowing the DR1 instruction breakpoint on a range of addresses in memory.

MSRC001_101A [Address Mask For DR2 Breakpoint] (Core::X86::Msr::DR2_ADDR_MASK)

Read-write. Reset: 0000_0000_0000_0000h.

Support indicated by Core::X86::Cpuid::FeatureExtIdEcx[DataBreakpointExtension].

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_101A

Bits Description

63:32 Reserved.

AddrMask: mask for DR linear address data breakpoint DR2. Read-write. Reset: 0000_0000h. 1=Exclude bit into address compare. 0=Include bit into address compare. See Core::X86::Msr::DR0_ADDR_MASK.

AddrMask[11:0] qualifies the DR2 linear address instruction breakpoint, allowing the DR2 instruction breakpoint on a range of addresses in memory.

MSRC001_101B [Address Mask For DR3 Breakpoint] (Core::X86::Msr::DR3_ADDR_MASK)

Read-write. Reset: 0000 0000 0000 0000h.

Support indicated by Core::X86::Cpuid::FeatureExtIdEcx[DataBreakpointExtension].

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_101B

Bits Description

63:32 Reserved.

31:0 AddrMask: mask for DR linear address data breakpoint DR3. Read-write. Reset: 0000_0000h. 1=Exclude bit into address compare. 0=Include bit into address compare. See Core::X86::Msr::DR0_ADDR_MASK. AddrMask[11:0] qualifies the DR3 linear address instruction breakpoint, allowing the DR3 instruction breakpoint on a range of addresses in memory.

MSRC001_1023 [Table Walker Configuration] (Core::X86::Msr::TW_CFG)

Read-write. Reset: 0000_0000_0000_0000h.
_lthree[1:0]_core[3:0]; MSRC001_1023

Bits Description

63:50 Reserved.

49 TwCfgCombineCr0Cd: combine CR0_CD for both threads of a core. Read-write. Reset: 0. Init: BIOS,1.
1=The host Cr0_Cd values from the two threads are OR'd together and used by both threads.

48:0 Reserved.

MSRC001_1027 [Address Mask For DR0 Breakpoints] (Core::X86::Msr::DR0_ADDR_MASK)

Read-write. Reset: 0000 0000 0000 0000h.

Support for DR0[31:12] is indicated by Core::X86::Cpuid::FeatureExtIdEcx[DataBreakpointExtension]. See

Core::X86::Msr::DR1_ADDR_MASK.

lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_1027

Bits Description

63:32 Reserved.

DR0: mask for DR0 linear address data breakpoint. Read-write. Reset: 0000_0000h. 1=Exclude bit into address compare. 0=Include bit into address compare. See Core::X86::Msr::DR1_ADDR_MASK. This field qualifies the DR0 linear address data breakpoint, allowing the DR0 data breakpoint on a range of addresses in memory. AddrMask[11:0] qualifies the DR0 linear address instruction breakpoint, allowing the DR0 instruction breakpoint on a range of addresses in memory. DR0[31:12] is only valid for data breakpoints. The legacy DR0 breakpoint function is provided by DR0[31:0] == 0000_0000h). The mask bits are active high. DR0 is always used, and it can be used in conjunction with any debug function that uses DR0.

MSRC001_1030 [IBS Fetch Control] (Core::X86::Msr::IBS_FETCH_CTL)

Reset: 0000 0000 0000 0000h.

See 2.1.16 [Instruction Based Sampling (IBS)].

The IBS fetch sampling engine is described as follows:

- The periodic fetch counter is an internal 20-bit counter:
 - The periodic fetch counter [19:4] is set to IbsFetchCnt[19:4] and the periodic fetch counter [3:0] is set according to IbsRandEn when IbsFetchEn is changed from 0 to 1.
 - It increments for every fetch cycle that completes when IbsFetchEn == 1 and IbsFetchVal == 0.
 - The periodic fetch counter is undefined when IbsFetchEn == 0 or IbsFetchVal == 1.
 - When IbsFetchCnt[19:4] is read it returns the current value of the periodic fetch counter [19:4].
- When the periodic fetch counter reaches {IbsFetchMaxCnt[19:4],0h} and the selected instruction fetch completes or is aborted:
 - IbsFetchVal is set to 1.
 - Drivers can't assume that IbsFetchCnt[19:4] is 0 when IbsFetchVal == 1.
- The status of the operation is written to the IBS fetch registers (this register, Core::X86::Msr::IBS_FETCH_LINADDR and Core::X86::Msr::IBS_FETCH_PHYSADDR).
- An interrupt is generated as specified by Core::X86::Msr::IBS_CTL. The interrupt service routine associated with this interrupt is responsible for saving the performance information stored in IBS execution registers.

lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_1030			
Bits		Description		
63:59	Reserved.			
58	IbsFetch	L 2Miss : L2 cache miss for the sampled fetch . Read-only, Volatile. Reset: 0. 1=The instruction fetch		
		the L2 Cache. Qualified by (IbsFetchComp == 1).		
57		En: random instruction fetch tagging enable. Read-write. Reset: 0. 0=Bits[3:0] of the fetch counter		
		0h when IbsFetchEn is set to start the fetch counter. 1=Bits[3:0] of the fetch counter are randomized		
		FetchEn is set to start the fetch counter.		
56		Miss : instruction cache L2TLB miss . Read-only, Volatile. Reset: 0. 1=The instruction fetch missed in		
	the L2 TL			
55		Miss : instruction cache L1TLB miss . Read-only, Volatile. Reset: 0. 1=The instruction fetch missed in		
	the L1 TL	B.		
54:53	IbsL1Tlb	IbsL1TlbPgSz : instruction cache L1TLB page size . Read-only, Volatile. Reset: 0h. Indicates the page size of the		
	translatio	n in the L1 TLB. This field is only valid if IbsPhyAddrValid == 1.		
	ValidValues:			
	Value	Description		
	0h	4 KB		
	1h	2 MB		
	2h	1 GB		
	3h	Reserved.		
52	IbsPhyAddrValid : instruction fetch physical address valid . Read-only, Volatile. Reset: 0. 1=The physical			
	address in	Core::X86::Msr::IBS_FETCH_PHYSADDR and the IbsL1TlbPgSz field are valid for the instruction		
	fetch.			
51	IbsIcMiss : instruction cache miss . Read-only, Volatile. Reset: 0. 1=The instruction fetch missed in the			
	instruction cache.			
50	IbsFetchComp: instruction fetch complete. Read-only, Volatile. Reset: 0. 1=The instruction fetch completed and			

	the data is available for use by the instruction decoder.
49	IbsFetchVal : instruction fetch valid . Read-only, Volatile. Reset: 0. 1=New instruction fetch data available. When
	this bit is set, the fetch counter stops counting and an interrupt is generated as specified by
	Core::X86::Msr::IBS_CTL. This bit must be cleared for the fetch counter to start counting. When clearing this bit,
	software can write 0000h to IbsFetchCnt[19:4] to start the fetch counter at IbsFetchMaxCnt[19:4].
48	IbsFetchEn : instruction fetch enable . Read-write. Reset: 0. 1=Instruction fetch sampling is enabled.
47:32	IbsFetchLat : instruction fetch latency . Read-only, Volatile. Reset: 0000h. Indicates the number of clock cycles
	from when the instruction fetch was initiated to when the data was delivered to the core. If the instruction fetch is
	abandoned before the fetch completes, this field returns the number of clock cycles from when the instruction
	fetch was initiated to when the fetch was abandoned.
31:16	IbsFetchCnt[19:4] . Read-write, Volatile. Reset: 0000h. Provides read/write access to bits[19:4] of the periodic
	fetch counter. Programming this field to a value greater than or equal to IbsFetchMaxCnt[19:4] results in
	undefined behavior.
15:0	IbsFetchMaxCnt[19:4] . Read-write. Reset: 0000h. Specifies bits[19:4] of the maximum count value of the
	periodic fetch counter. Programming this field to 0000h and setting IbsFetchEn results in undefined behavior.
	Bits[3:0] of the maximum count are always 0000b.

MSRC001_1031 [IBS Fetch Linear Address] (Core::X86::Msr::IBS_FETCH_LINADDR)

Read-	Read-write, Volatile. Reset: 0000_0000_0000_0000h.		
Reset	Reset: 0000_0000_0000_0000h.		
_lthree[_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_1031		
Bits	Description		
63:0	IbsFetchLinAd : instruction fetch linear address. Read-write, Volatile. Reset: 0000_0000_0000_0000h.		
	Provides the linear address in canonical form for the tagged instruction fetch.		

MSRC001_1032 [IBS Fetch Physical Address] (Core::X86::Msr::IBS_FETCH_PHYSADDR)

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_1032		
Bits	Description	
63:48	Reserved. Read-only. Reset: Fixed,0000h.	
47:0	IbsFetchPhysAd : instruction fetch physical address . Read-write, Volatile. Reset: 0000_0000_0000h. Provides	
	the physical address for the tagged instruction fetch. The lower 12 bits are not modified by address translation, so	
	they are always the same as the linear address. This field contains valid data only if	
	Core::X86::Msr::IBS_FETCH_CTL[IbsPhyAddrValid] is asserted.	

MSRC001_1033 [IBS Execution Control] (Core::X86::Msr::IBS_OP_CTL)

Reset: 0000_0000_0000_0000h.

See 2.1.16 [Instruction Based Sampling (IBS)].

The IBS execution sampling engine is described as follows for IbsOpCntCtl == 1. If IbsOpCntCtl == 1n then references to "periodic op counter" mean "periodic cycle counter".

- The periodic op counter is an internal 27-bit counter:
 - It is set to IbsOpCurCnt[26:0] when IbsOpEn is changed from 0 to 1.
 - It increments every dispatched op when IbsOpEn == 1 and IbsOpVal == 0.
 - The periodic op counter is undefined when IbsOpEn == 0 or IbsOpVal == 1.
 - When IbsOpCurCnt[26:0] is read then it returns the current value of the periodic micro-op counter [26:0].
- When the periodic micro-op counter reaches IbsOpMaxCnt:
 - The next dispatched micro-op is tagged if IbsOpCntCtl == 1. A valid op in the next dispatched line is tagged if IbsOpCntCtl == 0. See IbsOpCntCtl.
 - The periodic micro-op counter [26:7]=0; [6:0] is randomized by hardware.
- The periodic micro-op counter is not modified when a tagged micro-op is flushed.
- When a tagged micro-op is retired:
 - IbsOpVal is set to 1.
 - Drivers can't assume that IbsOpCurCnt is 0 when IbsOpVal == 1.

- The status of the operation is written to the IBS execution registers (this register, Core::X86::Msr::IBS_OP_RIP, Core::X86::Msr::IBS_OP_DATA, Core::X86::Msr::IBS_OP_DATA2, Core::X86::Msr::IBS_OP_DATA3, Core::X86::Msr::IBS_DC_LINADDR and Core::X86::Msr::IBS_DC_PHYSADDR).
- An interrupt is generated as specified by Core::X86::Msr::IBS_CTL. The interrupt service routine associated with this interrupt is responsible for saving the performance information stored in IBS execution registers.

	with this interrupt is responsible for saving the performance information stored in IBS execution registers.			
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_1033			
Bits	Descripti	on		
63:59	Reserved			
58:32	IbsOpCu	rCnt[26:0]: periodic op counter current count. Read-write, Volatile. Reset: 000_0000h. Returns the		
	current va	llue of the periodic op counter.		
31:27	Reserved			
26:20	IbsOpMa	axCnt[26:20]: periodic op counter maximum count. Read-write. Reset: 00h. See IbsOpMaxCnt[19:4].		
19	IbsOpCn	tCtl: periodic op counter count control. Read-write. Reset: 0. 0=Count clock cycles; a 1-of-4 round-		
		nter selects an op in the next dispatch line; if the op pointed to by the round-robin counter is invalid,		
		ext younger valid op is selected. 1=Count dispatched Micro-Ops; when a roll-over occurs, the counter is		
	•	with a pseudorandom 7 bit value between 1 and 127.		
18	_	l: micro-op sample valid. Read-write, Volatile. Reset: 0. 1=New instruction execution data available;		
		lic op counter is disabled from counting. An interrupt may be generated when this bit is set as specified		
		X86::Msr::IBS_CTL[LvtOffset].		
17		: micro-op sampling enable . Read-write. Reset: 0. 1=Instruction execution sampling enabled.		
16	Reserved			
15:0		axCnt[19:4] : periodic op counter maximum count . Read-write. Reset: 0000h. IbsOpMaxCnt[26:0] =		
		axCnt[26:20], IbsOpMaxCnt[19:4], 0000b}. Specifies maximum count value of the periodic op counter.		
		of the maximum count are always 0000b.		
	ValidValu	ies:		
	Value	Description		
	0008h-	Reserved.		
	0000h			
	FFFFh-	<value> *16 Ops.</value>		
	0009h			

MSRC001_1034 [IBS Op Logical Address] (Core::X86::Msr::IBS_OP_RIP)

Read-write, Volatile. Reset: 0000_0000_00000_0000h.

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_1034

Bits Description

63:0 IbsOpRip: micro-op linear address. Read-write, Volatile. Reset: 0000_0000_0000_0000h. Linear address in canonical form for the instruction that contains the tagged micro-op.

MSRC001_1035 [IBS Op Data] (Core::X86::Msr::IBS_OP_DATA)

Read-	Read-write, Volatile. Reset: 0000_0000_0000_0000h.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_1035		
Bits	Description		
63:41	Reserved.		
40	IbsOpMicrocode . Read-write, Volatile. Reset: 0. 1=Tagged operation from microcode.		
39	IbsOpBrnFuse : fused branch micro-op . Read-write, Volatile. Reset: 0. 1=Tagged operation was a fused branch		
	micro-op. Support indicated by Core::X86::Cpuid::IbsIdEax[OpBrnFuse].		
38	IbsRipInvalid : RIP is invalid . Read-write, Volatile. Reset: 0. 1=Tagged operation RIP is invalid. Support		
	indicated by Core::X86::Cpuid::IbsIdEax[RipInvalidChk].		
37	IbsOpBrnRet: branch micro-op retired. Read-write, Volatile. Reset: 0. 1=Tagged operation was a branch micro-		
	op that retired.		
36	IbsOpBrnMisp: mispredicted branch micro-op. Read-write, Volatile. Reset: 0. 1=Tagged operation was a		

	branch micro-op that was mispredicted. Qualified by IbsOpBrnRet == 1.	
35	IbsOpBrnTaken : taken branch micro-op . Read-write, Volatile. Reset: 0. 1=Tagged operation was a branch	
	micro-op that was taken. Qualified by IbsOpBrnRet == 1.	
34	IbsOpReturn : return micro-op . Read-write, Volatile. Reset: 0. 1=Tagged operation was return micro-op.	
	Qualified by (IbsOpBrnRet == 1).	
33:32	Reserved.	
31:16	IbsTagToRetCtr : micro-op tag to retire count . Read-write, Volatile. Reset: 0000h. This field returns the number	
	of cycles from when the micro-op was tagged to when the micro-op was retired. This field is equal to	
	IbsCompToRetCtr when the tagged micro-op is a NOP.	
15:0	IbsCompToRetCtr : micro-op completion to retire count. Read-write, Volatile. Reset: 0000h. This field returns	
	the number of cycles from when the micro-op was completed to when the micro-op was retired.	

MSRC001_1036 [IBS Op Data 2] (Core::X86::Msr::IBS_OP_DATA2)

Docote	Ω	0000	0000	0000h
Reser.	UUUU	UUUU	UUUU	UUUUUN.

Data is only valid for load operations that miss both the L1 data cache and the L2 cache. If a load operation crosses a cache line boundary, the data returned in this register is the data for the access to the lower cache line.

_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_1036

Bits	Description			
63:6	Reserved.			
5	CacheHitSt: IBS cache hit state. Read-write, Volatile. Reset: 0. 0=M State. 1=O State. Valid when the data			
	source type is Cache(2h).			
4	RmtNode : IBS request destination node . Read-write, Volatile. Reset: 0. 0=The request is serviced by the NB in			
	the same node as the core. 1=The request is serviced by the NB in a different node than the core. Valid when			
	NbIbsReqSrc is non-zero.			
3	Reserved.			
2.0				

DataSrc: northbridge IBS request data source. Read-write. Reset: 0h.

ValidValues:

Value	Description
0h	No valid status.
1h	Reserved.
2h	Cache: data returned from another cores cache.
3h	DRAM: data returned from DRAM.
4h	Reserved for remote cache.
6h-5h	Reserved.
7h	Other: data returned from MMIO/Config/PCI/APIC.

MSRC001_1037 [IBS Op Data 3] (Core::X86::Msr::IBS_OP_DATA3)

Read-write, Volatile. Reset: 0000_0000_0000_0000h.

If a load or store operation crosses a 256-bit boundary, the data returned in this register is the data for the access to the data below the 256-bit boundary.

uala D	a below the 250-bit boundary.				
_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_1037					
Bits	Description				
63:48	IbsTlbRefillLat: L1 DTLB refill latency . Read-write, Volatile. Reset: 0000h. The number of cycles from when a				
	L1 DTLB refill is triggered by a tagged op to when the L1 DTLB fill has been completed.				
47:32	7:32 IbsDcMissLat : data cache miss latency . Read-write, Volatile. Reset: 0000h. Indicates the number of clock cycles				
	from when a miss is detected in the data cache to when the data was delivered to the core. The value returned by				
	this counter is not valid for data cache writes or prefetch instructions.				
31:26	11:26 IbsOpDcMissOpenMemReqs: outstanding memory requests on DC fill . Read-write, Volatile. Reset: 00h. The				
	number of allocated, valid DC MABs when the MAB corresponding to a tagged DC miss op is deallocated.				
	Includes the MAB allocated by the sampled op. 00000b=No information provided.				
25:22	IbsOpMemWidth : load/store size in bytes . Read-write, Volatile. Reset: 0h. Report the number of bytes the load				

	or store is	attempting to access.		
	ValidValues:			
	Value	Description		
	0h	No information provided.		
	1h	Byte.		
	2h	Word.		
	3h	DW.		
	4h	QW.		
	5h	OW.		
	Fh-6h	Reserved.		
21	IbsSwPf:	software prefetch . Read-write, Volatile. Reset: 0. 1=The op is a software prefetch.		
20		ss: L2 cache miss for the sampled operation . Read-write, Volatile. Reset: 0. 1=The operation missed in gardless of whether the op initiated the request to the L2.		
19		ΓlbHit1G: data cache L2TLB hit in 1G page. Read-write, Volatile. Reset: 0. 1=The physical address		
		aged load or store operation was present in a 1G page table entry in the data cache L2TLB.		
18		y AddrValid : data cache physical address valid . Read-write, Volatile. Reset: 0. 1=The physical address		
		K86::Msr::IBS_DC_PHYSADDR is valid for the load or store operation.		
17	IbsDcLin	AddrValid: data cache linear address valid. Read-write, Volatile. Reset: 0. 1=The linear address in		
	Core::X8	6::Msr::IBS_DC_LINADDR is valid for the load or store operation.		
16	DcMissNoMabAlloc: DC miss with no MAB allocated . Read-write, Volatile. Reset: 0. 1=The tagged load or			
	store operation hit on an already allocated MAB.			
15	IbsDcLockedOp : locked operation . Read-write, Volatile. Reset: 0. 1=Tagged load or store operation is a locked			
1.4	operation. The De HoMon Age, H.C. moments access. Read verities Veletile. Resets 0, 1—Tagged lead on store operation accessed.			
14		MemAcc: UC memory access. Read-write, Volatile. Reset: 0. 1=Tagged load or store operation accessed		
10	uncacheable memory. IbsDcWcMemAcc: WC memory access. Read-write, Volatile. Reset: 0. 1=Tagged load or store operation			
13				
12:9	accessed write combining memory. Reserved.			
8		sAcc: misaligned access. Read-write, Volatile. Reset: 0. 1=The tagged load or store operation crosses a		
0		ldress boundary.		
7	IbsDcMiss : data cache miss . Read-write, Volatile. Reset: 0. 1=The cache line used by the tagged load or store			
		resent in the data cache.		
6	IbsDcL2t	lbHit2M: data cache L2TLB hit in 2M page. Read-write, Volatile. Reset: 0. 1=The physical address		
	for the tag	gged load or store operation was present in a 2M page table entry in the data cache L2TLB.		
5		ΓlbHit1G : data cache L1TLB hit in 1G page . Read-write, Volatile. Reset: 0. 1=The physical address		
		gged load or store operation was present in a 1G page table entry in the data cache L1TLB.		
4		FlbHit2M : data cache L1TLB hit in 2M page . Read-write, Volatile. Reset: 0. 1=The physical address		
	for the tagged load or store operation was present in a 2M page table entry in the data cache L1TLB.			
3		FlbMiss : data cache L2TLB miss . Read-write, Volatile. Reset: 0. 1=The physical address for the tagged		
		ore operation was not present in the data cache L2TLB.		
2		dbMiss: data cache L1TLB miss. Read-write, Volatile. Reset: 0. 1=The physical address for the tagged		
1		ore operation was not present in the data cache L1TLB.		
1		store op. Read-write, Volatile. Reset: 0. 1=Tagged operation is a store operation.		
0	idsLaOp	: load op . Read-write, Volatile. Reset: 0. 1=Tagged operation is a load operation.		

MSRC001_1038 [IBS DC Linear Address] (Core::X86::Msr::IBS_DC_LINADDR)

Read-write, Volatile. Reset: 0000_0000_0000_0000h.			
_lthree[1	three[1:0]_core[3:0]_thread[1:0]; MSRC001_1038		
Bits	Description		
63.0	IbsDcLinAd Read-write Volatile Reset: 0000, 0000, 0000, 0000h Provides the linear address in canonical form		

for the tagged load or store operation. This field contains valid data only if Core::X86::Msr::IBS OP DATA3[IbsDcLinAddrValid] is asserted.

MSRC001_1039 [IBS DC Physical Address] (Core::X86::Msr::IBS_DC_PHYSADDR) Read-write, Volatile. Reset: 0000_0000_0000_0000h. _lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_1039 Bits Description 63:48 Reserved. 47:0 IbsDcPhysAd: load or store physical address. Read-write, Volatile. Reset: 0000_0000_0000h. Provides the physical address for the tagged load or store operation. The lower 12 bits are not modified by address translation, so they are always the same as the linear address. This field contains valid data only if Core::X86::Msr::IBS_OP_DATA3[IbsDcPhyAddrValid] is asserted.

MSRC001_103A [IBS Control] (Core::X86::Msr::IBS_CTL)

	= ',		
Read,l	Read,Error-on-write.		
_lthree[1	ee[1:0]_core[3:0]_thread[1:0]; MSRC001_103A		
Bits	Description		
63:9	Reserved.		
8	LvtOffsetVal: local vector table offset valid. Read, Error-on-write. Reset: X.		
7:4	Reserved.		
3:0	LvtOffset: local vector table offset. Read,Error-on-write. Reset: Xh.		

MSRC001_103B [IBS Branch Target Address] (Core::X86::Msr::BP_IBSTGT_RIP)

111011	2001_100D [120 Dianem langueridaness] (Core.mico.mizi.mzi_izo1G1_itii)		
Read-	Read-write, Volatile. Reset: 0000_0000_0000_0000h.		
Suppo	upport for this register indicated by Core::X86::Cpuid::IbsIdEax[BrnTrgt].		
_lthree[1:0]_core[3:0]_thread[1:0]; MSRC001_103B			
Bits	Description		
63:0	IbsBrTarget . Read-write, Volatile. Reset: 0000_0000_0000_0000h. The logical address in canonical form for the		
	branch target. Contains a valid target if non-0. Qualified by Core::X86::Msr::IBS_OP_DATA[IbsOpBrnRet] == 1.		

MSRC001_103C [IBS Fetch Control Extended] (Core::X86::Msr::IC_IBS_EXTD_CTL)

	,			
Read-	Read-only, Volatile. Reset: 0000_0000_0000_0000h.			
Suppo	Support for this register indicated by Core::X86::Cpuid::IbsIdEax[IbsFetchCtlExtd].			
_lthree[1	1:0]_core[3:0]_thread[1:0]; MSRC001_103C			
Bits	Description			
63:16	Reserved.			
15:0	IbsItlbRefillLat: ITLB Refill Latency for the sampled fetch, if there is a reload . Read-only, Volatile. Reset:			
	0000h. The number of cycles when the fetch engine is stalled for an ITLB reload for the sampled fetch. If there is			
	no reload, the latency is 0.			

2.1.15 Performance Monitor Counters

Any undefined UnitMask bits should be set to zero when selecting an event.

2.1.15.1 RDPMC Assignments

There are six core performance event counters per thread, six performance events counters per L3 complex and four Data Fabric performance events counters mapped to the RDPMC instruction as follows:

- The RDPMC[5:0] instruction accesses core events. See 2.1.15.4 [Core Performance Monitor Counters].
- The RDPMC[9:6] instruction accesses data fabric events.
- The RDPMC[F:A] instruction accesses L3 cache events. See 2.1.15.5 [L3 Cache Performance Monitor Counters].

2.1.15.2 Performance Measurement

This section contains AMD's recommended method for collecting microarchitecture performance common to software optimization. This may require combining multiple performance event selections. Table 19 [Guidance for Common Performance Statistics with Complex Event Selects] lists formulas for collecting common performance statistics.

- The term Event is the full value written to Core::X86::Msr::PERF CTL.
 - Core PMC select bits [63:36,31:16] are at the user's discretion, (i.e. they are not part of the event selection).
- The term L3Event is the full value written to Core::X86::Msr::ChL3PmcCfg.
- The term DFEvent is the full value written to Core::X86::Msr::DF_PERF_CTL.

Table 19: Guidance for Common Performance Statistics with Complex Event Selects

Description	Equation
Execution-Time Branch Misprediction Ratio (Non-Speculative)	Event[0x4300C3] / Event[0x4300C2]
L1 Data Cache Accesses	Event[0x430729]
All L2 Cache Accesses	Event[0x43F960] + Event[0x433F70] +
	Event[0x433F71] + Event[0x433F72]
L2 Cache Accesses: Instruction Cache Misses	Event[0x431060] + Event[0x431861]
L2 Cache Accesses: Data Cache Misses	Event[0x43C860]
L2 Cache Accesses: L2 Prefetcher	Event[0x433F70] + Event[0x433F71] +
	Event[0x433F72]
L2 Cache Miss	Event[0x430964] + Event[0x433F71] +
	Event[0x433F72]
L2 Cache Miss from Instruction Cache Miss	Event[0x430164]
L2 Cache Miss from Data Cache Miss	Event[0x430864]
L2 Cache Miss from Prefetch to L2 Cache	Event[0x433F71] + Event[0x433F72]
L2 Cache Hit	Event[0x43F664] + Event[0x433F70]
L2 Cache Hit from IC Miss	Event[0x430664]
L2 Cache Hit from DC Miss	Event[0x437064]
L2 Cache Hit from Prefetch to L2 Cache	Event[0x433F70]
L3 Cache Accesses	L3Event[0xFF0F0000_0040FF04]
L3 Cache Miss	L3Event[0xFF0F0000_00400106]
Average L3 Read Miss Latency (in core clocks)	L3Event[0xFF0F0000_00400090] * 16 /
	L3Event[0xFF0F0000_00401B9A]
L1 Instruction TLB Misses	Event[0x430084] + Event[0x430785]
L2 Instruction TLB Misses & Instruction page walk	Event[0x430785]
L1 Data TLB Misses	Event[0x43FF45]
L2 Data TLB Misses & Data page walk	Event[0x43F045]
TLBs Flushed	Event[0x43DF78]
Micro-ops Dispatched	Event[0x4303AA]
Micro-ops Retired	Event[0x4300C1]
Outbound data bytes transferred across all remote links on a local	(DFEvent[0x000100400287] +
node.	DFEvent[0x0001004002C7] +
	DFEvent[0x000200400207] +
	DFEvent[0x000200400287] +
	DFEvent[0x000200400247] +
	DFEvent[0x0002004002C7]) * 16B
Data bytes transferred across all DRAM channels of a local Node	(DFEvent[0x0403807] +
(approximate).	DFEvent[0x0403847])*64B

2.1.15.3 **Large Increment per Cycle Events**

The maximum increment for a regular performance event is 15 (i.e., a 4-bit event). However some event types can have a large increment every cycle (example: Core::X86::Pmc::Core::FpRetSseAvxOps).

An option is provided for merging a pair of even/odd performance monitors to acquire an accurate count. The even performance monitor is programmed with the desired event (example: Core::X86::Pmc::Core::FpRetSseAvxOps). First the odd numbered Core::X86::Msr::PERF_CTL is programmed with the event Core::X86::Pmc::Core::Merge (PMCxFFF) with the enable bit (En) turned on and with the remaining bits off. Then the corresponding even numbered Core::X86::Msr::PERF_CTL is programmed with the desired PMC event. The performance monitor combines the count value to an 8-bit increment event and extends the counter to a 64-bit counter.

Software wanting to preload a value to a merged counter pair writes the high-order 16-bit value to the low-order 16 bits of the odd counter and then writes the low-order 48-bit value to the even counter. Reading the even counter of the merged counter pair returns the full 64-bit value.

If an even performance monitor is programmed with the event Core::X86::Pmc::Core::Merge the read results are undetermined. If an even performance monitor is programmed with a non-merge-able event (i.e., less than 5-bit event) while the corresponding odd performance monitor is programmed as Merge, the read results are undetermined. When discontinuing use of a merged counter pair, clear the Merge event from the odd performance monitor.

PMC	PMCxFFF [Merge] (Core::X86::Pmc::Core::Merge)		
See 2.	1.15.3 [Large Increment per Cycle Events].		
PMCxFI	FF		
Bits	Description		
7:0	Reserved.		

2.1.15.4 **Core Performance Monitor Counters**

This section provides the core performance counter events that may be selected through Core::X86::Msr::PERF_CTL[EventSelect[11:8],EventSelect[7:0],UnitMask]. See Core::X86::Msr::PERF_CTR. See

Core::X86::Msr::PERF LEGACY CTL and Core::X86::Msr::PERF LEGACY CTR.

2.1.15.4.1 Floating Point (FP) Events

PMCx000 [FPU Pipe Assignment] (Core::X86::Pmc::Core::FpuPipeAssignment)

Read-only. Reset: 00h.

The number of operations (uOps) and dual-pipeuOps dispatched to each of the 4 FPU execution pipelines. This event reflects how busy the FPU pipelines are and may be used for workload characterization. This includes all operations performed by x87, MMX, and SSE instructions, including moves. Each increment represents a one-cycle dispatch event. This event is a speculative event. (See Core::X86::Pmc::Core::ExRetMmxFpInstr). Since this event includes nonnumeric operations it is not suitable for measuring MFLOPs.

PMCx00	

111101100		
Bits	Description	
7	Dual3: Total number multi-pipe uOps assigned to Pipe 3 . Read-only. Reset: 0.	
6	Dual2: Total number multi-pipe uOps assigned to Pipe 2 . Read-only. Reset: 0.	
5	Dual1: Total number multi-pipe uOps assigned to Pipe 1 . Read-only. Reset: 0.	
4	Dual0: Total number multi-pipe uOps assigned to Pipe 0 . Read-only. Reset: 0.	
3	Total3: Total number uOps assigned to Pipe 3. Read-only. Reset: 0.	
2	Total2: Total number uOps assigned to Pipe 2. Read-only. Reset: 0.	

1	Total1: Total number uOps assigned to Pipe 1. Read-only. Reset: 0.
0	Total0: Total number uOps assigned to Pipe 0. Read-only. Reset: 0.

PMCx001 [FP Scheduler Empty] (Core::X86::Pmc::Core::FpSchedEmpty)

This is a speculative event. The number of cycles in which the FPU scheduler is empty. Note that some Ops like FP loads bypass the scheduler. Invert this (Core::X86::Msr::PERF_CTL[Inv] == 1) to count cycles in which at least one FPU operation is present in the FPU.

PMCx001

Bits	Description
7:0	Reserved.

PMCx002 [Retired x87 Floating Point Operations] (Core::X86::Pmc::Core::FpRetx87FpOps)

Read-	Lead-write. Reset: 00h.	
The number of x87 floating-point Ops that have retired. The number of events logged per cycle can vary from 0 to 8.		
PMCx002		
Bits	Description	
7:3	Reserved.	
2	DivSqrROps: Divide and square root Ops. Read-write. Reset: 0.	
1	MulOps: Multiply Ops. Read-write. Reset: 0.	
0	AddSubOps: Add/subtract Ops. Read-write. Reset: 0.	

PMCx003 [Retired SSE/AVX Operations] (Core::X86::Pmc::Core::FpRetSseAvxOps)

Read-write. Reset: 00h.

This is a retire-based event. The number of retired SSE/AVX FLOPs. The number of events logged per cycle can vary from 0 to 64. This event can count above 15. See 2.1.15.3 [Large Increment per Cycle Events].

PMCx003

Bits	Description
7	DpMultAddFLOPs : Double precision multiply-add FLOPs . Read-write. Reset: 0. Multiply-add counts as 2
	FLOPs.
6	DpDivFLOPs : Double precision divide/square root FLOPs . Read-write. Reset: 0.
5	DpMultFLOPs : Double precision multiply FLOPs . Read-write. Reset: 0.
4	DpAddSubFLOPs : Double precision add/subtract FLOPs . Read-write. Reset: 0.
3	SpMultAddFLOPs : Single precision multiply-add FLOPs . Read-write. Reset: 0. Multiply-add counts as 2
	FLOPs.
2	SpDivFLOPs: Single-precision divide/square root FLOPs. Read-write. Reset: 0.
1	SpMultFLOPs: Single-precision multiply FLOPs. Read-write. Reset: 0.
0	SpAddSubFLOPs: Single-precision add/subtract FLOPs. Read-write. Reset: 0.

PMCx004 [Number of Move Elimination and Scalar Op Optimization] (Core::X86::Pmc::Core::FpNumMovElimScalOp)

Read-write. Reset: 00h.

This is a dispatch based speculative event, and is useful for measuring the effectiveness of the Move elimination and Scalar code optimization schemes.

PMCx00	PMCx004	
Bits	Description	
7:4	Reserved.	
3	Optimized: Number of Scalar Ops optimized. Read-write. Reset: 0.	
2	OptPotential: Number of Ops that are candidates for optimization (have Z-bit either set or pass). Read-	
	write. Reset: 0.	
1	SseMovOpsElim: Number of SSE Move Ops eliminated. Read-write. Reset: 0.	
0	SseMovOps: Number of SSE Move Ops. Read-write. Reset: 0.	

PMC	PMCx005 [Retired Serializing Ops] (Core::X86::Pmc::Core::FpRetiredSerOps)	
Read-	Read-write. Reset: 00h.	
The nu	The number of serializing Ops retired.	
PMCx00	5	
Bits	Description	
7:4	Reserved.	
3	X87CtrlRet: x87 control word mispredict traps due to mispredictions in RC or PC, or changes in mask bits.	
	Read-write. Reset: 0.	
2	X87BotRet: x87 bottom-executing uOps retired. Read-write. Reset: 0.	
1	SseCtrlRet: SSE control word mispredict traps due to mispredictions in RC, FTZ or DAZ, or changes in	
	mask bits. Read-write. Reset: 0.	
0	SseBotRet: SSE bottom-executing uOps retired. Read-write. Reset: 0.	

2.1.15.4.2 LS Events

PMC 2	PMCx025 [Retired Lock Instructions] (Core::X86::Pmc::Core::LsLocks)	
Reset: 00h.		
PMCx025		
Bits	Description	
7:0	Reserved.	
	000 [D .: 1 CLEI HOLL: 1/C WOO D	

PMCx026 [Retired CLFLUSH Instructions] (Core::X86::Pmc::Core::LsRetClClush)

The number of retired CLFLUSH instructions. This is a non-speculative event.	
PMCx026	
Bits	Description
7:0	Reserved.

PMCx027 [Retired CPUID Instructions] (Core::X86::Pmc::Core::LsRetCpuid)

The n	The number of CPUID instructions retired.	
PMCx02	PMCx027	
Bits	Description	
7:0	Reserved.	

PMCx029 [LS Dispatch] (Core::X86::Pmc::Core::LsDispatch)

Read-	write. Reset: 00h.	
Count	Counts the number of operations dispatched to the LS unit. Unit Masks ADDed.	
PMCx02	PMCx029	
Bits	Description	
7:3	Reserved.	
2	LdStDispatch: Load-op-Stores. Read-write. Reset: 0.	
1	StoreDispatch . Read-write. Reset: 0.	
0	LdDispatch. Read-write. Reset: 0.	

PMCx02B [SMIs Received] (Core::X86::Pmc::Core::LsSmiRx)

Count	Counts the number of SMIs received.	
PMCx02	PMCx02B	
Bits	Description	
7:0	Reserved.	

PMCx02C [Interrupts Taken] (Core::X86::Pmc::Core::LsIntTaken)

C	Counts the number of interrupts taken.	
PN	PMCx02C	
E	Bits	Description
7	7:0	Reserved.

PMCx035 [Store to Load Forward] (Core::X86::Pmc::Core::LsSTLF)

Numb	Number of STLF hits.	
PMCx03	PMCx035	
Bits	Description	
7:0	Reserved.	

PMCx037 [Store Commit Cancels 2] (Core::X86::Pmc::Core::LsStCommitCancel2)

Read-	Read-write. Reset: 00h.	
PMCx03	PMCx037	
Bits	Description	
7:1	Reserved.	
0	StCommitCancelWcbFull . Read-write. Reset: 0. A non-cacheable store and the non-cacheable commit buffer is	
	full.	

PMCx040 [Data Cache Accesses] (Core::X86::Pmc::Core::LsDcAccesses)

The number of accesses to the data cache for load and store references. This may include certain microcode scratchpad accesses, although these are generally rare. Each increment represents an eight-byte access, although the instruction may only be accessing a portion of that. This event is a speculative event.

PMCx040

PIVICX04	rMCx040	
Bits	Description	
7:0	Reserved.	

PMCx041 [DC Miss By Type] (Core::X86::Pmc::Core::LsMabAlloc)

Read-	Read-write. Reset: 00h.	
PMCx04	PMCx041	
Bits	Description	
7:4	Reserved.	
3	DcPrefetcher . Read-write. Reset: 0.	
2	Reserved.	
1	Stores. Read-write. Reset: 0.	
0	Loads. Read-write. Reset: 0.	

PMCx043 [Data Cache Refills from System] (Core::X86::Pmc::Core::LsRefillsFromSys)

	5 1	
Read-	Read-write. Reset: 00h.	
Demand Data Cache Fills by Data Source.		
PMCx04	43	
Bits	Description	
7	Reserved.	
6	LS_MABRESP_RMT_DRAM. Read-write. Reset: 0. DRAM or IO from different die.	
5	Reserved.	
4	LS_MABRESP_RMT_CACHE . Read-write. Reset: 0. Hit in cache; Remote CCX and the address's Home Node	
	is on a different die.	
3	LS_MABRESP_LCL_DRAM . Read-write. Reset: 0. DRAM or IO from this thread's die.	
2	Reserved.	
1	LS_MABRESP_LCL_CACHE. Read-write. Reset: 0. Hit in cache; local CCX (not Local L2), or Remote CCX	
	and the address's Home Node is on this thread's die.	
0	MABRESP_LCL_L2. Read-write. Reset: 0. Local L2 hit.	

PMCx045 [L1 DTLB Miss] (Core::X86::Pmc::Core::LsL1DTlbMiss)		
Read-	Read-write. Reset: 00h.	
PMCx04	PMCx045	
Bits	Description	
7	TlbReload1GL2Miss. Read-write. Reset: 0.	
6	TlbReload2ML2Miss. Read-write. Reset: 0.	
5	TlbReload32KL2Miss. Read-write. Reset: 0.	
4	TlbReload4KL2Miss. Read-write. Reset: 0.	
3	TlbReload1GL2Hit. Read-write. Reset: 0.	
2	TlbReload2ML2Hit. Read-write. Reset: 0.	
1	TlbReload32KL2Hit. Read-write. Reset: 0.	
0	TlbReload4KL2Hit. Read-write. Reset: 0.	

PMCx046 [Total Page Table Walks] (Core::X86::Pmc::Core::LsTablewalker)

	Tiveno io [rotal rage rable (value) (corevirous messeores prable (value))	
Read-write. Reset: 00h.		
PMCx04	PMCx046	
Bits	Description	
7:4	Reserved.	
3	IcType1. Read-write. Reset: 0.	
2	IcType0. Read-write. Reset: 0.	
1	DcType1 . Read-write. Reset: 0.	
0	DcType0 . Read-write. Reset: 0.	

PMCx047 [Misaligned loads] (Core::X86::Pmc::Core::LsMisalAccesses)

PMCx047	
Bits	Description
7:0	Reserved.

PMCx04B [Prefetch Instructions Dispatched] (Core::X86::Pmc::Core::LsPrefInstrDisp)

Reset:	Reset: 00h.	
Softwa	Software Prefetch Instructions Dispatched (Speculative).	
PMCx04	PMCx04B	
Bits	Description	
7:0	Reserved.	

PMCx052 [Ineffective Software Prefetchs] (Core::X86::Pmc::Core::LsInefSwPref)

Read-	Read-write. Reset: 00h.	
The n	The number of software prefetches that did not fetch data outside of the processor core.	
PMCx0	PMCx052	
Bits	Description	
7:2	Reserved.	
1	MabMchCnt . Read-write. Reset: 0. Software PREFETCH instruction saw a match on an already-allocated miss	
	request buffer.	
0	DataPipeSwPfDcHit . Read-write. Reset: 0. Software PREFETCH instruction saw a DC hit.	

PMCx059 [Software Prefetch Data Cache Fills] (Core::X86::Pmc::Core::LsSwPfDcFills)

Read-	Read-write. Reset: 00h.	
Softw	Software Prefetch Data Cache Fills by Data Source.	
PMCx059		
Bits	Description	
7	Reserved.	
6	LS_MABRESP_RMT_DRAM. Read-write. Reset: 0. DRAM or IO from different die.	

5	Reserved.
4	LS_MABRESP_RMT_CACHE . Read-write. Reset: 0. Hit in cache; Remote CCX and the address's Home Node
	is on a different die.
3	LS_MABRESP_LCL_DRAM. Read-write. Reset: 0. DRAM or IO from this thread's die.
2	Reserved.
1	LS_MABRESP_LCL_CACHE. Read-write. Reset: 0. Hit in cache; local CCX (not Local L2), or Remote CCX
	and the address's Home Node is on this thread's die.
0	MABRESP_LCL_L2. Read-write. Reset: 0. Local L2 hit.

PMCx05A [Hardware Prefetch Data Cache Fills] (Core::X86::Pmc::Core::LsHwPfDcFills)

	Thioxodi [Haraware Trefetter Bata Gather Has] (Gore No Her. Gore Estim Hase Has)	
Read-write. Reset: 00h.		
Hardware Prefetch Data Cache Fills by Data Source.		
PMCx05	5A	
Bits	Description	
7	Reserved.	
6	LS_MABRESP_RMT_DRAM. Read-write. Reset: 0. DRAM or IO from different die.	
5	Reserved.	
4	LS_MABRESP_RMT_CACHE . Read-write. Reset: 0. Hit in cache; Remote CCX and the address's Home Node	
	is on a different die.	
3	LS_MABRESP_LCL_DRAM. Read-write. Reset: 0. DRAM or IO from this thread's die.	
2	Reserved.	
1	LS_MABRESP_LCL_CACHE. Read-write. Reset: 0. Hit in cache; local CCX (not Local L2), or Remote CCX	
	and the address's Home Node is on this thread's die.	
0	MABRESP_LCL_L2. Read-write. Reset: 0. Local L2 hit.	

PMCx05B [Table Walker Data Cache Fills by Data Source] (Core::X86::Pmc::Core::LsTwDcFills)

Read-	Read-write. Reset: 00h.	
PMCx05B		
Bits	Description	
7	Reserved.	
6	LS_MABRESP_RMT_DRAM. Read-write. Reset: 0. DRAM or IO from different die.	
5	Reserved.	
4	LS_MABRESP_RMT_CACHE . Read-write. Reset: 0. Hit in cache; Remote CCX and the address's Home Node	
	is on a different die.	
3	LS_MABRESP_LCL_DRAM. Read-write. Reset: 0. DRAM or IO from this thread's die.	
2	Reserved.	
1	LS_MABRESP_LCL_CACHE. Read-write. Reset: 0. Hit in cache; local CCX (not Local L2), or Remote CCX	
	and the address's Home Node is on this thread's die.	
0	MABRESP LCL, L2, Read-write, Reset: 0, Local L2 hit.	

PMCx076 [Cycles not in Halt] (Core::X86::Pmc::Core::LsNotHaltedCyc)

PMCx076	
Bits	Description
7:0	Reserved.

PMCx078 [All TLB Flushes] (Core::X86::Pmc::Core::LsTlbFlush)

Reset: 00h.		
PMCx078		
Bits	Description	
7:0	Reserved.	

2.1.15.4.3 IC and BP Events

Note: All instruction cache events are speculative events unless specified otherwise.

PMCx080 [Total Number of 32B Instruction Fetches] (Core::X86::Pmc::Core::IcFw32)

The number of 32B instruction cache fetches issued to the instruction decoder.

PMCx080

Bits Description

7:0 Reserved.

PMCx081 [Number of 32B Instruction Fetches that Miss in Instruction Cache]

(Core::X86::Pmc::Core::IcFw32Miss)

The number of 32B fetches that tried to read the L1 instruction cache and missed.

PMCx081

Bits Description

7:0 Reserved.

PMCx082 [Instruction Cache Refills from L2] (Core::X86::Pmc::Core::IcCacheFillL2)

The number of 64 byte instruction cache line was fulfilled from the L2 cache.

PMCx082

Bits Description

7:0 Reserved.

PMCx083 [Instruction Cache Refills from System] (Core::X86::Pmc::Core::IcCacheFillSys)

The number of 64 byte instruction cache line fulfilled from system memory or another cache.

PMCx083

Bits Description

7:0 Reserved.

PMCx084 [L1 ITLB Miss, L2 ITLB Hit] (Core::X86::Pmc::Core::BpL1TlbMissL2TlbHit)

The number of instruction fetches that miss in the L1 ITLB but hit in the L2 ITLB.

PMCx084

Bits | Description

7:0 Reserved.

PMCx085 [L1 ITLB Miss, L2 ITLB Miss] (Core::X86::Pmc::Core::BpL1TlbMissL2TlbMiss)

The number of instruction fetches that miss in both the L1 and L2 TLBs.

PMCx085

Bits Description

7:0 Reserved.

PMCx08A [L1 Branch Prediction Overrides Existing Prediction (speculative)]

(Core::X86::Pmc::Core::BpL1BTBCorrect)

PMCx08A

Bits | Description

7:0 Reserved.

PMCx08B [L2 Branch Prediction Overrides Existing Prediction (speculative)]

(Core::X86::Pmc::Core::BpL2BTBCorrect)

PMCx08B

Bits Description

7:0 Reserved.

PMCx08C [Instruction Cache Lines Invalidated] (Core::X86::Pmc::Core::IcCacheInval)

Read-write. Reset: 00h.		
The nu	The number of instruction cache lines invalidated. A non-SMC event is CMC (cross modifying code), either from the	
other thread of the core or another core.		
PMCx08	PMCx08C	
Bits	Description	
7:2	Reserved.	
1	L2InvalidatingProbe . Read-write. Reset: 0. IC line invalidated due to L2 invalidating probe (external or LS).	
0	FillInvalidated. Read-write. Reset: 0. IC line invalidated due to overwriting fill response.	

PMCx08E [Dynamic Indirect Predictions] (Core::X86::Pmc::Core::BpDynIndPred)

I	Indirect Branch Prediction for potential multi-target branch (speculative)	
P	PMCx08E	
	Bits	Description
	7:0	Reserved.

PMCx091 [Decoder Overrides Existing Branch Prediction (speculative)] (Core::X86::Pmc::Core::BpDeReDirect)

PMCx091	
Bits	Description
7:0	Reserved.

PMCx099 [ITLB Reloads] (Core::X86::Pmc::Core::BpTlbRel)

The number of ITLB reload requests.		
PMCx09	PMCx099	
Bits	Description	
7:0	Reserved.	

$PMCx28A \ [Switches \ between \ instruction \ fetch \ and \ op \ cache \ fetch \ modes]$

(Core::X86::Pmc::Core::IcOcModeSwitch)

rcau-	Redu-write. Reset. von.	
See Core::X86::Pmc::Core::DeDisUopsFromDecoder (PMCx0AA) for number of ops dispatched from OC.		
PMCx28	PMCx28A	
Bits	Description	
7:2	Reserved.	
1	OcIcModeSwitch: OC to IC mode switch. Read-write. Reset: 0.	
0	IcOcModeSwitch: IC to OC mode switch. Read-write. Reset: 0.	

2.1.15.4.4 **DE Events**

Read-write Reset: 00h

PMCx0AA [UOps Dispatched From Decoder] (Core::X86::Pmc::Core::DeDisUopsFromDecoder) Read-write. Reset: 00h. Ops dispatched from either the decoders, OpCache or both. PMCx0AA Bits Description 7:2 Reserved. 1 OpCacheDispatched: Count of dispatched Ops from OpCache. Read-write. Reset: 0. 0 DecoderDispatched: Count of dispatched Ops from Decoder. Read-write. Reset: 0.

PMCx0AE [Dispatch Resource Stall Cycles 1] (Core::X86::Pmc::Core::DeDisDispatchTokenStalls1)

Read-write. Reset: 00h.	
Cycles where a dispatch group is valid but does not get dispatched due to a Token Stall.	
PMCx0AE	

Bits	Description
7	FPMiscRsrcStall: FP Miscellaneous resource unavailable. Read-write. Reset: 0. Applies to the recovery of
	mispredicts with FP ops.
6	FPSchRsrcStall : FP scheduler resource stall . Read-write. Reset: 0. Applies to ops that use the FP scheduler.
5	FpRegFileRsrcStall: floating point register file resource stall . Read-write. Reset: 0. Applies to all FP ops that
	have a destination register.
4	TakenBrnchBufferRsrc: taken branch buffer resource stall. Read-write. Reset: 0.
3	IntSchedulerMiscRsrcStall: Integer Scheduler miscellaneous resource stall. Read-write. Reset: 0.
2	StoreQueueRsrcStall : Store Queue resource stall . Read-write. Reset: 0. Applies to all ops with store semantics.
1	LoadQueueRsrcStall : Load Queue resource stall . Read-write. Reset: 0. Applies to all ops with load semantics.
0	IntPhyRegFileRsrcStall: Integer Physical Register File resource stall. Read-write. Reset: 0. Integer Physical
	Register File, applies to all ops that have an integer destination register.

PMCx0AF [Dispatch Resource Stall Cycles 0] (Core::X86::Pmc::Core::DeDisDispatchTokenStalls0)

	, j
Read-write. Reset: 00h.	
Cycles where a dispatch group is valid but does not get dispatched due to a token stall.	
PMCx0A	AF
Bits	Description
7	Reserved.
6	RetireRsrcStall: RETIRE Resource unavailable. Read-write. Reset: 0.
5	AGSQRsrcStall: AGSQ Resources unavailable. Read-write. Reset: 0.
4	ALURsrcStall: ALU Resources total unavailable. Read-write. Reset: 0.
3	ALSQ3_0_RsrcStall. Read-write. Reset: 0.
2	ALSQ3RsrcStall: ALSQ 3 Resources unavailable. Read-write. Reset: 0.
1	ALSQ2RsrcStall: ALSQ 2 Resources unavailable. Read-write. Reset: 0.
0	ALSQ1RsrcStall: ALSQ 1 Resources unavailable. Read-write. Reset: 0.

2.1.15.4.5 EX (SC) Events

PMCx0C0 [Retired Instructions] (Core::X86::Pmc::Core::ExRetInstr)			
PMCx0	PMCx0C0		
Bits	Description		
7:0	Reserved.		

PMCx0C1 [Retired Uops] (Core::X86::Pmc::Core::ExRetCops)

The number of micro-ops retired. This count includes all processor activity (instructions, exceptions, interrupts, microcode assists, etc.). The number of events logged per cycle can vary from 0 to 8.

PMCx0C1

Bits	Description
7:0	Reserved.

PMCx0C2 [Retired Branch Instructions] (Core::X86::Pmc::Core::ExRetBrn)

The number of branch instructions retired. This includes all types of architectural control flow changes, including exceptions and interrupts.

THEATON	GE .	
Bits	Description	
7:0	Reserved.	

PMCx0C3 [Retired Branch Instructions Mispredicted] (Core::X86::Pmc::Core::ExRetBrnMisp)

The number of branch instructions retired, of any type, that were not correctly predicted. This includes those for which

prediction is not attempted (far control transfers, exceptions and interrupts).			
PMCx00	PMCx0C3		
Bits	Description		
7:0	Reserved.		

PMCx0C4 [Retired Taken Branch Instructions] (Core::X86::Pmc::Core::ExRetBrnTkn)

The number of taken branches that were retired. This includes all types of architectural control flow changes, including exceptions and interrupts.

PMCx0C4

PIVICXUC4	C4	
Bits 1	Description	
7:0	Reserved.	

PMCx0C5 [Retired Taken Branch Instructions Mispredicted] (Core::X86::Pmc::Core::ExRetBrnTknMisp)

The number of retired taken branch instructions that were mispredicted.

PMCx0C5

Bits	Description
7:0	Reserved.

PMCx0C6 [Retired Far Control Transfers] (Core::X86::Pmc::Core::ExRetBrnFar)

The number of far control transfers retired including far call/jump/return, IRET, SYSCALL and SYSRET, plus exceptions and interrupts. Far control transfers are not subject to branch prediction.

PMCx0C6

Bits	Description
7:0	Reserved.

PMCx0C8 [Retired Near Returns] (Core::X86::Pmc::Core::ExRetNearRet)

The number of near return instructions (RET or RET Iw) retired.

PMCx0C8

Bits	Description
7.0	Reserved

PMCx0C9 [Retired Near Returns Mispredicted] (Core::X86::Pmc::Core::ExRetNearRetMispred)

The number of near returns retired that were not correctly predicted by the return address predictor. Each such mispredict incurs the same penalty as a mispredicted conditional branch instruction.

PMCx0C9

Bits	Description
7:0	Reserved.

PMCx0CA [Retired Indirect Branch Instructions Mispredicted] (Core::X86::Pmc::Core::ExRetBrnIndMisp)

The number of indirect branches retired that were not correctly predicted. Each such mispredict incurs the same penalty as a mispredicted conditional branch instruction. Note that only EX mispredicts are counted.

PMCx0CA

FIVICAUC	FINCAUCA	
Bits	Description	
7:0	Reserved.	

PMCx0CB [Retired MMXTM/FP Instructions] (Core::X86::Pmc::Core::ExRetMmxFpInstr)

Read-write. Reset: 00h.

The number of MMX, SSE or x87 instructions retired. The UnitMask allows the selection of the individual classes of instructions as given in the table. Each increment represents one complete instruction. Since this event includes non-numeric instructions it is not suitable for measuring MFLOPs.

PMCx0CB

 IVICAUC	שני
Bits	Description
7:3	Reserved.

2	SseInstr. Read-write. Reset: 0. SSE instructions (SSE, SSE2, SSE3, SSSE3, SSE4A, SSE41, SSE42, AVX).
1	MmxInstr. Read-write. Reset: 0. MMX instructions.
0	X87Instr: x87 instructions Read-write Reset: 0

PMCx0D1 [Retired Conditional Branch Instructions] (Core::X86::Pmc::Core::ExRetCond)

1 WOXODI [Retired Conditional District Instructions] (Corexoo inccoreExtercond)		
PMCx0I	PMCx0D1	
Bits	Description	
7:0	Reserved.	

PMCx0D3 [Div Cycles Busy count] (Core::X86::Pmc::Core::ExDivBusy) | PMCx0D3 | Description | | 7:0 | Reserved.

PM	PMCx0D4 [Div Op Count] (Core::X86::Pmc::Core::ExDivCount)	
PMC	PMCx0D4	
Bit	Description Description	
7:0	Reserved.	

PMCx1CF [Tagged IBS Ops] (Core::X86::Pmc::Core::ExTaggedIbsOps)		
Read-write. Reset: 00h.		
PMCx10	PMCx1CF	
Bits	Bits Description	
7:3	Reserved.	
2	IbsCountRollover . Read-write. Reset: 0. Number of times an op could not be tagged by IBS because of a	
	previous tagged op that has not retired.	
1	IbsTaggedOpsRet : Number of Ops tagged by IBS that retired. Read-write. Reset: 0.	
0	IbsTaggedOps: Number of Ops tagged by IBS. Read-write. Reset: 0.	

PMCx1D0 [Retired Fused Branch Instructions] (Core::X86::Pmc::Core::ExRetFusBrnchInst)	
The number of fuse-branch instructions retired per cycle. The number of events logged per cycle can vary from 0-8.	
PMCx1D0	
Bits	Description
7:0	Reserved.

2.1.15.4.6 L2 Cache Events.

PMC2	PMCx060 [Requests to L2 Group1] (Core::X86::Pmc::Core::L2RequestG1)		
Read-	Read-write. Reset: 00h.		
All L2	Cache Requests (Breakdown 1 - Common).		
PMCx06	0		
Bits	Description		
7	RdBlkL: Data Cache Reads (including prefetch). Read-write. Reset: 0.		
6	RdBlkX: Data Cache Stores. Read-write. Reset: 0.		
5	LsRdBlkC_S: Data Cache Shared Reads. Read-write. Reset: 0.		
4	CacheableIcRead: Instruction Cache Reads. Read-write. Reset: 0.		
3	ChangeToX: Data Cache State Change Requests. Read-write. Reset: 0.		
2	PrefetchL2 : Software Prefetch. Read-write. Reset: 0. Assume core should also count these and allow the		
	breakdown between hardware versus software and data versus instruction.		
1	L2HwPf : L2 Prefetcher . Read-write. Reset: 0. All prefetches accepted by L2 pipeline, hit or miss. Types of PF		
	and L2 hit/miss broken out in a separate perfmon event.		

0	Group2 . Read-write. Reset: 0. Miscellaneous events covered in more detail by
	Core::X86::Pmc::Core::L2RequestG2 (PMCx061).

PMCx061 [Requests to L2 Group2] (Core::X86::Pmc::Core::L2RequestG2)

Read-write. Reset: 00h.		
All L2 Cache Requests (Breakdown 2 - Rare).		
PMCx06	61	
Bits	Description	
7	Group1 . Read-write. Reset: 0. Miscellaneous events covered in more detail by	
	Core::X86::Pmc::Core::L2RequestG1 (PMCx060).	
6	LsRdSized: Data cache read sized. Read-write. Reset: 0.	
5	LsRdSizedNC: Data cache read sized non-cacheable. Read-write. Reset: 0.	
4	IcRdSized: Instruction cache read sized. Read-write. Reset: 0.	
3	IcRdSizedNC: Instruction cache read sized non-cacheable. Read-write. Reset: 0.	
2	SmcInval: Self-modifying core invalidates. Read-write. Reset: 0.	
1	BusLocksOriginator: Bus locks. Read-write. Reset: 0.	
0	BusLocksResponses: Bus Lock Response. Read-write. Reset: 0.	

PMCx062 [L2 Latency] (Core::X86::Pmc::Core::L2Latancy)

Read-write. Reset: 00h.

Total cycles spent waiting for L2 fills to complete from L3 or memory, divided by four. This may be used to calculate average latency by multiplying this count by four and then dividing by the total number of L2 fills (unit mask Core::X86::Pmc::Core::L2RequestG1 == FEh). Event counts are for both threads. To calculate average latency, the number of fills from both threads must be used.

PMCx062

Bits	Description
7:1	Reserved.
0	L2CyclesWaitingOnFills. Read-write. Reset: 0.

PMCx064 [Core to L2 Cacheable Request Access Status] (Core::X86::Pmc::Core::L2CacheReqStat)

Read-	write. Reset: 00h.
L2 Ca	che Request Outcomes (not including L2 Prefetch).
PMCx064	
Bits	Description
7	LsRdBlkCS: Data Cache Shared Read Hit in L2. Read-write. Reset: 0.
6	LsRdBlkLHitX: Data Cache Read Hit in L2. Read-write. Reset: 0.
5	LsRdBlkLHitS: Data Cache Read Hit on Shared Line in L2. Read-write. Reset: 0.
4	LsRdBlkX: Data Cache Store or State Change Hit in L2. Read-write. Reset: 0.
3	LsRdBlkC: Data Cache Req Miss in L2 (all types). Read-write. Reset: 0.
2	IcFillHitX: Instruction Cache Hit Modifiable Line in L2. Read-write. Reset: 0.
1	IcFillHitS: Instruction Cache Hit Clean Line in L2. Read-write. Reset: 0.
0	IcFillMiss: Instruction Cache Req Miss in L2. Read-write. Reset: 0.

PMCx06D [Cycles with fill pending from L2] (Core::X86::Pmc::Core::L2FillPending)

Read-	Read-write. Reset: 00h.	
Total o	Total cycles spent with one or more fill requests in flight from L2.	
PMCx06	PMCx06D	
Bits	Description	
7:1	Reserved.	
0	L2FillBusy. Read-write. Reset: 0.	

PMCx070 [L2 Prefetch Hit in L2] (Core::X86::Pmc::Core::L2PfHitL2)

Reset:	Reset: 00h.						
PMCx07	70						
Bits	Description						
Dits	Description						

PMCx071 [L2 Prefetcher Hits in L3] (Core::X86::Pmc::Core::L2PfMissL2HitL2)

Reset:	et: 00h.						
Count	s all <mark>L2 prefetche</mark> s accepted by the L2 pipeline which <mark>miss the L2 cache</mark> and <mark>hit the L</mark> 3.						
PMCx07	71						
Bits	Description						
7:0	Reserved.						

PMCx072 [L2 Prefetcher Misses in L3] (Core::X86::Pmc::Core::L2PfMissL2L3)

Reset:	et: 00h.						
Count	Counts all L2 prefetches accepted by the L2 pipeline which miss the L2 and the L3 caches.						
PMCx07	PMCx072						
Bits	Description						
7:0	Reserved.						

2.1.15.5 L3 Cache Performance Monitor Counters

The L3 cache is organized as 4 2MB slices shared by 4 cores.

This section provides the core performance counter events that may be selected through Core::X86::Msr::ChL3PmcCfg.

- Unless otherwise noted, L3 Perfmon events require the Core::X86::Msr::ChL3PmcCfg[SliceMask] field to be set. If it is not set, the PMC count will be zero.
- Unless otherwise noted, L3 PMC's require Core::X86::Msr::ChL3PmcCfg[ThreadMask] to be set. The events that don't require a ThreadMask will continue to count, even if the ThreadMask is 0. All other events will have a count of 0 when the ThreadMask is 0.
- When in non-SMT mode, ThreadMask must be 0 for events that don't ignore ThreadMask,

2.1.15.5.1 L3 Cache PMC Events

L3PMCx01 [L3 Cache Accesses] (Core::X86::Pmc::L3::L3RequestG1)						
Read-	Read-write. Reset: 00h.					
L3PMC2	x01					
Bits	Description					
7	Caching: L3 cache accesses. Read-write. Reset: 0.					
6:0	Reserved.					

L3PMCx04 [All L3 Cache Requests] (Core::X86::Pmc::L3::L3LookupState)

Read-	Read-write. Reset: 00h.						
L3PMC:	x04						
Bits	Description						
7:0	AllL3ReqTyps: All L3 Request Types. Read-write. Reset: 00h.						

L3PMCx06 [L3 Miss] (Core::X86::Pmc::L3::L3CombClstrState)

Read-	-write. Reset: 00h.				
L3 Ca	ache Request Outcomes.				
L3PMC	L3PMCx06				
Bits	Description				

7.1 Decembed

/:1	7:1 Reserved.							
0	0 RequestMiss : L3 cache miss . Read-write. Reset: 0.							
L3PM	ICx90 [L3 Cache Miss Latency] (Core::X86::Pmc::L3::XiSysFillLatency)							
Ignore	Ignores SliceMask and ThreadMask.							
Total	Total cycles for all transactions divided by 16.							
L3PMC	x90							
Bits	Bits Description							
7.0	7·0 Reserved							

L3PMCx9A [L3 Misses by Request Type] (Core::X86::Pmc::L3::XiCcxSdpReq1)								
Reset: 00h.								
Ignore	Ignores SliceMask and ThreadMask.							
L3PMCx	49A							
Bits	Description							
7:0	eserved.							

2.1.16 Instruction Based Sampling (IBS)

IBS is a code profiling mechanism that enables the processor to select a random instruction fetch or micro-Op after a programmed time interval has expired and record specific performance information about the operation. An interrupt is generated when the operation is complete as specified by Core::X86::Msr::IBS_CTL. An interrupt handler can then read the performance information that was logged for the operation.

The IBS mechanism is split into two parts: instruction fetch performance controlled by Core::X86::Msr::IBS FETCH CTL; and instruction execution performance controlled by

Core::X86::Msr::IBS_OP_CTL. Instruction fetch sampling provides information about instruction TLB and instruction cache behavior for fetched instructions. Instruction execution sampling provides information about micro-Op execution behavior. The data collected for instruction fetch performance is independent from the data collected for instruction execution performance. Support for the IBS feature is indicated by the Core::X86::Cpuid::FeatureExtIdEcx[IBS].

Instruction fetch performance is profiled by recording the following performance information for the tagged instruction fetch:

- If the instruction fetch completed or was aborted. See Core::X86::Msr::IBS_FETCH_CTL.
- The number of clock cycles spent on the instruction fetch. See Core::X86::Msr::IBS_FETCH_CTL.
- If the instruction fetch hit or missed the IC, hit/missed in the L1 and L2 TLBs, and page size. See Core::X86::Msr::IBS_FETCH_CTL.
- The linear address, physical address associated with the fetch. See Core::X86::Msr::IBS_FETCH_LINADDR, Core::X86::Msr::IBS_FETCH_PHYSADDR.

Instruction execution performance is profiled by tagging one micro-Op associated with an instruction. Instructions that decode to more than one micro-Op return different performance data depending upon which micro-Op associated with the instruction is tagged. These micro-Ops are associated with the RIP of the next instruction to retire. The following performance information is returned for the tagged micro-Op:

- Branch and execution status for micro-ops. See Core::X86::Msr::IBS_OP_DATA.
- Branch target address for branch micro-ops. See Core::X86::Msr::BP_IBSTGT_RIP.
- The logical address associated with the micro-Op. See Core::X86::Msr::IBS_OP_RIP.
- The linear and physical address associated with a load or store micro-Op. See Core::X86::Msr::IBS_DC_LINADDR, Core::X86::Msr::IBS_DC_PHYSADDR.
- The data cache access status associated with the micro-Op: DC hit/miss, DC miss latency, TLB hit/miss, TLB page size. See Core::X86::Msr::IBS_OP_DATA3.
- The number clocks from when the micro-Op was tagged until the micro-Op retires. See

Core::X86::Msr::IBS_OP_DATA.

- The number clocks from when the micro-Op completes execution until the micro-Op retires. See Core::X86::Msr::IBS_OP_DATA.
- Source information for DRAM and MMIO. See Core::X86::Msr::IBS_OP_DATA2.

3 Reliability, Availability, and Serviceability (RAS) Features

A full implementation of RAS involves capabilities and support from the processor design, board hardware design, BIOS, firmware, and software. A broad view of the RAS environment can be found in docRAS. This section describes the capabilities provided by the Family 17h Model 00h-0Fh processor.

3.1 Machine Check Architecture

Table 20: Machine Check Terms and Acronyms

Term	Description					
MCA	Machine Check Architecture.					
MCAX	Machine Check Architecture eXtensions.					
WRIG	Writes Ignored.					

3.1.1 Overview

The processor contains logic and registers to detect, log, and correct errors in the data or control paths. The Machine Check Architecture (MCA) defines facilities by which processor and system hardware errors are logged and reported to system software. This allows system software to perform a strategic role in recovery from and diagnosis of hardware errors.

3.1.1.1 Legacy Machine Check Architecture

The legacy x86 Machine Check Architecture (MCA) refers to the standard x86 facilities for error logging and reporting. Refer to the AMD64 Architecture Programmer's Manual for an architectural overview of the Machine Check Architecture.

Support for the MCA is indicated by Core::X86::Cpuid::FeatureIdEdx[MCA] or Core::X86::Cpuid::FeatureExtIdEdx[MCA].

3.1.1.2 Machine Check Architecture Extensions

Machine Check Architecture Extensions (MCAX) is AMD's x86-64 extension to the Machine Check Architecture.

Goals of MCAX include:

- Accommodate a variety of implementations, where each implementation may have a different assignment of MCA bank to block.
 - For example, one implementation may have 1 memory channel with an MCA bank, and another otherwise identical implementation may have 2 memory channels, each with their own MCA bank. Therefore, MCA bank allocation will appear different between these two implementations. MCAX is designed to require no assumptions about which MCA banks access which blocks.
 - Provide granular information for error logging, to improve error handling and diagnosibility.
 - Preserve compatibility with system software which is not MCAX-aware.

Features of the MCA Extensions include:

- Increased MCA Bank Count: Features to support an expansion of the number of MCA banks supported by AMD processors.
- MCA Extension Registers: Expanded information logged in MCA banks to allow for improved error handling, better diagnosability, and future scalability.

MCA DOER/SEER Roles: Separation of MCA information to take advantage of emerging software roles, namely
Error Management (Dynamic Operational Error Handling, or DOER) for managing running programs, and Fault
Management (Symptom Elaboration of Errors, or SEER) for hardware diagnosability and reconfiguration. This
clearer separation is accompanied by the assurances of architectural state (vs. implementation dependent state), so
that operating systems can rely on the state and exploit new functionality.

Support for Machine Check Architecture Extensions (MCAX) is indicated by Core::X86::Cpuid::RasCap[ScalableMca].

3.1.1.3 Use of MCA Information

The MCA registers contain information that can be used for multiple purposes. Some of this information is architecturally specified, and remains consistent from generation to generation, enabling portable, stable code. Some of this information is implementation specific; it is vital for diagnosis and other software functions, but may change with new implementations. It is important to understand how this information is categorized, and how it should be used. This section describes a framework for that.

There are two fundamental roles to be carried out after an error occurs; Error Management and Fault Management. All information required for Error Management is architectural and stable; some information required for Fault Management is also architectural.

3.1.1.3.1 Error Management

Error Management describes actions necessary by operational software (e.g., the operating system or the hypervisor) to manage running programs that are affected by the error. The list of possible actions for operational error management is generally fairly short: take no action; terminate a single affected process, program, or virtual machine; terminate system operation. The Error Management role is defined as the DOER role (Dynamic Operational Error Handling). The name is intended to indicate an active role in managing running programs. Information used by the DOER is fairly limited and straightforward. It includes only those status fields needed to make decisions about the scope and severity of the error, and to determine what immediate action is to be taken.

3.1.1.3.2 Fault Management

Fault Management describes optional actions for purposes of diagnosis, repair, and reconfiguration of the underlying hardware. The Fault Management role is described as SEER (Symptom Elaboration of Errors) because it peers further into hardware behavior and may try to influence future behavior via Predictive Fault Analysis, reconfiguration, service actions, etc. Because the SEER depends on understanding specifics of hardware configuration, it necessarily requires implementation specific knowledge and is portable.

Fields that are not explicitly specified as DOER are SEER. By separating error handling software into DOER and SEER roles, programmers can create both simpler and more functional code. The terms DOER and SEER appear in other sections of this document as an aid to reasoning about error handling and understanding actions to be taken.

3.1.2 Machine Check Registers

Host software references MCA registers via MSRs. MSRs are accessed through x86 WRMSR and RDMSR instructions. MSR addresses are private to a logical core; a given MSR referenced by two different cores results in references to two different MCA registers.

3.1.2.1 Global Registers

Core::X86::Cpuid::FeatureIdEdx[MCA] or Core::X86::Cpuid::FeatureExtIdEdx[MCA] indicates the presence of the

following machine check registers:

- Core::X86::Msr::MCG CAP
 - Reports how many machine check register banks are supported. This is a per-thread value, and reflects the
 number of MCA banks visible to that thread. Some banks may be RAZ/WRIG either due to the bank
 being reserved or unused on this processor or because the block's MCA bank is controlled by another
 thread.
- Core::X86::Msr::MCG STAT
 - Provides basic information about processor state after the occurrence of a machine check error.
- Core::X86::Msr::MCG_CTL
 - Used by software to enable or disable the logging and reporting of machine check errors in the error reporting banks.
- Core::X86::Msr::McaIntrCfg
 - Used by software to configure certain machine check interrupts

3.1.2.2 Machine Check Banks

A processor contains multiple blocks, and some of them have banks of machine check architecture registers (MCA banks). An MCA bank logs and reports errors to software.

The legacy MCA supports up to 32 MCA banks per logical core. MCAX supports up to 64 MCA banks per logical core.

The processor ensures that non-zero error status in an MCA bank is visible to exactly one logical core in a system, and that error notifications are directed to that logical core. Hardware also makes MCA bank configuration and control registers available to exactly one logical core. Banks associated with a CPU core are controlled by that logical core. Banks associated with other blocks are controlled by an implementation-specific logical core.

3.1.2.2.1 Legacy MCA Registers

Each legacy MCA bank allocates address space for 4 legacy MCA registers.

The legacy MCA registers include:

- MCA CTL
 - Enables error reporting via machine check exception.
- MCA_STATUS
 - · Logs information associated with errors.
- MCA ADDR
 - Logs address information associated with errors.
- MCA_MISC0
 - Logs miscellaneous information associated with errors.

3.1.2.2.2 Legacy MCA MSRs

The legacy MCA MSRs are MSR0000_04[7F:00]. The legacy MCA MSR space contains 32 banks of 4 registers per bank. The layout of the legacy MCA MSR space is given in Table 21 [Legacy MCA MSR Layout].

Table 21: Legacy MCA MSR Layout

MCA bank	MCA_CTL	MCA_STATUS	MCA_ADDR	MCA_MISC0				
(decimal) (MSR0000_0xxx)								
0	400	401	402	403				
1	404	405	406	407				
2	408	409	40A	40B				

3	40C	40D	40E	40F
4	410	411	412	413
5	414	415	416	417
6	418	419	41A	41B

Features and registers associated with the MCA Extensions are not available in this legacy MSR address range. AMD recommends that operating systems use the MCAX MSR address range, rather than rely on the legacy MCA MSR address range.

All unimplemented or unused registers in the legacy MCA MSR address range are RAZ/WRIG. MC4 registers (MSR0000_0410:0000_0413) are RAZ/WRIG.

MSR0000_0000 is aliased to the MCAX MSR address for MC0_ADDR, and MSR0000_0001 is aliased to the MCAX MSR address of MC0_STATUS.

3.1.2.2.3 MCAX Registers

Each MCAX bank allocates address space for 16 MCA registers. All unimplemented registers in the MCA MSR space are RAZ/WRIG. MCAX bank registers include the legacy MCA registers as well as registers associated with the MCA Extensions.

The MCA Extension registers include:

- MCA_CONFIG
 - Provide configuration capabilities for this MCA bank.
- MCA_IPID
 - Provides information on the block associated with this MCA bank.
- MCA SYND
 - Logs physical location information associated with a logged error.
- MCA DESTATUS
 - Logs status information associated with a deferred error.
- MCA_DEADDR
 - Logs address information associated with a deferred error.
- MCA_MISC[1:4]
 - Provides additional threshold counters within an MCA bank.

3.1.2.2.4 MCAX MSRs

MCAX MSRs are present at MSRC000_2[3FF:000]. This MSR address range contains space for 64 banks of 16 registers each. MSRC000_2[FFF:400] are reserved for future use. The MCAX MSR address range allows access to both legacy MCA registers and MCAX registers in each MCA bank.

The x86 MCAX MSR address format is SSSS_SBBR (hex). S = MCA register space (i.e. MSRC000_2xxx). B=MCA bank. R=Register offset within MCA bank. The layout of the MCAX MSR space is given in Table 22 [MCAX MSR Layout].

Access to unused MCAX MSRs is RAZ/WRIG. MCA Bank 4 is always read-as-zero (RAZ/WRIG).

Table 22: MCAX MSR Layout

MCA	MCAX MSR (MSRC000_2xxx)										
bank	Legacy MCA Bank registers MCAX Bank registers										
	CTL	CTL STATUS ADDR MISCO CONFIG IPID SYND Reserved DESTATUS DEADDR MISC[4:1]									
0	000	001	002	003	004	005	006	007	800	009	00D:00A

1	010	K)	012	013	014	015	016	017	018	019	01D:01A
2	020	021	022	023	024	025		027	028	029	02D:02A
63	3F0	3F1	3F2	3F3	3F4	3F5	3F6	3F7	3F8	3F9	3FD:3FA

All processors maintain the same mapping of MSR to MCA bank number (MSRC000_2000 for the beginning of MCA Bank 0, MSRC000_2010 for the beginning of MCA Bank 1, etc.), regardless of what block the bank represents (see 3.1.5.5 [Determining Bank Type]).

MCA_CTL_MASK MSRs are present at MSRC001_04[3F:00]. MSRC001_04[FF:40] are reserved for future use. The layout of these registers is given in Table 23 [MCAX Implementation-Specific Register Layout].

Table 23: MCAX Implementation-Specific Register Layout

MCA bank	MCA_CTL_MASK
	(MSRC001_04xx)
0	00
1	01
2	02
63	3F

3.1.2.3 Access Permissions

When McStatusWrEn==0, a write to an implemented MCA_STATUS register causes a General Protection Fault (#GP) unless the value being written is zero. When McStatusWrEn==1, a write to an implemented MCA_STATUS register does not cause a #GP regardless of data value.

Access to legacy MCA_CTL_MASK (MSRC001_00xx) causes a General Protection Fault (#GP).

Access to legacy MC4 MISC1-8 (MSRC000 0408:C000 040F) is RAZ/WRIG.

3.1.3 Machine Check Errors

3.1.3.1 Error Severities

The classes of machine check errors are, in priority order from highest to lowest:

- Uncorrected
- Deferred
- Corrected

Uncorrected errors cannot be corrected by hardware. Uncorrected errors update the status and address registers if not masked from logging in MCA_CTL_MASK. Information in the status and address registers from a previously logged lower priority error is overwritten. Previously logged errors of the same priority are not overwritten. Uncorrected errors that are enabled for reporting in MCA_CTL result in reporting to software via machine check exceptions. If an uncorrected error is masked from logging, the error is ignored by hardware (exceptions are noted in the register definitions). If an uncorrected error is disabled from reporting, containment of the error and logging/reporting of subsequent errors may be affected. Therefore, enable reporting of unmasked uncorrected errors for normal operation. Disable reporting of uncorrected errors only for debug purposes.

Deferred errors are errors that cannot be corrected by hardware, but do not cause an immediate interruption in

program flow, loss of data integrity, or corruption of processor state. These errors indicate that data has been corrupted but not consumed; no exception is generated because the data has not been referenced by a core or an IO link. Hardware writes information to the status and address registers in the corresponding bank that identifies the source of the error if deferred errors are enabled for logging. If there is information in the status and address registers from a previously logged lower priority error, it is overwritten. Previously logged errors of the same or higher priority are not overwritten. Deferred errors are not reported via machine check exceptions; they can optionally be reported via LVT or SMI.

Corrected errors are those which have been corrected by hardware and cause no loss of data or corruption of processor state. Hardware writes the status and address registers in the corresponding register bank with information that identifies the source of the error if they are enabled for logging. Corrected errors are not reported via machine check exceptions. Some corrected errors may optionally be reported to software via error threshold.

An error to be logged when the status register contains valid data can result in an overflow condition. During error overflow conditions, the new error may not be logged or an error which has already been logged in the status register may be overwritten.

Table 24 [Error Overwrite Priorities] indicates which errors are overwritten in the error status registers.

Table 24: Error Overwrite Priorities

		Older Error			
		Uncorrected	Deferred	Corrected	
	Uncorrected	-	Overwrite	Overwrite	
Newer Error	Deferred	-	-	Overwrite	
	Corrected	-	-	-	

Table 25 [Error Scope Hierarchy] provides a hierarchy of error scopes that determine the potential ability to recover the system based on fields in MCA_STATUS when MCA_STATUS[Val]=1.

Table 25: Error Scope Hierarchy

PCC	UC	TCC	Deferred	Comments
1	X	X	X	Uncorrected system fatal error. Action required. A hardware-uncorrected error has corrupted system state. The error is fatal to the system and the system processing must be terminated.
0	1	1	X	Uncorrected thread fatal error. Action required. A hardware-uncorrected error has corrupted state for the process thread executing on the interrupted logical core. State for other process threads is unaffected.
0	1	0	X	Uncorrected recoverable error. Action required. A hardware-uncorrected error has not corrupted state of the process thread. Recovery of the process thread is possible if the uncorrected error is corrected by software.
0	0	0	1	Deferred error. Action optional. A hardware-uncorrected error has been discovered but not yet consumed. Error handling software may attempt to correct this error, or prevent access by processes which map the data, or make the physical resource containing the data inaccessible.
0	0	0	0	Corrected error. Action optional. A hardware-corrected error has been corrected. No action is required by error handling software.

3.1.3.2 Exceptions and Interrupts

Some or all errors logged in the MCA may require an interrupt or exception to be signaled.

The processor supports the following x86 interrupt/exception types to be communicated to the x86 core in response to an error:

- Machine Check Exception (MCE)
- System Management Interrupt (SMI)
- APIC based interrupt (LVT)

MCEs can be architecturally precise, context-synchronous, or asynchronous. An MCE that sets Core::X86::Msr::MCG_STAT[RIPV]=1 and Core::X86::Msr::MCG_STAT[EIPV]=1 is precise and the program can be restarted reliably. Other interrupts are architecturally asynchronous.

The ability of hardware to generate a machine check exception upon an error is indicated by Core::X86::Cpuid::FeatureIdEdx[MCE] or Core::X86::Cpuid::FeatureExtIdEdx[MCE].

3.1.3.3 Error Codes

The MCA_STATUS[ErrorCode] field contains information used to identify the logged error. This section identifies how to decode the ErrorCode field.

Table 26: Error Code Types

Error Code	Error Code Type	Description
0000 0000 0001 TTLL	TLB	TT = Transaction Type
		LL = Cache Level
0000 0001 RRRR TTLL	Memory	RRRR = Memory Transaction Type
		TT = Transaction Type
		LL = Cache Level
0000 1XXT RRRR XXLL	Bus	XX = Reserved
		T = Timeout
		RRRR = Memory Transaction Type
		LL = Cache Level
0000 01UU 0000 0000	Internal Unclassified	UU = Internal Error Type

Table 27: Error code: transaction type (TT)

TT	Transaction Type
00	Instruction
01	Data
10	Generic
11	Reserved

Table 28: Error codes: cache level (LL)

LL	Cache Level
00	
01	L1: Level 1
10	L2: Level 2
11	LG: Generic

Table 29: Error codes:	memory transaction	tvpe ((RRRR)

RRRR	Memory Transaction Type
0000	Generic
0001	Generic Read
0010	Generic Write
0011	Data Read
0100	Data Write
0101	Instruction Fetch
0110	Prefetch
0111	Evict
1000	Snoop (Probe)

Errors can also be identified by the MCA_STATUS[ErrorCodeExt] field. MCA_STATUS[ErrorCodeExt] indicates which bit position in the corresponding MCA_CTL register enables error reporting for the logged error. For instance, MCA_STATUS[ErrorCodeExt]=0x9 means that the logged error is enabled by MCA_CTL[9], and the description of MCA_CTL[9] contains information on decoding the error log. Specific ErrorCodeExt values are implementation dependent, and should not be used by architectural or portable code.

3.1.3.4 Extended Error Codes

The MCA_STATUS[ErrorCodeExt] field contains additional information used to identify the logged error. Error positions in MCA_CTL and MCA_CTL_MASK and Extended Error Codes are fixed within a given bank type. That is, for an MCA bank with a given MCA_IPID[HwId, McaType] value, the processor ensures that the same error is reported in a given bit position of of MCA_CTL regardless of the product in which that bank appears. Similarly, for an MCA bank with a given MCA_IPID[HwId, McaType] value, hardware ensures that the mapping of errors to Extended Error Codes is consistent across products.

3.1.3.5 DOER and SEER State

The DOER fields are:

- MCG STAT
 - Count
 - MCIP
 - RIPV
 - EIPV
- MCA_STATUS
 - Val
 - PCC
 - TCC
 - UC
 - MiscV
 - AddrV

The MCA STATUS[Deferred] bit is used for SEER functionality but is architectural.

3.1.3.6 MCA Overflow Recovery

MCA Overflow Recovery is a feature allowing recovery of the system when the overflow bit is set. MCA Overflow Recovery is supported when Core::X86::Cpuid::RasCap[McaOverflowRecov]=1.

When MCA Overflow Recovery is supported, software may rely on MCA_STATUS[PCC]=1 to indicate all system-fatal conditions. When MCA Overflow Recovery is not supported, an uncorrected error logged with MCA_STATUS[Overflow]=1 may indicate the system-fatal condition that an error requiring software intervention was not logged. Therefore, software must terminate system processing whenever an uncorrected error is logged with MCA_STATUS[Overflow]=1.

3.1.3.7 MCA Recovery

MCA Recovery is a feature allowing recovery of the system when the hardware cannot correct an error. MCA Recovery is supported when Core::X86::Cpuid::RasCap[SUCCOR]=1.

When MCA Recovery is supported and an uncorrected error has been detected that the hardware can contain to the task or process to which the machine check has been delivered, it logs a context-synchronous uncorrectable error (MCA_STATUS[UC]=1, MCA_STATUS[PCC]=0). The rest of the system is unaffected and may continue running if supervisory software can terminate only the affected process or VM.

3.1.4 Machine Check Features

3.1.4.1 Error Thresholding

For some types of errors, the hardware maintains counts of the number of errors. When the counter reaches a programmable threshold, an event may optionally be triggered to signal system software. This is known as error thresholding. The primary purpose of error thresholding is to help software recognize an excessive rate of errors, which may indicate marginal or failing hardware. This information can be used to make decisions about deconfiguring hardware or scheduling service actions. Counts are incremented for corrected, deferred, and uncorrected errors.

The MCA_MISCx registers contain the architectural interface for error thresholding. The registers contain a 12-bit error counter that can be initialized to any value, with the option to interrupt when the counter reaches FFFh.

MCA_MISCx[ThresholdIntType] determines the type of interrupt to be generated for threshold overflow errors in that counter. This can be set to None, LVT, or SMI. If this is set to LVT, Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset] specifies the LVT offset that is used. Only one LVT offset is used per socket and the interrupt is routed to the APIC of the logical core from which the MCA bank is visible.

3.1.4.2 Error Simulation

Error simulation involves creating the appearance to software that an error occurred, and can be used to debug machine check interrupt handlers. See Core::X86::Msr::HWCR[McStatusWrEn] for making MCA registers writable for non-zero values. When McStatusWrEn is set, privileged software can write non-zero values to the specified registers without generating exceptions, and then simulate a machine check using the INT18 instruction (INTn instruction with an operand of 18). Setting a reserved bit in these registers does not generate an exception when this mode is enabled. However, setting a reserved bit may result in undefined behavior.

3.1.5 Software Guidelines

3.1.5.1 Recognizing MCAX Support

Software which reads the MCA registers must recognize whether an implementation uses the legacy format or the MCAX format. This is accomplished by starting with CPUID Fn8000_0007_EBX[ScalableMca]. If ScalableMca==1, then the implementation supports the MCAX indicator (MCA_CONFIG[Mcax]). An MCA bank is an MCAX bank if MCA_CONFIG[Mcax]=1 in that bank.

3.1.5.2 Communicating MCAX Support

Software which supports MCAX must set MCA_CONFIG[McaxEn]=1 in each MCA bank.

Software that supports MCAX should use the MCAX MSRs to access both legacy and MCAX registers.

3.1.5.3 Machine Check Initialization

The following initialization sequence must be followed:

- Platform firmware must initialize the MCA_CTL_MASK registers prior to the initialization of the MCA_CTL registers and Core::X86::Msr::MCG_CTL. Platform firmware and the operating system must not clear MCA_CTL_MASK bits that are set to 1. MCA_CTL_MASK registers must be set the same across all cores.
- The operating system must initialize the MCA_CONFIG registers prior to initialization of the MCA_CTL registers.
- The MCA_CTL registers must be initialized prior to enabling the error reporting banks in MCG_CTL.
- The Core::X86::Msr::MCG_CTL register must be programmed identically for all cores in a processor.
- CR4.MCE must be set to enable machine check exceptions.

The operating system should configure the MCA_CONFIG registers as follows:

- MCA_CONFIG[McaxEn]=1 if the operating system has been updated to use the MCA Extension MSR addresses. Otherwise, the operating system should preserve the platform firmware-programmed value of this field.
- MCA_CONFIG[LogDeferredInMcaStat] and MCA_CONFIG[DeferredIntType] to appropriate values based on OS support for deferred errors.

MCA_STATUS MSRs are cleared by hardware after a cold reset. If initializing after a warm reset, then platform firmware should check for valid MCA errors and if present save the status for later diagnostic use.

Platform firmware may initialize the MCA without setting CR4.MCE; this results in a shutdown on any machine check which would have caused a machine check exception (followed by a reboot if configured). Alternatively, platform firmware that wishes to ensure continued operation in the event that a machine check occurs during boot may write MCG_CTL with all ones and write zeros into each MCA_CTL register. With these settings, a machine check error results in MCA_STATUS being written without generating a machine check exception or a shutdown. Platform firmware may then poll MCA_STATUS registers during critical sections of boot to ensure system integrity. Note that the system may be operating with corrupt data before polling MCA_STATUS registers. Before passing control to the operating system, platform firmware should restore the values of those registers to what the operating system is expecting.

After MCA initialization, system software should check the Val bit on each MCA_STATUS register. It is possible that valid error status information has already been logged in the MCA_STATUS registers at the time software is attempting to initialize them. The status can reflect errors logged prior to a warm reset or errors recorded during the system power-up and boot process. Before clearing the MCA_STATUS registers, software should examine their contents and log any errors found.

3.1.5.4 Determining Bank Count

System software should read Core::X86::Msr::MCG_CAP[Count] to determine the number of machine check banks visible to a logical core. The banks are numbered from 0 to one less than the value found in

Core::X86::Msr::MCG_CAP[Count]. For example, if the Count field indicates five banks are supported, they are numbered MC0 through MC4.

3.1.5.5 Determining Bank Type

To determine which type of block is mapped to an MCA bank, software can query the MCA_IPID register within that bank. This register exists when MCA_CONFIG[McaX]=1 in a given bank.

MCA_IPID[HardwareID] provides the block type for the block that contains this MCA bank. For blocks that contain multiple MCA bank types (e.g., CPU cores), MCA_IPID[McaType] provides an identifier for the type of MCA bank. MCA_IPID[McaType] values are specific to a given MCA_IPID[HardwareID]. Therefore, an MCA bank type can be identified by the value of {MCA_IPID[Hwid], MCA_IPID[McaType]}. For instance, the CPU core's LS bank is identified by MCA::LS::MCA_IPID_LS[HardwareID]==176 and MCA::LS::MCA_IPID_LS[McaType]==0. An MCA_IPID[HardwareID] value of 0 indicates an unpopulated MCA bank that is ensured to be RAZ/WRIG.

MCA_IPID[InstanceId] provides a unique instance number to allow software to differentiate blocks with multiple identical instances within a processor. MCA_IPID[InstanceId] values are processor-specific and are not ensured to be stable across different processor generations.

3.1.5.6 Recognizing Error Type

Software can use the combination of MCA_IPID[HwId, McaType] and MCA_STATUS[ErrorCodeExt] to recognize a specific error type.

3.1.5.7 Machine Check Error Handling

A machine check handler is invoked to handle an exception for a particular thread. The information needed by the machine check handler is not shared with other threads, so no cross-thread coordination or special handling is required. Specifically, all MCA banks are only visible from a single thread, so software on a single thread can access each bank through MSR space without contention from other threads.

At a minimum, the machine check handler must be capable of logging error information for later examination. The handler should log as much information as is needed to diagnose the error. More thorough exception handler implementations can analyze errors to determine if each error is recoverable by software. If a recoverable error is identified, the exception handler can attempt to correct the error and restart the interrupted program. An error may not be recoverable for the process or virtual machine it directly affects, but may be containable, so that other processes or virtual machines in the system are unaffected and system operation is recovered.

Machine check exception handlers that attempt to recover must be thorough in their analysis and the corrective actions they take. The following guidelines should be used when writing such a handler:

- Data collection:
 - Read Core::X86::Msr::MCG_CAP[Count] to determine the number of status registers visible to the thread.
 - All status registers in all error reporting banks must be examined to identify the cause of the machine check exception.
 - Check the valid bit in each status register (MCA_STATUS[Val]). The remainder of the status register should be examined only when its valid bit is set.
 - When identifying the error condition and determining how to handle the error, portable exception handlers should examine only DOER fields in machine check registers.
 - Error handlers should collect all available MCA information, but should only interrogate details to the level which affects their actions. Lower level details may be useful for diagnosis and root cause analysis, but not for error handling.

- Error handlers should save the values in MCA_ADDR, MCA_MISC0, and MCA_SYND even if MCA_STATUS[AddrV], MCA_STATUS[MiscV], and MCA_STATUS[SyndV] are zero.
- DOER Error Management:
 - Check MCA_STATUS[PCC].
 - If PCC is set, error recovery is not possible. The handler should log the error information and terminate the system. If PCC is clear, the handler may continue with the following recovery steps.
 - Check MCA STATUS[UC].
 - If UC is set, the processor did not correct the error. Continue with the following recovery steps.
 - If MCA Overflow Recovery is not supported, and MCA_STATUS[Overflow]=1, error recovery is not possible; follow the steps for PCC=1. See 3.1.3.6 [MCA Overflow Recovery].
 - If MCA Recovery is not supported, error recovery is not possible; follow the steps for PCC=1. See 3.1.3.7 [MCA Recovery].
 - If MCA Recovery is supported:
 - Check MCA STATUS[TCC].
 - If TCC is set, the context of the process thread executing on the interrupted logical core may be corrupt and the thread cannot be recovered. The rest of the system is unaffected; it is possible to terminate only the affected process thread.
 - If TCC is clear, the context of the process thread executing on the interrupted logical core is not corrupt. Recovery of the process thread may be possible, but only if the uncorrected error condition is first corrected by software; otherwise, the interrupted process thread must be terminated.
 - Legacy exception handlers can check
 Core::X86::Msr::MCG_STAT[RIPV] and
 Core::X86::Msr::MCG_STAT[EIPV] in place of MCA_STATUS[TCC].
 If RIPV=EIPV=1, the interrupted program can be restarted reliably.
 Otherwise, the program cannot be restarted reliably.
 - If UC is clear, the processor either corrected or deferred the error and no software action is needed. The handler can log the error information and continue process execution.
- Exit:
 - When an exception handler is able to successfully log an error condition, clear the MCA_STATUS
 registers prior to exiting the machine check handler.
 - Prior to exiting the machine check handler, clear Core::X86::Msr::MCG_STAT[MCIP]. MCIP indicates that a machine check exception is in progress. If this bit is set when another machine check exception occurs, the processor enters the shutdown state.

3.2 Machine Check Architecture Implementation

3.2.1 Implemented Machine Check Banks

Blocks capable of supporting MCA banks are given in Table 30 [Blocks Capable of Supporting MCA Banks]. Whether a particular block implements an MCA bank is processor-specific and can be determined by querying MCA_IPID for each MCA bank. The block type can be uniquely identified by the MCA_IPID[HardwareId] and MCA_IPID[McaType] values in each MCA bank.

Table 30: Blocks Capable of Supporting MCA Banks

Block	Block Function	MCA_IPID[HardwareId]	MCA_IPID[McaType]
LS	Load-Store Unit	0xb0	0x0
IF	Instruction Fetch Unit	0xb0	0x1

L2	L2 Cache Unit	0xb0	0x2
DE	Decode Unit	0xb0	0x3
EX	Execution Unit	0xb0	0x5
FP	Floating Point Unit	0xb0	0x6
L3	L3 Cache Unit	0xb0	0x7
UMC	Unified Memory Controller	0x96	0x0
SMU	System Management Unit	0x01	0x0
PSP	Platform Security Processor	0xFF	0x0
PB	Parameter Block	0x5	0x0
CS	Coherent Slave	0x2E	0x0
PIE	Power Management, Interrupts, Etc.	0x2E	0x1

3.2.2 Implemented Machine Check Bank Registers

Table 31 [Legacy MCA Registers] provides links to the description of each block's Legacy MCA registers. Table 32 [MCAX Registers] provides links to the description of each block's MCA Extension Registers.

Table 31: Legacy MCA Registers

Block	1		MCA					
DIOCK		MCA Register						
	CTL	STATUS	ADDR	MISC	CTL_MASK			
LS	MCA::LS::MCA_CTL_LS	MCA::LS::MCA_STATUS_	MCA::LS::MCA_ADDR_L	MCA::LS::MCA_MISC0_L	MCA::LS::MCA_CTL_MA			
		LS	S	S	SK_LS			
IF	MCA::IF::MCA_CTL_IF	MCA::IF::MCA_STATUS_I	MCA::IF::MCA_ADDR_IF	MCA::IF::MCA_MISC0_IF	MCA::IF::MCA_CTL_MAS			
		F			K_IF			
L2	MCA::L2::MCA_CTL_L2	MCA::L2::MCA_STATUS_	MCA::L2::MCA_ADDR_L	MCA::L2::MCA_MISC0_L	MCA::L2::MCA_CTL_MA			
		L2	2	2	SK_L2			
DE	MCA::DE::MCA_CTL_DE	MCA::DE::MCA_STATUS_	MCA::DE::MCA_ADDR_D	MCA::DE::MCA_MISC0_D	MCA::DE::MCA_CTL_MA			
		DE	E	E	SK_DE			
EX	MCA::EX::MCA_CTL_EX	MCA::EX::MCA_STATUS_	MCA::EX::MCA_ADDR_E	MCA::EX::MCA_MISC0_E	MCA::EX::MCA_CTL_MA			
		EX	X	X	SK_EX			
FP	MCA::FP::MCA_CTL_FP	MCA::FP::MCA_STATUS_F	MCA::FP::MCA_ADDR_F	MCA::FP::MCA_MISC0_F	MCA::FP::MCA_CTL_MA			
		P	P	P	SK_FP			
L3	MCA::L3::MCA_CTL_L3	MCA::L3::MCA_STATUS_	MCA::L3::MCA_ADDR_L	MCA::L3::MCA_MISC0_L	MCA::L3::MCA_CTL_MA			
		L3	3		SK_L3			
PIE	MCA::PIE::MCA_CTL_PIE	MCA::PIE::MCA_STATUS_	MCA::PIE::MCA_ADDR_P	MCA::PIE::MCA_MISC0_P	MCA::PIE::MCA_CTL_MA			
		PIE	IE	IE	SK_PIE			
CS	MCA::CS::MCA_CTL_CS	MCA::CS::MCA_STATUS_	MCA::CS::MCA_ADDR_C	MCA::CS::MCA_MISC0_C	MCA::CS::MCA_CTL_MA			
		CS	S		SK_CS			
UMC	MCA::UMC::MCA_CTL_U	MCA::UMC::MCA_STATU	MCA::UMC::MCA_ADDR	MCA::UMC::MCA_MISC0	MCA::UMC::MCA_CTL_M			
	MC	S_UMC	LUMC		ASK_UMC			
				MCA::UMC::MCA_MISC1				
				LUMC				
PB	MCA::PB::MCA_CTL_PB	MCA::PB::MCA_STATUS_	MCA::PB::MCA_ADDR_P	MCA::PB::MCA_MISC0_P	MCA::PB::MCA_CTL_MA			
		PB	В	B	SK_PB			

Table 32: MCAX Registers

Block			MCA Register		
	CONFIG	IPID	SYND	DESTATUS	DEADDR
LS	MCA::LS::MCA_CONFIG	MCA::LS::MCA_IPID_LS	MCA::LS::MCA_SYND_L	MCA::LS::MCA_DESTAT_	MCA::LS::MCA_DEADDR
	_LS		S	LS	LS
IF	MCA::IF::MCA_CONFIG_	MCA::IF::MCA_IPID_IF	MCA::IF::MCA_SYND_IF		
	IF				
L2	MCA::L2::MCA_CONFIG	MCA::L2::MCA_IPID_L2	MCA::L2::MCA_SYND_L2	MCA::L2::MCA_DESTAT_	MCA::L2::MCA_DEADDR
	_L2			L2	_L2
DE	MCA::DE::MCA_CONFIG	MCA::DE::MCA_IPID_DE	MCA::DE::MCA_SYND_D		
	_DE		E		
EX	MCA::EX::MCA_CONFIG	MCA::EX::MCA_IPID_EX	MCA::EX::MCA_SYND_E		
	_EX		X		
FP	MCA::FP::MCA_CONFIG	MCA::FP::MCA_IPID_FP	MCA::FP::MCA_SYND_FP		
	_FP				

L3	MCA::L3::MCA_CONFIG	MCA::L3::MCA_IPID_L3	MCA::L3::MCA_SYND_L3	MCA::L3::MCA_DESTAT_	MCA::L3::MCA_DEADDR
	_L3			L3	_L3
PIE	MCA::PIE::MCA_CONFI	MCA::PIE::MCA_IPID_PIE	MCA::PIE::MCA_SYND_P	MCA::PIE::MCA_DESTAT	MCA::PIE::MCA_DEADD
	G_PIE		IE .	_PIE	R_PIE
CS	MCA::CS::MCA_CONFIG	MCA::CS::MCA_IPID_CS	MCA::CS::MCA_SYND_C	MCA::CS::MCA_DESTAT_	MCA::CS::MCA_DEADDR
	_CS		S	CS	_CS
UMC	MCA::UMC::MCA_CONF	MCA::UMC::MCA_IPID_U	MCA::UMC::MCA_SYND_	MCA::UMC::MCA_DESTA	MCA::UMC::MCA_DEAD
	IG_UMC	MC	UMC	T_UMC	DR_UMC
PB	MCA::PB::MCA_CONFIG	MCA::PB::MCA_IPID_PB	MCA::PB::MCA_SYND_P		
	_PB		В		

3.2.3 Mapping of Banks to Blocks

Table 33: MCA Bank to Block Mapping

Bank	Block
0	LS
1	IF
2	L2
3	DE
4	RAZ
5	EX
6	FP
7	L3
8	L3
9	L3
10	L3
11	L3
12	L3
13	L3
14	L3
15	UMC
16	UMC
17	Reserved
18	Reserved
19	PB
20	CS
21	CS
22	PIE

3.2.4 Decoding Error Type

If a valid error is logged in MCA STATUS or MCA DESTAT of an MCA bank:

- 1. Read the values of this bank's MCA_IPID and MCA_STATUS registers.
- 2. Use Table 30 [Blocks Capable of Supporting MCA Banks] to look up the block associated with the values of MCA_IPID[HwId] and MCA_IPID[McaType].
- 3. In 3.2.5 [MCA Banks], find the sub-section associated with the block in error.
- 4. In this sub-section, find the MCA_STATUS table.
- 5. In the table, look up the row associated with the MCA_STATUS[ErrorCodeExt] value.
- 6. The error type in this row is the logged error. The MCA_STATUS, MCA_ADDR and MCA_SYND tables contain information associated with this error.

7. If there is an error in both MCA_STATUS and MCA_DESTAT, the registers contain the same error if MCA_STATUS[Deferred] is set. If MCA_STATUS[Deferred] is not set, MCA_DESTAT contains information for a different error than MCA_STATUS. MCA_DESTAT does not contain an ErrorCodeExt field, so in this case it is not possible to determine the type of error logged in MCA_DESTAT.

3.2.5 MCA Banks

3.2.5.1 LS

Read-write. Reset: 0000_0000_0000_0000h. 0=Disables error reporting for the corresponding error. 1=Enables error reporting via machine check exception for the corresponding error. The MCA::LS::MCA_CTL_LS register must be enabled by the corresponding enable bit in Core::X86::Msr::MCG_CTL. Does not affect error detection, correction, or logging. https://ol.org/30.jinst0_aliasMSRLEGACY; MSR0000_0400 thtree[1:0]_core[3:0]_inst0_aliasMSRLEGACY; MSR0000_2000 Bits Description
corresponding error. The MCA::LS::MCA_CTL_LS register must be enabled by the corresponding enable bit in Core::X86::Msr::MCG_CTL. Does not affect error detection, correction, or logging. _lthree[1:0]_core[3:0]_inst0_aliasMSRLEGACY; MSR0000_0400 _lthree[1:0]_core[3:0]_inst0_aliasMSR; MSRC000_2000 Bits Description 63:21 Reserved. 20 L2DataErr. Read-write. Reset: 0. L2 Fill Data error. 19 DcTagErr5. Read-write. Reset: 0. DC Tag error type 5. 18 DcTagErr3. Read-write. Reset: 0. DC Tag error type 3. 17 PDC. Read-write. Reset: 0. PDC parity error. MCA_ADDR_LS logs a virtual address. 16 L2DTLB. Read-write. Reset: 0. Level 2 TLB parity error. MCA_ADDR_LS logs a virtual address. 15 DcTagErr4. Read-write. Reset: 0. DC Tag error type 4. 14 DcDataErr3. Read-write. Reset: 0. DC Data error type 3. 13 DcDataErr2. Read-write. Reset: 0. DC Data error type 2. 14 DcTagErr2. Read-write. Reset: 0. DC Data error type 1 and poison consumption. MCA_STATUS[Poison] is se on poison consumption from L2/L3. 11 DcTagErr2. Read-write. Reset: 0. DC Tag error type 2. 10 SystemReadDataErrorT1. Read-write. Reset: 0. System Read Data Error Thread 1. An error in a read of a line from the data fabric. Possible reasons include master abort and target abort.
Core::X86::Msr::MCG_CTL. Does not affect error detection, correction, or logging. _lthree[1:0]_core[3:0]_inst0_aliasMSRLEGACY; MSR0000_0400 _lthree[1:0]_core[3:0]_inst0_aliasMSR; MSRC000_2000 Bits Description 63:21 Reserved. 20 L2DataErr. Read-write. Reset: 0. L2 Fill Data error. 19 DcTagErr5. Read-write. Reset: 0. DC Tag error type 5. 18 DcTagErr3. Read-write. Reset: 0. DC Tag error type 3. 17 PDC. Read-write. Reset: 0. PDC parity error. MCA_ADDR_LS logs a virtual address. 16 L2DTLB. Read-write. Reset: 0. Level 2 TLB parity error. MCA_ADDR_LS logs a virtual address. 15 DcTagErr4. Read-write. Reset: 0. DC Tag error type 4. 14 DcDataErr3. Read-write. Reset: 0. DC Data error type 3. 13 DcDataErr2. Read-write. Reset: 0. DC Data error type 2. 14 DcDataErr1. Read-write. Reset: 0. DC Data error type 1 and poison consumption. MCA_STATUS[Poison] is se on poison consumption from L2/L3. 11 DcTagErr2. Read-write. Reset: 0. DC Tag error type 2. 12 SystemReadDataErrorT1. Read-write. Reset: 0. System Read Data Error Thread 1. An error in a read of a line from the data fabric. Possible reasons include master abort and target abort.
lthree[1:0]_core[3:0]_inst0_aliasMSRLEGACY; MSR0000_0400lthree[1:0]_core[3:0]_inst0_aliasMSR; MSRC000_2000 Bits Description 63:21 Reserved. 20 L2DataErr. Read-write. Reset: 0. L2 Fill Data error. 19 DcTagErr5. Read-write. Reset: 0. DC Tag error type 5. 18 DcTagErr3. Read-write. Reset: 0. DC Tag error type 3. 17 PDC. Read-write. Reset: 0. PDC parity error. MCA_ADDR_LS logs a virtual address. 16 L2DTLB. Read-write. Reset: 0. Level 2 TLB parity error. MCA_ADDR_LS logs a virtual address. 15 DcTagErr4. Read-write. Reset: 0. DC Tag error type 4. 14 DcDataErr3. Read-write. Reset: 0. DC Data error type 3. 13 DcDataErr2. Read-write. Reset: 0. DC Data error type 2. 14 DcDataErr1. Read-write. Reset: 0. DC Data error type 1 and poison consumption. MCA_STATUS[Poison] is se on poison consumption from L2/L3. 11 DcTagErr2. Read-write. Reset: 0. DC Tag error type 2. SystemReadDataErrorT1. Read-write. Reset: 0. System Read Data Error Thread 1. An error in a read of a line from the data fabric. Possible reasons include master abort and target abort.
Lthree[1:0]_core[3:0]_inst0_aliasMSR; MSRC000_2000 Bits Description
BitsDescription63:21Reserved.20L2DataErr. Read-write. Reset: 0. L2 Fill Data error.19DcTagErr5. Read-write. Reset: 0. DC Tag error type 5.18DcTagErr3. Read-write. Reset: 0. DC Tag error type 3.17PDC. Read-write. Reset: 0. PDC parity error. MCA_ADDR_LS logs a virtual address.16L2DTLB. Read-write. Reset: 0. Level 2 TLB parity error. MCA_ADDR_LS logs a virtual address.15DcTagErr4. Read-write. Reset: 0. DC Tag error type 4.14DcDataErr3. Read-write. Reset: 0. DC Data error type 3.13DcDataErr2. Read-write. Reset: 0. DC Data error type 2.12DcDataErr1. Read-write. Reset: 0. DC Data error type 1 and poison consumption. MCA_STATUS[Poison] is se on poison consumption from L2/L3.11DcTagErr2. Read-write. Reset: 0. DC Tag error type 2.10SystemReadDataErrorT1. Read-write. Reset: 0. System Read Data Error Thread 1. An error in a read of a line from the data fabric. Possible reasons include master abort and target abort.
 Reserved. L2DataErr. Read-write. Reset: 0. L2 Fill Data error. DcTagErr5. Read-write. Reset: 0. DC Tag error type 5. DcTagErr3. Read-write. Reset: 0. DC Tag error type 3. PDC. Read-write. Reset: 0. PDC parity error. MCA_ADDR_LS logs a virtual address. L2DTLB. Read-write. Reset: 0. Level 2 TLB parity error. MCA_ADDR_LS logs a virtual address. DcTagErr4. Read-write. Reset: 0. DC Tag error type 4. DcDataErr3. Read-write. Reset: 0. DC Data error type 3. DcDataErr2. Read-write. Reset: 0. DC Data error type 2. DcDataErr1. Read-write. Reset: 0. DC Data error type 1 and poison consumption. MCA_STATUS[Poison] is se on poison consumption from L2/L3. DcTagErr2. Read-write. Reset: 0. DC Tag error type 2. SystemReadDataErrorT1. Read-write. Reset: 0. System Read Data Error Thread 1. An error in a read of a line from the data fabric. Possible reasons include master abort and target abort.
 L2DataErr. Read-write. Reset: 0. L2 Fill Data error. DcTagErr5. Read-write. Reset: 0. DC Tag error type 5. DcTagErr3. Read-write. Reset: 0. DC Tag error type 3. PDC. Read-write. Reset: 0. PDC parity error. MCA_ADDR_LS logs a virtual address. L2DTLB. Read-write. Reset: 0. Level 2 TLB parity error. MCA_ADDR_LS logs a virtual address. DcTagErr4. Read-write. Reset: 0. DC Tag error type 4. DcDataErr3. Read-write. Reset: 0. DC Data error type 3. DcDataErr2. Read-write. Reset: 0. DC Data error type 2. DcDataErr1. Read-write. Reset: 0. DC Data error type 1 and poison consumption. MCA_STATUS[Poison] is se on poison consumption from L2/L3. DcTagErr2. Read-write. Reset: 0. DC Tag error type 2. SystemReadDataErrorT1. Read-write. Reset: 0. System Read Data Error Thread 1. An error in a read of a line from the data fabric. Possible reasons include master abort and target abort.
 DcTagErr5. Read-write. Reset: 0. DC Tag error type 5. DcTagErr3. Read-write. Reset: 0. DC Tag error type 3. PDC. Read-write. Reset: 0. PDC parity error. MCA_ADDR_LS logs a virtual address. L2DTLB. Read-write. Reset: 0. Level 2 TLB parity error. MCA_ADDR_LS logs a virtual address. DcTagErr4. Read-write. Reset: 0. DC Tag error type 4. DcDataErr3. Read-write. Reset: 0. DC Data error type 3. DcDataErr2. Read-write. Reset: 0. DC Data error type 2. DcDataErr1. Read-write. Reset: 0. DC Data error type 1 and poison consumption. MCA_STATUS[Poison] is se on poison consumption from L2/L3. DcTagErr2. Read-write. Reset: 0. DC Tag error type 2. SystemReadDataErrorT1. Read-write. Reset: 0. System Read Data Error Thread 1. An error in a read of a line from the data fabric. Possible reasons include master abort and target abort.
 18 DcTagErr3. Read-write. Reset: 0. DC Tag error type 3. 17 PDC. Read-write. Reset: 0. PDC parity error. MCA_ADDR_LS logs a virtual address. 16 L2DTLB. Read-write. Reset: 0. Level 2 TLB parity error. MCA_ADDR_LS logs a virtual address. 15 DcTagErr4. Read-write. Reset: 0. DC Tag error type 4. 14 DcDataErr3. Read-write. Reset: 0. DC Data error type 3. 13 DcDataErr2. Read-write. Reset: 0. DC Data error type 2. 12 DcDataErr1. Read-write. Reset: 0. DC Data error type 1 and poison consumption. MCA_STATUS[Poison] is se on poison consumption from L2/L3. 11 DcTagErr2. Read-write. Reset: 0. DC Tag error type 2. 10 SystemReadDataErrorT1. Read-write. Reset: 0. System Read Data Error Thread 1. An error in a read of a line from the data fabric. Possible reasons include master abort and target abort.
 PDC. Read-write. Reset: 0. PDC parity error. MCA_ADDR_LS logs a virtual address. L2DTLB. Read-write. Reset: 0. Level 2 TLB parity error. MCA_ADDR_LS logs a virtual address. DcTagErr4. Read-write. Reset: 0. DC Tag error type 4. DcDataErr3. Read-write. Reset: 0. DC Data error type 3. DcDataErr2. Read-write. Reset: 0. DC Data error type 2. DcDataErr1. Read-write. Reset: 0. DC Data error type 1 and poison consumption. MCA_STATUS[Poison] is se on poison consumption from L2/L3. DcTagErr2. Read-write. Reset: 0. DC Tag error type 2. SystemReadDataErrorT1. Read-write. Reset: 0. System Read Data Error Thread 1. An error in a read of a line from the data fabric. Possible reasons include master abort and target abort.
 L2DTLB. Read-write. Reset: 0. Level 2 TLB parity error. MCA_ADDR_LS logs a virtual address. DcTagErr4. Read-write. Reset: 0. DC Tag error type 4. DcDataErr3. Read-write. Reset: 0. DC Data error type 3. DcDataErr2. Read-write. Reset: 0. DC Data error type 2. DcDataErr1. Read-write. Reset: 0. DC Data error type 1 and poison consumption. MCA_STATUS[Poison] is se on poison consumption from L2/L3. DcTagErr2. Read-write. Reset: 0. DC Tag error type 2. SystemReadDataErrorT1. Read-write. Reset: 0. System Read Data Error Thread 1. An error in a read of a line from the data fabric. Possible reasons include master abort and target abort.
 15 DcTagErr4. Read-write. Reset: 0. DC Tag error type 4. 14 DcDataErr3. Read-write. Reset: 0. DC Data error type 3. 13 DcDataErr2. Read-write. Reset: 0. DC Data error type 2. 12 DcDataErr1. Read-write. Reset: 0. DC Data error type 1 and poison consumption. MCA_STATUS[Poison] is se on poison consumption from L2/L3. 11 DcTagErr2. Read-write. Reset: 0. DC Tag error type 2. 10 SystemReadDataErrorT1. Read-write. Reset: 0. System Read Data Error Thread 1. An error in a read of a line from the data fabric. Possible reasons include master abort and target abort.
 DcDataErr3. Read-write. Reset: 0. DC Data error type 3. DcDataErr2. Read-write. Reset: 0. DC Data error type 2. DcDataErr1. Read-write. Reset: 0. DC Data error type 1 and poison consumption. MCA_STATUS[Poison] is se on poison consumption from L2/L3. DcTagErr2. Read-write. Reset: 0. DC Tag error type 2. SystemReadDataErrorT1. Read-write. Reset: 0. System Read Data Error Thread 1. An error in a read of a line from the data fabric. Possible reasons include master abort and target abort.
 DcDataErr2. Read-write. Reset: 0. DC Data error type 2. DcDataErr1. Read-write. Reset: 0. DC Data error type 1 and poison consumption. MCA_STATUS[Poison] is se on poison consumption from L2/L3. DcTagErr2. Read-write. Reset: 0. DC Tag error type 2. SystemReadDataErrorT1. Read-write. Reset: 0. System Read Data Error Thread 1. An error in a read of a line from the data fabric. Possible reasons include master abort and target abort.
 DcDataErr1. Read-write. Reset: 0. DC Data error type 1 and poison consumption. MCA_STATUS[Poison] is seen on poison consumption from L2/L3. DcTagErr2. Read-write. Reset: 0. DC Tag error type 2. SystemReadDataErrorT1. Read-write. Reset: 0. System Read Data Error Thread 1. An error in a read of a line from the data fabric. Possible reasons include master abort and target abort.
on poison consumption from L2/L3. 11 DcTagErr2. Read-write. Reset: 0. DC Tag error type 2. 10 SystemReadDataErrorT1. Read-write. Reset: 0. System Read Data Error Thread 1. An error in a read of a line from the data fabric. Possible reasons include master abort and target abort.
 11 DcTagErr2. Read-write. Reset: 0. DC Tag error type 2. 10 SystemReadDataErrorT1. Read-write. Reset: 0. System Read Data Error Thread 1. An error in a read of a line from the data fabric. Possible reasons include master abort and target abort.
SystemReadDataErrorT1 . Read-write. Reset: 0. System Read Data Error Thread 1. An error in a read of a line from the data fabric. Possible reasons include master abort and target abort.
from the data fabric. Possible reasons include master abort and target abort.
8
O System Dond Data Enway TO Dond write Donet: O System Dond Data Enway Thread O An array in a read of a line
9 SystemReadDataErrorT0 . Read-write. Reset: 0. System Read Data Error Thread 0. An error in a read of a line
from the data fabric. Possible reasons include master abort and target abort.
8 IntErrTyp2. Read-write. Reset: 0. Internal error type 2.
7 IntErrTyp1 . Read-write. Reset: 0. Internal error type 1.
6 DcTagErr1 . Read-write. Reset: 0. DC Tag error type 1.
5 DcTagErr6 . Read-write. Reset: 0. DC Tag error type 6.
4 Reserved.
3 L1DTLB . Read-write. Reset: 0. Level 1 TLB parity error.
2 MAB. Read-write. Reset: 0. Miss address buffer payload parity error.
1 STQ. Read-write. Reset: 0. Store queue parity error.
0 LDQ. Read-write. Reset: 0. Load queue parity error.

MSR0000_0001...MSRC000_2001 [LS Machine Check Status Thread 0] (MCA::LS::MCA_STATUS_LS)

I	Reset: Cold,0000_0000_0000_0000h.
I	Logs information associated with errors.
Г	lthree[1:0]_core[3:0]_thread[1:0]_inst0_aliasMSRLSLEGACY; MSR0000_0001
	lthree[1:0]_core[3:0]_thread[1:0]_inst0_aliasMSRLEGACY; MSR0000_0401
	lthree[1:0]_core[3:0]_thread[1:0]_inst0_aliasMSR; MSRC000_2001

Bits	Description
63	Val. Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the register has
0.5	been read.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
62	Overflow . Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was not
02	logged. Overflow is set independently of whether the existing error is overwritten. See 3.1.3 [Machine Check
	Errors].
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
<i>C</i> 1	UC. Reset: Cold,0. 1=The error was not corrected by hardware.
61	·
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
60	En . Reset: Cold,0. 1=MCA error reporting is enabled for this error, as indicated by the corresponding bit in
	MCA::LS::MCA_CTL_LS. This bit is a copy of bit in MCA::LS::MCA_CTL_LS for this error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
59	MiscV. Reset: Cold,0. 1=Valid thresholding in MCA::LS::MCA_MISC0_LS.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
58	AddrV . Reset: Cold,0. 1=MCA::LS::MCA_ADDR_LS contains address information associated with the error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
57	PCC . Reset: Cold,0. 1=Hardware context held by the processor may have been corrupted. Continued operation of
	the system may have unpredictable results. The error is not recoverable or survivable, and the system should be
	reinitialized.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
56	ErrCoreIdVal. Reset: Cold,0. 1=The ErrCoreId field is valid.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
55	TCC . Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer
	address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The
	thread which consumed the error is not restartable and must be terminated. Only meaningful when
	MCA::LS::MCA_STATUS_LS[PCC]=0.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
54	Reserved.
53	SyndV. Reset: Cold,0. 1=This error logged information in MCA::LS::MCA_SYND_LS. If
	MCA::LS::MCA_SYND_LS[ErrorPriority] is the same as the priority of the error in
	MCA::LS::MCA_STATUS_LS, then the information in MCA::LS::MCA_SYND_LS is associated with the error
	in MCA::LS::MCA_STATUS_LS.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
52:47	Reserved.
46	CECC . Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC
	algorithm. UC indicates whether the error was actually corrected by the processor.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
45	UECC. Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC
	algorithm. UC indicates whether the error was actually corrected by the processor.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
44	Deferred . Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data
	error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is
	consumed.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
43	Poison . Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
42:38	Reserved.
37:32	
3, 102	associated with the error; Otherwise this field is reserved.
	1 above the circle of the circ

	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
31:22	Reserved.
21:16	ErrorCodeExt . Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause
	analysis. This field indicates which bit position in MCA::LS::MCA_CTL_LS enables error reporting for the
	logged error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.
15:0	ErrorCode . Reset: Cold,0000h. Error code for this error. See 3.1.3.3 [Error Codes] for details on decoding this
	field.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.

Table 34: MCA STATUS LS[ErrorCodeExt] Decode

Error Type	Bits	Description
LDQ	[6:0]	0x0
STQ	[6:0]	0x1
MAB	[6:0]	0x2
L1DTLB	[6:0]	0x3
DcTagErr5	[6:0]	0x4
DcTagErr6	[6:0]	0x5
DcTagErr1	[6:0]	0x6
IntErrTyp1	[6:0]	0x7
IntErrTyp2	[6:0]	0x8
SystemReadDataErrorT0	[6:0]	0x9
SystemReadDataErrorT1	[6:0]	0xa
DcTagErr2	[6:0]	0xb
DcDataErr1	[6:0]	0xc
DcDataErr2	[6:0]	0xd
DcDataErr3	[6:0]	0xe
DcTagErr4	[6:0]	0xf
L2DTLB	[6:0]	0x10
PDC	[6:0]	0x11
DcTagErr3	[6:0]	0x12
DcTagErr5	[6:0]	0x13
L2DataErr	[6:0]	0x14

MSR0000_0000...MSRC000_2002 [LS Machine Check Address Thread 0] (MCA::LS::MCA_ADDR_LS)

_	
Read-write, Volatile. Reset: Cold, 0000_0000_0000_0000h.	
MCA::LS::MCA_ADDR_LS stores an address and other information a	ssociated with th

he error in

MCA::LS::MCA_STATUS_LS. The register is only meaningful if MCA::LS::MCA_STATUS_LS[Val]=1 and

MCA::LS::MCA_STATUS_LS[AddrV]=1.

lthree[1:0]_core[3:0]_thread[1:0]_inst0_aliasMSRLSLEGACY; MSR0000_0000

lthree[1:0]_core[3:0]_thread[1:0]_inst0_aliasMSRLEGACY; MSR0000_0402

lthree[1:0]_core[3:0]_thread[1:0]_inst0_aliasMSR; MSRC000_2002

Bits Description

63:62 Reserved.

61:56 LSB. Read-write, Volatile. Reset: Cold, 00h. Specifies the least significant valid bit of the address contained in MCA::LS::MCA ADDR LS[ErrorAddr]. A value of 0 indicates that MCA::LS::MCA ADDR LS[55:0] contains a valid byte address. A value of 6 indicates that MCA::LS::MCA_ADDR_LS[55:6] contains a valid cache line address and that MCA::LS::MCA_ADDR_LS[5:0] are not part of the address and should be ignored by error handling software. A value of 12 indicates that MCA::LS::MCA_ADDR_LS[55:12] contain a valid 4KB memory page and that MCA::LS::MCA_ADDR_LS[11:0] should be ignored by error handling software.

55:0

ErrorAddr. Read-write, Volatile. Reset: Cold,00_0000_0000_0000h. Unless otherwise specified by an error, contains the address associated with the error logged in MCA::LS::MCA_STATUS_LS. For physical addresses, the most significant bit is given by Core::X86::Cpuid::LongModeInfo[PhysAddrSize].

Table 35: MCA_ADDR_LS Register

Error Type	Bits	Description
LDQ	[55:0]	Reserved
STQ	[55:0]	Reserved
MAB	[55:0]	Reserved
L1DTLB	[55:48]	Reserved
	[47:12]	Virtual Address
	[11:0]	Reserved
DcTagErr5	[55:0]	Reserved
DcTagErr6	[55:0]	Reserved
DcTagErr1	[55:0]	Reserved
IntErrTyp1	[55:0]	Reserved
IntErrTyp2	[55:0]	Reserved
SystemReadDataErrorT0	[55:48]	Reserved
	[47:6]	Physical Address
SystemReadDataErrorT1	[55:48]	Reserved
	[47:6]	Physical Address
DcTagErr2	[55:48]	Reserved
	[47:6]	Physical Address
DcDataErr1	[55:48]	Reserved
	[47:6]	Physical Address
DcDataErr2	[55:48]	Reserved
	[47:1]	Physical Address
DcDataErr3	[55:48]	Reserved
	[47:1]	Physical Address
DcTagErr4	[55:0]	Reserved
L2DTLB	[55:48]	Reserved
	[47:12]	Virtual Address
	[11:0]	Reserved
PDC	[55:48]	Reserved
	[47:12]	Virtual Address
	[11:0]	Reserved
DcTagErr3	[55:0]	Reserved
DcTagErr5	[55:0]	Reserved
L2DataErr	[55:48]	Reserved
	[47:6]	Physical Address

MSR0000_0403...MSRC000_2003 [LS Machine Check Miscellaneous 0 Thread 0] (MCA::LS::MCA_MISC0_LS)

Log m	niscellaneous information associated with errors.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]_inst0_aliasMSRLEGACY; MSR0000_0403		
_lthree[1	L:0]_core[3:0]_thread[1:0]_inst0_aliasMSR; MSRC000_2003		
Bits	Description		
63	Valid . Reset: 1. 1=A valid CntP field is present in this register.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.		

62	CntP . Reset: 1. 1=A valid threshold counter is present.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.
61	Locked . Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not
	available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.
60	IntP . Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt
	generation are not supported.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::LS::MCA_MISC0_LS[Locked]) ? Read-write :
FO.FC	Read-only.
	Reserved.
55:52	LvtOffset . Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see
	Core::X86::Apic::ExtendedInterruptLvtEntries).
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::LS::MCA_MISC0_LS[Locked]) ? Read-write :
	Read-only.
51	CntEn. Reset: 0. 1=Count thresholding errors.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::LS::MCA_MISC0_LS[Locked]) ? Read-write :
	Read-only.
50:49	ThresholdIntType . Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b
	= No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI
	trigger event. 11b = Reserved.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::LS::MCA_MISC0_LS[Locked]) ? Read-write :
40	Read-only.
48	Ovrflw . Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set,
	ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is generated.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::LS::MCA_MISC0_LS[Locked]) ? Read-write :
	Read-only.
47:44	Reserved.
43:32	ErrCnt . Reset: Cold,000h. This is written by software to set the starting value of the error counter. This is
	incremented by hardware when errors are logged. When this counter overflows, it stays at FFFh (no rollover). The
	threshold value, written by software, is (FFFh - the desired error count (the number of errors necessary in order
	for an interrupt to be taken)); the desired error count of 0 (a write value of FFFh) is not supported.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::LS::MCA_MISC0_LS[Locked]) ? Read-write :
0.4.5	Read-only.
	BlkPtr . Read-write. Reset: 01h. 00h=Extended MISC MSR block is not valid. 01h=Extended MSR block is valid.
23:0	Reserved.

MSRC000_2004 [LS Machine Check Configuration] (MCA::LS::MCA_CONFIG_LS)

	· · · · · · · · · · · · · · · · · · ·				
Reset:	Reset: 0000_0000_0000_0025h.				
Contro	ols configuration of the associated machine check bank.				
_lthree[1	:0]_core[3:0]_inst0_aliasMSR; MSRC000_2004				
Bits	Description				
63:39	Reserved.				
38:37 DeferredIntType . Read-write. Reset: 0h. Specifies the type of interrupt signaled when a deferred error is lo					
	00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[DeferredLvtOffset]). 10b =				
SMI trigger event. 11b = Reserved.					
36:35	Reserved.				
34	LogDeferredInMcaStat . Read-write. Reset: 0. Init: BIOS,1. 1=Log deferred errors in				
	MCA::LS::MCA_STATUS_LS and MCA::LS::MCA_ADDR_LS in addition to MCA::LS::MCA_DESTAT_LS				
	and MCA::LS::MCA DEADDR LS. 0=Only log deferred errors in MCA::LS::MCA DESTAT LS and				

	MCA::LS::MCA_DEADDR_LS. This bit does not affect logging of deferred errors in
	MCA::LS::MCA_SYND_LS, MCA::LS::MCA_MISCO_LS.
33	Reserved.
32	McaXEnable . Read-write. Reset: 0. Init: BIOS,1. Check: 1. 1=Software has acknowledged support for the
	MCAX feature set. 0=Software has not acknowledged support for the MCAX feature set. All uncorrected and
	fatal errors will cause an ErrorEvent packet to be generated. Deferred error interrupts are configured via
	Core::X86::Msr::McaIntrCfg.
31:6	Reserved.
5	DeferredIntTypeSupported . Read-only. Reset: 1. 1=MCA::LS::MCA_CONFIG_LS[DeferredIntType] controls
	the type of interrupt generated on a deferred error. Deferred errors are supported in this bank only if
	MCA::LS::MCA_CONFIG_LS[DeferredErrorLoggingSupported]=1.
4:3	Reserved.
2	DeferredErrorLoggingSupported . Read-only. Reset: 1. 1=Deferred errors are supported in this MCA bank, and
	MCA::LS::MCA_CONFIG_LS[LogDeferredInMcaStat] controls the logging behavior of these errors.
	MCA::LS::MCA_DESTAT_LS and MCA::LS::MCA_DEADDR_LS are supported in this MCA bank.
	0=Deferred errors are not supported in this bank.
1	Reserved.
0	McaX . Read-only. Reset: 1. 1=This bank provides Machine Check Architecture Extensions. Up to 4 additional
	MISC registers (MISC1-MISC4) are supported. MCA::LS::MCA_MISC0_LS[BlkPtr] indicates the presence of
	the additional MISC registers, but is not used to determine their MSR numbers. Deferred error interrupt type is
	specifiable by MCA bank. MCA::LS::MCA_STATUS_LS[TCC] is present.

MSRC000_2005 [LS IP Identification] (MCA::LS::MCA_IPID_LS)				
Reset: 0000_00B0_0000_0000h.				
he MCA::LS::MCA_IPID_LS register is used by software to determine what IP type and revision is associated with the	<u>.</u>			
ICA bank.				
hree[1:0]_core[3:0]_inst0_aliasMSR; MSRC000_2005				
Bits Description				
3:48 McaType . Read-only. Reset: 0000h. The McaType of the MCA bank within this IP.				
7:44 Reserved.				
3:32 HardwareID . Read-only. Reset: 0B0h. The Hardware ID of the IP associated with this MCA bank.				
1:0 InstanceId . Read-write. Reset: 0000_0000h. The instance ID of this IP. This is initialized to a unique ID per				
instance of this register.				

MSRC000 2006 [LS Machine Check Syndrome Thread 0] (MCA::LS::MCA_SYND_LS)

MSRC000_2006 [LS Machine Check Syndrome Thread 0] (MCA::LS::MCA_SYND_LS)				
Read-	Read-write, Volatile. Reset: Cold, 0000_0000_0000_0000h.			
Logs I	physical location information associated with error in MCA::LS::MCA_STATUS_LS Thread 0			
_lthree[1	:0]_core[3:0]_thread[1:0]_inst0_aliasMSR; MSRC000_2006			
Bits	Description			
63:39	Reserved.			
38:32	Syndrome . Read-write, Volatile. Reset: Cold,00h. Contains the syndrome, if any, associated with the error logged in MCA::LS::MCA_STATUS_LS. The low-order bit of the syndrome is stored in bit 0, and the syndrome has a length specified by MCA::LS::MCA_SYND_LS[Length]. The Syndrome field is only valid when MCA::LS::MCA_SYND_LS[Length] is not 0.			
31:27	Reserved.			
26:24	ErrorPriority . Read-write, Volatile. Reset: Cold,0h. Encodes the priority of the error logged in MCA::LS::MCA_SYND_LS. 3'b000 = No error; 3'b001 = Reserved; 3'b010 = Corrected Error; 3'b011 = Deferred			
23:18	Error; 3'b100 = Uncorrected Error; 3'b101 = Fatal Error; all others reserved. Length. Read-write, Volatile. Reset: Cold,00h. Specifies the length in bits of the syndrome contained in MCA::LS::MCA_SYND_LS[Syndrome]. A value of 0 indicates that there is no valid syndrome in MCA::LS::MCA_SYND_LS. For example, a syndrome length of 9 means that MCA::LS::MCA_SYND_LS[Syndrome] bits [8:0] contains a valid syndrome.			

17:0 **ErrorInformation**. Read-write, Volatile. Reset: Cold, 0_0000h. Contains error-specific information about the location of the error. Decoding is available in Table 36 [MCA_SYND_LS Register].

Table 36: MCA_SYND_LS Register

Error Type	Bits	Description
LDQ	[17:0]	Reserved
STQ	[17:0]	Reserved
MAB	[17:0]	Reserved
L1DTLB	[17:0]	Reserved
DcTagErr5	[17:16]	Reserved
	[15:8]	Index
	[7:0]	Way
DcTagErr6	[17:16]	Reserved
	[15:8]	Index
	[7:0]	Way
DcTagErr1	[17:16]	Reserved
_	[15:8]	Index
	[7:0]	Way
IntErrTyp1	[17]	Reserved
	[16]	Thread ID
	[15:0]	Reserved
IntErrTyp2	[17]	Reserved
	[16]	Thread ID
	[15:0]	Reserved
SystemReadDataErrorT0	[17:2]	Reserved
	[1:0]	2'b00 = Master Abort; 2'b01 = Target Abort; 2'b10 = Transaction
		Error; 2'b11 = Protection Violation
SystemReadDataErrorT1	[17:2]	Reserved
	[1:0]	2'b00 = Master Abort; 2'b01 = Target Abort; 2'b10 = Transaction
		Error; 2'b11 = Protection Violation
DcTagErr2	[17:16]	Reserved
	[15:8]	Index
	[7:0]	Way
DcDataErr1	[17:16]	Reserved
	[15:8]	Index
	[7:0]	Way
DcDataErr2	[17:16]	Reserved
	[15:8]	Index
	[7:0]	Way
DcDataErr3	[17:16]	Reserved
	[15:8]	Index
	[7:0]	Way
DcTagErr4	[17:16]	Reserved
	[15:8]	Index
	[7:0]	Way
L2DTLB	[17:15]	Reserved
	[14:8]	Reserved

	[7:4]	Reserved
	[3:0]	Reserved
PDC	[17:0]	Reserved
DcTagErr3	[17:16]	Reserved
	[15:8]	Index
	[7:0]	Way
DcTagErr5	[17:16]	Reserved
	[15:8]	Index
	[7:0]	Way
L2DataErr	[17:0]	Reserved

LZDat	delli [17:0] Reserved				
MSRO	MSRC000_2008 [LS Machine Check Deferred Error Status Thread 0] (MCA::LS::MCA_DESTAT_LS)				
Read-v	Read-write, Volatile. Reset: Cold, 0000_0000_0000h.				
Holds	status information for the first deferred error seen in this bank.				
_lthree[1	:0]_core[3:0]_thread[1:0]_inst0_aliasMSR; MSRC000_2008				
Bits	Description				
63	Val . Read-write, Volatile. Reset: Cold, 0. 1=A valid error has been detected (whether it is enabled or not).				
62	Overflow . Read-write, Volatile. Reset: Cold, 0. 1=An error was detected while the valid bit (Val) was set; at least				
	one error was not logged. Overflow is set independently of whether the existing error is overwritten. (See the				
	section on overwrite priorities.)				
61:59	Reserved.				
58	AddrV. Read-write, Volatile. Reset: Cold, 0. 1=MCA::LS::MCA_DEADDR_LS contains address information				
	associated with the error.				
57:54	Reserved.				
53	SyndV . Read-write, Volatile. Reset: Cold,0. 1=This error logged information in MCA::LS::MCA_SYND_LS. If				
	MCA::LS::MCA_SYND_LS[ErrorPriority] is the same as the priority of the error in				
	MCA::LS::MCA_STATUS_LS, then the information in MCA::LS::MCA_SYND_LS is associated with the error				
	in MCA::LS::MCA_DESTAT_LS.				
52:45 Reserved.					
44	Deferred . Read-write, Volatile. Reset: Cold, 0. 1=A deferred error was created. A deferred error is the result of an				
	uncorrectable data error which did not immediately cause a processor exception; poison is created and an				
	exception is deferred until the poison data is consumed.				
43:0	Reserved.				

MSRC000_2009 [LS Deferred Error Address Thread 0] (MCA::LS::MCA_DEADDR_LS)

Read-write, Volatile. Reset: Cold, 0000_0000_0000_0000h.			
The MCA::LS::MCA_DEADDR_LS register stores the address associated with the error in			
MCA::LS::MCA_DESTAT_LS. The register is only meaningful if MCA::LS::MCA_DESTAT_LS[Val]=1 and			
MCA::LS::MCA_DESTAT_LS[AddrV]=1. The lowest valid bit of the address is defined by			
MCA::LS::MCA_DEADDR_LS[LSB].			
_lthree[1:0]_core[3:0]_thread[1:0]_inst0_aliasMSR; MSRC000_2009			
Bits Description			
63:62 Reserved.			
61:56 LSB . Read-write, Volatile. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in			
MCAULSUMCA DEADDD I SEgrow Addr. A value of 0 indicates that MCAULSUMCA DEADDD I SEELO	1		

MCA::LS::MCA_DEADDR_LS[ErrorAddr]. A value of 0 indicates that MCA::LS::MCA_DEADDR_LS[55:0] contains a valid byte address. A value of 6 indicates that MCA::LS::MCA_DEADDR_LS[55:6] contains a valid cache line address and that MCA::LS::MCA_DEADDR_LS[55:0] are not part of the address and should be ignored by error handling software. A value of 12 indicates that MCA::LS::MCA_DEADDR_LS[55:12] contain a valid 4KB memory page and that MCA::LS::MCA_DEADDR_LS[11:0] should be ignored by error handling software.

the error logged in MCA::LS::MCA_DESTAT_LS. The lowest-order valid bit of the address is specified in MCA::LS::MCA_DEADDR_LS[LSB].

MSRO	MSRC001_0400 [LS Machine Check Control Mask] (MCA::LS::MCA_CTL_MASK_LS)				
Read-v	Read-write. Reset: 0000_0000_0000_0000h.				
Inhibit	Inhibit detection of an error source.				
	:0]_core[3:0]_inst0_aliasMSR; MSRC001_0400				
	Description				
63:21	Reserved.				
20	L2DataErr . Read-write. Reset: 0. L2 Fill Data error.				
19	DcTagErr5 . Read-write. Reset: 0. DC Tag error type 5.				
18	DcTagErr3 . Read-write. Reset: 0. DC Tag error type 3.				
17	PDC . Read-write. Reset: 0. PDC parity error. MCA_ADDR_LS logs a virtual address.				
16	L2DTLB . Read-write. Reset: 0. Level 2 TLB parity error. MCA_ADDR_LS logs a virtual address.				
15	DcTagErr4 . Read-write. Reset: 0. DC Tag error type 4.				
14	DcDataErr3 . Read-write. Reset: 0. DC Data error type 3.				
13	DcDataErr2 . Read-write. Reset: 0. DC Data error type 2.				
12					
	on poison consumption from L2/L3.				
11	DcTagErr2 . Read-write. Reset: 0. DC Tag error type 2.				
10					
	read of a line from the data fabric. Possible reasons include master abort and target abort.				
9	SystemReadDataErrorT0 . Read-write. Reset: 0. Init: BIOS,1. System Read Data Error Thread 0. An error in a				
	read of a line from the data fabric. Possible reasons include master abort and target abort.				
8	IntErrTyp2. Read-write. Reset: 0. Internal error type 2.				
7	IntErrTyp1. Read-write. Reset: 0. Internal error type 1.				
6	DcTagErr1 . Read-write. Reset: 0. DC Tag error type 1.				
5	DcTagErr6 . Read-write. Reset: 0. DC Tag error type 6.				
4	Reserved.				
3	L1DTLB . Read-write. Reset: 0. Level 1 TLB parity error.				
2	MAB. Read-write. Reset: 0. Miss address buffer payload parity error.				
1	STQ. Read-write. Reset: 0. Store queue parity error.				
0	LDQ . Read-write. Reset: 0. Load queue parity error.				

3.2.5.2 IF

MS	RU	JUU_	_040	MSRC000_2010 [IF Machine Check Control] (MCA::IF::MCA_CTI	IF)
	_				
				. 0000 0000 0000 00001	

Read-	Read-write. Reset: 0000_0000_0000_0000h.		
0=Dis	ables error reporting for the corresponding error. 1=Enables error reporting via machine check exception for the		
corres	ponding error. The MCA::IF::MCA_CTL_IF register must be enabled by the corresponding enable bit in		
Core::	X86::Msr::MCG_CTL. Does not affect error detection, correction, or logging.		
_lthree[1	L:0]_core[3:0]_inst1_aliasMSRLEGACY; MSR0000_0404		
_lthree[1	L:0]_core[3:0]_inst1_aliasMSR; MSRC000_2010		
Bits	Description		
63:14	Reserved.		
13	SystemReadDataError . Read-write. Reset: 0. System Read Data Error. An error in a demand fetch of a line.		
	Possible reasons include master abort and target abort.		
12	12 L2RespPoison . Read-write. Reset: 0. L2 Cache Response Poison Error. Error is the result of consuming poison		
	data.		

11	L2BtbMultiHit. Read-write. Reset: 0. L2 BTB Multi-Match Error.
10	L1BtbMultiHit. Read-write. Reset: 0. L1 BTB Multi-Match Error.
9	BpqSnpParT1 . Read-write. Reset: 0. BPQ Thread 1 Snoop Parity Error.
8	BpqSnpParT0 . Read-write. Reset: 0. BPQ Thread 0 Snoop Parity Error.
7	L2ItlbParity. Read-write. Reset: 0. L2 ITLB Parity Error.
6	L1ItlbParity. Read-write. Reset: 0. L1 ITLB Parity Error.
5	L0ItlbParity. Read-write. Reset: 0. L0 ITLB Parity Error.
4	DqParity . Read-write. Reset: 0. Decoupling Queue PhysAddr Parity Error.
3	DataParity . Read-write. Reset: 0. IC Data Array Parity Error.
2	TagParity. Read-write. Reset: 0. IC Full Tag Parity Error.
1	TagMultiHit. Read-write. Reset: 0. IC Microtag or Full Tag Multi-hit Error.
0	OcUtagParity. Read-write. Reset: 0. Op Cache Microtag Probe Port Parity Error.

0 OcUtagParity. Read-write. Reset: 0. Op Cache Microtag Probe Port Parity Error.			
MSR0000_0405MSRC000_2011 [IF Machine Check Status Thread 0] (MCA::IF::MCA_STATUS	S_IF)		
Reset: Cold,0000_0000_0000_0000h.			
Logs information associated with errors.			
_lthree[1:0]_core[3:0]_thread[1:0]_inst1_aliasMSRLEGACY; MSR0000_0405			
_lthree[1:0]_core[3:0]_thread[1:0]_inst1_aliasMSR; MSRC000_2011			
Bits Description			
63 Val. Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after	the register has		
been read.			
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on			
62 Overflow . Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one en			
logged. Overflow is set independently of whether the existing error is overwritten. See 3.1.3 [Mac	cnine Cneck		
Errors].	ita 1		
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-only	n-write-1.		
, , , , , , , , , , , , , , , , , , ,	: +- 1		
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-only			
60 En. Reset: Cold,0. 1=MCA error reporting is enabled for this error, as indicated by the correspond	ling bit in		
MCA::IF::MCA_CTL_IF. This bit is a copy of bit in MCA::IF::MCA_CTL_IF for this error.			
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on	n-write-1.		
59 MiscV . Reset: Cold,0. 1=Valid thresholding in MCA::IF::MCA_MISCO_IF.			
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-only			
58 AddrV. Reset: Cold,0. 1=MCA::IF::MCA_ADDR_IF contains address information associated with the containing address and the co			
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on			
57 PCC . Reset: Cold,0. 1=Hardware context held by the processor may have been corrupted. Continu			
the system may have unpredictable results. The error is not recoverable or survivable, and the system reinitialized.	tem should be		
	i+o 1		
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on	n-write-1.		
56 ErrCoreIdVal. Reset: Cold,0. 1=The ErrCoreId field is valid.			
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-only			
55 TCC . Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instru			
address pushed onto the exception handler stack if any uncorrected error has been corrected by so			
thread which consumed the error is not restartable and must be terminated. Only meaningful when MCA::IF::MCA_STATUS_IF[PCC]=0.	1		
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-only	n_writo_1		
54 Reserved.	11-W111C-1.		
53 SyndV . Reset: Cold,0. 1=This error logged information in MCA::IF::MCA_SYND_IF. If			
MCA::IF::MCA_SYND_IF[ErrorPriority] is the same as the priority of the error in			
MCA::IF::MCA_STATUS_IF, then the information in MCA::IF::MCA_SYND_IF is associated v	vith the error in		

	MCA::IF::MCA_STATUS_IF.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
52:47	Reserved.		
46	CECC . Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC		
	algorithm. UC indicates whether the error was actually corrected by the processor.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
45 UECC . Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC			
	algorithm. UC indicates whether the error was actually corrected by the processor.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
44	Deferred . Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data		
	error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is		
	consumed.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
Poison . Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
	Reserved.		
37:32	ErrCoreId . Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is		
	associated with the error; Otherwise this field is reserved.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
	Reserved.		
21:16	ErrorCodeExt . Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause		
	analysis. This field indicates which bit position in MCA::IF::MCA_CTL_IF enables error reporting for the logged		
	error.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
15:0	ErrorCode . Reset: Cold,0000h. Error code for this error. See 3.1.3.3 [Error Codes] for details on decoding this field.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		

Table 37: MCA_STATUS_IF[ErrorCodeExt] Decode

Error Type	Bits	Description
OcUtagParity	[6:0]	0x0
TagMultiHit	[6:0]	0x1
TagParity	[6:0]	0x2
DataParity	[6:0]	0x3
DqParity	[6:0]	0x4
L0ItlbParity	[6:0]	0x5
L1ItlbParity	[6:0]	0x6
L2ItlbParity	[6:0]	0x7
BpqSnpParT0	[6:0]	0x8
BpqSnpParT1	[6:0]	0x9
L1BtbMultiHit	[6:0]	0xa
L2BtbMultiHit	[6:0]	0xb
L2RespPoison	[6:0]	0xc
SystemReadDataError	[6:0]	0xd

MSR0000_0406...MSRC000_2012 [IF Machine Check Address Thread 0] (MCA::IF::MCA_ADDR_IF)

Read-write, Volatile. Reset: Cold, 0000_0000_0000_0000h.

MCA::IF::MCA_ADDR_IF stores an address and other information associated with the error in

MCA::IF::MCA_STATUS_IF. The register is only meaningful if MCA::IF::MCA_STATUS_IF[Val]=1 and

MCA::IF::MCA_STATUS_IF[AddrV]=1.			
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]_inst1_aliasMSRLEGACY; MSR0000_0406		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]_inst1_aliasMSR; MSRC000_2012		
Bits	Description		
63:62	Reserved.		
61:56	LSB . Read-write, Volatile. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in		
	MCA::IF::MCA_ADDR_IF[ErrorAddr]. A value of 0 indicates that MCA::IF::MCA_ADDR_IF[55:0] contains a		
	valid byte address. A value of 6 indicates that MCA::IF::MCA_ADDR_IF[55:6] contains a valid cache line		
	address and that MCA::IF::MCA_ADDR_IF[5:0] are not part of the address and should be ignored by error		
	handling software. A value of 12 indicates that MCA::IF::MCA_ADDR_IF[55:12] contain a valid 4KB memory		
	page and that MCA::IF::MCA_ADDR_IF[11:0] should be ignored by error handling software.		
55:0	ErrorAddr . Read-write, Volatile. Reset: Cold,00_0000_0000h. Unless otherwise specified by an error,		
	contains the address associated with the error logged in MCA::IF::MCA_STATUS_IF. For physical addresses, the		
	most significant bit is given by Core::X86::Cpuid::LongModeInfo[PhysAddrSize].		

Table 38: MCA_ADDR_IF Register

Error Type	Bits	Description
OcUtagParity	[55:0]	Reserved
TagMultiHit	[55:48]	Reserved
	[47:0]	Physical Address
TagParity	[55:48]	Reserved
	[47:0]	Physical Address
DataParity	[55:48]	Reserved
	[47:0]	Physical Address
DqParity	[55:48]	Reserved
	[47:0]	Physical Address
L0ItlbParity	[55:48]	Reserved
	[47:12]	Linear Address
	[11:0]	Reserved
L1ItlbParity	[55:48]	Reserved
	[47:12]	Linear Address
	[11:0]	Reserved
L2ItlbParity	[55:48]	Reserved
	[47:12]	Linear Address
	[11:0]	Reserved
BpqSnpParT0	[55:0]	Reserved
BpqSnpParT1	[55:0]	Reserved
L1BtbMultiHit	[55:0]	Reserved
L2BtbMultiHit	[55:0]	Reserved
L2RespPoison	[55:48]	Reserved
	[47:5]	Physical Address
	[4:0]	Reserved
SystemReadDataError	[55:48]	Reserved
	[47:5]	Physical Address
	[4:0]	Reserved

MSR0000_0407...MSRC000_2013 [IF Machine Check Miscellaneous 0 Thread 0] (MCA::IF::MCA_MISC0_IF)

	Log miscellaneous information associated with errors.
-	lthree[1:0]_core[3:0]_thread[1:0]_inst1_aliasMSRLEGACY; MSR0000_0407

Bits Description
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only. CntP. Reset: 1. 1=A valid threshold counter is present. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only. Locked. Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is no available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only. IntP. Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt generation are not supported.
 CntP. Reset: 1. 1=A valid threshold counter is present. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only. Locked. Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is no available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only. IntP. Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt generation are not supported.
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only. Locked. Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is no available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only. IntP. Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt generation are not supported.
 Locked. Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is no available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only. IntP. Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt generation are not supported.
available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only. 60 IntP. Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt generation are not supported.
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only. 60 IntP. Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt generation are not supported.
60 IntP . Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt generation are not supported.
generation are not supported.
AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::IF::MCA MISCO IF[Locked]) ? Read-write :
Read-only.
59:56 Reserved.
55:52 LvtOffset . Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the
APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see
Core::X86::Apic::ExtendedInterruptLvtEntries).
AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::IF::MCA_MISC0_IF[Locked]) ? Read-write :
Read-only. 51 CntEn . Reset: 0. 1=Count thresholding errors.
AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::IF::MCA_MISC0_IF[Locked]) ? Read-write :
Read-only.
50:49 ThresholdIntType . Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00
= No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI
trigger event. 11b = Reserved.
AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::IF::MCA_MISC0_IF[Locked]) ? Read-write :
Read-only.
48 Ovrflw . Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set,
ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is
generated.
AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::IF::MCA_MISC0_IF[Locked]) ? Read-write :
Read-only.
47:44 Reserved.
43:32 ErrCnt. Reset: Cold,000h. This is written by software to set the starting value of the error counter. This is
incremented by hardware when errors are logged. When this counter overflows, it stays at FFFh (no rollover). T threshold value, written by software, is (FFFh - the desired error count (the number of errors necessary in order
for an interrupt to be taken)); the desired error count of 0 (a write value of FFFh) is not supported.
AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::IF::MCA_MISCO_IF[Locked]) ? Read-write :
Read-only.
31:24 BlkPtr . Read-write. Reset: 01h. 00h=Extended MISC MSR block is not valid. 01h=Extended MSR block is val
23:0 Reserved.

MSRC000_2014 [IF Machine Check Configuration] (MCA::IF::MCA_CONFIG_IF)

Reset:	0000_0000_0000_0021h.		
Contro	Controls configuration of the associated machine check bank.		
_lthree[1	:0]_core[3:0]_inst1_aliasMSR; MSRC000_2014		
Bits	Description		
63:39	Reserved.		
38:37	DeferredIntType . Read-write. Reset: 0h. Specifies the type of interrupt signaled when a deferred error is logged.		
	00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[DeferredLvtOffset]). 10b =		
	SMI trigger event. 11b = Reserved.		

36:33	Reserved.		
32	McaXEnable . Read-write. Reset: 0. Init: BIOS,1. Check: 1. 1=Software has acknowledged support for the		
	MCAX feature set. 0=Software has not acknowledged support for the MCAX feature set. All uncorrected and		
fatal errors will cause an ErrorEvent packet to be generated. Deferred error interrupts are configured			
Core::X86::Msr::McaIntrCfg.			
31:6	6 Reserved.		
5	DeferredIntTypeSupported . Read-only. Reset: 1. 1=MCA::IF::MCA_CONFIG_IF[DeferredIntType] controls		
	the type of interrupt generated on a deferred error. Deferred errors are supported in this bank only if		
	MCA::IF::MCA_CONFIG_IF[DeferredErrorLoggingSupported]=1.		
4:3	Reserved.		
2	DeferredErrorLoggingSupported . Read-only. Reset: 0. 1=Deferred errors are supported in this MCA bank, and		
	the LogDeferredInMcaStat field in this register controls the logging behavior of these errors. MCA_DESTAT and		
	MCA_DEADDR are supported in this MCA bank. 0=Deferred errors are not supported in this bank.		
1	Reserved.		
0	McaX . Read-only. Reset: 1. 1=This bank provides Machine Check Architecture Extensions. Up to 4 additional		
	MISC registers (MISC1-MISC4) are supported. MCA::IF::MCA_MISC0_IF[BlkPtr] indicates the presence of the		
	additional MISC registers, but is not used to determine their MSR numbers. Deferred error interrupt type is		
	specifiable by MCA bank. MCA::IF::MCA_STATUS_IF[TCC] is present.		

MSRC000 2015 [IF IP Identification] (MCA::IF::MCA IPID IF)

MSKC	COOU_2015 [IF IF Identification] (MCAIFMCA_IFID_IF)	
Reset:	0001_00B0_0000_0000h.	
The M	CA::IF::MCA_IPID_IF register is used by software to determine what IP type and revision is associated with the	
MCA t	pank.	
_lthree[1:	0]_core[3:0]_inst1_aliasMSR; MSRC000_2015	
Bits	Description	
63:48	McaType . Read-only. Reset: 0001h. The McaType of the MCA bank within this IP.	
47:44	Reserved.	
43:32	2 HardwareID . Read-only. Reset: 0B0h. The Hardware ID of the IP associated with this MCA bank.	
31:0	InstanceId . Read-write. Reset: 0000_0000h. The instance ID of this IP. This is initialized to a unique ID per	
	instance of this register.	

MSRC000_2016 [IF Machine Check Syndrome Thread 0] (MCA::IF::MCA_SYND_IF)			
Read-write, Volatile. Reset: Cold, 0000_0000_0000h.			
Logs p	Logs physical location information associated with error in MCA::IF::MCA_STATUS_IF Thread 0		
_lthree[1	:0]_core[3:0]_thread[1:0]_inst1_aliasMSR; MSRC000_2016		
Bits	Description		
63:33	Reserved.		
32	Syndrome . Read-write, Volatile. Reset: Cold, 0. Contains the syndrome, if any, associated with the error logged in		
	MCA::IF::MCA_STATUS_IF. The low-order bit of the syndrome is stored in bit 0, and the syndrome has a length		
	specified by MCA::IF::MCA_SYND_IF[Length]. The Syndrome field is only valid when		
	MCA::IF::MCA_SYND_IF[Length] is not 0.		
31:27	Reserved.		
26:24	26:24 ErrorPriority . Read-write, Volatile. Reset: Cold, 0h. Encodes the priority of the error logged in		
	MCA::IF::MCA_SYND_IF. 3'b000 = No error; 3'b001 = Reserved; 3'b010 = Corrected Error; 3'b011 = Deferred		
	Error; 3'b100 = Uncorrected Error; 3'b101 = Fatal Error; all others reserved.		
23:18	Length . Read-write, Volatile. Reset: Cold, 00h. Specifies the length in bits of the syndrome contained in		
	MCA::IF::MCA_SYND_IF[Syndrome]. A value of 0 indicates that there is no valid syndrome in		
	MCA::IF::MCA_SYND_IF. For example, a syndrome length of 9 means that		
	MCA::IF::MCA_SYND_IF[Syndrome] bits [8:0] contains a valid syndrome.		
17:0	ErrorInformation . Read-write, Volatile. Reset: Cold, 0_0000h. Contains error-specific information about the		
	location of the error. Decoding is available in Table 39 [MCA_SYND_IF Register].		

Table 39: MCA SYND IF Register

Error Type	Bits	Description
OcUtagParity	[17:5]	Reserved
	[4:0]	Index
TagMultiHit	[17:16]	Reserved
	[15:8]	Subcache
	[8:0]	Reserved
TagParity	[17:8]	Reserved
	[7:0]	Way
DataParity	[17:16]	Reserved
•	[15:8]	Subcache
	[8:0]	Way
DqParity	[17:0]	Reserved
L0ItlbParity	[17:4]	Reserved
	[3:0]	Reserved
L1ItlbParity	[17:6]	Reserved
	[5:0]	Reserved
L2ItlbParity	[17:8]	Reserved
	[7:0]	Reserved
BpqSnpParT0	[17:0]	Reserved
BpqSnpParT1	[17:0]	Reserved
L1BtbMultiHit	[17:0]	Reserved
L2BtbMultiHit	[17:0]	Reserved
L2RespPoison	[17:0]	Reserved
SystemReadDataError	[17:2]	Reserved
	[1:0]	2'b00 = Master Abort; 2'b01 = Target Abort; 2'b10 = Transaction
		Error; 2'b11 = Protection Violation

MSRC001 0401 [IF Machine Check Control Mask] (MCA::IF::MCA CTL MASK IF) Read-write. Reset: 0000 0000 0000 0000h. Inhibit detection of an error source. _lthree[1:0]_core[3:0]_inst1_aliasMSR; MSRC001_0401 Bits Description 63:14 Reserved. **SystemReadDataError**. Read-write. Reset: 0. Init: BIOS,1. System Read Data Error. An error in a demand fetch of a line. Possible reasons include master abort and target abort. 12 **L2RespPoison**. Read-write. Reset: 0. L2 Cache Response Poison Error. Error is the result of consuming poison data. L2BtbMultiHit. Read-write. Reset: 0. L2 BTB Multi-Match Error. 11 L1BtbMultiHit. Read-write. Reset: 0. L1 BTB Multi-Match Error. 10 9 **BpqSnpParT1**. Read-write. Reset: 0. BPQ Thread 1 Snoop Parity Error. **BpqSnpParT0**. Read-write. Reset: 0. BPQ Thread 0 Snoop Parity Error. 8 7 L2ItlbParity. Read-write. Reset: 0. L2 ITLB Parity Error. L1ItlbParity. Read-write. Reset: 0. L1 ITLB Parity Error. 6 L0ItlbParity. Read-write. Reset: 0. L0 ITLB Parity Error. 5 4 **DqParity**. Read-write. Reset: 0. Decoupling Queue PhysAddr Parity Error. 3 DataParity. Read-write. Reset: 0. IC Data Array Parity Error. 2 **TagParity**. Read-write. Reset: 0. IC Full Tag Parity Error. **TagMultiHit**. Read-write. Reset: 0. IC Microtag or Full Tag Multi-hit Error.

OcUtagParity. Read-write. Reset: 0. Op Cache Microtag Probe Port Parity Error.

3.2.5.3 L2

MSR0000_0408...MSRC000_2020 [L2 Machine Check Control] (MCA::L2::MCA_CTL_L2)

Read-write. Reset: 0000_0000_0000_0000h.

0=Disables error reporting for the corresponding error. 1=Enables error reporting via machine check exception for the corresponding error. The MCA::L2::MCA_CTL_L2 register must be enabled by the corresponding enable bit in Core::X86::Msr::MCG_CTL. Does not affect error detection, correction, or logging.

____lthree[1:0]_core[3:0]_inst2_aliasMSRLEGACY; MSR0000_0408

_lthree[]	_tthree[1:0]_core[3:0]_inst2_aliasMSR; MSRC000_2020		
Bits	Description		
63:4	Reserved.		
3	Hwa . Read-write. Reset: 0. Hardware Assert Error.		
2	Data . Read-write. Reset: 0. L2M Data Array ECC Error.		
1	Tag. Read-write. Reset: 0. L2M Tag or State Array ECC Error.		
0	MultiHit. Read-write. Reset: 0. L2M Tag Multiple-Way-Hit error.		

MSR0000 0409...MSRC000 2021 [L2 Machine Check Status Thread 0] (MCA::L2::MCA STATUS L2)

MSR	0000_0409MSRC000_2021 [L2 Machine Check Status Thread 0] (MCA::L2::MCA_STATUS_L2)			
Reset: Cold,0000_0000_0000_0000h.				
Logs information associated with errors.				
	_lthree[1:0]_core[3:0]_thread[1:0]_inst2_aliasMSRLEGACY; MSR0000_0409			
	:0]_core[3:0]_thread[1:0]_inst2_aliasMSR; MSRC000_2021			
Bits	Description			
63	Val . Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the register has been read.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.			
62 Overflow . Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error				
	logged. Overflow is set independently of whether the existing error is overwritten. See 3.1.3 [Machine Check Errors].			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.			
61	UC. Reset: Cold,0. 1=The error was not corrected by hardware.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.			
60	En. Reset: Cold,0. 1=MCA error reporting is enabled for this error, as indicated by the corresponding bit in			
	MCA::L2::MCA_CTL_L2. This bit is a copy of bit in MCA::L2::MCA_CTL_L2 for this error.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.			
59	MiscV . Reset: Cold,0. 1=Valid thresholding in MCA::L2::MCA_MISCO_L2.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.			
58	AddrV . Reset: Cold,0. 1=MCA::L2::MCA_ADDR_L2 contains address information associated with the error.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.			
57	PCC . Reset: Cold,0. 1=Hardware context held by the processor may have been corrupted. Continued operation of			
	the system may have unpredictable results. The error is not recoverable or survivable, and the system should be reinitialized.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.			
56	ErrCoreIdVal. Reset: Cold,0. 1=The ErrCoreId field is valid.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.			
55	TCC . Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer			
	address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The			
	thread which consumed the error is not restartable and must be terminated. Only meaningful when			
	MCA::L2::MCA_STATUS_L2[PCC]=0.			

	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.				
54	Reserved.				
53	SyndV . Reset: Cold,0. 1=This error logged information in MCA::L2::MCA_SYND_L2. If				
	MCA::L2::MCA_SYND_L2[ErrorPriority] is the same as the priority of the error in				
	MCA::L2::MCA_STATUS_L2, then the information in MCA::L2::MCA_SYND_L2 is associated with the error				
	in MCA::L2::MCA_STATUS_L2.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.				
46	CECC . Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC				
	algorithm. UC indicates whether the error was actually corrected by the processor.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.				
45 UECC . Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the					
	algorithm. UC indicates whether the error was actually corrected by the processor.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.				
44	Deferred . Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data				
	error which did not immediately cause a processor exception; an exception is deferred until the erroneous of				
	consumed.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.				
43	Poison . Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.				
	Reserved.				
37:32	ErrCoreId . Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is				
	associated with the error; Otherwise this field is reserved.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.				
	Reserved.				
21:16	ErrorCodeExt . Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause				
	analysis. This field indicates which bit position in MCA::L2::MCA_CTL_L2 enables error reporting for the				
	logged error.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.				
15:0	ErrorCode . Reset: Cold,0000h. Error code for this error. See 3.1.3.3 [Error Codes] for details on decoding this				
	field.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.				

Table 40: MCA_STATUS_L2[ErrorCodeExt] Decode

Error Type	Bits	Description
MultiHit	[6:0]	0x0
Tag	[6:0]	0x1
Data	[6:0]	0x2
Hwa	[6:0]	0x3

MSR0000_040AMSRC000_2022 [L2 Machine Check Address Thread 0] (MCA::L2::MCA_ADDR_L2)				
Read-write, Volatile. Reset: Cold, 0000_0000_0000h.				
MCA::L2::MCA_ADDR_L2 stores an address and other information associated with the error in				
MCA::L2::MCA_STATUS_L2. The register is only meaningful if MCA::L2::MCA_STATUS_L2[Val]=1 and				
MCA::L2::MCA_STATUS_L2[AddrV]=1.				
_lthree[1:0]_core[3:0]_thread[1:0]_inst2_aliasMSRLEGACY; MSR0000_040A				
_lthree[1:0]_core[3:0]_thread[1:0]_inst2_aliasMSR; MSRC000_2022				
Bits Description				
63:62	63:62 Reserved.			
61:56	LSB . Read-write, Volatile. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in			

	MCA::L2::MCA_ADDR_L2[ErrorAddr]. A value of 0 indicates that MCA::L2::MCA_ADDR_L2[55:0] contains
	a valid byte address. A value of 6 indicates that MCA::L2::MCA_ADDR_L2[55:6] contains a valid cache line
	address and that MCA::L2::MCA_ADDR_L2[5:0] are not part of the address and should be ignored by error
	handling software. A value of 12 indicates that MCA::L2::MCA_ADDR_L2[55:12] contain a valid 4KB memory
	page and that MCA::L2::MCA_ADDR_L2[11:0] should be ignored by error handling software.
55:0	ErrorAddr . Read-write, Volatile. Reset: Cold,00_0000_0000h. Unless otherwise specified by an error,
	contains the address associated with the error logged in MCA::L2::MCA_STATUS_L2. For physical addresses,
	the most significant bit is given by Core::X86::Cpuid::LongModeInfo[PhysAddrSize].

Table 41: MCA_ADDR_L2 Register

Error Type	Bits	Description
MultiHit	[55:48]	Reserved
	[47:6]	Physical Address
	[5:0]	Reserved
Tag	[55:48]	Reserved
	[47:6]	Physical Address
	[5:0]	Reserved
Data	[55:48]	Reserved
	[47:6]	Physical Address
	[5:0]	Reserved
Hwa	[31:0]	Reserved

MSR0000_040B...MSRC000_2023 [L2 Machine Check Miscellaneous 0 Thread 0] (MCA::L2::MCA_MISC0_L2)

Log miscellaneous information associated with errors. Libree[1:0]_core[3:0]_thread[1:0]_inst2_aliasMSR_LEGACY; MSR0000_040B Libree[1:0]_core[3:0]_thread[1:0]_inst2_aliasMSR; MSRC000_2023	M3R0000_040BM3RC000_2025 [L2 Machine Check Miscenaneous v Tineau v] (MCAL2MCA_M13C0_L2)					
Interest 1.0 Locked Reset Locked Read-only.						
Bits Description						
Valid. Reset: 1. 1=A valid CntP field is present in this register. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only. CntP. Reset: 1. 1=A valid threshold counter is present. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only. Locked. Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only. IntP. Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt generation are not supported. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. Sp:56 Reserved. Extroffset. Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see Core::X86::Apic::ExtendedInterruptLvtEntries). AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. CntEn. Reset: 0. 1=Count thresholding errors. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. ThresholdIntType. Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI						
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only. CntP. Reset: 1. 1=A valid threshold counter is present. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only. Locked. Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only. IntP. Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt generation are not supported. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. 59:56 Reserved. 55:52 LvtOffset. Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see Core::X86::Apic::ExtendedInterruptLvtEntries). AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. 51 CntEn. Reset: 0. 1=Count thresholding errors. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. ThresholdIntType. Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI		*				
CntP. Reset: 1. 1=A valid threshold counter is present. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only. Locked. Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only. IntP. Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt generation are not supported. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. 59:56 Reserved. LvtOffset. Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see Core::X86::Apic::ExtendedInterruptLvtEntries). AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. CntEn. Reset: 0. 1=Count thresholding errors. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. ThresholdIntType. Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1.00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::MscaIntrCfg[ThresholdLvtOffset]). 10b = SMI	63	1 0				
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only. Locked. Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only. IntP. Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt generation are not supported. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. 59:56 Reserved. LvtOffset. Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see Core::X86::Apic::ExtendedInterruptLvtEntries). AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. CntEn. Reset: 0. 1=Count thresholding errors. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. ThresholdIntType. Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI		AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.				
Locked. Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only. IntP. Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt generation are not supported. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. Sp:56 Reserved. EvtOffset: Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see Core::X86::Apic::ExtendedInterruptLvtEntries). AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. CntEn. Reset: 0. 1=Count thresholding errors. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. ThresholdIntType. Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1.00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI	62	62 CntP . Reset: 1. 1=A valid threshold counter is present.				
available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI. AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only. IntP. Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt generation are not supported. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. 59:56 Reserved. LvtOffset. Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see Core::X86::Apic::ExtendedInterruptLvtEntries). AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. CntEn. Reset: 0. 1=Count thresholding errors. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. ThresholdIntType. Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI		AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.				
AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only. IntP. Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt generation are not supported. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. 59:56 Reserved. 55:52 LvtOffset. Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see Core::X86::Apic::ExtendedInterruptLvtEntries). AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. CntEn. Reset: 0. 1=Count thresholding errors. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. ThresholdIntType. Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI	61	61 Locked . Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is no				
IntP. Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt generation are not supported. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. 59:56 Reserved. 55:52 LvtOffset. Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see Core::X86::Apic::ExtendedInterruptLvtEntries). AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. CntEn. Reset: 0. 1=Count thresholding errors. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. ThresholdIntType. Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI		available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI.				
generation are not supported. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. 59:56 Reserved. 55:52 LvtOffset. Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see Core::X86::Apic::ExtendedInterruptLvtEntries). AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. 51 CntEn. Reset: 0. 1=Count thresholding errors. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. 50:49 ThresholdIntType. Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.					
AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. 59:56 Reserved. 55:52 LvtOffset. Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see Core::X86::Apic::ExtendedInterruptLvtEntries). AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. 51 CntEn. Reset: 0. 1=Count thresholding errors. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. 50:49 ThresholdIntType. Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI	60	IntP . Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt				
Read-only. 59:56 Reserved. 55:52 LvtOffset. Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see Core::X86::Apic::ExtendedInterruptLvtEntries). AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. 51 CntEn. Reset: 0. 1=Count thresholding errors. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. 50:49 ThresholdIntType. Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI	generation are not supported.					
59:56 Reserved. 55:52 LvtOffset. Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see Core::X86::Apic::ExtendedInterruptLvtEntries). AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. 51 CntEn. Reset: 0. 1=Count thresholding errors. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. 50:49 ThresholdIntType. Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI		AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISC0_L2[Locked]) ? Read-write :				
 LvtOffset. Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see Core::X86::Apic::ExtendedInterruptLvtEntries). AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. CntEn. Reset: 0. 1=Count thresholding errors. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. ThresholdIntType. Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI 		Read-only.				
APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see Core::X86::Apic::ExtendedInterruptLvtEntries). AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. 51	59:56	6 Reserved.				
Core::X86::Apic::ExtendedInterruptLvtEntries). AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. 51	55:52	LvtOffset. Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the				
AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. 51		APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see				
Read-only. 51		Core::X86::Apic::ExtendedInterruptLvtEntries).				
 CntEn. Reset: 0. 1=Count thresholding errors. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. ThresholdIntType. Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI 		AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISC0_L2[Locked]) ? Read-write :				
AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISCO_L2[Locked]) ? Read-write : Read-only. 50:49 ThresholdIntType. Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI		Read-only.				
Read-only. 50:49 ThresholdIntType. Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI	51	CntEn. Reset: 0. 1=Count thresholding errors.				
50:49 ThresholdIntType . Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI		AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISC0_L2[Locked]) ? Read-write :				
= No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI		Read-only.				
	50:49	ThresholdIntType . Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b				
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1						
trigger event. 11b = Reserved.		trigger event. 11b = Reserved.				

	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISC0_L2[Locked]) ? Read-write :			
	Read-only.			
48	Ovrflw . Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set,			
	ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is			
	generated.			
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISC0_L2[Locked]) ? Read-write :			
	Read-only.			
47:44	Reserved.			
43:32				
	incremented by hardware when errors are logged. When this counter overflows, it stays at FFFh (no rollover). The			
	threshold value, written by software, is (FFFh - the desired error count (the number of errors necessary in order			
	for an interrupt to be taken)); the desired error count of 0 (a write value of FFFh) is not supported.			
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L2::MCA_MISC0_L2[Locked]) ? Read-write :			
	Read-only.			
31:24	BlkPtr . Read-write. Reset: 01h. 00h=Extended MISC MSR block is not valid. 01h=Extended MSR block is valid.			
23:0	Reserved.			

MSRC000 2024 [L2 Machine Check Configuration] (MCA::L2::MCA CONFIG L2)

MSRC000_2024 [L2 Machine Check Configuration] (MCA::L2::MCA_CONFIG_L2)				
Reset:	Reset: 0000_0000_0000_0025h.			
	Controls configuration of the associated machine check bank.			
_lthree[1:0]_core[3:0]_inst2_aliasMSR; MSRC000_2024				
Bits	Bits Description			
63:39	Reserved.			
	DeferredIntType . Read-write. Reset: 0h. Specifies the type of interrupt signaled when a deferred error is logged. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[DeferredLvtOffset]). 10b = SMI trigger event. 11b = Reserved.			
	Reserved.			
34	LogDeferredInMcaStat. Read-write. Reset: 0. Init: BIOS,1. 1=Log deferred errors in MCA::L2::MCA_STATUS_L2 and MCA::L2::MCA_ADDR_L2 in addition to MCA::L2::MCA_DESTAT_L2 and MCA::L2::MCA_DEADDR_L2. 0=Only log deferred errors in MCA::L2::MCA_DESTAT_L2 and MCA::L2::MCA_DEADDR_L2. This bit does not affect logging of deferred errors in MCA::L2::MCA_SYND_L2, MCA::L2::MCA_MISCO_L2.			
33	Reserved.			
32	McaXEnable. Read-write. Reset: 0. Init: BIOS,1. Check: 1. 1=Software has acknowledged support for the MCAX feature set. 0=Software has not acknowledged support for the MCAX feature set. All uncorrected and fatal errors will cause an ErrorEvent packet to be generated. Deferred error interrupts are configured via Core::X86::Msr::McaIntrCfg.			
31:6	Reserved.			
5	DeferredIntTypeSupported . Read-only. Reset: 1. 1=MCA::L2::MCA_CONFIG_L2[DeferredIntType] controls the type of interrupt generated on a deferred error. Deferred errors are supported in this bank only if MCA::L2::MCA_CONFIG_L2[DeferredErrorLoggingSupported]=1.			
4:3	Reserved.			
2	DeferredErrorLoggingSupported . Read-only. Reset: 1. 1=Deferred errors are supported in this MCA bank, and MCA::L2::MCA_CONFIG_L2[LogDeferredInMcaStat] controls the logging behavior of these errors. MCA::L2::MCA_DESTAT_L2 and MCA::L2::MCA_DEADDR_L2 are supported in this MCA bank. 0=Deferred errors are not supported in this bank.			
1	Reserved.			
0	McaX . Read-only. Reset: 1. 1=This bank provides Machine Check Architecture Extensions. Up to 4 additional MISC registers (MISC1-MISC4) are supported. MCA::L2::MCA_MISC0_L2[BlkPtr] indicates the presence of the additional MISC registers, but is not used to determine their MSR numbers. Deferred error interrupt type is specifiable by MCA bank. MCA::L2::MCA_STATUS_L2[TCC] is present.			

MSRC000_2025 [L2 IP Identification] (MCA::L2::MCA_IPID_L2)

Reset: 0002_00B0_0000_0000h.

The MCA::L2::MCA_IPID_L2 register is used by software to determine what IP type and revision is associated with the MCA bank.

lthree[1:0]_core[3:0]_inst2_aliasMSR; MSRC000_2025

DIUS	Description

63:48 **McaType**. Read-only. Reset: 0002h. The McaType of the MCA bank within this IP.

47:44 Reserved.

43:32 **HardwareID**. Read-only. Reset: 0B0h. The Hardware ID of the IP associated with this MCA bank.

31:0 **InstanceId**. Read-write. Reset: 0000_0000h. The instance ID of this IP. This is initialized to a unique ID per instance of this register.

MSRC000_2026 [L2 Machine Check Syndrome Thread 0] (MCA::L2::MCA_SYND_L2)

Read-write, Volatile. Reset: Cold,0000_0000_0000_0000h.

Logs physical location information associated with error in MCA::L2::MCA_STATUS_L2 Thread 0

_lthree[1:0]_core[3:0]_thread[1:0]_inst2_aliasMSR; MSRC000_2026

Bits Description

63:49 Reserved.

48:32 **Syndrome**. Read-write, Volatile. Reset: Cold,0_0000h. Contains the syndrome, if any, associated with the error logged in MCA::L2::MCA_STATUS_L2. The low-order bit of the syndrome is stored in bit 0, and the syndrome has a length specified by MCA::L2::MCA_SYND_L2[Length]. The Syndrome field is only valid when MCA::L2::MCA_SYND_L2[Length] is not 0.

31:27 Reserved.

26:24 **ErrorPriority**. Read-write, Volatile. Reset: Cold,0h. Encodes the priority of the error logged in MCA::L2::MCA_SYND_L2. 3'b000 = No error; 3'b001 = Reserved; 3'b010 = Corrected Error; 3'b101 = Deferred Error; 3'b100 = Uncorrected Error; 3'b101 = Fatal Error; all others reserved.

23:18 **Length**. Read-write, Volatile. Reset: Cold,00h. Specifies the length in bits of the syndrome contained in MCA::L2::MCA_SYND_L2[Syndrome]. A value of 0 indicates that there is no valid syndrome in MCA::L2::MCA_SYND_L2. For example, a syndrome length of 9 means that MCA::L2::MCA_SYND_L2[Syndrome] bits [8:0] contains a valid syndrome.

17:0 **ErrorInformation**. Read-write, Volatile. Reset: Cold, 0_0000h. Contains error-specific information about the location of the error. Decoding is available in Table 42 [MCA_SYND_L2 Register].

Table 42: MCA_SYND_L2 Register

Error Type	Bits	Description
MultiHit	[17:8]	Index
	[7:0]	One-hot way vector
Tag	[17:13]	Reserved
	[12:3]	Index
	[2:0]	Way
Data	[17:15]	Reserved
	[14:5]	Index
	[4:3]	Quarter-line
	[2:0]	Way
Hwa	[17:0]	Reserved

MSRC000 2028 [L2 Machine Check Deferred Error Status Thread 0] (MCA::L2::MCA DESTAT L2)

Read-write, Volatile. Reset: Cold,0000_0000_0000_0000h.

Holds status information for the first deferred error seen in this bank.

_lthree[1:0]_core[3:0]_thread[1:0]_inst2_aliasMSR; MSRC000_2028

Bits	Description		
63	Val . Read-write, Volatile. Reset: Cold, 0. 1=A valid error has been detected (whether it is enabled or not).		
62	Overflow . Read-write, Volatile. Reset: Cold, 0. 1=An error was detected while the valid bit (Val) was set; at least		
	one error was not logged. Overflow is set independently of whether the existing error is overwritten. (See the		
	section on overwrite priorities.)		
61:59	Reserved.		
58	AddrV . Read-write, Volatile. Reset: Cold, 0. 1=MCA::L2::MCA_DEADDR_L2 contains address information		
	associated with the error.		
57:54	Reserved.		
53	SyndV . Read-write, Volatile. Reset: Cold, 0. 1=This error logged information in MCA::L2::MCA_SYND_L2. If		
	MCA::L2::MCA_SYND_L2[ErrorPriority] is the same as the priority of the error in		
	MCA::L2::MCA_STATUS_L2, then the information in MCA::L2::MCA_SYND_L2 is associated with the error		
	in MCA::L2::MCA_DESTAT_L2.		
52:45	Reserved.		
44	Deferred . Read-write, Volatile. Reset: Cold, 0. 1=A deferred error was created. A deferred error is the result of an		
	uncorrectable data error which did not immediately cause a processor exception; poison is created and an		
	exception is deferred until the poison data is consumed.		
43:0	Reserved.		

MSRC000 2029 [L2 Deferred Error Address Thread 0] (MCA::L2::MCA DEADDR L2)

WISKC	LUUU_2U29 [L2 Deierred Error Address Tilread v] (MCA::L2::MCA_DEADDR_L2)	
Read-w	vrite,Volatile. Reset: Cold,0000_0000_0000_0000h.	
The Mo	The MCA::L2::MCA_DEADDR_L2 register stores the address associated with the error in	
MCA::	L2::MCA_DESTAT_L2. The register is only meaningful if MCA::L2::MCA_DESTAT_L2[Val]=1 and	
MCA::	L2::MCA_DESTAT_L2[AddrV]=1. The lowest valid bit of the address is defined by	
MCA::	L2::MCA_DEADDR_L2[LSB].	
_lthree[1:	0]_core[3:0]_thread[1:0]_inst2_aliasMSR; MSRC000_2029	
Bits	Description	
63:62	Reserved.	
61:56	LSB . Read-write, Volatile. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in	
	MCA::L2::MCA_DEADDR_L2[ErrorAddr]. A value of 0 indicates that MCA::L2::MCA_DEADDR_L2[55:0]	
	contains a valid byte address. A value of 6 indicates that MCA::L2::MCA_DEADDR_L2[55:6] contains a valid	
	cache line address and that MCA::L2::MCA_DEADDR_L2[5:0] are not part of the address and should be ignored	
	by error handling software. A value of 12 indicates that MCA::L2::MCA_DEADDR_L2[55:12] contain a valid	
	4KB memory page and that MCA::L2::MCA_DEADDR_L2[11:0] should be ignored by error handling software.	
	ErrorAddr . Read-write, Volatile. Reset: Cold,00_0000_0000_0000h. Contains the address, if any, associated with	
	the error logged in MCA::L2::MCA_DESTAT_L2. The lowest-order valid bit of the address is specified in	
	MCA::L2::MCA_DEADDR_L2[LSB].	

MSRC001_0402 [L2 Machine Check Control Mask] (MCA::L2::MCA_CTL_MASK_L2)

Read-	Read-write. Reset: 0000_0000_0000_0000h.	
Inhibit	Inhibit detection of an error source.	
_lthree[1	:0]_core[3:0]_inst2_aliasMSR; MSRC001_0402	
Bits	Description	
63:4	Reserved.	
3	Hwa . Read-write. Reset: 0. Init: BIOS,1. Hardware Assert Error.	
2	Data . Read-write. Reset: 0. L2M Data Array ECC Error.	
1	Tag. Read-write. Reset: 0. L2M Tag or State Array ECC Error.	
0	MultiHit. Read-write. Reset: 0. L2M Tag Multiple-Way-Hit error.	

3.2.5.4 DE

MSR0000_040C...MSRC000_2030 [DE Machine Check Control] (MCA::DE::MCA_CTL_DE)

Read-write. Reset: 0000_0000_0000_0000h.

0=Disables error reporting for the corresponding error. 1=Enables error reporting via machine check exception for the corresponding error. The MCA::DE::MCA_CTL_DE register must be enabled by the corresponding enable bit in Core::X86::Msr::MCG_CTL. Does not affect error detection, correction, or logging.

_lthree[1:0]_core[3:0]_inst3_aliasMSRLEGACY; MSR0000_040C

innec[1.0]_core[5.0]_inst5_unasivi5rtElef1c1; Ni5rt0000_040G		
_lthree[1	_lthree[1:0]_core[3:0]_inst3_aliasMSR; MSRC000_2030	
Bits	Description	
63:9	Reserved.	
8	OCBQ . Read-write. Reset: 0. Micro-op buffer parity error.	
7	UcSeq. Read-write. Reset: 0. Patch RAM sequencer parity error.	
6	UcDat. Read-write. Reset: 0. Patch RAM data parity error.	
5	Faq. Read-write. Reset: 0. Fetch address FIFO parity error.	
4	Idq. Read-write. Reset: 0. Instruction dispatch queue parity error.	
3	UopQ . Read-write. Reset: 0. Micro-op queue parity error.	
2	Ibq . Read-write. Reset: 0. Instruction buffer parity error.	
1	OcDat. Read-write. Reset: 0. Micro-op cache data parity error.	
0	OcTag. Read-write. Reset: 0. Micro-op cache tag parity error.	

MSR0000_040D...MSRC000_2031 [DE Machine Check Status Thread 0] (MCA::DE::MCA_STATUS_DE)

Reset:	Cold,0000_0000_00000_0000h.	
Logs information associated with errors.		
	:0]_core[3:0]_thread[1:0]_inst3_aliasMSRLEGACY; MSR0000_040D	
	1:0]_core[3:0]_thread[1:0]_inst3_aliasMSR; MSRC000_2031	
Bits	Description	
63	Val . Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the register has	
	been read.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
62	Overflow . Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was not	
	logged. Overflow is set independently of whether the existing error is overwritten. See 3.1.3 [Machine Check	
	Errors].	
0.1	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
61	UC. Reset: Cold,0. 1=The error was not corrected by hardware.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
60	En . Reset: Cold,0. 1=MCA error reporting is enabled for this error, as indicated by the corresponding bit in	
	MCA::DE::MCA_CTL_DE. This bit is a copy of bit in MCA::DE::MCA_CTL_DE for this error.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
59	MiscV. Reset: Cold,0. 1=Valid thresholding in MCA::DE::MCA_MISC0_DE.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.	
58	AddrV . Reset: Cold,0. 1=MCA::DE::MCA_ADDR_DE contains address information associated with the error.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.	
57	PCC . Reset: Cold,0. 1=Hardware context held by the processor may have been corrupted. Continued operation of	
	the system may have unpredictable results. The error is not recoverable or survivable, and the system should be	
	reinitialized.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.	
56	ErrCoreIdVal. Reset: Cold,0. 1=The ErrCoreId field is valid.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.	
55	TCC . Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer	
	address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The	
	thread which consumed the error is not restartable and must be terminated. Only meaningful when	
	MCA::DE::MCA_STATUS_DE[PCC]=0.	

	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
54	Reserved.
53	SyndV . Reset: Cold,0. 1=This error logged information in MCA::DE::MCA_SYND_DE. If
	MCA::DE::MCA_SYND_DE[ErrorPriority] is the same as the priority of the error in
	MCA::DE::MCA_STATUS_DE, then the information in MCA::DE::MCA_SYND_DE is associated with the
	error in MCA::DE::MCA_STATUS_DE.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.
52:47	
46	CECC . Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC
	algorithm. UC indicates whether the error was actually corrected by the processor.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.
45	UECC . Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC
	algorithm. UC indicates whether the error was actually corrected by the processor.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.
44	Deferred . Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data
	error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is
	consumed.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
43	Poison . Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.
	Reserved.
37:32	ErrCoreId . Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is
	associated with the error; Otherwise this field is reserved.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.
	Reserved.
21:16	ErrorCodeExt . Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause
	analysis. This field indicates which bit position in MCA::DE::MCA_CTL_DE enables error reporting for the
	logged error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.
15:0	ErrorCode . Reset: Cold,0000h. Error code for this error. See 3.1.3.3 [Error Codes] for details on decoding this
	field.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.

Table 43: MCA_STATUS_DE[ErrorCodeExt] Decode

Error Type	Bits	Description
OcTag	[6:0]	0x0
OcDat	[6:0]	0x1
Ibq	[6:0]	0x2
UopQ	[6:0]	0x3
Idq	[6:0]	0x4
Faq	[6:0]	0x5
UcDat	[6:0]	0x6
UcSeq	[6:0]	0x7
OCBQ	[6:0]	0x8

MSR0000_040E...MSRC000_2032 [DE Machine Check Address Thread 0] (MCA::DE::MCA_ADDR_DE)

Read-write, Volatile. Reset: Cold, 0000_0000_0000_0000h.

MCA::DE::MCA_ADDR_DE stores an address and other information associated with the error in

MCA::DE::MCA_STATUS_DE. The register is only meaningful if MCA::DE::MCA_STATUS_DE[Val]=1 and

MCA:	MCA::DE::MCA_STATUS_DE[AddrV]=1.		
_lthree[1	_lthree[1:0]_core[3:0]_thread[1:0]_inst3_aliasMSRLEGACY; MSR0000_040E		
_lthree[1	1:0]_core[3:0]_thread[1:0]_inst3_aliasMSR; MSRC000_2032		
Bits	Description		
63:62	Reserved.		
61:56	LSB . Read-write, Volatile. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in		
	MCA::DE::MCA_ADDR_DE[ErrorAddr]. A value of 0 indicates that MCA::DE::MCA_ADDR_DE[55:0]		
	contains a valid byte address. A value of 6 indicates that MCA::DE::MCA_ADDR_DE[55:6] contains a valid		
	cache line address and that MCA::DE::MCA_ADDR_DE[5:0] are not part of the address and should be ignored		
	by error handling software. A value of 12 indicates that MCA::DE::MCA_ADDR_DE[55:12] contain a valid 4KB		
	memory page and that MCA::DE::MCA_ADDR_DE[11:0] should be ignored by error handling software.		
55:0	ErrorAddr . Read-write, Volatile. Reset: Cold, 00_0000_0000_0000h. Unless otherwise specified by an error,		
	contains the address associated with the error logged in MCA::DE::MCA_STATUS_DE. For physical addresses,		
	the most significant bit is given by Core::X86::Cpuid::LongModeInfo[PhysAddrSize].		

Table 44: MCA_ADDR_DE Register

Error Type	Bits	Description
OcTag	[55:0]	Reserved
OcDat	[55:0]	Reserved
Ibq	[55:0]	Reserved
UopQ	[55:0]	Reserved
Idq	[55:0]	Reserved
Faq	[55:0]	Reserved
UcDat	[55:0]	Reserved
UcSeq	[55:0]	Reserved
OCBQ	[55:0]	Reserved

MSR0000_040F...MSRC000_2033 [DE Machine Check Miscellaneous 0 Thread 0] (MCA::DE::MCA_MISC0_DE)

(MCA	::DE::MCA_MISC0_DE)		
Log miscellaneous information associated with errors.			
	_lthree[1:0]_core[3:0]_thread[1:0]_inst3_aliasMSRLEGACY; MSR0000_040F		
	:0]_core[3:0]_thread[1:0]_inst3_aliasMSR; MSRC000_2033		
Bits	Description		
63	Valid . Reset: 1. 1=A valid CntP field is present in this register.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.		
62	CntP . Reset: 1. 1=A valid threshold counter is present.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.		
61	Locked . Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not		
	available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.		
60	IntP . Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt		
	generation are not supported.		
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::DE::MCA_MISC0_DE[Locked]) ? Read-write :		
	Read-only.		
59:56	Reserved.		
55:52	LvtOffset . Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the		
	APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see		
	Core::X86::Apic::ExtendedInterruptLvtEntries).		
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::DE::MCA_MISC0_DE[Locked]) ? Read-write :		
	Read-only.		
51	CntEn. Reset: 0. 1=Count thresholding errors.		

	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::DE::MCA_MISC0_DE[Locked]) ? Read-write :
	Read-only.
50:49	ThresholdIntType . Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b
	= No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI
	trigger event. 11b = Reserved.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::DE::MCA_MISC0_DE[Locked]) ? Read-write :
	Read-only.
48	Ovrflw . Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set,
	ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is
	generated.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::DE::MCA_MISC0_DE[Locked]) ? Read-write :
	Read-only.
47:44	Reserved.
43:32	ErrCnt . Reset: Cold,000h. This is written by software to set the starting value of the error counter. This is
	incremented by hardware when errors are logged. When this counter overflows, it stays at FFFh (no rollover). The
	threshold value, written by software, is (FFFh - the desired error count (the number of errors necessary in order
	for an interrupt to be taken)); the desired error count of 0 (a write value of FFFh) is not supported.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::DE::MCA_MISC0_DE[Locked]) ? Read-write :
	Read-only.
31:24	BlkPtr . Read-write. Reset: 01h. 00h=Extended MISC MSR block is not valid. 01h=Extended MSR block is valid.
23:0	Reserved.

MSRC000_2034 [DE Machine Check Configuration] (MCA::DE::MCA_CONFIG_DE)

WIGHT	2000_2004 [DL Machine Check Comigaration] (MC/1DLMC/1_COMTG_DL)		
	0000_0000_0000_0021h.		
Contro	Controls configuration of the associated machine check bank.		
_lthree[1	:0]_core[3:0]_inst3_aliasMSR; MSRC000_2034		
Bits	Description		
63:39	Reserved.		
38:37	00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[DeferredLvtOffset]). 10b = SMI trigger event. 11b = Reserved.		
36:33	Reserved.		
32	McaXEnable . Read-write. Reset: 0. Init: BIOS,1. Check: 1. 1=Software has acknowledged support for the MCAX feature set. 0=Software has not acknowledged support for the MCAX feature set. All uncorrected and fatal errors will cause an ErrorEvent packet to be generated. Deferred error interrupts are configured via Core::X86::Msr::McaIntrCfg.		
31:6	Reserved.		
5	DeferredIntTypeSupported . Read-only. Reset: 1. 1=MCA::DE::MCA_CONFIG_DE[DeferredIntType] controls the type of interrupt generated on a deferred error. Deferred errors are supported in this bank only if MCA::DE::MCA_CONFIG_DE[DeferredErrorLoggingSupported]=1.		
4:3	Reserved.		
2	DeferredErrorLoggingSupported . Read-only. Reset: 0. 1=Deferred errors are supported in this MCA bank, and the LogDeferredInMcaStat field in this register controls the logging behavior of these errors. MCA_DESTAT and MCA_DEADDR are supported in this MCA bank. 0=Deferred errors are not supported in this bank.		
1	Reserved.		
0	McaX . Read-only. Reset: 1. 1=This bank provides Machine Check Architecture Extensions. Up to 4 additional MISC registers (MISC1-MISC4) are supported. MCA::DE::MCA_MISC0_DE[BlkPtr] indicates the presence of the additional MISC registers, but is not used to determine their MSR numbers. Deferred error interrupt type is specifiable by MCA bank. MCA::DE::MCA_STATUS_DE[TCC] is present.		

MSRC000_2035 [DE IP Identification] (MCA::DE::MCA_IPID_DE)

Reset: 0003_00B0_0000_0000h.		
The MCA::DE::MCA_IPID_DE register is used by software to determine what IP type and revision is associated with		
the MCA bank.		
_lthree[1:0]_core[3:0]_inst3_aliasMSR; MSRC000_2035		
Bits Description		
63:48 McaType. Read-only. Reset: 0003h. The McaType of the MCA bank within this IP.		
7:44 Reserved.		
43:32 HardwareID . Read-only. Reset: 0B0h. The Hardware ID of the IP associated with this MCA bank.		
31:0 InstanceId . Read-write. Reset: 0000_0000h. The instance ID of this IP. This is initialized to a unique ID per		
instance of this register		

MSRC000_2036 [DE Machine Check Syndrome Thread 0] (MCA::DE::MCA_SYND_DE) Read-write, Volatile. Reset: Cold, 0000 0000 0000 0000h. Logs physical location information associated with error in MCA::DE::MCA STATUS DE Thread 0 lthree[1:0]_core[3:0]_thread[1:0]_inst3_aliasMSR; MSRC000_2036 Bits Description 63:33 Reserved. **Syndrome**. Read-write, Volatile. Reset: Cold, 0. Contains the syndrome, if any, associated with the error logged in 32 MCA::DE::MCA_STATUS_DE. The low-order bit of the syndrome is stored in bit 0, and the syndrome has a length specified by MCA::DE::MCA SYND DE[Length]. The Syndrome field is only valid when MCA::DE::MCA SYND DE[Length] is not 0. 31:27 Reserved. 26:24 **ErrorPriority**. Read-write, Volatile. Reset: Cold, Oh. Encodes the priority of the error logged in MCA::DE::MCA SYND DE. 3'b000 = No error; 3'b001 = Reserved; 3'b010 = Corrected Error; 3'b011 = Deferred Error; 3'b100 = Uncorrected Error; 3'b101 = Fatal Error; all others reserved. 23:18 **Length.** Read-write, Volatile. Reset: Cold, 00h. Specifies the length in bits of the syndrome contained in MCA::DE::MCA_SYND_DE[Syndrome]. A value of 0 indicates that there is no valid syndrome in MCA::DE::MCA SYND DE. For example, a syndrome length of 9 means that MCA::DE::MCA_SYND_DE[Syndrome] bits [8:0] contains a valid syndrome. 17:0 **ErrorInformation**. Read-write, Volatile. Reset: Cold, 0 0000h. Contains error-specific information about the location of the error. Decoding is available in Table 45 [MCA SYND DE Register].

Table 45: MCA SYND DE Register

Error Type	Bits	Description
OcTag	[17:16]	Reserved
	[15:8]	Index
	[7:0]	Way
OcDat	[17:16]	Reserved
	[15:8]	Index
	[7:0]	Way
Ibq	[17:0]	Reserved
UopQ	[17:0]	Reserved
Idq	[17:0]	Reserved
Faq	[17:0]	Reserved
UcDat	[17:0]	Reserved
UcSeq	[17:0]	Reserved
OCBQ	[17:0]	Reserved

MSRC001 0403 [DE Machine Check Control Mask] (MCA::DE::MCA CTL MASK DE)

Read-write. Reset: 0000_0000_0000_0000h.

Inhibit	detection of an error source.
_lthree[1	:0]_core[3:0]_inst3_aliasMSR; MSRC001_0403
Bits	Description
63:9	Reserved.
8	OCBQ . Read-write. Reset: 0. Micro-op buffer parity error.
7	UcSeq. Read-write. Reset: 0. Patch RAM sequencer parity error.
6	UcDat. Read-write. Reset: 0. Patch RAM data parity error.
5	Faq. Read-write. Reset: 0. Fetch address FIFO parity error.
4	Idq. Read-write. Reset: 0. Instruction dispatch queue parity error.
3	UopQ . Read-write. Reset: 0. Micro-op queue parity error.
2	Ibq . Read-write. Reset: 0. Instruction buffer parity error.
1	OcDat. Read-write. Reset: 0. Micro-op cache data parity error.
0	OcTag. Read-write. Reset: 0. Micro-op cache tag parity error.

3.2.5.5 EX

MSR	0000_0414MSRC000_2050 [EX Machine Check Control] (MCA::EX::MCA_CTL_EX)			
Read-	Read-write. Reset: 0000_0000_0000_0000h.			
0=Dis	ables error reporting for the corresponding error. 1=Enables error reporting via machine check exception for the			
	ponding error. The MCA::EX::MCA_CTL_EX register must be enabled by the corresponding enable bit in			
	X86::Msr::MCG_CTL. Does not affect error detection, correction, or logging.			
	:0]_core[3:0]_inst5_aliasMSRLEGACY; MSR0000_0414			
	:0]_core[3:0]_inst5_aliasMSR; MSRC000_2050			
Bits	Description			
	Reserved.			
10	BBQ . Read-write. Reset: 0. Branch buffer queue parity error.			
9	SQ . Read-write. Reset: 0. Scheduling queue parity error.			
8	STATQ . Read-write. Reset: 0. Retire status queue parity error.			
7	RETDISP . Read-write. Reset: 0. Retire dispatch queue parity error.			
6	CHKPTQ. Read-write. Reset: 0. CHKPTQ. Checkpoint queue parity error.			
5	PLDAL . Read-write. Reset: 0. EX payload parity error.			
4	PLDAG. Read-write. Reset: 0. Address generator payload parity error.			
3	IDRF. Read-write. Reset: 0. Immediate displacement register file parity error.			
2	FRF. Read-write. Reset: 0. Flag register file parity error.			
1	PRF . Read-write. Reset: 0. Physical register file parity error.			
0	WDT. Read-write. Reset: 0. Watchdog Timeout error.			

MSR	0000_0415MSRC000_2051 [EX Machine Check Status Thread 0] (MCA::EX::MCA_STATUS_EX)
Reset:	Cold,0000_0000_00000_0000h.
Logs i	nformation associated with errors.
_lthree[1	l:0]_core[3:0]_thread[1:0]_inst5_aliasMSRLEGACY; MSR0000_0415
_lthree[1	:0]_core[3:0]_thread[1:0]_inst5_aliasMSR; MSRC000_2051
Bits	Description
63	Val . Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the register has
	been read.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.
62	Overflow . Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was not
	logged. Overflow is set independently of whether the existing error is overwritten. See 3.1.3 [Machine Check
	Errors].
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.

61	UC. Reset: Cold,0. 1=The error was not corrected by hardware.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
60	En . Reset: Cold,0. 1=MCA error reporting is enabled for this error, as indicated by the corresponding bit in
	MCA::EX::MCA_CTL_EX. This bit is a copy of bit in MCA::EX::MCA_CTL_EX for this error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
59	MiscV. Reset: Cold,0. 1=Valid thresholding in MCA::EX::MCA_MISC0_EX.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
58	AddrV . Reset: Cold,0. 1=MCA::EX::MCA_ADDR_EX contains address information associated with the error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
57	PCC. Reset: Cold,0. 1=Hardware context held by the processor may have been corrupted. Continued operation of
	the system may have unpredictable results. The error is not recoverable or survivable, and the system should be
	reinitialized.
5 0	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
56	ErrCoreIdVal. Reset: Cold,0. 1=The ErrCoreId field is valid.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
55	TCC . Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer
	address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The
	thread which consumed the error is not restartable and must be terminated. Only meaningful when MCA::EX::MCA_STATUS_EX[PCC]=0.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
54	Reserved.
53	SyndV. Reset: Cold,0. 1=This error logged information in MCA::EX::MCA_SYND_EX. If
33	MCA::EX::MCA_SYND_EX[ErrorPriority] is the same as the priority of the error in
	MCA::EX::MCA_STATUS_EX, then the information in MCA::EX::MCA_SYND_EX is associated with the
	error in MCA::EX::MCA_STATUS_EX.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
52:47	Reserved.
46	CECC . Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC
	algorithm. UC indicates whether the error was actually corrected by the processor.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
45	UECC . Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC
	algorithm. UC indicates whether the error was actually corrected by the processor.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
44	Deferred . Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data
	error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is
	consumed.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
43	Poison . Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data.
40.00	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
	Reserved.
37:32	ErrCoreId . Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is
	associated with the error; Otherwise this field is reserved.
24.22	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
	Reserved.
21:16	ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause
	analysis. This field indicates which bit position in MCA::EX::MCA_CTL_EX enables error reporting for the
	logged error. Access Type: Core:: Y96::Msr:::HWCP[McStatusWrEn] 2 Pead write:: Pead Write 0 only Error on write 1
15.0	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. ErrorCode . Reset: Cold,0000h. Error code for this error. See 3.1.3.3 [Error Codes] for details on decoding this
15:0	field.
	HCIU.

AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.

Table 46: MCA_STATUS_EX[ErrorCodeExt] Decode

Error Type	Bits	Description
WDT	[6:0]	0x0
PRF	[6:0]	0x1
FRF	[6:0]	0x2
IDRF	[6:0]	0x3
PLDAG	[6:0]	0x4
PLDAL	[6:0]	0x5
CHKPTQ	[6:0]	0x6
RETDISP	[6:0]	0x7
STATQ	[6:0]	0x8
SQ	[6:0]	0x9
BBQ	[6:0]	0xa

MSR0000 0416...MSRC000 2052 [EX Machine Check Address Thread 0] (MCA::EX::MCA ADDR EX)

Read-only	Reset.	Cold,0000	0000	0000	0000h
ixcau-om y.	IXCSCI.	Cora.ooo	UUUU	UUUU	oooon.

MCA::EX::MCA_ADDR_EX stores an address and other information associated with the error in

MCA::EX::MCA_STATUS_EX. The register is only meaningful if MCA::EX::MCA_STATUS_EX[Val]=1 and

 $MCA::EX::MCA_STATUS_EX[AddrV] = 1.$

_lthree[1:0]_core[3:0]_thread[1:0]_inst5_aliasMSRLEGACY; MSR0000_0416

lthree[1:0]_core[3:0]_thread[1:0]_inst5_aliasMSR; MSRC000_2052

Bits	Description
63:62	Reserved.

61:56 **LSB**. Read-only. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in MCA::EX::MCA_ADDR_EX[ErrorAddr]. A value of 0 indicates that MCA::EX::MCA_ADDR_EX[55:0] contains a valid byte address. A value of 6 indicates that MCA::EX::MCA_ADDR_EX[55:6] contains a valid cache line address and that MCA::EX::MCA_ADDR_EX[5:0] are not part of the address and should be ignored by error handling software. A value of 12 indicates that MCA::EX::MCA_ADDR_EX[55:12] contain a valid 4KB memory page and that MCA::EX::MCA_ADDR_EX[11:0] should be ignored by error handling software.

55:0 **ErrorAddr**. Read-only. Reset: Cold,00_0000_0000h. Contains the address, if any, associated with the error logged in MCA::EX::MCA_STATUS_EX.

Table 47: MCA ADDR EX Register

Error Type	Bits	Description
WDT	55:49]	Reserved
	[48:0]	RIP of thread triggering the watchdog timeout
PRF	[55:0]	Reserved
FRF	[55:0]	Reserved
IDRF	[55:0]	Reserved
PLDAG	[55:0]	Reserved
PLDAL	[55:0]	Reserved
CHKPTQ	[55:0]	Reserved
RETDISP	[55:0]	Reserved
STATQ	[55:0]	Reserved
SQ	[55:0]	Reserved
BBQ	[55:0]	Reserved

MSR0000_0417...MSRC000_2053 [EX Machine Check Miscellaneous 0 Thread 0] (MCA::EX::MCA_MISC0_EX)

(17102)	EAWCA_WIGGU_EA)			
	iscellaneous information associated with errors.			
	nree[1:0]_core[3:0]_thread[1:0]_inst5_aliasMSRLEGACY; MSR0000_0417			
	:0]_core[3:0]_thread[1:0]_inst5_aliasMSR; MSRC000_2053			
	Description			
63	Valid . Reset: 1. 1=A valid CntP field is present in this register.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.			
62	CntP . Reset: 1. 1=A valid threshold counter is present.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.			
61	Locked . Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not			
	available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.			
60	IntP . Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt			
	generation are not supported.			
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::EX::MCA_MISC0_EX[Locked]) ? Read-write :			
Γ0.Γ6	Read-only. Reserved.			
55:52	LvtOffset . Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see			
	Core::X86::Apic::ExtendedInterruptLvtEntries).			
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::EX::MCA_MISC0_EX[Locked]) ? Read-write :			
	Read-only.			
51	CntEn. Reset: 0. 1=Count thresholding errors.			
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::EX::MCA_MISC0_EX[Locked]) ? Read-write :			
	Read-only.			
50:49	ThresholdIntType . Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b			
	= No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI			
	trigger event. 11b = Reserved.			
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::EX::MCA_MISC0_EX[Locked]) ? Read-write :			
	Read-only.			
48	Ovrflw . Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set,			
	ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is			
	generated.			
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::EX::MCA_MISC0_EX[Locked]) ? Read-write :			
47.44	Read-only.			
47:44	Reserved.			
43:32	ErrCnt. Reset: Cold,000h. This is written by software to set the starting value of the error counter. This is incremented by bardware when errors are logged. When this counter everflows, it stays at EEEh (no rellover). The			
	incremented by hardware when errors are logged. When this counter overflows, it stays at FFFh (no rollover). The threshold value, written by software, is (FFFh - the desired error count (the number of errors necessary in order			
	for an interrupt to be taken)); the desired error count of 0 (a write value of FFFh) is not supported.			
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::EX::MCA_MISC0_EX[Locked]) ? Read-write :			
	Read-only.			
31:24	BlkPtr . Read-write. Reset: 01h. 00h=Extended MISC MSR block is not valid. 01h=Extended MSR block is valid.			
23:0	Reserved.			

MSRC000_2054 [EX Machine Check Configuration] (MCA::EX::MCA_CONFIG_EX)

Reset: 0000_0000_0000_0021h.
Controls configuration of the associated machine check bank.
_lthree[1:0]_core[3:0]_inst5_aliasMSR; MSRC000_2054
Bits Description

63:39	Reserved.
38:37	DeferredIntType . Read-write. Reset: 0h. Specifies the type of interrupt signaled when a deferred error is logged.
	00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[DeferredLvtOffset]). 10b =
	SMI trigger event. 11b = Reserved.
36:33	Reserved.
32	McaXEnable . Read-write. Reset: 0. Init: BIOS,1. Check: 1. 1=Software has acknowledged support for the MCAX feature set. 0=Software has not acknowledged support for the MCAX feature set. All uncorrected and
	fatal errors will cause an ErrorEvent packet to be generated. Deferred error interrupts are configured via
	Core::X86::Msr::McaIntrCfg.
31.6	Reserved.
5	DeferredIntTypeSupported . Read-only. Reset: 1. 1=MCA::EX::MCA_CONFIG_EX[DeferredIntType] controls
5	the type of interrupt generated on a deferred error. Deferred errors are supported in this bank only if
	MCA::EX::MCA_CONFIG_EX[DeferredErrorLoggingSupported]=1.
4:3	Reserved.
2	DeferredErrorLoggingSupported . Read-only. Reset: 0. 1=Deferred errors are supported in this MCA bank, and
	the LogDeferredInMcaStat field in this register controls the logging behavior of these errors. MCA_DESTAT and
	MCA_DEADDR are supported in this MCA bank. 0=Deferred errors are not supported in this bank.
1	Reserved.
0	McaX . Read-only. Reset: 1. 1=This bank provides Machine Check Architecture Extensions. Up to 4 additional
	MISC registers (MISC1-MISC4) are supported. MCA::EX::MCA_MISC0_EX[BlkPtr] indicates the presence of
	the additional MISC registers, but is not used to determine their MSR numbers. Deferred error interrupt type is
	specifiable by MCA bank. MCA::EX::MCA_STATUS_EX[TCC] is present.

MSRC000_2055 [EX IP Identification] (MCA::EX::MCA_IPID_EX)

Reset: 0005_00B0_0000_0000h.			
The MCA::EX::MCA_IPID_EX register is used by software to determine what IP type and revision is associated with			
the MCA bank.			
_lthree[1:0]_core[3:0]_inst5_aliasMSR; MSRC000_2055			
Bits Description			
63:48 McaType. Read-only. Reset: 0005h. The McaType of the MCA bank within this IP.			
47:44 Reserved.			
43:32 HardwareID . Read-only. Reset: 0B0h. The Hardware ID of the IP associated with this MCA bank.			
31:0 InstanceId . Read-write. Reset: 0000_0000h. The instance ID of this IP. This is initialized to a unique ID per			
instance of this register.			

MSR	MSRC000_2056 [EX Machine Check Syndrome Thread 0] (MCA::EX::MCA_SYND_EX)				
Read-v	Read-write, Volatile. Reset: Cold, 0000_0000_0000h.				
Logs p	physical location information associated with error in MCA::EX::MCA_STATUS_EX Thread 0				
_lthree[1	:0]_core[3:0]_thread[1:0]_inst5_aliasMSR; MSRC000_2056				
Bits	Description				
63:33	Reserved.				
32	Syndrome . Read-write, Volatile. Reset: Cold, 0. Contains the syndrome, if any, associated with the error logged in				
	MCA::EX::MCA_STATUS_EX. The low-order bit of the syndrome is stored in bit 0, and the syndrome has a				
	length specified by MCA::EX::MCA_SYND_EX[Length]. The Syndrome field is only valid when				
	MCA::EX::MCA_SYND_EX[Length] is not 0.				
31:27	7 Reserved.				
26:24	ErrorPriority. Read-write, Volatile. Reset: Cold,0h. Encodes the priority of the error logged in				
	MCA::EX::MCA_SYND_EX. 3'b000 = No error; 3'b001 = Reserved; 3'b010 = Corrected Error; 3'b011 =				
	Deferred Error; 3'b100 = Uncorrected Error; 3'b101 = Fatal Error; all others reserved.				
23:18	Length . Read-write, Volatile. Reset: Cold, 00h. Specifies the length in bits of the syndrome contained in				
	MCA::EX::MCA_SYND_EX[Syndrome]. A value of 0 indicates that there is no valid syndrome in				

	MCA::EX::MCA_SYND_EX. For example, a syndrome length of 9 means that			
	MCA::EX::MCA_SYND_EX[Syndrome] bits [8:0] contains a valid syndrome.			
17:0	0 ErrorInformation . Read-write, Volatile. Reset: Cold, 0_0000h. Contains error-specific information about the			
	location of the error. Decoding is available in Table 48 [MCA_SYND_EX Register].	l		

Table 48: MCA_SYND_EX Register

Error Type	Bits	Description
WDT	[17:0]	Reserved
PRF	[17:0]	Reserved
FRF	[17:4]	Reserved
	[3:0]	Reserved
IDRF	[17:6]	Reserved
	[5:4]	Reserved
	[3:0]	Reserved
PLDAG	[17:2]	Reserved
	[1:0]	Reserved
PLDAL	[17:4]	Reserved
	[3:0]	Reserved
CHKPTQ	[17:4]	Reserved
	[3:2]	Reserved
	[1:0]	Reserved
RETDISP	[17:2]	Reserved
	[1:0]	Reserved
STATQ	[17:0]	Reserved
SQ	[17:6]	Reserved
	[5:0]	Reserved
BBQ	[17:6]	Reserved
	[5:0]	Reserved

MSRC001	0405	FX Machine	Check Co	ntrol Mackl	(MCA··FX	··MCA	CTI	MASK EX)
MOVCOOL	V4VJ	LA Macilile	CHECK CO.	HULUI IVLASKI	INICAEA		CIL	MASK EAL

Read-	Read-write. Reset: 0000_0000_0000_0000h.			
Inhibit	Inhibit detection of an error source.			
_lthree[1	:0]_core[3:0]_inst5_aliasMSR; MSRC001_0405			
Bits	Description			
63:11	Reserved.			
10	BBQ . Read-write. Reset: 0. Branch buffer queue parity error.			
9	SQ. Read-write. Reset: 0. Scheduling queue parity error.			
8	STATQ. Read-write. Reset: 0. Retire status queue parity error.			
7	RETDISP . Read-write. Reset: 0. Retire dispatch queue parity error.			
6	CHKPTQ. Read-write. Reset: 0. CHKPTQ. Checkpoint queue parity error.			
5	PLDAL. Read-write. Reset: 0. EX payload parity error.			
4	PLDAG. Read-write. Reset: 0. Address generator payload parity error.			
3	IDRF. Read-write. Reset: 0. Immediate displacement register file parity error.			
2	FRF . Read-write. Reset: 0. Flag register file parity error.			
1	PRF . Read-write. Reset: 0. Physical register file parity error.			
0	WDT. Read-write. Reset: 0. Watchdog Timeout error.			

MSR0000_0418...MSRC000_2060 [FP Machine Check Control] (MCA::FP::MCA_CTL_FP)

Read-write. Reset: 0000_0000_0000_0000h.

0=Disables error reporting for the corresponding error. 1=Enables error reporting via machine check exception for the corresponding error. The MCA::FP::MCA_CTL_FP register must be enabled by the corresponding enable bit in Core::X86::Msr::MCG_CTL. Does not affect error detection, correction, or logging.

_lthree[1:0]_core[3:0]_inst6_aliasMSRLEGACY; MSR0000_0418

_lthree[1	ee[1:0]_core[3:0]_inst6_aliasMSR; MSRC000_2060		
Bits	Description		
63:7	Reserved.		
6	HWA . Read-write. Reset: 0. Hardware assertion.		
5	SRF . Read-write. Reset: 0. Status register file (SRF) parity error.		
4	RQ . Read-write. Reset: 0. Retire queue (RQ) parity error.		
3	NSQ. Read-write. Reset: 0. NSQ parity error.		
2	SCH. Read-write. Reset: 0. Schedule queue parity error.		
1	FL . Read-write. Reset: 0. Freelist (FL) parity error.		
0	PRF . Read-write. Reset: 0. Physical register file (PRF) parity error.		

MSR0000_0419...MSRC000_2061 [FP Machine Check Status Thread 0] (MCA::FP::MCA_STATUS_FP)

WISIN	0000_0410MOX-C000_2001 [F1 Machine Check Status Infeat 0] (MCAF1MCA_51A1C5_F1)				
Reset:	Reset: Cold,0000_0000_0000_0000h.				
Logs i	Logs information associated with errors.				
	1:0]_core[3:0]_thread[1:0]_inst6_aliasMSRLEGACY; MSR0000_0419				
	1:0]_core[3:0]_thread[1:0]_inst6_aliasMSR; MSRC000_2061				
	Description				
63	Val . Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the register has				
	been read.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.				
62	Overflow . Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was not				
	logged. Overflow is set independently of whether the existing error is overwritten. See 3.1.3 [Machine Check				
	Errors].				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.				
61	UC. Reset: Cold,0. 1=The error was not corrected by hardware.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.				
60	En . Reset: Cold,0. 1=MCA error reporting is enabled for this error, as indicated by the corresponding bit in				
	MCA::FP::MCA_CTL_FP. This bit is a copy of bit in MCA::FP::MCA_CTL_FP for this error.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.				
59	MiscV. Reset: Cold,0. 1=Valid thresholding in MCA::FP::MCA_MISC0_FP.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.				
58	AddrV . Reset: Cold,0. 1=MCA::FP::MCA_ADDR_FP contains address information associated with the error.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.				
57	PCC . Reset: Cold,0. 1=Hardware context held by the processor may have been corrupted. Continued operation of				
	the system may have unpredictable results. The error is not recoverable or survivable, and the system should be				
	reinitialized.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.				
56	ErrCoreIdVal. Reset: Cold,0. 1=The ErrCoreId field is valid.				
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.				
55	TCC . Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer				
	address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The				
	thread which consumed the error is not restartable and must be terminated. Only meaningful when				
	MCA::FP::MCA_STATUS_FP[PCC]=0.				

	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
54	Reserved.
53	SyndV . Reset: Cold,0. 1=This error logged information in MCA::FP::MCA_SYND_FP. If MCA::FP::MCA_SYND_FP[ErrorPriority] is the same as the priority of the error in MCA::FP::MCA_STATUS_FP, then the information in MCA::FP::MCA_SYND_FP is associated with the error in MCA::FP::MCA_STATUS_FP.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
52:47	Reserved.
46	CECC . Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
45	UECC . Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC algorithm. UC indicates whether the error was actually corrected by the processor.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
44	Deferred . Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is consumed.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
43	Poison . Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
42:38	Reserved.
37:32	ErrCoreId . Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is associated with the error; Otherwise this field is reserved.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
	Reserved.
21:16	ErrorCodeExt . Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause analysis. This field indicates which bit position in MCA::FP::MCA_CTL_FP enables error reporting for the logged error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
15:0	ErrorCode . Reset: Cold,0000h. Error code for this error. See 3.1.3.3 [Error Codes] for details on decoding this field.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.

Table 49: MCA_STATUS_FP[ErrorCodeExt] Decode

Error Type	Bits	Description
PRF	[6:0]	0x0
FL	[6:0]	0x1
SCH	[6:0]	0x2
NSQ	[6:0]	0x3
RQ	[6:0]	0x4
SRF	[6:0]	0x5
HWA	[6:0]	0x6

MSR0000 041A...MSRC000 2062 [FP Machine Check Address Thread 0] (MCA::FP::MCA ADDR FP)

M3K0000_041AM3KC000_2002 [FF Machine Check Address Thread 0] (MCAFFMCA_ADDK_FF)
Read-only. Reset: Cold,0000_0000_0000_0000h.
MCA::FP::MCA_ADDR_FP stores an address and other information associated with the error in
MCA::FP::MCA_STATUS_FP. The register is only meaningful if MCA::FP::MCA_STATUS_FP[Val]=1 and
MCA::FP::MCA_STATUS_FP[AddrV]=1.
_lthree[1:0]_core[3:0]_thread[1:0]_inst6_aliasMSRLEGACY; MSR0000_041A
hthree[1:0] core[3:0] thread[1:0] inst6 aliasMSR: MSRC000 2062

Bits	Description
63:62	Reserved.
61:56	LSB . Read-only. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in
	MCA::FP::MCA_ADDR_FP[ErrorAddr]. A value of 0 indicates that MCA::FP::MCA_ADDR_FP[55:0] contains
	a valid byte address. A value of 6 indicates that MCA::FP::MCA_ADDR_FP[55:6] contains a valid cache line
	address and that MCA::FP::MCA_ADDR_FP[5:0] are not part of the address and should be ignored by error
	handling software. A value of 12 indicates that MCA::FP::MCA_ADDR_FP[55:12] contain a valid 4KB memory
	page and that MCA::FP::MCA_ADDR_FP[11:0] should be ignored by error handling software.
55:0	ErrorAddr . Read-only. Reset: Cold,00_0000_0000_0000h. Contains the address, if any, associated with the error
	logged in MCA::FP::MCA_STATUS_FP.

Table 50: MCA_ADDR_FP Register

Error Type	Bits	Description
PRF	[55:0	Reserved
FL	[55:0	Reserved
SCH	[55:0	Reserved
NSQ	[55:0	Reserved
RQ	[55:0	Reserved
SRF	[55:0	Reserved
HWA	[55:0	Reserved

WISIX	out_041DM3RG000_2005 [FF Machine Check Miscenaneous of Thread of (MCAFFMCA_MISCO_FF)		
Log miscellaneous information associated with errors.			
	_lthree[1:0]_core[3:0]_thread[1:0]_inst6_aliasMSRLEGACY; MSR0000_041B		
	:0]_core[3:0]_thread[1:0]_inst6_aliasMSR; MSRC000_2063		
Bits	Description		
63	Valid . Reset: 1. 1=A valid CntP field is present in this register.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.		
62	62 CntP . Reset: 1. 1=A valid threshold counter is present.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.		
61	Locked . Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not		
	available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.		
60	IntP . Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt		
	generation are not supported.		
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::FP::MCA_MISC0_FP[Locked]) ? Read-write :		
	Read-only.		
59:56	Reserved.		
55:52	LvtOffset . Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the		
	APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see		
	Core::X86::Apic::ExtendedInterruptLvtEntries).		
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::FP::MCA_MISC0_FP[Locked]) ? Read-write :		
	Read-only.		
51	CntEn. Reset: 0. 1=Count thresholding errors.		
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::FP::MCA_MISC0_FP[Locked]) ? Read-write :		
	Read-only.		
50:49	ThresholdIntType . Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b		
	= No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI		
	trigger event. 11b = Reserved.		
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::FP::MCA_MISC0_FP[Locked]) ? Read-write :		

	Read-only.
48	Ovrflw. Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set, ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is generated. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::FP::MCA_MISC0_FP[Locked]) ? Read-write :
	Read-only.
47:44	Reserved.
43:32	ErrCnt . Reset: Cold,000h. This is written by software to set the starting value of the error counter. This is incremented by hardware when errors are logged. When this counter overflows, it stays at FFFh (no rollover). The threshold value, written by software, is (FFFh - the desired error count (the number of errors necessary in order for an interrupt to be taken)); the desired error count of 0 (a write value of FFFh) is not supported. AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::FP::MCA_MISCO_FP[Locked]) ? Read-write : Read-only.
31:24	BlkPtr . Read-write. Reset: 01h. 00h=Extended MISC MSR block is not valid. 01h=Extended MSR block is valid.
23:0	Reserved.

MSRC000 2064 [FP Machine Check Configuration] (MCA::FP::MCA CONFIG FP)

MSRC000_2004 [FP Machine Check Configuration] (MCA::FP::MCA_CONFIG_FP)			
Reset: 0000_0000_0000_0021h.			
	Controls configuration of the associated machine check bank.		
	_lthree[1:0]_core[3:0]_inst6_aliasMSR; MSRC000_2064		
	Description		
63:39	Reserved.		
38:37	DeferredIntType . Read-write. Reset: 0h. Specifies the type of interrupt signaled when a deferred error is logged. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[DeferredLvtOffset]). 10b = SMI trigger event. 11b = Reserved.		
36:33	Reserved.		
32	McaXEnable . Read-write. Reset: 0. Init: BIOS,1. Check: 1. 1=Software has acknowledged support for the MCAX feature set. 0=Software has not acknowledged support for the MCAX feature set. All uncorrected and fatal errors will cause an ErrorEvent packet to be generated. Deferred error interrupts are configured via Core::X86::Msr::McaIntrCfg.		
31:6	Reserved.		
5	DeferredIntTypeSupported . Read-only. Reset: 1. 1=MCA::FP::MCA_CONFIG_FP[DeferredIntType] controls the type of interrupt generated on a deferred error. Deferred errors are supported in this bank only if MCA::FP::MCA_CONFIG_FP[DeferredErrorLoggingSupported]=1.		
4:3	Reserved.		
2	DeferredErrorLoggingSupported . Read-only. Reset: 0. 1=Deferred errors are supported in this MCA bank, and the LogDeferredInMcaStat field in this register controls the logging behavior of these errors. MCA_DESTAT and MCA_DEADDR are supported in this MCA bank. 0=Deferred errors are not supported in this bank.		
1	Reserved.		
0	McaX . Read-only. Reset: 1. 1=This bank provides Machine Check Architecture Extensions. Up to 4 additional MISC registers (MISC1-MISC4) are supported. MCA::FP::MCA_MISC0_FP[BlkPtr] indicates the presence of the additional MISC registers, but is not used to determine their MSR numbers. Deferred error interrupt type is specifiable by MCA bank. MCA::FP::MCA_STATUS_FP[TCC] is present.		

MSRC000 2065 [FP IP Identification] (MCA::FP::MCA IPID FP)

MSRC000_2005 [FP IP Identification] (MCA::FP::MCA_IPID_FP)		
Reset: 0006_00B0_0000_0000h.		
The MCA::FP::MCA_IPID_FP register is used by software to determine what IP type and revision is associated with the		
MCA bank.		
_lthree[1:0]_core[3:0]_inst6_aliasMSR; MSRC000_2065		
Bits Description		
63:48 McaType . Read-only. Reset: 0006h. The McaType of the MCA bank within this IP.		

47:44	Reserved.
43:32	HardwareID . Read-only. Reset: 0B0h. The Hardware ID of the IP associated with this MCA bank.
31:0	InstanceId . Read-write. Reset: 0000_0000h. The instance ID of this IP. This is initialized to a unique ID per
	instance of this register.

MSRC000_2066 [FP Machine Check Syndrome Thread 0] (MCA::FP::MCA_SYND_FP)

_	- · · · · · · · · · · · · · · · · · · ·		
Read-write, Volatile. Reset: Cold, 0000_0000_0000_0000h.			
Logs physical location information associated with error in MCA::FP::MCA_STATUS_FP Thread 0			
_lthree[1	1:0]_core[3:0]_thread[1:0]_inst6_aliasMSR; MSRC000_2066		
Bits	Description		
63:33	Reserved.		
32	32 Syndrome . Read-write, Volatile. Reset: Cold, 0. Contains the syndrome, if any, associated with the error logged in		
	MCA::FP::MCA_STATUS_FP. The low-order bit of the syndrome is stored in bit 0, and the syndrome has a		
	length specified by MCA::FP::MCA_SYND_FP[Length]. The Syndrome field is only valid when		
	MCA::FP::MCA_SYND_FP[Length] is not 0.		
31:27	Reserved.		
26:24	ErrorPriority. Read-write, Volatile. Reset: Cold,0h. Encodes the priority of the error logged in		
	MCA::FP::MCA_SYND_FP. 3'b000 = No error; 3'b001 = Reserved; 3'b010 = Corrected Error; 3'b011 = Deferred		
	Error; 3'b100 = Uncorrected Error; 3'b101 = Fatal Error; all others reserved.		
23:18	Length. Read-write, Volatile. Reset: Cold, 00h. Specifies the length in bits of the syndrome contained in		
	MCA::FP::MCA_SYND_FP[Syndrome]. A value of 0 indicates that there is no valid syndrome in		
	MCA::FP::MCA_SYND_FP. For example, a syndrome length of 9 means that		
	MCA::FP::MCA_SYND_FP[Syndrome] bits [8:0] contains a valid syndrome.		
17:0	ErrorInformation . Read-write, Volatile. Reset: Cold, 0_0000h. Contains error-specific information about the		
	location of the error. Decoding is available in Table 51 [MCA_SYND_FP Register].		

Table 51: MCA_SYND_FP Register

Error Type	Bits	Description
PRF	[17:0]	Reserved
FL	[17:0]	Reserved
SCH	[17:0]	Reserved
NSQ	[17:0]	Reserved
RQ	[17:0]	Reserved
SRF	[17:0]	Reserved
HWA	[17:0]	Reserved

MSRC001_0406 [FP Machine Check Control Mask] (MCA::FP::MCA_CTL_MASK_FP)

Read-write. Reset: 0000_0000_0000_0000h.			
Inhibit	Inhibit detection of an error source.		
_lthree[1	_lthree[1:0]_core[3:0]_inst6_aliasMSR; MSRC001_0406		
Bits	Bits Description		
63:7	Reserved.		
6	HWA . Read-write. Reset: 0. Init: BIOS,1. Hardware assertion.		
5	SRF . Read-write. Reset: 0. Status register file (SRF) parity error.		
4	RQ . Read-write. Reset: 0. Retire queue (RQ) parity error.		
3	NSQ. Read-write. Reset: 0. NSQ parity error.		
2	SCH . Read-write. Reset: 0. Schedule queue parity error.		
1	FL . Read-write. Reset: 0. Freelist (FL) parity error.		
0	PRF . Read-write. Reset: 0. Physical register file (PRF) parity error.		

3.2.5.7 L3 Cache

MSR0000_041CMSRC000_20E0 [L3 Machine Check Control] (MCA::L3::MCA_CTL_L3)		
Read-write. Reset: 0000_0000_0000_0000h.		
0=Disables error reporting for the corresponding error. 1=Enables error reporting via machine check exception for the		
corresponding error. The MCA::L3::MCA_CTL_L3 register must be enabled by the corresponding enable bit in		
Core::X86::Msr::MCG_CTL. Does not affect error detection, correction, or logging.		
_ccx0_inst7_aliasMSRLEGACY; MSR0000_041C		
_ccx0_inst8_aliasMSRLEGACY; MSR0000_0420		
_ccx0_inst9_aliasMSRLEGACY; MSR0000_0424		
_ccx0_inst10_aliasMSRLEGACY; MSR0000_0428		
_ccx1_inst7_aliasMSRLEGACY; MSR0000_042C		
_ccx1_inst8_aliasMSRLEGACY; MSR0000_0430 ccx1_inst9_aliasMSRLEGACY; MSR0000_0434		
_ccx1_inst0_aliasMSRLEGACY; MSR0000_0438		
_ccx0_inst7_aliasMSR; MSRC000_2070		
ccx0_inst8_aliasMSR; MSRC000_2080		
_ccx0_inst9_aliasMSR; MSRC000_2090		
_ccx0_inst10_aliasMSR; MSRC000_20A0		
_ccx1_inst7_aliasMSR; MSRC000_20B0		
_ccx1_inst8_aliasMSR; MSRC000_20C0		
_ccx1_inst9_aliasMSR; MSRC000_20D0 _ccx1_inst10_aliasMSR; MSRC000_20E0		
Bits Description		
63:8 Reserved.		
7 Hwa . Read-write. Reset: 0. L3 Hardware Assertion.		
6 XiVictimQueue . Read-write. Reset: 0. L3 Victim Queue Parity Error.		
5 SdpParity . Read-write. Reset: 0. SDP Parity Error from XI.		
4 DataArray. Read-write. Reset: 0. L3M Data ECC Error.		
3 MultiHitTag . Read-write. Reset: 0. L3M Tag Multi-way-hit Error.		
2 Tag . Read-write. Reset: 0. L3M Tag ECC Error.		
1 MultiHitShadowTag. Read-write. Reset: 0. Shadow Tag Macro Multi-way-hit Error.		
0 ShadowTag. Read-write. Reset: 0. Shadow Tag Macro ECC Error.		
MSR0000_041DMSRC000_20E1 [L3 Machine Check Status] (MCA::L3::MCA_STATUS_L3)		
TOTOWOOL V-1DMOROVOLZUET [ED MACHINE CHECK Status] (MOAEJMOA_STATUS_EJ)		

Res	et: Cold,0000_0000_0000_0000h.
Log	s information associated with errors.
_ccx(_inst7_aliasMSRLEGACY; MSR0000_041D
_ccx(_inst8_aliasMSRLEGACY; MSR0000_0421
_	_inst9_aliasMSRLEGACY; MSR0000_0425
_ccx(_inst10_aliasMSRLEGACY; MSR0000_0429
_ccx1	_inst7_aliasMSRLEGACY; MSR0000_042D
	_inst8_aliasMSRLEGACY; MSR0000_0431
	_inst9_aliasMSRLEGACY; MSR0000_0435
	_inst10_aliasMSRLEGACY; MSR0000_0439
	_inst7_aliasMSR; MSRC000_2071
	_inst8_aliasMSR; MSRC000_2081
	_inst9_aliasMSR; MSRC000_2091
	_inst10_aliasMSR; MSRC000_20A1
	_inst7_aliasMSR; MSRC000_20B1
	_inst8_aliasMSR; MSRC000_20C1
	_inst9_aliasMSR; MSRC000_20D1
_	_inst10_aliasMSR; MSRC000_20E1
Bit	S Description
63	Val . Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the register has
	been read.
Bit 63	Val . Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the register has

AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.

62	Overflow . Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was not
	logged. Overflow is set independently of whether the existing error is overwritten. See 3.1.3 [Machine Check
	Errors].
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
61	UC . Reset: Cold,0. 1=The error was not corrected by hardware.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
60	En . Reset: Cold,0. 1=MCA error reporting is enabled for this error, as indicated by the corresponding bit in
	MCA::L3::MCA_CTL_L3. This bit is a copy of bit in MCA::L3::MCA_CTL_L3 for this error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
59	MiscV. Reset: Cold,0. 1=Valid thresholding in MCA::L3::MCA_MISC0_L3.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
58	AddrV . Reset: Cold,0. 1=MCA::L3::MCA_ADDR_L3 contains address information associated with the error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
57	PCC . Reset: Cold,0. 1=Hardware context held by the processor may have been corrupted. Continued operation of
	the system may have unpredictable results. The error is not recoverable or survivable, and the system should be
	reinitialized.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
56	ErrCoreIdVal. Reset: Cold,0. 1=The ErrCoreId field is valid.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
55	TCC . Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer
	address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The
	thread which consumed the error is not restartable and must be terminated. Only meaningful when
	MCA::L3::MCA_STATUS_L3[PCC]=0.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
54	Reserved.
53	SyndV . Reset: Cold,0. 1=This error logged information in MCA::L3::MCA_SYND_L3. If
	MCA::L3::MCA_SYND_L3[ErrorPriority] is the same as the priority of the error in
	MCA::L3::MCA_STATUS_L3, then the information in MCA::L3::MCA_SYND_L3 is associated with the error
	in MCA::L3::MCA_STATUS_L3.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
52:47	Reserved.
46	CECC . Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC
	algorithm. UC indicates whether the error was actually corrected by the processor.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
45	UECC . Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC
	algorithm. UC indicates whether the error was actually corrected by the processor.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
44	Deferred . Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data
	error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is
	consumed.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
43	Poison . Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
42:38	Reserved.
	ErrCoreId . Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is
	associated with the error; Otherwise this field is reserved.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
31:22	Reserved.
	ErrorCodeExt . Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause
	analysis. This field indicates which bit position in MCA::L3::MCA_CTL_L3 enables error reporting for the
	The state of the s

	logged error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
15:0	ErrorCode . Reset: Cold,0000h. Error code for this error. See 3.1.3.3 [Error Codes] for details on decoding this field.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.

Table 52: MCA_STATUS_L3[ErrorCodeExt] Decode

Error Type	Bits	Description
ShadowTag	[6:0]	0x0
MultiHitShadowTag	[6:0]	0x1
Tag	[6:0]	0x2
MultiHitTag	[6:0]	0x3
DataArray	[6:0]	0x4
SdpParity	[6:0]	0x5
XiVictimQueue	[6:0]	0x6
Hwa	[6:0]	0x7

MSR0000_041EMSRC000_20E2 [L3 Machine Check Address] (MCA::L3::MCA_ADDR_L3)			
Read-write, Volatile. Reset: Cold,0000_0000_00000h.			
MCA::L3::MCA_ADDR_L3 stores an address and other information associated with the error in			
MCA::L3::MCA_STATUS_L3. The register is only meaningful if MCA::L3::MCA_STATUS_L3[Val]=1 and			
MCA::L3::MCA_STATUS_L3[AddrV]=1.			
_ccx0_inst7_aliasMSRLEGACY; MSR0000_041E			
_ccx0_inst8_aliasMSRLEGACY; MSR0000_0422			
_ccx0_inst9_aliasMSRLEGACY; MSR0000_0426			
_ccx0_inst10_aliasMSRLEGACY; MSR0000_042A			
_ccx1_inst7_aliasMSRLEGACY; MSR0000_042E			
_ccx1_inst8_aliasMSRLEGACY; MSR0000_0432			
_ccx1_inst9_aliasMSRLEGACY; MSR0000_0436			
_ccx1_inst10_aliasMSRLEGACY; MSR0000_043A			
_ccx0_inst7_aliasMSR; MSRC000_2072			
_ccx0_inst8_aliasMSR; MSRC000_2082			
_ccx0_inst9_aliasMSR; MSRC000_2092			
_ccx0_inst10_aliasMSR; MSRC000_20A2			
_ccx1_inst7_aliasMSR; MSRC000_20B2			
_ccx1_inst8_aliasMSR; MSRC000_20C2			
_ccx1_inst9_aliasMSR; MSRC000_20D2			
_ccx1_inst10_aliasMSR; MSRC000_20E2			
Bits Description			
63:62 Reserved.			
61:56 LSB . Read-write, Volatile. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in			
MCA::L3::MCA_ADDR_L3[ErrorAddr]. A value of 0 indicates that MCA::L3::MCA_ADDR_L3[55:0] contains			
a valid byte address. A value of 6 indicates that MCA::L3::MCA_ADDR_L3[55:6] contains a valid cache line			
address and that MCA::L3::MCA_ADDR_L3[5:0] are not part of the address and should be ignored by error			
handling software. A value of 12 indicates that MCA::L3::MCA_ADDR_L3[55:12] contain a valid 4KB memory			
page and that MCA::L3::MCA_ADDR_L3[11:0] should be ignored by error handling software.			
55:0 ErrorAddr . Read-write, Volatile. Reset: Cold, 00_0000_0000h. Unless otherwise specified by an error,			
contains the address associated with the error logged in MCA::L3::MCA_STATUS_L3. For physical addresses,			
the most significant bit is given by Core::X86::Cpuid::LongModeInfo[PhysAddrSize].			
and most organization of the given of coremitoring modelino[1 myortaaronic].			

Table 53: MCA_ADDR_L3 Register

Error Type	Bits	Description
ShadowTag	[55:16]	Reserved

	[15:0]	16'b{8'b{Index}, 2'b{Slice}, 6'b{0}}
MultiHitShadowTag	[55:16]	Reserved
	[15:0]	16'b{8'b{Index}, 2'b{Slice}, 6'b{0}}
Tag	[55:19]	Reserved
	[18:0]	19'b{1'b{Bank[3]}, 7'b{Index}, 3'b{Bank[2:0]}, 2'b{slice}, 6'b{0}}
MultiHitTag	[55:19]	Reserved
	[18:0]	19'b{1'b{Bank[3]}, 7'b{Index}, 3'b{Bank[2:0]}, 2'b{slice},
		6'b{0}}
DataArray	[55:48]	Reserved
	[47:0]	Physical Address
SdpParity	[55:48]	Reserved
	[47:0]	Physical Address
XiVictimQueue	[55:48]	Reserved
	[47:0]	Physical Address
Hwa	[55:34]	Reserved
	[33:0]	Reserved

Log miscellaneous information associated with errors. _ccx0_inst7_aliasMSRLEGACY; MSR0000_041F _ccx0_inst8_aliasMSRLEGACY; MSR0000_0423 _ccx0_inst9_aliasMSRLEGACY; MSR0000_0427 _ccx0_inst10_aliasMSRLEGACY; MSR0000_042B _ccx1_inst7_aliasMSRLEGACY; MSR0000_0433 _ccx1_inst8_aliasMSRLEGACY; MSR0000_0437 _ccx1_inst9_aliasMSRLEGACY; MSR0000_0438 _ccx0_inst7_aliasMSR; MSRC000_2073 _ccx0_inst8_aliasMSR; MSRC000_2083 _ccx0_inst9_aliasMSR; MSRC000_2093 _ccx0_inst10_aliasMSR; MSRC000_2083 _ccx1_inst7_aliasMSR; MSRC000_2083 _ccx1_inst7_aliasMSR; MSRC000_2083 _ccx1_inst7_aliasMSR; MSRC000_2083 _ccx1_inst8_aliasMSR; MSRC000_2083 _ccx1_inst8_aliasMSR; MSRC000_2083 _ccx1_inst8_aliasMSR; MSRC000_2083 _ccx1_inst8_aliasMSR; MSRC000_20C3

MSR0000_041F...MSRC000_20E3 [L3 Machine Check Miscellaneous 0] (MCA::L3::MCA_MISC0_L3)

_ccx1_iı	_ccx1_inst9_aliasMSR; MSRC000_20D3			
_ccx1_iı	_ccx1_inst10_aliasMSR; MSRC000_20E3			
Bits	Description			
63	Valid . Reset: 1. 1=A valid CntP field is present in this register.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.			
62	CntP . Reset: 1. 1=A valid threshold counter is present.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.			
61	Locked . Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not			
	available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI.			
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.			
60	IntP . Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt			
	generation are not supported.			
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L3::MCA_MISC0_L3[Locked]) ? Read-write :			
	Read-only.			
59:56	Reserved.			
55:52	LvtOffset . Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the			

AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] | !MCA::L3::MCA_MISC0_L3[Locked]) ? Read-write :

APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see

Core::X86::Apic::ExtendedInterruptLvtEntries).

	Read-only.
51	CntEn. Reset: 0. 1=Count thresholding errors.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L3::MCA_MISC0_L3[Locked]) ? Read-write :
	Read-only.
50:49	ThresholdIntType . Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b
	= No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI
	trigger event. 11b = Reserved.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L3::MCA_MISC0_L3[Locked]) ? Read-write :
	Read-only.
48	Ovrflw . Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set,
	ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is
	generated.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L3::MCA_MISC0_L3[Locked]) ? Read-write :
	Read-only.
47:44	Reserved.
43:32	ErrCnt . Reset: Cold,000h. This is written by software to set the starting value of the error counter. This is
	incremented by hardware when errors are logged. When this counter overflows, it stays at FFFh (no rollover). The
	threshold value, written by software, is (FFFh - the desired error count (the number of errors necessary in order
	for an interrupt to be taken)); the desired error count of 0 (a write value of FFFh) is not supported.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::L3::MCA_MISC0_L3[Locked]) ? Read-write :
	Read-only.
31:24	BlkPtr . Read-write. Reset: 01h. 00h=Extended MISC MSR block is not valid. 01h=Extended MSR block is valid.
23:0	Reserved.

MSRC000_20[7...E]4 [L3 Machine Check Configuration] (MCA::L3::MCA_CONFIG_L3)

111011	2000_20[/2]4 [25 Muchine Check Comiguration] (Mc/25.Michine)			
Reset:	0000_0000_0000_0025h.			
Contro	rols configuration of the associated machine check bank.			
	inst7_aliasMSR; MSRC000_2074			
	inst8_aliasMSR; MSRC000_2084			
	nst9_aliasMSR; MSRC000_2094			
	nst10_aliasMSR; MSRC000_20A4			
	ast7_aliasMSR; MSRC000_20B4			
	nst8_aliasMSR; MSRC000_20C4			
	nst9_aliasMSR; MSRC000_20D4 nst10_aliasMSR; MSRC000_20E4			
	Description			
	Reserved.			
	DeferredIntType . Read-write. Reset: 0h. Specifies the type of interrupt signaled when a deferred error is logged.			
30.37				
	00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[DeferredLvtOffset]). 10b =			
	SMI trigger event. 11b = Reserved.			
36:35				
34	LogDeferredInMcaStat . Read-write. Reset: 0. Init: BIOS,1. 1=Log deferred errors in			
	MCA::L3::MCA_STATUS_L3 and MCA::L3::MCA_ADDR_L3 in addition to MCA::L3::MCA_DESTAT_L3			
	and MCA::L3::MCA_DEADDR_L3. 0=Only log deferred errors in MCA::L3::MCA_DESTAT_L3 and			
	MCA::L3::MCA_DEADDR_L3. This bit does not affect logging of deferred errors in			
	MCA::L3::MCA_SYND_L3, MCA::L3::MCA_MISC0_L3.			
33	Reserved.			
32	McaXEnable . Read-write. Reset: 0. Init: BIOS,1. Check: 1. 1=Software has acknowledged support for the			
	MCAX feature set. 0=Software has not acknowledged support for the MCAX feature set. All uncorrected and			
	fatal errors will cause an ErrorEvent packet to be generated. Deferred error interrupts are configured via			
	Core::X86::Msr::McaIntrCfg.			
31:6	Reserved.			
	!			

5	DeferredIntTypeSupported . Read-only. Reset: 1. 1=MCA::L3::MCA_CONFIG_L3[DeferredIntType] controls				
	the type of interrupt generated on a deferred error. Deferred errors are supported in this bank only if				
	MCA::L3::MCA_CONFIG_L3[DeferredErrorLoggingSupported]=1.				
4:3	Reserved.				
2	DeferredErrorLoggingSupported . Read-only. Reset: 1. 1=Deferred errors are supported in this MCA bank, and				
	MCA::L3::MCA_CONFIG_L3[LogDeferredInMcaStat] controls the logging behavior of these errors.				
	MCA::L3::MCA_DESTAT_L3 and MCA::L3::MCA_DEADDR_L3 are supported in this MCA bank.				
	0=Deferred errors are not supported in this bank.				
1	Reserved.				
0	McaX . Read-only. Reset: 1. 1=This bank provides Machine Check Architecture Extensions. Up to 4 additional				
	MISC registers (MISC1-MISC4) are supported. MCA::L3::MCA_MISC0_L3[BlkPtr] indicates the presence of				
	the additional MISC registers, but is not used to determine their MSR numbers. Deferred error interrupt type is				
	specifiable by MCA bank. MCA::L3::MCA_STATUS_L3[TCC] is present.				

MSRC000_20[7...E]5 [L3 IP Identification] (MCA::L3::MCA_IPID_L3)

MSKC000_20[7E]5 [E5 II Identification] (MCAE5MCA_II ID_E5)
Reset: 0007_00B0_0000_0000h.
The MCA::L3::MCA_IPID_L3 register is used by software to determine what IP type and revision is associated with the
MCA bank.
_ccx0_inst7_aliasMSR; MSRC000_2075
_ccx0_inst8_aliasMSR; MSRC000_2085
_ccx0_inst9_aliasMSR; MSRC000_2095
_ccx0_inst10_aliasMSR; MSRC000_20A5
_ccx1_inst7_aliasMSR; MSRC000_20B5
_ccx1_inst8_aliasMSR; MSRC000_20C5
_ccx1_inst9_aliasMSR; MSRC000_20D5
_ccx1_inst10_aliasMSR; MSRC000_20E5
Bits Description
63:48 McaType . Read-only. Reset: 0007h. The McaType of the MCA bank within this IP.
47:44 Reserved.
43:32 HardwareID . Read-only. Reset: 0B0h. The Hardware ID of the IP associated with this MCA bank.
31:0 InstanceId . Read-write. Reset: 0000_0000h. The instance ID of this IP. This is initialized to a unique ID per
instance of this register.

MSRC000 2017...E16 [L3 Machine Check Syndrome] (MCA::L3::MCA SYND L3)

MSK	C000_20[7E]6 [L3 Machine Check Syndrome] (MCA::L3::MCA_SYND_L3)			
Read-	Read-write, Volatile. Reset: Cold,0000_0000_0000h.			
Logs p	physical location information associated with error in MCA::L3::MCA_STATUS_L3 Thread 0			
_ccx0_ii	nst7_aliasMSR; MSRC000_2076			
_ccx0_iı	nst8_aliasMSR; MSRC000_2086			
	nst9_aliasMSR; MSRC000_2096			
	nst10_aliasMSR; MSRC000_20A6			
	nst7_aliasMSR; MSRC000_20B6			
	nst8_aliasMSR; MSRC000_20C6			
	nst9_aliasMSR; MSRC000_20D6			
	nst10_aliasMSR; MSRC000_20E6			
Bits	Description			
63:49	Reserved.			
48:32	Syndrome . Read-write, Volatile. Reset: Cold, 0_0000h. Contains the syndrome, if any, associated with the error			
	logged in MCA::L3::MCA_STATUS_L3. The low-order bit of the syndrome is stored in bit 0, and the syndrome			
	has a length specified by MCA::L3::MCA_SYND_L3[Length]. The Syndrome field is only valid when			
	MCA::L3::MCA_SYND_L3[Length] is not 0.			
31:27				
	ErrorPriority . Read-write, Volatile. Reset: Cold,0h. Encodes the priority of the error logged in			
20.24				
	MCA::L3::MCA_SYND_L3. 3'b000 = No error; 3'b001 = Reserved; 3'b010 = Corrected Error; 3'b011 = Deferred			
	Error; 3'b100 = Uncorrected Error; 3'b101 = Fatal Error; all others reserved.			

23:18	Length . Read-write, Volatile. Reset: Cold, 00h. Specifies the length in bits of the syndrome contained in	l
	MCA::L3::MCA_SYND_L3[Syndrome]. A value of 0 indicates that there is no valid syndrome in	l
	MCA::L3::MCA_SYND_L3. For example, a syndrome length of 9 means that	l
	MCA::L3::MCA_SYND_L3[Syndrome] bits [8:0] contains a valid syndrome.	
17:0	ErrorInformation . Read-write, Volatile. Reset: Cold, 0_0000h. Contains error-specific information about the	1
	location of the error. Decoding is available in Table 54 [MCA_SYND_L3 Register].	l

Table 54: MCA_SYND_L3 Register

Error Type	Bits	Description
ShadowTag	[17:12]	Reserved
	[11:8]	Pack
	[7:3]	Reserved
	[2:0]	Way
MultiHitShadowTag	[17:12]	Reserved
	[11:8]	Pack
	[7:0]	Reserved
Tag	[17:12]	Reserved
	[11:8]	Bank.
	[7:0]	Way
MultiHitTag	[17:0]	Reserved
DataArray	[17:12]	Reserved
	[11:8]	Bank[2:0]
	[7:3]	Reserved
	[2:0]	Way
SdpParity	[17:0]	Reserved
XiVictimQueue	[17:0]	Reserved
Hwa	[17:0]	Reserved

MSRC	C000_20[7E]8 [L3 Machine Check Deferred Error Status] (MCA::L3::MCA_DESTAT_L3)		
Read-v	write, Volatile. Reset: Cold, 0000_0000_0000_0000h.		
Holds	Holds status information for the first deferred error seen in this bank.		
_ccx0_in	st7_aliasMSR; MSRC000_2078		
	st8_aliasMSR; MSRC000_2088		
	st9_aliasMSR; MSRC000_2098		
	sst10_aliasMSR; MSRC000_20A8		
	sst7_aliasMSR; MSRC000_20B8		
	ist8_aliasMSR; MSRC000_20C8		
	sst9_aliasMSR; MSRC000_20D8 sst10_aliasMSR; MSRC000_20E8		
Bits	Description		
63	Val . Read-write, Volatile. Reset: Cold, 0. 1=A valid error has been detected (whether it is enabled or not).		
62	Overflow . Read-write, Volatile. Reset: Cold, 0. 1=An error was detected while the valid bit (Val) was set; at least		
	one error was not logged. Overflow is set independently of whether the existing error is overwritten. (See the		
	section on overwrite priorities.)		
61:59	Reserved.		
58	AddrV . Read-write, Volatile. Reset: Cold, 0. 1=MCA::L3::MCA_DEADDR_L3 contains address information		
	associated with the error.		
57:54	Reserved.		
53	SyndV . Read-write, Volatile. Reset: Cold, 0. 1=This error logged information in MCA::L3::MCA_SYND_L3. If		
	MCA::L3::MCA_SYND_L3[ErrorPriority] is the same as the priority of the error in		
	MCA::L3::MCA_STATUS_L3, then the information in MCA::L3::MCA_SYND_L3 is associated with the error		

	in MCA::L3::MCA_DESTAT_L3.
52:45	Reserved.
44	Deferred . Read-write, Volatile. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data error which did not immediately cause a processor exception; poison is created and an exception is deferred until the poison data is consumed.
43:0	Reserved.

43:0 Reserved.		
MSRC000_20[7E]9 [L3 Deferred Error Address] (MCA::L3::MCA_DEADDR_L3)		
Read-write, Volatile. Reset: Cold, 0000_0000_0000h.		
The MCA::L3::MCA_DEADDR_L3 register stores the address associated with the error in		
MCA::L3::MCA_DESTAT_L3. The register is only meaningful if MCA::L3::MCA_DESTAT_L3[Val]=1 and		
MCA::L3::MCA_DESTAT_L3[AddrV]=1. The lowest valid bit of the address is defined by		
MCA::L3::MCA_DEADDR_L3[LSB].		
_ccx0_inst7_aliasMSR; MSRC000_2079		
_ccx0_inst8_aliasMSR; MSRC000_2089		
_ccx0_inst9_aliasMSR; MSRC000_2099		
_ccx0_inst10_aliasMSR; MSRC000_20A9		
_ccx1_inst7_aliasMSR; MSRC000_20B9 _ccx1_inst8_aliasMSR; MSRC000_20C9		
_ccx1_inst8_aliasMSR; MSRC000_20C9 _ccx1_inst9_aliasMSR; MSRC000_20D9		
_ccx1_inst10_aliasMSR; MSRC000_20E9		
Bits Description		
63:62 Reserved.		
61:56 LSB . Read-write, Volatile. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in		
MCA::L3::MCA_DEADDR_L3[ErrorAddr]. A value of 0 indicates that MCA::L3::MCA_DEADDR_L3[55:0]		
contains a valid byte address. A value of 6 indicates that MCA::L3::MCA_DEADDR_L3[55:6] contains a valid		
cache line address and that MCA::L3::MCA_DEADDR_L3[5:0] are not part of the address and should be ignored		
by error handling software. A value of 12 indicates that MCA::L3::MCA_DEADDR_L3[55:12] contain a valid		
4KB memory page and that MCA::L3::MCA_DEADDR_L3[11:0] should be ignored by error handling software.		
55:0 ErrorAddr . Read-write, Volatile. Reset: Cold,00_0000_00000 . Contains the address, if any, associated with		
the error logged in MCA::L3::MCA_DESTAT_L3. The lowest-order valid bit of the address is specified in		
the error togged in MCA_DESTAT_ES. The lowest-order valid bit of the address is specified in		

MSRC001_040[7...E] [L3 Machine Check Control Mask] (MCA::L3::MCA_CTL_MASK_L3)

MCA::L3::MCA_DEADDR_L3[LSB].

	ovor_o io(, in 2) [25 interime eneck control interior (interior 25 in 25	
Read-	write. Reset: 0000_0000_0000_0000h.	
Inhibit detection of an error source.		
_ccx0_ir	nst7_aliasMSR; MSRC001_0407	
	nst8_aliasMSR; MSRC001_0408	
	nst9_aliasMSR; MSRC001_0409	
	nst10_aliasMSR; MSRC001_040A	
	nst7_aliasMSR; MSRC001_040B	
	nst8_aliasMSR; MSRC001_040C	
_ccx1_ir	nst9_aliasMSR; MSRC001_040D	
_ccx1_ir	nst10_aliasMSR; MSRC001_040E	
Bits	Description	
63:8	Reserved.	
7	Hwa . Read-write. Reset: 0. Init: BIOS,1. L3 Hardware Assertion.	
6	XiVictimQueue. Read-write. Reset: 0. L3 Victim Queue Parity Error.	
5	SdpParity . Read-write. Reset: 0. SDP Parity Error from XI.	
4	DataArray . Read-write. Reset: 0. L3M Data ECC Error.	
3	MultiHitTag. Read-write. Reset: 0. L3M Tag Multi-way-hit Error.	
2	Tag. Read-write. Reset: 0. L3M Tag ECC Error.	
1	MultiHitShadowTag. Read-write. Reset: 0. Shadow Tag Macro Multi-way-hit Error.	
0	ShadowTag. Read-write. Reset: 0. Shadow Tag Macro ECC Error.	

transport layer.

3.2.5.8 CS

MSR	0000_0450MSRC000_2150 [CS Machine Check Control] (MCA::CS::MCA_CTL_CS)		
Read-	write. Reset: 0000_0000_0000_0000h.		
0=Dis	0=Disables error reporting for the corresponding error. 1=Enables error reporting via machine check exception for the		
corres	ponding error. The MCA::CS::MCA_CTL_CS register must be enabled by the corresponding enable bit in		
Core::	X86::Msr::MCG_CTL. Does not affect error detection, correction, or logging.		
_instCS0	_aliasMSRLEGACY; MSR0000_0450		
	_aliasMSRLEGACY; MSR0000_0454		
_	_aliasMSR; MSRC000_2140		
	_aliasMSR; MSRC000_2150		
	Description		
63:9	Reserved.		
8	SPF_ECC_ERR . Read-write. Reset: 0. Probe Filter ECC Error: An ECC error occurred on a probe filter access.		
7	ATM_PAR_ERR . Read-write. Reset: 0. Atomic Request Parity Error: Parity error on read of an atomic		
	transaction.		
6	SDP_PAR_ERR . Read-write. Reset: 0. Read Response Parity Error: Parity error on incoming read response data.		
5	FTI_PAR_ERR . Read-write. Reset: 0. Request or Probe Parity Error: Parity error on incoming request or probe		
	response data.		
4	FTI_RSP_NO_MTCH . Read-write. Reset: 0. Unexpected Response: A response was received from the transport		
	layer which does not match any request.		
3	FTI_ILL_RSP . Read-write. Reset: 0. Illegal Response: An illegal response was received from the transport layer.		
2	FTI_SEC_VIOL . Read-write. Reset: 0. Security Violation: A security violation was received from the transport		
	layer.		

FTI_ADDR_VIOL. Read-write. Reset: 0. Address Violation: An address violation was received from the

FTI_ILL_REQ. Read-write. Reset: 0. Illegal Request: An illegal request was received from the transport layer.

MSR0000_0451...MSRC000_2151 [CS Machine Check Status] (MCA::CS::MCA_STATUS_CS)

Reset:	Cold,0000_0000_0000_0000h.	
Logs information associated with errors.		
_instCS0_aliasMSRLEGACY; MSR0000_0451		
	_aliasMSRLEGACY; MSR0000_0455	
	_aliasMSR; MSRC000_2141	
_	_aliasMSR; MSRC000_2151	
Bits	Description	
63	Val . Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the register has	
	been read.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
62	Overflow . Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was not	
	logged. Overflow is set independently of whether the existing error is overwritten. See 3.1.3 [Machine Check	
	Errors].	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
61	UC . Reset: Cold,0. 1=The error was not corrected by hardware.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
60	En . Reset: Cold,0. 1=MCA error reporting is enabled for this error, as indicated by the corresponding bit in	
	MCA::CS::MCA_CTL_CS. This bit is a copy of bit in MCA::CS::MCA_CTL_CS for this error.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
59	MiscV. Reset: Cold,0. 1=Valid thresholding in MCA::CS::MCA_MISCO_CS.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
58	AddrV . Reset: Cold,0. 1=MCA::CS::MCA_ADDR_CS contains address information associated with the error.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	

57	PCC . Reset: Cold,0. 1=Hardware context held by the processor may have been corrupted. Continued operation of		
	the system may have unpredictable results. The error is not recoverable or survivable, and the system should be		
	reinitialized.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
56	ErrCoreIdVal. Reset: Cold,0. 1=The ErrCoreId field is valid.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
55	TCC . Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer		
	address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The		
	thread which consumed the error is not restartable and must be terminated. Only meaningful when		
	MCA::CS::MCA_STATUS_CS[PCC]=0.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
54	Reserved.		
53	SyndV . Reset: Cold,0. 1=This error logged information in MCA::CS::MCA_SYND_CS. If		
	MCA::CS::MCA_SYND_CS[ErrorPriority] is the same as the priority of the error in		
	MCA::CS::MCA_STATUS_CS, then the information in MCA::CS::MCA_SYND_CS is associated with the error		
	in MCA::CS::MCA_STATUS_CS.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
52:47	Reserved.		
46	CECC . Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC		
	algorithm. UC indicates whether the error was actually corrected by the processor.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
45	UECC . Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC		
	algorithm. UC indicates whether the error was actually corrected by the processor.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
44	Deferred . Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data		
	error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is		
	consumed.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.		
43	Poison . Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
	Reserved.		
37:32	ErrCoreId . Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is		
	associated with the error; Otherwise this field is reserved.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
31:22	Reserved.		
21:16	ErrorCodeExt . Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause		
	analysis. This field indicates which bit position in MCA::CS::MCA_CTL_CS enables error reporting for the		
	logged error.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
15:0	ErrorCode . Reset: Cold,0000h. Error code for this error. See 3.1.3.3 [Error Codes] for details on decoding this		
	field.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		

Table 55: MCA_STATUS_CS[ErrorCodeExt] Decode

Error Type	Bits	Description
FTI_ILL_REQ	[6:0]	0x0
FTI_ADDR_VIOL	[6:0]	0x1
FTI_SEC_VIOL	[6:0]	0x2
FTI_ILL_RSP	[6:0]	0x3

FTI_RSP_NO_MTCH	[6:0]	0x4
FTI PAR ERR	[6:0]	0x5
SDP PAR ERR	[6:0]	0x6
ATM PAR ERR	+	0x7
SPF ECC ERR	[6:0]	0x8

MSR0000_0452...MSRC000_2152 [CS Machine Check Address] (MCA::CS::MCA_ADDR_CS)

Read-write, Volatile. Reset: Cold,0000_0000_0000_0000h.

MCA::CS::MCA ADDR CS stores an address and other information associated with the error in

MCA::CS::MCA_STATUS_CS. The register is only meaningful if MCA::CS::MCA_STATUS_CS[Val]=1 and MCA::CS::MCA_STATUS_CS[AddrV]=1.

instCS0_aliasMSRLEGACY; MSR0000_0452

instCS1_aliasMSRLEGACY; MSR0000_0456

instCS0_aliasMSR; MSRC000_2142

instCS1_aliasMSR; MSRC000_2152

Bits Description

63:62 Reserved.

61:56 **LSB.** Read-write, Volatile. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in MCA::CS::MCA_ADDR_CS[ErrorAddr]. A value of 0 indicates that MCA::CS::MCA_ADDR_CS[55:0] contains a valid byte address. A value of 6 indicates that MCA::CS::MCA_ADDR_CS[55:6] contains a valid cache line address and that MCA::CS::MCA_ADDR_CS[5:0] are not part of the address and should be ignored by error handling software. A value of 12 indicates that MCA::CS::MCA_ADDR_CS[55:12] contain a valid 4KB memory page and that MCA::CS::MCA_ADDR_CS[11:0] should be ignored by error handling software.

ErrorAddr. Read-write, Volatile. Reset: Cold,00_0000_0000h. Unless otherwise specified by an error, contains the address associated with the error logged in MCA::CS::MCA_STATUS_CS. For physical addresses, the most significant bit is given by Core::X86::Cpuid::LongModeInfo[PhysAddrSize].

Table 56: MCA ADDR CS Register

Error Type	Bits	Description
FTI_ILL_REQ	[55:0]	Reserved
FTI_ADDR_VIOL	[55:0]	Reserved
FTI_SEC_VIOL	[55:0]	Reserved
FTI_ILL_RSP	[55:0]	Reserved
FTI_RSP_NO_MTCH	[55:0]	Reserved
FTI_PAR_ERR	[55:0]	Reserved
SDP_PAR_ERR	[55:0]	Reserved
ATM_PAR_ERR	[55:0]	Reserved
SPF_ECC_ERR	[55:0]	Reserved

MSR0000 0453...MSRC000 2153 [CS Machine Check Miscellaneous 0] (MCA::CS::MCA MISC0 CS)

Log m	Log miscellaneous information associated with errors.		
_instCS0	_instCS0_aliasMSRLEGACY; MSR0000_0453		
_instCS1	l_aliasMSRLEGACY; MSR0000_0457		
_instCS0)_aliasMSR; MSRC000_2143		
_instCS1	l_aliasMSR; MSRC000_2153		
Bits	Description		
63	Valid . Reset: 1. 1=A valid CntP field is present in this register.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.		
62	CntP . Reset: 1. 1=A valid threshold counter is present.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.		
61	Locked . Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not		
	available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI.		

	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.				
60	IntP . Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt				
	generation are not supported.				
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::CS::MCA_MISC0_CS[Locked]) ? Read-write :				
	Read-only.				
59:56	Reserved.				
55:52	LvtOffset . Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the				
	APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see				
	Core::X86::Apic::ExtendedInterruptLvtEntries).				
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::CS::MCA_MISC0_CS[Locked]) ? Read-write :				
	Read-only.				
51	CntEn. Reset: 0. 1=Count thresholding errors.				
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::CS::MCA_MISC0_CS[Locked]) ? Read-write :				
	Read-only.				
50:49	ThresholdIntType . Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b				
	= No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI				
trigger event. 11b = Reserved.					
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::CS::MCA_MISC0_CS[Locked]) ? Read-write :				
40	Read-only.				
48	Ovrflw . Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set, ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is				
generated.					
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::CS::MCA_MISC0_CS[Locked]) ? Read-write :				
	Read-only.				
47.44	Reserved.				
	ErrCnt . Reset: Cold,000h. This is written by software to set the starting value of the error counter. This is				
75.52	incremented by hardware when errors are logged. When this counter overflows, it stays at FFFh (no rollover). The				
	threshold value, written by software, is (FFFh - the desired error count (the number of errors necessary in order				
	for an interrupt to be taken)); the desired error count of 0 (a write value of FFFh) is not supported.				
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::CS::MCA_MISC0_CS[Locked]) ? Read-write :				
	Read-only.				
31:24	BlkPtr . Read-write. Reset: 01h. 00h=Extended MISC MSR block is not valid. 01h=Extended MSR block is valid.				
23:0	Reserved.				

MSRC000 21[4...5]4 [CS Machine Check Configuration] (MCA::CS::MCA_CONFIG_CS)

MSRC000_21[45]4 [CS Machine Check Configuration] (MCA::CS::MCA_CONFIG_CS)					
Reset:	et: 0000_0000_0000_0025h.				
Contro	Controls configuration of the associated machine check bank.				
	_instCS0_aliasMSR; MSRC000_2144				
_	_aliasMSR; MSRC000_2154				
Bits	Description				
63:39	Reserved.				
38:37 DeferredIntType . Read-write. Reset: 0h. Specifies the type of interrupt signaled when a deferred error is lo					
00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[DeferredLvtOffset]). 10b					
	SMI trigger event. 11b = Reserved.				
36:35	Reserved.				
34	LogDeferredInMcaStat . Read-write. Reset: 0. Init: BIOS,1. 1=Log deferred errors in				
	MCA::CS::MCA_STATUS_CS and MCA::CS::MCA_ADDR_CS in addition to MCA::CS::MCA_DESTAT_CS				
	and MCA::CS::MCA_DEADDR_CS. 0=Only log deferred errors in MCA::CS::MCA_DESTAT_CS and				
	MCA::CS::MCA_DEADDR_CS. This bit does not affect logging of deferred errors in				
	MCA::CS::MCA_SYND_CS, MCA::CS::MCA_MISCO_CS.				
33	Reserved.				

32	McaXEnable . Read-write. Reset: 0. Init: BIOS,1. Check: 1. 1=Software has acknowledged support for the				
	MCAX feature set. 0=Software has not acknowledged support for the MCAX feature set. All uncorrected and				
fatal errors will cause an ErrorEvent packet to be generated. Deferred error interrupts are configured					
	Core::X86::Msr::McaIntrCfg.				
31:6	Reserved.				
5	DeferredIntTypeSupported . Read-only. Reset: 1. 1=MCA::CS::MCA_CONFIG_CS[DeferredIntType] controls				
the type of interrupt generated on a deferred error. Deferred errors are supported in this bank only if					
	MCA::CS::MCA_CONFIG_CS[DeferredErrorLoggingSupported]=1.				
4:3	Reserved.				
2	DeferredErrorLoggingSupported . Read-only. Reset: 1. 1=Deferred errors are supported in this MCA bank, and				
	MCA::CS::MCA_CONFIG_CS[LogDeferredInMcaStat] controls the logging behavior of these errors.				
	MCA::CS::MCA_CONFIG_CS[LogDeferredInMcaStat] controls the logging behavior of these errors. MCA::CS::MCA_DESTAT_CS and MCA::CS::MCA_DEADDR_CS are supported in this MCA bank.				
1	MCA::CS::MCA_DESTAT_CS and MCA::CS::MCA_DEADDR_CS are supported in this MCA bank.				
1 0	MCA::CS::MCA_DESTAT_CS and MCA::CS::MCA_DEADDR_CS are supported in this MCA bank. 0=Deferred errors are not supported in this bank.				
	MCA::CS::MCA_DESTAT_CS and MCA::CS::MCA_DEADDR_CS are supported in this MCA bank. 0=Deferred errors are not supported in this bank. Reserved.				
	MCA::CS::MCA_DESTAT_CS and MCA::CS::MCA_DEADDR_CS are supported in this MCA bank. 0=Deferred errors are not supported in this bank. Reserved. McaX. Read-only. Reset: 1. 1=This bank provides Machine Check Architecture Extensions. Up to 4 additional				

MSRC000_21[4...5]5 [CS IP Identification] (MCA::CS::MCA_IPID_CS)

===[e]e [ee == =========			
Reset: 0000_002E_0000_0000h.			
The MCA::CS::MCA_IPID_CS register is used by software to determine what IP type and revision is associated with the			
MCA bank.			
nstCS0_aliasMSR; MSRC000_2145			
_instCS1_aliasMSR; MSRC000_2155			
its Description			
63:48 McaType . Read-only. Reset: 0000h. The McaType of the MCA bank within this IP.			
47:44 Reserved.			
43:32 HardwareID . Read-only. Reset: 02Eh. The Hardware ID of the IP associated with this MCA bank.			
31:0 InstanceId . Read-write. Reset: 0000_0000h. The instance ID of this IP. This is initialized to a unique ID per			
instance of this register.			

-				
MSRC000_21[45]6 [CS Machine Check Syndrome] (MCA::CS::MCA_SYND_CS)				
Read-write, Volatile. Reset: Cold, 0000_0000_0000_0000h.				
Logs physical location information associated with error in MCA::CS::MCA_STATUS_CS Thread 0				
_instCS0_aliasMSR; MSRC000_2146				
_instCS1_aliasMSR; MSRC000_2156				
Bits Description				
63:48 Reserved.				
47:32 Syndrome . Read-write, Volatile. Reset: Cold,0000h. Contains the syndrome, if any, associated with the error				
logged in MCA::CS::MCA_STATUS_CS. The low-order bit of the syndrome is stored in bit 0, and the syndrome				
has a length specified by MCA::CS::MCA_SYND_CS[Length]. The Syndrome field is only valid when				
MCA::CS::MCA_SYND_CS[Length] is not 0.				
Reserved.				
26:24 ErrorPriority . Read-write, Volatile. Reset: Cold, Oh. Encodes the priority of the error logged in				
MCA::CS::MCA_SYND_CS. 3'b000 = No error; 3'b001 = Reserved; 3'b010 = Corrected Error; 3'b011 =				
Deferred Error; 3'b100 = Uncorrected Error; 3'b101 = Fatal Error; all others reserved.				
23:18 Length . Read-write, Volatile. Reset: Cold,00h. Specifies the length in bits of the syndrome contained in				
MCA::CS::MCA_SYND_CS[Syndrome]. A value of 0 indicates that there is no valid syndrome in				
MCA::CS::MCA_SYND_CS. For example, a syndrome length of 9 means that				
MCA::CS::MCA_SYND_CS[Syndrome] bits [8:0] contains a valid syndrome.				
17:0 ErrorInformation . Read-write, Volatile. Reset: Cold, 0_0000h. Contains error-specific information about the				

location of the error. Decoding is available in Table 57 [MCA_SYND_CS Register].

Table 57: MCA_SYND_CS Register

Error Type	Bits	Description
FTI_ILL_REQ	[8:0]	
FTI_ADDR_VIOL	[8:0]	
FTI_SEC_VIOL	[8:0]	
FTI_ILL_RSP	[2:0]	
FTI_RSP_NO_MTCH	[2:0]	
FTI_PAR_ERR	[7:0]	
SDP_PAR_ERR	[7:0]	
ATM_PAR_ERR	[7:0]	
SPF_ECC_ERR	[17:0]	

MSRC000_21[45]8 [CS Machine Check Deferred Error Status] (MCA::CS::MCA_DESTAT_CS)					
Read-v	-write, Volatile. Reset: Cold, 0000_0000_0000h.				
Holds status information for the first deferred error seen in this bank.					
_	nstCS0_aliasMSR; MSRC000_2148				
_instCS1	_aliasMSR; MSRC000_2158				
Bits	Description				
63	Val . Read-write, Volatile. Reset: Cold, 0. 1=A valid error has been detected (whether it is enabled or not).				
62	Overflow . Read-write, Volatile. Reset: Cold, 0. 1=An error was detected while the valid bit (Val) was set; at least				
	one error was not logged. Overflow is set independently of whether the existing error is overwritten. (See the				
	section on overwrite priorities.)				
61:59	Reserved.				
58 AddrV. Read-write, Volatile. Reset: Cold, 0. 1=MCA::CS::MCA_DEADDR_CS contains address					
	associated with the error.				
57:54	Reserved.				
53	SyndV . Read-write, Volatile. Reset: Cold, 0. 1=This error logged information in MCA::CS::MCA_SYND_CS. If				
	MCA::CS::MCA_SYND_CS[ErrorPriority] is the same as the priority of the error in				
	MCA::CS::MCA_STATUS_CS, then the information in MCA::CS::MCA_SYND_CS is associated with the error				
	in MCA::CS::MCA_DESTAT_CS.				
52:45	Reserved.				
44	Deferred . Read-write, Volatile. Reset: Cold, 0. 1=A deferred error was created. A deferred error is the result of an				
	uncorrectable data error which did not immediately cause a processor exception; poison is created and an				
	exception is deferred until the poison data is consumed.				
43:0	Reserved.				

MSRC000 21[4...5]9 [CS Deferred Error Address] (MCA::CS::MCA DEADDR CS)

	Mondovo_21[4o]o [ee Deterred Error radices] (MereoMerDer.Dbit_ee)				
	Read-v	ead-write,Volatile. Reset: Cold,0000_0000_0000_0000h.			
	The MCA::CS::MCA_DEADDR_CS register stores the address associated with the error in				
MCA::CS::MCA_DESTAT_CS. The register is only meaningful if MCA::CS::MCA_DESTAT_CS[Val]=1 and					
	MCA:	MCA::CS::MCA_DESTAT_CS[AddrV]=1. The lowest valid bit of the address is defined by			
	MCA:	MCA::CS::MCA_DEADDR_CS[LSB].			
	_instCS0	_instCS0_aliasMSR; MSRC000_2149			
	_instCS1_aliasMSR; MSRC000_2159				
	Bits	Description			
	63:62	Reserved.			
	61:56	61:56 LSB . Read-write, Volatile. Reset: Cold, 00h. Specifies the least significant valid bit of the address contained in			
		MCA::CS::MCA_DEADDR_CS[ErrorAddr]. A value of 0 indicates that MCA::CS::MCA_DEADDR_CS[55:0			
		contains a valid byte address. A value of 6 indicates that MCA··CS··MCA_DEADDR_CS[55:6] contains a valid			

	cache line address and that MCA::CS::MCA_DEADDR_CS[5:0] are not part of the address and should be				
	ignored by error handling software. A value of 12 indicates that MCA::CS::MCA_DEADDR_CS[55:12] contain a				
	valid 4KB memory page and that MCA::CS::MCA_DEADDR_CS[11:0] should be ignored by error handling				
	software.				
55:0	ErrorAddr . Read-write, Volatile. Reset: Cold,00_0000_0000_0000h. Contains the address, if any, associated with				
	the error logged in MCA::CS::MCA_DESTAT_CS. The lowest-order valid bit of the address is specified in				
	MCA::CS::MCA_DEADDR_CS[LSB].				

MSRC001_041[4...5] [CS Machine Check Control Mask] (MCA::CS::MCA_CTL_MASK_CS) Read-write. Reset: 0000_0000_0000_000h. Inhibit detection of an error source. instCS0 aliasMSR; MSRC001 0414 instCS1 aliasMSR; MSRC001 0415 Bits | Description 63:9 Reserved. 8 **SPF** ECC ERR. Read-write. Reset: 0. Probe Filter ECC Error: An ECC error occurred on a probe filter access. ATM_PAR_ERR. Read-write. Reset: 0. Atomic Request Parity Error: Parity error on read of an atomic transaction. **SDP_PAR_ERR**. Read-write. Reset: 0. Read Response Parity Error: Parity error on incoming read response data. 6 FTI_PAR_ERR. Read-write. Reset: 0. Request or Probe Parity Error: Parity error on incoming request or probe 5 response data. FTI RSP NO MTCH. Read-write. Reset: 0. Unexpected Response: A response was received from the transport 4 layer which does not match any request. **FTI ILL RSP**. Read-write. Reset: 0. Illegal Response: An illegal response was received from the transport layer. 3 2 FTI_SEC_VIOL. Read-write. Reset: 0. Security Violation: A security violation was received from the transport FTI ADDR VIOL. Read-write. Reset: 0. Address Violation: An address violation was received from the 1 transport layer. FTI ILL REQ. Read-write. Reset: 0. Illegal Request: An illegal request was received from the transport layer. 0

3.2.5.9 PIE

MSR0000_0458...MSRC000_2160 [PIE Machine Check Control] (MCA::PIE::MCA_CTL_PIE)

Nead-write: Neset: 0000_0000_0000ii.					
0=Dis	0=Disables error reporting for the corresponding error. 1=Enables error reporting via machine check exception for the				
corres	corresponding error. The MCA::PIE::MCA_CTL_PIE register must be enabled by the corresponding enable bit in				
Core::	Core::X86::Msr::MCG_CTL. Does not affect error detection, correction, or logging.				
_instPIE_aliasMSRLEGACY; MSR0000_0458					
_instPIE	_instPIE_aliasMSR; MSRC000_2160				
Bits	Description				
63:4	Reserved.				
3	FTI DAT STAT . Read-write. Reset: 0. Poison data consumption: Poison data was written to an internal PIE				

63:4	Reserved.			
3	FTI_DAT_STAT . Read-write. Reset: 0. Poison data consumption: Poison data was written to an internal PIE			
	register.			
2	GMI . Read-write. Reset: 0. Link Error: An error occurred on a GMI or xGMI link.			
1	CSW . Read-write. Reset: 0. Register security violation: A security violation was detected on an access to an			
	internal PIE register.			
0	HW_ASSERT . Read-write. Reset: 0. Hardware Assert: A hardware assert was detected.			

MSR0000_0459...MSRC000_2161 [PIE Machine Check Status] (MCA::PIE::MCA_STATUS_PIE)

Reset: C	old,0000_	_0000_	_0000_	_0000h	•

Logs information associated with errors.

Read-write Reset 0000 0000 0000 0000h

_instPIE	_aliasMSRLEGACY; MSR0000_0459
	aliasMSR; MSRC000_2161
Bits	Description
63	Val . Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the register has
	been read.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
62	Overflow . Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was not
	logged. Overflow is set independently of whether the existing error is overwritten. See 3.1.3 [Machine Check
	Errors].
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
61	UC. Reset: Cold,0. 1=The error was not corrected by hardware.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
60	En . Reset: Cold,0. 1=MCA error reporting is enabled for this error, as indicated by the corresponding bit in
	MCA::PIE::MCA_CTL_PIE. This bit is a copy of bit in MCA::PIE::MCA_CTL_PIE for this error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
59	MiscV. Reset: Cold,0. 1=Valid thresholding in MCA::PIE::MCA_MISCO_PIE.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
58	AddrV . Reset: Cold,0. 1=MCA::PIE::MCA_ADDR_PIE contains address information associated with the error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
57	PCC . Reset: Cold,0. 1=Hardware context held by the processor may have been corrupted. Continued operation of
	the system may have unpredictable results. The error is not recoverable or survivable, and the system should be
	reinitialized.
ГС	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. ErrCoreIdVal. Reset: Cold,0. 1=The ErrCoreId field is valid.
56	
55	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1. TCC . Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer
່ວວ	address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The
	thread which consumed the error is not restartable and must be terminated. Only meaningful when
	MCA::PIE::MCA_STATUS_PIE[PCC]=0.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
54	Reserved.
53	SyndV. Reset: Cold,0. 1=This error logged information in MCA::PIE::MCA_SYND_PIE. If
	MCA::PIE::MCA_SYND_PIE[ErrorPriority] is the same as the priority of the error in
	MCA::PIE::MCA_STATUS_PIE, then the information in MCA::PIE::MCA_SYND_PIE is associated with the
	error in MCA::PIE::MCA_STATUS_PIE.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
52:47	Reserved.
46	CECC . Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC
	algorithm. UC indicates whether the error was actually corrected by the processor.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
45	UECC . Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC
	algorithm. UC indicates whether the error was actually corrected by the processor.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
44	Deferred . Reset: Cold, 0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data
	error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is
	Consumed. AccessType: Core:: Y96::Msr::HWCD[McStatusWrEn] 2 Dead write: Dead Write 0 only Error on write 1
42	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
43	Poison. Reset: Cold, 0. 1=The error was the result of attempting to consume poisoned data.
42.20	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
42.38	Reserved.

37:32	ErrCoreId . Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is
	associated with the error; Otherwise this field is reserved.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
31:22	Reserved.
21:16	ErrorCodeExt . Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause
	analysis. This field indicates which bit position in MCA::PIE::MCA_CTL_PIE enables error reporting for the
	logged error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.
15:0	ErrorCode . Reset: Cold,0000h. Error code for this error. See 3.1.3.3 [Error Codes] for details on decoding this
	field.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.

Table 58: MCA_STATUS_PIE[ErrorCodeExt] Decode

Error Type	Bits	Description
HW_ASSERT	[6:0]	0x0
CSW	[6:0]	0x1
GMI	[6:0]	0x2
FTI DAT STAT	[6:0]	0x3

MSR0000_045AMSRC000_2162 [PIE Machine Check Address] (MCA::PIE::MCA_ADDR_PIE)		
Read-only. Reset: Cold,0000_0000_0000_0000h.		
MCA::PIE::MCA_ADDR_PIE stores an address and other information associated with the error in		
MCA::PIE::MCA_STATUS_PIE. The register is only meaningful if MCA::PIE::MCA_STATUS_PIE[Val]=1 and		
MCA::PIE::MCA_STATUS_PIE[AddrV]=1.		
_instPIE_aliasMSRLEGACY; MSR0000_045A		
_instPIE_aliasMSR; MSRC000_2162		
Bits Description		
63:62 Reserved.		
61:56 LSB . Read-only. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in		
MCA::PIE::MCA_ADDR_PIE[ErrorAddr]. A value of 0 indicates that MCA::PIE::MCA_ADDR_PIE[55:0]		
contains a valid byte address. A value of 6 indicates that MCA::PIE::MCA_ADDR_PIE[55:6] contains a valid		
cache line address and that MCA::PIE::MCA_ADDR_PIE[5:0] are not part of the address and should be ignored		
by error handling software. A value of 12 indicates that MCA::PIE::MCA_ADDR_PIE[55:12] contain a valid		
4KB memory page and that MCA::PIE::MCA_ADDR_PIE[11:0] should be ignored by error handling software.		
55:0 ErrorAddr . Read-only. Reset: Cold,00_0000_0000_0000h. Contains the address, if any, associated with the error		
logged in MCA::PIE::MCA_STATUS_PIE.		

Table 59: MCA_ADDR_PIE Register

Error Type	Bits	Description
HW_ASSERT	[55:0]	Reserved
CSW	[55:0]	Reserved
GMI	[55:0]	Reserved
FTI_DAT_STAT	[55:0]	Reserved

MSR0000 045B...MSRC000 2163 [PIE Machine Check Miscellaneous 0] (MCA::PIE::MCA MISCO PIE)

MSK0000_045DMSKC000_2105 [11L Machine Check Miscendicous v] (MCA1 ILMCA_MISCO_1 IL)		
Log miscellaneous information associated with errors.		
_instPIE_aliasMSRLEGACY; MSR0000_045B		
_instPIE_aliasMSR; MSRC000_2163		
Bits Description		
63	Valid . Reset: 1. 1=A valid CntP field is present in this register.	

	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.
62	CntP . Reset: 1. 1=A valid threshold counter is present.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.
61	Locked . Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not
	available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.
60	IntP . Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt
	generation are not supported.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::PIE::MCA_MISC0_PIE[Locked]) ? Read-
	write: Read-only.
	Reserved.
55:52	LvtOffset . Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the
	APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see
	Core::X86::Apic::ExtendedInterruptLvtEntries).
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::PIE::MCA_MISC0_PIE[Locked]) ? Read-
- 1	write: Read-only.
51	CntEn. Reset: 0. 1=Count thresholding errors.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::PIE::MCA_MISC0_PIE[Locked]) ? Read-
50.40	write: Read-only.
50:49	ThresholdIntType . Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b
	= No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI trigger event. 11b = Reserved.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::PIE::MCA_MISC0_PIE[Locked]) ? Read-
	write: Read-only.
48	Ovrflw . Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set,
70	ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is
	generated.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::PIE::MCA_MISC0_PIE[Locked]) ? Read-
	write: Read-only.
47:44	Reserved.
43:32	ErrCnt . Reset: Cold,000h. This is written by software to set the starting value of the error counter. This is
	incremented by hardware when errors are logged. When this counter overflows, it stays at FFFh (no rollover). The
	threshold value, written by software, is (FFFh - the desired error count (the number of errors necessary in order
	for an interrupt to be taken)); the desired error count of 0 (a write value of FFFh) is not supported.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::PIE::MCA_MISC0_PIE[Locked]) ? Read-
	write: Read-only.
	BlkPtr . Read-write. Reset: 01h. 00h=Extended MISC MSR block is not valid. 01h=Extended MSR block is valid.
23:0	Reserved.

MSRC000_2164 [PIE Machine Check Configuration] (MCA::PIE::MCA_CONFIG_PIE)

Reset:	0000_0000_0000_0025h.
Contro	ols configuration of the associated machine check bank.
_instPIE	_aliasMSR; MSRC000_2164
Bits	Description
63:39	Reserved.
38:37	DeferredIntType . Read-write. Reset: 0h. Specifies the type of interrupt signaled when a deferred error is logged.
	00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[DeferredLvtOffset]). 10b =
	SMI trigger event. 11b = Reserved.
36:35	Reserved.
34	LogDeferredInMcaStat . Read-write. Reset: 0. Init: BIOS,1. 1=Log deferred errors in
	MCA::PIE::MCA STATUS PIE and MCA::PIE::MCA ADDR PIE in addition to

	MCA::PIE::MCA_DESTAT_PIE and MCA::PIE::MCA_DEADDR_PIE. 0=Only log deferred errors in
	MCA::PIE::MCA_DESTAT_PIE and MCA::PIE::MCA_DEADDR_PIE. This bit does not affect logging of
	deferred errors in MCA::PIE::MCA_SYND_PIE, MCA::PIE::MCA_MISC0_PIE.
33	Reserved.
32	McaXEnable . Read-write. Reset: 0. Init: BIOS,1. Check: 1. 1=Software has acknowledged support for the
	MCAX feature set. 0=Software has not acknowledged support for the MCAX feature set. All uncorrected and
	fatal errors will cause an ErrorEvent packet to be generated. Deferred error interrupts are configured via
	Core::X86::Msr::McaIntrCfg.
31:6	Reserved.
5	DeferredIntTypeSupported . Read-only. Reset: 1. 1=MCA::PIE::MCA_CONFIG_PIE[DeferredIntType]
	controls the type of interrupt generated on a deferred error. Deferred errors are supported in this bank only if
	MCA::PIE::MCA_CONFIG_PIE[DeferredErrorLoggingSupported]=1.
4:3	Reserved.
2	DeferredErrorLoggingSupported . Read-only. Reset: 1. 1=Deferred errors are supported in this MCA bank, and
	MCA::PIE::MCA_CONFIG_PIE[LogDeferredInMcaStat] controls the logging behavior of these errors.
	MCA::PIE::MCA_DESTAT_PIE and MCA::PIE::MCA_DEADDR_PIE are supported in this MCA bank.
	0=Deferred errors are not supported in this bank.
1	Reserved.
0	McaX . Read-only. Reset: 1. 1=This bank provides Machine Check Architecture Extensions. Up to 4 additional
	MISC registers (MISC1-MISC4) are supported. MCA::PIE::MCA_MISC0_PIE[BlkPtr] indicates the presence of
	the additional MISC registers, but is not used to determine their MSR numbers. Deferred error interrupt type is
	specifiable by MCA bank. MCA::PIE::MCA_STATUS_PIE[TCC] is present.

MSRC000_2165 [PIE IP Identification] (MCA::PIE::MCA_IPID_PIE)

1110110	2000_1105 [112 11 fuchtimedition] (NTCT MT 12 MTCT_11 12_112)
Reset:	0001_002E_0000_0000h.
The M	ICA::PIE::MCA_IPID_PIE register is used by software to determine what IP type and revision is associated with
the MO	CA bank.
instPIE	_aliasMSR; MSRC000_2165
Bits	Description
63:48	McaType . Read-only. Reset: 0001h. The McaType of the MCA bank within this IP.
47:44	Reserved.
43:32	HardwareID . Read-only. Reset: 02Eh. The Hardware ID of the IP associated with this MCA bank.
31:0	InstanceId . Read-write. Reset: 0000_0000h. The instance ID of this IP. This is initialized to a unique ID per
	instance of this register.

MSR	C000_2166 [PIE Machine Check Syndrome] (MCA::PIE::MCA_SYND_PIE)		
Read-	Read-write, Volatile. Reset: Cold, 0000_0000_0000_0000h.		
Logs p	physical location information associated with error in MCA::PIE::MCA_STATUS_PIE Thread 0		
_instPIE	_aliasMSR; MSRC000_2166		
Bits	Description		
63:33	Reserved.		
32	Syndrome . Read-write, Volatile. Reset: Cold, 0. Contains the syndrome, if any, associated with the error logged in		
	MCA::PIE::MCA_STATUS_PIE. The low-order bit of the syndrome is stored in bit 0, and the syndrome has a		
	length specified by MCA::PIE::MCA_SYND_PIE[Length]. The Syndrome field is only valid when		
	MCA::PIE::MCA_SYND_PIE[Length] is not 0.		
31:27	Reserved.		
26:24	ErrorPriority . Read-write, Volatile. Reset: Cold, 0h. Encodes the priority of the error logged in		
	MCA::PIE::MCA_SYND_PIE. 3'b000 = No error; 3'b001 = Reserved; 3'b010 = Corrected Error; 3'b011 =		
	Deferred Error; 3'b100 = Uncorrected Error; 3'b101 = Fatal Error; all others reserved.		
23:18	Length. Read-write, Volatile. Reset: Cold, 00h. Specifies the length in bits of the syndrome contained in		
	MCA::PIE::MCA_SYND_PIE[Syndrome]. A value of 0 indicates that there is no valid syndrome in		
	MCA::PIE::MCA_SYND_PIE. For example, a syndrome length of 9 means that		

	MCA::PIE::MCA_SYND_PIE[Syndrome] bits [8:0] contains a valid syndrome.
17:0	ErrorInformation . Read-write, Volatile. Reset: Cold, 0_000h. Contains error-specific information about the
	location of the error. Decoding is available in Table 60 [MCA_SYND_PIE Register].

Table 60: MCA_SYND_PIE Register

Error Type	Bits	Description
HW_ASSERT	[17:0]	Reserved
CSW	[17:0]	Reserved
GMI	[4:0]	
FTI_DAT_STAT	[3:0]	

MSRC	MSRC000_2168 [PIE Machine Check Deferred Error Status] (MCA::PIE::MCA_DESTAT_PIE)			
Read-v	Read-write, Volatile. Reset: Cold,0000_0000_0000_0000h.			
Holds	status information for the first deferred error seen in this bank.			
_instPIE	_aliasMSR; MSRC000_2168			
Bits	Description			
63	Val . Read-write, Volatile. Reset: Cold, 0. 1=A valid error has been detected (whether it is enabled or not).			
62	Overflow . Read-write, Volatile. Reset: Cold, 0. 1=An error was detected while the valid bit (Val) was set; at least			
	one error was not logged. Overflow is set independently of whether the existing error is overwritten. (See the			
	section on overwrite priorities.)			
61:59	Reserved.			
58	AddrV . Read-write, Volatile. Reset: Cold, 0. 1=MCA::PIE::MCA_DEADDR_PIE contains address information			
	associated with the error.			
57:54	Reserved.			
53	SyndV . Read-write, Volatile. Reset: Cold, 0. 1=This error logged information in MCA::PIE::MCA_SYND_PIE. If			
	MCA::PIE::MCA_SYND_PIE[ErrorPriority] is the same as the priority of the error in			
	MCA::PIE::MCA_STATUS_PIE, then the information in MCA::PIE::MCA_SYND_PIE is associated with the			
	error in MCA::PIE::MCA_DESTAT_PIE.			
52:45	Reserved.			
44	Deferred . Read-write, Volatile. Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an			
	uncorrectable data error which did not immediately cause a processor exception; poison is created and an			
	exception is deferred until the poison data is consumed.			
43:0	Reserved.			

MSRC000_2169 [PIE Deferred Error Address] (MCA::PIE::MCA_DEADDR_PIE)			
Read-write, Volatile. Reset: Cold,0000_0000_0000_0000h.			
The MCA::PIE::MCA_DEADDR_PIE register stores the address associated with the error in			
MCA::PIE::MCA_DESTAT_PIE. The register is only meaningful if MCA::PIE::MCA_DESTAT_PIE[Val]=1 and			
MCA::PIE::MCA_DESTAT_PIE[AddrV]=1. The lowest valid bit of the address is defined by			
MCA::PIE::MCA_DEADDR_PIE[LSB].			
_instPIE_aliasMSR; MSRC000_2169			
Bits Description			
63:62 Reserved.			
LSB. Read-write, Volatile. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in			
MCA::PIE::MCA_DEADDR_PIE[ErrorAddr]. A value of 0 indicates that			
MCA::PIE::MCA_DEADDR_PIE[55:0] contains a valid byte address. A value of 6 indicates that			
MCA::PIE::MCA_DEADDR_PIE[55:6] contains a valid cache line address and that			
MCA::PIE::MCA_DEADDR_PIE[5:0] are not part of the address and should be ignored by error handling			
software. A value of 12 indicates that MCA::PIE::MCA_DEADDR_PIE[55:12] contain a valid 4KB memory			
page and that MCA::PIE::MCA_DEADDR_PIE[11:0] should be ignored by error handling software.			
55:0 ErrorAddr . Read-write, Volatile. Reset: Cold,00_0000_0000h. Contains the address, if any, associated with			

the error logged in MCA::PIE::MCA_DESTAT_PIE. The lowest-order valid bit of the address is specified in MCA::PIE::MCA_DEADDR_PIE[LSB].

MSR	MSRC001_0416 [PIE Machine Check Control Mask] (MCA::PIE::MCA_CTL_MASK_PIE)		
Read-	Read-write. Reset: 0000_0000_0000_0000h.		
Inhibi	t detection of an error source.		
_instPIE	_aliasMSR; MSRC001_0416		
Bits	ts Description		
63:4	Reserved.		
3	FTI_DAT_STAT. Read-write. Reset: 0. Poison data consumption: Poison data was written to an internal PIE		
	register.		
2	GMI . Read-write. Reset: 0. Link Error: An error occurred on a GMI or xGMI link.		
1	CSW . Read-write. Reset: 0. Register security violation: A security violation was detected on an access to an		
	internal PIE register.		
0	HW_ASSERT. Read-write. Reset: 0. Hardware Assert: A hardware assert was detected.		

3.2.5.10 UMC

MSR0000_043CMSRC000_2100 [UMC Machine Check Control] (MCA::UMC::MCA_CTL_UMC	.)
---	----

MISIKU	WISKUUUU_U45CWISKCUUU_2100 [UMC WIACHINE CHECK CUNIU I] [WICAUMCAUMCAUMCA		
Read-v	nd-write. Reset: 0000_0000_0000_0000h.		
)=Disables error reporting for the corresponding error. 1=Enables error reporting via machine check exception for the		
corresp	orresponding error. The MCA::UMC::MCA_CTL_UMC register must be enabled by the corresponding enable bit in		
Core::2	X86::Msr::MCG_CTL. Does not affect error detection, correction, or logging.		
_instUM	C_umc0_aliasMSRLEGACY; MSR0000_043C		
_instUM	C_umc1_aliasMSRLEGACY; MSR0000_0440		
_instUM	C_umc0_aliasMSR; MSRC000_20F0		
_instUM	C_umc1_aliasMSR; MSRC000_2100		
Bits	Description		
63:6	Reserved.		
5	WriteDataCrcErr . Read-write. Reset: 0. Write data CRC error. A write data CRC error on the DRAM data bus.		
4	AddressCommandParityErr . Read-write. Reset: 0. Address/command parity error. A parity error on the DRAM		
	address/command bus.		
3	ApbErr . Read-write. Reset: 0. Advanced peripheral bus error. An error on the advanced peripheral bus.		
2	SdpParityErr . Read-write. Reset: 0. SDP parity error. A parity error on write data from the data fabric.		
1	WriteDataPoisonErr. Read-write. Reset: 0. Data poison error.		
0	DramEccErr . Read-write. Reset: 0. DRAM ECC error. An ECC error on a DRAM read.		

MSR0000_043D...MSRC000_2101 [UMC Machine Check Status] (MCA::UMC::MCA_STATUS_UMC)

Reset:	Reset: Cold,0000_0000_0000_0000h.		
Logs i	Logs information associated with errors.		
_instUM	C_umc0_aliasMSRLEGACY; MSR0000_043D		
_instUM	C_umc1_aliasMSRLEGACY; MSR0000_0441		
_instUM	C_umc0_aliasMSR; MSRC000_20F1		
_instUM	C_umc1_aliasMSR; MSRC000_2101		
Bits	ts Description		
63	Val . Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the register has		
	been read.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
62	Overflow . Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was not		
	logged. Overflow is set independently of whether the existing error is overwritten. See 3.1.3 [Machine Check		
	Errors].		

	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
61	UC. Reset: Cold,0. 1=The error was not corrected by hardware.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
60	En . Reset: Cold,0. 1=MCA error reporting is enabled for this error, as indicated by the corresponding bit in
	MCA::UMC::MCA_CTL_UMC. This bit is a copy of bit in MCA::UMC::MCA_CTL_UMC for this error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
59	MiscV. Reset: Cold,0. 1=Valid thresholding in MCA::UMC::MCA_MISC0_UMC.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
58	AddrV . Reset: Cold,0. 1=MCA::UMC::MCA_ADDR_UMC contains address information associated with the
	error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
57	PCC . Reset: Cold,0. 1=Hardware context held by the processor may have been corrupted. Continued operation of
	the system may have unpredictable results. The error is not recoverable or survivable, and the system should be
	reinitialized.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
56	ErrCoreIdVal. Reset: Cold,0. 1=The ErrCoreId field is valid.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
55	TCC . Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer
	address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The
	thread which consumed the error is not restartable and must be terminated. Only meaningful when
	MCA::UMC::MCA_STATUS_UMC[PCC]=0.
F 4	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
54	Reserved.
53	SyndV . Reset: Cold,0. 1=This error logged information in MCA::UMC::MCA_SYND_UMC. If
	MCA::UMC::MCA_SYND_UMC[ErrorPriority] is the same as the priority of the error in MCA::UMC::MCA_STATUS_UMC, then the information in MCA::UMC::MCA_SYND_UMC is associated
	with the error in MCA::UMC::MCA_STATUS_UMC.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
52:47	
46	CECC . Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC
10	algorithm. UC indicates whether the error was actually corrected by the processor.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
45	UECC . Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC
	algorithm. UC indicates whether the error was actually corrected by the processor.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read, Write-0-only, Error-on-write-1.
44	Deferred . Reset: Cold, 0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data
	error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is
	consumed.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
43	Poison . Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
42:38	Reserved.
	ErrCoreId . Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is
	associated with the error; Otherwise this field is reserved.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
31:22	
	ErrorCodeExt . Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause
	analysis. This field indicates which bit position in MCA::UMC::MCA_CTL_UMC enables error reporting for the
	logged error.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.
	•

15:0	ErrorCode . Reset: Cold,0000h. Error code for this error. See 3.1.3.3 [Error Codes] for details on decoding this
	field.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.

Table 61: MCA_STATUS_UMC[ErrorCodeExt] Decode

Error Type	Bits	Description
DramEccErr	[6:0]	0x0
WriteDataPoisonErr	[6:0]	0x1
SdpParityErr	[6:0]	0x2
ApbErr	[6:0]	0x3
AddressCommandParityErr	[6:0]	0x4
WriteDataCrcErr	[6:0]	0x5

MSR	MSR0000_043EMSRC000_2102 [UMC Machine Check Address] (MCA::UMC::MCA_ADDR_UMC)		
Read-	Read-write, Volatile. Reset: Cold, 0000_0000_0000_0000h.		
MCA:	MCA::UMC::MCA_ADDR_UMC stores an address and other information associated with the error in		
MCA:	MCA::UMC::MCA_STATUS_UMC. The register is only meaningful if MCA::UMC::MCA_STATUS_UMC[Val]=1 and		
MCA:	:UMC::MCA_STATUS_UMC[AddrV]=1.		
_instUM	C_umc0_aliasMSRLEGACY; MSR0000_043E		
_instUM	C_umc1_aliasMSRLEGACY; MSR0000_0442		
	C_umc0_aliasMSR; MSRC000_20F2		
_instUM	C_umc1_aliasMSR; MSRC000_2102		
Bits	Description		
63:62	Reserved.		
61:56	LSB . Read-write, Volatile. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in		
	MCA::UMC::MCA_ADDR_UMC[ErrorAddr]. A value of 0 indicates that		
	MCA::UMC::MCA_ADDR_UMC[55:0] contains a valid byte address. A value of 6 indicates that		
	MCA::UMC::MCA_ADDR_UMC[55:6] contains a valid cache line address and that		
	MCA::UMC::MCA_ADDR_UMC[5:0] are not part of the address and should be ignored by error handling		
	software. A value of 12 indicates that MCA::UMC::MCA_ADDR_UMC[55:12] contain a valid 4KB memory		
	page and that MCA::UMC::MCA_ADDR_UMC[11:0] should be ignored by error handling software.		
55:0			
	contains the address associated with the error logged in MCA::UMC::MCA_STATUS_UMC. For physical		
	addresses, the most significant bit is given by Core::X86::Cpuid::LongModeInfo[PhysAddrSize].		

Table 62: MCA_ADDR_UMC Register

Error Type	Bits	Description
DramEccErr	[55:39]	Reserved
	[39:4]	Reserved
WriteDataPoisonErr	[55:0]	Reserved
SdpParityErr	[55:0]	Reserved
ApbErr	[55:30]	Reserved
	[29:0]	Reserved
AddressCommandParityErr	[55:38]	Reserved
	[37:36]	Reserved
	[35:32]	Chip Select
	[31:0]	Reserved
WriteDataCrcErr	[55:38]	Reserved
	[37:36]	Reserved
	[35:32]	Chip Select

[31:0]	Reserved

MSR	000_043FMSRC000_2103 [UMC Machine Check Miscellaneous 0] (MCA::UMC::MCA_MISC0_UMC)
Log m	iscellaneous information associated with errors.
_	C_umc0_aliasMSRLEGACY; MSR0000_043F
	C_umc1_aliasMSRLEGACY; MSR0000_0443
	C_umc0_aliasMSR; MSRC000_20F3 C_umc1_aliasMSR; MSRC000_2103
	Description Description
63	Valid . Reset: 1. 1=A valid CntP field is present in this register.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.
62	CntP . Reset: 1. 1=A valid threshold counter is present.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.
61	Locked . Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI.
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.
60	IntP . Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt
	generation are not supported.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::UMC::MCA_MISC0_UMC[Locked]) ? Readwrite : Read-only.
	Reserved.
55:52	LvtOffset . Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the
	APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see
	Core::X86::Apic::ExtendedInterruptLvtEntries).
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::UMC::MCA_MISC0_UMC[Locked]) ? Readwrite : Read-only.
51	CntEn. Reset: 0. 1=Count thresholding errors.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::UMC::MCA_MISC0_UMC[Locked]) ? Read-
	write: Read-only.
50:49	ThresholdIntType . Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b
	= No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI
	trigger event. 11b = Reserved.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::UMC::MCA_MISCO_UMC[Locked]) ? Readwrite : Read-only.
48	Ovrflw . Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set,
40	ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is
	generated.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::UMC::MCA_MISC0_UMC[Locked]) ? Read-
	write: Read-only.
47:44	Reserved.
43:32	ErrCnt . Reset: Cold,000h. This is written by software to set the starting value of the error counter. This is
	incremented by hardware when errors are logged. When this counter overflows, it stays at FFFh (no rollover). The
	threshold value, written by software, is (FFFh - the desired error count (the number of errors necessary in order
	for an interrupt to be taken)); the desired error count of 0 (a write value of FFFh) is not supported.
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::UMC::MCA_MISC0_UMC[Locked]) ? Read-
	write : Read-only.
31:24	
23:0	Reserved.

MSRC000_2[0F...10]4 [UMC Machine Check Configuration] (MCA::UMC::MCA_CONFIG_UMC)

Reset: 0000_0000_0000_0025h.

	Controls configuration of the associated machine check bank.				
	_instUMC_umc0_aliasMSR; MSRC000_20F4				
	C_umc1_aliasMSR; MSRC000_2104				
	Description				
	Reserved.				
	DeferredIntType . Read-write. Reset: 0h. Specifies the type of interrupt signaled when a deferred error is logged. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[DeferredLvtOffset]). 10b = SMI trigger event. 11b = Reserved.				
36:35	Reserved.				
34	LogDeferredInMcaStat. Read-write. Reset: 0. Init: BIOS,1. 1=Log deferred errors in MCA::UMC::MCA_STATUS_UMC and MCA::UMC::MCA_ADDR_UMC in addition to MCA::UMC::MCA_DESTAT_UMC and MCA::UMC::MCA_DEADDR_UMC. 0=Only log deferred errors in MCA::UMC::MCA_DESTAT_UMC and MCA::UMC::MCA_DEADDR_UMC. This bit does not affect logging of deferred errors in MCA::UMC::MCA_SYND_UMC, MCA::UMC::MCA_MISCO_UMC.				
33	Reserved.				
32	McaXEnable . Read-write. Reset: 0. Init: BIOS,1. Check: 1. 1=Software has acknowledged support for the MCAX feature set. 0=Software has not acknowledged support for the MCAX feature set. All uncorrected and fatal errors will cause an ErrorEvent packet to be generated. Deferred error interrupts are configured via Core::X86::Msr::McaIntrCfg.				
31:6	Reserved.				
5	DeferredIntTypeSupported . Read-only. Reset: 1. 1=MCA::UMC::MCA_CONFIG_UMC[DeferredIntType] controls the type of interrupt generated on a deferred error. Deferred errors are supported in this bank only if MCA::UMC::MCA_CONFIG_UMC[DeferredErrorLoggingSupported]=1.				
4:3	Reserved.				
2	DeferredErrorLoggingSupported . Read-only. Reset: 1. 1=Deferred errors are supported in this MCA bank, and MCA::UMC::MCA_CONFIG_UMC[LogDeferredInMcaStat] controls the logging behavior of these errors. MCA::UMC::MCA_DESTAT_UMC and MCA::UMC::MCA_DEADDR_UMC are supported in this MCA bank. 0=Deferred errors are not supported in this bank.				
1	Reserved.				
0	McaX. Read-only. Reset: 1. 1=This bank provides Machine Check Architecture Extensions. Up to 4 additional MISC registers (MISC1-MISC4) are supported. MCA::UMC::MCA_MISC0_UMC[BlkPtr] indicates the presence of the additional MISC registers, but is not used to determine their MSR numbers. Deferred error interrupt type is specifiable by MCA bank. MCA::UMC::MCA_STATUS_UMC[TCC] is present.				

MSRC000 2[0F...10]5 [UMC IP Identification] (MCA::UMC::MCA IPID UMC)

WISIX	2000_2[0110]5 [ONG II Identification] (MC/IOMGMC/I_II ID_6MG)			
Reset:	:: 0000_0096_0000_0000h.			
The M	The MCA::UMC::MCA_IPID_UMC register is used by software to determine what IP type and revision is associated			
with the	with the MCA bank.			
_instUM	stUMC_umc0_aliasMSR; MSRC000_20F5			
_instUM	tUMC_umc1_aliasMSR; MSRC000_2105			
Bits	Description			
63:48	McaType . Read-only. Reset: 0000h. The McaType of the MCA bank within this IP.			
47:44	Reserved.			
43:32	HardwareID . Read-only. Reset: 096h. The Hardware ID of the IP associated with this MCA bank.			
31:0	InstanceId . Read-write. Reset: 0000_0000h. The instance ID of this IP. This is initialized to a unique ID per			
	instance of this register.			

MSRC000 2[0F...10]6 [UMC Machine Check Syndrome] (MCA::UMC::MCA SYND UMC)

	Marcolog[ormalogo [orac materials of the orac of the
Read-write, Volatile. Reset: Cold, 0000_0000_0000h.	
	Logs physical location information associated with error in MCA::UMC::MCA_STATUS_UMC Thread 0
	_instUMC_umc0_aliasMSR; MSRC000_20F6
	_instUMC_umc1_aliasMSR; MSRC000_2106

Bits	Description		
63:48	Reserved.		
47:32	Syndrome . Read-write, Volatile. Reset: Cold,0000h. Contains the syndrome, if any, associated with the error logged in MCA::UMC::MCA_STATUS_UMC. The low-order bit of the syndrome is stored in bit 0, and the		
	syndrome has a length specified by MCA::UMC::MCA_SYND_UMC[Length]. The Syndrome field is only valid		
	when MCA::UMC::MCA_SYND_UMC[Length] is not 0.		
31:27	Reserved.		
26:24	ErrorPriority . Read-write, Volatile. Reset: Cold,0h. Encodes the priority of the error logged in		
	MCA::UMC::MCA_SYND_UMC. 3'b000 = No error; 3'b001 = Reserved; 3'b010 = Corrected Error; 3'b011 =		
	Deferred Error; 3'b100 = Uncorrected Error; 3'b101 = Fatal Error; all others reserved.		
23:18	Length . Read-write, Volatile. Reset: Cold, 00h. Specifies the length in bits of the syndrome contained in		
	MCA::UMC::MCA_SYND_UMC[Syndrome]. A value of 0 indicates that there is no valid syndrome in		
	MCA::UMC::MCA_SYND_UMC. For example, a syndrome length of 9 means that		
	MCA::UMC::MCA_SYND_UMC[Syndrome] bits [8:0] contains a valid syndrome.		
17:0	ErrorInformation . Read-write, Volatile. Reset: Cold, 0_0000h. Contains error-specific information about the		
	location of the error. Decoding is available in Table 63 [MCA_SYND_UMC Register].		

Table 63: MCA_SYND_UMC Register

Error Type	Bits	Description
DramEccErr	[17:16]	Reserved
	[15]	Software-Managed Bad Symbol ID Error
	[14]	Reserved
	[13:8]	Symbol. Only contains valid information if ErrorPriority indicates a corrected error.
	[7]	Reserved
	[6:4]	Cid. Specifies the rank multiply ID for supported DIMMs.
	[3]	Reserved
	[2:0]	Chip Select
WriteDataPoisonErr	[17:0]	Reserved
SdpParityErr	[17:0]	Reserved
ApbErr	[17:0]	Reserved
AddressCommandParityErr	[17:0]	Reserved
WriteDataCrcErr	[17:0]	Reserved

MSRC000 2[0F...10]8 [UMC Machine Check Deferred Error Status] (MCA::UMC::MCA DESTAT UMC)

MSRC	MSRC000_2[0F10]8 [UMC Machine Check Deterred Error Status] (MCA::UMC::MCA_DESTAT_UMC)		
Read-	Read-write, Volatile. Reset: Cold, 0000_0000_0000h.		
Holds	Holds status information for the first deferred error seen in this bank.		
_instUM	C_umc0_aliasMSR; MSRC000_20F8		
_instUM	_instUMC_umc1_aliasMSR; MSRC000_2108		
Bits	Description		
63	Val . Read-write, Volatile. Reset: Cold, 0. 1=A valid error has been detected (whether it is enabled or not).		
62	Overflow . Read-write, Volatile. Reset: Cold, 0. 1=An error was detected while the valid bit (Val) was set; at least		
	one error was not logged. Overflow is set independently of whether the existing error is overwritten. (See the		
	section on overwrite priorities.)		
61:59	Reserved.		
58	AddrV . Read-write, Volatile. Reset: Cold, 0. 1=MCA::UMC::MCA_DEADDR_UMC contains address		
	information associated with the error.		
57:54	Reserved.		
53	SyndV . Read-write, Volatile. Reset: Cold, 0. 1=This error logged information in		
	MCA::UMC::MCA_SYND_UMC. If MCA::UMC::MCA_SYND_UMC[ErrorPriority] is the same as the priority		

	of the error in MCA::UMC::MCA_STATUS_UMC, then the information in MCA::UMC::MCA_SYND_UMC is		
	associated with the error in MCA::UMC::MCA_DESTAT_UMC.		
52:45	Reserved.		
44	Deferred . Read-write, Volatile. Reset: Cold, 0. 1=A deferred error was created. A deferred error is the result of an		
	uncorrectable data error which did not immediately cause a processor exception; poison is created and an		
	exception is deferred until the poison data is consumed.		
43:0	Reserved.		

MSRC000_2[0F...10]9 [UMC Deferred Error Address] (MCA::UMC::MCA_DEADDR_UMC)

Read-write, Volatile. Reset: Cold,0000_0000_0000_0000h.

MCA::UMC::MCA_DEADDR_UMC[LSB].

The MCA::UMC::MCA_DEADDR_UMC register stores the address associated with the error in

MCA::UMC::MCA_DESTAT_UMC. The register is only meaningful if MCA::UMC::MCA_DESTAT_UMC[Val]=1 and MCA::UMC::MCA_DESTAT_UMC[AddrV]=1. The lowest valid bit of the address is defined by

MCA::UMC::MCA_DEADDR_UMC[LSB].

_instUMC_umc0_aliasMSR; MSRC000_20F9

_instUMC_umc1_aliasMSR; MSRC000_2109			
Description			
Reserved.			
LSB . Read-write, Volatile. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in			
MCA::UMC::MCA_DEADDR_UMC[ErrorAddr]. A value of 0 indicates that			
MCA::UMC::MCA_DEADDR_UMC[55:0] contains a valid byte address. A value of 6 indicates that			
MCA::UMC::MCA_DEADDR_UMC[55:6] contains a valid cache line address and that			
MCA::UMC::MCA_DEADDR_UMC[5:0] are not part of the address and should be ignored by error handling			
software. A value of 12 indicates that MCA::UMC::MCA_DEADDR_UMC[55:12] contain a valid 4KB memory			
page and that MCA::UMC::MCA_DEADDR_UMC[11:0] should be ignored by error handling software.			
ErrorAddr . Read-write, Volatile. Reset: Cold,00_0000_0000_0000h. Contains the address, if any, associated with			
the error logged in MCA::UMC::MCA_DESTAT_UMC. The lowest-order valid bit of the address is specified in			

MSRO	C000_2[0F10]A [UMC Machine Check Miscellaneous 1] (MCA::UMC::MCA_MISC1_UMC)	
Read-v	write.	
Log m	iscellaneous information associated with errors, as defined by each error type.	
	C_umc0_aliasMSR; MSRC000_20FA	
	C_umc1_aliasMSR; MSRC000_210A	
Bits	Description	
63	Valid . Read-write. Reset: 1. 1=A valid CntP field is present in this register.	
62	CntP . Read-write. Reset: 1. 1=A valid threshold counter is present.	
61	Locked . Read-write. Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this	
	register is not available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI.	
60	IntP . Read-write. Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and	
	interrupt generation are not supported.	
59:52	Reserved.	
51	CntEn. Read-write. Reset: 0. 1=Count thresholding errors.	
50:49	ThresholdIntType . Read-write. Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set. 00b =	
	No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]) to all cores. 10b	
	= SMI trigger event. 11b = Reserved.	
48	Ovrflw . Read-write. Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh; also set by	
	hardware if ErrCnt is initialized to FFFh and transitions from FFFh to 000h. When this field is set, ErrCnt no	
	longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is generated.	
47:44	Reserved.	
43:32	ErrCnt . Read-write. Reset: Cold,000h. This is written by software to set the starting value of the error counter.	
	This is incremented by hardware when errors are logged. When this counter overflows, it stays at FFFh (no	

	rollover). The threshold value, written by software, is (FFFh - the desired error count (the number of errors
	necessary in order for an interrupt to be taken)); the desired error count of 0 (a write value of FFFh) is not
	supported.
31:24	BlkPtr . Read-write. Reset: 01h. 00h=Extended MISC MSR block is not valid. 01h=Extended MSR block is valid.
23:0	Reserved.

MSR	MSRC001_04[0F10] [UMC Machine Check Control Mask] (MCA::UMC::MCA_CTL_MASK_UMC)		
Read-	Read-write. Reset: 0000_0000_0000_0000h.		
Inhibit	detection of an error source.		
_instUM	C_umc0_aliasMSR; MSRC001_040F		
_instUM	C_umc1_aliasMSR; MSRC001_0410		
Bits	Description		
63:6	Reserved.		
5	WriteDataCrcErr . Read-write. Reset: 0. Write data CRC error. A write data CRC error on the DRAM data bus.		
4	AddressCommandParityErr . Read-write. Reset: 0. Address/command parity error. A parity error on the DRAM		
	address/command bus.		
3	ApbErr . Read-write. Reset: 0. Advanced peripheral bus error. An error on the advanced peripheral bus.		
2	SdpParityErr . Read-write. Reset: 0. SDP parity error. A parity error on write data from the data fabric.		
1	WriteDataPoisonErr. Read-write. Reset: 0. Data poison error.		
0	DramEccErr . Read-write. Reset: 0. DRAM ECC error. An ECC error on a DRAM read.		

3.2.5.11 Parameter Block

MSR0000_044CMSRC000_2130 [PB Machine Check Control] (MCA::PB::MCA_CTL_PB)		
Read-write. Reset: 0000_0000_0000_0000h.		
0=Disables error reporting for the corresponding error. 1=Enables error reporting via machine check exception for the		
corresponding error. The MCA::PB::MCA_CTL_PB register must be enabled by the corresponding enable bit in		
Core::X86::Msr::MCG_CTL. Does not affect error detection, correction, or logging.		
_instPB_aliasMSRLEGACY; MSR0000_044C		
_instPB_aliasMSR; MSRC000_2130		
Description		
63:1 Reserved.		
0 EccError . Read-write. Reset: 0. An ECC error in the Parameter Block RAM array.		

MSR0000_044DMSRC000_2131 [PB Machine Check Status] (MCA::PB::MCA_STATUS_PB)			
Reset:	Reset: Cold,0000_0000_0000_0000h.		
Logs in	Logs information associated with errors.		
instPB	aliasMSRLEGACY; MSR0000_044D		
instPB	aliasMSR; MSRC000_2131		
Bits	Description		
63	Val . Reset: Cold,0. 1=A valid error has been detected. This bit should be cleared by software after the register has		
	been read.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
62	Overflow . Reset: Cold,0. 1=An error was detected while the valid bit (Val) was set; at least one error was not		
	logged. Overflow is set independently of whether the existing error is overwritten. See 3.1.3 [Machine Check		
	Errors].		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
61	UC. Reset: Cold,0. 1=The error was not corrected by hardware.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.		
60	En . Reset: Cold,0. 1=MCA error reporting is enabled for this error, as indicated by the corresponding bit in		
	MCA::PB::MCA_CTL_PB. This bit is a copy of bit in MCA::PB::MCA_CTL_PB for this error.		

	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.	
MiscV. Reset: Cold,0. 1=Valid thresholding in MCA::PB::MCA_MISCO_PB.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.	
58	AddrV . Reset: Cold,0. 1=MCA::PB::MCA_ADDR_PB contains address information associated with the error.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
57	PCC . Reset: Cold,0. 1=Hardware context held by the processor may have been corrupted. Continued operation of	
	the system may have unpredictable results. The error is not recoverable or survivable, and the system should be	
	reinitialized.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.	
56	ErrCoreIdVal. Reset: Cold,0. 1=The ErrCoreId field is valid.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.	
55	TCC. Reset: Cold,0. 0=The thread which consumed the error can be restarted reliably at the instruction pointer	
	address pushed onto the exception handler stack if any uncorrected error has been corrected by software. 1=The	
	thread which consumed the error is not restartable and must be terminated. Only meaningful when	
	MCA::PB::MCA_STATUS_PB[PCC]=0.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.	
54	Reserved.	
53	SyndV . Reset: Cold,0. 1=This error logged information in MCA::PB::MCA_SYND_PB. If	
	MCA::PB::MCA_SYND_PB[ErrorPriority] is the same as the priority of the error in	
	MCA::PB::MCA_STATUS_PB, then the information in MCA::PB::MCA_SYND_PB is associated with the error	
	in MCA::PB::MCA_STATUS_PB.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn]? Read-write: Read,Write-0-only,Error-on-write-1.	
52:47	Reserved.	
46	CECC . Reset: Cold,0. 1=The error was a correctable ECC error according to the restrictions of the ECC	
	algorithm. UC indicates whether the error was actually corrected by the processor.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
45	UECC . Reset: Cold,0. 1=The error was an uncorrectable ECC error according to the restrictions of the ECC	
	algorithm. UC indicates whether the error was actually corrected by the processor.	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
44	Deferred . Reset: Cold,0. 1=A deferred error was created. A deferred error is the result of an uncorrectable data	
	error which did not immediately cause a processor exception; an exception is deferred until the erroneous data is	
	consumed.	
42	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
43	Poison . Reset: Cold,0. 1=The error was the result of attempting to consume poisoned data.	
42.20	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
	Reserved.	
37:32	ErrCoreId. Reset: Cold,00h. When ErrCoreIdVal=1 this field indicates which core within the processor is	
	associated with the error; Otherwise this field is reserved.	
21.22	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
	Reserved.	
21:16	ErrorCodeExt. Reset: Cold,00h. Extended Error Code. This field is used to identify the error type for root cause	
	analysis. This field indicates which bit position in MCA::PB::MCA_CTL_PB enables error reporting for the	
	logged error. Aggest Type, Corey V9C: Marri IV/CD[McStatus]A/vEn] 2 Dead verito e Dead Write 0 only Error on verito 1	
15.0	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	
15:0	ErrorCode . Reset: Cold,0000h. Error code for this error. See 3.1.3.3 [Error Codes] for details on decoding this field	
	field. Aggregation of Coron VOC (Mary IIIV/CD[MeStatus M/Fer] 2 Dead variety a Dead Write 0 only Evroy on variety 1	
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read,Write-0-only,Error-on-write-1.	

Table 64: MCA_STATUS_PB[ErrorCodeExt] Decode

Error Type	Bits	Description
EccError	[6:0]	0x0

MSR0000 044E...MSRC000 2132 [PB Machine Check Address] (MCA::PB::MCA ADDR PB) Read-only, Reset; Cold,0000 0000 0000 0000h. MCA::PB::MCA_ADDR_PB stores an address and other information associated with the error in MCA::PB::MCA_STATUS_PB. The register is only meaningful if MCA::PB::MCA_STATUS_PB[Val]=1 and MCA::PB::MCA STATUS PB[AddrV]=1. instPB_aliasMSRLEGACY; MSR0000_044E instPB_aliasMSR; MSRC000_2132 Bits Description 63:62 Reserved. 61:56 **LSB**. Read-only. Reset: Cold,00h. Specifies the least significant valid bit of the address contained in MCA::PB::MCA_ADDR_PB[ErrorAddr]. A value of 0 indicates that MCA::PB::MCA_ADDR_PB[55:0] contains a valid byte address. A value of 6 indicates that MCA::PB::MCA ADDR PB[55:6] contains a valid cache line address and that MCA::PB::MCA_ADDR_PB[5:0] are not part of the address and should be ignored by error handling software. A value of 12 indicates that MCA::PB::MCA ADDR PB[55:12] contain a valid 4KB memory page and that MCA::PB::MCA_ADDR_PB[11:0] should be ignored by error handling software. **ErrorAddr**. Read-only. Reset: Cold,00 0000 0000 0000h. Contains the address, if any, associated with the error 55:0 logged in MCA::PB::MCA_STATUS_PB.

Table 65: MCA_ADDR_PB Register

Error Type Bits		Description
EccError	[55:0]	Reserved

MSR0000_044FMSRC000_2133 [PB Machine Check Miscellaneous 0] (MCA::PB::MCA_MISC0_PB)			
	Log miscellaneous information associated with errorsinstPB_aliasMSRLEGACY; MSR0000_044F		
	aliasMSR; MSRC000_2133		
	Description		
63	Valid . Reset: 1. 1=A valid CntP field is present in this register.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.		
62	CntP . Reset: 1. 1=A valid threshold counter is present.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.		
61	Locked . Reset: 0. 1=Writes to this register are ignored. This bit is set by BIOS to indicate that this register is not		
	available for OS use. BIOS should set this bit if ThresholdIntType is set to SMI.		
	AccessType: Core::X86::Msr::HWCR[McStatusWrEn] ? Read-write : Read-only.		
60	IntP . Reset: 1. 1=ThresholdIntType can be used to generate interrupts. 0=ThresholdIntType and interrupt		
	generation are not supported.		
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::PB::MCA_MISC0_PB[Locked]) ? Read-write :		
	Read-only.		
59:56	Reserved.		
55:52	LvtOffset . Reset: 0h. One per die. For error thresholding interrupts, specifies the address of the LVT entry in the		
	APIC registers as follows: LVT address = (LvtOffset shifted left 4 bits) + 500h (see		
	Core::X86::Apic::ExtendedInterruptLvtEntries).		
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::PB::MCA_MISC0_PB[Locked]) ? Read-write :		
	Read-only.		
51	CntEn . Reset: 0. 1=Count thresholding errors.		
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::PB::MCA_MISC0_PB[Locked]) ? Read-write :		
	Read-only.		
50:49	ThresholdIntType . Reset: Cold,0h. Specifies the type of interrupt signaled when Ovrflw is set and IntP==1. 00b		

	= No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[ThresholdLvtOffset]). 10b = SMI	
	trigger event. 11b = Reserved.	
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::PB::MCA_MISC0_PB[Locked]) ? Read-write :	
	Read-only.	
48 Ovrflw . Reset: Cold,0. Set by hardware when ErrCnt transitions from FFEh to FFFh. When this field is set,		
	ErrCnt no longer increments. When this bit is set, the interrupt selected by the ThresholdIntType field is	
	generated.	
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::PB::MCA_MISC0_PB[Locked]) ? Read-write :	
	Read-only.	
47:44	Reserved.	
43:32 ErrCnt . Reset: Cold,000h. This is written by software to set the starting value of the error counter. This is		
	incremented by hardware when errors are logged. When this counter overflows, it stays at FFFh (no rollover). The	
	threshold value, written by software, is (FFFh - the desired error count (the number of errors necessary in order	
	for an interrupt to be taken)); the desired error count of 0 (a write value of FFFh) is not supported.	
	AccessType: (Core::X86::Msr::HWCR[McStatusWrEn] !MCA::PB::MCA_MISC0_PB[Locked]) ? Read-write :	
	Read-only.	
31:24	BlkPtr . Read-write. Reset: 01h. 00h=Extended MISC MSR block is not valid. 01h=Extended MSR block is valid.	

MSRC000_2134 [PB Machine Check Configuration] (MCA::PB::MCA_CONFIG_PB)

	2000_2104 [1 D Muchine Check Comiguration] (MCM1 DMCM_COMITG_1 D)		
Reset:	eset: 0000_0000_0000_0021h.		
	trols configuration of the associated machine check bank.		
	aliasMSR; MSRC000_2134		
Bits	Description		
63:39	Reserved.		
	DeferredIntType . Read-write. Reset: 0h. Specifies the type of interrupt signaled when a deferred error is logged. 00b = No interrupt. 01b = APIC based interrupt (see Core::X86::Msr::McaIntrCfg[DeferredLvtOffset]). 10b = SMI trigger event. 11b = Reserved.		
36:33	Reserved.		
32	McaXEnable . Read-write. Reset: 0. Init: BIOS,1. Check: 1. 1=Software has acknowledged support for the MCAX feature set. 0=Software has not acknowledged support for the MCAX feature set. All uncorrected and fatal errors will cause an ErrorEvent packet to be generated. Deferred error interrupts are configured via Core::X86::Msr::McaIntrCfg.		
31:6	Reserved.		
5	DeferredIntTypeSupported . Read-only. Reset: 1. 1=MCA::PB::MCA_CONFIG_PB[DeferredIntType] controls the type of interrupt generated on a deferred error. Deferred errors are supported in this bank only if MCA::PB::MCA_CONFIG_PB[DeferredErrorLoggingSupported]=1.		
4:3	Reserved.		
2	DeferredErrorLoggingSupported . Read-only. Reset: 0. 1=Deferred errors are supported in this MCA bank, and the LogDeferredInMcaStat field in this register controls the logging behavior of these errors. MCA_DESTAT and MCA_DEADDR are supported in this MCA bank. 0=Deferred errors are not supported in this bank.		
1	Reserved.		
0	McaX . Read-only. Reset: 1. 1=This bank provides Machine Check Architecture Extensions. Up to 4 additional MISC registers (MISC1-MISC4) are supported. MCA::PB::MCA_MISC0_PB[BlkPtr] indicates the presence of the additional MISC registers, but is not used to determine their MSR numbers. Deferred error interrupt type is specifiable by MCA bank. MCA::PB::MCA_STATUS_PB[TCC] is present.		

MSRC000_2135 [PB IP Identification] (MCA::PB::MCA_IPID_PB)

Reset: 0000_0005_0000_0000h.

The MCA::PB::MCA_IPID_PB register is used by software to determine what IP type and revision is associated with the MCA bank.

instPB	nstPB_aliasMSR; MSRC000_2135	
Bits	Description Description	
63:48	McaType . Read-only. Reset: 0000h. The McaType of the MCA bank within this IP.	
47:44	Reserved.	
43:32	HardwareID. Read-only. Reset: 005h. The Hardware ID of the IP associated with this MCA bank.	
31:0	InstanceId . Read-write. Reset: 0000_0000h. The instance ID of this IP. This is initialized to a unique ID per	
	instance of this register.	

MSRC000 2136 [PB Machine Check Syndrome] (MCA::PB::MCA SYND PB)

MSR	C000_2136 [PB Machine Check Syndrome] (MCA::PB::MCA_SYND_PB)		
Read-	Read-write, Volatile. Reset: Cold, 0000_0000_0000h.		
Logs p	physical location information associated with error in MCA::PB::MCA_STATUS_PB Thread 0		
instPB	_aliasMSR; MSRC000_2136		
Bits	Bits Description		
63:33	Reserved.		
32	Syndrome . Read-write, Volatile. Reset: Cold, 0. Contains the syndrome, if any, associated with the error logged in		
	MCA::PB::MCA_STATUS_PB. The low-order bit of the syndrome is stored in bit 0, and the syndrome has a		
	length specified by MCA::PB::MCA_SYND_PB[Length]. The Syndrome field is only valid when		
	MCA::PB::MCA_SYND_PB[Length] is not 0.		
31:27	Reserved.		
26:24	6:24 ErrorPriority . Read-write, Volatile. Reset: Cold,0h. Encodes the priority of the error logged in		
	MCA::PB::MCA_SYND_PB. 3'b000 = No error; 3'b001 = Reserved; 3'b010 = Corrected Error; 3'b011 =		
	Deferred Error; 3'b100 = Uncorrected Error; 3'b101 = Fatal Error; all others reserved.		
23:18	Length . Read-write, Volatile. Reset: Cold, 00h. Specifies the length in bits of the syndrome contained in		
	MCA::PB::MCA_SYND_PB[Syndrome]. A value of 0 indicates that there is no valid syndrome in		
	MCA::PB::MCA_SYND_PB. For example, a syndrome length of 9 means that		
	MCA::PB::MCA_SYND_PB[Syndrome] bits [8:0] contains a valid syndrome.		
17:0	ErrorInformation . Read-write, Volatile. Reset: Cold, 0_0000h. Contains error-specific information about the		
	location of the error. Decoding is available in Table 66 [MCA_SYND_PB Register].		

Table 66: MCA_SYND_PB Register

Error Type	Bits	Description
EccError	[17:0]	Reserved

MSRC001_0413 [PB Machine Check Control Mask] (MCA::PB::MCA_CTL_MASK_PB)

Read-write. Reset: 0000_0000_0000_0000h.		
Inhibit detection of an error source.		
instPB	_instPB_aliasMSR; MSRC001_0413	
Bits	Description	
63:1	Reserved.	
0	EccError . Read-write. Reset: 0. An ECC error in the Parameter Block RAM array.	

4 System Management Unit (SMU)

4.1 SMU Registers

The system management unit (SMU) is a subcomponent of the processor that is responsible for a variety of system and power management tasks during boot and runtime.

4.1.1 MP Configuration Unit Registers

SEVx00010580 [SEV CmdResp mailbox register.] (MP::MP0CRU::SEVCmdResp)			
	Read-write. Reset: 0000_0000h.		
	SEVx00010580; SEV=NBIFEPFNCFG::BASE_ADDR_3_instNBIF0_func2_aliasHOST[BASE_ADDR]		
	Bits	Description	
	31:0	CmdMailbox . Read-write. Reset: 0000_0000h. SEV Cmd Response mailbox register. See: AMD SEV API	
		Specification (PID 55766) for details.	

SEVx	SEVx000105E0 [SEV CmdBufAddr_Lo mailbox register.] (MP::MP0CRU::SEVCmdBufLo)	
Read-write. Reset: 0000_0000h.		
SEVx000105E0; SEV=NBIFEPFNCFG::BASE_ADDR_3_instNBIF0_func2_aliasHOST[BASE_ADDR]		
Bits	Description	
31:0	RespMailboxLo . Read-write. Reset: 0000_0000h. SEV Command buffer address low mailbox register. See:	
	AMD SEV API Specification (PID 55766) for details.	

SEVx000105E4 [SEV CmdBufAddr_Hi mailbox register.] (MP::MP0CRU::SEVCmdBufHi)

Read-write. Reset: 0000_0000h.		
SEVx00	SEVx000105E4; SEV=NBIFEPFNCFG::BASE_ADDR_3_instNBIF0_func2_aliasHOST[BASE_ADDR]	
Bits	Description Description	
31:0	RespMailboxHi . Read-write. Reset: 0000_0000h. SEV Command buffer address high mailbox register. See:	
	AMD SEV API Specification (PID 55766) for details.	

4.2 Thermal (THM)

The thermal block contains all the features related to temperature sensing, control, and reporting. It includes:

- Temperature collection and calculation using TCON (digital control logic) and TMON and Remote Diode Interface macros.
- Fan speed control for off-chip fans.
- Temperature reporting through the SMBUS interface.

Table 67: List of Acronyms and Terms used in Thermal (THM)

Term	Definition
TMON	Thermal Monitor

4.2.1 Registers

SMUTHMx00000000 (SMU::THM::THM_TCON_CUR_TMP)
Reset: 0000_0000h.
Provides the current control temperature (T ctl) after the slew-rate controls have been applied

_aliasSM	_aliasSMN; SMUTHMx00000000; SMUTHM=0005_9800h	
Bits	Description	
31:21	CUR_TEMP . Reset: 000h. Provides current control temperature.	
	AccessType: (SMU::THM::THM_TCON_CUR_TMP[CUR_TEMP_TJ_SEL] == 3) ? Read-write : Read-only.	
20	Reserved.	
19	CUR_TEMP_RANGE_SEL. Reset: 0. 0=Report on 0C to 225C scale range. 1=Report on -49C to 206C scale	
	range.	
	AccessType: (SMU::THM::THM_TCON_CUR_TMP[CUR_TEMP_TJ_SEL] == 3) ? Read-write : Read-only.	
18:0	Reserved.	

5 Advanced Platform Management Link (APML)

5.1 Overview

The Advanced Platform Management Link (APML) is a SMBus v2.0 compatible 2-wire processor slave interface. APML is also referred as the sideband interface (SBI).

APML is used to communicate with the SBI Temperature Sensor Interface (SB-TSI). For related specifications, see 1.2 [Reference Documents].

5.1.1 Definitions

Table 68: APML Definitions

Term	Description
ARA	Alert response address.
ARP	Address Resolution Protocol
EC	Embedded Controller.
KBC	Keyboard Controller.
Master or SMBus	The device that initiates and terminates all communication and drives the clock, SCL.
Master	
PEC	Packet error code.
POR	Power on reset.
RTS	Remote temperature sensor, typical examples are ADM1032, LM99, MAX6657, EMC1002.
SBI	Sideband interface.
Slave or SMBus slave	The slave cannot initiate SMBus communication and cannot drive the clock but can drive the
	data signal SDA and the alert signal ALERT_L.
TSI	Temperature sensor interface.

5.2 SBI Bus Characteristics

The SBI largely follows SMBus v2.0. This section describes the exceptions.

5.2.1 SMBus Protocol Support

The SBI follows SMBus protocol except:

- The processor does not implement SMBus master functionality.
- The SBI implements the Send Byte/Receive Byte, Read Byte/Write Byte. Block Read/Block Write and
- Block Write-Block Read Process Call SMBus protocols. The Send Byte/Receive Byte SMBus protocol is only supported by SB-TSI.
- Packet error checking (PEC) is not supported by SB-TSI.
- Address Resolution Protocol (ARP) is not implemented.
- Cumulative clock extensions are not enforced.

5.2.2 I2C Support

The processor supports higher I2C-defined speeds as specified in the Physical Layer Characteristics section. The

processor supports the I2C master code transmission in order to reach the high-speed bus mode. Multiple SBI commands may be sent within a single high-speed mode session. Ten-bit addressing is not supported.

5.3 SBI Processor Information

5.3.1 SBI Processor Pins

Up to six processor pins are used for SBI support: two for data transfer, three for address determination and one for an interrupt output. Of the three address pins, one bit is socket_id used to determine which package is addressed. These pins do not have changeable pinstrap. The Serial Interface Clock (SIC) and Serial Interface Data (SID) pins function as the SMBus clock and data pins respectively. The SMBus alert pin (ALERT_L) is used to signal interrupts to the SMBus master.

5.3.1.1 Physical Layer Characteristics

The SIC and SID pins differ from the SMBus specification with regard to voltage. System board voltage translators are necessary to convert the SIC and SID pin voltage levels to that of the SMBus specification. SBI supports frequencies of 100 KHz, 400 KHz over SIC.

5.3.2 Processor States

SBI responds to SMBus traffic except when PWROK is de-asserted (and for a brief period after it is de-asserted).

5.4 SBI Protocols

5.4.1 SBI Modified Block Write-Block Read Process Call

SBI uses a modified SMBus PEC-optional Block Write-Block Read Process Call protocol. The change from the SMBus protocol is support for an optional intermediate PEC byte and Ack after the Ack for Data Byte M. The PEC byte after Data Byte N covers all previous bytes excluding the first PEC byte. Figure below shows the transmission protocol. Each byte in the protocol is sent with the most significant bit first (bit[7]). The master may reset the bus by holding the clock low for 25ms as specified by the SMBus Specification.

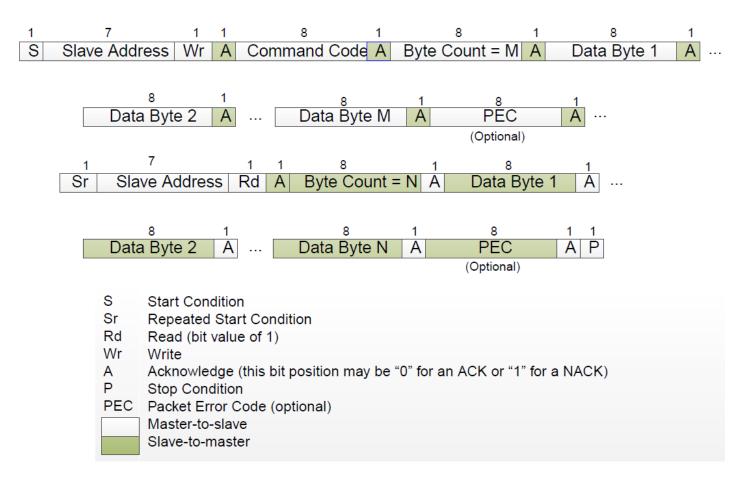


Figure 19: SBI Transmission Protocol

5.4.2 SBI Error Detection and Recovery

This section describes the various error detection and recovery methods that can be used on the SBI bus. The important item in providing a high reliability SBI connection is the ability to detect when an error occurs and to gracefully recover from that error. When the SBI connections are noisy, messages can become garbled which, in turn, may cause undefined behavior on the SBI bus. The most common noise sources are cross-talk and clock skew. Cross-talk results when the SBI connections are routed too close to other signal carrying lines. Clock skew is usually a result of higher than expected capacitance, between the SBI signals (clock and / or data) and ground, which causes the master and slave devices to disagree on when data should be stable and when it is allowed to be changing.

5.4.2.1 Error Detection

SBI provides several methods of error detection: protocol ACK/NAK, packet error correction (PEC) fields, and timeouts. The ACK/NAK mechanism is always active in SBI, but the PEC and timeouts are optional.

5.4.2.1.1 ACK/NAK Mechanism

After each byte of an SBI message, the device receiving that byte must either acknowledge (ACK) that it received the byte correctly, or deny (NAK) that the byte was correctly received. This is most easily seen in the case of the address bytes which follow a START (or REPEATED START) sequence, but can be used anywhere in the message. In the case of an address byte, if a slave device recognizes the address, it will respond with an ACK and await the rest of the message. If a slave device does not recognize the message, it will respond with a NAK and ignore the rest of the message.

5.4.2.1.2 Bus Timeouts

Bus timeouts should be enabled to prevent a device waiting indefinitely on a message that may not be coming. Some timeouts are used to prevent the SBI bus from waiting for a response from a CPU that is in a power-saving idle mode. Other timeouts are used to allow the slave device to recognize that the bus master is attempting to reset all of the devices on the SBI bus. Either way, when a device recognizes a timeout, it should abort its current message transfer.

5.4.2.2 Error Recovery

The simplest form of error recovery is a retry. When the bus master detects an unexpected NAK, it should abort the current transfer and retry the message sequence. In some cases, however, a message can be so garbled that a simple retry is insufficient. This can occur, if there are multiple devices on the bus and a garbled address byte has caused the wrong slave device to be selected. That slave device may even continue to transmit during the retry. In those cases, it will be necessary to force a reset of all devices on the SBI bus, before retrying the message transfer.

5.4.2.2.1 SBI Bus Reset

The bus master can hold the clock low for a period longer the standard timeout in order to force slave devices off the bus (see section 3.1.1.3 of the SMBUS Management Guide). All SBI slave devices are required to reset their communications if another device holds the clock line low for longer than TTimeout, min (25 milliseconds). The devices are required to complete their reset within TTimeout, max (35 milliseconds). SBI bus masters should use the extended timeout to force a reset of all slave devices if a simple retry does not remove an error condition.

5.5 SBI Physical Interface

5.5.1 SBI SMBus Address

The SMBus address is really 7 bits. Some vendors and the SMBus specification show the address as 8 bits, left justified with the R/W bit as a write (0) making bit 0. Some vendors use only the 7 bits to describe the address.

5.5.2 SBI Bus Timing

SBI supports 100KHz standard-mode and 400 KHz fast-mode I2C operation. Refer to the standard-mode and fast-mode timing parameters in the I2C specification.

5.5.3 Pass-FET Option

There is a possibility that a device with a standard SMBus interface will not be able to directly interface to SBI. Therefore, pass FETs must be used to create two SkMBus segments, see the following figure.

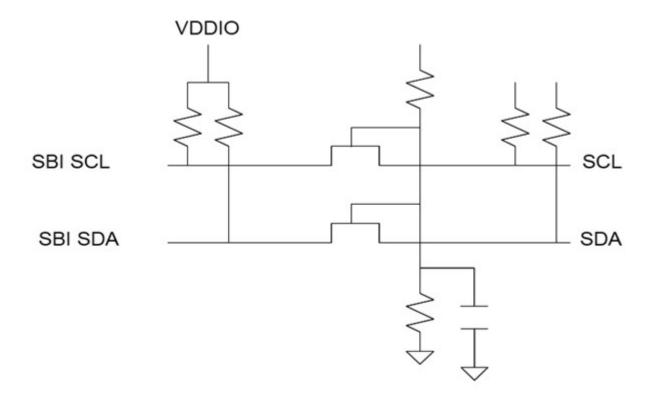


Figure 20: Pass FET Implementation

Notes:

- SCL and SDA pull-up resistors are the normal pull-up resistors for a SMBus segment, and are not part of the translation circuit. They are shown for completeness.
- The gates of the FETs are tied to a voltage approximately Vgs above the lower rail voltage. A resistive divider is shown, but a convenient power rail will also work.
- Care must be taken to install the FETs so that any body diode does not conduct.
- The key requirement is the high side drive low enough to register as low on the low side (High side Vol < Vil on low side)

6 SB Temperature Sensor Interface (SB-TSI)

6.1 Overview

The SBI temperature sensor interface (SB-TSI) is an emulation of the software and physical interface of a typical 8-pin remote temperature sensor (RTS), see Figure 21 [RTS Thermal Management Example]. The goal is to resemble a typical RTS so that KBC or BMC firmware requires minimal changes for future AMD products, see Figure 22 [SB-TSI Thermal Management Example]. SB-TSI supports the SMBus protocols that typical RTS supports.

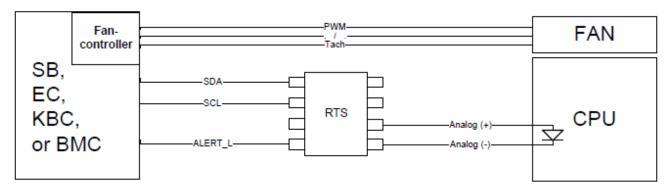


Figure 21: RTS Thermal Management Example

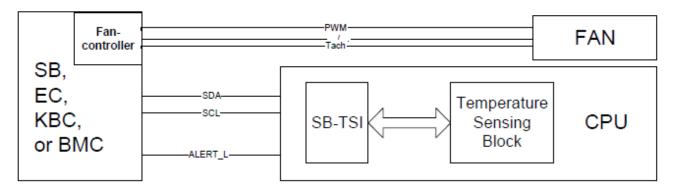


Figure 22: SB-TSI Thermal Management Example

Refer to the following external sources for additional information.

- System Management Bus (SMBus) specification. See docSMB.
- I2C-bus Specification and User Manual, Revision 03. See docI2C.

6.1.1 Definitions

Table 69: SB-TSI Definitions

Term	Description
BMC	Base management controller.
TSM	Temperature sensor macro.
SB-TSI	Sideband Internal Temperature Sensor Interface. See APML.

6.2 SB-TSI Protocol

The SB-TSI largely follows SMBus v2.0 specification except:

- The combined-format repeated start sequence is not supported in standard-mode and fast-mode. The response of the processor's SB-TSI to the sequence in undefined.
- Only 7-bit SMBus addresses are supported.
- SB-TSI implements the Send/Receive Byte and Read/Write Byte protocols.
- SB-TSI registers can only by written using a write byte command.
- Address Resolution Protocol (ARP) is not supported.
- Packet Error Checking (PEC) is not supported.
- The usage of unsupported protocols may lead to an undefined bus condition.
- To release the bus from an undefined condition and to reset the SB-TSI slave, the bus master must hold the clock low for a duration of time that is longer than Ttimeout.max, as specified for SMBus. The time-out needs to be enabled by SBTSI::TimeoutConfig[TimeoutEn]=1.

6.2.1 SB-TSI Send/Receive Byte Protocol

A SMBus master can read SB-TSI registers by issuing a send byte command with the address of the register to be read as the data byte followed by a receive byte command.

6.2.1.1 SB-TSI Address Pointer

The SB-TSI controller has an internal address pointer that is updated when a register is accessed using a read or write byte command or when a send byte command is received. This address pointer is used to determine the address of the register being read when a receive byte command is processed by the controller.

6.2.2 SB-TSI Read/Write Byte Protocol

An SMBus master can read or write SB-TSI registers by issuing a read or a write byte command with the address of the register to be read or written in the command code field.

6.2.3 Alert Behavior

The ALERT_L pin is asserted if (SBTSI::Status[TempHighAlert] || SBTSI::Status[TempLowAlert]) && ~SBTSI::Config[AlertMask] as shown in Figure 3. The following registers also affect temperature alert behavior.

- SBTSI::Config[AraDis]: Disables ARA response.
- SBTSI::UpdateRate[UpRate]: Specifies rate at which temperature thresholds are checked.
- {SBTSI::HiTempInt[HiTempInt], SBTSI::HiTempDec[HiTempDec]}: Sets high temperature threshold.
- {SBTSI::LoTempInt[LoTempInt], SBTSI::LoTempDec[LoTempDec]}: Sets low temperature threshold.
- SBTSI::AlertThreshold[AlertThr]: Specifies number of consecutive temperature samples to assert an alert.
- SBTSI::AlertConfig[AlertCompEn]: Specifies ALERT L pin to be in latched or comparator mode. Affects ARA.

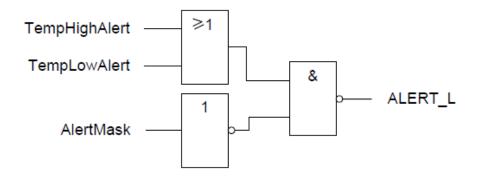


Figure 23: Alert Assertion Diagram

6.2.4 Atomic Read Mechanism

To ensure that the two required reads (integer and decimal) for reading the CPU temperature are always originated from one temperature value, atomic reading procedures are required. SB-TSI offers functions to maintain atomicity between the temperature integer and decimal bytes.

[The SB-TSI Configuration Register] SBTSI::Config[ReadOrder] specifies the order for reading integer and decimal part of the CPU temperature value for atomic CPU temperature reads. If SBTSI::Config[ReadOrder] is 0, then a read of the integer part (SBTSI::CpuTempInt) of the CPU temperature triggers a latch of the decimal part (SBTSI::CpuTempDec) until the next read of the integer part. This latch syncs the decimal part with the integer part. The integer part is continuously updated.

If SBTSI::Config[ReadOrder] is 1, then the read order to ensure atomicity is reversed, i.e. decimal part = first, integer part = second.

If it is not possible to ensure a dedicated read order as described above, the Run/Stop bit ([The SB-TSI Configuration Register] SBTSI::Config[RunStop]) may be used to provide atomicity of reading the CPU temperature. If this bit is 0, the CPU temperature registers are updated continuously. If it is 1, they get frozen and always deliver their last value on read requests.

- Set SBTSI::Config[RunStop].
- Read the integer (SBTSI::CpuTempInt) or the decimal (SBTSI::CpuTempDec) part of the CPU temperature.
- Read the remaining part of the CPU temperature.
- Clear SBTSI::Config[RunStop].

6.2.5 SB-TSI Temperature and Threshold Encodings

SB-TSI CPU temperature readings and limit registers encode the temperature in increments of 0.125 from 0 to 255.875. The high byte represents the integer portion of the temperature from 0 to 255. One increment in the high byte is equivalent to a step of one. The upper three bits of the low byte represent the decimal portion of the temperature. One increment of these bits is equivalent to a step of 0.125.

Table 70: SB-TSI CPU Temperature and Threshold Encoding Examples

Temperature	Temperature High Byte	Temperature Low Byte
	SBTSI::CpuTempInt[CpuTempInt]	SBTSI::CpuTempDec[CpuTempDec]
	SBTSI::HiTempInt[HiTempInt]	SBTSI::HiTempDec[HiTempDec]

	SBTSI::LoTempInt[LoTempInt]	SBTSI::LoTempDec[LoTempDec]
0.000 °C	0000_0000b	0000_0000Ь
1.000 °C	0000_0001b	0000_0000Ь
25.125 °C	0001_1001b	0010_0000b
50.875 °C	0011_0010b	1110_0000b
90.000 °C	0101_1010b	0000_0000b

6.2.6 SB-TSI Temperature Offset Encoding

By default, SBTSI::CpuTempInt and SBTSI::CpuTempDec provide Tctl from the processor. Refer to the BIOS and Kernel Developer's Guide for the processor family for further details on Tctl. The temperature offset registers allow the system to adjust the SB-TSI temperature from Tctl.

The SB-TSI temperature offset registers use a different encoding in order to provide negative temperature values. SBTSI::CpuTempOffInt[CpuTempOffInt] and SBTSI::CpuTempOffDec[CpuTempOffDec] form an 11-bit 2's complement value representing the temperature offset. The high byte encodes the integer portion of the temperature and the upper three bits of the low byte represent the fractional portion of the temperature offset. One increment of these bits is equivalent to a step of 0.125 °C. After reset the offset is always set to 0 °C. Software needs to adjust the offset to the appropriate level.

Table 71: SB-TSI Temperature Offset Encoding Examples

	1 11		
Temperature	Temperature High Byte	Temperature Low Byte	
	SBTSI::CpuTempOffIn	SBTSI::CpuTempOffDe	
	t[CpuTempOffInt]	c[CpuTempOffDec]	
-10.375 °C	1111_0101b	1010_0000b	
-0.250 °C	1111_1111b	1100_0000b	
0.000 °C	0000_0000Ь	0000_0000Ь	
0.875 °C	0000_0000Ь	1110_0000b	
10.000 °C	0000_1010b	0000_0000b	

6.3 SB-TSI Physical Interface

This chapter describes the physical interface of the SB-TSI.

6.3.1 SB-TSI SMBus Address

The SMBus address is really 7 bits. Some vendors and the SMBus specification show the address as 8 bits, left justified with the R/W bit as a write (0) making bit 0. Some vendors use only the 7 bits to describe the address. The addresses can vary with address select pins.

Table 72: SB-TSI Address Encodings

Socket ID	SB-TSI Address
0b	98h for 8 bit or 4Ch for 7 bit.
1b	90h for 8 bit or 48h for 7 bit.

6.3.2 SB-TSI Bus Timing

SB-TSI supports standard-mode (100 kHz) and fast-mode (400 kHz) according to the I2C-bus Specification and User Manual.

6.3.3 SB-TSI Bus Electrical Parameters

SB-TSI conforms to most of the I2C fast-mode electrical parameters. See the Electrical Data Sheet for the processor family for electrical parameters.

6.3.4 Pass-FET Option

The KBC may not have the capability to directly interface to SB-TSI. Pass FETs may be used to create two SMBus segments, see Figure 4.

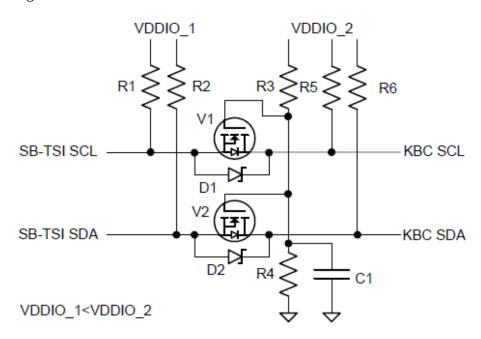


Figure 24: Pass FET Implementation

Notes:

- SCL and SDA pull-up resistors (R5 and R6, respectively) are the normal pull-up resistors for an SMBus segment and are not part of the translation circuit. They are shown for completeness.
- The gates of the FETs are tied to a voltage approximately Vgs above the lower rail voltage. A resistive divider is shown, but a convenient power rail would do nicely.
- Care must be taken to install the FETs so that any body diode does not conduct.
- The key requirement is that the high side drive low enough to register as a low on the low side. (High side Vol < Vil on low side)

6.4 SB-TSI Registers

Reads to unimplemented registers return 00h. Writes to unimplemented registers are discarded.

SBTSIx01 [CPU Integer Temperature] (SBTSI::CpuTempInt)

Read-only.
The CPU temperature is calculated by adding the CPU temperature offset (SBTSI::CpuTempOffInt,
SBTSI::CpuTempOffDec) to the processor control temperature (Tctl). SBTSI::CpuTempInt and SBTSI::CpuTempDec
combine to return the CPU temperature. For the temperature encoding, see 6.2.5 [SB-TSI Temperature and Threshold
Encodings]

Bits	Description
7:0	CpuTempInt : integer CPU temperature value . Read-only. Reset: Cold,XXh. This field returns the integer

portion of the CPU temperature.

SBTSIx02 [SB-TSI Status] (SBTSI::Status)

Read-only, Volatile.

If SBTSI::AlertConfig[AlertCompEn]==0, the temperature alert is latched high until the alert is read. If SBTSI::AlertConfig[AlertCompEn]==1, the alert is cleared when the temperature does not meet the threshold conditions for temperature and number of samples. See 6.2.3 [Alert Behavior].

ioi tei	inperature and number of samples. See 6.2.5 [Alert Benavior].
Bits	Description
7:5	Reserved.
4	TempHighAlert : temperature high alert . Read-only, Volatile. Reset: Cold, X. 1=Indicates that the CPU
	temperature is greater than or equal to the high temperature threshold (SBTSI::HiTempInt, SBTSI::HiTempDec)
	for SBTSI::AlertThreshold[AlertThr] consecutive samples. 0=Indicates that the CPU tempera- ture is less than the
	high temperature threshold (SBTSI::HiTempInt, SBTSI::HiTempDec) for SBTSI::AlertThreshold[AlertThr]
	samples and SBTSI::AlertConfig[AlertCompEn]=1. Hardware will clear this bit when read if
	SBTSI::AlertConfig[AlertCompEn]=0.
3	TempLowAlert : temperature low alert . Read-only, Volatile. Reset: Cold, X. 1=Indicates that the CPU
	temperature is less than or equal to the low temperature threshold (SBTSI::LoTempInt, SBTSI::LoTempDec) for
	SBTSI::AlertThreshold[AlertThr] consecutive samples. 0=Indicates the CPU temperature is greater than the low
	temperature threshold (SBTSI::LoTempInt, SBTSI::LoTempDec) for SBTSI::AlertThreshold[AlertThr] samples
	and SBTSI::AlertConfig[AlertCompEn]=1. Hardware will clear this bit when read if
	SBTSI::AlertConfig[AlertCompEn]=0.
2:0	Reserved.

SBTSIx03 [SB-TSI Configuration] (SBTSI::Config)

Reset: Cold,00h.

The bits in this register are read-only and can be written by writing to the corresponding bits in SBTSI::ConfigWr. See 6.2.3 [Alert Behavior] and 6.2.4 [Atomic Read Mechanism].

Pits Description AlertMask: alert mask. Read-only, Volatile. Reset: Cold, 0. 0=ALERT_L pin enabled. 1=ALERT_L pin disabled and does not assert. IF (SBTSI::Config[AraDis]==0) THEN Read-only; set-by-hardware. ELSE Read-only ENDIF. Hardware sets this bit if SBTSI::Config[AraDis]=0, either SBTSI::Status[TempHighAlert]==1 or SBTSI::Status[TempLowAlert]==1, and a successful ARA is sent.

- RunStop: run stop. Read-only. Reset: Cold,0. 0=Updates to SBTSI::CpuTempInt and SBTSI::CpuTempDec and the alert comparisons are enabled; Alert history counters (specified by SBTSI::AlertThreshold[AlertThr]) and the corresponding timer (specified by SBTSI::UpdateRate[UpRate]) continue to update. 1=Updates to SBTSI::CpuTempInt and SBTSI::CpuTempDec and the alert comparisons are disabled; Alert history counters (specified by SBTSI::AlertThreshold[AlertThr]) and the corresponding timer (specified by SBTSI::UpdateRate[UpRate]) are stopped. See 6.2.4 [Atomic Read Mechanism] for further details.
- **ReadOrder**: **atomic read order**. Read-only. Reset: Cold,0. 0=Reading SBTSI::CpuTempInt causes the state of SBTSI::CpuTempDec to be latched. 1=Reading SBTSI::CpuTempDec causes the state of SBTSI::CpuTempInt to be latched. See 6.2.4 [Atomic Read Mechanism] for further details.
- 4:2 Reserved.
- 1 **AraDis: ARA disable.** Read-only. Reset: Cold,0. Read-only. 1=ARA response disabled.
- 0 Reserved.

SBTSIx04 [Update Rate] (SBTSI::UpdateRate)

Read-write. Reset: Cold,08h.

Bits Description

7:0 **UpRate**: **update rate**. Read-write. Reset: Cold,08h. This field specifies the rate at which CPU temperature is compared against the temperature thresholds to determine if an alert event has occurred. Write access causes a reset of the alert history counters (specified by SBTSI::AlertThreshold[AlertThr]) and the corresponding timer (specified by SBTSI::UpdateRate[UpRate]).

ValidVal	/alidValues:	
Value	Description	
00h	0.0625 Hz	
01h	0.125 Hz	
02h	0.25 Hz	
03h	0.5 Hz	
04h	1 Hz	
05h	2 Hz	
06h	4 Hz	
07h	8 Hz	
08h	16 Hz	
09h	32 Hz	
0Ah	64 Hz	
FFh-	Reserved.	
0Bh		

SBTSIx07 [High Temperature Integer Threshold] (SBTSI::HiTempInt)

Read-write. Reset: Cold,46h.

The high temperature threshold specifies the CPU temperature that causes ALERT_L to assert if the CPU temperature is greater than or equal to the threshold. SBTSI::HiTempInt and SBTSI::HiTempDec combine to specify the high temperature threshold. See 6.2.5 [SB-TSI Temperature and Threshold Encodings]. Reset value equals 70 °C. Write access causes a reset of the alert history counters (specified by SBTSI::AlertThreshold[AlertThr]) and the corresponding timer (specified by SBTSI::UpdateRate[UpRate]). See 6.2.3 [Alert Behavior].

Bits	Description
7:0	HiTempInt : high temperature integer threshold. Read-write. Reset: Cold,46h. This field specifies the integer
	portion of the high temperature threshold.

SBTSIx08 [Low Temperature Integer Threshold] (SBTSI::LoTempInt)

Read-write. Reset: Cold.00h.

The low temperature threshold specifies the CPU temperature that causes ALERT_L to assert if the CPU temperature is less than or equal to the threshold. SBTSI::LoTempInt and SBTSI::LoTempDec combine to specify the low temperature threshold. See 6.2.5 [SB-TSI Temperature and Threshold Encodings]. Write access causes a reset of the alert history counters (specified by SBTSI::AlertThreshold[AlertThr]) and the corresponding timer (specified by SBTSI::UpdateRate[UpRate]). See 6.2.3 [Alert Behavior].

Bits	Description	
7	LoTempInt : low temperature integer threshold . Read-write. Reset: Cold,0. This field specifies the integer	
	portion of the low temperature threshold.	
6:0	Reserved.	

SBTSIx09 [SB-TSI Configuration Write] (SBTSI::ConfigWr)

Read-write. Reset: Cold,00h.			
This register provides write access to SBTSI::Config.			
Bits	its Description		
7	AlertMask: alert mask. Read-write. Reset: Cold,0. See SBTSI::Config[AlertMask].		
6	RunStop: run stop. Read-write. Reset: Cold,0. See SBTSI::Config[RunStop].		
5	ReadOrder: atomic read order. Read-write. Reset: Cold,0. See SBTSI::Config[ReadOrder].		
4:2	Reserved.		
1	AraDis: ARA disable. Read-write. Reset: Cold,0. See SBTSI::Config[AraDis].		
0	Reserved.		

SBTSIx10 [CPU Decimal Temperature] (SBTSI::CpuTempDec)

Read-	Read-only.		
See SBTSI::CpuTempInt.			
Bits	Description		
7:5	CpuTempDec : decimal CPU temperature value . Read-only. Reset: Cold,XXXb. Read-only. This field returns		
	the decimal portion of the CPU temperature.		
4:0	Reserved.		

SBTSIx11 [CPU Temperature Offset High Byte] (SBTSI::CpuTempOffInt)

Read-write. Reset: Cold,00h.

SBTSI::CpuTempOffInt and SBTSI::CpuTempOffDec combine to specify the CPU temperature offset. See 6.2.6 [SB-TSI Temperature Offset Encoding] for encoding details.

Bits Description

7:0 **CpuTempOffInt: CPU temperature integer offset**. Read-write. Reset: Cold,00h. This field specifies the integer portion of the CPU temperature offset added to Tctl to calculate the CPU temperature. Write access causes a reset of the alert history counters (specified by SBTSI::AlertThreshold[AlertThr]) and the corresponding timer (specified by SBTSI::UpdateRate[UpRate]).

SBTSIx12 [CPU Temperature Decimal Offset] (SBTSI::CpuTempOffDec)

Read-write. Reset: Cold,00h.

See SBTSI::CpuTempOffInt.

Bits Description

7:5 CpuTempOffDec: CPU temperature decimal offset. Read-write. Reset: Cold,0h. This field specifies the decimal/fractional portion of the CPU temperature offset added to Tctl to calculate the CPU temperature. Write access causes a reset of the alert history counters (specified by SBTSI::AlertThreshold[AlertThr]) and the

4:0 Reserved.

SBTSIx13 [High Temperature Decimal Threshold] (SBTSI::HiTempDec)

corresponding timer (specified by SBTSI::UpdateRate[UpRate]).

Read-write. Reset: Cold,00h. See SBTSI::HiTempInt.

Bits Description

7:5 **HiTempDec**: **high temperature decimal threshold**. Read-write. Reset: Cold,0h. This field specifies the decimal portion of the high temperature threshold.

4:0 Reserved.

SBTSIx14 [Low Temperature Decimal Threshold] (SBTSI::LoTempDec)

Read-write. Reset: Cold,00h.

See SBTSI::LoTempInt.

Bits Description

7:5 LoTempDec: low temperature decimal threshold. Read-write. Reset: Cold,0h. This field specifies the decimal portion of the low temperature threshold.

4:0 Reserved.

SBTSIx22 [Timeout Configuration] (SBTSI::TimeoutConfig)

Read-write. Reset: Cold,80h.			
Bits	Description		
7	TimeoutEn : SMBus timeout enable . Read-write. Reset: Cold,1. 0=SMBus defined timeout support disabled.		
	1=SMBus defined timeout support enabled. SMBus timeout enable.		
6:0	Reserved.		

SBTSIx32 [Alert Threshold Register] (SBTSI::AlertThreshold)

Read-	d-write. Reset: Cold,00h.			
See 6.	See 6.2.3 [Alert Behavior].			
Bits	Description			
7:3	Reserved.			
2:0	AlertThr : alert threshold . Read-write. Reset: Cold,0h. Specifies the number of consecutive CPU temperature samples for which a temperature alert condition needs to remain valid before the corresponding alert bit is set. For			
	SBTSI::AlertConfig[AlertCompEn]=1 it specifies the number of consecutive CPU temperature samples for which a temperature alert condition need to remain not valid before the corresponding alert bit gets cleared. Write access			
	resets the alert history counters (specified by SBTSI::AlertThreshold[AlertThr]) and the corresponding timer (specified by SBTSI::UpdateRate[UpRate]). Details in SBTSI::Status.			
	ValidValues:			
	Value Description			
	0h	1 Sample		
	6h-1h <value+1> Samples</value+1>			
	7h	8 Samples		

SBTSIxBF [Alert Configuration] (SBTSI::AlertConfig)

Read-write.		
Bits	Description	
7:1	Reserved.	
0	AlertCompEn: alert comparator mode enable. Read-write. Reset: Cold, X. 0=SBTSI::Status[TempHighAlert]	
	and SBTSI::Status[TempLowAlert] are read clear. 1=SBTSI::Status[TempHighAlert] and	
	SBTSI::Status[TempLowAlert] are read only; ARA response disabled. Write access does not change the alert	
	history counters (specified by SBTSI::AlertThreshold[AlertThr]) or the corresponding timer (specified by	
	SBTSI::UpdateRate[UpRate]). See SBTSI::Status.	

SBTSIxFE [Manufacture ID] (SBTSI::ManId)

Read-only. Reset: Cold,00h.		
Bits	Description	
7:1	Reserved.	
0	ManId: Manufacture ID. Read-only. Reset: Cold,0. Returns the AMD manufacture ID.	

SBTSIxFF [Revision] (SBTSI::Revision)

	,
Read-	only. Reset: Cold,04h.
Bits	Description
7:0	Revision : SB-TSI revision . Read-only. Reset: Cold,04h. Specifies the SBI temperature sensor interface revision.

7 UMC

7.1 UMC Overview

Each processor die includes two Unified Memory Controllers (UMC).

Each UMC controls one DDR4 channel, either 64-bit or 72-bit with ECC.

The UMC interfaces to the system via the Data Fabric (DF) Coherent Slave. The UMC operates on normalized addresses which only include address bits within a UMC's populated memory address range. The physical to normalized address translation varies based on various Data Fabric settings. The normalized address to DRAM address protocol translation is performed by the UMC.

The following restrictions limit the DRAM and/or DIMM types and configurations supported by the UMC:

- DDR4 DRAM devices.
- Mixing of DDR4 ECC and non-ECC DIMMs within a channel is not supported.
- Mixing of base module types within a channel is not supported.
- All UMCs are required to operate at the same MEMCLK frequency, regardless of the channel.
- Asymmetrical DRAM package types are not supported.
- Additional AM4 package rules:
 - DDR4 x8 and x16 devices are supported. x4 devices are not supported.
- Additional SP3 and SP4 package rules:
 - DIMMs must be of the same type per die (channel pair).
 - NVDIMM-N DIMMs may be populated with a DIMM of the same DIMM base module type.
 - When populating channel pairs, the following conditions apply:
 - Two DIMMs: Populate one per channel and the DIMMs must be identical.
 - Three DIMMs: The channel with two DIMMs must be identical and have the same total capacity
 as the other channel with one DIMM.
 - Three NVDIMM-N DIMMs across the two channels is not supported.
 - Four DIMMs: DIMMs must be pair-wise identical.
 - Mixing of x4 and x8 devices within a channel is not supported.
 - Mixing of 3DS and non-3DS devices within a channel is not supported.

7.1.1 UMC Frequency Support

The motherboard should comply with the relevant AMD socket motherboard design guidelines (MBDG) to achieve the rated speeds. In cases where MBDG design options exist, lower-quality options may compromise the maximum achievable speed; motherboard designers should assess the tradeoffs.

List of Namespaces

Namespace	Heading(s)
Core::X86::Apic	2.1.12.2.2 [Local APIC
	Registers]
Core::X86::Cpuid	2.1.13.1 [CPUID Instruction
	Functions]
Core::X86::Msr	2.1.14.1 [MSRs -
	MSR0000_xxxx]
	2.1.14.2 [MSRs -
	MSRC000_0xxx]
	2.1.14.3 [MSRs -
	MSRC001_0xxx]
	2.1.14.4 [MSRs -
C MOC D C	MSRC001_1xxx]
Core::X86::Pmc::Core	2.1.15.3 [Large Increment per
	Cycle Events]
	2.1.15.4.1 [Floating Point (FP) Events]
	2.1.15.4.2 [LS Events]
	2.1.15.4.3 [IC and BP Events]
	2.1.15.4.4 [DE Events]
	2.1.15.4.5 [EX (SC) Events]
	2.1.15.4.6 [L2 Cache Events.]
Core::X86::Pmc::L3	2.1.15.5.1 [L3 Cache PMC
	Events]
Core::X86::Smm	2.1.12.1.6 [System
	Management State]
IO	2.1.8 [PCI Configuration
	Legacy Access]
MCA::CS	3.2.5.8 [CS]
MCA::DE	3.2.5.4 [DE]
MCA::EX	3.2.5.5 [EX]
MCA::FP	3.2.5.6 [FP]
MCA::IF	3.2.5.2 [IF]
MCA::L2	3.2.5.3 [L2]
MCA::L3	3.2.5.7 [L3 Cache]
MCA::LS	3.2.5.1 [LS]
MCA::PB	3.2.5.11 [Parameter Block]
MCA::PIE	3.2.5.9 [PIE]
MCA::UMC	3.2.5.10 [UMC]
MP::MP0CRU	4.1.1 [MP Configuration Unit
	Registers]
SBTSI	6.4 [SB-TSI Registers]
SMU::THM	4.2.1 [Registers]

List of Definitions

ABS: ABS(integer expression): Remove sign from signed value.

AGESA™: AMD Generic Encapsulated Software Architecture.

AM4: Desktop, single die, single socket. For client platform DDR4. AM4 = (Core::X86::Cpuid::BrandId[PkgType] == 02h).

APML: Advanced Platform Management Link.

ARA: Alert response address.

ARP: Address Resolution Protocol

BAR: The BAR, or base address register, physical register mnemonic format

is of the form PREFIXxZZZ.

BCD: Binary Coded Decimal number format.

BCS: Base Configuration Space.

BIST: Built-In Self-Test. Hardware within the processor that generates test patterns and verifies that they are stored correctly (in the case of memories) or received without error (in the case of links).

BMC: Base management controller.

BSC: Boot strap core. Core 0 of the BSP.

BSP: Boot strap processor.

C-states: These are ACPI defined core power states. C0 is operational. All other C-states are low-power states in which the processor is not executing code. See docACPI.

Canonical-address: An address in which the state of the most-significant implemented bit is duplicated in all the remaining higher-order bits, up to bit

CCX: Core Complex where more than one core shares L3 resources.

CEIL: CEIL(real expression): Rounds real number up to nearest integer.

CMP: Specifies the core number.

COF: Current operating frequency of a given clock domain.

Configurable: Indicates that the access type is configurable as described by the documentation.

CoreCOF: Core current operating frequency in MHz. CoreCOF =

(Core::X86::Msr::PStateDef[CpuFid[7:0]]/Core::X86::Msr::PStateDef[CpuD

 \boldsymbol{COUNT} : COUNT(integer expression): Returns the number of binary 1's in the integer.

CpuCoreNum: Specifies the core number.

CPUID: The CPUID, or x86 processor identification state, physical register mnemonic format is of the form CPUID FnXXXX_XXXX_EiX[_xYYY], where XXXX_XXXX is the hex value in the EAX and YYY is the hex value in ECX.

DID: Divisor Identifier. Specifies the post-PLL divisor used to reduce the

docACPI: Advanced Configuration and Power Interface (ACPI) Specification. http://www.acpi.info.

docAM4: Socket AM4 Processor Functional Data Sheet, order# 55509.

docAPM1: AMD64 Architecture Programmer's Manual Volume 1: Application Programming, order# 24592.

docAPM2: AMD64 Architecture Programmer's Manual Volume 2: System Programming, order# 24593.

docAPM3: AMD64 Architecture Programmer's Manual Volume 3:

Instruction-Set Reference, order# 24594.

docAPM4: AMD64 Architecture Programmer's Manual Volume 4: 128-Bit and 256-Bit Media Instructions, order# 26568.

docAPM5: AMD64 Architecture Programmer's Manual Volume 5: 64-Bit Media and x87 Floating-Point Instructions, order# 26569.

docI2C: I2C Bus Specification.

http://www.nxp.com/documents/user_manual/UM10204.pdf

docIOMMU: AMD I/O Virtualization Technology Specification, order#

docJEDEC: JEDEC Standards. http://www.jedec.org.

docPCIe: PCI Express® Specification. http://www.pcisig.org. docPCIIb: PCI Local Bus Specification. http://www.pcisig.org.

docRAS: RAS Feature Enablement for AMD Family 17h Models 00h-0Fh, order# 55987.

docRevG: Revision Guide for AMD Family 17h Models 00h-0Fh

Processors, order# 55449. Doubleword: A 32-bit value.

DW: Doubleword.

EC: Embedded Controller.

ECS: Extended Configuration Space.

EDC: Electrical design current. Indicates the maximum current the voltage

rail can demand for a short, thermally insignificant time.

Error-on-read: Error occurs on read. Error-on-write: Error occurs on write.

Error-on-write-0: Error occurs on bitwise write of 0. Error-on-write-1: Error occurs on bitwise write of 1.

FCH: The integrated platform subsystem that contains the IO interfaces and bridges them to the system BIOS. Previously included in the Southbridge. FDS: Functional Data Sheet. There is one FDS for each package type. See

FID: Frequency Identifier. Specifies the PLL frequency multiplier for a given clock domain.

FLOOR: FLOOR(integer expression): Rounds real number down to nearest integer.

GB: Gbyte or Gigabyte; 1,073,741,824 bytes.

HTC: Hardware Thermal Control.

IBS: Instruction based sampling.

Inaccessible: Not readable or writable (e.g., Hide? Inaccessible: Read-

IORR: IO range register.

KB: Kbyte or Kilobyte; 1024 bytes.

KBC: Keyboard Controller.

L3: Level 3 Cache. The L3 term is also in Addrmaps to enumerate CCX

LINT: Local interrupt.

LVT: Local vector table. A collection of APIC registers that define interrupts for local events (e.g., APIC[530:500] [Extended Interrupt [3:0] Local Vector

MAX: MAX(integer expression list): Picks maximum integer or real value of comma separated list.

MB: Megabyte; 1024 KB.

MCA: Machine Check Architecture.

MCAX: Machine Check Architecture eXtensions.

Micro-op: Micro-op. Instructions have variable-length encoding and many perform multiple primitive operations. The processor does not execute these complex instructions directly, but, instead, decodes them internally into simpler fixed-length instructions called macro-ops. Processor schedulers subsequently break down macro-ops into sequences of even simpler instructions called micro-ops, each of which specifies a single primitive

MIN: MIN(integer expression list): Picks minimum integer or real value of comma separated list.

MMIO: Memory-Mapped Input-Output range. This is physical address space that is mapped to the IO functions such as the IO links or MMIO configuration.

MSR: The MSR, or x86 model specific register, physical register mnemonic format is of the form MSRXXXX XXXX, where XXXX XXXX is the hexadecimal MSR number. This space is accessed through x86 defined RDMSR and WRMSR instructions.

MTRR: Memory-type range register. The MTRRs specify the type of memory associated with various memory ranges.

NBC: NBC = (CPUID Fn00000001_EBX[LocalApicId[3:0]]==0). Node Base Core. The lowest numbered core in the node.

Node: A node, is an integrated circuit device that includes one to 8 cores (one or two Core Complexes).

NTA: Non-Temporal Access.

OW: Octword. An 128-bit value.

PCICFG: The PCICFG, or PCI defined configuration space, physical register mnemonic format is of the form DXFYxZZZ.

PCIe®: PCI Express.

PEC: Packet error code.

PMC: The PMC, or x86 performance monitor counter, physical register mnemonic format is any of the forms {PMCxXXX, L2IPMCxXXX, NBPMCxXXX}, where XXX is the performance monitor select.

POR: Power on reset.

POW: POW(base, exponent): POW(x,y) returns the value x to the power of

Processor: A package containing one or more Nodes. See Node.

PTE: Page table entry.

QW: Quadword. A 64-bit value.

REFCLK: Reference clock. Refers to the clock frequency (100 MHz) or the clock period (10 ns) depending on the context used.

Reserved-write-as-0: Reads are undefined. Must always write 0. Reserved-write-as-1: Reads are undefined. Must always write 1. **ROUND**: ROUND(real expression): Rounds to the nearest integer; halfway rounds away from zero.

RTS: Remote temperature sensor, typical examples are ADM1032, LM99, MAX6657, EMC1002.

SB-TSI: Sideband Internal Temperature Sensor Interface. See APML.

SBI: Sideband interface.

Shutdown: A state in which the affected core waits for either INIT, RESET, or NMI. When shutdown state is entered, a shutdown special cycle is sent on the IO links.

SMAF: System Management Action Field. This is the code passed from the SMC to the processors in STPCLK assertion messages.

SMI: System management interrupt.

SMM: System Management Mode.

 $\boldsymbol{SMT} \text{: } Simultaneous multithreading. See$

Core::X86::Cpuid::CoreId[ThreadsPerCore].

SP3: Server, four die MCM, single and dual socket.

SP3r2: High performance desktop, 4-die, single socket, lidded LGA.

SVM: Secure virtual machine.

TCC: Temperature Calculation Circuit.

Tctl: Processor Temperature control value.

TDC: Thermal Design Current.

TDP: Thermal Design Power. A power consumption parameter that is used in conjunction with thermal specifications to design appropriate cooling solutions for the processor.

Thread: One architectural context for instruction execution.

Token: A scheduler entry used in various DF queues to track outstanding requests.

TSI: Temperature sensor interface.

TSM: Temperature sensor macro.

UMI: Unified Media Interface. The link between the processor and the FCH.

UNIT: UNIT(register field reference): Input operand is a register field reference that contains a valid values table that defines a value with a unit (e.g., clocks, ns, ms, etc). This function takes the value in the register field and returns the value associated with the unit (e.g., If the field had a valid value definition where 1010b was defined as 5 ns). Then if the field had the value of 1010b, then UNIT() would return the value 5.

Unpredictable: The behavior of both reads and writes is unpredictable.

VDD: Main power supply to the processor core logic.

VID: Voltage level identifier.

Volatile: Indicates that a register field value may be modified by hardware, firmware, or microcode when fetching the first instruction and/or might have read or write side effects. No read may depend on the results of a previous read and no write may be omitted based on the value of a previous read or write

WDT: Watchdog timer. A timer that detects activity and triggers an error if a specified period of time expires without the activity.

WRIG: Writes Ignored.

Write-0-only: Writing a 0 clears to a 0; Writing a 1 has no effect. If not associated with Read, then reads are undefined.

Write-1-only: Writing a 1 sets to a 1; Writing a 0 has no effect. If not associated with Read, then reads are undefined.

Write-1-to-clear: Writing a 1 clears to a 0; Writing a 0 has no effect. If not associated with Read, then reads are undefined.

Write-once: Capable of being written once; all subsequent writes have no

effect. If not associated with Read, then reads are undefined.

XBAR: Cross bar; command packet switch.

Memory Map - MSR

Physical Mnemonic	Namespace
0000_0000h0000_0001h	MCA::LS
0000_0010h0000_02FFh	Core::X86::Msr
0000_0400h0000_0403h	MCA::LS
0000_0404h0000_0407h	MCA::IF
0000_0408h0000_040Bh	MCA::L2
0000_040Ch0000_040Fh	MCA::DE
0000_0414h0000_0417h	MCA::EX
0000_0418h0000_041Bh	MCA::FP
0000_041Ch0000_043Bh	MCA::L3
0000_043Ch0000_0443h	MCA::UMC
0000_044Ch0000_044Fh	MCA::PB
0000_0450h0000_0457h	MCA::CS
0000_0458h0000_045Bh	MCA::PIE
C000_0080hC000_0410h	Core::X86::Msr
C000_2000hC000_2009h	MCA::LS
C000_2010hC000_2016h	MCA::IF
C000_2020hC000_2029h	MCA::L2
C000_2030hC000_2036h	MCA::DE
C000_2050hC000_2056h	MCA::EX
C000_2060hC000_2066h	MCA::FP
C000_2070hC000_20E9h	MCA::L3
C000_20F0hC000_210Ah	MCA::UMC
C000_2130hC000_2136h	MCA::PB
C000_2140hC000_2159h	MCA::CS
C000_2160hC000_2169h	MCA::PIE
C001_0000hC001_029Bh	Core::X86::Msr
C0010400	MCA::LS
C0010401	MCA::IF
C0010402	MCA::L2
C0010403	MCA::DE
C0010405	MCA::EX
C0010406	MCA::FP
C001_0407hC001_040Eh	MCA::L3
C001_040FhC001_0410h	MCA::UMC
C0010413	MCA::PB
C001_0414hC001_0415h	MCA::CS
C0010416	MCA::PIE
C001_1002hC001_103Ch	Core::X86::Msr

Memory Map - SMN

Physical Mnemonic	Namespace
0005_9800h: SMUTHMx00000000	SMU::THM