
RADIATOR SIDE SUPPORT (ASSY)

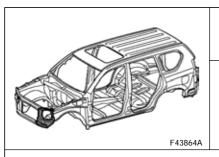


With the radiator upper support removed.

Symbol meaning

♠ ♠ ♠ : Remove Weld Points

F43864B

REMOVAL

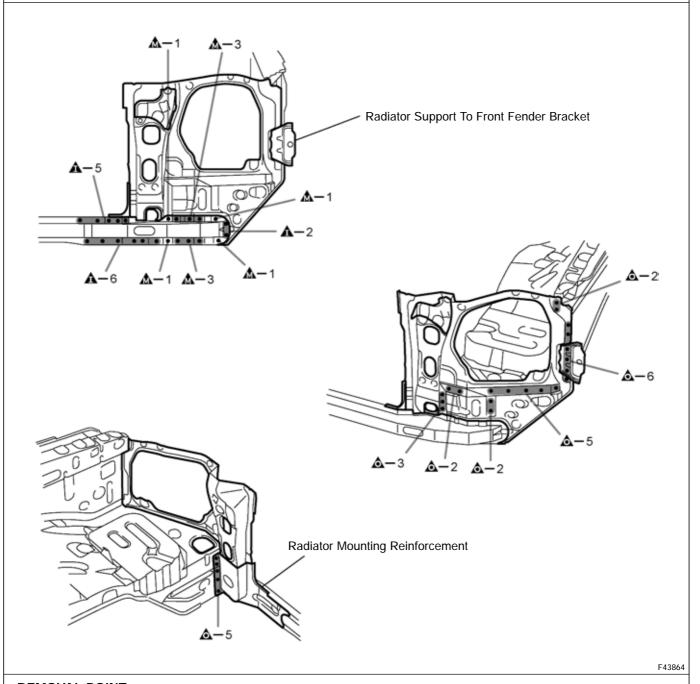

REMOVAL POINT


1 Remove the radiator support to front fender bracket and radiator mounting reinforcement at the same time.

Symbol meaning

O M I : Plug Weld

F43865B

INSTALLATION

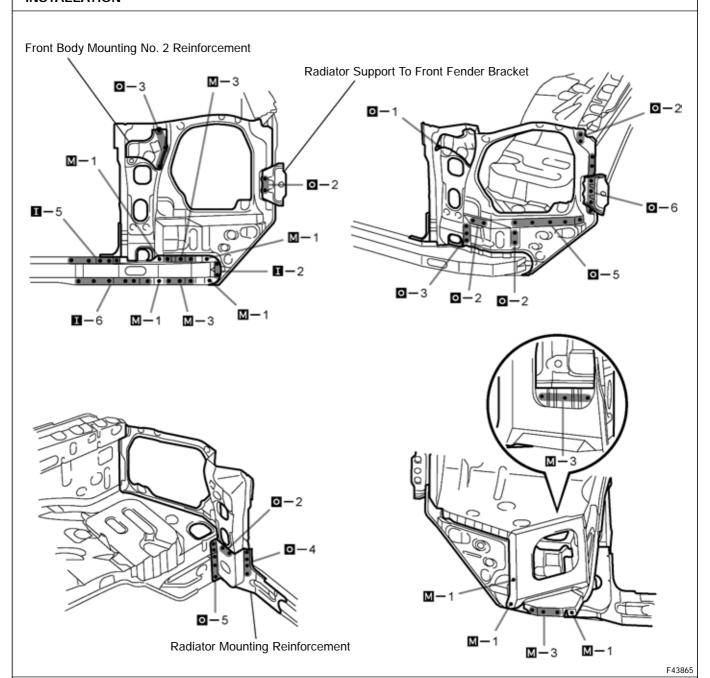

INSTALLATION POINT

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 3 After welding, apply body sealer to the corresponding parts. (See the paint coating)
- 4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.