
FRONT FENDER APRON (ASSY)

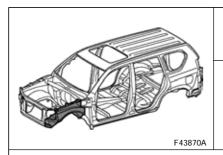

With the radiator support and front body pillar lower gusset removed.


F43870B

F43870

Symbol meaning

INSTALLATION • I : Plug Weld 2 : Body Sealer

REMOVAL INSTALLATION

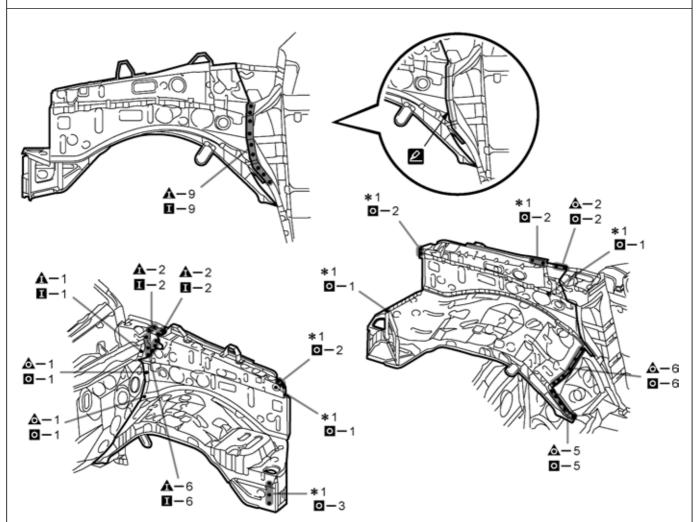

INSTALLATION POINT

- 1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- 2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- 3 *1 is only for installation.
- 4 Before installing a new part, apply body sealer. HINT:
 - Apply body sealer in an even, continuous bead.
- 5 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint coating)
- After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.