Building BT Network

by
Zhihao DAI
Yunsong ZHANG
Huijing LEI
Changrong CHEN
Yan HUANG

19COP502 Building Secure Networks Lab Report

Loughborough University

 \odot BT NETWORK 2019

Nov. 2019

Abstract

This report describes the building process of BT Network, a small version of Tier-2 Internet Service Provider. To first define the architecture of the network, a network diagram is drawn, in which physical connections are established and IP addresses are assigned. Then, connectivity within the network and with outside networks are made possible through internal routing protocol Intermediate System to Intermediate System (IS-IS) and external Border Gateway Protocol (BGP). In addition, services such as World Wide Web (WWW), Domain Name System (DNS) and Email are provided in the network. At last, main conclusions and further improvements are discussed.

CONTENTS

Contents

A	bstra	act	i
Li	st of	Figures	iv
Li	st of	Tables	vi
Li	st of	Listings	vii
1	Intr	roduction	1
	1.1	Network Services	1
	1.2	Business Relationships with Neighbouring ISPs	2
		1.2.1 Provider: Central Network	2
		1.2.2 Peer: Virgin Network	3
		1.2.3 Customer: DT Network	3
	1.3	Roles of Network Components	3
		1.3.1 Routers	3
		1.3.2 Laptops	3
	1.4	Organisation of the Report	4
2	Net	work Architecture	6
	2.1	Network Diagram	6
		2.1.1 Description	6
		2.1.2 IP Addresses and Interfaces	8
	2.2	IP Addresses of Interfaces	11
		2.2.1 Implementation	11
		2.2.2 Evaluation	13
3	Rot	iting Protocols in the Network	16
	3.1	Intra-domain Routing Protocol: IS-IS	16

CONTENTS

		3.1.1	Design					
		3.1.2	Loopback Addresses and NSAP for Routers					
		3.1.3	Implementation					
		3.1.4	Evaluation					
		3.1.5	Commentary					
	3.2	Inter-c	lomain Routing Protocol: BGP					
		3.2.1	Design					
		3.2.2	Routing Policies					
		3.2.3	Implementation					
		3.2.4	Evaluation					
		3.2.5	Commentary					
4	Anr	liantin	ns in the Network 41					
4	Ap ₁		Remote Access to Routers through SSH					
	4.1	4.1.1	Design					
		4.1.2	Implementation					
		4.1.3	Evaluation					
		4.1.4	Commentary					
	4.2		n Name System Service					
	4.2	4.2.1	Design					
		4.2.2	Implementation					
		4.2.3	Evaluation					
		4.2.4	Commentary					
	4.3		Wide Web Service					
	1.0	4.3.1	Design					
		4.3.2	Implementation					
		4.3.3	Evaluation					
	4.4		Service					
		4.4.1	Design					
		4.4.2	Implementation					
		4.4.3	Evaluation					
		4.4.4	Commentary					
_	ъ.	_						
5		Discussion 58						
	5.1		sions					
	5.2	Furthe	r Work					

${\tt CONTENTS}$

6	Con	tributions	59
	6.1	Group Leader: Zhihao DAI	59
	6.2	Technical Director: Yunsong ZHANG	59
	6.3	Network Engineer: Huijing LEI	59
	6.4	Network Engineer: Changrong CHEN	59
	6.5	Network Engineer: Yan HUANG	60
R	efere	nces	61
\mathbf{A}	Log	in Details	62
	A.1	Laptops	62
	A.2	Routers	62
В	Rou	iters Configuration	63
	B.1	Router 1 Configuration	63
	B.2	Router 2 Configuration	67
	B.3	Router 3 Configuration	71
\mathbf{C}	Lap	tops Configuration	7 5
	C.1	Laptop 1 Configuration	75
	C.2	Laptop 2 Configuration	76
	C.3	Laptop 3 Configuration	77
D	$\mathbf{D}\mathbf{N}$	S Configuration	78
	D.1	Primary DNS Server (Laptop 3)	78
		Secondary DNS Server (Laptop 1)	80
${f E}$	Ema	ail Configuration	82

List of Figures

1.1	Business Relationships of BT Network with Neighbouring ISPs	2
1.2	Roles of Main Components in BT Network	4
2.1	Full Network Diagram of BT Network	7
2.2	Physical Connections within BT Network	8
2.3	Sucessful Assignment of IPv4 Addresses to Routers' Interfaces	14
2.4	Sucessful Assignment of IPv6 Addresses to Routers' Interfaces	14
2.5	Sucessful Assignment of IPv4 and IPv6 Addresses to Laptops' Interfaces. $$	15
3.1	Design of IS-IS Protocol in BT Network	17
3.2	Tracing IPv4 Routes between Laptops using traceroute	20
3.3	Tracing IPv6 Routes between Laptops using traceroute	21
3.4	Tracing IPv4 Routes from Laptop 2 (BT002) to Laptop 3 (BT003) when	
	Physical Connection between Router 1 (BT-R001) and Router 2 (BT-R002)	
	is broken	22
3.5	Tracing IPv6 Routes from Laptop 2 (BT002) to Laptop 3 (BT003) when	
	Physical Connection between Router 1 (BT-R001) and Router 2 (BT-R002)	
	is broken	22
3.6	IPv4 Routes to Other Subnets on All 3 Routers Respectively using show ip	
	route	23
3.7	IPv6 Routes to Other Subnets on All 3 Routers Respectively using show ipv6	
	route	24
3.8	IP Routes to Other Subnets on Router 1 when Physical Connection between	
	Router 1 (BT-R001) and Router 2 (BT-R002) is broken	26
3.9	Design of BGP Protocol in BT Network	27
3.10	IPv4 Routes Collected through BGP Protocols on All 3 Routers using show	
	bgp	31

LIST OF FIGURES

3.11	IPv6 Routes Collected through BGP Protocols on Routers using show bgp
	ipv6
3.12	Tracing IPv4 Routes to Central Network on Laptop 1 (BT001) using ${\tt traceroute}.~33$
3.13	Tracing IPv4 Routes to DT Network on Laptop 1 (BT001) using traceroute. 35
3.14	Tracing IPv4 Routes to Virgin Network on Laptop 1 (BT001) using $\verb trace $ traceroute. 37
3.15	Tracing IPv4 Routes to Other Networks on Laptop 1 (BT001) using ${\tt traceroute}.~38$
3.16	Tracing IPv4 Routes to Virgin Network on Laptop 1 (BT001) using ${\tt traceroute}$
	When Direct Physical Connection Is Broken
4.1	Sucessful remote SSH access to all 3 routers from Laptop 1 (BT001) 42
4.2	Querying DNS Records for bt.lboro and www.bt.lboro on Laptop 2 48
4.3	Querying DNS Records for sub-domains of bt.lboro on Laptop 2 48
4.4	Querying DNS AAAA Records for sub-domains of bt.1boro on Laptop 2 49
4.5	Querying Reverse DNS Records for All 3 Laptops on Laptop 2 49
4.6	Connectivity to bt.1boro using ping on all 3 Laptops 50
4.7	Querying DNS Records for bt.1boro on Laptop 2 When Primary DNS Server
	(Laptop 3) Is Down
4.8	Contents of HTML File Named index.html
4.9	Web Service Provided at http://bt.lboro
4.10	Important Configuration Steps for exim4
4.11	Email Can Be Seen Arrived on Both Sides

LIST OF TABLES

List of Tables

2.1	Allocation of IPv4 and IPv6 Addresses to Subnets in BT Network	10
2.2	Interfaces for Each Physical Connection and Corresponding IPv4 and IPv6	
	Addresses	10
3.1	IP Loopback Addresses and NSAP for Routers in BT Network	17

List of Listings

1.1	Contents of Forward DAG Configuration File Bocated at 7 etc. billa, ab. 15010
	on Primary DNS Server (Laptop 3)
4.2	Contents of Reverse DNS Configuration File Located at /etc/bind/db.23
	on Primary DNS Server (Laptop 3)
B.1	Contents of Configuration on Router 1 (BT-R001)
B.2	Contents of Configuration on Router 2 (BT-R002)
В.3	Contents of Configuration on Router 3 (BT-R003)
C.1	Contents of Interfaces Network Configuration File Located at /etc/network/interfaces
	on Laptop 1 (BT001)
C.2	Contents of Interfaces Network Configuration File Located at /etc/network/interfaces
	on Laptop 2 (BT002)
С.3	Contents of Interfaces Network Configuration File Located at /etc/network/interfaces
	on Laptop 3 (BT003)
D.1	Contents of DNS Configuration File Located at /etc/bind/named.conf.options
	on Primary DNS Server (Laptop 3)
D.2	Contents of Local DNS Configuration File Located at /etc/bind/named.conf.local
	on Primary DNS Server (Laptop 3)
D.3	Contents of DNS Configuration File Located at /etc/bind/named.conf.options
	on Secondary DNS Server (Laptop 1)
D.4	Contents of Local DNS Configuration File Located at /etc/bind/named.conf.local
	on Secondary DNS Server (Laptop 1)
E.1	$Contents \ of \ Generated \ Email \ Configuration \ File \ Located \ at \ \verb /var/lib/exim4/config.autogenerated \\$
	on Email Server (Laptop 3)

Chapter 1

Introduction

In this lab, our team sets out to build BT Network, a small version of Tier-2 Internet Service Provider (ISP) located at Haslegrave Building, from scratch. Despite its limitations in terms of size and Internet access, we can proudly attest that BT Network is one of the leading providers at Haslegrave Building.

BT network is an Autonomous System (AS) as a whole and the AS Number is 2030. Its domain name is bt.lboro .

1.1 Network Services

Our network provides the following services to each of our individual customers.

- IP addressing with a guaranteed range of 14 host addresses allocated from 23.0.0.0/8 (IPv4) and 2001:2300::/32 (IPv6) blocks.
- Intra-domain Internet connection with Intermediate System to Intermediate System (IS-IS) routing protocol.
- Inter-domain Internet connection with Border Gateway Protocol (BGP).
- A reliable Domain name System (DNS) service with duplicated servers under domain bt.lboro.
- A World Wide Web (WWW) service located at http://bt.lboro/ .
- An Email service at bt.lboro.

For neighbouring ISPs who is a customer in our business relationships (see Section 1.2.3), we provide the following services.

• Internet connection to our domain as well as all the others'.

In addition, we provide secure remote access to our routers through Secure Shell (SSH) protocol on one of our laptops for administrative purposes.

1.2 Business Relationships with Neighbouring ISPs

BT Network has three immediate neighbouring ISPs and it's important to form business relationships with all three of them in order to gain economic benefits. The external routing policies of BGP protocol for each outside network are determined by its business relationship with us (see Section 3.2 for details). Business relationships with neighbouring ISPs are shown in Figure 1.1 and elaborated in the following.

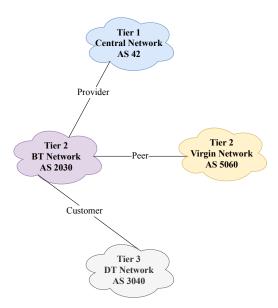


Figure 1.1: Business Relationships of BT Network with Neighbouring ISPs.

1.2.1 Provider: Central Network

Since BT Network is a Tier-2 ISP, it need to be connected to a Tier-1 ISP to gain broader Internet connection. Therefore, BT is connected to Central Network, a Tier-1 ISP, as a customer which makes it a network provider for BT.

1.2.2 Peer: Virgin Network

BT Network forms a Peer relationship with Virgin Network. This allows Virgin Network to connect to BT Network at zero cost and vice versa.

1.2.3 Customer: DT Network

BT Network forms a Provider-Customer relationship with DT Network, in which BT is the provider and DT is the customer. In other words, DT gains access to the broader Internet through BT at a cost.

1.3 Roles of Network Components

There are 6 physical components in our network in total, of which 3 are Cisco routers and the other 3 are TOSHIBA laptops. Each component plays an important role in the network as shown in Figure 1.2.

1.3.1 Routers

In terms of connection, each router is attached with one customer subnet and thus providing Internet service to one customer. Router 1 (BT-R001) is not physically connected to any outside network. Router 2 (BT-R002) is connected to DT Network and Router 3 (BT-R003) is connected to Virgin Network and Central Network through cables.

In terms of routing, all routers are Level-1 routers in intra-domain IS-IS routing protocol. In BGP routing protocol, Router 1 (BT-R001) acts as an Internal BGP (IBGP) router while Router 2 (BT-R002) and Router 3 (BT-R003) act as External BGP (EBGP) routers.

1.3.2 Laptops

All laptops are running a Ubuntu 16.04 system. Each of them is connected to a customer subnet thourgh a cable. In terms of services, Laptop 1 (BT001) provides DNS service for bt.lboro as a secondary DNS server and WWW service at http://bt.lboro. It also acts as a secure SSH access point to routers for administrative purposes. Laptop 2 (BT002) doesn't provide any service and thus acts act an normal user in the network. Laptop 3 (BT003) provides DNS service for bt.lboro as a primary DNS server. In addition, it hosts Email service at bt.lboro.

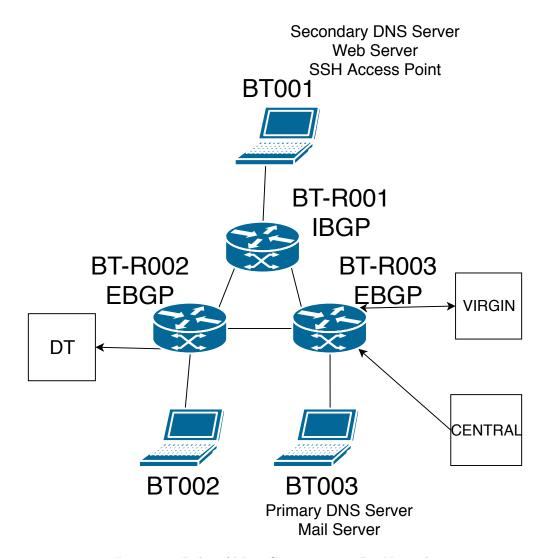


Figure 1.2: Roles of Main Components in BT Network.

1.4 Organisation of the Report

The report is organised as follows. The architecture of BT Network on the network layer is described in Chapter 2. A Network Diagram involving all physical components and connections is drawn in the chapter. Then, IP addresses for interfaces in the network are carefully allocated and configured.

In order to allow packets to be forwarded within and outside the network, proper intradomain and inter-domain routing protocols are implemented and tested in Chapter 3.

In Chapter 4, we move up to the application layer and set up various services in the

network as listed in Section 1.1.

Main conclusions drawn from the building process and possible further improvements are discussed in Chapter 5. At last, a summary of contributions for each team member is presented in Chapter 6.

Although the report does not necessarily reflect the actural order of steps in our building process (eg. remote SSH access was set up before BGP), readers can be assured that all results presented can be reproduced by following the natural order of the report.

To ensure readability, rationale behind important decisions made, problems we encountered and their respective solutions, alternative ways of configurations (if any) as well as reflective commentary are documented along with each step of implementation in the report.

Chapter 2

Network Architecture

2.1 Network Diagram

2.1.1 Description

A full diagram of BT network is shown in Figure 2.1. There are 3 routers in the network, whose names are BT-R001, BT-R002 and BT-R003 resepectively, connected to each other. Each connection forms a Router-Router subnet with only 2 interfaces.

On the other hand, each router is connected with a laptop separately named as BT001, BT002 and BT003 and thus forms a Router-Laptop subnet. A customer of BT Network is assigned with a Router-Laptop subnet and has a minimum of 10 host IP addresses.

To connect to neighbouring ISPs, a Router-Neighbour subnet is formed for each connection. Concretely, Router 2 (BT-R002) is connected to one of DT Network's routers while Router 3 (BT-R003) is connected to one of Virgin Network's and Central Network's routers separately.

All of the above connections are through physical cables.

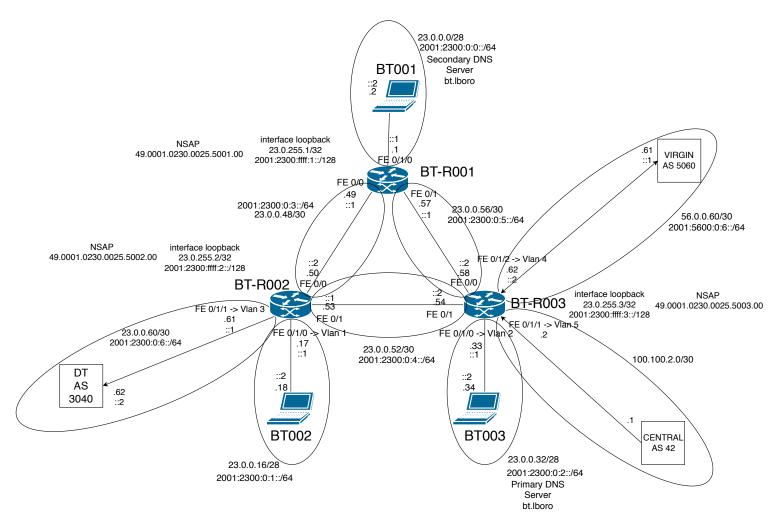


Figure 2.1: Full Network Diagram of BT Network.

2.1.2 IP Addresses and Interfaces

An IPv4 address range of 23.0.0.0/8 and IPv6 address range of 2001:2300::/32 are allocated to BT Network, which are further divided into sub-ranges to be allocated to each subnet.

For IPv4 addressing, a prefix of n is needed for a subnet that demands X host addresses, where n is an integer that satisfies $2^{32-n}-2 \ge X$ and $n \le 32$. For our lab, the maximum value for prefix is used in order to minimize the size of each subnet and reserve address space for future customers. However, it's also possible to use a larger value for each Router-Laptop subnet in order to maximize the size of the subnet, given that the number of customers (in this case, 3) is fixed.

In BT Network, the prefix for each Router-Router and Router-Neighbour subnet is 30 while the prefix for each Router-Laptop subnet is 28. In other words, each Router-Router and Router-Neighbour subnet has 2 guaranteed IPv4 host addresses while each Router-Laptop subnet has 14 guaranteed IPv4 host addresses. During address block allocation, larger subnet is being considered before smaller one reduce the number of block segments.

For IPv6 addressing, however, each subnet has a fixed prefix of 64 to ensure that each interface in the subnet has a unique address. The full details of IP address allocation is shown in Table 2.1.

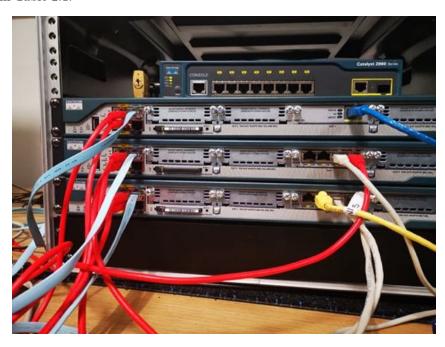


Figure 2.2: Physical Connections within BT Network.

In terms of interfaces, there are 3 Ethernet interfaces (FastEthernet0/0, FastEthernet0/1 and FastEthernet0/1/0) on Router 1, each of which can be assigned with an IP address. On Router 2 and 3, however, there are 6 Ethernet interfaces each and only 2 of them (FastEthernet0/0 and FastEthernet0/1) can be directly assigned with IP addresses. The remaining 4 interfaces are link layer interfaces and thus does not possess any IP address. To be assigned with an IP address, such an interface need to be assigned to an Virtual LAN (VLAN) to which the address is actually assigned.

Router-Router connections are established through either FastEthernet0/0 or FastEthernet0/1 interfaces on both ends while Router-Laptop and Router-Neighbour are through one of the remaining interfaces on the router end. Since both interfaces are on the left-hand side of each router and such arrangement helps distinguishing between Router-Router connections and others easily as shown in Figure 2.2. Interfaces of both ends for each connection as well as their corresponding IP addresses are detailed in Table 2.2.

Subnet	IPv4 Address / Prefix	IPv4 Address Range	IPv6 Address / Prefix	IPv6 Address Range
BT-R001 - BT001	23.0.0.0/28	23.0.0.1 - 23.0.0.14	2001:2300:0:0::/64	2001:2300:0:0::1 - 2001:2300:0:0:ffff:ffff:ffff:fffe
BT-R002 - BT002	23.0.0.16/28	23.0.0.17 - 23.0.0.30	2001:2300:0:1::/64	2001:2300:0:1::1 - 2001:2300:0:1:ffff:ffff:ffffe
BT-R003 - BT003	23.0.0.32/28	23.0.0.33 - 23.0.0.62	2001:2300:0:2::/64	2001:2300:0:2::1 - 2001:2300:0:2:ffff:ffff:ffff
BT-R001 - BT-R002	23.0.0.48/30	23.0.0.49 - 23.0.0.50	2001:2300:0:3::/64	2001:2300:0:3::1 - 2001:2300:0:3:ffff:ffff:ffff
BT-R002 - BT-R003	23.0.0.52/30	23.0.0.53 - 23.0.0.54	2001:2300:0:4::/64	2001:2300:0:4::1 - 2001:2300:0:4:ffff:ffff:ffff
BT-R001 - BT-R003	23.0.0.56/30	23.0.0.57 - 23.0.0.58	2001:2300:0:5::/64	2001:2300:0:5::1 - 2001:2300:0:5:ffff:ffff:ffff
BT-R002 - DT	23.0.0.60/30	23.0.0.61 - 23.0.0.62	2001:2300:0:6::/64	2001:2300:0:6::1 - 2001:2300:0:6:ffff:ffff:ffff
BT-R003 - Virgin	56.0.0.60/30	56.0.0.61 - 56.0.0.62	2001:5600:0:6::/64	2001:5600:0:6::1 - 2001:5600:0:6:ffff:ffff:ffff
BT-R003 - Central	100.100.2.0/30	100.100.2.1 - 100.100.2.2		

Table 2.1: Allocation of IPv4 and IPv6 Addresses to Subnets in BT Network.

Connection	Interface 1	IPv4 Address	IPv6 Address	Interface 2	IPv4 Address	IPv6 Address
BT-R001 - BT001	BT-R001: FastEthernet0/1/0	23.0.0.1	2001:2300:0:0::1	BT001: eth0	23.0.0.2	2001:2300:0:0::2
BT-R002 - BT002	BT-R002: FastEthernet0/1/0 -> Vlan 1	23.0.0.17	2001:2300:0:1::1	BT002: eth0	23.0.0.18	2001:2300:0:1::2
BT-R003 - BT003	BT-R003: FastEthernet0/1/0 -> Vlan 2	23.0.0.33	2001:2300:0:2::1	BT003: eth0	23.0.0.34	2001:2300:0:2::2
BT-R001 - BT-R002	BT-R001: FastEthernet0/0	23.0.0.49	2001:2300:0:3::1	BT-R002: FastEthernet0/0	23.0.0.50	2001:2300:0:3::2
BT-R002 - BT-R003	BT-R002: FastEthernet0/1	23.0.0.53	2001:2300:0:4::1	BT-R003: FastEthernet0/1	23.0.0.54	2001:2300:0:4::2
BT-R001 - BT-R003	BT-R001: FastEthernet0/1	23.0.0.57	2001:2300:0:5::1	BT-R003: FastEthernet0/0	23.0.0.58	2001:2300:0:5::2
BT-R002 - DT	BT-R002: FastEthernet0/1/1 -> Vlan 3	23.0.0.61	2001:2300:0:6::1	DT	23.0.0.62	2001:2300:0:6::2
BT-R003 - Virgin	BT-R003: FastEthernet0/1/2 -> Vlan 4	56.0.0.62	2001:5600:0:6::2	Virgin	56.0.0.61	2001:5600:0:6::1
BT-R003 - Central	BT-R003: FastEthernet0/1/1 -> Vlan 5	100.100.2.2		Central	100.100.2.1	

Table 2.2: Interfaces for Each Physical Connection and Corresponding IPv4 and IPv6 Addresses.

2.2 IP Addresses of Interfaces

Assigning IP addresses[1][2] to interfaces should be the first step in building BT Network since all network services listed in 1.1 cannot operate without IP addresses. The assignment of IP addresses in Table 2.1 and 2.2 is implemented.

2.2.1 Implementation

2.2.1.1 Routers

For Router 1 (BT-R001), IP addresses are assigned directly to physical interfaces as all interfaces are network layer interfaces.

```
int fa0/0
ip address 23.0.0.49 255.255.252
ipv6 address 2001:2300:0:3::1/64
no shutdown

int fa0/1
ip address 23.0.0.57 255.255.252
ipv6 address 2001:2300:0:5::1/64
no shutdown

int fa0/1/0
ip address 23.0.0.1 255.255.255.240
ipv6 address 2001:2300:0:0::1/64
no shutdown
```

For Router 2 (BT-R002), however, only 2 interfaces (FastEhternet0/0 and FastEhternet0/1) each are network layer interfaces. The remaining 4 interfaces are link layer interfaces and need to be assigned to an VLAN separately se where an IP address can be assigned.

```
int fa0/0
ip address 23.0.0.50 255.255.252
ipv6 address 2001:2300:0:3::2/64
no shutdown

int fa0/1
ip address 23.0.0.53 255.255.252
ipv6 address 2001:2300:0:4::1/64
no shutdown

vlan 1
int fa0/1/0
switchport mode access
switchport access vlan 1
```

```
int vlan 1
ip address 23.0.0.17 255.255.255.240
ipv6 address 2001:2300:0:1::1/64
in o shutdown

vlan 3
int fa0/1/1
switchport mode access
switchport access vlan 3
int vlan 3
ip address 23.0.0.61 255.255.255.252
ipv6 address 2001:2300:0:6::1/64
no shutdown
```

Similarly, IP addresses are assigned to Router 3 (BT-R003).

```
1 int fa0/0
{\tiny 2} \  \, \text{ip address} \  \, 23.0.0.58 \  \, 255.255.255.252
3 ipv6 address 2001:2300:0:5::2/64
4 no shutdown
6 int fa0/1
7 ip address 23.0.0.54 255.255.255.252
8 ipv6 address 2001:2300:4::2/64
9 no shutdown
11 vlan 2
12 int fa0/1/0
13 switchport mode access
14 switchport access vlan 2
15 int vlan 2
ip address 23.0.0.33 255.255.255.240
17 ipv6 address 2001:2300:0:2::1/64
18 no shutdown
20 vlan 4
21 int fa0/1/2
22 switchport mode access
^{23} switchport access vlan ^{4}
24 int vlan 4
25 ip address 56.0.0.62 255.255.255.252
ipv6 address 2001:5600:0:6::2/64
27 no shutdown
29 vlan 5
30 int fa0/1/1
31 switchport mode access
32 switchport access vlan 5
```

```
33 int vlan 5
34 ip address 100.100.2.2 255.255.252
35 no shutdown
```

2.2.1.2 Laptops

Unlike routers, the IP assignment of laptops' interfaces are more aligned since all laptops are of the same model. On Laptop 1 (BT001), the file /etc/network/interface is edited as follows before rebooting to apply changes. Similarly, IP address can are assigned to Laptop 2's (BT002) and Laptop 3's (BT003) interfaces respectively. Full configuration for all laptops are detailed in Appendix C.

```
1 auto lo
2 iface lo inet loopback
3 auto eth0
4 ifacce eth0 inet static
5 address 23.0.0.2
6 netmask 255.255.255.240
7 gateway 23.0.0.1
8
9 ifacce eth0 inet6 static
10 address 2001:2300::2
11 netmask 64
12 gateway 2001:2300::1
```

2.2.2 Evaluation


On all 3 routers, the implementation of IP assignments is evaluated using show ip int brief and show ipv6 int brief. These 2 commands show IPv4 and IPv6 addresses of interfaces on routers respectively. Successful assignment of IP addresses to routers' interfaces is evident from Figure 2.3 and 2.4.

On the laptops' side, the implementation of IP assignments is evaluated using ifconfig command. Successful assignment of IP addresses to laptops' interfaces is evident from Figure 2.5.






(b) Router 2 (BT-R002)

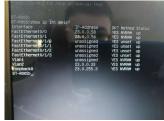

(a) Router 1 (BT-R001)

(c) Router 3 (BT-R003)

Figure 2.3: Sucessful Assignment of IPv4 Addresses to Routers' Interfaces.

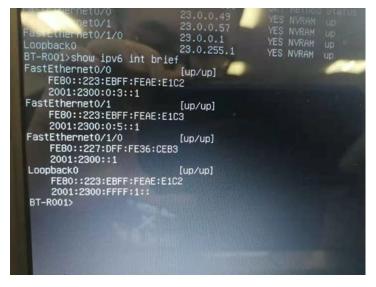



(b) Router 2 (BT-R002)

```
| Conclusion | Con
```

(a) Router 1 (BT-R001)

(c) Router 3 (BT-R003)

Figure 2.4: Sucessful Assignment of IPv6 Addresses to Routers' Interfaces.



Figure 2.5: Sucessful Assignment of IPv4 and IPv6 Addresses to Laptops' Interfaces.

Chapter 3

Routing Protocols in the Network

3.1 Intra-domain Routing Protocol: IS-IS

3.1.1 Design

Due to the limitation of the static routing, routers cannot find alternative paths if a set path is broken and thus a new path need to be set manually. In contrast, dynamic routing always finds the least cost path even when the previous least cost path is broken. Popular dynamic routing protocols include distance vector based protocols like Routing Information Protocol (RIP)[3] and link state based protocols like Intermediate System to Intermediate System (IS-IS)[4] and Open Shortest Path First (OSPF)[5].

In this lab, the IS-IS is used as the Interior Gateway Protocol (IGP), which provides faster convergence and larger scalability compared to distance vector based protocols. IS-IS is short for Intermediate System to Intermediate System Routing Protocol. By using this protocol, each router maintains a database which has a map of the whole topology and all routers have the same information. The best path to every destination is computed by all routers. Figure 3.1 shows the design of IS-IS protocol in BT Network. As the figure shows, the network only has level-1 routers for internal routing.

3.1.2 Loopback Addresses and NSAP for Routers

To set up IS-IS, an unique loopback address is needed for each router. An IPv4 address block of 23.0.255.0/24 and IPv6 address block of 2001:2300:ffff::/48 is allocated for loopback addresses.

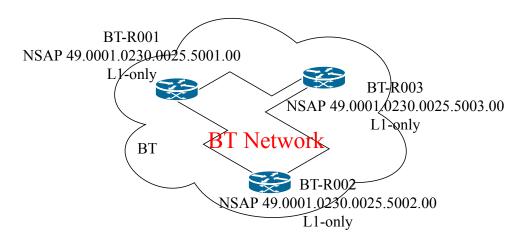


Figure 3.1: Design of IS-IS Protocol in BT Network.

Following the CLNS addressing convention, each router is then assigned with a NSAP. A NSAP has 3 main components.

According to the convention, the leading Area ID is composed of AFI (49) and Area Address (0001). The System ID followed is set to the IPv4 loopback address of the router. If the loopback address is ABC.DEF.GHI.JKL, then System ID should be ABCD.EFGH.IJKL. The last main component is N-Selector (NSEL) and set to 00.

The assignment of addresses and NSAP to routers are detailed in Table 3.1.

Router	IPv4 Loopback Address	IPv6 Loopback Address	NSAP
BT-R001	23.0.255.1	2001:2300:ffff:1::	49.0001.0230.0025.5001.00
BT-R002	23.0.255.2	2001:2300:ffff:2::	49.0001.0230.0025.5002.00
BT-R003	23.0.255.3	2001:2300:ffff:3::	49.0001.0230.0025.5003.00

Table 3.1: IP Loopback Addresses and NSAP for Routers in BT Network.

3.1.3 Implementation

IS-IS is set up on Router 1 (BT-R001) using the following commands.

```
interface Loopback0
ip address 23.0.255.1 255.255.255
ipv6 address 2001:2300:FFFF:1::/128

router isis
net 49.0001.0230.0025.5001.00
is-type level-1
```

Then, IS-IS is turned on on all interfaces to internal routers.

```
interface FastEthernet0/0
ip router isis
ipv6 router isis

interface FastEthernet0/1
ip router isis
ipv6 router isis

interface FastEthernet0/1/0
ip router isis

interface FastEthernet0/1/0
ip router isis
ipv6 router isis
```

However, IS-IS routes should not be broadcasted nor received through the loopback interface (Loopback0) while the route to corresponding subnet should be broadcasted to other internal routers. Therefore, the loopback interface should be a passive interface in IS-IS protocol.

```
router isis
passive-interface Loopback0
```

For Router 2 (BT-R002) and Router 3 (BT-R002), IS-IS is set up similarly using the above commands. The main difference is that interfaces to external routers (VLAN 3 for Router 2 and VLAN 4 & 5 for Router 3) should be passive interfaces as well. Below is the configuration for Router 2.

```
interface Loopback0
ip address 23.0.255.2 255.255.255
ipv6 address 2001:2300:FFFF:2::/128

router isis
net 49.0001.0230.0025.5002.00
ris-type level-1
passive-interface Vlan3
passive-interface Loopback0
```

```
interface FastEthernet0/0
ip router isis
ipv6 router isis

interface FastEthernet0/1
ip router isis
ipv6 router isis
```

Below is the configuration for Router 3.

```
interface Loopback0
2 ip address 23.0.255.3 255.255.255.255
3 ipv6 address 2001:2300:FFFF:3::/128
5 router isis
net 49.0001.0230.0025.5003.00
7 is-type level-1
8 passive-interface Vlan4
9 passive-interface Vlan5
10 passive-interface Loopback0
12 interface FastEthernet0/0
13 ip router isis
14 ipv6 router isis
interface FastEthernet0/1
17 ip router isis
18 ipv6 router isis
20 interface Vlan2
21 ip router isis
22 ipv6 router isis
```

3.1.4 Evaluation

Once the IS-IS is set up, use traceroute command to check the IPv4 path from Laptop 1 (BT001, IPv4 Address: 23.0.0.2) to Laptop 2 (BT002, IPv4 Address: 23.0.0.18) in the network.

```
traceroute 23.0.0.34
```

Figure 3.2 shows the route taken is Laptop 1 (BT001, IPv4 Address: 23.0.0.2) -> Router 1 (BT-R001, IPv4 Address: 23.0.0.1) -> Router 2 (BT-R002, IPv4 Address: 23.0.0.50) -> Laptop 2 (BT002, IPv4 Address: 23.0.0.18), which is a correct route. Routes from Laptop 1 to Laptop 3 as well as from Laptop 2 to Laptop 3 are tested and shown in the figure as well.

```
root@BT001:/home/bt001# traceroute 23.0.0.18
traceroute to 23.0.0.18 (23.0.0.18), 30 hops max, 60 byte packets
1 23.0.0.33 (23.0.0.33) 1.070 ms 1.643 ms 2.137 ms
2 23.0.0.53 (23.0.0.53) 1.572 ms 1.930 ms 2.069 ms
3 23.0.0.18 (23.0.0.18) 1.044 ms 1.023 ms 0.991 ms
root@BT001:/home/bt001# _
```

(a) traceroute from Laptop 1 (BT001) to Laptop 2 (BT002)

```
root@BT001:/home/bt001# traceroute 23.0.0.34
traceroute to 23.0.0.34 (23.0.0.34), 30 hops max, 60 byte packets
1 23.0.0.1 (23.0.0.1) 1.073 ms 1.602 ms 1.840 ms
2 23.0.0.58 (23.0.0.58) 1.208 ms 1.943 ms 2.264 ms
3 23.0.0.34 (23.0.0.34) 1.850 ms 1.830 ms 1.809 ms
root@BT001:/home/bt001# _
```

(b) traceroute from Laptop 1 (BT001) to Laptop 3 (BT003)

```
root@BT002:/home/bt002# traceroute 23.0.0.34
traceroute to 23.0.0.34 (23.0.0.34), 30 hops max, 60 byte packets
1 23.0.0.17 (23.0.0.17) 1.006 ms 1.542 ms 1.959 ms
2 23.0.0.54 (23.0.0.54) 0.931 ms 2.216 ms 2.451 ms
3 23.0.0.34 (23.0.0.34) 1.856 ms 1.843 ms 1.924 ms
root@BT002:/home/bt002#_
```

(c) traceroute from Laptop 2 (BT002) to Laptop 3 (BT003)

Figure 3.2: Tracing IPv4 Routes between Laptops using traceroute.

Similiar results can be observed for IPv6 routes in Figure 3.3. The IPv6 Route taken from Laptop 1 to Laptop 2 is Laptop 1 (BT001, IPv6 Address: 2001:2300::2) -> Router 1 (BT-R001, IPv6 Address: 2001:2300::1) -> Router 2 (BT-R002, IPv6 Address: 2001:2300:3:2::2) -> Laptop 2 (BT002, IPv6 Address: 2001:2300:0:1::2), which is also a correct route. Routes from Laptop 1 to Laptop 3 as well as from Laptop 2 to Laptop 3 are tested and shown in the figure as well.

```
root@BT001:/home/bt001# traceroute 2001:2300:0:1::2
traceroute to 2001:2300:0:1::2 (2001:2300:0:1::2), 30 hops max, 80 byte packets
1 2001:2300::1 (2001:2300::1) 1.295 ms 1.656 ms 1.954 ms
2 2001:2300:0:3::2 (2001:2300:0:3::2) 1.578 ms 1.747 ms 1.858 ms
3 2001:2300:0:1::2 (2001:2300:0:1::2) 1.088 ms 1.061 ms 1.033 ms
```

(a) traceroute from Laptop 1 (BT001) to Laptop 2 (BT002)

```
root@BT001:/home/bt001# traceroute 2001:2300:0:2::2
traceroute to 2001:2300:0:2::2 (2001:2300:0:2::2), 30 hops max, 80 byte packets
1 2001:2300::1 (2001:2300::1) 1.287 ms 1.560 ms 1.804 ms
2 2001:2300:0:5::2 (2001:2300:0:5::2) 1.500 ms 1.720 ms 1.842 ms
3 2001:2300:0:2::2 (2001:2300:0:2::2) 1.075 ms 1.061 ms 1.095 ms
root@BT001:/home/bt001#
```

(b) traceroute from Laptop 1 (BT001) to Laptop 3 (BT003)

```
bt002@BT002:~$ traceroute 2001:2300:0:2::2

traceroute to 2001:2300:0:2::2 (2001:2300:0:2::2), 30 hops max, 80 byte packets

1 2001:2300:0:1::1 (2001:2300:0:1::1) 1.446 ms 1.753 ms 2.091 ms

2 2001:2300:0:4::2 (2001:2300:0:4::2) 1.439 ms 1.632 ms 1.765 ms

3 2001:2300:0:2::2 (2001:2300:0:2::2) 1.065 ms 1.062 ms 1.036 ms
```

(c) traceroute from Laptop 2 (BT002) to Laptop 3 (BT003)

Figure 3.3: Tracing IPv6 Routes between Laptops using traceroute.

To further evaluate the correctness of our implementation, we check the path from Laptop 1 to Laptop 2 under the condition that the physical connection between Router 1 and Router 2 is broken. The IS-IS protocol on Router 1 should be able to find route to Router 2 through Router 3.

Figure 3.4 shows the IPv4 route taken is Laptop 1 (BT001, IPv6 Address: 23.0.0.2)

-> Router 1 (BT-R001, IPv4 Address: 23.0.0.1) -> Router 3 (BT-R003, IPv4 Address: 23.0.0.58) -> Router 2 (BT-R002, IPv4 Address: 23.0.0.53) -> Laptop 2 (BT002, IPv4 Address: 23.0.0.18), which is a correct route.

```
root@BT001:/home/bt001# traceroute 23.0.0.18
traceroute to 23.0.0.18 (23.0.0.18), 30 hops max, 60 byte packets
1 23.0.0.1 (23.0.0.1) 1.210 ms 1.584 ms 1.973 ms
2 23.0.0.58 (23.0.0.58) 1.337 ms 1.708 ms 2.031 ms
3 23.0.0.53 (23.0.0.53) 1.853 ms 2.117 ms 2.308 ms
4 23.0.0.18 (23.0.0.18) 1.361 ms 1.340 ms 1.318 ms
root@BT001:/home/bt001#
```

Figure 3.4: Tracing IPv4 Routes from Laptop 2 (BT002) to Laptop 3 (BT003) when Physical Connection between Router 1 (BT-R001) and Router 2 (BT-R002) is broken.

Figure 3.5 shows the IPv6 route taken is Laptop 1 (BT001, IPv6 Address: 2001:2300::2)

-> Router 1 (BT-R001, IPv6 Address: 2001:2300::1) -> Router 3 (BT-R003, IPv6 Address: 2001:2300:0:5::2) -> Router 2 (BT-R002, IPv6 Address: 2001:2300:0:4::1)

-> Laptop 2 (BT002, IPv6 Address: 2001:2300:0:1::2), which is also a correct route.

```
root@BT001:/home/bt001# traceroute 2001:2300:0:1::2

traceroute to 2001:2300:0:1::2 (2001:2300:0:1::2), 30 hops max, 80 byte packets

1 2001:2300:1 (2001:2300:1) 1.226 ms 1.380 ms 1.863 ms

2 2001:2300:0:5::2 (2001:2300:0:5::2) 1.290 ms 1.509 ms 1.747 ms

3 2001:2300:0:4:1 (2001:2300:0:4::1) 1.700 ms 1.900 ms 1.994 ms

4 2001:2300:0:1::2 (2001:2300:0:1::2) 1.285 ms 1.261 ms 1.230 ms
```

Figure 3.5: Tracing IPv6 Routes from Laptop 2 (BT002) to Laptop 3 (BT003) when Physical Connection between Router 1 (BT-R001) and Router 2 (BT-R002) is broken.

On the router's side, show ip route and show ipv6 route is used to inspect the routes discovered by IS-IS protocol. In Figure 3.6 and 3.7, such routes to other subnets inside BT Network on each router are shown.

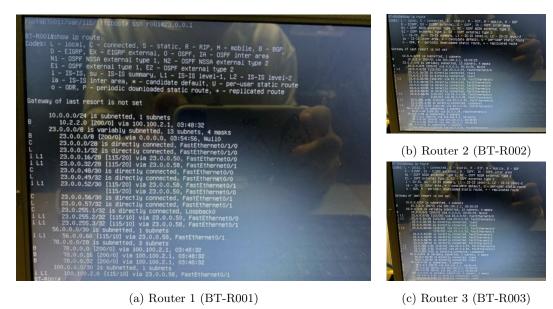


Figure 3.6: IPv4 Routes to Other Subnets on All 3 Routers Respectively using show ip route.





(b) Router 2 (BT-R002)



(a) Router 1 (BT-R001)

(c) Router 3 (BT-R003)

Figure 3.7: IPv6 Routes to Other Subnets on All 3 Routers Respectively using show ipv6 route.

Noticably, when the physical connection between Router 1 and Router 2 is broken, the route from Router 1 to Router 2 goes through Router 3 instead, as evident in Figure 3.8.

3.1.5 Commentary

3.1.5.1 Problem: IS-IS Not Set Up for Laptop-Router Interface

When initially setting up IS-IS on the interfaces, only the interfaces between routers have been turned on. This leads to laptop's failure to reach a router not directly connected. To solve this problem, IS-IS is set up on the interface between a laptop and a router.

3.1.5.2 Alternative Solution to Passive Interfaces

While turning interfaces connected to outside network into passive interfaces does enable other routers in the network to connect to outside networks through those interfaces, it demands extra computing resource for computing routes to external subnets.

Alternatively, one can disable IS-IS on such interfaces and replace the external next-hop for each out-going route in BGP with the internal router to which the next-hop is directly connected to. That prevents Router-Neighbour subnet from participating in IS-IS routing and eliminates the extra computing consumption while preserving the connectivity between internal routers and outside networks.

```
Success rate is 80 percent (4/5), round-trip min/avg/max = 1/2/4 ms
BT-R001#sh ip route
Codes: L - local, C - connected, S - static, R - RIP, M - mobile, B - BGP
D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
E1 - OSPF external type 1, E2 - OSPF external type 2
i - IS-IS, Su - IS-IS summary, L1 - IS-IS level-1, L2 - IS-IS level-2
ia - IS-IS inter area, * - candidate default, U - per-user static route
0 - ODR, P - periodic downloaded static route, + - replicated route

Gateway of last resort is not set

10.0.0.0/24 is subnetted, 1 subnets
10.2.2.0 [200/0] via 100.100.2.1, 04:04:39
23.0.0.0/8 is variably subnetted, 12 subnets, 4 masks
23.0.0.0/8 is variably subnetted, 12 subnets, 4 masks
23.0.0.0/8 is directly connected, FastEthernet0/1/0
L 23.0.0.0/28 is directly connected, FastEthernet0/1/0
L 23.0.0.1/32 is directly connected, FastEthernet0/1/0
it1 23.0.0.32/28 [115/30] via 23.0.0.58, FastEthernet0/1
L 23.0.0.58/30 (115/30) via 23.0.0.58, FastEthernet0/1
C 23.0.0.55/30 is directly connected, FastEthernet0/1
C 23.0.0.0/30 is subnetted is subnetted.
FastEthernet0/1
F
```

(a) IPv4 Routes to Other Subnets on Router 1 using show ip route.

```
BT-R001#sh ipv6 route

IPv6 Routing Table - default - 13 entries

Codes: C - Connected, L - Local, S - Static, U - Per-user Static route

B - BGF, M - MIPv6, R - RIP, I1 - ISIS L1

I2 - ISIS L2, IA - ISIS interarea, IS - ISIS summary, D - EIGRP

EX - EIGRP external, ND - Neighbor Discovery

B 2001:2300::/32 [200/0]

via NullO, directly connected

C 2001:2300::/64 [0/0]

via FastEthernet0/1/0, directly connected

2 2001:2300::1/128 [0/0]

via FastEthernet0/1/0, receive

I1 2001:2300:0:1::/64 [115/30]

via FE80::223:4FF:FE80:4EEA, FastEthernet0/1

11 2001:2300:0:4::/64 [115/20]

via FE80::223:4FF:FE80:4EEA, FastEthernet0/1

C 2001:2300:0:5::/64 [0/0]

via FastEthernet0/1, directly connected

2 2001:2300:0:5::/128 [0/0]

via FastEthernet0/1, directly connected

2 2001:2300:0:5::/128 [0/0]

via FastEthernet0/1, directly connected

2 2001:2300:Fis:/128 [0/0]

via FastEthernet0/1, receive

I1 2001:2300:Fis:/128 [15/10]

via FE80::223:4FF:FE80:4EEA, FastEthernet0/1

via FastEthernet0/1, receive

I1 2001:2300:Fist:/128 [15/10]

via FE80::223:4FF:FE80:4EEA, FastEthernet0/1

via FastEthernet0/1, receive

I1 2001:2300:Fist:/128 [15/10]

via FE80::223:4FF:FE80:4EEA, FastEthernet0/1

via Nullo, receive

THOUSE THOUSE THE NULL T
```

(b) IPv6 Routes to Other Subnets on Router 1 using show ip route.

Figure 3.8: IP Routes to Other Subnets on Router 1 when Physical Connection between Router 1 (BT-R001) and Router 2 (BT-R002) is broken.

3.2 Inter-domain Routing Protocol: BGP

3.2.1 Design

For inter-domain routing, Border Gateway Protocol (BGP)[6] is applied in BT Network since it's the one and only External Gateway Protocol (EGP) in today's global Internet. BGP provides scaliability to large networks, clear definations of administrative boundary as well as flexiable policy control, which allow business relaitonships with neighbouring ISPs to be expressed in terms of routing policies.

Figure 3.9 shows the design of BGP protocol in our network. The AS Number (ASN) of BT Network is 2030 while ASN of Central, Virgin, DT are 42, 5060, 3040 respectively.

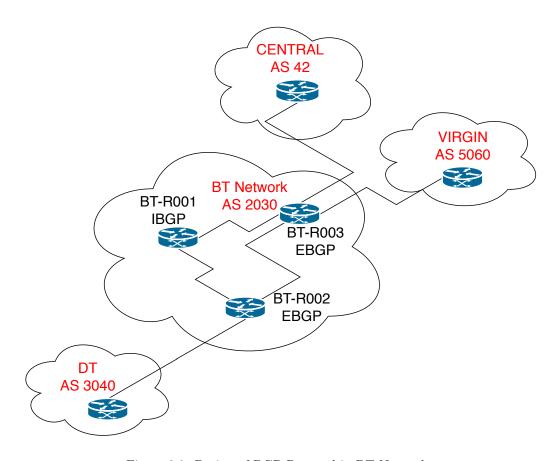


Figure 3.9: Design of BGP Protocol in BT Network.

Router 2 (BT-R002) and Router 3 (BT-R003) act as External BGP routers since they are directly connected to neighbouring ISPs. They receive routes announced by neighbouring ISPs' routers and announce routes originated from BT Network. Router 1 (BT-R001) acts

as an Internal BGP (IBGP) router only since it is not directly connected to any neighbouring ISP and only forwards and receives routes announced by EGBP routers.

3.2.2 Routing Policies

To enact business relationships with neighbouring ISPs, proper routing polices should be implemented for each different relationship in BGP protocol. Specifically, for customer ISPs, all routes announced by such ISP should be accepted and all routes received should be announced to it as well. This allows customers to connect to BT Network as well as connect to other networks through BT Network.

For non-customer neighbouring ISPs (peers and providers), all routes announced by such ISP should be accepted in order for BT Network to connect to it. Meanwhile, only routes originated from either BT Network or BT's customers are announced to such ISP.

3.2.3 Implementation

On Router 1 (BT-R001, IPv4 Loopback Address: 23.0.255.1, IPv6 Loopback Address: 2001:2300:FFFF:1::), both Router 2 (BT-R002, IPv4 Loopback Address: 23.0.255.2, IPv6 Loopback Address: 2001:2300:FFFF:2::) and Router 3 (BT-R003, IPv4 Loopback Address: 23.0.255.3, IPv6 Loopback Address: 2001:2300:FFFF:3::) are taken as neighbouring routers in the same AS. In addition, the source of BGP messages are set to be the loopback address of Router 1 to prevent physical disconnection to the 2 routers. Router 1 announces the subnet BT-R001 - BT001 (IPv4: 23.0.0.0/28, IPv6: 2001:2300:0:0::/64) to other routers.

```
router bgp 2030
retwork 23.0.0.0 mask 255.255.255.240
neighbor 23.0.255.2 remote-as 2030
neighbor 23.0.255.2 update-source Loopback0
neighbor 23.0.255.3 remote-as 2030
neighbor 23.0.255.3 update-source Loopback0
neighbor 2001:2300:FFFF:2:: remote-as 2030
neighbor 2001:2300:FFFF:2:: update-source Loopback0
neighbor 2001:2300:FFFF:3:: remote-as 2030
neighbor 2001:2300:FFFF:3:: update-source Loopback0
neighbor 2001:2300:FFFF:3:: update-source Loopback0
neighbor 2001:2300:FFFF:3:: update-source Loopback0
neighbor 2001:2300:FFFF:3:: activate
neighbor 2001:2300:FFFF:2:: activate
neighbor 2001:2300:FFFF:3:: activate
```

On Router 2 (BT-R002), both Router 1 and Router 3 are taken as neighbouring routers in the same AS while the router from DT is taken as router from AS 3040. Router 2 announces

the subnet BT-R002 - BT002 (IPv4: 23.0.0.16/28, IPv6: 2001:2300:0:1::/64) to other routers. Since Router 2 is directly connected to customer DT Network, it applies no filter on inbound and outbound routes.

```
router bgp 2030
2 network 23.0.0.16 mask 255.255.255.240
3 neighbor 23.0.0.62 remote-as 3040
4 neighbor 23.0.255.1 remote-as 2030
5 neighbor 23.0.255.1 update-source Loopback0
6 neighbor 23.0.255.3 remote-as 2030
7 neighbor 23.0.255.3 update-source Loopback0
8 neighbor 2001:2300:0:6::2 remote-as 3040
9 neighbor 2001:2300:FFFF:1:: remote-as 2030
neighbor 2001:2300:FFFF:1:: update-source Loopback0
neighbor 2001:2300:FFFF:3:: remote-as 2030
neighbor 2001:2300:FFFF:3:: update-source Loopback0
13
14 address-family ipv6
15 network 2001:2300:0:1::/64
16 neighbor 2001:2300:0:6::2 activate
neighbor 2001:2300:FFFF:1:: activate
neighbor 2001:2300:FFFF:3:: activate
```

On Router 3 (BT-R003), both Router 1 and Router 2 are taken as neighbouring routers in the same AS while the routers from Central and Virgin are taken as router from AS 42 and AS 5060 respectively. Router 3 announces the subnet BT-R003 - BT003 (IPv4: 23.0.0.32/28, IPv6: 2001:2300:0:2::/64) to other routers.

```
1 router bgp 2030
2 network 23.0.0.32 mask 255.255.255.240
3 neighbor 23.0.255.1 remote-as 2030
4 neighbor 23.0.255.1 update-source Loopback0
5 neighbor 23.0.255.2 remote-as 2030
6 neighbor 23.0.255.2 update-source Loopback0
7 neighbor 2001:2300:FFFF:1:: remote-as 2030
8 neighbor 2001:2300:FFFF:1:: update-source Loopback0
9 neighbor 2001:2300:FFFF:2:: remote-as 2030
neighbor 2001:2300:FFFF:2:: update-source Loopback0
neighbor 2001:5600:0:6::1 remote-as 5060
neighbor 56.0.0.61 remote-as 5060
13 neighbor 100.100.2.1 remote-as 42
14
15 address-family ipv6
16 network 2001:2300:0:2::/64
aggregate-address 2001:2300::/32 summary-only
neighbor 2001:2300:FFFF:1:: activate
neighbor 2001:2300:FFFF:2:: activate
```

Since Router 3 is directly connected to non-customer ISPs, it applies a filter on outbound routes, which denies all routes that pass through either Central Network (ASN: 42) or Virgin Network (ASN: 5060).

```
ip as-path access-list 1 deny _42_
ip as-path access-list 1 deny _5060_
ip as-path access-list 1 permit .*

router bgp 2030
neighbor 56.0.0.61 filter-list 1 out
neighbor 100.100.2.1 filter-list 1 out
```

Address aggregation for 23.0.0.0/8 and 2001:2300::/32 is set up on all 3 routers, which aggregates routes destined for all addresses inside BT Network range into a single route.

```
aggregate-address 23.0.0.0 255.0.0.0 summary-only
address-family ipv6
aggregate-address 2001:2300::/32 summary-only
```

3.2.4 Evaluation

3.2.4.1 BGP Routes

Routes collected through BGP protocol on all 3 routers are shown in Figure 3.10 and 3.11 using commands show bgp and show bgp ipv6. Routes to DT Network (IPv4: 34.0.0.0/8, IPv6: 2001:3400::/32), Virgin Network (IPv4: 56.0.0.0/8, IPv6: 2001:5600::/32), Central Network (IPv4: 10.2.2.0/24) and other networks can be observed in the figure.





(b) Router 2 (BT-R002)



(a) Router 1 (BT-R001)

(c) Router 3 (BT-R003)

Figure 3.10: IPv4 Routes Collected through BGP Protocols on All 3 Routers using ${\tt show}$ bgp.

(a) Router 1 (BT-R001)

Figure 3.11: IPv6 Routes Collected through BGP Protocols on Routers using show bgp ipv6.

3.2.4.2 Connectivity to Provider Central Network

The connectivity to provider Central Network using BGP protocol is tested and evaluated by tracing routes to IP addresses 10.2.2.1 on Laptop 1 (BT001). As shown in Figure 3.12, connection to Central Network is successfully established through BGP routes.

```
root@BT001:/home/bt001# traceroute 10.2.2.1
traceroute to 10.2.2.1 (10.2.2.1), 30 hops max, 60 byte packets
1 23.0.0.1 (23.0.0.1) 1.244 ms 1.605 ms 1.872 ms
2 23.0.0.58 (23.0.0.58) 1.555 ms 1.949 ms 2.268 ms
3 100.100.2.1 (100.100.2.1) 1.238 ms 1.712 ms 1.849 ms
4 pc.lboro (10.2.2.1) 1.090 ms 1.071 ms 1.051 ms
root@BT001:/home/bt001#
```

(a) 10.2.2.1

Figure 3.12: Tracing IPv4 Routes to Central Network on Laptop 1 (BT001) using traceroute.

3.2.4.3 Connectivity to Customer DT Network

The connectivity to customer DT Network using BGP protocol is tested and evaluated by tracing routes to IP addresses 34.0.0.2, 34.0.0.18 and 34.0.0.34 on Laptop 1 (BT001). As shown in Figure 3.13, connection to DT Network is successfully established through BGP routes.

```
root@BT001:/home/bt001# traceroute 34.0.0.2

traceroute to 34.0.0.2 (34.0.0.2), 30 hops max, 60 byte packets

1 23.0.0.1 (23.0.0.1) 1.225 ms 1.424 ms 1.736 ms

2 23.0.0.50 (23.0.0.50) 1.377 ms 1.668 ms 2.059 ms

3 23.0.0.62 (23.0.0.62) 1.779 ms 2.294 ms 2.740 ms

4 34.0.0.53 (34.0.0.53) 1.963 ms 2.218 ms 2.627 ms

5 34.0.0.2 (34.0.0.2) 1.631 ms 1.612 ms 2.556 ms

root@BT001:/home/bt001#
```

(a) 34.0.0.2

```
oot@BT001:/home/bt001# traceroute 34.0.0.18
traceroute to 34.0.0.18 (34.0.0.18), 30 hops max, 60 byte packets
   23.0.0.1 (23.0.0.1) 1.245 ms 1.441 ms
                                            1.861 ms
  23.0.0.50 (23.0.0.50)
                         1.406 ms
                                   1.810 ms
                                              2.216 ms
  23.0.0.62 (23.0.0.62)
                         2.020 ms
                                   2.367 ms
                                              2.827 ms
  34.0.0.18 (34.0.0.18)
                         1.536 ms
                                              1.467 ms
root@BT001:/home/bt001#
```

(b) 34.0.0.18

```
root@BT001:/home/bt001# traceroute 34.0.0.34
traceroute to 34.0.0.34 (34.0.0.34), 30 hops max, 60 byte packets
 1 23.0.0.1 (23.0.0.1) 1.231 ms 1.424 ms 1.733 ms
 2 23.0.0.50 (23.0.0.50)
                                    1.666 ms 2.049 ms
                          1.376 ms
 3 23.0.0.62 (23.0.0.62)
                                    2.317 ms
                          1.870 ms
                                              2.909 ms
    34.0.0.57 (34.0.0.57)
                          2.109 ms
                                    2.333 ms 2.652 ms
    34.0.0.34 (34.0.0.34) 1.658 ms
                                    1.642 ms 2.557 ms
 root@BT001:/home/bt001# _
```

(c) 34.0.0.34

Figure 3.13: Tracing IPv4 Routes to DT Network on Laptop 1 (BT001) using traceroute.

3.2.4.4 Connectivity to Peer Virgin Network

The connectivity to peer Virgin Network using BGP protocol is tested and evaluated by tracing routes to IP addresses 56.0.0.2, 56.0.0.18 and 56.0.0.34 on Laptop 1 (BT001). As shown in Figure 3.15, connection to Virgin Network is successfully established through BGP routes.

```
root@BT001:/etc/bind# traceroute 56.0.0.2

traceroute to 56.0.0.2 (56.0.0.2), 30 hops max, 60 byte packets

1 23.0.0.1 (23.0.0.1) 1.206 ms 1.494 ms 1.804 ms

2 23.0.0.58 (23.0.0.58) 1.425 ms 1.759 ms 2.273 ms

3 56.0.0.61 (56.0.0.61) 1.873 ms 2.329 ms 2.762 ms

4 56.0.0.49 (56.0.0.49) 1.948 ms 2.237 ms 2.442 ms

5 56.0.0.2 (56.0.0.2) 1.680 ms 1.663 ms 1.641 ms

root@BT001:/etc/bind#
```

(a) 56.0.0.2



(b) 56.0.0.18

```
root@BT001:/etc/bind# traceroute 56.0.0.34
traceroute to 56.0.0.34 (56.0.0.34), 30 hops max, 60 byte packets
1 23.0.0.1 (23.0.0.1) 1.070 ms 1.610 ms 1.827 ms
2 23.0.0.58 (28.0.0.58) 1.182 ms 1.778 ms 2.073 ms
3 56.0.0.61 (56.0.0.61) 2.478 ms 2.921 ms 3.418 ms
4 56.0.0.58 (56.0.0.58) 2.860 ms 3.147 ms 3.346 ms
5 56.0.0.34 (56.0.0.34) 2.494 ms 2.477 ms 2.460 ms
root@BT001:/etc/bind# ___
```

(c) 56.0.0.34

Figure 3.14: Tracing IPv4 Routes to Virgin Network on Laptop 1 (BT001) using traceroute.

3.2.4.5 Connectivity to Other Networks

The connectivity to other networks using BGP protocol is tested and evaluated by tracing routes to IP addresses 78.0.0.2 (Sonara Network) and 89.0.0.18 (NTT Network) on Laptop 1 (BT001). As shown in Figure 3.15, connection to Virgin Network is successfully established through BGP routes.

```
root@BT001:/etc/bind# traceroute 78.0.0.2
traceroute to 78.0.0.2 (78.0.0.2), 30 hops max, 60 byte packets
  1 23.0.0.1 (23.0.0.1)
                         1.233 ms 1.429 ms
                                              1.725 ms
    23.0.0.50 (23.0.0.50)
                                    1.643 ms
                          1.379 ms
                                               1.894 ms
  3 23.0.0.62 (23.0.0.62)
                           1.856 ms
                                    2.144 ms
                                               2.683 ms
     34.0.0.66 (34.0.0.66) 2.074 ms
                                    2.321 ms
     78.1.0.1 (78.1.0.1) 2.255 ms * *
   root@BT001:/etc/bind# _
```

(a) 78.0.0.2

```
Toot@BT001:/etc/bind# traceroute 89.0.0.18
traceroute to 89.0.0.18 (89.0.0.18), 30 hops max, 60 byte packets
1 23.0.0.1 (23.0.0.1) 1.236 ms 1.431 ms 1.795 ms
2 23.0.0.50 (23.0.0.50) 1.395 ms 1.744 ms 2.152 ms
3 23.0.0.62 (23.0.0.62) 1.904 ms 2.383 ms 2.667 ms
4 34.0.0.66 (34.0.0.66) 429.823 ms 429.804 ms 430.178 ms
5 89.0.0.18 (89.0.0.18) 1.709 ms 1.702 ms 1.678 ms
root@BT001:/etc/bind#
```

(b) 89.0.0.18

Figure 3.15: Tracing IPv4 Routes to Other Networks on Laptop 1 (BT001) using traceroute.

3.2.4.6 Connectivity to Virgin when Direct Physical Connection Is Down

In addition, the connectivity to peer Virgin Network under the unfortunate condition that the direct physical connection is down is also tested. Traced routes to IP addresses 56.0.0.2, 56.0.0.18 and 56.0.0.34 on Laptop 1 (BT001) are shown in Figure 3.16.

Alternative connection to Virgin Network is successfully established through Central Network (ASN: 42).

3.2.5 Commentary

3.2.5.1 Problem: Filter List Not Working for Self-Originated Routes

The initial filter list for outbound routes on Router 3 only permits routes originated from BT Network (ASN 2030) and customer DT Network (ASN 3040).


```
ip as-path access-list 1 permit _2030$
2 ip as-path access-list 1 permit _3040$
```

However, the filter list blocks all routes except those originated from customer DT Network to be announced. To solve this problem, a filter list where all routes except those go through provider Central Network (ASN 42) and peer Virgin Network (ASN 5060) are allowed. The new list should have the same effects as the previous list and indeed works as intended.


```
i ip as-path access-list 1 deny _42_
2 ip as-path access-list 1 deny _5060_
3 ip as-path access-list 1 permit .*
```

```
oot@BT001:/etc/bind# traceroute 56.0.0.2
   ceroute to 56.0.0.2 (56.0.0.2), 30 hops max, 60 byte packets
23.0.0.1 (23.0.0.1) 1.230 ms 1.582 ms 1.844 ms
   23.0.0.58 (23.0.0.58)
                                                   2.464 ms
                             1.662 ms 2.113 ms
   100.100.2.1 (100.100.2.1)
                                1.271 ms
                                            1.692
                                                   ms
                                                           822 ms
   100.100.5.2 (100.100.5.2)
                                1.785 ms
                                           2.188 ms
                                                           580 ms
   56.0.0.53 (56.0.0.53) 2.138 ms 2.510 ms
                                                   2.792 ms
   56.0.0.2 (56.0.0.2) 2.059 ms 0.875 ms 0.830 ms
root@BT001:/etc/bind# _
```

(a) 56.0.0.2

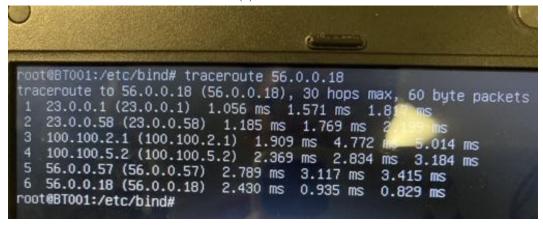

(b) 56.0.0.18

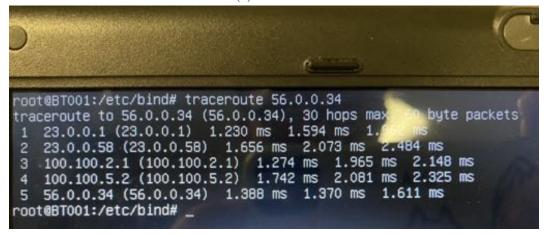

(c) 56.0.0.34

Figure 3.16: Tracing IPv4 Routes to Virgin Network on Laptop 1 (BT001) using traceroute When Direct Physical Connection Is Broken .

Chapter 4

Applications in the Network

4.1 Secure Remote Access to Routers through SSH

4.1.1 Design

Accessing the routers through the physical "console" port is inconvenient and dangerous. Thus, remote acess through Secure Shell (SSH) protocol[7] to routers is needed.

In BT network, remote SSH access is enabled on all 3 routers. Separate combinations of username and password on each router are used to ensure the independence of security of each router.

In addition, SSH public key authentication is set up on Laptop 1 (BT001), which allows the root user on the laptop to login in to all routers without entering passwords.

4.1.2 Implementation

We first set up Remote SSH access was first set up as instructed in Reference Guide on all 3 routers. Below is the configuration commands for Router 1 (BT-R001).

```
hostname BT-R001
ip domain name bt.lboro
susername r001 priv 15 secret <secret>
line vty 0 4
transport input ssh telnet
login local

procedure in ssh version 2
crypto key generate rsa general-keys
ip ssh dh min size 4096
```

We then generate a pair of public and private keys on Laptop 1 (BT001).

ssh-keygen

After that, the pair of keys is written into files ~/.ssh/id_rsa and ~/.ssh/id_rsa.pub . We use the generated public key (id_rsa.pub) to set up SSH public key authentication on all 3 routers.

```
ip ssh pubkey-chain
username r001
key-string
```

4.1.3 Evaluation

Once remote SSH access is set up on 3 routers, one should be able to access them on Laptop 1 (BT001) without entering the password using the following commands.

```
# access Router 1
2 ssh r001@23.0.0.1
3 # access Router 2
4 ssh r002@23.0.0.50
5 # access Router 3
6 ssh r003@23.0.0.33
```

Screenshots of successful remote access to all 3 routers are shown in Figure 4.1.

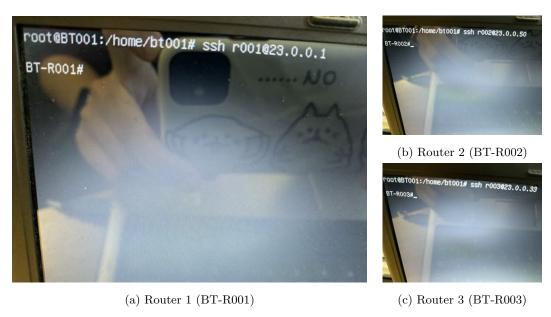


Figure 4.1: Sucessful remote SSH access to all 3 routers from Laptop 1 (BT001).

4.1.4 Commentary

4.1.4.1 Problem: Maximum Limit of Characters per Line

When we tried to set up SSH public key authentication on routers, we failed at our initial attempt. It turned out that Cisco router has maximum limit of characters for each command line. Thus, a public key in a single long line was not accepted by the router.

To solve this problem, fold command is used to split the public key into multiple lines before re-uploading the key and SSH public key authentication was successfully set up on the router.

4.2 Domain Name System Service

4.2.1 Design

Domain Name System (DNS)[8] translates IP addresses to domain names and vice versa. In contrast to hard-to-remember IP addresses, short and meaningful domain names (eg. lboro.ac.uk for Loughborough University in UK) are more convient for Internet users. Additionally, the service providers can change the IP addresses of servers without re-notifying their customers.

In BT Network, there are two DNS servers, one primary master server and the other secondary. Primary master server is deployed at Laptop 3 (BT003) and secondary master server is at Laptop 1 (BT001). The rationale is that when the primary becomes unavailable, the secondary can be the backup domain name server.

Both are authoritative of domain bt.lboro. Each laptop in the network has a corresponding domain name. For example, the domain name of Laptop 1 (BT001) is bt001.bt.lboro. In addition, both A and AAAA records of bt.lboro point to Laptop 1 while the MX record points to Laptop 3.

The two DNS servers are also connected to the central DNS server, which is authoritative of domain 1boro.

4.2.2 Implementation

Install bind9 package and dnsutils package on Laptop 1 (BT001) and Laptop 3 (BT001) using the following commands. All DNS configurations are all stored in folder /etc/bind.

```
sudo apt-get install bind9
sudo apt-get install dnsutils
```

On the primary DNS server, forward unknown DNS requests to central DNS server by adding this line to file named.conf.options.

```
forwarders { 10.2.2.1; };
```

The following lines are added to file /etc/bind/named.conf.local.

The zone section defines the type of the DNS server and it is stored in a file mentioned in the 'file' field. The 'allow-transfer' field defines a match list which has IP addresses that are allowed to do transfer and copy operations to the zone information with the server. The 'allow-notify' field defines an IP addresses match list that is allowed to notify this server and implicitly update the zone. In this case, both fields should be the IP address of the secondary DNS server (Laptop 1).

The first zone is a forward zone which translate the domain name to IP address. The zone name of it is the selected domain name bt.lboro. The second zone is the reverse zone which translate the IP address to domain name. The zone name of it should be the fixed IP prefix part and host part. In this case, the name is 23.in-addr.arpa.

```
tzone bt.lboro {
type master;
file /etc/bind/db.bt.lboro;
allow-transfer { 23.0.0.2; };
also-notify { 23.0.0.2; };
};

zone 23.in-addr.arpa {
type master;
file /etc/bind/db.23;
allow-transfer { 23.0.0.2; };
also-notify { 23.0.0.2; };
};
```

Then, the files related to forward zone and reverse zone are edited. The file db.bt.lboro whose contents are shown in Listing 4.1 defines the forward DNS configuration.

Listing 4.1: Contents of Forward DNS Configuration File Located at /etc/bind/db.bt.lboro on Primary DNS Server (Laptop 3).

```
2 ; BIND data file for BT.LBORO
4 $TTL 604800
5 @ IN SOA bt.lboro. root.bt.lboro. (
             13 ; Serial
        604800 ; Refresh
         86400 ; Retry
       2419200 ; Expire
        604800 ); Negative Cache TTL
10
11 ;
0 IN NS ns.bt.lboro.
0 IN NS ns2.bt.lboro.
14 www IN CNAME bt.lboro.
15 ns IN A 23.0.0.34
ns IN AAAA 2001:2300:0:2::2
         A 23.0.0.2
17 ns2 IN
18 ns2 IN AAAA 2001:2300:0:0::2
19 @ IN A 23.0.0.2
20 @ IN AAAA 2001:2300:0:0::2
21 @ IN MX 10 bt003.bt.lboro.
22 bt001 IN A 23.0.0.2
```

```
23 bt001 IN AAAA 2001:2300:0:0::2
24 bt002 IN A 23.0.0.18
25 bt002 IN AAAA 2001:2300:0:1::2
26 bt003 IN A 23.0.0.34
27 bt003 IN AAAA 2001:2300:0:2::2
```

Serial number is the version number of this file and it should be increased after changing the file. For each line of records, the prefix (eg. bt001), domain type (eg. A) and value (eg. 23.0.0.2) are specified.

Listing 4.2: Contents of Reverse DNS Configuration File Located at /etc/bind/db.23 on Primary DNS Server (Laptop 3).

```
; BIND reverse data file for 23.xxx.xxx.xxx net
4 $TTI. 604800
5 @ IN SOA ns.bt.lboro. root.bt.lboro. (
             7 ; Serial
                ; Refresh
         604800
         86400
                 ; Retry
                ; Expire
        2419200
9
         604800 ); Negative Cache TTL
10
11 ;
12 @ IN NS ns.
2.0.0 IN PTR bt.lboro.
14 34.0.0 IN PTR ns.bt.lboro.
2.0.0 IN PTR ns2.bt.lboro.
16 2.0.0 IN PTR bt001.bt.lboro.
17 18.0.0 IN PTR bt002.bt.lboro.
18 34.0.0 IN PTR bt003.bt.lboro.
```

Listing 4.2 shows the configuration for the reverse zone. The serial number needs to be increased on each change as well. For each line of records, the first column of match list should be reverse host part of IP address. For example, the IP address of Laptop 1 (BT001) is 23.0.0.2 and the host part of it is 0.0.2. Therefore, the reverse host part of it should be 2.0.0.

For each A record in forward configurations, a PTR records should be added to the reverse configuration.

When all configurations for DNS server are completed, use following commands to restart bind9 service to take effect.

```
service bind9 restart
```

As for secondary master, Laptop 1 (BT001) only needs to add the following lines to the file /etc/bind/named.conf.local, which specify both forward and reverse DNS zones and

Laptop 3 as their master server.

```
bt.lboro
1 zone
        type slave;
        file
              db.bt.lboro;
        masters { 23.0.0.34; };
5 };
        23.in-addr.arpa
7 zone
        type slave;
        file
               d b .23
9
        masters { 23.0.0.34; }
10
11 };
```

Restart bind9 service for configurations to take effect.

```
service bind9 restart
```

Now, Laptop 1 should be able to receive DNS records from the master server and act as a secondary DNS server.

On client's side, Laptop 3 and 2 are set as nameservers in file /etc/network/interfaces on all 3 laptops.

```
dns-nameservers 23.0.0.34 23.0.0.2
```

Full configurations for both primary and secondary DNS server are detailed in Appendix D.

4.2.3 Evaluation

The command dig is used to query DNS records on Laptop 2 for evaluation. In Figure 4.2, DNS records of bt.lboro and www.bt.lboro are "digged" and correct answers are returned by DNS servers.

In addition, DNS records of bt001.bt.lboro, bt002.bt.lboro and bt003.bt.lboro are "digged" on Laptop 2 as well. In Figure 4.3, correct answers are returned by DNS servers.

In terms of IPv6 addresses, DNS AAAA records of bt001.bt.lboro, bt002.bt.lboro and bt003.bt.lboro are "digged" on Laptop 2 as well. In Figure 4.4, correct answers are returned by DNS servers.

For reverse DNS, records of Laptop 1 (23.0.0.2), Laptop 2 (23.0.0.18) and Laptop 3 (23.0.0.34) are "digged" on Laptop 2 as well. In Figure 4.5, correct answers are returned by DNS servers.

In terms of connectivity, all three laptops are able to directly ping the domain name bt.lboro, whose DNS A record points to Laptop 1 (BT001, IPv4 Address: 23.0.0.2), as shown in Figure 4.6.



Figure 4.2: Querying DNS Records for bt.lboro and www.bt.lboro on Laptop 2.



Figure 4.3: Querying DNS Records for sub-domains of bt.lboro on Laptop 2.



Figure 4.4: Querying DNS AAAA Records for sub-domains of bt.lboro on Laptop 2.



Figure 4.5: Querying Reverse DNS Records for All 3 Laptops on Laptop 2.

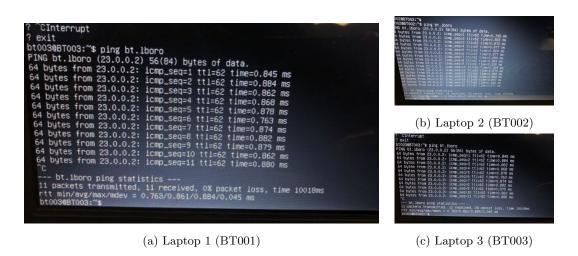


Figure 4.6: Connectivity to bt.lboro using ping on all 3 Laptops.

Under the unfortunate condition that the primary server (Laptop 3) is disconnected from the Internet, availability of DNS service in BT is also tested. As shown in Figure 4.7, DNS records are successfully retrived from the secondary DNS server (Laptop 2, IPv4 Address: 23.0.0.2) despite the fact that the primary server is down.

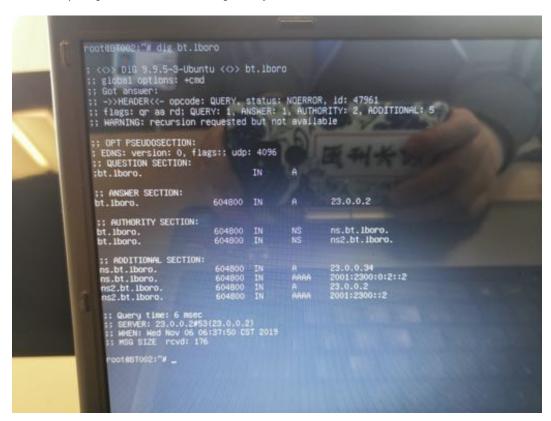


Figure 4.7: Querying DNS Records for bt.lboro on Laptop 2 When Primary DNS Server (Laptop 3) Is Down.

4.2.4 Commentary

4.2.4.1 Problem: Querying IPv6 DNS Records

Using dig directly does not return IPv6 addresses for domains. It turns out that dig queries A records by default. To query IPv6 DNS records, dig AAAA domain-name should be used.

4.2.4.2 Problem: Reverse DNS Not Working

Using dig -x 23.0.0.2 does not return any answer initially. It's later realized that the reverse DNS zone name has been wrongly set to 0.0.23.in-addr.arpa.

To set up reverse DNS properly, the DNS zone should be 3.in-addr.arpa. In addition, the first column for each DNS record inside file db.23 should be the reverse host name (eg. 2.0.0 for IP address 23.0.0.2).

4.3 World Wide Web Service

4.3.1 Design

A World Wide Web (WWW) service[9][10] in the network allows any terminal devices to access the deployed webpages. The service in BT Network is established after routers and three laptops have been configurated and DNS service been set up.

For this lab, apache2 package is chosen as the tool to establish the web server on Laptop 1 (BT001). Using the default settings of this package is enough and it has a specific folder static web pages are stored.

4.3.2 Implementation

Install apache2 package on Laptop 1 (BT001, IPv4 Address: 23.0.0.2) using following the command.

```
sudo apt-get install apache2
```

A HTML file named index.html is created as a test webpage, as detailed in Figure 4.8.

Figure 4.8: Contents of HTML File Named index.html

Then, the HTML file is copied to the folder /var/www/html. This folder is used to deploy webpages on the server. And the meaning of -r is to cover the same name file.

```
cp -r index.html /var/www/html
```

Then, install links package which is a command-line Web browser in Linux by using following command.

```
sudo apt-get install links
```

Then, links is started and the web page is accessed through URL with the local IP address.

```
links http://23.0.0.2/
```

Finally, add the following lines to the forward DNS file /etc/bind/db.bt.lboro on Primary DNS Server at Laptop 3 (BT003). This enables the clients to browse the webpages by domain name bt.lboro.

4.3.3 Evaluation

The web service is tested using the following command on Laptop 2, which is neither a DNS Server not a Web Server.

```
links http://bt.lboro/
```

As shown in Figure 4.9, the service has been successfully set up and is accessible in the network.



Figure 4.9: Web Service Provided at http://bt.lboro.

4.4 Email Service

4.4.1 Design

Email service[11] allows users to communicate with each other based on texts. In BT Network, it is set up using exim4 package on Laptop 3 (BT003).

4.4.2 Implementation

On Laptop 3 (BT003), the package exim4 is installed and configured. Important steps in the configuration are shown in 4.10.

```
apt-get install exim4
dpkg-reconfigure exim4-config
```

The full configuration of Email service is detailed in Appendix E.

4.4.3 Evaluation

For evaluation, the following command are used to send a mail to DT Network.


```
echo "mua." | sendmail -v mail@dt3.lboro
```

The mail can be seen arriving the destination in Figure 4.11.


4.4.4 Commentary

4.4.4.1 Problem: Setting Up Domain Name

At the very beginning, when we were configurating exim4, we just skipped the step and forgot to set up the domain name. Later, we found that the mail cannot be sent to other groups. The domain name is reset as bt.lboro to solve the problem.

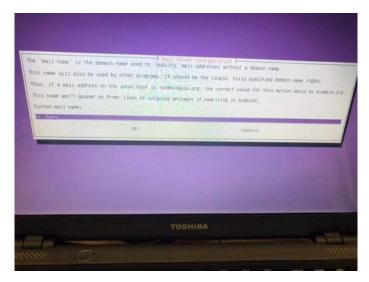

(a) Setting Up Mail Name.

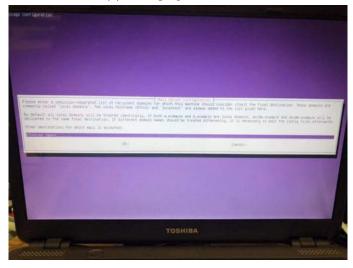

(b) Setting Up Domain Name.

Figure 4.10: Important Configuration Steps for exim4.

```
BT003:"$ echo "mua." | sendmail -v mail@dt3.lboro

at003@bt.lboro U=bt003 P=local S=272

#BT003:"$ delivering 11809S-000123-U5

aslookup for mail@dt3.lboro

moteting to mail@dt3.lboro

mecting to mail.dt3.lboro [34.0.0.18]:25 ... connected

MTP<< 220 dt4 ESMTP Exim 4.82 Ubuntu Tue, 05 Nov 2019 14:49:45 +0000

SMTP>C Eth.D BT003

SMTP<< 250-dt4 Helio BT003 [23.0.0.34]

250-81ITHINE

250-PBITHINE

250-PBITHINE

250-PBITHINE

250-PBITHINS

SMTP>> MCPT TO:cmail@dt3.lboro>

SMTP>> MAIL FROM: dbt003@bt.lboro>

SMTP>> MAIL FROM: dbt003@bt.lboro>

SMTP>> MAIL FROM: dbt003@bt.lboro>

SMTP>> MAIL FROM: dbt003@bt.lboro>

SMTP>> SMTP>> DATA

SMTP>> DATA

SMTP>> WITING

SMTP>> WITING

SMTP>> WITING

SMTP>> UITI message, ending with "." on a line by isself

SMTP>> OUT

LOG: MAIN

completed

TOSHIBA
```

(a) SMTP Sucess Message Is Returned from DT Network on Laptop 3 (BT003).



(b) Email Is Received on DT Network's Side.

Figure 4.11: Email Can Be Seen Arrived on Both Sides.

Chapter 5

Discussion

5.1 Conclusions

Several conclusions can be drawn from this lab.

- 1. BT Network, a small Tier-2 ISP, has been built and well tested.
- 2. BT Network provides both intra-domain and inter-domain Internet connection to its users. It serves common Internet applications including Web, DNS and Email as well.
- 3. BT Network forms and implements business relationships with neighbouring ISPs.
- 4. Both IS-IS and BGP routing protocols can provide alternative route(s) to the destination when one of the physicial links is down.

5.2 Further Work

For the future, the following improvements are being considered.

- 1. Implement the alternative **next-hop solution** instead of "passive interface" as in Section 3.1.5.2.
- 2. Fully test the implementation of BGP routing in IPv6. We are unable to test it as no neighbouring ISP has set up IPv6 BGP routing as far as we know.
- 3. Provide other Internet services such as Dynamic Host Configuration Protocol (DHCP)[12] and File Transfer Protocol (FTP)[13].

Chapter 6

Contributions

Our team is composed of 5 members from Loughborough University.

6.1 Group Leader: Zhihao DAI

In this lab, Zhihao DAI contributes to designing the architecture of the network, assigning IP addresses to interfaces, setting up BGP routing protocol as well as securing access to routers. Additionally, DAI is responsible for organising and formatting the whole report.

6.2 Technical Director: Yunsong ZHANG

Yunsong ZHANG contributes to designing the architecture of the network, setting up IS-IS routing protocol as well as DNS services.

6.3 Network Engineer: Huijing LEI

Huijing LEI contributes to setting up Web services. Additionally, LEI is responsible for References section in the report.

6.4 Network Engineer: Changrong CHEN

Changrong CHEN contributes to assigning IP addresses to interfaces and setting up Email services.

6.5 Network Engineer: Yan HUANG

Yan HUANG contributes to setting up Email services. Additionally, HUANG is responsible for Discussion section in the report.

References

- [1] Internet Protocol. RFC 791, September 1981.
- [2] Bob Hinden and Dr. Steve E. Deering. Internet Protocol, Version 6 (IPv6) Specification. RFC 2460, December 1998.
- [3] Gary S. Malkin. RIP Version 2. RFC 2453, November 1998.
- [4] OSI IS-IS Intra-domain Routing Protocol. RFC 1142, February 1990.
- [5] John Moy. OSPF Version 2. RFC 2328, April 1998.
- [6] Yakov Rekhter, Susan Hares, and Tony Li. A Border Gateway Protocol 4 (BGP-4). RFC 4271, January 2006.
- [7] Chris M. Lonvick and Tatu Ylonen. The Secure Shell (SSH) Transport Layer Protocol. RFC 4253, January 2006.
- [8] Domain names implementation and specification. RFC 1035, November 1987.
- [9] Tim Berners-Lee. Universal Resource Identifiers in WWW: A Unifying Syntax for the Expression of Names and Addresses of Objects on the Network as used in the World-Wide Web. RFC 1630, June 1994.
- [10] Henrik Frystyk Nielsen, Jeffrey Mogul, Larry M Masinter, Roy T. Fielding, Jim Gettys, Paul J. Leach, and Tim Berners-Lee. Hypertext Transfer Protocol – HTTP/1.1. RFC 2616, June 1999.
- [11] Pete Resnick. Internet Message Format. RFC 5322, October 2008.
- [12] Ralph Droms. Dynamic Host Configuration Protocol. RFC 2131, March 1997.
- [13] File Transfer Protocol. RFC 959, October 1985.

Appendix A

Login Details

A.1 Laptops

```
Laptop 1 (BT001):

Username: bt001

Password: Bt9049.4581

Laptop 2 (BT002):

Username: bt002

Password: Bt8717.0801

Laptop 3 (BT003):

Username: bt003

Password: Bt6941.6657
```

A.2 Routers

Routers can be remotely accessed without entering the password using public-key authenthication (root required) on Laptop 1 (BT001). The password for each router is one of $a^2+2ab+b^2$, a^2-ab+b^2 or a^2+b^2 .

```
Router 1 (BT-R001):
Username: r001

Router 2 (BT-R002):
Username: r002

Router 3 (BT-R003):
Username: r003
```

Appendix B

Routers Configuration

B.1 Router 1 Configuration

Listing B.1: Contents of Configuration on Router 1 (BT-R001).

```
27 ipv6 cef
28 multilink bundle-name authenticated
30 !
31 !
32 !
33 !
34 !
35 !
36 !
38 voice-card 0
39 !
40 !
41 !
43 !
44 license udi pid CISCO2801 sn FCZ1339C10B
45 username r001 privilege 15 secret 5 $1$zzE2$UaRCPrx0iQCcbQ1Jg1Ys21
47 !
48 ip ssh version 2
_{\rm 49} ip ssh dh min size 4096
50 ip ssh pubkey-chain
username r001
key-hash ssh-rsa AFC27BDF03A4FB6173D4D0482B4C084A
key-hash ssh-rsa 601E98BF47BA6CC0089AEC1177F6DEE5 root@BT001
54 !
56 !
57 !
59 interface Loopback0
60 ip address 23.0.255.1 255.255.255.255
ipv6 address 2001:2300:FFFF:1::/128
62 !
63 interface FastEthernet0/0
ip address 23.0.0.49 255.255.255.252
65 ip router isis
66 duplex auto
67 speed auto
68 ipv6 address 2001:2300:0:3::1/64
69 ipv6 router isis
70 !
interface FastEthernet0/1
ip address 23.0.0.57 255.255.255.252
73 ip router isis
```

```
74 duplex auto
75 speed auto
76 ipv6 address 2001:2300:0:5::1/64
77 ipv6 router isis
78 !
79 interface FastEthernet0/1/0
80 ip address 23.0.0.1 255.255.255.240
   ip router isis
82 duplex auto
83 speed auto
84 ipv6 address 2001:2300::1/64
85 ipv6 router isis
87 router isis
88 net 49.0001.0230.0025.5001.00
89 is-type level-1
90 passive-interface Loopback0
91 !
92 router bgp 2030
93 no synchronization
94 bgp log-neighbor-changes
95 network 23.0.0.0 mask 255.255.255.240
   aggregate-address 23.0.0.0 255.0.0.0 summary-only
97 neighbor 23.0.255.2 remote-as 2030
neighbor 23.0.255.2 update-source Loopback0
99 neighbor 23.0.255.3 remote-as 2030
neighbor 23.0.255.3 update-source Loopback0
   neighbor 2001:2300:FFFF:2:: remote-as 2030
101
   neighbor 2001:2300:FFFF:2:: update-source Loopback0
102
neighbor 2001:2300:FFFF:3:: remote-as 2030
neighbor 2001:2300:FFFF:3:: update-source Loopback0
no auto-summary
106
   address-family ipv6
    network 2001:2300::/64
108
    aggregate-address 2001:2300::/32 summary-only
109
   neighbor 2001:2300:FFFF:2:: activate
110
    neighbor 2001:2300:FFFF:3:: activate
111
112
   exit-address-family
113 !
_{114} ip forward-protocol nd
116 !
117 no ip http server
no ip http secure-server
119 !
120 !
```

```
121 !
122 !
123 control-plane
124 !
125 !
126 !
127 mgcp fax t38 ecm
mgcp behavior g729-variants static-pt
129 !
130 !
131 !
132 !
133 line con O
134 line aux O
135 line vty 0 4
136 login local
137 transport input telnet ssh
scheduler allocate 20000 1000
140 end
```

B.2 Router 2 Configuration

Listing B.2: Contents of Configuration on Router 2 (BT-R002).

```
1
2 !
1 ! Last configuration change at 14:35:53 UTC Mon Nov 4 2019 by r002
5 version 15.0
6 service timestamps debug datetime msec
_{7} service timestamps log datetime msec
8 no service password-encryption
10 hostname BT-R002
12 boot-start-marker
13 boot-end-marker
14 !
15 !
16 no aaa new-model
17 dot11 syslog
18 ip source-route
20 !
21 !
22 !
23 ip cef
24 no ip domain lookup
25 ip domain name bt.lboro
26 ipv6 unicast-routing
27 ipv6 cef
28 multilink bundle-name authenticated
30 !
31 !
32 !
33 !
34 !
35 !
36 !
38 voice-card 0
39 !
40 !
41 !
```

```
43 !
44 license udi pid CISCO2801 sn FCZ1339C100
username r002 privilege 15 secret 5 $1$..EF$yfYESFK6llTyMnP.f1ABh0
46 !
47 !
48 ip ssh version 2
49 ip ssh dh min size 4096
50 ip ssh pubkey-chain
username r002
key-hash ssh-rsa 601E98BF47BA6CC0089AEC1177F6DEE5 root@BT001
54 !
55 !
56 !
57 !
58 interface Loopback0
ip address 23.0.255.2 255.255.255.255
60 ipv6 address 2001:2300:FFFF:2::/128
61 !
_{62} interface FastEthernet0/0
ip address 23.0.0.50 255.255.255.252
64 ip router isis
65 duplex auto
66 speed auto
67 ipv6 address 2001:2300:0:3::2/64
68 ipv6 router isis
69 !
70 interface FastEthernet0/1
ip address 23.0.0.53 255.255.255.252
72 ip router isis
73 duplex auto
74 speed auto
75 ipv6 address 2001:2300:0:4::1/64
76 ipv6 router isis
77 !
78 interface FastEthernet0/1/0
80 interface FastEthernet0/1/1
81 switchport access vlan 3
83 interface FastEthernet0/1/2
85 interface FastEthernet0/1/3
87 interface Vlan1
88 ip address 23.0.0.17 255.255.255.240
89 ip router isis
```

```
90 ipv6 address 2001:2300:0:1::1/64
91 ipv6 router isis
93 interface Vlan3
94 ip address 23.0.0.61 255.255.255.252
95 ipv6 address 2001:2300:0:6::1/64
96 !
97 router isis
   net 49.0001.0230.0025.5002.00
99 is-type level-1
passive-interface Vlan3
   passive-interface Loopback0
102 !
103 router bgp 2030
104 bgp log-neighbor-changes
neighbor 23.0.0.62 remote-as 3040
neighbor 23.0.255.1 remote-as 2030
   neighbor 23.0.255.1 update-source Loopback0
   neighbor 23.0.255.3 remote-as 2030
108
   neighbor 23.0.255.3 update-source Loopback0
109
   neighbor 2001:2300:0:6::2 remote-as 3040
neighbor 2001:2300:FFFF:1:: remote-as 2030
   neighbor 2001:2300:FFFF:1:: update-source Loopback0
   neighbor 2001:2300:FFFF:3:: remote-as 2030
113
   neighbor 2001:2300:FFFF:3:: update-source Loopback0
114
115
   address-family ipv4
116
    no synchronization
117
     network 23.0.0.16 mask 255.255.255.240
118
     aggregate-address 23.0.0.0 255.0.0.0 summary-only
119
120
     neighbor 23.0.0.62 activate
    neighbor 23.0.255.1 activate
121
     neighbor 23.0.255.3 activate
     neighbor 2001:2300:0:6::2 activate
    neighbor 2001:2300:FFFF:1:: activate
124
    neighbor 2001:2300:FFFF:3:: activate
125
    no auto-summary
126
   exit-address-family
127
   address-family ipv6
129
    network 2001:2300:0:1::/64
130
    aggregate-address 2001:2300::/32 summary-only
131
    neighbor 2001:2300:0:6::2 activate
132
     neighbor 2001:2300:FFFF:1:: activate
     neighbor 2001:2300:FFFF:3:: activate
134
   exit-address-family
135
```

```
137 ip forward-protocol nd
138 !
139 !
140 no ip http server
141 no ip http secure-server
142 !
143 !
144 !
145 !
146 control-plane
148 !
150 mgcp fax t38 ecm
mgcp behavior g729-variants static-pt
153 !
154 !
155 !
156 line con O
157 line aux 0
158 line vty 0 4
159 login local
transport input telnet ssh
161 !
scheduler allocate 20000 1000
163 end
```

B.3 Router 3 Configuration

Listing B.3: Contents of Configuration on Router 3 (BT-R003).

```
1
2 !
1 Last configuration change at 06:40:58 UTC Sun Nov 3 2019 by r003
5 version 15.0
6 service timestamps debug datetime msec
_{7} service timestamps log datetime msec
8 no service password-encryption
_{10} hostname BT-R003
12 boot-start-marker
13 boot-end-marker
14 !
15 !
16 no aaa new-model
17 dot11 syslog
18 ip source-route
20 !
21 !
22 !
23 ip cef
24 no ip domain lookup
25 ip domain name bt.lboro
26 ipv6 unicast-routing
27 ipv6 cef
28 multilink bundle-name authenticated
30 !
31 !
32 !
33 !
34 !
35 !
36 !
38 voice-card 0
39 !
40 !
41 !
```

```
43 !
44 license udi pid CISCO2801 sn FCZ124112JK
username r003 privilege 15 secret 5 $1$Jn3f$1SSIZA5X0c0JxuXDkz8rE/
46 !
47 !
48 ip ssh version 2
49 ip ssh dh min size 4096
50 ip ssh pubkey-chain
username r003
key-hash ssh-rsa 601E98BF47BA6CC0089AEC1177F6DEE5 root@BT001
54 !
55 !
56 !
57 !
58 interface Loopback0
ip address 23.0.255.3 255.255.255.255
60 ipv6 address 2001:2300:FFFF:3::/128
61 !
62 interface FastEthernet0/0
ip address 23.0.0.58 255.255.255.252
64 ip router isis
65 duplex auto
66 speed auto
ipv6 address 2001:2300:0:5::2/64
68 ipv6 router isis
69 !
70 interface FastEthernet0/1
ip address 23.0.0.54 255.255.255.252
72 ip router isis
73 duplex auto
74 speed auto
75 ipv6 address 2001:2300:0:4::2/64
76 ipv6 router isis
77 !
78 interface FastEthernet0/1/0
79 switchport access vlan 2
81 interface FastEthernet0/1/1
82 switchport access vlan 5
83 !
84 interface FastEthernet0/1/2
85 switchport access vlan 4
87 interface FastEthernet0/1/3
89 interface Vlan1
```

```
90 no ip address
92 interface Vlan2
93 ip address 23.0.0.33 255.255.255.240
94 ip router isis
95 ipv6 address 2001:2300:0:2::1/64
96 ipv6 router isis
97 !
98 interface Vlan4
99 ip address 56.0.0.62 255.255.255.252
ipv6 address 2001:5600:0:6::2/64
101 !
102 interface Vlan5
ip address 100.100.2.2 255.255.255.252
104 !
105 router isis
net 49.0001.0230.0025.5003.00
   is-type level-1
   passive-interface Vlan4
passive-interface Vlan5
passive-interface Loopback0
111 !
112 router bgp 2030
113 no synchronization
114 bgp log-neighbor-changes
network 23.0.0.32 mask 255.255.255.240
aggregate-address 23.0.0.0 255.0.0.0 summary-only
   neighbor 23.0.255.1 remote-as 2030
117
   neighbor 23.0.255.1 update-source Loopback0
118
   neighbor 23.0.255.2 remote-as 2030
119
neighbor 23.0.255.2 update-source Loopback0
neighbor 2001:2300:FFFF:1:: remote-as 2030
neighbor 2001:2300:FFFF:1:: update-source Loopback0
   neighbor 2001:2300:FFFF:2:: remote-as 2030
   neighbor 2001:2300:FFFF:2:: update-source Loopback0
124
   neighbor 2001:5600:0:6::1 remote-as 5060
125
   neighbor 56.0.0.61 remote-as 5060
126
   neighbor 56.0.0.61 filter-list 1 out
127
   neighbor 100.100.2.1 remote-as 42
   neighbor 100.100.2.1 filter-list 1 out
129
   no auto-summary
131
132 address-family ipv6
    network 2001:2300:0:2::/64
133
    aggregate-address 2001:2300::/32 summary-only
134
    neighbor 2001:2300:FFFF:1:: activate
135
neighbor 2001:2300:FFFF:2:: activate
```

```
137 exit-address-family
ip forward-protocol nd
140 !
ip as-path access-list 1 deny _42_
ip as-path access-list 1 deny _5060_
ip as-path access-list 1 permit .*
144 !
145 no ip http server
_{146} no ip http secure-server \,
148 !
149 !
150 !
151 control-plane
153 !
155 mgcp fax t38 ecm
mgcp behavior g729-variants static-pt
158 !
159 !
160 !
_{161} line con _{0}
162 line aux 0
163 line vty 0 4
164 login local
transport input telnet ssh
166 !
scheduler allocate 20000 1000
168 end
```

Appendix C

Laptops Configuration

C.1 Laptop 1 Configuration

Listing C.1: Contents of Interfaces Network Configuration File Located at /etc/network/interfaces on Laptop 1 (BT001).

```
_{
m 1} # This file describes the network interfaces available on your system
_{\rm 2} # and how to activate them. For more information, see interfaces(5).
4 # The loopback network interface
5 auto lo
6 iface lo inet loopback
8 # The primary network interface
9 auto eth0
10 iface eth0 inet static
address 23.0.0.2
netmask 255.255.255.240
   gateway 23.0.0.1
   dns-nameservers 23.0.0.34 23.0.0.2
15 # up flush-mail
17
18 iface eth0 inet6 static
   address 2001:2300::2
netmask 64
gateway 2001:2300::1
```

C.2 Laptop 2 Configuration

Listing C.2: Contents of Interfaces Network Configuration File Located at /etc/network/interfaces on Laptop 2 (BT002).

```
_{\rm 1} # This file describes the network interfaces available on your system
_{2} # and how to activate them. For more information, see interfaces(5).
4 # The loopback network interface
6 iface lo inet loopback
8 # The primary network interface
9 auto eth0
10 iface eth0 inet static
        address 23.0.0.18
11
         netmask 255.255.255.240
gateway 23.0.0.17
   dns-nameservers 23.0.0.34 23.0.0.2
          up flush-mail
17 iface eth0 inet6 static
address 2001:2300:0:1::2
netmask 64
gateway 2001:2300:0:1::1
```

C.3 Laptop 3 Configuration

Listing C.3: Contents of Interfaces Network Configuration File Located at /etc/network/interfaces on Laptop 3 (BT003).

```
_{\rm 1} # This file describes the network interfaces available on your system
_{2} # and how to activate them. For more information, see interfaces(5).
4 # The loopback network interface
6 iface lo inet loopback
8 # The primary network interface
9 auto eth0
10 iface eth0 inet static
   address 23.0.0.2
netmask 255.255.255.240
gateway 23.0.0.1
   dns-nameservers 23.0.0.34 23.0.0.2
15 # up flush-mail
16
17
18 iface eth0 inet6 static
   address 2001:2300::2
   netmask 64
gateway 2001:2300::1
```

Appendix D

DNS Configuration

D.1 Primary DNS Server (Laptop 3)

Listing D.1: Contents of DNS Configuration File Located at /etc/bind/named.conf.options on Primary DNS Server (Laptop 3).

```
directory "/var/cache/bind";
    // If there is a firewall between you and nameservers you want
    // to talk to, you may need to fix the firewall to allow multiple
    // ports to talk. See http://www.kb.cert.org/vuls/id/800113
    // If your ISP provided one or more IP addresses for stable
    // nameservers, you probably want to use them as forwarders.
    // Uncomment the following block, and insert the addresses replacing
    // the all-0's placeholder.
11
12
    // forwarders {
    // 0.0.0.0;
    // };
16
17
    \ensuremath{//} If BIND logs error messages about the root key being expired,
    // you will need to update your keys. See https://www.isc.org/bind-keys
19
    //----
20
    // dnssec-validation auto;
21
22
    auth-nxdomain no;
                      # conform to RFC1035
23
    listen-on-v6 { any; };
```

```
forwarders { 10.2.2.1; };
recursion yes;
dnssec-enable no;
dnssec-validation no;
empty-zones-enable no;
allow-query {any;};
};
```

Listing D.2: Contents of Local DNS Configuration File Located at /etc/bind/named.conf.local on Primary DNS Server (Laptop 3).

```
2 // Do any local configuration here
3 //
_{5} // Consider adding the 1918 zones here, if they are not used in your
6 // organization
7 //include "/etc/bind/zones.rfc1918";
g zone "bt.lboro" {
type master;
   file "/etc/bind/db.bt.lboro";
allow-transfer { 23.0.0.2; };
also-notify { 23.0.0.2; };
14 };
15
zone "23.in-addr.arpa" {
17 type master;
file "/etc/bind/db.23";
19 allow-transfer { 23.0.0.2; };
20 also-notify { 23.0.0.2; };
21 };
```

D.2 Secondary DNS Server (Laptop 1)

Listing D.3: Contents of DNS Configuration File Located at /etc/bind/named.conf.options on Secondary DNS Server (Laptop 1).

```
directory "/var/cache/bind";
    // If there is a firewall between you and nameservers you want
    // to talk to, you may need to fix the firewall to allow multiple
    // ports to talk. See http://www.kb.cert.org/vuls/id/800113
    // If your ISP provided one or more IP addresses for stable
    // nameservers, you probably want to use them as forwarders.
9
    // Uncomment the following block, and insert the addresses replacing
10
    // the all-0's placeholder.
12
    // forwarders {
13
    // 0.0.0.0;
14
    // };
15
17
    // If BIND logs error messages about the root key being expired,
18
    // you will need to update your keys. See https://www.isc.org/bind-keys
19
    //-----
20
    dnssec-validation auto;
21
22
23
    auth-nxdomain no;
                       # conform to RFC1035
    listen-on-v6 { any; };
25 };
```

Listing D.4: Contents of Local DNS Configuration File Located at /etc/bind/named.conf.local on Secondary DNS Server (Laptop 1).

```
//
2 // Do any local configuration here
3 //
4
5 // Consider adding the 1918 zones here, if they are not used in your
6 // organization
7 //include "/etc/bind/zones.rfc1918";
8
9 zone "bt.lboro" {
10 type slave;
11 file "db.bt.lboro";
12 masters { 23.0.0.34; };
```

APPENDIX D. DNS CONFIGURATION

```
13 };
14
15 zone "0.0.23.in-addr.arpa" {
16  type slave;
17  file "db.23";
18  masters { 23.0.0.34; };
19 };
```

Appendix E

Email Configuration

Listing E.1: Contents of Generated Email Configuration File Located at /var/lib/exim4/config.autogenerated on Email Server (Laptop 3).

```
1 #########
 2 # WARNING WARNING WARNING
3 # WARNING WARNING WARNING
4 # WARNING WARNING WARNING
5 # WARNING WARNING WARNING
6 # WARNING WARNING WARNING
7 # This file was generated dynamically from
8 # non-split config (/etc/exim4/exim4.conf.localmacros
9 # and /etc/exim4/exim4.conf.template).
10 # The config files are supplemented with package installation/configuration
11 # settings managed by debconf. This data is stored in
# /etc/exim4/update-exim4.conf.conf
# Any changes you make here will be lost.
# See /usr/share/doc/exim4-base/README.Debian.gz and update-exim4.conf(8)
# for instructions of customization.
16 # WARNING WARNING WARNING
17 # WARNING WARNING WARNING
18 # WARNING WARNING WARNING
19 # WARNING WARNING WARNING
20 # WARNING WARNING WARNING
21 #########
23 exim_path = /usr/sbin/exim4
25 .ifndef CONFDIR
26 CONFDIR = /etc/exim4
27 .endif
```

```
29 UPEX4CmacrosUPEX4C = 1
# the following macro definitions were created
# dynamically by /usr/sbin/update-exim4.conf
33 .ifndef MAIN_PACKAGE_VERSION
MAIN_PACKAGE_VERSION=4.82-3ubuntu2
35 .endif
36 .ifndef MAIN_LOCAL_DOMAINS
37 MAIN_LOCAL_DOMAINS=@:localhost:bt003:bt.lboro
39 .ifndef MAIN_RELAY_TO_DOMAINS
40 MAIN_RELAY_TO_DOMAINS = empty
41 .endif
_{\rm 42} .ifndef ETC_MAILNAME
43 ETC_MAILNAME=bt.lboro
44 .endif
45 .ifndef LOCAL_DELIVERY
46 LOCAL_DELIVERY=mail_spool
47 .endif
48 .ifndef MAIN_RELAY_NETS
49 MAIN_RELAY_NETS=: 127.0.0.1 : ::::1
50 .endif
51 .ifndef DCreadhost
52 DCreadhost = empty
53 .endif
54 .ifndef DCsmarthost
55 DCsmarthost=empty
.ifndef DC_eximconfig_configtype
DC_eximconfig_configtype=internet
59 .endif
60 .ifndef DCconfig_internet
61 DCconfig_internet=1
62 .endif
66 domainlist local_domains = MAIN_LOCAL_DOMAINS
68 domainlist relay_to_domains = MAIN_RELAY_TO_DOMAINS
70 hostlist relay_from_hosts = MAIN_RELAY_NETS
72 .ifndef MAIN_PRIMARY_HOSTNAME_AS_QUALIFY_DOMAIN
73 .ifndef MAIN_QUALIFY_DOMAIN
74 qualify_domain = ETC_MAILNAME
```

```
75 .else
76 qualify_domain = MAIN_QUALIFY_DOMAIN
77 .endif
78 .endif
80 .ifdef MAIN_LOCAL_INTERFACES
81 local_interfaces = MAIN_LOCAL_INTERFACES
82 .endif
84 .ifndef LOCAL_DELIVERY
85 LOCAL_DELIVERY=mail_spool
86 .endif
88 gecos_pattern = ^([^,:]*)
89 gecos_name = $1
91 .ifndef CHECK_RCPT_LOCAL_LOCALPARTS
92 CHECK_RCPT_LOCAL_LOCALPARTS = ^[.] : ^.*[@%!/|'#&?]
93 .endif
95 .ifndef CHECK_RCPT_REMOTE_LOCALPARTS
96 CHECK_RCPT_REMOTE_LOCALPARTS = ^[./|] : ^.*[@%!'#&?] : ^.*/\\.\/./
97 .endif
99 .ifndef MAIN_LOG_SELECTOR
MAIN_LOG_SELECTOR = +tls_peerdn
101 .endif
102
.ifndef MAIN_ACL_CHECK_MAIL
104 MAIN_ACL_CHECK_MAIL = acl_check_mail
acl_smtp_mail = MAIN_ACL_CHECK_MAIL
108 .ifndef MAIN_ACL_CHECK_RCPT
MAIN_ACL_CHECK_RCPT = acl_check_rcpt
110 .endif
acl_smtp_rcpt = MAIN_ACL_CHECK_RCPT
113 .ifndef MAIN_ACL_CHECK_DATA
MAIN_ACL_CHECK_DATA = acl_check_data
115 .endif
116 acl_smtp_data = MAIN_ACL_CHECK_DATA
.ifdef MESSAGE_SIZE_LIMIT
message_size_limit = MESSAGE_SIZE_LIMIT
120 .endif
```

```
122 .ifdef MAIN_ALLOW_DOMAIN_LITERALS
123 allow_domain_literals
124 .endif
125
126 .ifndef DC_minimaldns
.ifndef MAIN_HOST_LOOKUP
128 MAIN_HOST_LOOKUP = *
129 .endif
130 host_lookup = MAIN_HOST_LOOKUP
131 .endif
133 .ifdef MAIN_HARDCODE_PRIMARY_HOSTNAME
primary_hostname = MAIN_HARDCODE_PRIMARY_HOSTNAME
.ifdef MAIN_SMTP_ACCEPT_MAX_NOMAIL_HOSTS
smtp_accept_max_nonmail_hosts = MAIN_SMTP_ACCEPT_MAX_NOMAIL_HOSTS
139 .endif
.ifndef MAIN_FORCE_SENDER
142 local_from_check = false
143 local_sender_retain = true
144 untrusted_set_sender = *
145 .endif
146
147 .ifndef MAIN_IGNORE_BOUNCE_ERRORS_AFTER
148 MAIN_IGNORE_BOUNCE_ERRORS_AFTER = 2d
149 .endif
ignore_bounce_errors_after = MAIN_IGNORE_BOUNCE_ERRORS_AFTER
151
152 .ifndef MAIN_TIMEOUT_FROZEN_AFTER
153 MAIN_TIMEOUT_FROZEN_AFTER = 7d
154 endif
timeout_frozen_after = MAIN_TIMEOUT_FROZEN_AFTER
156
.ifndef MAIN_FREEZE_TELL
158 MAIN_FREEZE_TELL = postmaster
159 .endif
160 freeze_tell = MAIN_FREEZE_TELL
162 .ifndef SPOOLDIR
SPOOLDIR = /var/spool/exim4
164 .endif
spool_directory = SPOOLDIR
167 .ifndef MAIN_TRUSTED_USERS
168 MAIN_TRUSTED_USERS = uucp
```

```
169 .endif
trusted_users = MAIN_TRUSTED_USERS
.ifdef MAIN_TRUSTED_GROUPS
172 trusted_groups = MAIN_TRUSTED_GROUPS
173 .endif
174
.ifdef MAIN_TLS_ENABLE
176 .ifndef MAIN_TLS_ADVERTISE_HOSTS
177 MAIN_TLS_ADVERTISE_HOSTS = *
178 .endif
tls_advertise_hosts = MAIN_TLS_ADVERTISE_HOSTS
.ifdef MAIN_TLS_CERTKEY
182 tls_certificate = MAIN_TLS_CERTKEY
183 .else
.ifndef MAIN_TLS_CERTIFICATE
185 MAIN_TLS_CERTIFICATE = CONFDIR/exim.crt
186 .endif
187 tls_certificate = MAIN_TLS_CERTIFICATE
.ifndef MAIN_TLS_PRIVATEKEY
190 MAIN_TLS_PRIVATEKEY = CONFDIR/exim.key
191 .endif
192 tls_privatekey = MAIN_TLS_PRIVATEKEY
193 .endif
195 .ifndef MAIN_TLS_VERIFY_CERTIFICATES
MAIN_TLS_VERIFY_CERTIFICATES = ${if exists{/etc/ssl/certs/ca-certificates.crt
                                        {/etc/ssl/certs/ca-certificates.crt}\
197
198
               {/dev/null}}
199 .endif
200 tls_verify_certificates = MAIN_TLS_VERIFY_CERTIFICATES
202 .ifdef MAIN_TLS_VERIFY_HOSTS
203 tls_verify_hosts = MAIN_TLS_VERIFY_HOSTS
204 .endif
205
206 .ifdef MAIN_TLS_TRY_VERIFY_HOSTS
207 tls_try_verify_hosts = MAIN_TLS_TRY_VERIFY_HOSTS
208 .endif
210 .endif
212 .ifdef MAIN_LOG_SELECTOR
213 log_selector = MAIN_LOG_SELECTOR
214 .endif
```

```
215
216 begin acl
218 acl_local_deny_exceptions:
219
     accept
       hosts = ${if exists{CONFDIR/host_local_deny_exceptions}\
220
                     {CONFDIR/host_local_deny_exceptions}
221
                     {}}
     accept
223
       senders = ${if exists{CONFDIR/sender_local_deny_exceptions}\
224
                       {CONFDIR/sender_local_deny_exceptions}\
225
                       {}}
226
227
     accept
       hosts = ${if exists{CONFDIR/local_host_whitelist}\
228
                     {CONFDIR/local_host_whitelist}\
229
230
     accept
231
       senders = ${if exists{CONFDIR/local_sender_whitelist}\
                        {CONFDIR/local_sender_whitelist}\
233
                       {}}
234
235
     .ifdef LOCAL_DENY_EXCEPTIONS_LOCAL_ACL_FILE
236
     .include LOCAL_DENY_EXCEPTIONS_LOCAL_ACL_FILE
237
     .endif
238
239
     .ifdef WHITELIST_LOCAL_DENY_LOCAL_ACL_FILE
     .include WHITELIST_LOCAL_DENY_LOCAL_ACL_FILE
241
     .endif
242
244 acl_check_mail:
     .ifdef CHECK_MAIL_HELO_ISSUED
245
246
       message = no HELO given before MAIL command
247
       condition = ${if def:sender_helo_name {no}{yes}}
     .endif
249
250
251
     accept
252
   acl_check_rcpt:
254
255
     accept
      hosts = :
256
       control = dkim_disable_verify
257
259 .ifdef DC_minimaldns
260
    warn
261      control = dkim_disable_verify
```

```
262 .else
263 .ifdef DISABLE_DKIM_VERIFY
       control = dkim_disable_verify
265
266 .endif
267 .endif
268
     .ifdef CHECK_RCPT_LOCAL_LOCALPARTS
     deny
270
271
      domains = +local_domains
      local_parts = CHECK_RCPT_LOCAL_LOCALPARTS
272
      message = restricted characters in address
273
     .endif
275
276
277
     .ifdef CHECK_RCPT_REMOTE_LOCALPARTS
278
     deny
       domains = !+local_domains
       local_parts = CHECK_RCPT_REMOTE_LOCALPARTS
281
       message = restricted characters in address
     .endif
283
284
     accept
285
       .ifndef CHECK_RCPT_POSTMASTER
286
287
       local_parts = postmaster
       .else
288
       local_parts = CHECK_RCPT_POSTMASTER
289
       domains = +local_domains : +relay_to_domains
291
292
     .ifdef CHECK_RCPT_VERIFY_SENDER
293
     deny
294
       message = Sender verification failed
       !acl = acl_local_deny_exceptions
296
       !verify = sender
297
     .endif
298
299
     deny
       !acl = acl_local_deny_exceptions
301
       senders = ${if exists{CONFDIR/local_sender_callout}\
302
                              {CONFDIR/local_sender_callout}\
303
                       {}}
304
       !verify = sender/callout
305
306
307
     accept
   hosts = +relay_from_hosts
```

```
control = submission/sender_retain
309
       control = dkim_disable_verify
310
311
     accept
312
313
       authenticated = *
       control = submission/sender_retain
314
       control = dkim_disable_verify
315
     require
317
318
       message = relay not permitted
       domains = +local_domains : +relay_to_domains
319
320
321
     require
       verify = recipient
322
323
324
       !acl = acl_local_deny_exceptions
325
       recipients = ${if exists{CONFDIR/local_rcpt_callout}\
                                 {CONFDIR/local_rcpt_callout}\
327
                           {}}
328
       !verify = recipient/callout
330
331
     deny
       message = sender envelope address $sender_address is locally blacklisted
332
       here. If you think this is wrong, get in touch with postmaster
333
       !acl = acl_local_deny_exceptions
       senders = ${if exists{CONFDIR/local_sender_blacklist}\
334
                       {CONFDIR/local_sender_blacklist}\
335
                       {}}
336
337
338
     denv
       message = sender IP address $sender_host_address is locally blacklisted
339
       here. If you think this is wrong, get in touch with postmaster
       !acl = acl_local_deny_exceptions
       hosts = ${if exists{CONFDIR/local_host_blacklist}\
341
                     {CONFDIR/local_host_blacklist}\
342
                     {}}
343
344
     .ifdef CHECK_RCPT_REVERSE_DNS
346
347
       condition = ${if and{{def:sender_host_address}{!def:sender_host_name}}\
                          {yes}{no}}
348
       add_header = X-Host-Lookup-Failed: Reverse DNS lookup failed for
349
       $sender_host_address (${if eq{$host_lookup_failed}{{1}{failed}{deferred}}})
350
351
   .ifdef CHECK_RCPT_SPF
```

```
deny
353
       message = [SPF] \$sender_host_address is not allowed to send mail from \
354
                  ${if def:sender_address_domain {$sender_address_domain}{
       $sender_helo_name}}.
                  Please see \
356
           http://www.openspf.org/Why?scope=${if def:sender_address_domain \
357
                  {mfrom}{helo}};identity=${if def:sender_address_domain \
358
                  {\$sender_address}{\$sender_helo_name}}; ip=\$sender_host_address
       log_message = SPF check failed.
360
361
       !acl = acl_local_deny_exceptions
       condition = ${run{/usr/bin/spfquery.mail-spf-perl --ip \
362
                       ${quote:$sender_host_address} --identity \
363
                       ${if def:sender_address_domain \
                            {--scope mfrom --identity ${quote:$sender_address}}
365
                            {--scope helo --identity ${quote:$sender_helo_name}}}}\
366
                       {no}{${if eq {$runrc}{1}{yes}{no}}}}
367
368
     defer
       message = Temporary DNS error while checking SPF record. Try again later.
370
       !acl = acl_local_deny_exceptions
371
       condition = ${if eq {$runrc}{5}{yes}{no}}
372
373
374
     warn
       condition = ${if <={$runrc}{6}{yes}{no}}</pre>
       add_header = Received-SPF: ${if eq {$runrc}{0}{pass}\
376
377
                                     {\$\if eq \$\runrc\{2\}\\softfail\\
                                      {fif eq {srunrc}{3}{neutral}}
378
              {\$if eq {\$runrc}{4}{\permerror}\
379
               {${if eq {$runrc}{6}{none}{error}}}}}}}}}
           } client-ip=$sender_host_address; \
381
           ${if def:sender_address_domain \
382
               {envelope-from=${sender_address}; }{}}\
383
           helo=$sender_helo_name
384
     warn
386
       log_message = Unexpected error in SPF check.
387
       condition = \{if > \{\text{funrc}\}\{6\}\{\text{yes}\}\{no}\}
388
     .endif
389
     .ifdef CHECK_RCPT_IP_DNSBLS
391
     warn
392
       dnslists = CHECK_RCPT_IP_DNSBLS
393
       add_header = X-Warning: $sender_host_address is listed at $dnslist_domain
394
       ($dnslist_value: $dnslist_text)
       log_message = $sender_host_address is listed at $dnslist_domain (
395
       $dnslist_value: $dnslist_text)
   .endif
```

```
397
     .ifdef CHECK_RCPT_DOMAIN_DNSBLS
398
       !senders = ${if exists{CONFDIR/local_domain_dnsbl_whitelist}\
400
                         {CONFDIR/local_domain_dnsbl_whitelist}\
401
402
                         {}}
       dnslists = CHECK_RCPT_DOMAIN_DNSBLS
403
       add_header = X-Warning: $sender_address_domain is listed at
       $dnslist_domain ($dnslist_value: $dnslist_text)
       log_message = $sender_address_domain is listed at $dnslist_domain (
405
       $dnslist_value: $dnslist_text)
     .endif
406
     .ifdef CHECK_RCPT_LOCAL_ACL_FILE
408
     .include CHECK_RCPT_LOCAL_ACL_FILE
409
     .endif
410
411
412
     accept
       domains = +relay_to_domains
413
414
       endpass
415
       verify = recipient
416
417
     accept
418
419 acl_check_data:
420
     .ifdef CHECK_DATA_VERIFY_HEADER_SYNTAX
421
     deny
422
       message = Message headers fail syntax check
       !acl = acl_local_deny_exceptions
424
425
       !verify = header_syntax
     .endif
426
427
428
     . \verb| ifdef CHECK_DATA_VERIFY_HEADER_SENDER| \\
     deny
429
       message = No verifiable sender address in message headers
430
       !acl = acl_local_deny_exceptions
431
       !verify = header_sender
432
     .endif
434
     .ifdef CHECK_DATA_LOCAL_ACL_FILE
435
     .include CHECK_DATA_LOCAL_ACL_FILE
436
     .endif
437
438
439
     accept
440
441 begin routers
```

```
443 .ifdef MAIN_ALLOW_DOMAIN_LITERALS
444 domain_literal:
     debug_print = "R: domain_literal for $local_part@$domain"
445
     driver = ipliteral
     domains = ! +local_domains
447
     transport = remote_smtp
   .endif
450
451 hubbed_hosts:
452
     debug_print = "R: hubbed_hosts for $domain"
     driver = manualroute
453
     domains = "${if exists{CONFDIR/hubbed_hosts}\
                       {partial-lsearch; CONFDIR/hubbed_hosts}\
455
                 fail}"
456
     same_domain_copy_routing = yes
457
     route_data = ${lookup{$domain}partial-lsearch{CONFDIR/hubbed_hosts}}
458
     transport = remote_smtp
461 .ifdef DCconfig_internet
dnslookup_relay_to_domains:
     debug_print = "R: dnslookup_relay_to_domains for $local_part@$domain"
     driver = dnslookup
465
     domains = ! +local_domains : +relay_to_domains
466
     transport = remote_smtp
     same_domain_copy_routing = yes
468
469
     no_more
471 dnslookup:
472
     debug_print = "R: dnslookup for $local_part@$domain"
     driver = dnslookup
473
     domains = ! +local_domains
474
     transport = remote_smtp
     same_domain_copy_routing = yes
476
     ignore_target_hosts = 0.0.0.0 : 127.0.0.0/8 : 192.168.0.0/16 :\
477
                            172.16.0.0/12 : 10.0.0.0/8 : 169.254.0.0/16 :\
478
         255.255.255.255
479
     no_more
481
482 .endif
484 .ifdef DCconfig_local
485 nonlocal:
     debug_print = "R: nonlocal for $local_part@$domain"
486
     driver = redirect
487
domains = ! +local_domains
```

```
allow_fail
489
     data = :fail: Mailing to remote domains not supported
490
492
493 .endif
494
.ifdef DCconfig_smarthost DCconfig_satellite
497 smarthost:
     debug_print = "R: smarthost for $local_part@$domain"
498
     driver = manualroute
499
     domains = ! +local_domains
500
     transport = remote_smtp_smarthost
     route_list = * DCsmarthost byname
502
     host_find_failed = ignore
503
    same_domain_copy_routing = yes
504
    no_more
505
507
   .endif
508
509 COND_LOCAL_SUBMITTER = "\
                   ${if match_ip{$sender_host_address}{:@[]}\
510
                        {1}{0}\
511
       }"
512
513
514 real_local:
     debug_print = "R: real_local for $local_part@$domain"
515
     driver = accept
516
     domains = +local_domains
     condition = COND_LOCAL_SUBMITTER
518
519
     local_part_prefix = real-
     check_local_user
520
     transport = LOCAL_DELIVERY
521
523 system_aliases:
     debug_print = "R: system_aliases for $local_part@$domain"
524
     driver = redirect
525
     domains = +local domains
526
     allow_fail
     allow_defer
528
     data = ${lookup{$local_part}lsearch{/etc/aliases}}
529
     .ifdef SYSTEM_ALIASES_USER
     user = SYSTEM_ALIASES_USER
531
     .\, {\tt endif}
     .ifdef SYSTEM_ALIASES_GROUP
533
     group = SYSTEM_ALIASES_GROUP
534
535 .endif
```

```
.ifdef SYSTEM_ALIASES_FILE_TRANSPORT
     file_transport = SYSTEM_ALIASES_FILE_TRANSPORT
537
     .endif
     .ifdef SYSTEM_ALIASES_PIPE_TRANSPORT
539
     pipe_transport = SYSTEM_ALIASES_PIPE_TRANSPORT
540
541
     .endif
     .ifdef SYSTEM_ALIASES_DIRECTORY_TRANSPORT
542
     directory_transport = SYSTEM_ALIASES_DIRECTORY_TRANSPORT
     .endif
544
545
546 .ifdef DCconfig_satellite
547 hub_user:
     debug_print = "R: hub_user for $local_part@$domain"
     driver = redirect
549
     domains = +local_domains
550
     data = ${local_part}@DCreadhost
551
     check_local_user
hub_user_smarthost:
     debug_print = "R: hub_user_smarthost for $local_part@$domain"
555
     driver = manualroute
     domains = DCreadhost
557
     transport = remote_smtp_smarthost
     route_list = * DCsmarthost byname
559
     host_find_failed = ignore
560
     same_domain_copy_routing = yes
    check_local_user
562
563 .endif
565 userforward:
566
     debug_print = "R: userforward for $local_part@$domain"
     driver = redirect
567
     domains = +local_domains
568
     check_local_user
     file = $home/.forward
570
     require_files = $local_part:$home/.forward
571
     no_verify
572
     no_expn
573
     check_ancestor
     allow_filter
575
576
     forbid_smtp_code = true
     directory_transport = address_directory
     file_transport = address_file
578
     pipe_transport = address_pipe
     reply_transport = address_reply
580
     skip_syntax_errors
581
     syntax_errors_to = real-$local_part@$domain
```

```
syntax_errors_text = \
583
       This is an automatically generated message. An error has \n\
584
       been found in your .forward file. Details of the error are \n
       reported below. While this error persists, you will receive\n\
586
       a copy of this message for every message that is addressed\n\
587
       to you. If your .forward file is a filter file, or if it is\n\
588
       a non-filter file containing no valid forwarding addresses, \n\
580
       a copy of each incoming message will be put in your normal\n\
       mailbox. If a non-filter file contains at least one valid\n\
       forwarding address, forwarding to the valid addresses will \n\
       happen, and those will be the only deliveries that occur.
593
594
   procmail:
     debug_print = "R: procmail for $local_part@$domain"
596
597
     driver = accept
     domains = +local_domains
598
     check_local_user
599
     transport = procmail_pipe
     require_files = ${local_part}:\
601
                      ${if exists{/etc/procmailrc}\
602
                        {/etc/procmailrc}{${home}/.procmailrc}}:\
                      +/usr/bin/procmail
604
605
     no_verify
     no_expn
606
607
608 maildrop:
     debug_print = "R: maildrop for $local_part@$domain"
609
     driver = accept
610
     domains = +local_domains
611
     check_local_user
612
     transport = maildrop_pipe
613
     require_files = ${local_part}:${home}/.mailfilter:+/usr/bin/maildrop
614
     no verify
615
     no_expn
617
618 .ifndef FIRST_USER_ACCOUNT_UID
619 FIRST_USER_ACCOUNT_UID = 0
620 .endif
622 .ifndef DEFAULT_SYSTEM_ACCOUNT_ALIAS
DEFAULT_SYSTEM_ACCOUNT_ALIAS = :fail: no mail to system accounts
   .endif
625
   COND_SYSTEM_USER_AND_REMOTE_SUBMITTER = "\
                   ${if and{{! match_ip{$sender_host_address}{:@[]}}\
627
                            {<{$local_user_uid}{FIRST_USER_ACCOUNT_UID}}}\</pre>
628
                        {1}{0}\
```

```
630
631
632 lowuid_aliases:
     debug_print = "R: lowuid_aliases for $local_part@$domain (UID)
633
       $local_user_uid)"
     check_local_user
634
     driver = redirect
635
     allow_fail
     domains = +local_domains
637
     condition = COND_SYSTEM_USER_AND_REMOTE_SUBMITTER
     data = ${if exists{CONFDIR/lowuid-aliases}\
639
                 {${lookup{$local_part}lsearch{CONFDIR/lowuid-aliases}\
640
                  {\$value}{DEFAULT_SYSTEM_ACCOUNT_ALIAS}}}\
                  {DEFAULT_SYSTEM_ACCOUNT_ALIAS}}
642
643
644 local_user:
     debug_print = "R: local_user for $local_part@$domain"
645
     driver = accept
     domains = +local_domains
647
648
     check_local_user
     local_parts = ! root
     transport = LOCAL_DELIVERY
650
     cannot_route_message = Unknown user
652
653 mail4root:
654
     debug_print = "R: mail4root for $local_part@$domain"
     driver = redirect
655
     domains = +local_domains
     data = /var/mail/mail
     file_transport = address_file
658
659
     local_parts = root
     user = mail
660
     group = mail
661
663 begin transports
664
665 .ifdef HIDE_MAILNAME
666 REMOTE_SMTP_HEADERS_REWRITE=*@+local_domains $1@DCreadhost frs : *
       @ETC_MAILNAME $1@DCreadhost frs
667 REMOTE_SMTP_RETURN_PATH=${if match_domain{$sender_address_domain}{+
       local_domains}{${sender_address_local_part}@DCreadhost}{${if match_domain{
       $sender_address_domain}{ETC_MAILNAME}{${sender_address_local_part}}
       @DCreadhost}fail}}
668 .endif
670 .ifdef REMOTE_SMTP_HELO_FROM_DNS
671 .ifdef REMOTE_SMTP_HELO_DATA
```

```
672 REMOTE_SMTP_HELO_DATA == $ {lookup dnsdb {ptr = $sending_ip_address} { $value} {
       $primary_hostname}}
673 .else
674 REMOTE_SMTP_HELO_DATA=${lookup dnsdb {ptr=$sending_ip_address}{$value}{
       $primary_hostname}}
675 .endif
676 .endif
678 address_file:
     debug_print = "T: address_file for $local_part@$domain"
     driver = appendfile
680
     delivery_date_add
681
     envelope_to_add
     return_path_add
683
684
685 address_pipe:
     debug_print = "T: address_pipe for $local_part@$domain"
686
     driver = pipe
     return_fail_output
688
689
690 address_reply:
     debug_print = "T: autoreply for $local_part@$domain"
691
     driver = autoreply
693
694 mail_spool:
     debug_print = "T: appendfile for $local_part@$domain"
695
     driver = appendfile
696
     file = /var/mail/$local_part
697
     delivery_date_add
     envelope_to_add
699
700
     return_path_add
     group = mail
701
     mode = 0660
702
     mode_fail_narrower = false
704
705 maildir_home:
     debug_print = "T: maildir_home for $local_part@$domain"
706
     driver = appendfile
707
     .ifdef MAILDIR_HOME_MAILDIR_LOCATION
     directory = MAILDIR_HOME_MAILDIR_LOCATION
709
710
     .else
     directory = $home/Maildir
711
     .endif
712
     .ifdef MAILDIR_HOME_CREATE_DIRECTORY
714
     create_directory
     .endif
715
.ifdef MAILDIR_HOME_CREATE_FILE
```

```
create_file = MAILDIR_HOME_CREATE_FILE
717
     .endif
718
719
     delivery_date_add
     envelope_to_add
720
721
     return_path_add
     maildir_format
722
     .ifdef MAILDIR_HOME_DIRECTORY_MODE
723
     directory_mode = MAILDIR_HOME_DIRECTORY_MODE
     .else
725
726
     directory_mode = 0700
     .endif
727
     .ifdef MAILDIR_HOME_MODE
728
     mode = MAILDIR_HOME_MODE
     .else
730
     mode = 0600
731
     .endif
732
     mode_fail_narrower = false
733
735 maildrop_pipe:
     debug_print = "T: maildrop_pipe for $local_part@$domain"
736
     driver = pipe
     path = "/bin:/usr/bin:/usr/local/bin"
738
     command = "/usr/bin/maildrop"
     return_path_add
740
     delivery_date_add
741
742
     envelope_to_add
743
744 procmail_pipe:
     debug_print = "T: procmail_pipe for $local_part@$domain"
745
     driver = pipe
746
747
     path = "/bin:/usr/bin:/usr/local/bin"
     command = "/usr/bin/procmail"
748
     return_path_add
749
     delivery_date_add
     envelope_to_add
751
752
753 remote_smtp:
     debug_print = "T: remote_smtp for $local_part@$domain"
754
     driver = smtp
756 .ifdef REMOTE_SMTP_HOSTS_AVOID_TLS
   hosts_avoid_tls = REMOTE_SMTP_HOSTS_AVOID_TLS
759 .ifdef REMOTE_SMTP_HEADERS_REWRITE
headers_rewrite = REMOTE_SMTP_HEADERS_REWRITE
762 .ifdef REMOTE_SMTP_RETURN_PATH
return_path = REMOTE_SMTP_RETURN_PATH
```

```
764 .endif
765 .ifdef REMOTE_SMTP_HELO_DATA
    helo_data=REMOTE_SMTP_HELO_DATA
767 .endif
768 .ifdef DKIM_DOMAIN
769 dkim_domain = DKIM_DOMAIN
770 .endif
771 .ifdef DKIM_SELECTOR
772 dkim_selector = DKIM_SELECTOR
773 .endif
774 .ifdef DKIM_PRIVATE_KEY
775 dkim_private_key = DKIM_PRIVATE_KEY
776 .endif
777 .ifdef DKIM_CANON
778 dkim_canon = DKIM_CANON
779 .endif
780 .ifdef DKIM_STRICT
781 dkim_strict = DKIM_STRICT
783 .ifdef DKIM_SIGN_HEADERS
784 dkim_sign_headers = DKIM_SIGN_HEADERS
785 .endif
786 .ifdef TLS_DH_MIN_BITS
787 tls_dh_min_bits = TLS_DH_MIN_BITS
788 .endif
789 .ifdef REMOTE_SMTP_TLS_CERTIFICATE
790 tls_certificate = REMOTE_SMTP_TLS_CERTIFICATE
791 .endif
792 .ifdef REMOTE_SMTP_PRIVATEKEY
793 tls_privatekey = REMOTE_SMTP_PRIVATEKEY
794 .endif
795
796 remote_smtp_smarthost:
     debug_print = "T: remote_smtp_smarthost for $local_part@$domain"
     driver = smtp
798
     hosts_try_auth = <; ${if exists{CONFDIR/passwd.client} \
799
800
           ${lookup{$host}nwildlsearch{CONFDIR/passwd.client}{$host_address}}
801
           }\
           {} \
803
804
         }
805 .ifdef REMOTE_SMTP_SMARTHOST_HOSTS_AVOID_TLS
   hosts_avoid_tls = REMOTE_SMTP_SMARTHOST_HOSTS_AVOID_TLS
807 .endif
808 .ifdef REMOTE_SMTP_HEADERS_REWRITE
   headers_rewrite = REMOTE_SMTP_HEADERS_REWRITE
810 .endif
```

```
811 .ifdef REMOTE_SMTP_RETURN_PATH
return_path = REMOTE_SMTP_RETURN_PATH
813 .endif
814 .ifdef REMOTE_SMTP_HELO_DATA
helo_data=REMOTE_SMTP_HELO_DATA
816 .endif
817 .ifdef TLS_DH_MIN_BITS
818 tls_dh_min_bits = TLS_DH_MIN_BITS
821 tls_certificate = REMOTE_SMTP_SMARTHOST_TLS_CERTIFICATE
822 .endif
823 .ifdef REMOTE_SMTP_SMARTHOST_PRIVATEKEY
824 tls_privatekey = REMOTE_SMTP_SMARTHOST_PRIVATEKEY
825 .endif
827 address_directory:
     debug_print = "T: address_directory for $local_part@$domain"
     driver = appendfile
829
830
     delivery_date_add
     envelope_to_add
     return_path_add
832
     check_string = ""
     escape_string = ""
834
     maildir_format
835
837 begin retry
838
                                     F,2h,15m; G,16h,1h,1.5; F,4d,6h
839
840
841 begin rewrite
842
843 .ifndef NO_EAA_REWRITE_REWRITE
844 *@+local_domains "${lookup{${local_part}}}lsearch{/etc/email-addresses}\
                      {$value}fail}" Ffrs
845
*@ETC_MAILNAME "${lookup{${local_part}}}lsearch{/etc/email-addresses}
                     {$value}fail}" Ffrs
847
848 .endif
850 begin authenticators
851
852 cram_md5:
    driver = cram_md5
853
     public_name = CRAM-MD5
    client_name = ${extract{1}{:}{${100kup{$host}nwildlsearch{CONFDIR/passwd.}}}
855
      client}{$value}fail}}}
s56 client_secret = ${extract{2}{:}{${lookup{$host}nwildlsearch{CONFDIR/passwd.}
```

```
client \{ \$ value \} fail \} \}
   PASSWDLINE=${sg{\
                     ${lookup{$host}nwildlsearch{CONFDIR/passwd.client}{$value}fail
859
       }\
              }\
860
              {\\N[\\^]\\N}\
861
              {^^}\
         }
863
864
865 plain:
     driver = plaintext
866
     public_name = PLAIN
   .ifndef AUTH_CLIENT_ALLOW_NOTLS_PASSWORDS
868
     client_send = "<; ${if !eq{$tls_out_cipher}{}\</pre>
869
                         {^${extract{1}{:}{PASSWDLINE}}\
870
             ^${sg{PASSWDLINE}{\\N([^:]+:)(.*)\\N}{\\$2}}\
871
          }fail}"
873 .else
     client_send = "<; ^${extract{1}{:}{PASSWDLINE}}\</pre>
874
           ^${sg{PASSWDLINE}{\\N([^:]+:)(.*)\\N}{\\$2}}"
   .endif
876
878 login:
     driver = plaintext
879
     public_name = LOGIN
881 .ifndef AUTH_CLIENT_ALLOW_NOTLS_PASSWORDS
     client_send = "<; ${if and{\</pre>
882
                                {!eq{$tls_out_cipher}{}}\
883
                                {!eq{PASSWDLINE}{}}
884
885
                               }\
                           {}fail}\
886
                      ; ${extract{1}{::}{PASSWDLINE}}\
887
         ; ${sg{PASSWDLINE}{\\N([^:]+:)(.*)\\N}{\\$2}}"
   .else
889
     client_send = "<; ${if !eq{PASSWDLINE}{}\</pre>
890
                           {fail}\
891
                      ; ${extract{1}{::}{PASSWDLINE}}\
892
        ; ${sg{PASSWDLINE}{\\N([^:]+:)(.*)\\N}{\\$2}}"
894 .endif
```