


# **ALLYSTAR GNSS Receiver**

**Protocol Specification V2.3** 





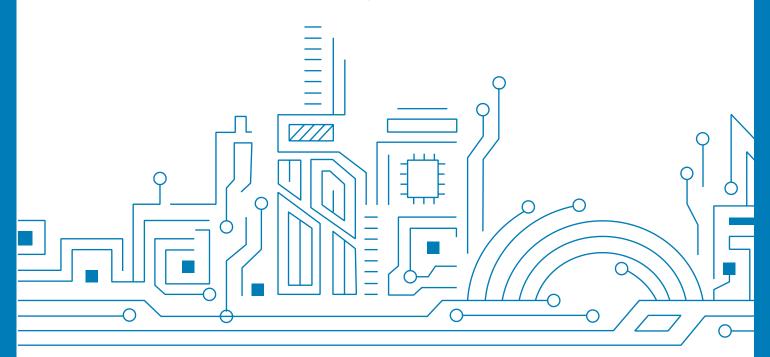

# **TABLE OF CONTENT**

TAE	BLE OF (	CONTE	NT	2
PEF	RFACE	•		5
1	NME	A MESS	SAGES	5
	1.1	Backgi	round Information	5
	1.2	_	TAR GNSS Receiver supported messages	
	1.3		g message output rate	
2	NME	A MESS	SAGES FORMAT	6
	2.1	GGA -	Global Positioning System Fix Data	7
	2.2	GSA -	GNSS DOP and Active Satellites	8
	2.3	GRS -	GNSS Range Residuals	11
	2.4	GSV -	GNSS Satellites in View	13
	2.5	RMC -	Recommended Minimum Specific GNSS Data	16
	2.6	VTG -	Course Over Ground and Ground Speed	17
	2.7	ZDA -	Time & Date	17
	2.8	GLL - C	Geographic Position - Latitude/Longitude	18
	2.9	GST- G	SNSS Pseudorange Error Statistics	18
	2.10	TXT - s	system or user defined message	18
	2.11	SBAS [	Description	20
3	BINA	RY MES	SSAGES	21
	3.1	Packet	t field description	22
		3.1.1	Start Sequence	22
		3.1.2	Message ID	22
		3.1.3	Payload Length	22
		3.1.4	Payload	22
		3.1.5	End Sequence	22
	3.2	Protoc	col data transfer	23
		3.2.1	CFG Packet Scenario	23
		3.2.2	Poll Packet Scenario	23
		3.2.3	Others	24
4	BINA	RY PAC	KET OVERVIEW	25
5	DETA	ILED PA	ACKET DESCRIPTION	27
	5.1	Naviga	ation messages (NAV)	27
		5.1.1	NAV-POSECEF	
		5.1.2	NAV-POSLLH	28



	5.1.3	NAV-DOP	28
	5.1.4	NAV-TIME	30
	5.1.5	NAV-TIMEUTC	31
	5.1.6	NAV-CLOCK	32
	5.1.7	NAV-SVINFO	
5.2	Receiv	er Manager Messages	34
	5.2.1	RXM-DUM	34
	5.2.2	RXM-GALSAR	
5.3	Messa	ge Acknowledge (ACK)	36
	5.3.1	ACK-NAK	30
	5.3.2	ACK-ACK	36
5.4	Config	uration Input Messages (CFG)	37
	5.4.1	CFG-PRT	37
	5.4.2	CFG-MSG	38
	5.4.3	CFG-PPS	39
	5.4.4	CFG-CFG	42
	5.4.5	CFG-DOP	42
	5.4.6	CFG-ELEV	43
	5.4.7	CFG-NAVSAT	44
	5.4.8	CFG-HEIGHT	45
	5.4.9	CFG-SBAS	46
	5.4.10	CFG-SPDHOLD	4
	5.4.11	CFG-EPHSAVE	48
	5.4.12	CFG-NUMSV	49
	5.4.13	CFG-SURVEY	50
	5.4.14	CFG-FIXEDLLA	52
	5.4.15	CFG-FIXEDECEF	52
	5.4.16	CFG-ANTIJAM	53
	5.4.17	CFG-BDGEO	54
	5.4.18	CFG-CARRSMOOTH	55
	5.4.19	CFG-SIMPLERST	56
	5.4.20	CFG-SLEEP	57
	5.4.21	CFG-PWRCTL	58
	5.4.22	CFG-NMEAVER	59
	5.4.23	CFG-PWRCTL2	60
	5.4.24	CFG-FWUP	62
	5.4.25	CFG-PVTLOG	62
5.5	Monito	or Receiver Status (MON)	64
	5.5.1	MON-VER	64
	5.5.2	MON-INFO	65
	5.5.3	MON-TRKCHAN	60
	5.5.4	MON-RCVCLK	66
	5.5.5	MON-CWI	68



	5.6	Assistance GNSS Messages (AID)	68
		5.6.1 AID-INI	
		5.6.2 AID-POS	70
		5.6.3 AID-TIME	71
		5.6.4 AID-PEPH-GPS	72
		5.6.5 AID-PEPH-BDS	74
6	RTCN	M PROTOCOL	76
	6.1	Background Information	76
	6.2	Support messages	76
	6.3	ALLYSTAR proprietary RTCM messages	77
		6.3.1 Sub-id	
	6.4	Configuration	77
7	REVIS	SION HISTORY	78



### **PERFACE**

Protocol Specification is a reference describing the messages used by ALLYSTAR GNSS receiver and is organized by the specific NMEA, BINARY and RTCM messages.

### 1 NMEA MESSAGES

# 1.1 Background Information

NMEA messages sent from GNSS receiver follow the standard NMEA 0183 Version 3.01/4.00/4.10. For further information about NMEA messages, please visit <a href="http://www.nmea.org/">http://www.nmea.org/</a>

# 1.2 ALLYSTAR GNSS Receiver supported messages

ALLYSTAR GNSS receiver supports most of the general NMEA standard messages. They include GGA, GLL, GSA, GRS, GSV, RMC, VTG, ZDA, GST and TXT.

# 1.3 Setting message output rate

The default output is GGA, GSA, GSV and RMC in 1 second period. Message output rate for individual NMEA messages can be set through binary message CFG-MSG. Setting output rate to zero is equivalent to disable message output. The group ID for NMEA message is 0xF0. The following table describes the suitable sub ID to use:

Message	Sub ID	Description	
GGA	0x00	Position fix information	
GLL	0x01	Latitude/Longitude data	
GSA	0x02	GNSS Overall satellite data	
GRS	0x03	GNSS range residuals	
GSV	0x04	GNSS Detailed satellite data	
RMC	0x05	Recommended minimal data for GNSS	
VTG	0x06	Course over ground and ground speed	
ZDA	0x07	Date and time	
TXT	0x20	Antenna status message	



### 2 NMEA MESSAGES FORMAT

NMEA is the standard of GNSS protocol. ALLYSTAR GNSS receiver supports several NMEA sentences: GGA, GSV, GSA, RMC, VTG, ZDA, GLL, GRS, GST and TXT. This data set includes the complete PVT (position, velocity, time) solution computed by the GNSS receiver.

Each sentence has a prefix beginning with a '\$' and ends with a carriage return/line feed sequence and can be no longer than 80 characters of visible text (plus the line terminators). There is a provision for a checksum at the end of each sentence which may or may not be checked by the unit that reads the data. The checksum field consists of a '\*' and two hex digits representing an 8 bit exclusive OR of all characters between, but not including, the '\$' and '\*'. A checksum is required on some sentences.

Different prefix indicates the global position satellite systems for sentences GRS, GSA and GSV:

- \$GP for GPS-QZSS-SBAS
- \$BD for BEIDOU-only
- \$GL for GLONASS-only
- \$GI for INSAT-only
- \$GA for GALILEO-only
- \$GN is for GNSS, combination of different global position satellite systems.



# 2.1 GGA - Global Positioning System Fix Data

ID	GGA (support NMEA ve	ersion 3.01/4.00/4.10)	
Description	Time, position and fix related data for a GNSS receiver		
Format	\$GNGGA,hhmmss.fff,llll	.lllll,a,yyyyy.yyyyy,a,x,xx,x.x,x.x,M,x.x,M,x.x,xxxx*hh <cr><lf></lf></cr>	
Content	hhmmss.fff	HourMinuteSecond.fraction (UTC)	
(Shown in	1111.11111	Latitude (HD9300/HD9400 series IIII.IIIIIII)	
sequence)	a	N or S (North or South)	
	ууууу.ууууу	Longitude (HD9300/HD9400 series yyyyyyyyyy)	
	а	E or W (East or West)	
	x	GNSS Quality Indicator	
		- 0 - fix not available	
		- 1 - GNSS fix	
		- 2 - Differential GNSS fix	
		(values above 2 are 2.3 features)	
		- 3 = PPS fix	
		- 4 = Real Time Kinematic	
		- 5 = Float RTK	
		- 6 = estimated (dead reckoning)	
		- 7 = Manual input mode	
		- 8 = Simulation mode	
	xx	Number of satellites in use (range: 00-40)	
	x.x	Horizontal Dilution of Precision (meters)	
	x.x	Antenna Altitude above/below mean-sea-level (geoid) (in	
		meters)	
	M	Units of antenna altitude, meters	
	x.x	Geoidal separation, the difference between the WGS-84 earth	
		ellipsoid and mean-sea-level (geoid), "-" means mean-sea-level	
		below ellipsoid	
	M	Units of geoidal separation, meters	
	x	Age of differential GNSS data, time in seconds since Last SC104,	
		type 1 or 9 update, null field when DGPS is not used	
	xxxx	Differential reference station ID, 0000-1023	
	hh	Checksum	
	\$GNGGA,175722.000,0	045.94406,N,00028.67819,E,1,10,1.19,35.8,M,18.2,M,,*50	
Example	\$GNGGA,071113.000,3957.7995312,N,11619.0286230,E,4,16,0.99,103.965,M,-		
	8.408,M,1.0,4042*40 (	93series )	



# 2.2 GSA - GNSS DOP and Active Satellites

ID	GSA		
Description	GNSS receiver operating mode, satellites used in the navigation solution reported by the		
·	GGA, and DOP values.		
Format (In V3.01)	\$GNGSA,a,m,x,x,x,x,x,x,x,x,x,x,x,x,x,x,x,x,x,x	.x,x,x,x,x,x,x.x,x.x*hh <cr><lf></lf></cr>	
Format (In V4.00)	\$GPGSA,a,m,x,x,x,x,x,x,x,x,x,	x,x,x,x,x,x.x,x.x,x.x,h*hh <cr><lf></lf></cr>	
	\$BDGSA,a,m,x,x,x,x,x,x,x,x,x,	x,x,x,x,x,x.x,x.x,x.x,h*hh <cr><lf></lf></cr>	
		x,x,x,x,x,x.x,x.x,h*hh <cr><lf></lf></cr>	
	\$GLGSA,a,m,x,x,x,x,x,x,x,x,x,x,x,x,x,x,x,x,x,x	x,x,x,x,x,x.x,x.x,h*hh <cr><lf></lf></cr>	
	\$GIGSA,a,m,x,x,x,x,x,x,x,x,x,x,x	x,x,x,x,x,x,x.x,x.x,h*hh <cr><lf></lf></cr>	
Format (In V4.00)	\$GNGSA,a,m,x,x,x,x,x,x,x,x,x,x,x,x,x,x,x,x,x,x	,x,x,x,x,x,x,x.x,x.x*hh <cr><lf></lf></cr>	
Format (In V4.10)	\$GNGSA,a,m,x,x,x,x,x,x,x,x,x,	x,x,x,x,x,x,x.x,x.x,h*hh <cr><lf></lf></cr>	
Content	a	Selection mode	
(Shown in		M=Manual, forced to operate in 2D or 3D,	
sequence)		A=Automatic, 3D/2D	
	m	Mode (1 = no fix, 2 = 2D fix, 3 = 3D fix)	
		Note: 2D fix hint that the receiver position error meets the	
		2D level. Maybe under this condition the used satellite	
		number is little more than 4.	
	x	ID of 1st satellite used for fix	
	x	ID of 2nd satellite used for fix	
	x	ID of 3rd satellite used for fix	
	x	ID of 4th satellite used for fix	
	x	ID of 5th satellite used for fix	
	x	ID of 6th satellite used for fix	
	x	ID of 7th satellite used for fix	
	x	ID of 8th satellite used for fix	
	x	ID of 9th satellite used for fix	
	x	ID of 10th satellite used for fix	
	X	ID of 11th satellite used for fix	
	X	ID of 12th satellite used for fix	
	X.X	PDOP	
	x.x	HDOP	
	x.x	VDOP	
	h	System ID Note: NMEA v4.10 and V4.00	
	hh	Checksum	



ID	GSA			
	\$GNGSA,A,3,19,17,208,06,212,213,193,203,201,217,202,210,1.34,0.79,1.08*20			
	Note: SVID_GPS:01~32			
	SVID_GLONASS:65~96			
Example NMEA	SVID_GALILEO: 301~336			
version 3.01	SVID_BEIDOU:201~ 237			
	SVID_IRNSS:901~918			
	SVID_QZSS = 193~199			
	SVID_SBAS = 40~54			
	\$GPGSA,A,3,19,17,06,193,02,12,28,23,09,,,,1.46,0.82,1.21,1*24			
	\$BDGSA,A,3,220,203,229,201,213,204,230,208,202,235,206,,1.25,0.69,1.05,4*30			
	\$GLGSA,A,3,88,65,87,72,79,78,81,,,,,1.51,0.86,1.24,2*0D			
	\$GAGSA,A,3,315,303,327,330,,,,,,1.25,0.69,1.05,3*00			
	\$GIGSA,A,3,904,907,903,909,902,905,,,,,,1.52,0.86,1.26,6*02			
	Note: SVID_GPS: 01~32			
	SVID_GLONASS: 65~96			
	SVID_GALILEO: 301~336			
Example NMEA	SVID_BEIDOU: 201~237			
version 4.00	SVID_IRNSS: 901~918			
	SVID_QZSS = 193~194			
	SVID_SBAS = 40~54			
	ID System			
	1 GPS			
	2 GLONASS			
	3 GALILEO			
	4 BEIDOU			
	6 IRNSS			
	\$GNGSA,A,3,06,02,05,12,195,193,199,25,,,,,1.25,0.69,1.04*22			
	\$GNGSA,A,3,81,66,88,65,79,,,,,,1.25,0.69,1.04*14			
	\$GNGSA,A,3,315,303,327,330,,,,,,1.25,0.69,1.04*11			
	\$GNGSA,A,3,229,220,208,213,203,230,235,201,204,202,206,,1.25,0.69,1.04*26			
Example NMEA	Note: SVID_GPS: 01~32			
version 4.01	SVID_GLONASS: 65~96			
	SVID_GALILEO: 301~336			
	SVID_BEIDOU : 201~237			
	SVID_IRNSS: 901~918			
	SVID_QZSS = 193~194			
	SVID_SBAS = 40~54			



ID	GSA	
	\$GNGSA,A,3,19,17,06,193,02,12,28,23,09,,,,1.48,0.83,1.22,1*36 (GPS)	
	\$GNGSA,A,3,01,08,14,15,02,,,,,,1.48,0.86,1.21,2*09(GIONASS)	
	\$GNGSA,A,3,12,19,24,11,04,,,,,,1.48,0.86,1.21,3*0B(GALILEO)	
	\$GNGSA,A,3,08,12,13,03,01,17,02,10,04,05,07,,1.48,0.83,1.22,4*0B(BEIDOU)	
	\$GNGSA,A,3,04,07,03,09,05,02,,,,,,2.41,1.40,1.96,6*04 (IRNSS)	
	Note: SVID_GPS: 1~32	
	SVID_GLONASS: 1~24,65~96 ( HD9300/HD9400 series )	
	SVID_GALILEO: 1~30	
Example NMEA	SVID_BEIDOU: 1~ 36	
version 4.10	SVID_IRNSS: 1~18	
VC131011 4.10	SVID_QZSS = 193~194	
	SVID_SBAS = 40~54	
	System ID Identification Table	
	ID System	
	1 GPS	
	2 GLONASS	
	3 GALILEO	
	4 BEIDOU	
	6 IRNSS	



# **2.3** GRS - GNSS Range Residuals

ID	GRS		
Description	GNSS Satellite Range Residuals information		
Format (In	\$GNGRS,hhmmss.fff,m,xx,xx,xx,xx,xx,xx,xx,xx,xx,xx,xx*hh <cr><lf></lf></cr>		xx,xx,xx,xx,xx*hh <cr><lf></lf></cr>
V3.01/4.00/4.01)			
Format (In V4.10)	\$GNGRS,hhmmss.fff,m,	xx,xx,xx,xx,xx,xx,	xx,xx,xx,xx,xx,h,h*hh <cr><lf></lf></cr>
Content	hhmmss.fff	HourMinuteSed	cond. fraction (UTC)
(Shown in	m	0 = Residuals us	sed in GGA, 1 = residuals
sequence)		Calculated afte	r GGA
	xx	Satellite 1 resid	ual in meters
	xx	Satellite 2 resid	ual in meters
	xx	Satellite 3 resid	ual in meters
	xx	Satellite 4 resid	ual in meters
	xx	Satellite 5 resid	ual in meters
	xx	Satellite 6 resid	ual in meters
	xx	Satellite 7 resid	ual in meters
	xx	Satellite 8 resid	ual in meters
	xx	Satellite 9 resid	ual in meters
	xx	Satellite 10 resi	dual in meters
	xx	Satellite 11 resi	dual in meters
	xx	Satellite 12 resi	dual in meters
	h	System ID	Note: NMEA v4.10 and above only
	h	Signal ID	Note: NMEA v4.10 and above only
	hh	Checksum	
Example NMEA			
version	\$GNGRS,175722.00,1,0.1,-0.3,-0.6,-0.5,0.9,0.6,0.4,-0.3,0.3,-0.6,,*6B		0.9,0.6,0.4,-0.3,0.3,-0.6,,*6B
3.01/4.00/4.01			
Example NMEA	\$GNGRS,085329.00,0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0.0,0		
version 4.10	701Vall3,003323.00,0,0	,,,,,	,,0.0,0.0,0.0,0.0,0.0,0.0,0.0,2,1 34



	GN_NMEA_IDBASE_SBAS	(87) <b>127~141</b>
	GN_NMEA_IDBASE_GPS	(0) <b>01~32</b>
	GN_NMEA_IDBASE_GPSL1C	(GN_NMEA_IDBASE_GPS + 400) <b>401~432</b>
	GN_NMEA_IDBASE_GPSL2CM	(GN_NMEA_IDBASE_GPS + 500) <b>501~532</b>
	GN_NMEA_IDBASE_GPSL5	(GN_NMEA_IDBASE_GPS + 650) <b>651~682</b>
	GN_NMEA_IDBASE_GLONASS	(64) <b>65~96</b>
	GN_NMEA_IDBASE_GLNG2	(GN_NMEA_IDBASE_GLONASS + 500) 565~596
	GN_NMEA_IDBASE_BEIDOU	(200) <b>201~ 237</b>
Dual frequence	GN_NMEA_IDBASE_BDSB1C	(GN_NMEA_IDBASE_BEIDOU + 400) <b>601~637</b>
Signal ID	GN_NMEA_IDBASE_BDSB2I	(GN_NMEA_IDBASE_BEIDOU + 500) <b>701~737</b>
	GN_NMEA_IDBASE_BDSB3I	(GN_NMEA_IDBASE_BEIDOU + 600) <b>801~837</b>
	GN_NMEA_IDBASE_BDSB2A	(GN_NMEA_IDBASE_BEIDOU + 650) <b>851~887</b>
	GN_NMEA_IDBASE_GALILEO	(300) <b>301-336</b>
	GN_NMEA_IDBASE_GALE5A	(GN_NMEA_IDBASE_GALILEO + 650) <b>951~986</b>
	GN_NMEA_IDBASE_QZSS	(192) <b>193~199</b>
	GN_NMEA_IDBASE_QZSSL5	(GN_NMEA_IDBASE_QZSS+ 650) <b>843~849</b>
	GN_NMEA_IDBASE_IRNSSL5	(GN_NMEA_IDBASE_GPS + 900) <b>901~917</b>



# 2.4 GSV - GNSS Satellites in View

ID	GSV			
Description	Number of satellites (SV) in view, satellite ID numbers, elevation, azimuth, and SNR			
	value.			
Format (In V3.01)	\$GNGSV,x,x,x,x,x,x,*h	h <cr><lf></lf></cr>		
Format (In	\$GPGSV,x,x,x,x,x,x,x,**h	h <cr><lf></lf></cr>		
V4.00/V4.01)	\$BDGSV,x,x,x,x,x,x,x,*h	h <cr><lf></lf></cr>		
Format (In V4.10)	\$GPGSV,x,x,x,x,x,x,x,h*	hh <cr><lf></lf></cr>		
	\$BDGSV,x,x,x,x,x,x,x,h*	hh <cr><lf></lf></cr>		
Content	х	Total number of GSV messages to be transmitted in this group		
(Shown in	x	Origin number of this GSV message within current group		
sequence)	x	Total number of satellites in view (leading zeros sent)		
	x	Satellite PRN number (leading zeros sent)		
	x	Elevation in degrees (00-90) (leading zeros sent)		
	x	Azimuth in degrees to true north (000-359) (leading zeros sent)		
		SNR in dB (00-99) (leading zeros sent)		
	x	More satellite info quadruples like 4-7n)		
		Signal ID Note: NMEA v4.10 and above only		
	h	Checksum		
	hh			
	CNCSVC 1 24 10 72 25	1 51 17 CO 96 54 209 CD 250 40 C C5 200 55*55		
	\$GNGSV,6,1,24,19,73,351,51,17,69,86,54,208,68,358,49,6,65,298,55*5E			
	\$GNGSV,6,2,24,212,64,331,51,213,60,305,50,193,56,134,48,203,44,190,45*6C			
	\$GNGSV,6,3,24,53,38,212,46,201,37,145,44,217,35,140,43,50,35,139,39*6F			
	\$GNGSV,6,2,23,193,59,133,46,88,55,351,47,65,55,127,49,319,43,114,36*65			
	\$GNGSV,6,4,22,909,19,255,40,16,25,216,39,50,35,139,38,905,17,189,37*69			
Example NMEA	Note: SVID_GPS:01~32 SVID_GLONASS:65~96			
version 3.01	_			
	SVID_GALILEO: 301-336 SVID BEIDOU:201~ 237			
	SVID_BEIDOO:201 237 SVID_IRNSS:901~918			
	SVID_QZSS = 193~194			
	SVID_SBAS = 40~54			
	For more please see below in "Dual frequence Sat ID"			
	For more please see belo	JW III Dual Hequelice 3at ID		



	For signal ID, please see below "Mutifrequence Signal ID"		
	SVID_SBAS = 40~54		
	SVID_QZSS = 193~194		
	SVID_BEIDOU: 01~36 SVID IRNSS: 01~18		
	SVID_GALILEO: 01~30		
	_		
VEI SIUII 4.10	Note: SVID_GPS:01~32 SVID_GLONASS: 01~24		
Example NMEA version 4.10	\$GIGSV,2,1,07,5,75,208,46,7,39,160,43,3,30,225,42,1,,,40*50		
Evample NIMEA	\$GAGSV,2,2,06,15,78,354,46,13,28,311,41,2*75		
	\$GAGSV,2,1,06,15,78,354,48,8,33,201,42,13,28,311,41,5,31,47,27,6*40		
	\$GLGSV,2,1,06,81,48,335,48,88,61,73,43,66,53,182,38,65,52,44,37,1*73		
	\$BDGSV,4,5,16,29,83,343,45,20,76,109,45,30,38,124,42,4*40		
	\$BDGSV,4,4,16,10,18,213,35,1*4C		
	\$GPGSV,3,4,10,25,17,310,40,8*5C		
	\$GPGSV,3,2,11,19,32,147,42,41,32,226,42,12,27,254,43,25,19,296,39,1*66		
	For more please see below in "Dual frequence Sat ID"		
	SVID_SBAS = 40~54		
	SVID_QZSS = 193~194		
	SVID_IRNSS = 901~918		
	SVID_BEIDOU=201~237		
	SVID_GALILEO: 301-336		
version 4.00	SVID_GLONASS:65~96		
Example NMEA	Note: SVID_GPS:01~32		
	\$GIGSV,2,1,06,904,67,205,47,907,45,158,45,903,34,227,44,909,20,257,40*63		
	\$GAGSV,2,1,05,12,69,355,46,19,42,115,42,24,30,246,45,11,27,290,40*60		
	\$GLGSV,2,2,08,79,24,299,45,78,22,254,49,81,18,303,45,66,10,181,44*6F		
	\$BDGSV,3,1,12,8,68,354,49,12,61,326,51,13,60,302,50,3,44,190,45*6D		
	\$GPGSV,3,3,12,2,22,264,42,12,21,318,43,23,17,93,42,9,12,126,37*43		
	\$GPGSV,3,2,12,53,38,212,46,50,35,139,42,41,32,226,42,28,25,173,44*77		





# 2.5 RMC - Recommended Minimum Specific GNSS Data

ID	RMC					
Description	Time, date, position, course and speed data provided by a GNSS navigation receiver.					
Format	\$GNRMC,hhmmss.fff,A,IIII.IIIII,a,yyyyyy,a,x.x,x.x,ddmmyy,x.x,a,a*hh <cr><lf></lf></cr>					
Content	hhmmss.fff HourMinuteSecond. fraction (UTC)					
(Shown in	A	Status, V=Navigation receiver warning A=Valid				
sequence)	1111.11111	Latitude ( HD9300/HD9400 series     .        )				
	a	N or S				
	ууууу.ууууу	Longitude ( HD9300/HD9400 series yyyyy.yyyyyy)				
	a	E or W				
	x.x Speed over ground, knot					
	x.x Degrees to true north					
	ddmmyy	Date				
	X.X	Magnetic variation				
	a	Degrees E/W				
	a	Mode Indicator: V = Invalid, A= Autonomous and D				
		=Differential, F = Float RTK, P = Precise and R=Real Time				
		Kinematic				
	a	navStatus Note: NMEA v4.10 and above only				
	hh	Checksum				
Example	¢CNDN4C 11E222 000 4 400	A CUID NO A FROM COOK A COOK COOK OF A COOK OF				
3.01/4.00	\$GNRMC,115332.000,A,4006.20852,N,11628.14483,E,0.000,0.50,041215,,,,A*48					
Example NMEA	\$GNRMC,115522.000,A,4006.20885,N,11628.14498,E,0.000,0.50,041215,,,,A,S*30					
version 4.10						



# 2.6 VTG - Course Over Ground and Ground Speed

ID	VTG (support NMEA version 3.01/4.00/4.10)				
Description	The actual course and spee	ed relative to the ground			
Format	\$GNVTG,x.x,T,x.x,M,x.x,N,x	.x,K,a*hh <cr><lf></lf></cr>			
Content	X.X	Track Degrees			
(Shown in	Т	True			
sequence)	X.X	Magnetic Degrees			
	M	Magnetic			
	X.X	Speed Knots			
	N Knots				
	X.X	Speed Kilometers Per Hour			
	K	Kilometers Per Hour			
	A	Mode Indicator: V = Invalid, A= Autonomous and D			
		=Differential			
	hh Checksum				
Example	\$GNVTG,0.50,T,,M,0.000,N,0.000,K,A*26				

# 2.7 ZDA - Time & Date

ID	ZDA (support NMEA version 4.10/3.01/4.00)					
Description	Time & Date - UTC, day,	month, year and local time zone				
Format	\$GNZDA,hhmmss.fff,dd	,mm,yyyy,xx,yy*hh <cr><lf></lf></cr>				
Content	hhmmss.fff	HourMinuteSecond. fraction (UTC)				
(Shown in	dd	Day				
sequence)	mm Month					
	yyyy Year					
	xx	xx Local zone hours -1313				
	уу	Local zone minutes 059				
	hh	hh Checksum				
Example	\$GNZDA,072319.000,14,10,2015,-7,45*5F					



# 2.8 GLL - Geographic Position - Latitude/Longitude

ID	GLL(support NMEA version 4.10/3.01/4.00)					
Description	Latitude and Longitude o	Latitude and Longitude of vessel position, time of position fix and status.				
Format support	\$GNGLL,IIII.IIIII,a,yyyyyyyy	yyy,a,hhmmss.fff,A,a*hh <cr><lf></lf></cr>				
Content	1111.11111	Latitude ( HD9300/HD9400 series     .       )				
(Shown in	a	N or S (North or South)				
sequence)	ууууу.ууууу	yyyyyyyy Longitude ( HD9300/HD9400 series yyyyyyyyy)				
	a E or W (East or West)					
	hhmmss.fff HourMinuteSecond.fraction (UTC)					
	A Status A - Data Valid, V - Data Invalid					
	a	a Mode Indicator: V = Invalid, A= Autonomous and D				
		=Differential				
	hh	checksum				
Example	\$GNGLL,2225.56149,N,11412.68190,E,074822.001,A,A*44					

# 2.9 GST- GNSS Pseudorange Error Statistics

ID	GST				
Description	Reports statistical inform	ation on the quality of the position solution.			
Format support	\$GPGST,hhmmss.fff,x.x,x.x,x.x,x.x,x.x,x.x*hh <cr><lf></lf></cr>				
	\$GNGST,hhmmss.fff,x.x,x	.x,x.x,x.x,x.x,x.x*hh <cr><lf></lf></cr>			
Content	hhmmss.fff	HourMinuteSecond. fraction (UTC)			
(Shown in	x.x	RMS value of the standard deviation of the			
sequence)	x.x Standard deviation of semi-major axis				
	x.x Standard deviation of semi-minor axis				
	x.x Orientation of semi-major axis				
	x.x Standard deviation of latitude error				
	x.x	Standard deviation of longitude error			
	x.x Standard deviation of altitude error				
	hh Checksum				
Example	\$GPGST,082356.00,1.8,,,,1.7,1.3,2.2*7E				

# **2.10** TXT - system or user defined message

ID	TXT(support NMEA version 4.10/3.01/4.00)				
Description	System or user defined m	System or user defined message			
Format support	\$GNTXT,xx,xx,xx,ccc*hh<	\$GNTXT,xx,xx,ccc*hh <cr><lf></lf></cr>			
Content	xx	total number \$xxTXT in the current period			
(Shown in	xx subsequent ID, counting from 01, 02 and so on				
sequence)	xx message of system first starting				
	ссс	ALLYSTAR or ANT_OK or customer flag			
	hh Checksum				



Example	\$GNTXT,02,01,01,ALLYSTAR*5F (after hardware reset)
	\$GNTXT,02,01,02,ALLYSTAR*5C (after reset by start command)



# **2.11** SBAS Description

There are several compatible SBAS systems available or in development all around the world:

- WAAS (Wide Area Augmentation System) for North America has been in operation since 2003.
- MSAS (Multi-Functional Satellite Augmentation System) for Asia has been in operation since 2007.
- EGNOS (European Geostationary Navigation Overlay Service) has been in operation since 2009.
- GAGAN (GPS Aided Geo Augmented Navigation)
- SDCM (Difference correction and monitoring system)

The following table shows the PRN value in ALLYSTAR NMEA protocol.

NINATA	WAAS	S	EGNO	S	GAGA	N	MSAS	5	SDCN	1
NMEA Versio n	ORIGINAL - PRN	AS PRN	ORIGINAL - PRN	AS PRN						
	135	48	120	33	127	40	129	42	140	53
2.01	138	51	124	37	128	41	137	50	125	38
3.01	133	46	126	39	-	-	-	-	-	-
	-	-	136	49	-	-	-	-	-	-
	135	135	120	120	127	127	129	129	140	140
4.00	138	138	124	124	128	128	137	137	125	125
4.00	133	133	126	126	-	-	-	-	-	-
	-	-	136	136	-	-	-	-	-	-
	135	48	120	33	127	40	129	42	140	53
4.10	138	51	124	37	128	41	137	50	125	38
4.10	133	46	126	39	-	-	-	-	-	-
	-	-	136	49	-	-	-	-	-	-

<sup>\*</sup> In NMEA V3.01 and 4.10 the SBAS PRN offset value set with -87, and in the V4.00 the SBAS PRN offset value set with 0.



# **3 BINARY MESSAGES**

All binary messages start with a fixed start sequence followed by a message ID in order to identify the packet type. Some message has payload with dynamic length, therefore a payload length is included to locate the payload region. At the same time, a 16 bit checksum will be padded after payload for message integrity.

# **ALLYSTAR** Binary message packet

Message **Payload** Start End **Payload** ID length sequence sequence 16 Bit Length in Message checksum Group ID Sub ID Dec 241 Dec 217 Little Endian dependant Hex F1 Hex D9 (1 byte) {CK1, CK2} (1 byte) (0 - N bytes) (2 bytes) (2 bytes)



# 3.1 Packet field description

### 3.1.1 Start Sequence

Start sequences is needed for every binary message packet in order to distinguish the start of a message.

#### 3.1.2 Message ID

Message ID is divided into group ID and sub ID. Messages in the same group are with similar content for multipurpose usage while sub ID are used to distinguish between different packets.

The following table describes each group:

Symbol	ID(HEX)	Description			
NAV	0x01	Receiver status information			
ACK	0x05	Response packets for CFG type packets			
CFG	0x06	Configure receiver's options			
MON	0x0A	Monitoring receiver status			
AID	0x0B	GNSS aiding information			

### 3.1.3 Payload Length

This is a 2 byte long field describing length of the payload. It does not include any length other than the payload (Start sequence, Message ID, etc.). Which means the smallest possible value of payload length can be zero. The 2 byte payload length is aligned with Little endian format.

#### 3.1.4 Payload

Payload refers to the content of a message. Payload content and their respective details will be discussed later.

# 3.1.5 End Sequence

End sequence includes a 16 Bit checksum. Its calculation is the 8-Bit Fletcher Algorithm. The checksum value is calculated from the start byte of Message ID to the last byte of payload content, start sequence is ignored when calculating checksum.

#### Algorithm:


- 1 Ckecksum1 = 0
- 2 Checksum2 = 0
- 3 For each byte **B** from Message ID to last byte of payload
- 4 Ckecksum1 = Ckecksum1 + B
- 5 Checksum2 = Checksum2 + Ckecksum1
- 6 Mask Ckecksum1 with 0xFF
- 7 Mask Checksum2 with 0xFF
- \* The result 2 bytes checksum sequence would be {Checksum1, Checksum2}.



### 3.2 Protocol data transfer


### 3.2.1 CFG Packet Scenario

An Acknowledge (ACK) or a NOT Acknowledge (NACK) packet will be sent back to sender after any set action of the CFG group command received. Implication of the ACK/NACK packet is message dependent. ACK/NACK message is ONLY sent when CFG message received.

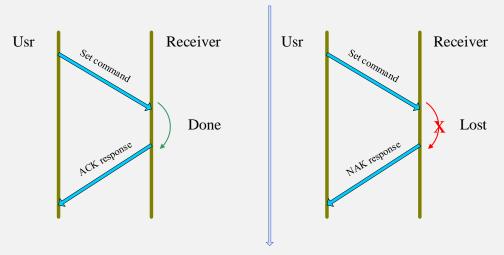

#### 3.2.2 Poll Packet Scenario


Some of the packet can be polled through sending a poll packet. The poll packet is also a standard binary message and has the same group ID and sub ID with the packet being polled. Unless specified, a poll packet usually contains empty payload.

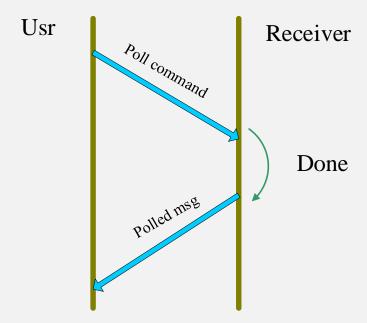



# **3.2.3** Others

For some other packets, ALLYSTAR GNSS receiver would neither ACK nor response to sender.

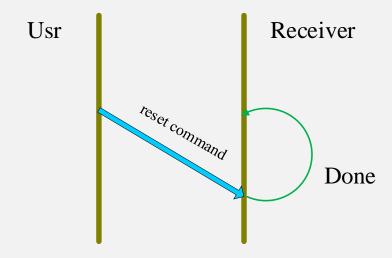



# 4 BINARY PACKET OVERVIEW

Name	Msg. ID	Length	Туре	Description
NAV-POSECEF	0x01 0x01	0	Poll	Position solution in ECEF
NAV-POSECEF	0x01 0x01	20	Get	Position solution in ECEF
NAV-POSLLH	0x01 0x02	0	Poll	Geodetic Position
NAV-POSLLH	0x01 0x02	28	Get	Geodetic Position
NAV-DOP	0x01 0x04	0	Poll	Dilution of precision
NAV-DOP	0x01 0x04	18	Get	Dilution of precision
NAV-CLOCK	0x01 0x22	0	Poll	Clock solution
NAV-CLOCK	0x01 0x22	20	Get	Clock solution
NAV-SVINFO	0x01 0x30	0	Poll	Satellite information
NAV-SVINFO	0x01 0x30	8 + 24N	Get	Satellite information
NAV-TIME	0x01 0x05	1	Poll	Time solution command
NAV-TIME	0x01 0x05	16	Polled	GNSS (GPS or BD) Time solution
				message
ACK-NACK	0x05 0x00	2	Response	Message not-acknowledge
ACK-ACK	0x05 0x01	2	Response	Message acknowledge
CFG-PRT	0x06 0x00	1	Poll	Port Configuration
CFG-PRT	0x06 0x00	8	Polled / Set	Port Configuration
CFG-MSG	0x06 0x01	2	Poll	Message Rate Configuration
CFG-MSG	0x06 0x01	3	Polled / Set	Message Rate Configuration
CFG-PPS	0x06 0x07	0	Poll	Pulse per second
CFG-PPS	0x06 0x07	5	Polled / Set	Pulse per second
CFG-DOP	0x06 0x0A	0	Poll	DOP mask for navigation use
CFG-DOP	0x06 0x0A	4	Polled / Set	DOP mask for navigation use
CFG-ELEV	0x06 0x0B	0	Poll	Elevation mask for navigation use
CFG-ELEV	0x06 0x0B	4	Polled / Set	Elevation mask for navigation use
CFG-NAVSAT	0x06 0x0C	0	Poll	Navigation satellite mask
CFG-NAVSAT	0x06 0x0C	4	Polled/Set	Navigation satellite mask
CFG-HEIGHT	0x06 0x0D	0	Poll	Get the height limitation
CFG-HEIGHT	0x06 0x0D	16	Polled/Set	Config the height limitation
CFG-SBAS	0x06 0x0E	26	Poll	SBAS status for use
CFG-SBAS	0x06 0x0E	26	Polled / Set	SBAS status configuration
CFG-SPDHOLD	0x06 0x0F	0	Poll	Query static hold speed for navigation
				use
CFG-SPDHOLD	0x06 0x0F	2	Polled / Set	Configuration static hold speed for
				navigation use
CFG-SIMPLERST	0x06 0x40	1	Set	Simple startup command
CFG-NMEAVER	0x06 0x43	0	Poll	Get the version of NMEA
CFG-NMEAVER	0x06 0x43	1	Polled/Set	Set the version of NMEA
MON-VER	0x0A 0x04	0	Poll	Software/Hardware version
MON-VER	0x0A 0x04	32	Polled	Software/Hardware version



Name	Msg. ID	Length	Туре	Description
MON-INFO	0x0A 0x05	0	Poll	Special customized information
MON-INFO	0x0A 0x05	2+N	Polled/Set	Special customized information
AID-INI	0x0B 0x01	0	Poll	Initial Aiding Data
AID-INI	0x0B 0x01	48	Polled / Set	Initial Aiding Data
AID-EPH-GPS	0x0B 0x32	1	Poll	Ephemeris Data for particular svid (if 0,
				for all GPS)
AID-EPH-GPS	0x0B 0x32	65	Polled / Set	Ephemeris Data
AID-EPH-BD	0x0B 0x33	1	Poll	Ephemeris Data for particular svid (if 0,
				for all BD)
AID-EPH-BD	0x0B 0x33	92	Polled / Set	Ephemeris Data



# 5 DETAILED PACKET DESCRIPTION

In this section, all binary messages content will be discussed in details.

In the payload contents sections of the following tables, byte offset refers to the byte offset starting from the first byte in the payload.

To abbreviate data type names, we have the following definitions table for data type.

Symbol	Name	Size in bytes
U1	Unsigned char	1
S1	Signed char	1
U2	Unsigned short	2
S2	Signed short	2
U4	Unsigned integer	4
S4	Signed integer	4
R4	float	4

<sup>\*</sup> The examples after binary message descriptions table are hexadecimals. Spaces between two hexadecimals (e.g. space between F1 D9) are delimiters for better present, and they should not be included when communicating with GNSS receivers.

# 5.1 Navigation messages (NAV)

#### 5.1.1 NAV-POSECEF

MESSAGE	NAV-POSECEF	NAV-POSECEF				
Description	Position soluti	Position solution in ECEF				
Туре	Poll	Poll				
Comment	-	-				
Message	Header	ID	Length (Bytes)	Payload	Checksum	
Structure	0xF1 0xD9	0xF1 0xD9				
No Payload						

MESSAGE	NAV-POSECEF				
Description	Position soluti	on in ECEF			
Туре	Polled				
Comment	-				
Message	Header	ID	Length (Bytes)	Payload	Checksum
Structure	0xF1 0xD9	0x01 0x01	20	See below	CK_1 CK_2
Payload Contents:					
Byte Offset	Data Type	Scale	Name	Unit	Description
0	U4		iTow	ms	GNSS Millisecond
					Time of Week
4	S4		ecefX	cm	ECEF X coordinate
8	S4		ecefY	cm	ECEF Y coordinate
12	S4		ecefZ	cm	ECEF Z coordinate
16	U4		pAcc	cm	Position Accuracy
					Estimate



# 5.1.2 NAV-POSLLH

MESSAGE	NAV-POSLLH	NAV-POSLLH				
Description	Position soluti	Position solution in LLA				
Туре	Poll	Poll				
Comment	-					
Message	Header	ID	Length (Bytes)	Payload	Checksum	
Structure	0xF1 0xD9	0xF1 0xD9				
No Payload						

MESSAGE	NAV-POSLLH	NAV-POSLLH					
Description	Position solu	Position solution in LLA					
Туре	Polled						
Comment	-						
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	0x01 0x02	28	See below	CK_1 CK_2		
Payload Contents	S:						
Byte Offset	Data Type	Scale	Name	Unit	Description		
0	U4		iTow	ms	GNSS Millisecond		
					Time of Week		
4	S4	1e-7	lon	degrees	Longitude		
8	S4	1e-7	lat	degrees	Latitude		
12	S4		height	mm	Height above		
					Ellipsoid		
16	S4		hMSL	mm	Height above mean		
					sea level		
20	U4		hAcc	mm	Horizontal Accuracy		
					Estimate		
24	U4		vAcc	mm	Vertical Accuracy		
					Estimate		

### 5.1.3 NAV-DOP

MESSAGE	NAV-DOP	NAV-DOP					
Description	Dilution of pre	Dilution of precision					
Туре	Poll	Poll					
Comment	-	-					
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	0xF1 0xD9					
No Payload							

MESSAGE	NAV-DOP
Description	Dilution of precision
Туре	Polled



Comment	-				
Message	Header	ID	Length (Bytes)	Payload	Checksum
Structure	0xF1 0xD9	0x01 0x04	18	See below	CK_1 CK_2
Payload Contents:					
Byte Offset	Data Type	Scale	Name	Unit	Description
0	U4		iTow	ms	GNSS Millisecond
					Time of Week
4	U2	0.01	gDOP		Geometric DOP
6	U2	0.01	pDOP		Position DOP
8	U2	0.01	tDOP		Time DOP
10	U2	0.01	vDOP		Vertical DOP
12	U2	0.01	hDOP		Horizontal DOP
14	U2	0.01	nDOP		Northing DOP
16	U2	0.01	eDOP		Easting DOP



# 5.1.4 NAV-TIME

MESSAGE	NAV-TIME				
Description	GNSS time solu	ution			
Туре	Poll				
Comment	-				
Message	Header	ID	Length (Bytes)	Payload	Checksum
Structure	0xF1 0xD9	0x01 0x05	1	See below	CK_1 CK_2
Payload Contents:					
Byte Offset	Data Type	Scale	Name	Unit	Description
0	U1		navSys		0 : GPS
					1:BDs

# Example:

Poll current GPS time message

F1 D9 01 05 01 00 00 07 1C

MESSAGE	NAV-TIME					
Description	GNSS(GPS o	r BD) Time so	lution message			
Туре	Polled					
Comment						
Message	Header	ID	Length (Bytes)	Payload	Checksum	
Structure	0xF1 0xD9	0x01 0x05	16	See below	CK_1 CK_2	
Payload Conten	ts:					
Byte Offset	Data Type	Name	Unit	Description		
0	U1	navSys		0: GPS		
				1: BD		
1	U1	flag		1: valid 0:	invalid	
				Bit0 : week		
				Bit1: second		
				Bit2: Leapse	cond	
2	S2	Fractow	ns	Fraction par	t of GNSS Time of week	
4	U4	refTow	ms	Reference GNSS Time		
8	U2	Week		Week in GNSS time		
10	S2	leapSec	S	Leap second to UTC		
12	U4	timeErr	ns	Possible erro	or in time	

# Example:

Get the GPS time

F1 D9 01 05 10 00 00 07 2C 79 FF 55 3E 16 10 00 12 00 06 00 00 00 92 5A

# **5.1.5** NAV-TIMEUTC

MESSAGE	NAV-TIMEUTO	NAV-TIMEUTC				
Description	UTC Time Solu	UTC Time Solution				
Туре	Poll	Poll				
Comment	-					
Message	Header	ID	Length (Bytes)	Payload	Checksum	
Structure	0xF1 0xD9	0xF1 0xD9				
No Payload						

MESSAGE	NAV-TIMEUT	NAV-TIMEUTC						
Description	UTC Time So	UTC Time Solution						
Туре	Polled							
Comment	-							
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0x01 0x21	20	See below	CK_1 CK_2			
Payload Content	ts:							
Byte Offset	Data Type	Scale	Name	Unit	Description			
0	U4		iTow	ms	GNSS Millisecond Time of Week			
4	U4		tAcc	ns	Time Accuracy Estimate			
8	S4		nano	ns	Nanoseconds of second, range - 500000000~5000000 00 (UTC)			
12	U2		year	У	Year, range 1999~2099 (UTC)			
14	U1		month	m	Month, range 1~12 (UTC)			
15	U1		day	d	Day of Month, range 1~31 (UTC)			
16	U1		hour	h	Hour of Day, range 0~23 (UTC)			
17	U1		min	m	Minute of Hour, range 0~59 (UTC)			
18	U1		sec	S	Second of Min, range 0~59 (UTC)			
19	U1		ValidFlag		Please see below			

ValidFlag bit description				
Bit number	ValidFlag	Description		
0	Valid TOW	1 means valid time of week		
1	Valid WKN	1 means valid week number		



2	Valid UTC	1 means valid UTC time		
3	reserved	reserved		
7~4	utcStandard	UTC standard identifier (four bits make the value from 0~15).		
		0: Information not available		
		1: National Time Service Center, China (NTSC)		
		2: U.S. Naval Observatory (USNO)		
		4: European Laboratory (EUL)		
		5: Former Soviet Union (SU)		
		6: India(INDIA)		
		Others : Unknown		

# 5.1.6 NAV-CLOCK

MESSAGE	NAV-CLOCK					
Description	Clock Solution	Clock Solution				
Туре	Poll	Poll				
Comment		Get the clock status when the receiver position, the value of clock drift/1000 is the clock error. If the TXCO SPEC is 0.5 ppm, the value should not be larger than it.				
Message	Header	Header ID Length (Bytes) Payload Checksum				
Structure	0xF1 0xD9					
No Payload						

MESSAGE	NAV-CLOCK						
Description	Clock Solution	Clock Solution					
Туре	Polled						
Comment	-						
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	0x01 0x22	20	See below	CK_1 CK_2		
Payload Contents:							
Byte Offset	Data Type	Scale	Name	Unit	Description		
0	U4		iTow	ms	GNSS Millisecond		
					Time of Week		
4	S4		clkB	ns	Clock bias in		
					nanoseconds		
8	S4		clkD	ns/s	Clock drift in		
					nanoseconds per		
					second		
12	U4		tAcc	ns	Time Accuracy		
					Estimate		
16	U4		fAcc	ps/s	Frequency Accuracy		
					Estimate		



# 5.1.7 NAV-SVINFO

MESSAGE	NAV-SVINFO					
Description	Request Space V	Request Space Vehicle Information				
Туре	Poll	Poll				
Comment	-	-				
Message	Header	Header ID Length (Bytes) Payload Checksum				
Structure	0xF1 0xD9					
No Payload						

MESSAGE	NAV-SVINFO	NAV-SVINFO					
Description	Space Vehicle	Space Vehicle Information					
Туре	Polled	Polled					
Comment	-						
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	0x01 0x30	8+ 24N	See below	CK_1 CK_2		
Payload Conten	ts:	I					
Byte Offset	Data Type	Scale	Name	Unit	Description		
0	U4		iTow	ms	GNSS Millisecond Time of Week		
4	U4		numCh		Number of channels		
Start of repeate	ed block (n>=0)			1			
8+24*n	U1		channel		Channel number, 255 for SVs not assigned to a channel		
9+24*n	U1		svid		Satellite ID		
10+24*n	S1		flags		Bitmask (Refer to manual)		
11+24*n	S1		quality		Bitfield (Refer to manual)		
12+24*n	U1		cno	dbHz	Carrier to Noise Ratio (Signal Strength)		
13+24*n	S1		elev	degrees	Elevation in integer degrees		
14+24*n	S2		azim	degrees	Azimuth in integer degrees		
16+24*n	S4		prRes	cm	Pseudo range residual in centimetres		
20+24*n	R4		pseudorangeRate	m/s	Pseudo range rate		
24+24*n	R8		pseudorange	m	Pseudo range		



# **5.2** Receiver Manager Messages

# **5.2.1** RXM-DUM

MESSAGE	RXM-DUM						
Description	Enable/disable	e dump rawda	ta message				
Туре	Set						
Comment	Periodic outpu	it raw message	9				
Message	Header ID Length (Bytes) Payload Checksum						
Structure	0xF1 0xD9	0x02 0x01	01	See below	CK_1 CK_2		
Payload Contents:							
Byte Offset	Data Type	Scale	Name	Unit	Description		
0	U1	1 type 0: disable					
					1: enable		

# Example:

Enable the rawdata output

F1 D9 02 01 01 00 01 05 12

Disable the rawdata output

F1 D9 02 01 01 00 00 04 11

### 5.2.2 RXM-GALSAR

MESSAGE	RXM-GALSAR	RXM-GALSAR					
Description	Galileo Search	Galileo Search and Rescue (SAR) Short Return Link Message detected by the receiver					
Туре	Output						
Comment	Periodic outp	ut binary mess	age				
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	0x02 0x02	16	See below	CK_1 CK_2		
Payload Contents:							
Byte Offset	Data Type	Scale	Name	Unit	Description		
0	U1		version		Message version		
1	U1	-	type	-	Message type (0x01 for		
					Short-RLM)		
2	U1		svid	-	Satellite ID		
3	U1		reserved1		Reserved		
4	U1[8]	-	beacon	-	Beacon identifier (60 bits),		
					most significant byte send		
					first. Top four bits of first		
					byte are zero.		
12	U1		message	-	Message code (4 bits)		
13	U1[2]	-	params	-	Parameters (16 bits), most		
					significant byte send first		
					send first.		
15	U1		reserved2	-	Reserved		



# Example:

MESSAGE	RXM-GALSAF	RXM-GALSAR					
Description	Galileo Searc	Galileo Search and Rescue (SAR) Long Return Link Message (RLM) detected by the					
	receiver						
Туре	Output						
Comment	Periodic outp	out binary mess	sage				
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	0x02 0x02	28	See below	CK_1 CK_2		
Payload Contents							
Byte Offset	Data Type	Scale	Name	Unit	Description		
0	U1		version		Message version		
1	U1	-	type	-	Message type (0x02 for		
					Long-RLM)		
2	U1		svid	-	Satellite ID		
3	U1		reserved1		Reserved		
4	U1[8]	-	beacon	-	Beacon identifier (60 bits),		
					most significant byte send		
					first. Top four bits of first		
					byte are zero		
12	U1		message	-	Message code (4 bits)		
13	U1[12]	-	params	-	Parameters (96 bits), most		
					significant byte send first		
25	U1[3]		reserved2	-	Reserved		

# Example:



# 5.3 Message Acknowledge (ACK)

### 5.3.1 ACK-NAK

MESSAGE	ACK-NCK				
Description	Message not-a	acknowledge			
Туре	Response				
Comment	The response	message for a	message ID which	is invalid or n	ot recognized
Message	Header	ID	Length (Bytes)	Payload	Checksum
Structure	0xF1 0xD9	0x05 0x00	2	See below	CK_1 CK_2
Payload Contents:					
Byte Offset	Data Type	Scale	Name	Unit	Description
0	U1		groupID		Group ID of the not
					acknowledge signal
1	U1		subID		Sub ID of the not-
					acknowledge signal

### **Example:**

Receiver NOT acknowledge message CFG-MSG which include invalid payload content

(GroupID: 0x06, SubID: 0x01) F1 D9 05 00 02 00 06 01 0E 33

# 5.3.2 ACK-ACK

MESSAGE	ACK-ACK				
Description	Message acknowledge	owledge			
Туре	Response				
Comment	The response i	message for a	message ID which	is valid and re	ecognized
Message	Header	ID	Length (Bytes)	Payload	Checksum
Structure	0xF1 0xD9	0x05 0x01	2	See below	CK_1 CK_2
Payload Contents:					
Byte Offset	Data Type	Scale	Name	Unit	Description
0	U1		groupID		Group ID of the
					acknowledge signal
1	U1		subID		Sub ID of the acknowledge
					signal

### **Example:**

Receiver acknowledge message CFG-SIMPLERST (GroupID: 0x06, SubID: 0x40)

F1 D9 05 01 02 00 06 40 4E 77



# 5.4 Configuration Input Messages (CFG)

#### 5.4.1 CFG-PRT

MESSAGE	CFG-PRT	CFG-PRT						
Description	Query commu	nication port of	configuration					
Туре	Poll							
Comment	Support UART	0 and UART1						
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0x06 0x00	1	See below	CK_1 CK_2			
Payload Contents:								
Byte Offset	Data Type	Scale	Name	Unit	Description			
0	U1		portID		Port Identifier Number			
		0 : UARTO						
					1: UART1			

#### Example:

Poll current UART1 configuration

F1 D9 06 00 01 00 00 07 21

MESSAGE	CFG-PRT	CFG-PRT					
Description	Port Configur	ration					
Туре	Polled/Set						
Comment	Set the config	guration (baud	rate) of communic	ation port			
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	0x06 0x00	8	See below	CK_1 CK_2		
Payload Content	s:	·					
Byte Offset	Data Type	Scale	Name	Unit	Description		
0	U1		portID		Port Identifier Number		
					0: UARTO		
					1: UART1		
1	U1[3]		res		Reserved		
4	U4		baudrate	Bits/s	Baudrate		

#### **Example:**

To set UART1 at 9600

F1 D9 06 00 08 00 01 00 00 00 80 25 00 00 B4 0F

To set UARTO at 115200

F1 D9 06 00 08 00 00 00 00 00 00 C2 01 00 D1 E0



#### 5.4.2 CFG-MSG

MESSAGE	CFG-MSG						
Description	Query messag	e configurati	ons				
Туре	Poll						
Comment	-						
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	0x06 0x01	2	See below	CK_1 CK_2		
Payload Contents:							
Byte Offset	Data Type	Scale	Name	Unit	Description		
0	U1	J1 msggroup Message Group					
1	U1		subID		Message Sub ID		

#### **Example:**

Poll current message rate of NMEA GGA message

F1 D9 06 01 02 00 F0 00 F9 11

MESSAGE	CFG-MSG	CFG-MSG						
Description	Message co	nfigurations						
Туре	Polled/Set							
Comment	-							
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0x06 0x01	3	See below	CK_1 CK_2			
Payload Content	:s:							
Byte Offset	Data Type	Scale	Name	Unit	Description			
0	U1		Class ID		Message Group			
1	U1		Message ID		Message Sub ID			
2	U1		Period		Period of message			

#### Example:

Set NMEA GSV message rate to 1 per 2 seconds

F1 D9 06 01 03 00 F0 04 02 00 19

Set NMEA GLL message rate to 1 per 5 seconds

F1 D9 06 01 03 00 F0 01 05 00 16

Disable NMEA VTG message

F1 D9 06 01 03 00 F0 06 00 00 1B

Set RTCM3 1005 message rate to 5 (per update rate)

F1 D9 06 01 03 00 F8 05 05 0C 36



## 5.4.3 CFG-PPS

MESSAGE	CFG-PPS	CFG-PPS						
Description	Query Pulse	Query Pulse per second configuration						
Туре	Poll	Poll						
Comment	-							
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0xF1 0xD9						
No Payload								

## Example:

To poll current PPS configuration

F1 D9 06 07 00 00 0D 2D

MESSAGE	CFG-PPS (For	CFG-PPS (For Cynosure I)						
Description	Pulse per sec	ond						
Туре	Polled/Set							
Comment	(FOR CYNOSI	JE I ONLY)						
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0x06 0x07	5	See below	CK_1 CK_2			
			12					
Payload Content	:s:							
Byte Offset	Data Type	Scale	Name	Unit	Description			
0	U4		Length	us	Pulse Width in micro-			
					second			
1	R1		Polarity		Pulse polarity at the start			
					of PPS, 0 = falling edge at			
					start of second			



MESSAGE	CFG-PPS (For	Cynosure II/III	)		
Description	Pulse per seco	nd			
Туре	Polled/Set				
Comment	Extend to supp	oort cynosure	II format		
Message	Header	ID	Length (Bytes)	Payload	Checksum
Structure	0xF1 0xD9	0x06 0x07	15	See below	CK_1 CK_2
Payload Contents:					
Byte Offset	Data Type	Scale	Name	Unit	Description
0	U4		period	us	One elapsed cycle time of
					PPS in microsecond
4	S4		Offset	ns	Pulse delay defined by
					user. The default value is 0
					which means the function
					disabled and the GPIO
					output low.
8	U4	10-6	Duty Cycle	%	Ratio of Active part in PPS
12	U1		Polarity	-	Pulse polarity at the start
					of PPS, 0 = falling edge at
					start of second
13	U1		GPIO		0~15
14	U1		Sync		0- Only output PPS when
					fixing
					1- Keep PPS even there is
					no position fix

#### Example:

In cynosure II, to set 1PPS with pulse length 500us and positive polarity high on GPIO13 with PPS output even there is no position fix.

 $\mathsf{F1}\;\mathsf{D9}\;\mathsf{06}\;\mathsf{07}\;\mathsf{0F}\;\mathsf{00}\;\mathsf{40}\;\mathsf{42}\;\mathsf{0F}\;\mathsf{00}\;\mathsf{00}\;\mathsf{00}\;\mathsf{00}\;\mathsf{00}\;\mathsf{10}\;\mathsf{27}\;\mathsf{00}\;\mathsf{00}\;\mathsf{01}\;\mathsf{0D}\;\mathsf{01}\;\mathsf{F3}\;\mathsf{86}$ 

The calculator of PPS:

The pulse width of the PPS = 
$$\frac{dutycycle}{10^6} \times \frac{period}{10^6} s$$



#### 5.4.4 CFG-CFG

MESSAGE	CFG-CFG							
Description	Clear, Save cur	Clear, Save current configurations						
Туре	Set							
Comment	Clear / Write s	ystem configu	ration on/into nor	nvolatile mem	ory			
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0x06 0x09	8	See below	CK_1 CK_2			
Payload Contents:								
Byte Offset	Data Type	Scale	Name	Unit	Description			
0	U4		action		0: Save			
					1: Load			
					2: Clear			
4	U4		mask		Bit 0: Baudrate			
					Bit 1: NMEA message rate			
					Bit 2: Navigation settings			
					Bit 3: Reserved			
					Bit 5: Reserved			
					0xFFFFFFFF: Factory reset			

#### **Example:**

Write baudrate and NMEA message rate configuration into involatile memory

F1 D9 06 09 08 00 00 00 00 00 03 00 00 00 1A 07

Write navigation related settings (DOP mask, Elev mask, height limit, satellite to use, nmea version, alt, ecef position, ephemeris saving etc.) into involatile memory

Example: F1 D9 06 09 08 00 00 00 00 04 00 00 00 1B 0B

Factory reset:

F1 D9 06 09 08 00 02 00 00 00 FF FF FF FF 15 01



## 5.4.5 CFG-DOP

MESSAGE	CFG-DOP	CFG-DOP					
Description	Query DOP m	Query DOP mask for navigation use					
Туре	Poll						
Comment	Poll current D	OP mask config	guration				
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	0xF1 0xD9					
No Payload							

## Example:

Poll current DOP mask configuration

F1 D9 06 0A 00 00 10 36

MESSAGE	CFG-DOP	CFG-DOP						
Description	DOP mask for	navigation use	!					
Туре	Polled/Set							
Comment	Position unfix	if DOP value is	larger than the m	nask				
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0x06 0x0A	4	See below	CK_1 CK_2			
Payload Contents:								
Byte Offset	Data Type	Scale	Name	Unit	Description			
0	U2	0.01	pDOP		Position DOP			
2	U2	0.01	tDOP		Time DOP			

#### **Example:**

Configure DOP mask of PDOP and TDOP to 50

F1 D9 06 0A 04 00 88 13 88 13 4A 0A



## 5.4.6 CFG-ELEV

MESSAGE	CFG-ELEV	CFG-ELEV						
Description	Query satellit	Query satellite elevation mask for navigation use						
Туре	Poll	Poll						
Comment	Poll current E	LEV mask confi	guration					
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0xF1 0xD9						
No Payload								

## Example:

Poll current ELEV mask configuration

F1 D9 06 0B 00 00 11 39

MESSAGE	CFG-ELEV	CFG-ELEV					
Description	Elevation mas	sk for navigatio	n use				
Туре	Polled/Set						
Comment	Satellite is no	t used in positi	on fix if its elevation	on angle is less	s than the mask		
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	0x06 0x0B	8	See below	CK_1 CK_2		
Payload Content	s:						
Byte Offset	Data Type	Scale	Name	Unit	Description		
0	R4		trkMask	radian	Track elevation angle mask		
4	R4	4 naviMask radian Navigation elevation angle					
					mask		

## **Example:**

Configure ELEV with track mask and navigation mask to  ${\bf 0}$ 

F1 D9 06 0B 04 00 00 00 00 00 15 95



#### 5.4.7 CFG-NAVSAT

MESSAGE	CFG-NAVSAT	CFG-NAVSAT					
Description	Control satelli	Control satellites to use in navigation					
Туре	Poll						
Comment	Poll current sa	atellite for navi	gation mask confi	guration			
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	0xF1 0xD9					
No Payload							

## Example:

Poll current satellite for navigation mask

F1 D9 06 0C 00 00 12 3C

MESSAGE	CFG-NAVSAT	CFG-NAVSAT						
Description	Control satell	Control satellites to use in navigation						
Туре	Polled/Set							
Comment	Select the typ	oe of satellites	to use					
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0x06 0x0C	4	See below	CK_1 CK_2			
Payload Contents:								
Byte Offset	Data Type	Scale	Name	Unit	Description			
0	U4		enableMask		Bit Mask of enabled			
					satellite type, enabled			
					when bit mask is 1			
					0x00000001: GPS L1			
					0x00000002: GLONASS G1			
					0x00000004: BEIDOU B1			
					0x00000010: GALILEO E1			
					0x00000020: QZSS L1			
					0x00000040: SBAS L1			
					0x00000080: IRNSS L5			
					0x00000400: GPS L2C			
					0x00000200: GPS L5			
					0x00002000: GLONASS G2			
					0x00004000: BEIDOU B1C			
					0x00040000: BEIDOU B2			
					0x00008000: BEIDOU B2A			
					0x00010000: BEIDOU B3I			
					0x00020000: BEIDOU B5			
					0x00100000: GALILEO E5A			
					0x08000000: QZSS L2C			
					0x04000000: QZSS L5			

#### Example:

Set to use GPS L1, BEIDOU B1 GPS L5, BEIDOU B2A F1 D9 06 0C 04 00 05 82 00 00 9D 36



#### 5.4.8 CFG-HEIGHT

MESSAGE	CFG-HEIGHT	CFG-HEIGHT					
Description	Query height	Query height limitation for position fix					
Туре	Poll						
Comment	-						
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	0xF1 0xD9					
No Payload							

## Example:

Poll height limitation for position fix

F1 D9 06 0D 00 00 13 3F

MESSAGE	CFG-HEIGHT	CFG-HEIGHT					
Description	Control height	limitation for	position fix				
Туре	Polled/Set						
Comment	Set height limi	tation for posi	tion fix				
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	0x06 0x0D	16	See below	CK_1 CK_2		
Payload Contents:							
Byte Offset	Data Type	Scale	Name	Unit	Description		
0	R8	R8 upperLimit m Upper limit of height					
8	R8		lowerLimit	m	Lower limit of height		

#### **Example:**

Set height limitation for position fix to -1000 and 20000

F1 D9 06 0D 10 00 00 00 00 00 88 D3 40 00 00 00 00 40 8F C0 4D 83



#### 5.4.9 CFG-SBAS

MESSAGE	CFG-SBAS	CFG-SBAS					
Description	request SBAS	request SBAS satellites to use in navigation					
Туре	Poll						
Comment	Poll current sa	atellite for navi	gation mask confi	guration			
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	0x06 0x0E	0	See below	CK_1 CK_2		
No Payload							

#### Example:

Poll current satellite for navigation mask

F1 D9 06 0E 00 00 14 42

MESSAGE	CFG-SBAS							
Description	Control indiv	Control individual SBAS satellites to use in navigation						
Туре	Polled/Set							
Comment	Select the typ	oe of satellites	to use. This function	on is only valid	d when SBAS is turned on,			
	and the satel	lite with define	ed PRN is supporte	d. If no, receiv	ver returns NACK.			
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0x06 0x0E	2xn	See below	CK_1 CK_2			
Payload Content	ts:							
Byte Offset	Data Type	Scale	Name	Unit	Description			
0	U1		PRN		EGNOS			
					INMARSAT3F2 = 120,			
					ARTEMIS = 124,			
					INMARSAT4F2 = 126,			
					SES5 = 136,			
					GAGAN			
					GSAT8 = 127,			
					GSAT10 = 128,			
					MSAS			
					MTSAT1R = 129,			
					MTSAT2 = 137,			
					SDCM			
					LUCH5A = 140,			
					LUCH5B = 125,			
					WAAS			
					GALAXY15 = 135,			
					ANIKF1R = 138,			
					INMARSAT4F3 = 133,			
1	U1		flag		0:disable, 1: enable			

#### Example:

Set to enable SBAS satellite GSAT8 and GSAT10

F1 D9 06 0E 14 00 89 00 7F 01 80 01 78 00 7B 00 87 00 8A 00 8C 00 7D 00 8D 00 4C 8C



## 5.4.10 CFG-SPDHOLD

MESSAGE	CFG-SPDHOLI	CFG-SPDHOLD					
Description	Query static h	Query static hold speed for navigation use					
Туре	Poll						
Comment	Poll current st	atic hold speed	d configuration				
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9						
No Payload	No Payload						

## Example:

Poll static hold speed configuration

F1 D9 06 0F 00 00 15 45

MESSAGE	CFG-SPDHOLD	CFG-SPDHOLD					
Description	Polled/Set stat	ic hold speed	for navigation use	1			
Туре	Polled/Set						
Comment	Set the static h	nold speed					
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	0x06 0x0F	2	See below	CK_1 CK_2		
Payload Contents:							
Byte Offset	Data Type	Scale	Name	Unit	Description		
0	U2	2 0.01 static hold Cm/s static hold speed for					
			speed		navigation		

#### **Example:**

Configure the static hold speed 0.06m/s-> 6cm/s to nav

F1 D9 06 0F 02 00 06 00 1D 83



## 5.4.11 CFG-EPHSAVE

MESSAGE	CFG-EPHSAVE	CFG-EPHSAVE					
Description	Query the stat	Query the status of ephemeris saving					
Туре	Poll	Poll					
Comment	Poll current ep	ohemeris savin	g configuration				
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	0x06 0x10	0	See below	CK_1 CK_2		
No Payload							

## Example:

Poll current ephemeris saving configuration

F1 D9 06 10 00 00 16 48

MESSAGE	CFG-EPHSAVE	CFG-EPHSAVE					
Description	Polled/Set epl	nemeris saving	status				
Туре	Polled/Set						
Comment	Enable or disa	ble the ephem	neris saving				
Message	Header	T ID Length (Bytes) Payload Checksum					
Structure	0xF1 0xD9	0x06 0x10	1	See below	CK_1 CK_2		
Payload Contents	:						
Byte Offset	Data Type	Scale	Name	Unit	Description		
0	U1		Enable or		1: enable ephemeris		
		disable saving					
					0: disable ephemeris		
					saving		

#### Example:

Enable the ephemeris saving automatically

F1 D9 06 10 01 00 01 18 62



## 5.4.12 CFG-NUMSV

MESSAGE	CFG-NUMSV	CFG-NUMSV					
Description	Query the ma	ximum and mi	nimum number of	f satellite used	in the receiver		
Туре	Poll						
Comment	Poll the maxin	num and minir	num number of sa	atellite used in	the receiver		
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	0xF1 0xD9					
No Payload							

## Example:

Poll maximum and minimum number of satellite used in the receiver

F1 D9 06 11 00 00 17 4B

MESSAGE	CFG-NUMSV	CFG-NUMSV					
Description	Polled/Set the	maximum an	d minimum numb	er of satellite (	used in the receiver		
Туре	Polled/Set						
Comment	Set the maxim	num and minin	num number of sa	tellite used in	the receiver		
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	0x06 0x11	2	See below	CK_1 CK_2		
Payload Contents	5:						
Byte Offset	Data Type	Scale	Name	Unit	Description		
0	U1		minsv		Minimum number of		
		satellite used					
1	U1		maxsv		Maximum number of		
					satellite used		

#### Example:

Set minimum to 4, maximum to 16

F1 D9 06 11 02 00 04 10 2D 99



## 5.4.13 CFG-SURVEY

MESSAGE	CFG-SURVEY	CFG-SURVEY						
Description	Query the du	Query the duration and accuracy requirement of survey mode						
	(HD9300/HD	(HD9300/HD9400 series only)						
Туре	Poll	Poll						
Comment	Poll the dura	tion and accura	acy requirement of	survey mode				
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0xF1 0xD9						
No Payload								

#### **Example:**

Poll duration and accuracy requirement of survey mode

F1 D9 06 12 00 00 18 4E

MESSAGE	CFG-SURVEY	CFG-SURVEY						
Description	Polled/Set the	Polled/Set the duration and accuracy requirement of survey mode						
	(HD9300/HD	9400 series on	ly)					
Туре	Polled/Set							
Comment	Set the durat	Set the duration and accuracy requirement of survey mode						
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0x06 0x12	8	See below	CK_1 CK_2			
Payload Content	:s:	<u>'</u>		-				
Byte Offset	Data Type	Scale	Name	Unit	Description			
0	U4	14 mindur second Minimal survey time						
4	U4		acclimit	mm	Accuracy requirement			

#### **Example:**

Set survey time to 5s, accuracy requirement to 100mm

F1 D9 06 12 08 00 05 00 00 00 64 00 00 00 89 16



## 5.4.14 CFG-FIXEDLLA

MESSAGE	CFG-FIXEDLLA						
Description	Query the cor	Query the constant stationary LLA position					
	(HD9300/HD9	(HD9300/HD9400 series only)					
Туре	Poll						
Comment	Poll the consta	ant stationary	LLA position				
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	0xF1 0xD9					
No Payload							

#### **Example:**

Poll constant stationary LLA position

F1 D9 06 13 00 00 19 51

MESSAGE	CFG-FIXEDLLA	CFG-FIXEDLLA						
Description	Polled/Set the	constant stati	onary LLA position	n				
	(HD9300/HD9	400 series onl	y)					
Туре	Polled/Set							
Comment	Set the consta	nt stationary L	LA position					
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0x06 0x13	12	See below	CK_1 CK_2			
Payload Contents:								
Byte Offset	Data Type	Scale	Name	Unit	Description			
0	S4	10 <sup>-7</sup>	lat	degrees	Latitude			
4	S4	4 10 <sup>-7</sup> Ion degrees Longitude						
8	S4		alt	cm	Altitude			



## 5.4.15 CFG-FIXEDECEF

MESSAGE	CFG-FIXEDEC	CFG-FIXEDECEF						
Description	Query the co	Query the constant stationary ECEF position						
	(HD9300/HD	9400 series on	ly)					
Туре	Poll							
Comment	Poll the const	ant stationary	ECEF position					
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0xF1 0xD9						
No Payload								

#### **Example:**

Poll constant stationary LLA position

F1 D9 06 14 00 00 1A 54

MESSAGE	CFG-FIXEDEC	CFG-FIXEDECEF						
Description	Polled/Set th	e constant stat	ionary ECEF positi	on				
	(HD9300/HD	9400 series on	ly)					
Туре	Polled/Set							
Comment	Set the const	Set the constant stationary ECEF position						
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0x06 0x14	12	See below	CK_1 CK_2			
Payload Contents	•							
Byte Offset	Data Type	Scale	Name	Unit	Description			
0	S4		x	cm	ECEF X coordinate			
4	S4	4 y cm ECEF Y coordinate						
8	S4		Z	cm	ECEF Z coordinate			



## 5.4.16 CFG-ANTIJAM

MESSAGE	CFG-ANTIJAN	CFG-ANTIJAM						
Description	Poll anti-jamr	Poll anti-jamming setting						
Туре	Poll							
Comment	Poll anti-jamr	ning setting						
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0xF1 0xD9						
No Payload								

## Example:

Poll anti-jamming setting

F1 D9 06 15 00 00 1B 57

MESSAGE	CFG-ANTIJAM	CFG-ANTIJAM						
Description	Control anti-ja	Control anti-jamming satellite system and threshold						
Туре	Polled/Set							
Comment	Select the type	e of satellites t	o set					
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0x06 0x15	3	See below	CK_1 CK_2			
Payload Contents:								
Byte Offset	Data Type	Scale	Name	Unit	Description			
0	U2		satsys_mask		Bit Mask of satellite type,			
					enabled when bit mask is 1			
					0x0002: GPS			
					0x0004: QZSS			
					0x0008: SBAS			
					0x0010: GALILEO			
					0x0020: BEIDOU			
					0x0040: GLONASS			
2	U1		threshold	dB	Power threshold that			
					activate the anti-jamming			
					mechanic			

## Example:

Set to GPS threshold 10dB

F1 D9 06 15 03 00 02 00 0A 2A C7



## 5.4.17 CFG-BDGEO

MESSAGE	CFG-BDGEO	CFG-BDGEO					
Description	Request BD-G	Request BD-GEO satellites using in navigation					
Туре	Poll	Poll					
Comment	Poll current sa	tellite for navi	gation mask confi	guration			
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	0xF1 0xD9					
No Payload							

## Example:

Poll current BD-GEO satellites to use in navigation

F1 D9 06 16 00 00 1C 5A

MESSAGE	CFG-BDGEO	CFG-BDGEO							
Description	Control indivi	dual BD-GEO s	atellites to use in r	navigation					
Туре	Polled/Set								
Comment	Select the BD	GEO satellites	to use. This functi	on is only valid	d when BD is turned on, and				
	the satellite w	ith defined PR	N is supported. If	no, receiver re	eturns NACK				
Message	Header	ID	Length (Bytes)	Payload	Checksum				
Structure	0xF1 0xD9	0x06 0x16	2*N	See below	CK_1 CK_2				
Payload Contents	:								
Byte Offset	Data Type	Scale	Name	Unit	Description				
0	U1		PRN		BDGEO PRN: 01, 02, 03,				
		04, 05, 17							
1	U1		flag		0:disable, 1: enable				

#### **Example:**

Set to enable BDGEO satellite 1, 2, 3, disable 4, 5, 17

F1 D9 06 16 0C 00 01 01 02 01 03 01 04 00 05 00 11 00 4B F3



## 5.4.18 CFG-CARRSMOOTH

MESSAGE	CFG-CARRSM	CFG-CARRSMOOTH						
Description	Query maxim	Query maximum windows used in carrier smoothing						
Туре	Poll	Poll						
Comment	Query maxim	um windows u	sed in carrier smo	othing				
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0xF1 0xD9						
No Payload								

## Example:

Poll carrier smoothing status

F1 D9 06 17 00 00 1D 5D

MESSAGE	CFG-CARRSM	CFG-CARRSMOOTH						
Description	Set maximum	windows used	d in carrier smooth	ning				
Туре	Polled/Set							
Comment	Set maximum	windows used	d in carrier smooth	ning				
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0x06 0x17	1	See below	CK_1 CK_2			
Payload Content	Payload Contents:							
Byte Offset	Data Type	Scale	Name	Unit	Description			
0	S1		windows value		-1: Enable carrier			
					smoothing with auto			
					config			
					0: Disable carrier			
					smoothing			
		1 or higher: Enable carri						
					smoothing with windows			
					value x+1			

#### **Example:**

Enable carrier smoothing using windows value 2

F1 D9 06 17 01 00 01 1F 7E



#### **5.4.19** CFG-SIMPLERST

MESSAGE	CFG-SIMPLERS	CFG-SIMPLERST					
Description	Simple startup	command					
Туре	Set						
Comment	Control GNSS	task					
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	0x06 0x40	1	See below	CK_1 CK_2		
Payload Contents:							
Byte Offset	Data Type	Scale	Name	Unit	Description		
0	U1		Mode		0x00: Reset,		
					0x01: Cold start,		
					0x02: Warm start,		
					0x03: Hot start,		
					0x10: Stop,		
					0x11: Start,		
					0x80: Clear All TRK		
					Channels		

#### Example:

Configure soft reset (as system command, there is NO ACK)

F1 D9 06 40 01 00 00 47 21

Configure a cold start (as system command, there is NO ACK)

F1 D9 06 40 01 00 01 48 22

Configure a warm start (as system command, there is NO ACK)

F1 D9 06 40 01 00 02 49 23

Configure a hot start (as system command, there is NO ACK)

F1 D9 06 40 01 00 03 4A 24

Configure GNSS stop (if successful, it would return ACK, else return NAK)

F1 D9 06 40 01 00 10 57 31

Configure GNSS start (if successful, it would return ACK, else return NAK)

F1 D9 06 40 01 00 11 58 32

Configure Clear All TRK Channels (if successful, it would return ACK, else return NAK)

F1 D9 06 40 01 00 80 C7 A1



## 5.4.20 CFG-SLEEP

MESSAGE	CFG-SLEEP	CFG-SLEEP						
Description	Sleep comma	and						
Туре	Set							
Comment	Set GNSS tas	k to sleep and i	estart after a whil	e defined by p	eriod. It is one time			
	command. It	is a one-time o	ommand					
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0x06 0x41	4	See below	CK_1 CK_2			
			5	Cynosure II				
Payload Contents	:							
Byte Offset	Data Type	Scale	Name	Unit	Description			
0	U4		period	ms	Sleep time			
Extension to Cyno	sure II							
4	U1		action		0: sleep			
					1: deep sleep			
					2: Reserved			
					3: power down			
					4: RTC stand only(cyno3			
					support only)			

#### **Example:**

Set GNSS task to deep sleep for 5000ms F1 D9 06 41 05 00 88 13 00 00 01 E8 56



## 5.4.21 CFG-PWRCTL

MESSAGE	CFG- PWRCT	CFG- PWRCTL						
Description	Query Power	Query Power control profile						
Туре	Poll	Poll						
Comment	-							
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0xF1 0xD9						
No Payload								

## Example:

Poll message of power control

F1 D9 06 42 00 00 48 DE

MESSAGE	CFG-PWRCTL	CFG-PWRCTL						
Description	Power contro	Power control command						
Туре	Polled/Set							
Comment	Set receiver p	ower control p	orofile					
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0x06 0x42	20	See below	CK_1 CK_2			
Payload Contents	5:							
Byte Offset	Data Type	Scale	Name	Unit	Description			
0	U1		mode		0: Disable (normal)			
					1: reserved			
					2: Cyclic short sleep			
					3: Cyclic long sleep			
1	U1		fix_cnt		reserved			
2	U1		Sat_cnt		reserved			
3	U1		padding		reserved			
4	U4		sleep_ms	ms	sleep time when fix			
8	U4		timeout_ms	ms	reserved			
12	U4		timeout_off_ms	ms	reserved			
16	U4		tracking_ms	ms	reserved			

#### **Example:**

Set receiver into cyclic sleep mode

F1 D9 06 42 14 00 00 05 00 00 B8 0B 00 00 60 EA 00 00 D0 07 00 00 00 00 00 45 F9



## 5.4.22 CFG-NMEAVER

MESSAGE	CFG- NMEAV	CFG- NMEAVER						
Description	Query curren	Query current NMEA version						
Туре	Poll	Poll						
Comment	-	-						
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0xF1 0xD9						
No Payload	No Payload							

## Example:

Poll NMEA version

F1 D9 06 43 00 00 49 E1

MESSAGE	CFG-NMEA-V	CFG-NMEA-VER						
Description	Set NMEA ver	sion						
Туре	Polled/Set							
Comment	Select from V3	3.01, V4.00 an	d V4.10. All suppo	rt GNSS and ir	ndividual Satellite system.			
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0x06 0x43	1	See below	CK_1 CK_2			
Payload Conten	ts:							
Byte Offset	Data Type	Scale	Name	Unit	Description			
0	U1		version		0: (not support)			
					1: V3.01			
					2: V4.00			
					3: V4.10			

#### **Example:**

Set NMEA version to V4.00

F1 D9 06 43 01 00 02 4C 2F



## 5.4.23 CFG-PWRCTL2

MESSAGE	CFG- PWRCTI	CFG- PWRCTL2						
Description	Query Period	Query Periodic sleep Power control profile						
Туре	Poll	Poll						
Comment	- periodic sle	- periodic sleep function						
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0xF1 0xD9						
No Payload								

## Example:

Poll message of periodic power control mode

F1 D9 06 44 00 00 4A E4

MESSAGE	CFG-PWRCTI	CFG-PWRCTL2							
Description	Periodic slee	Periodic sleep Power control command							
Туре	Polled/Set	Polled/Set							
Comment	Set receiver	Periodic sleep p	ower control profi	ile					
Message	Header	ID	Length (Bytes)	Payload	Checksum				
Structure	0xF1 0xD9	0x06 0x44	16	See below	CK_1 CK_2				
Payload Conter	nts:	<u> </u>							
Byte Offset	Data Type	Scale	Name	Unit	Description				
0	U1		mode		Power mode				
					0: Disable (normal)				
					1: reserved				
					2: Cyclic short sleep				
					3: Cyclic long sleep				
1	U1		padding		reserved				
2	U2		ontime	ms	The minimum duration in				
					second that won't enter				
					low power mode, must be				
					smaller than				
					update_period_ms				
4	S4		fixfreq		Position fix frequency.				
					Negative means the				
					frequency is (1 / fixfreq)				
8	U4		Update_period	ms	Position fix period.				
			_ms		Receiver will never try to				
					fix if set to 0, wait for				
					external event instead				
12	U4		tracking_ms	ms	Minimum tracking time.				
					0 means auto				

#### **Example:**

Set receiver into cyclic short sleep mode: fixfreq = 1, update period = 2000, Tracking duration = 200 F1 D9 06 44 10 00 02 00 64 00 01 00 00 D0 07 00 00 C8 00 00 00 60 19



## **5.4.24** CFG-FWUP

MESSAGE	CFG- FWUP						
Description	Start FW upda	te in Y-Moden	n protocol				
Туре	Poll						
Comment	(internal mess	age)					
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	xF1 0xD9					
Payload Contents:							
Byte Offset	Data Type	Scale	Name	Unit	Description		
0	U1		Freq		Port Identifier Number		
					0:16.369M		
					1:26M		

#### **Example:**

Set Firmware update

F1 D9 06 50 01 00 01 13 3F



#### 5.4.25 CFG-PVTLOG

MESSAGE	CFG-PVTLOG					
Description	Poll PVT DATA	LOG				
Туре	Poll					
Comment	Support UART	0 and UART1				
Message	Header	ID	Length (Bytes)	Payload	Checksum	
Structure	0xF1 0xD9	0x06 0xB0	1	See below	CK_1 CK_2	
Payload Contents:						
Byte Offset	Data Type	Scale	Name	Unit	Description	
0	U1		Log		0~31	
			sector		The max is 31,the min is 0	
0	U1		Txt read log		0: binary log mode	
					1: txt log mode	

#### Example:

Poll pvt data log of the sector 0

F1 D9 06 B0 01 00 00 B7 E1

MESSAGE	CFG-PVTLOG						
Description	Control the o	output and freq	uence of PVTLOG				
Туре	Polled/Set						
Comment	Make PVT log	g to be written	every setting seco	nd			
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	0x06 0xB0	3	See below	CK_1 CK_2		
Payload Contents:							
Byte Offset	Data Type	Scale	Name	Unit	Description		
0	U1		Flash mode		2:log erase		
					1: log written enable		
					0: log written disable		
2	U2		period	second	1-3600 (it's useful only		
					when flash mode=1)		
3	U1		PVT Repeat		0:repeat save log		
			flag		1:one save log		

#### **Example:**

Set to enable the pvt written every 2 seconds:

F1 D9 06 B0 04 00 01 02 00 00 BD 22

Stop writing:

F1 D9 06 B0 04 00 00 00 00 00 BA 18

Erase flash for PVT log:

F1 D9 06 B0 04 00 02 01 00 00 BD 23

MESSAGE	CFG-PVTLOG						
Description	The PVT log in	The PVT log in flash					
Туре	Polled	Polled					
Comment	Set the consta	Set the constant stationary LLA position					
Message	Header	ID	Length (Bytes)	Payload	Checksum		



Structure	0xF1 0xD9	0x06 0xB0	32*32	See below	CK_1 CK_2					
Payload Contents	Payload Contents:									
Byte Offset	Data Type	Scale	Name	Unit	Description					
0	U2+N		month		UTC month					
2	U2+N		date		UTC date					
4	U2+N		hour		UTC hour					
6	U2+N		minute		UTC minute					
8	U4+N	10	second		UTC second					
12	U4+N		year		UTC year					
16	float+N		lat	deg	Latitude					
20	float+N		lon	deg	Longitude					
24	float+N		altmsl	m	Altitude above mean sea					
					level					
28	float+N		gspd	m/s	Ground speed (2-D)					

#### Example:

#### Get the pvt log:

F1 D9 06 B0 00 04 05 00 04 00 06 00 1E 00 08 02 00 00 E2 07 00 00 75 DA 1F 42 64 A2 E8 42 BA 07 CF 42 CD CE 11 3C 05 00 04 00 06 00 1E 00 CC 01 00 00 E2 07 00 00 75 DA 1F 42 64 A2 E8 42 FA 8C CE 42 B0 1F 97 3C 05 00 04 00 06 00 1E 00 90 01 00 00 E2 07 00 00 76 DA 1F 42 64 A2 E8 42 E3 21 CE 42 B8 E7 0F 3C 05 00 04 00 06 00 1E 00 54 01 00 00 E2 07 00 00 76 DA 1F 42 64 A2 E8 42 67 E2 CD 42 78 73 56 3C 05 00 04 00 06 00 1E 00 18 01 00 00 E2 07 00 00 75 DA 1F 42 64 A2 E8 42 B4 D6 CD 42 ED B9 F9 3B 05 00 04 00 06 00 1E 00 DC 00 00 00 E2 07 00 00 75 DA 1F 42 65 A2 E8 42 FB D9 CD 42 79 C7 17 3B 05 00 04 00 06 00 1E 00 A0 00 00 00 E2 07 00 14 D0



# 5.5 Monitor Receiver Status (MON)

#### **5.5.1** MON-VER

MESSAGE	MON-VER							
Description	Software/Hard	Software/Hardware version						
Туре	Poll	Poll						
Comment	Poll software/	Poll software/hardware version						
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0xF1 0xD9						
No Payload								

#### **Example:**

Poll software/hardware version

F1 D9 0A 04 00 00 0E 34

MESSAGE	MON-VER						
Description	Software/Hard	dware version					
Туре	Polled						
Comment	-						
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	0x0A 0x04	32	See below	CK_1 CK_2		
Payload Contents:							
Byte Offset	Data Type	Scale	Name	Unit	Description		
0	S1[16]		swVersion		Software version string		
16	S1[16]		hwVersion		Hardware version string		



## 5.5.2 MON-INFO

MESSAGE	MON-INFO	MON-INFO						
Description	Info configura	Info configuration						
Туре	Poll	Poll						
Comment	Poll receiver	pecial informa	tion					
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0xF1 0xD9						
No Payload								

## Example:

Poll receiver special information

F1 D9 0A 05 00 00 0F 37

MESSAGE	MON-INFO						
Description	Info configurat	ion					
Туре	Polled/Set						
Comment	Output/Set red	ceiver special i	nformation				
Message	Header	ID	Length (Bytes)	Payload	Checksum		
Structure	0xF1 0xD9	0x0A 0x05	N	See below	CK_1 CK_2		
Payload Contents:							
Byte Offset	Data Type	Scale	Name	Unit	Description		
Start of repeated block							
n	U1		info		Contents, n>=0 n<=16		

#### **Example:**

Set receiver special information to "Hello"

F1 D9 0A 05 05 00 48 65 6C 6C 6F 08 2C



#### 5.5.3 MON-TRKCHAN

MESSAGE	MON-TRKCHA	MON-TRKCHAN						
Description	Get the TRACE	CHANNEL STA	ATUS					
Туре	Poll							
Comment	-							
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0x0A 0x08	8	See below	CK_1 CK_2			
Payload Contents:								
Byte Offset	Data Type	Scale	Name	Unit	Description			
0	U2	-	nmeaprn	-	The prn number of the			
					satellite			
2	U2	U2 CN0 The test CN0 of the						
					satellite			
4	U4		waitime	second	Single channel test time			

#### **Example:**

Set the parameter for Track

For example: setting waiting 30 second to test SATID 3 with cn0 36

F1 D9 0A 08 08 00 03 00 24 00 1E 00 00 00 5F 88

MESSAGE	MON-TRKCHAN							
Description	TEST STATUS							
Туре	Polled							
Comment	Get the track of	channel test st	atus					
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0x0A 0x08	1	See below	CK_1 CK_2			
Payload Contents:								
Byte Offset	Data Type	Scale	Name	Unit	Description			
0	U1	L - Status of TRK - 0: abnormal						
			channel		1: normal			

#### Example:

Output no error

F1 D9 0A 08 01 00 01 14 56

#### 5.5.4 MON-RCVCLK

MESSAGE	MON- RCVCLK							
Description	Get the curre	Get the current receiver clock measured by the specific satellite						
Туре	Poll	Poll						
Comment	-	-						
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0x0A 0x09	2	See below	CK_1 CK_2			
Payload Contents:								
Byte Offset	Data Type	Scale	Name	Unit	Description			



0	U2	-	nmeaprn	-	The prn number of the
					satellite

#### Example:

Poll the clock of PRN = 5

For example: Poll the clock of PRN =5

F1 D9 0A 09 02 00 05 00 1A 7B

MESSAGE	MON- RCVCLK	MON- RCVCLK						
Description	Receiver clock	value						
Туре	Polled							
Comment	Set the configu	uration (baudr	ate) of communic	ation port				
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0x0A 0x09	4	See below	CK_1 CK_2			
Payload Contents:								
Byte Offset	Data Type	Scale	Name	Unit	Description			
0	U4	4 - clkfreq - Receiver true clock						
					frequency			

#### **Example:**

Return the current receiver clock measured by the given satellite  ${\bf 5}$ 

F1 D9 0A 09 04 00 AE BA 8C 01 0C A6



#### **5.5.5** MON-CWI

MESSAGE	MON- CWI	MON- CWI						
Description	CWI check	CWI check						
Туре	Poll	Poll						
Comment	Poll cwi peak	Poll cwi peak frequency						
Message	Header	ID	Length (Bytes)	Payload	Checksum			
Structure	0xF1 0xD9	0xF1 0xD9						
Payload Contents:								

#### Example:

F1 D9 0A 0A 00 00 14 46

MESSAGE	MON- CWI	MON- CWI						
Description	CWI check							
Туре	Polled							
Comment	Output CWI c	heck result						
Message	Header	Header ID Length (Bytes) Payload Checksum						
Structure	0xF1 0xD9	0x0A 0x0A	8	See below	CK_1 CK_2			
Payload Contents:								
Byte Offset	Data Type	Scale	Name	Unit	Description			
0	S4		Frequency	Hz	Frequency offset from			
			offset		1575.42MHz			
4	S4		Peak value		Measured peak value at			
					peak frequency			

#### **Example:**

Offset 100Hz, peak value 70000

F1 D9 0A 0A 08 00 64 00 00 00 70 11 01 00 02 4B

# 5.6 Assistance GNSS Messages (AID)

## 5.6.1 AID-INI

MESSAGE	AID-INI	AID-INI				
Description	Initial Aiding D	nitial Aiding Data				
Туре	Poll	Poll				
Comment	Poll current GI	Poll current GNSS receiver data				
Message	Header	ID	Length (Bytes)	Payload	Checksum	
Structure	0xF1 0xD9	0xF1 0xD9				
No Payload						

#### **Example:**

Poll current GNSS receiver data

F1 D9 0B 01 00 00 0C 2F

MESSAGE	AID-INI
Description	Initial Aiding Data
Туре	Polled/Set



Comment	Get/Set refer	Get/Set reference for GNSS receiver				
Message	Header	ID	Length (Bytes)	Payload	Checksum	
Structure	0xF1 0xD9	0x0B 0x01	48	See below	CK_1 CK_2	
Payload Conten	its:					
Byte Offset	Data Type	Scale	Name	Unit	Description	
0	S4	1e-7	Lat	Degrees	Latitude	
4	S4	1e-7	Lon	degrees	Longitude	
8	S4		Alt	cm	Altitude	
12	U4		posAcc	cm	Position accuracy (stddev)	
16	S2				Reserved	
18	U2		wn		Actual week number	
20	U4		tow	ms	Actual time of week	
24	S4		towNs	ns	Sub-millisecond part of	
					time of week	
28	U4		tAccMs	ms	Milliseconds part of time	
					accuracy	
32	U4		res1		Reserved	
36	S4		clkD	ns/s	Clock drift	
40	U4		res2		Reserved	
44	S4		res3		Reserved	



#### 5.6.2 AID-POS

MESSAGE	AID-POS	AID-POS				
Description	Initial Aiding D	Initial Aiding Data (position)				
Туре	Set					
Comment	Cynosure II, LL	A or ECEF cou	ld be selected			
Message	Header	ID	Length (Bytes)	Payload	Checksum	
Structure	0xF1 0xD9	0x0B 0x10	17	See below	CK_1 CK_2	
Payload Contents:						
Byte Offset	Data Type	Scale	Name	Unit	Description	
0	U1	-	type	-	Position type	
					(1: LLA, 0: ECEF)	
LLA						
1	S4	10 <sup>-7</sup>	Lat	degree	Latitude	
5	S4	10 <sup>-7</sup>	Lon	degree	Longitude	
9	S4		Alt	cm	Altitude	
13	U4		Pos_acc	-	Position accuracy	
ECEF						
1	S4		ECEF.x	cm	Position x	
5	S4		ECEF.y	cm	Position y	
9	S4		ECEF.z	cm	Position z	
13	U4		Pos_acc	-	Position accuracy	

#### **Example:**

Inject position (0x0B10), lat = 22.5006727, lon = 114.2424747, alt = -882.55

Command: F1 D9 OB 10 11 00 01 87 54 69 0D AB 04 18 44 41 A7 FE FF 00 00 00 00 6E 4A



## 5.6.3 AID-TIME

MESSAGE	AID-TIME				
Description	Initial Aiding	Data (time)			
Туре	Set				
Comment	Cynosure II, 1	OW or UTC co	uld be selected		
Message	Header	ID	Length (Bytes)	Payload	Checksum
Structure	0xF1 0xD9	0x0B 0x11	20	See below	CK_1 CK_2
Payload Conten	ts:	'	'		
Byte Offset	Data Type	Scale	Name	Unit	Description
0	U1		Туре	-	Time type (1: TOW 0: UTC)
1	U1	_	-	_	Reserved
Tow:					
2	U1		Gnss_id	-	Source of time information 0: GPS time 1: BD time 2: GLONASS time
3	U2		Week_no	-	Week number
5	U4		Tow_s	-	Time of week
9	U4		Tow_ns	-	Nanoseconds time of week, from 0 to 999,999,999
13	U2		Tacc_s	-	Seconds part of time accuracy
15	U4		Tacc_ns	-	Sub-millisecond part of time accuracy
19	U1		Reserved	-	Reserved
UTC	<u>'</u>				
2	U1		Leap_sec		Number of leap seconds since 1980 (or <0 if unknown)
3	U2		Year		
5	U1		Month		
6	U1		Day		
7	U1		Hour		
8	U1		Minute		
9	U1		Second		
10	U4		Sec_ns		Nanoseconds, from 0 to 999,999,999
14	U2		Tacc_s		Seconds part of time accuracy
16	U4		Tacc_ns		Sub-millisecond part of time accuracy



#### Example:

Inject time (0x0B11), 2016-6-22 15:56:03.288393, tacc = 0.600796, leapsecond = 17.

Command: F1 D9 0B 11 14 00 00 00 11 E0 07 06 16 0F 38 03 28 87 30 11 00 00 60 6B CF 23 3B A3

#### 5.6.4 AID-PEPH-GPS

MESSAGE	AID-PEPH-GPS	AID-PEPH-GPS				
Description	Request GPS p	roprietary eph	nemeris data			
Туре	Poll					
Comment	Cynosure II/III					
Message	Header	ID	Length (Bytes)	Payload	Checksum	
Structure	0xF1 0xD9	0x0B 0x32	1	See below	CK_1 CK_2	
Payload Contents:						
Byte Offset	Data Type	Scale	Name	Unit	Description	
1	U1		svid		SV ID defined in each	
					satellite system ,if 0,	
					means all	

#### **Example:**

Poll ephemeris of all GPS satellites

F1 D9 0B 32 01 00 00 3E 02

MESSAGE	AID-PEPH-GF	AID-PEPH-GPS				
Description	Proprietary E	Proprietary Ephemeris Data for GPS				
Туре	Polled/Set					
Comment	Cynosure II/I	II				
Message	Header	ID	Length (Bytes)	Payload	Checksum	
Structure	0xF1 0xD9	0x0B 0x32	65	See below	CK_1 CK_2	
Payload Conten	ts:					
Byte Offset	Data Type	Scale	Name	Unit	Description	
0	U1		reserved			
1	U1		svid		SV ID defined in GPS	
					Satellite system	
2	U4	2^-19	sqrtA		Semi-major axis	
6	U4	2^-33	е		eccentricity	
10	S4	2^-31π	M0		Mean Anomaly (radian)	
14	S2	2^-43π	Delta_n		Mean motion correction	
					(radian/sec)	
16	U2	2^4	toe		Ref time of Ephemeris	
18	S4	2^-31π	i0		Inclination angle (radian)	
22	S2	2 <sup>^-43</sup> π	iDot		Inclination rate	
					(radian/sec)	
24	S4	2^-31π	Omega0		Longitude of ascending	
					node at weekly epoch	
					(radian)	



MESSAGE	AID-PEPH	I-GPS		
28	S4	2^-43π	OmegaDot	Right Ascension Rate (radian/sec)
32	S4	2^-31π	w	Argument of Perigee (radian)
36	S2	2^-29	Cuc	correction coefficients in ICD
38	S2	2^-29	Cus	correction coefficients in ICD
40	S2	2^5	Crc	correction coefficients in ICD
42	S2	2^5	Crs	correction coefficients in ICD
44	S2	2^29	Cic	correction coefficients in ICD
46	S2	2^-29	Cis	correction coefficients in ICD
48	U2	2^4	toc	Ref time of clock
50	S4	2^-31	af0	SV clock correction term 0
54	S2	2^-43	af1	SV clock correction term 1
56	S1	2^-55	af2	SV clock correction term 2
57	S1	2^-31	tGD	Group Delay
58	i2		weeknum	Ref. week number
60	U2		IODC	Issue of data, clock
62	U1		IODE	Issue of data Ephemeris
63	U1		ura	User range accuracy
64	U1		health	Usage status



#### 5.6.5 AID-PEPH-BDS

MESSAGE	AID-PEPH-BDS	AID-PEPH-BDS				
Description	Request BDS p	roprietary eph	nemeris data			
Туре	Poll					
Comment	Allows the del	ivery of BeiDo	u ephemeris assis	tance to a rec	eiver.	
Message	Header	ID	Length (Bytes)	Payload	Checksum	
Structure	0xF1 0xD9	0x0B 0x33	1	See below	CK_1 CK_2	
Payload Contents	:					
Byte Offset	Data Type	Scale	Name	Unit	Description	
1	U1		svid		SV ID defined in each	
					satellite system, if 0,	
					means all	

#### Example:

Poll ephemeris of all BD satellites

F1 D9 0B 33 01 00 00 3B F1

MESSAGE	AID-PEPH-BD	AID-PEPH-BDS				
Description	Proprietary E	Proprietary Ephemeris Data for Beidou				
Туре	Polled/Set					
Comment	Allows the de	elivery of BeiDo	ou ephemeris assis	tance to a rec	eiver.	
Message	Header	ID	Length (Bytes)	Payload	Checksum	
Structure	0xF1 0xD9	0x0B 0x33	92	See below	CK_1 CK_2	
Payload Conten	ts:					
Byte Offset	Data Type	Scale	Name	Unit	Description	
0	U1		reserved			
1	U1		svid		SV ID defined in each BDS system	
2	U4	2^-19	sqrtA		Semi-major axis	
6	U4	2^-33	е		eccentricity	
10	S4	2^-31π	M0		Mean Anomaly (radian)	
14	S2	2^-43π	Delta_n		Mean motion correction	
					(radian/sec)	
16	U4	2^3	toe		Ref time of Ephemeris	
20	S4	2^-31π	iO		Inclination angle (radian)	
24	S2	2^-43π	iDot		Inclination rate	
					(radian/sec)	
26	S4	2^-31π	Omega0		Longitude of ascending	
					node at weekly epoch	
					(radian)	
30	S4	2^-43π	OmegaDot		Right Ascension Rate	
					(radian/sec)	
34	S4	2^-31π	w		Argument of Perigee	
					(radian)	



MESSAGE	AID-PEPH	I-BDS		
38	S4	2^-31	Cuc	correction coefficients in
42	S4	2^-31	Cus	correction coefficients in
46	S4	2^-6	Crc	correction coefficients in ICD
50	S4	2^-6	Crs	correction coefficients in ICD
54	S4	2^-31	Cic	correction coefficients in ICD
58	S4	2^-31	Cis	correction coefficients in ICD
62	U4	2^3	toc	Ref time of clock
66	S4	2^-33	af0	SV clock correction term 0
70	S4	2^-50	af1	SV clock correction term 1
74	S2	2^-66	af2	SV clock correction term 2
76	S2	0.1e <sup>-9</sup>	tGD	Group Delay
78	S1	2^-30	Alpha0	coef. for the amplitude of the vertical delay
79	S1	2^-27	Alpha1	coef. for the amplitude of the vertical delay
80	S1	2^-24	Alpha2	coef. for the amplitude of the vertical delay
81	S1	2^-24	Alpha3	coef. for the amplitude of the vertical delay
82	S1	2^11	Beta0	coef. for the period of the model
83	S1	2^14	Beta1	coef. for the period of the model
84	S1	2^16	Beta2	coef. for the period of the model
85	S1	2^16	Beta3	coef. for the period of the model
86	U2		weeknum	Ref. week number
88	U1		IODC	Issue of data, clock
89	U1		IODE	Issue of data, Ephemeris
90	U1		ura	User range Accuracy
91	U1		health	Usage status



## **6** RTCM PROTOCOL

## **6.1** Background Information

HD9300/HD9400 series support differential GNSS data according to RTCM version 3 .The messages of RTCM are described as the following table.

# **6.2** Support messages

HD9300/HD9400 series supports following RTCM3.3 input messages:

Message Type	Description
1005	Stationary RTK Reference Station ARP
1006	Stationary RTK Reference Station ARP with Antenna Height
1074	GPS MSM4
1075	GPS MSM5
1077	GPS MSM7
1084	GLO MSM4
1085	GLO MSM5
1087	GLO MSM7
1094	GAL MSM4
1095	GAL MSM5
1097	GAL MSM7
1114	QZS MSM4
1115	QZS MSM5
1117	QZS MSM7
1124	BDS MSM4
1125	BDS MSM5
1127	BDS MSM7
4065 sub-id 0	Reference station PVT (ALLYSTAR Proprietary RTCM Message)

HD9300/HD9400 series supports following RTCM3.3 output messages:

Message Type	Group ID/ Sub Id	Description		
1005	0xF8; 0x05	Stationary RTK Reference Sation ARP		
1019	0xF8; 0x13	GPS Ephemerides		
1020	0xF8; 0x14	GLO Ephemerides		
1042	0xF8; 0x2A	BDS Ephemerides		
1044	0xF8; 0x2C	QZS Ephemerides		
1046	0xF8; 0x2D	GAL /NAV Ephemerides		
1074	TBD	GPS MSM4		
1075	TBD	GPS MSM5		
1077	0xF8; 0x4D	GPS MSM7		
1084	TBD	GLO MSM4		



1085	TBD	GLO MSM5
1087	0xF8; 0x57	GLO MSM7
1094	TBD	GAL MSM4
1095	TBD	GAL MSM5
1097	0xF8; 0x61	GAL MSM7
1114	TBD	QZS MSM4
1115	TBD	QZS MSM5
1117	0xF8; 0x75	QZS MSM7
1124	TBD	BDS MSM4
1125	TBD	BDS MSM5
1127	0xF8; 0x7F	BDS MSM7
4065 sub-id 0	0xF8; 0x41	Reference station PVT (ALLYSTAR Proprietary RTCM Message)

## **6.3** ALLYSTAR proprietary RTCM messages

Message Type	Organization	Contact
4065	ALLYSTAR Technology CO. Ltd	http://www.allystar.com

Approved by RTCM SPECIAL COMMITTEE in 2017

#### 6.3.1 Sub-id

There are different available sub-ids of the RTCM message type 4065. The table below shows the available RTCM 4065 sub-ids.

Message Type	Sub-id Number	Description Note	
OXFE1 (4065)	0x0	Reference Station PVT	For moving base application
	0x1	Navigation PVT Solution	
	0x2	Attitude Determination	By multi-antenna
	0xA	Raw sensor measurements	TBD

The reference message (type 4065, sub-id 0) must be used in combination with MSM7 observation messages.

## 6.4 Configuration

The RTCM version 3 protocol can be disabled/enabled and set update rate on communication interfaces by CFG-MSG.

## REVISION HISTORY

Revision	Date	Author	Status / Comments
V1.0	2017-04-24	LH	Initial release
V1.1	2017-05-26	LH	Added the TXT sentence.
V1.2	2017-09-22	LH	Added MON-RCVCLK, EPH-SAVE, CFG-FWUP, NAV-TIME, GPS-EPH, BD-EPH, MON-RCVCLK command, removed POSTIME command, modified the PPS command. Added the description for GLONASS PRN.
V1.3	2017-10-20	Daisy	Format update
V1.4	2018-01-25	Daisy	Add DR command messages
V1.5	2018-01-30	Daisy	Delete NAV-AUTO, NAV-AHTS, CFG-EPHSAVE, MON-BIT, MON-TRK, MON-RCVCLK and BOOT2 ROM BINARY MESSAGES.
V1.6	2018-04-08	Daisy	Add the command CFG-NUMSV, CFG-SURVEY, CFG-FIXEDLLA, CFG-FIXEDECEF; Add the command CFG-ANTIJAM,RAW-DUMPRAW,RXM-GALSAR
V1.7	2018-05-04	Daisy	Delete DR command messages to a basic version.
V1.8	2018-07-25	Xiaoli	Modified the CFG-SBAS, GSV and GSA,CFG-ANTIJAM; Add the cmd MON-INFOADD, MON-BIT, MON-TRK, MON-RCVCLK
V1.9	2018-11-07	Xiaoli	Add CFG-BDGEO, CFG-CARRSMOOTH; Modified CFG-NAVSAT,GSV and GSA for 8040
V1.9.1	2018-11-12	Xiaoli	Modified the cmd demo of CFG-NMEAVER and CFG-PWRCTL
V1.9.2	2019-01-29	Xiaoli	Add NMEA for IRNSS, update the CFT-NMEAVER for IRNSS
V1.9.3	2019-06-27	Charles	Add RTK protocol;Modified descriptive error
V2.2	2019-07-11	xiaoli	Update the GSA and GSV as 8040 dual frequence
V2.3	2019-08-01	Xiaoli	Add NAV-TIMEUTC,CFG-PWRCTL2,MON-TRKCHAN; modified GNTXT and CFG-NAK



- www.allystar.com
- info.gnss@allystar.com
- 5F, Building No.4, Winlead Intelligent Park, No.3, FaDa road (middle), Bantian Subdistrict, LongGang District, Shenzhen City, Guangdong Province, China.

