



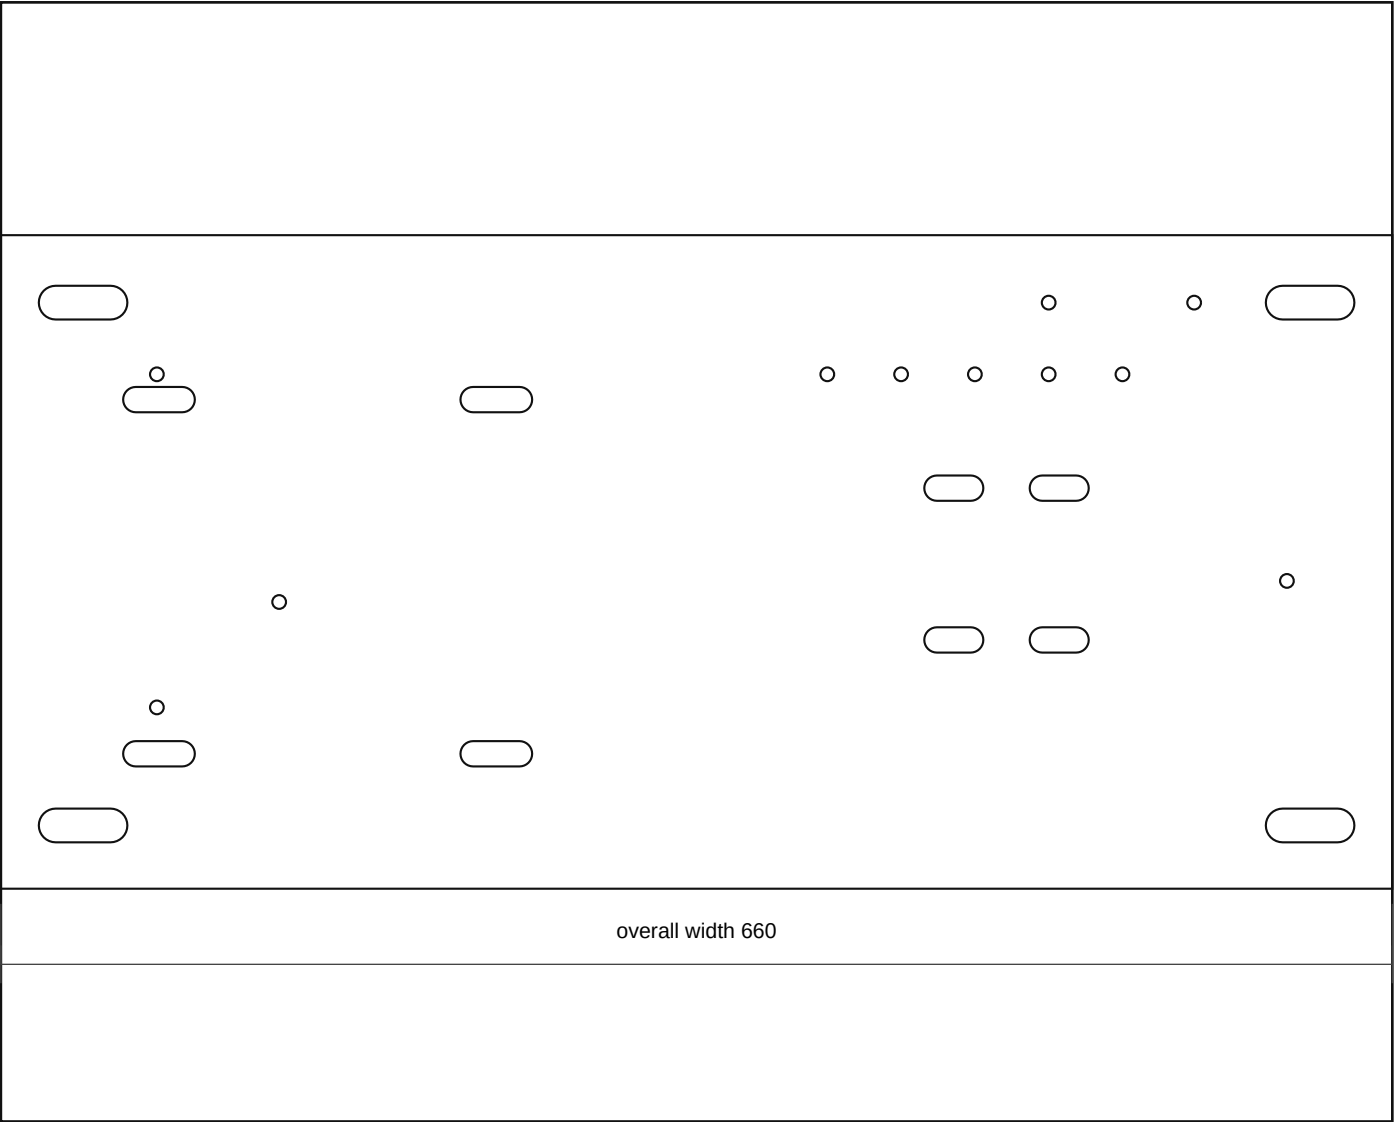

Fabrication Notes

- Raised front/radiator-side access ladder: 660 x 310 x 3.0 mm mild steel. This wider Rev F ladder moves the covered relay box fully outside the standard battery envelope and keeps its cover openable with the battery installed.
- The Relay Rev C folded aluminium tray mounts on the outboard/access edge of this ladder, with the covered relay box face reachable without lifting the battery and the flat plastic rear guard/underlay between the relay box and the metal tray.
- Reserve three separate relay wire-exit clusters with modelled offsets and sizes: upper red harness, side braided loom boot, and lower auxiliary/secondary loom relief.
- MIDI Rev C stays as the known open 190 x 150 plate/subplate on a separated top/front shelf zone, with its leading edge aligned to the battery leading edge datum, one common feed entering one side, and five heavy output cables leaving the opposite side through a seated comb/gland strip.
- One MIDI output position must have an enlarged double-wire pass-through because one fuse output leaves with two wires; the comb, saddles, and backplate must be attached to the shelf, not floating.
- The folded cutoff base/guard stays top/front accessible, with its leading edge aligned to the battery leading edge datum. Model the cutoff output as a stacked ring-lug splitter feeding both the covered relay feed and the MIDI common feed directly.
- Keep at least an 80 mm cable fanout/gutter around all relay exits, cutoff lugs, MIDI common feed, and five MIDI output lugs. Do not cut final holes until the battery-cavity map proves radiator, hose, steering,

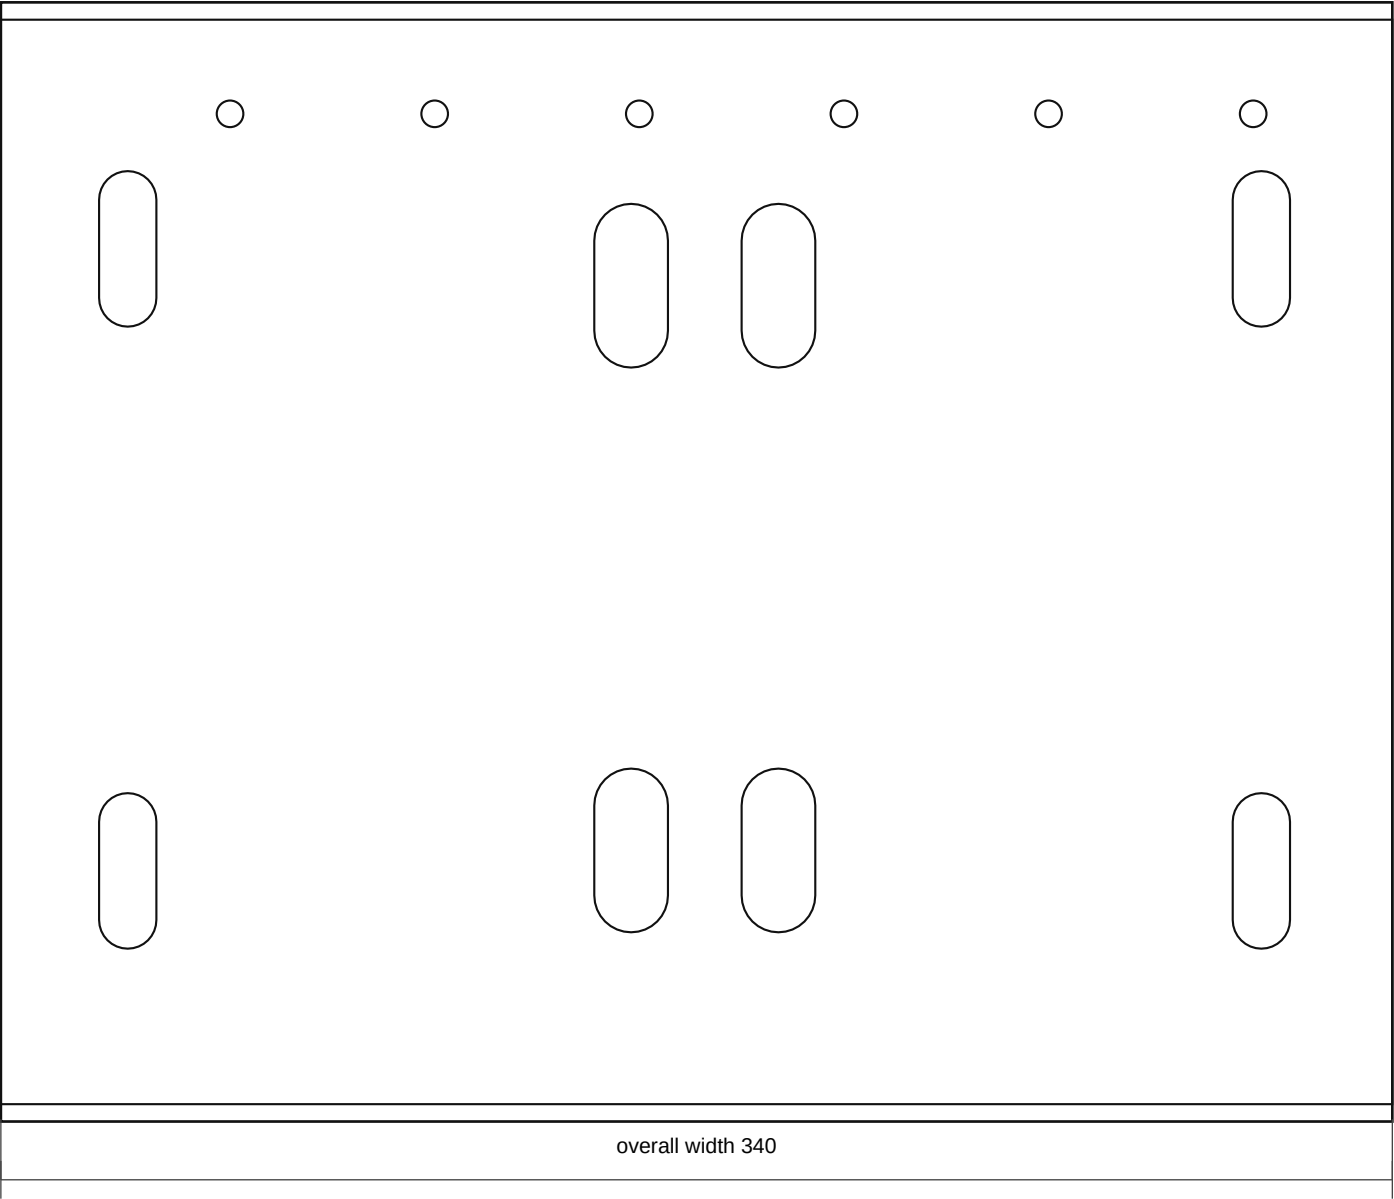


Fabrication Notes

- Compact battery stand top tray: 340 x 265 x 3.0 mm mild steel tray/deck around a standard N70/27-class battery envelope up to 318 x 180 x 230 mm with service allowance.
- The battery must be clamped by a removable top crossbar and J-rods/vertical rods outside the terminal path. Remove the hold-down before lifting the battery vertically out of the tray.
- Add low end/side stops or a formed edge so the battery cannot slide, but keep them low enough that the case can still be lifted out when the hold-down is removed.
- Electrical equipment uses the raised front/radiator-side access ladder: Relay Rev C on the outboard/access edge, MIDI Rev C and cutoff on separated front/top shelf zones whose leading edges align to the battery leading edge, and direct feeds from cutoff to both relay and MIDI. Do not use tray skin or the engine-side gap as a large backplane.
- Final battery footprint, terminal side, clamp path, bonnet clearance, front-cavity clearance, and LHD steering-side clearance are vehicle-measurement holds.
- Add an acid-resistant battery mat after paint; do not allow battery case or terminals to touch live studs or sharp steel edges.
- No bends in this part.
- Truck-side pickup slots stay provisional until tray repair and site-fit.
- Confirm actual component hole positions against the parts in hand before final paint or powder.

battery_stand_compact_single_chassis_pickup_rev_b

Rev B | Units: mm | Site-fit fabrication sheet

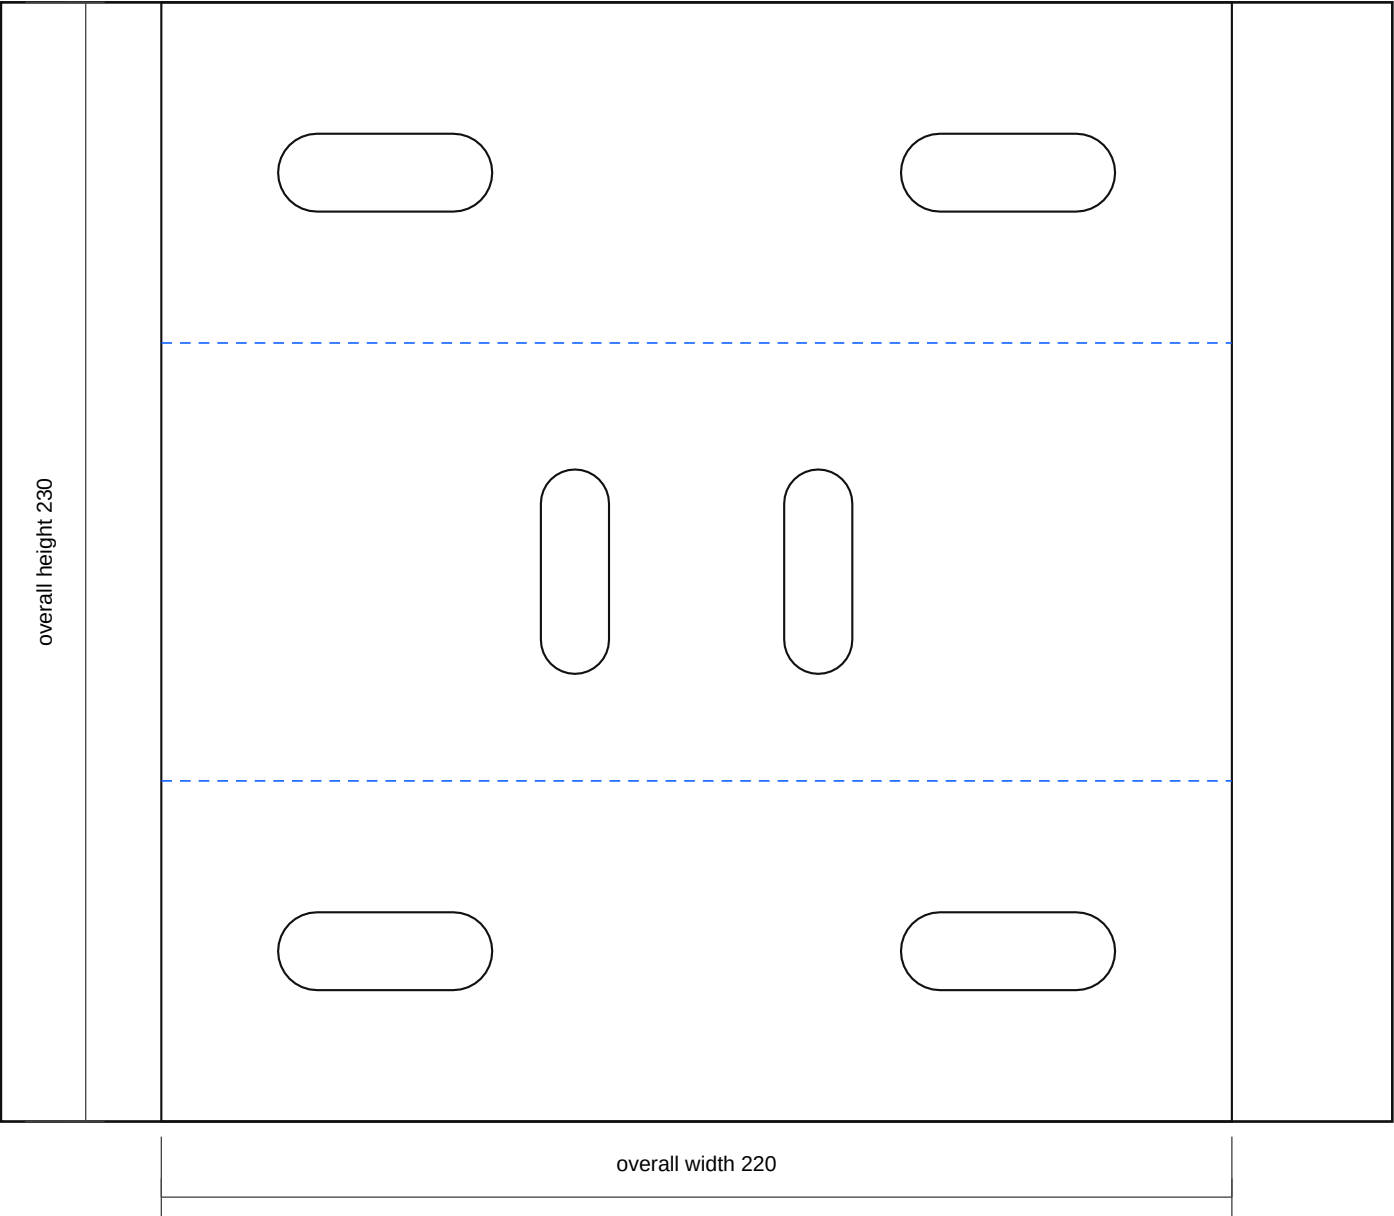

Fabrication Notes


- Compact single chassis saddle mount: nominal 220 x 230 x 4.0 mm mild steel flat pattern, formed over the one known chassis rail location.
- Bend blue lines 90 degrees downward to make a saddle: 70 mm near leg, measured chassis top cap nominal 90 mm, 70 mm far leg. Adjust the cap width after measuring the rail.
- Through-bolt both saddle legs and the chassis rail as one pickup location. Final slot pitch, bolt size, and crush-tube need are site-fit only.
- Top-cap slots take the upright/service-rail bridge. Do not add an independent second chassis fixing unless dry-fit proves the single-pickup route is not stiff enough.
- Deburr, radius leg bottoms, prime, isolate from fretting with an anti-chafe pad where appropriate, and protect before final assembly.
- Bend all blue dashed lines to 90 degrees.
- Truck-side pickup slots stay provisional until tray repair and site-fit.
- Confirm actual component hole positions against the parts in hand before final paint or powder.

Output Files

- DXF: battery_stand_compact_single_chassis_pickup_rev_b.dxf
- SVG: battery_stand_compact_single_chassis_pickup_rev_b.svg

battery_stand_compact_single_mount_upright_rev_b

Rev B | Units: mm | Site-fit fabrication sheet

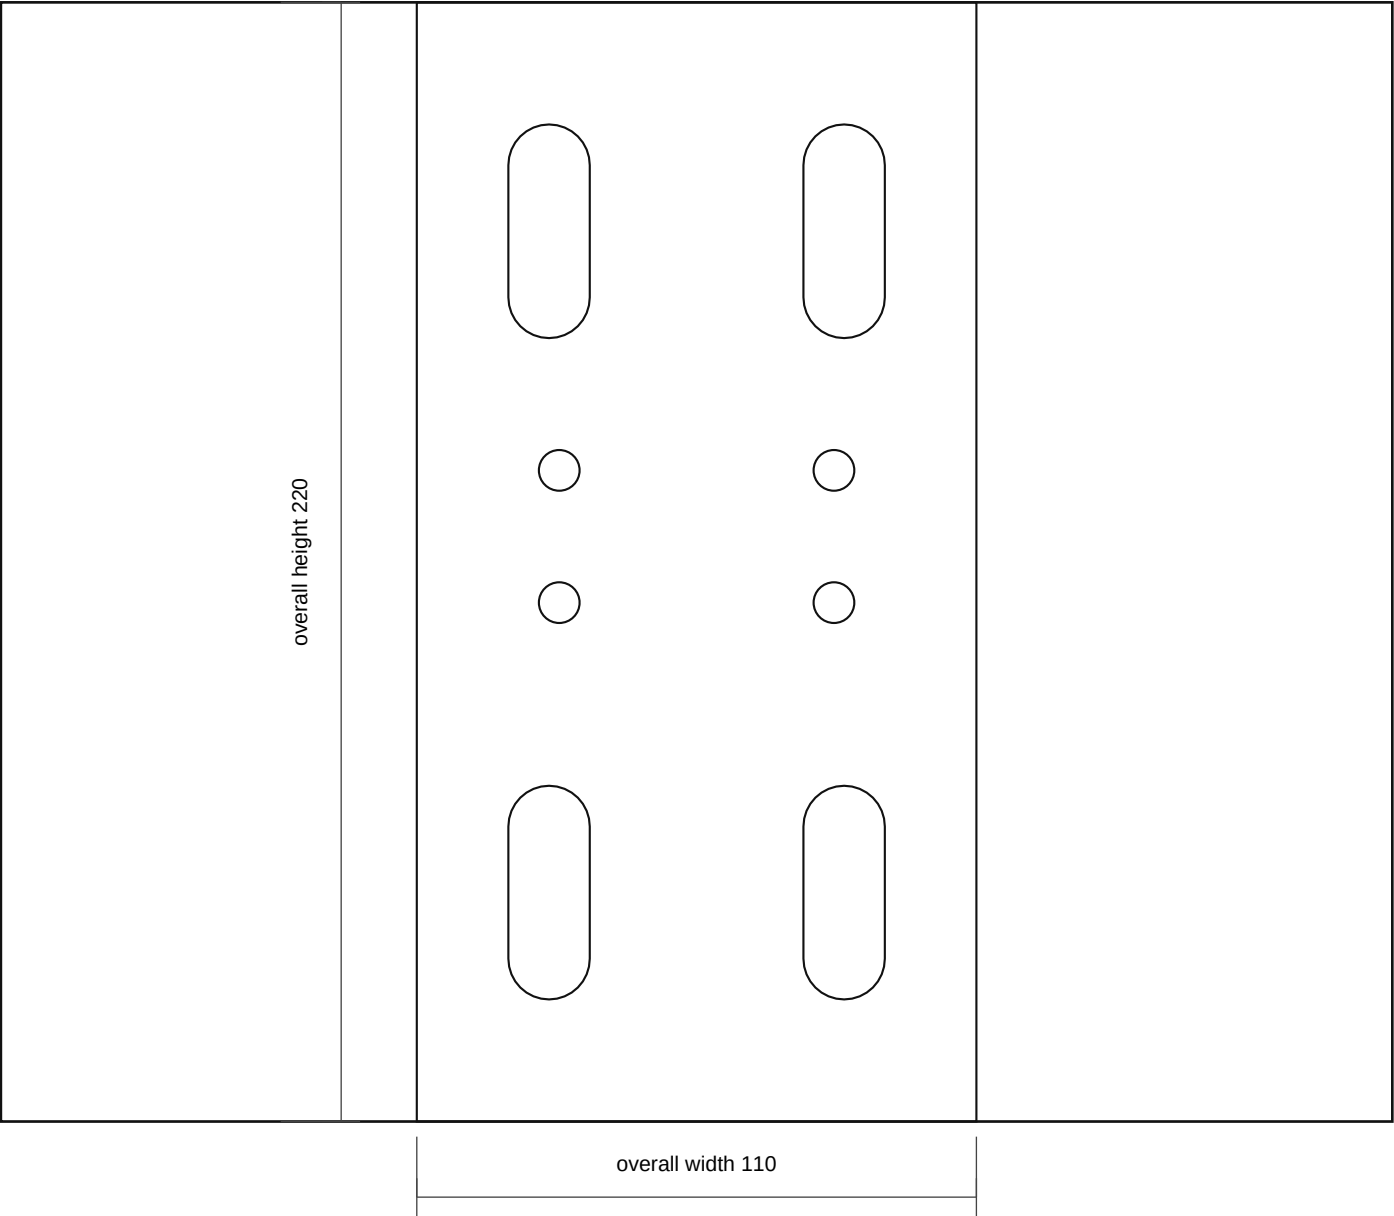

Fabrication Notes


- Compact single-mount upright bridge side plate: 110 x 220 x 4.0 mm mild steel between the one chassis pickup and compact tray.
- Make two mirrored side plates around the single pickup bridge if the mock-up needs side-to-side stiffness. This is not a second chassis fixing location.
- Lower holes align to the formed chassis saddle top cap; upper holes align to the compact tray/front rail saddle.
- No bends in this part.
- Truck-side pickup slots stay provisional until tray repair and site-fit.
- Confirm actual component hole positions against the parts in hand before final paint or powder.

Output Files

- DXF: battery_stand_compact_single_mount_upright_rev_b.dxf
- SVG: battery_stand_compact_single_mount_upright_rev_b.svg

battery_stand_compact_hold_down_crossbar_rev_b

Rev B | Units: mm | Site-fit fabrication sheet

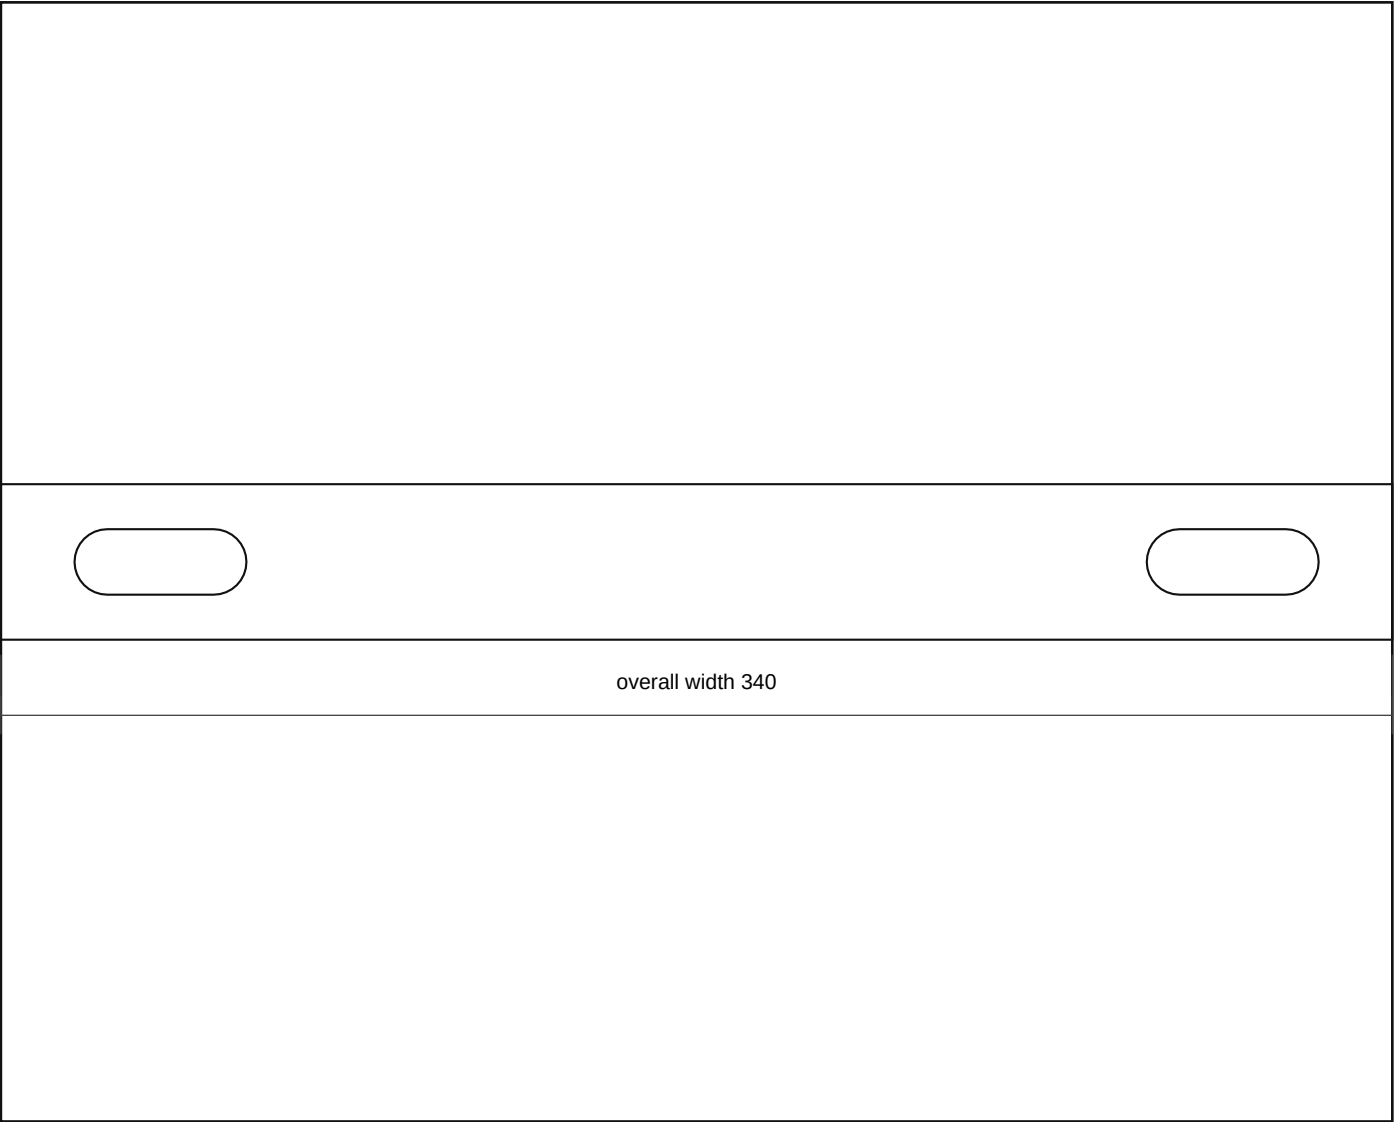

Fabrication Notes


- Compact battery hold-down crossbar: 340 x 38 x 3.0 mm mild steel or stainless. Length and slots cover the standard N70/27-class battery envelope but remain template values until the actual battery is measured.
- Use J-bolts or vertical rods that cannot touch battery terminals. Add insulated caps where needed.
- The crossbar is a service-removable restraint; the battery must lift out vertically after the crossbar and rods are removed.
- Do not over-tighten against a plastic battery case; retain the battery without distorting it.
- No bends in this part.
- Truck-side pickup slots stay provisional until tray repair and site-fit.
- Confirm actual component hole positions against the parts in hand before final paint or powder.

Output Files

- DXF: battery_stand_compact_hold_down_crossbar_rev_b.dxf
- SVG: battery_stand_compact_hold_down_crossbar_rev_b.svg

battery_power_compact_cutoff_tab_rev_b

Rev B | Units: mm | Site-fit fabrication sheet

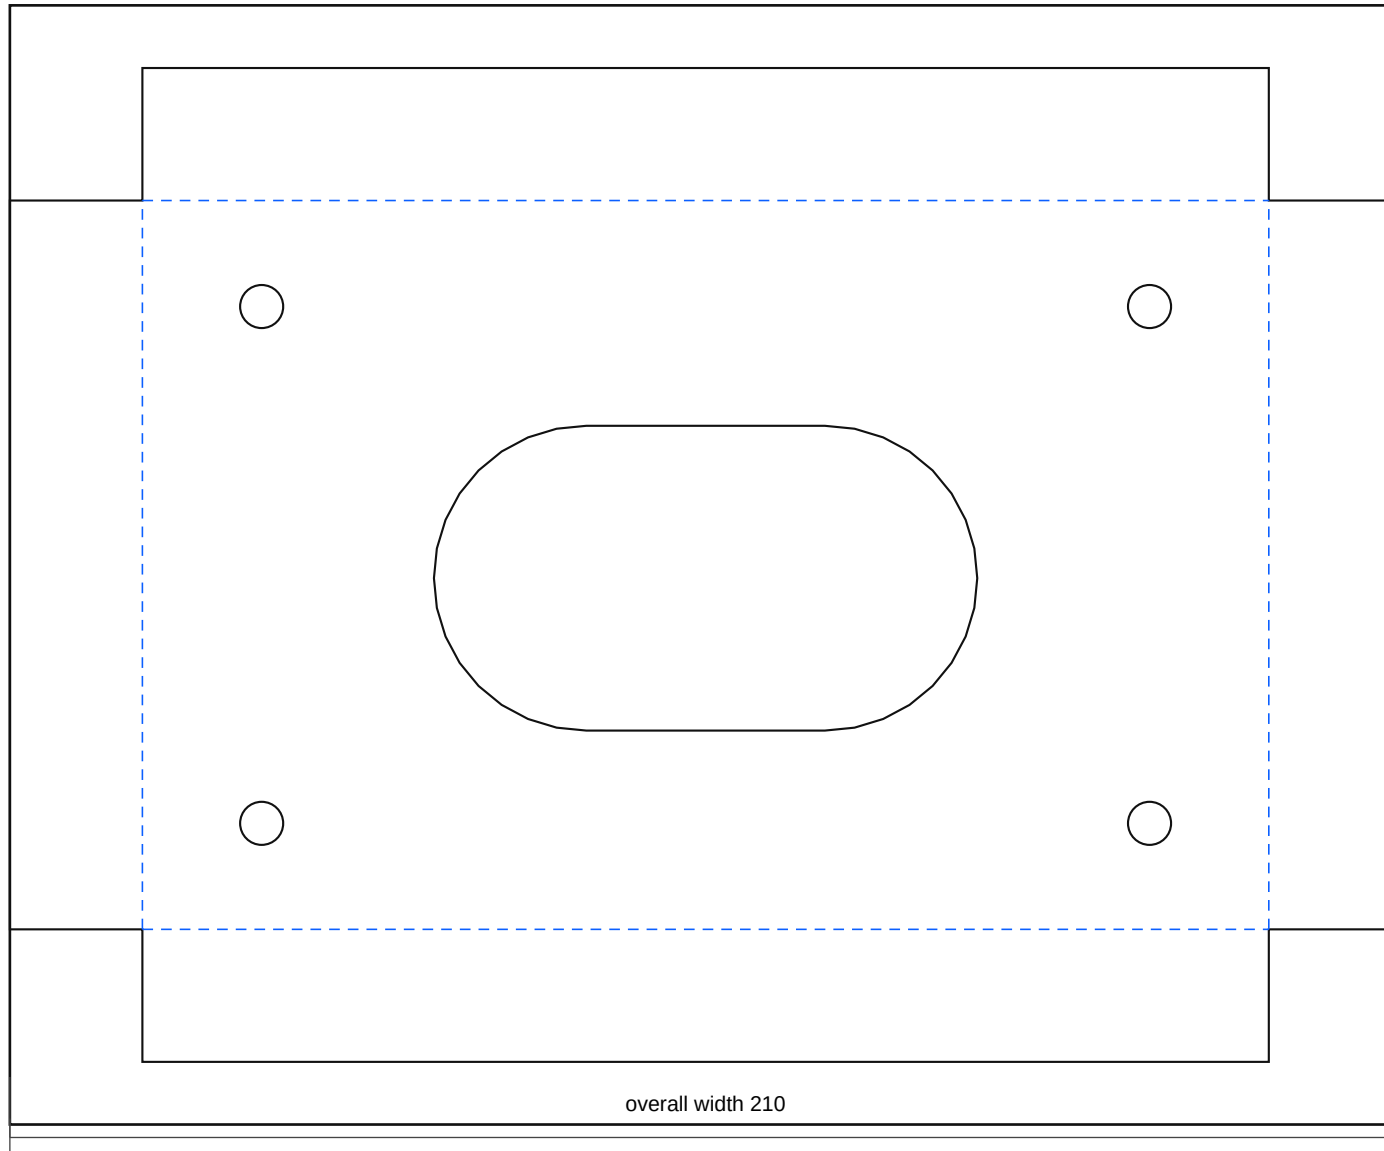

Fabrication Notes

- Folded cutoff aluminium base/guard: 210 x 150 flat pattern, 170 x 110 finished face, 20 mm guard lips bent upward toward the 100A breaker/terminal side.
- Use 3.0 mm 5052-H32 aluminium unless dry-fit proves the cutoff must bolt to a steel structural tab instead.
- Open final breaker mounting holes only after the actual 100A breaker body, reset lever sweep, terminal studs, and cable-lug depth are measured.
- Guard lips must not trap water, block emergency access/reset operation, or foul the breaker body, cable lugs, bonnet, or battery terminal service envelope.
- Bend all blue dashed lines to 90 degrees.
- Truck-side pickup slots stay provisional until tray repair and site-fit.
- Confirm actual component hole positions against the parts in hand before final paint or powder.

Output Files

- DXF: battery_power_compact_cutoff_tab_rev_b.dxf
- SVG: battery_power_compact_cutoff_tab_rev_b.svg