


RF4463PRO Wireless Transceiver Module

1. Description

RF4463PRO adopts Silicon Lab EzradioPro2 RF transceiver Si4463, which is a highly integrated wireless ISM band transceiver chip. The features of high sensitivity (-121 dBm), +20 dBm output power, low current consumption, 10PPM crystal, and good RF matching circuit make this module work well in hot/cold environment with reliable communication and long distance..

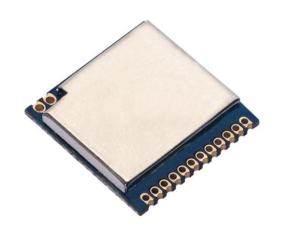

2. Features

- Frequency Range: 315/433/470/868/915
 (Customizable 142-1050 MHZ)
- Sensitivity up to -126 dBm
- Maximum output power: 20dBm
- 10mA@receiver mode
- Data transfer rate: 0.1-1000 kbps
- FSK, GFSK and OOK Modulation mode
- 1.8-3.6 V Power supply
- Ultra-low consumption shutdown mode
- Digital received signal strength indicator (RSSI)
- Timed wake-up function
- Excellent antenna match circuit and bi-direction communication

- Configurable packet structure
- Preamble detection
- 64/128byte transmit and receive data register (FIFO
- Low-battery detection
- Temperature sensor and 8-bit analog-to-digital converters
- Operating Temperature Range: -40 ~ +85 °C
- Integrated voltage regulator
- Frequency hopping
- Power-on reset function
- Built-in crystal adjustment function

3. Application

- Remote control
- Remote meter reading
- Home security alarm and remote keyless entry
- industrial control

- home automation remote sensing
- individual data records
- toys control
- sensor network



www.nicerf.com

tire pressure monitoring

wireless PC peripherals

health monitoring


tag reading and writing

4. Electrical Specifications


Parameter	Min	Тур	Max	Unite	Condition		
Working condition							
Working voltage range	1.8	3.3	3.6	V			
Temperature voltage	-40		85	$^{\circ}\!$			
Current consumption							
Receiving current		13.5		mA	High performance mode		
Receiving current		10.7		mA	Low power mode		
Transmitting current		85		mA	@20dBm		
Sleep current		< 0.1		uA			
parameter							
Frequency range	403	433	463	MHZ	@433MHZ		
	838	868	898	MHZ	@868MHZ		
Modulation rate	0.123		1000	Kbps	FSK		
Output power range	-5		20	dBm			
Receiving sensitivity		-126		dBm	@data=500bps,Fdev=3kHZ		

5. Schematic



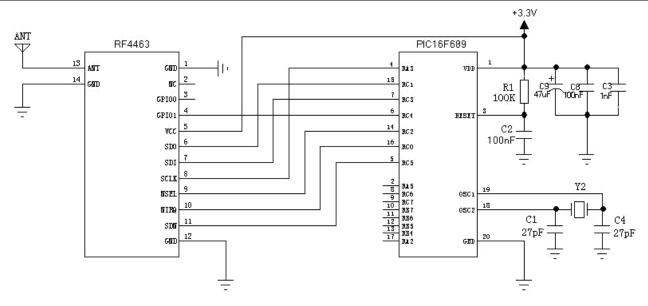

6. Pin Configuration

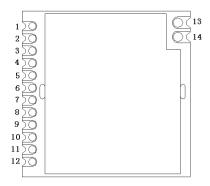


Pin NO.	Pin name	Description	
1	GND	power ground	
2	NC	NC	
3	GPIO0	GPIO0 of Si4463	
4	GPIO1	GPIO1 of Si4463	
5	VCC	Positive power supply 3.3V	
6	SDO	Serial data out for SPI interface.	
7	SDI	Serial data in for SPI interface	
8	SCLK	Serial data clock for SPI interface	
9	nSEL	Serial data selection for SPI interfaces.	
10	nIRQ	Interrupt output	
		Power down control.	
11	SDN	SDN = 1, power down	
		SDN = 0, normal working	
12	GND	power ground	
13	ANT	Connect with 50 ohm coaxial antenna	
14	GND	power ground	



The GPIO2, GPIO3 of the Si4463 is connected to the antenna switch on the module. The detailed method on how to use these two Port, please contact the sales engineer to take reference to the Demo Code

7. Machanism dimensions

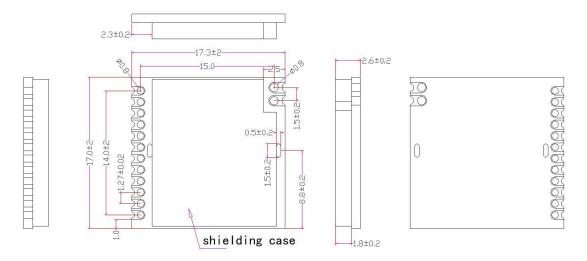

8. Products Ordering Information

RF4463PRO-433

Module Model

Frequency


For example: If the customer needs a patch module small crystal 433MHZ band module that

order model: RF4463PRO-433




Appendix:

The module is equipped with a standard DEMO board for customer to debug the program and test distance. It shows as below:

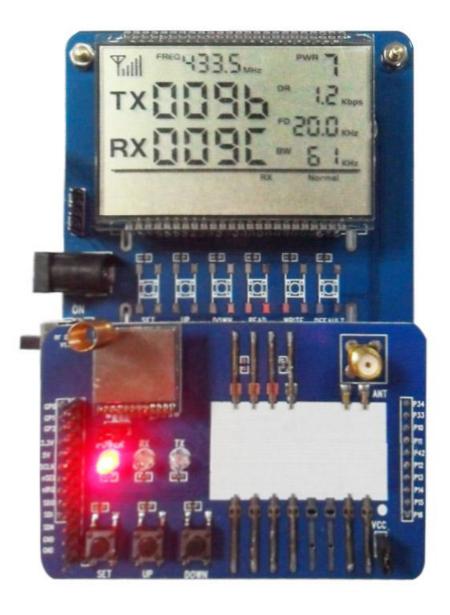



The LCD Full Segment is as below:

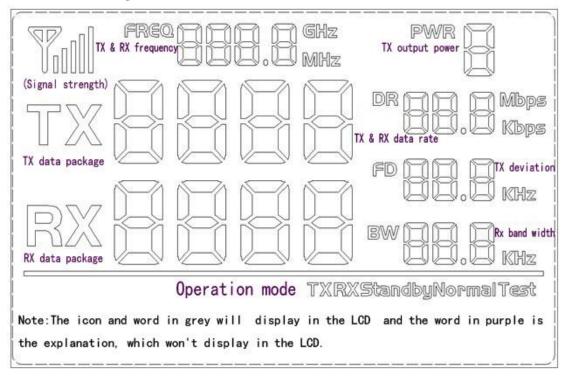

Users can set the parameters of the RF module such as frequency / transmitter power / transmission data rate / working mode through the buttons, and measure the wireless communication distance. Also, all the connection Pins of the module are extended to the demo board, user can use oscilloscope, multi-meter to monitor the operation of the RF module, which is very useful for software programming.

Working Mode


There are 5 working modes in the DEMO. They are: Master mode, Slave mode, Tx Test mode, Rx test mode, Standby mode, accordingly, they are displayed on the LCD as: Tx normal / Rx normal / Tx Test / Rx test / Standby. When one packet is transmitted, the Red LED will blink once, the number of Tx packets will increase; when one packet is received, the Blue LED will blink once, the number of Rx packets will increase.

- 1) Master Mode: Send 1 packet per second, and waiting for the acknowledge;
- 2) Slave Mode: Stay in Rx mode to wait for the data from the master, it will send back the acknowledged signal after received the data from the master.
- 3) Tx Test Mode: RF module continuously transmit signal;
- 4) Rx Test Mode: RF module is always in Rx mode;
- 5) Standby Mode: RF module is always in standby state.

Button Operation

1) [SET] Button

Press the [SET] button to enter setting mode if not in setting mode. In setting mode, press [SET] button to toggle between the set parameters: frequency /output power / data rate / working mode. The related LCD ICON will flash to indicate.

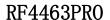



www.nicerf.com

2) [UP] Button

In setting mode, press the [UP] button to increase the value of flash icon.

3) [Down] Button

In setting mode, press the [Down] button to decrease the value of flash icon.

Note: The DEMO board has FLASH memory inside, all the setting parameters will be saved automatically and keep unchanged even power-off.