# INSTRUCTIONS FOR IT DEVELOPER Rapid Climate Impact Assessment Calculator


General Framework for Developing a Climate Impact Assessment Calculator	Tool 3
Set up RCIA Calculator Tool	5
Step 1. Infrastructure Hazard Assessment	7
Step 2. Assessing Infrastructure Exposure and Vulnerability	20
Step 3. Probabilistic Infrastructure Risk Index	27
Utility macros	29
SECURITY	29
Application and Database	33

# **General Framework for Developing a Climate Impact Assessment Calculator Tool**

This document explains the CT's architecture, and the macros executed step by step according to the <u>user manual</u> and the security of the Excel Workbooks.

The architecture of the "Climate Impact Assessment Calculator Tool" is as follows, where the front-end is the Excel Workbooks and its Worksheets and the back-end is the VBA macros executed by the worksheets' events triggered by pressing a button, changing the state of a combo box, opening the workbook, making available a worksheet, etc.

There are five stages, and each stage is made of a folder whose content is an Excel workbook.

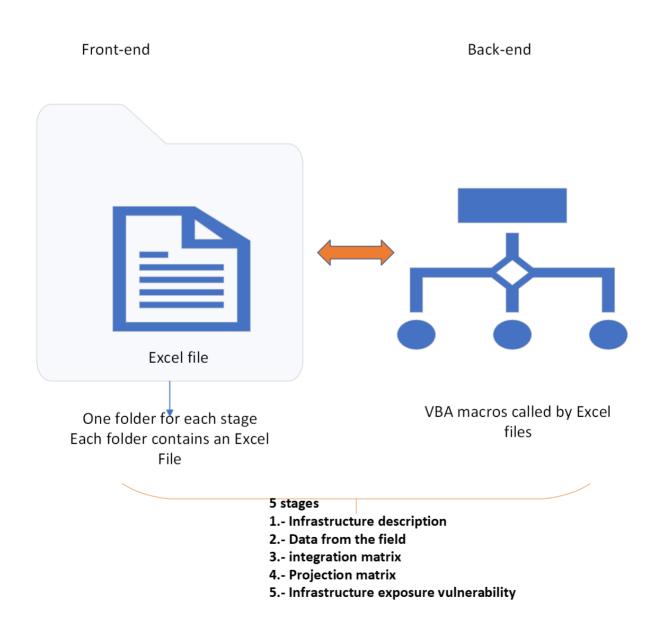

The stages have inputs and outputs. A flow of inputs and outputs can be seen as follows, where:

- 1. An application builds the 'database.xlsx" workbook, this is the **first input**
- 2. The user fills the "infrastructure description.xlsm" workbook with data describing the infrastructure to be built. This is the **second input**
- 3. The user selects in "infrastructure description.xlsm" workbook the upazilas where the infrastructure will be built, and the CT creates a tab for each selected upazila in the "Infrastructure description.xlsm" workbook. This is the **first output** and is known as "Form 2"
- 4. The user finishes the "infrastructure description.xlsm" workbook and the CT creates the "Data from the field.xlsm" workbook where the user fills with data from the field. This is the **third input.**
- 5. The user finishes the "Data from the field.xlsm" workbook and the CT creates the "Integration matrix.xlsm" workbook. This is the **second output**.
- 6. The user reviews the "Integration matrix.xlsm" workbook and finishes it, when doing the CT creates the "Projection matrix.xlsm" workbook with two tabs for each upazila and using as input the calculated values of "integration.xlsm" workbook and two matrixes named "Bangladesh Climate Analysis Data base SSP5.xlsx" and "Bangladesh Climate Analysis Data base SSP2.xlsx" which are the **fourth input**. The "Projection matrix.xlsm" is the **third output**.
- 7. The user selects the upazila in the "Projection matrix.xlsm" workbook for which he / she wants to make the assessment, and the CT creates a "Infrastructure exposure & vulnerability.xlsm" workbook for each upazila selected. This is the **fourth output**.
- 8. The "Infrastructure exposure & vulnerability.xlsm" for each upazila is the Assessing Infrastructure Exposure and Vulnerability, when it is filled by the user, values are generated in each cell as is explained in "The infrastructure Exposure and Vulnerability assessment" section of "RCIA-CT Nov.2024" document, and the set of values are the **fifth input** to calculate the "Risk Climate index SSP5" and the "Risk Climate index SSP2" which are generated by upazila and it is the CT's **fifth output** which is in "Risk Climate index" tab.





















# **Set up RCIA Calculator Tool**

- A. The Calculator Tool of the RCIA is designed to be primarily used by trained engineers at HQ level assigned to the project in combination or in consultation with engineers at local level (district or upazila). The training of the RCIA and CRT will be expanded to cover all engineers assigned in project development.
- B. The *Calculator Tool (CT)* will be delivered in a compressed file (.zip or .rar) that must be unzipped in a directory on your device. Users can request the compressed file or download the file from the Knowledge Management System.
- C. Once unzipped/downloaded, the contents of the CT will be visible in the following directory structure:
- Suggestion to name this is "RCIA Project Tool"
  - Data from the field
  - Database
    - Application
      - Administration
      - Backup
      - Downloads
      - Origin
  - Infrastructure description
  - Infrastructure exposure vulnerability
  - Integration matrix
  - Projection matrix
- D. The RCIA tool has been designed to run through a series of consecutive steps that must be followed according to the instructions. To complete each step, you will be asked to open an Excel file located in the indicated directory. The files to work with are:
  - Application. This contains a system for importing the DRIP data into a database held by the CT. The database already contains the upazila historic data of all districts. This document, section "Application and Database" explains how to use the application and how to complete the database with other upazila hazard level data.

- Data from the Field. This file contains the Excel file for recording the field data of the site where the infrastructure is to be built.
- Database. This file contains the data generated by the application, and it is the first data for the CT.
- o Infrastructure description. This file contains the Excel file describing the infrastructure to be built.
- Vulnerability and exposure of the infrastructure. This file contains the Excel file used to assess the exposure and the vulnerability of the infrastructure.
- The integration matrix. This file contains the Excel file that integrates the data from the CT database and the data collected in the field.
- Projection matrix. This file contains the Excel file that projects hazards over the years up to 2100.
- E. When you finish working on a file that corresponds to any step click the "Finish" button on the "Launch" tab, the system closes the current file and opens the next one to continue working on the next step.
- F. There are some macros that are invocated to protect the worksheet's data that must not be changed.
- G. There are hidden columns and cells in some worksheets that maintains, data as:
  - a. The type of infrastructure ("Launch" tab Z2), in all workbooks except "Exposure & vulnerability"
  - b. The project name, ("Launch" tab AA2) in all workbooks except "Exposure & vulnerability"
  - c. The password ("Launch" tab Z3) in all workbooks except the sheets of "Exposure & vulnerability" ("Commitment" tab Z2)
  - d. The list of upazilas ("Launch" tab Y column) only in "Infrastructure description" workbook. This list is always updated with the upazila names of "Database".
- H. There are hidden worksheets to implement the functionality of the stages.

# **Step 1. Infrastructure Hazard Assessment.**

The Objective of step 1 is to assess hydrometeorological and climatic hazards that may affect infrastructure.

The Workbook "Infrastructure description.xlsm" is the implementation of step 1. Its properties are:

- i. When opening the Workbook the macro named "Workbook\_Open()" is executed. It fills three invisible combo boxes to select division, district and upazila with the names of divisions, districts and upazila that comes from the database file ("database.xlsx"), All the data is filled without be filtered.
  - a. "Workbook Open()" is a "ThisWorkbook" macro
  - b. The three invisible combo boxes are "diviEx", "districtEx" and "upaEx"
  - c. To do its job, "Workbook\_Open()" uses other macros:
    - "GetParentFolder" to get the name of parent folder
    - "CheckOS" to get the operating system
    - "FindValueInArray" to properly fill the combo boxes
    - "SortArrayAtoZ" to alphabetically order the combo boxes's values
- ii. When "Workbook\_Open()" finishes of filling the three invisible combo boxes, it fills one of the visible combo boxes (div) with the divisions

#### **Starting the Evaluation Project**

The first visible worksheet is named "Launch" and allows its functionality though the macros specified in each step:


- i. A "New **Assessment Project**" button to initiate the creation of a project.
  - Macro: "Infrastructure description.xlsm'!Button24\_Click" in "Module 3", which gets a random number plus the today date to build the project ID
- ii. The system should automatically generate and assign an ID to each new assessment project inside cell F2 and today date in cell H2.
  - When the system generates the ID project.
  - o ID and date can be modified by the user.
  - o The button "New Assessment project" is hidden
  - o The button "Clear contents" is unhidden
- iii. The 'Clear content' button to clear the content and start again.
  - The macro used is "Infrastructure description.xlsm'!ButtonCl\_clik" in "Module 4"
- iv. There is a button named "Enable 'Assessment project'" to show the hidden button "New Assessment project".

 The macro called is "Infrastructure description.xlsm'!Button57\_Click" in "Module 3"

The following diagram shows stage "Starting the Evaluation Project" with its structure and macros

Diagram 1

#### **Starting the Evaluation Project**

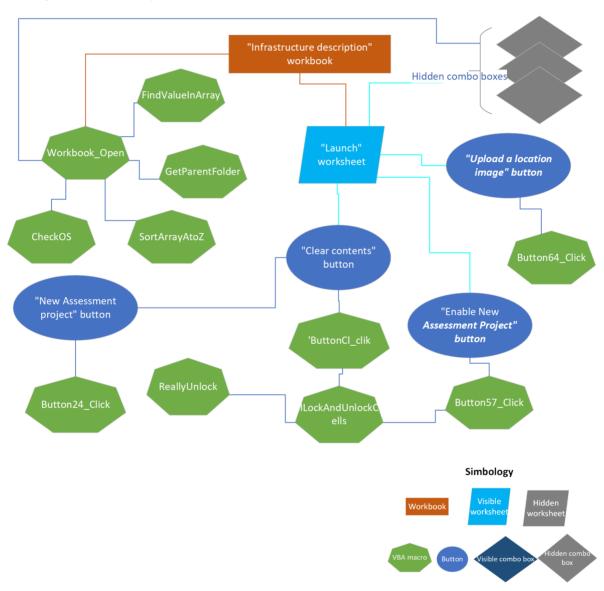

# **Entering Basic Information in the "Infrastructure Description Form"**

The example in fig. 1

Form	Figure 1. Example  1. Planned infrastruct	ture
	Project Assessment ID	Date

Project name									
Sub-project name									
Planned dates		Works Start	ting date:	Works	s Completion Date:				
Responsible office of LGE	D								
Select the type of infrastr		Drainage	Water system	Bridges	es Roads Building				
this Assessment Project.									
		Maintenan	ce □						
What kind of planned wor	What kind of planned works is?			cture 🗆					
what kind of planned work	Rehabilitat	ion Planned	infrastructu	re □					
				d infrastruct					
What is the expected li	fespan of	≤10 years	≤20 years	≤40 years	≤60 years	>60 years			
Planned infrastructure?		D ib la				·			
Elevation and topography	/	Describe ele characteristi				•			
	S	Structural Ch			body or init				
Materials used	Describe	proposed m	aterials						
		isting infrast		stem. descr	ibe the age	e and			
	condition. Older infrastructure may be more vulnerable due to								
		nd tear, outdated design standards, or degradation of							
Age and Condition	materials		J	,	J				
	It is important to describe the details of the design standards that								
	-	be used, such as load capacity, wind resistance, and flood							
Design		ance. This information will provide data on the likelihood that							
Specifications		rastructure will be able to withstand extreme events							
	Fund	ctional and o	perational	l data					
	It is impo	rtant to desc	cribe the d	etails of the	e design sta	ndards that			
	will be us	ed, such as I	oad capac	ity, wind re	sistance, ai	nd flood			
Type and function of the	resistanc	e. This infor	mation wil	l provide da	ata on the l	ikelihood that			
infrastructure system	the infras	structure wil	l be able to	withstand	extreme e	vents			
	Describe	data on the	frequency	and volume	e of use, su	ch as the daily			
	traffic on	a bridge or	the treatm	ent capacit	y of a wate	r treatment			
Use patterns	plant)								
Maintenan	ce and rel	nabilitation h	nistory of e	existing infr	astructure				
	Describe	whether it h	as been re	gularly mai	ntained, iri	regularly			
	maintain	ed, or not pr	operly ma	intained. R	emember t	hat regular			
Maintenance	maintena	ance can incr	ease resili	ence, so kn	owing the i	maintenance			
records	and repa	and repair history will help in assessing vulnerability)							
		e for infrastructure, information on existing adaptation							
		es (e.g. flood barriers, heat resistant coatings) will allow to							
Adaptation		current leve							
Measures	improver			•					
Measures	improver	nent							

v. To get the map where the infrastructure will be built, press the button "Open Create Google Maps". A Google Map page will be displayed where you can create a map or edit a map. The url is

https://support.google.com/mymaps/answer/3024454?hl=en&amp%3Bref\_topic =3188329

- You have to save this map as an image.
- The "Infrastructure "OpenGoogleMapsWithCoordinates" macro in "Módulo1" is called for this button.
- vi. Next, go to the "Upload a location map image" button and upload an image in a format (.jpg, .jpeg, .gif, .png) that shows the location points and/or layout lines of the infrastructure to be constructed, covering all the upazilas involved, into the "Image" worksheet.
  - Though the "Upload map location image" button the macro
    "'Infrastructure description.xlsm'!Button64\_Click" in "Module 5" is called
    to upload the image.
  - The uploaded image could be the image obtained from Google maps.
- vii. Then select the division, district and upazila where the specific type of infrastructure you are assessing will be constructed.
  - When a division is selected, the system fills the "district" combo box with the districts of the selected division using the macro "Infrastructure description.xlsm'!DropDown65Real\_Change" in "Module 5" which uses the "distriEx" invisible combo box to select the districts of the selected division and fill the combo box.
  - When a district is selected, the system fills the "upa" combo box with the upazila of the selected district using the macro "I 'Infrastructure description.xlsm'!DistriReal\_Change" in "Module 5" which uses the "upaEx" invisible combo box to select the upazilas of the selected district and fill the combo box.
- viii. Once you have selected an upazila, the CT will create a tab with the name of the selected upazila, and the content is the data extracted from the "database.xls" file constructed with the Application from the Disaster Risk Information Platform (DRIP)<sup>1</sup>. In the Form 2 (Fig. 2) can be seen an example of a certain upazila with data from the "database.xls" workbook.
  - The macro "Upa\_Change" in Module 5, creates a new tab with the name of the selected upazila and with the hazard level data from the upazila tab from the database file.
  - For do this job the application uses the macro "CopyDataToNewSheet" in Module 1 which uses the hide tab "Model" to duplicate it and fill it with data from database. You must proceed to select the upazilas that will form your assessment project one by one, and the CT will automatically create as many Form 2 as the number of upazilas you have selected for your assessment project.

10


<sup>&</sup>lt;sup>1</sup> At present, the database contains all the upazilas, specially the three pilot districts of the CRIM project. The user can add new upazilas by using the developed tool and following the steps described in the "Application and Database" of this document.

**Note:** The divisions, districts and upazila available for selecting in combo boxes, come from de "Database" file.

			r UPAZILA LE\			
		rological ever	nts observed b	y the local sta	akeholders	
Division: Barisl	hal					
District: Bhola Upazila: Bhola Sadar						
Hazardous		Hazar	d level classifi	cation from th	ne field	
events at Upazila level	Very high	High	Medium	Low	Very low	N/A
		Dat	a from the DR	IP		
1. Cyclone						
2. Drought: Kharif						
3. Drought: Pre Kharif						
4. Earthquake						
5. Erosion						
6. Flash flood						
7. Flood						
8. Landslides						
9. Salinity						
10. Sea Level Rise						
11. Storm surges						

The following diagram shows stage "Entering Basic Information in the "Infrastructure Description Form" with its structure and macros.

Diagram 2

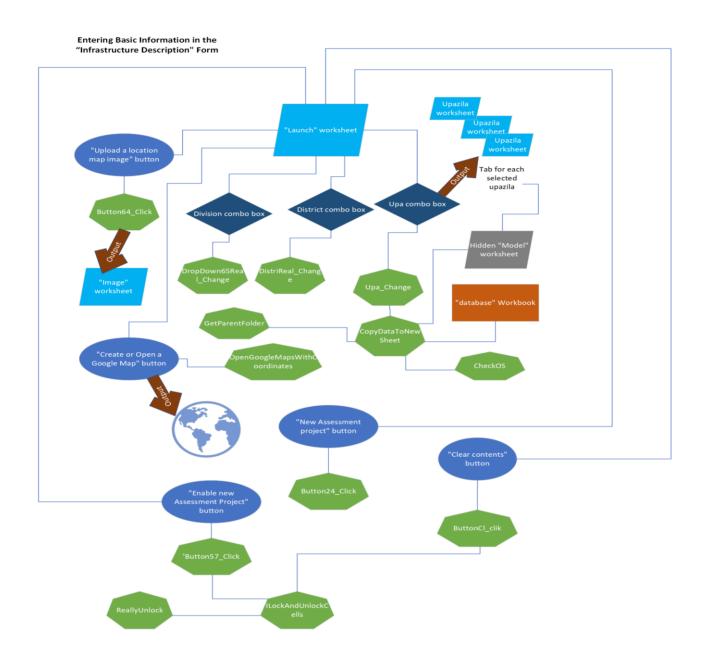




#### **Ending the "Infrastructure Description Form"**

- i. Check that the selected upazilas are as they should be. If you confirm, you can complete the process by clicking the 'Finish' button on the 'Launch' tab.
- → The Calculator Tool will check the entered data that and, if everything is validated, the CT will ask to create a form named "data from the field".
  - The macro called when "Finish" button is clecked is "'Infrastructure description.xlsm'!Rectangle5\_Click" in "Module 6"
  - This macro checks the validation of the form, verifying all the fields have values and that at least one upazila have been selected

- Once the validation of form is ok, the macro "ImportData" in "Module 2" is called to import data of form 1 to form 3, named "Data from the field.xlsm" explained in the following process "Continue with filling out Form 3". The macros used are
  - "GetParentFolder" in "Module 1"
  - "Duplicate Sheet" in "Module 5" to duplicate the "Model" sheet in "Data from the field.xlsm" workbook

The following diagram shows stage "Ending the 'Infrastructure Description Form" with its structure and macros.

Diagram 3

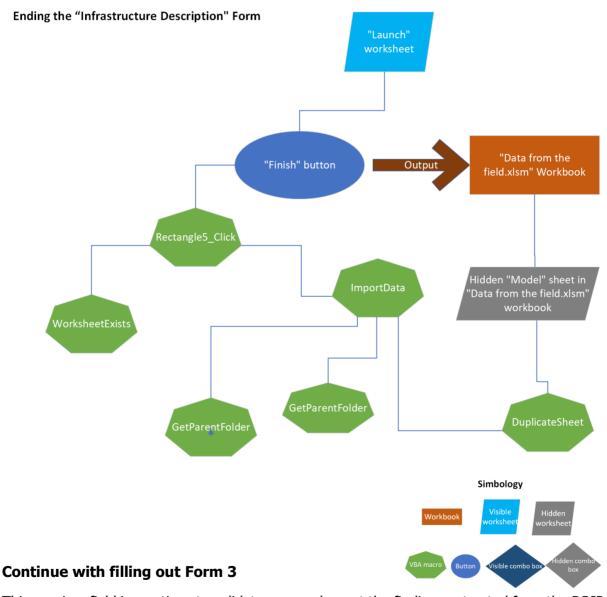

This requires field inspections to validate or complement the findings extracted from the DRIP platform. The form 3 also allows to assess some variables that are not captured by the DRIP. These detailed observations require the input from engineers at district and/or upazila level.

The Form 3 has as many tabs as upazila were selected in previous stages. For each upazila the form must be filled by marking an 'X' in the appropriate cell.

- i. When an "X" is marked, the macro "Workbook\_SheetChange" is called
  - This macro uses a sheet named "Data" which has the same structure as the upazila form, and inside each cell a number exists, and the macro shows the corresponding number in the same position and is filled with the column color.
- ii. In previous stage each upazila tab was generated making a duplicate of the worksheet "Model" in this workbook.
  - The "Model" worksheet uses Excel conditional formatting for filling each not empty cell with a colour according to its numeric value. The explanation of the colours can be seen in section "Normalization and classification" of "RCIA-CT Nov.2024" document.
  - The text (numeric value) colour format follows the same colour pattern.

Fig. 3 shows a filled form for a certain upazila.


Form 3. Ha	zard assessme	nt of the plane	ed site-location	of planed infra	structure				
Torm 5r na	zara assessme	Division:	Barishal	or planea illine	istructure				
			hola Sadar						
Hazard classification based on field observations.									
	Very high	High	Medium	Low	Very low	N/A			
Data from the fie	ld level: This hazard	classification is rela	ted to the specific k	cation of the propo	sed infrastructure.				
Cyclone									
Drought: Pre Kharif									
Erosion									
Flash flood									
Flood									
Landslides									
Salinity									
Sea Level Rise									
Storm surges									
Heat wave									
Heavy Rain									
Hailstorms									
Canal or stream overflow									
Erosion of coastal slopes and/or shorelines									
River-bank erosion									
Strong sedimentation									
Fresh water scarcity									
Lightning									

The "Upload a photography of the site" button is present in each upazila tab and uploads an image in a format (.jpg, .jpeg, .gif, .png). The button calls the macro "Data from the field.xlsm'!Button64\_Click"

The following diagram shows stage "Continue with filling out Form 3" with its structure and macros.

#### Diagram 4

#### Continue with filling out Form 3

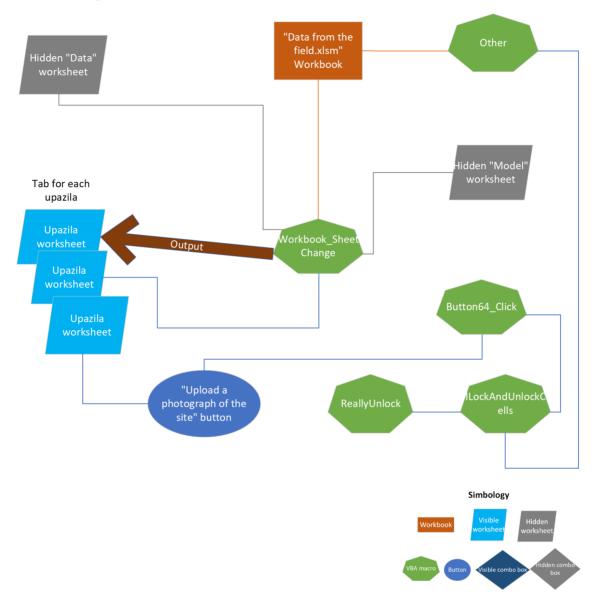

#### **Ending Form 3**

When Form 3 for each upazila is completed, the 'Finish' button in the 'Launch' tab must be pressed.


- iii. The "Finish" button will call the "Rectangle1\_Click" macro in "Module 4".
  - The macro will validate that all upazila have one marked X (a filled colour with its number) for each hazard. Its job will be done through the following macros in "Module 1":
    - CheckAll
    - CheckNotEmpty

- CheckCellForNonNumericValue
- iv. If validation is ok, the "CreateMatrixField", "CreateMatrixField2", "CreateMatrixHistoric" and "CreateFieldHistoric" macros are called to create the "Integration Matrix" that will continue to integrate Form 2 and Form 3 (field data) into the "Integration Matrix.xlsm" workbook, which will be explained after.
- v. "CreateMatrixField" fills the "Integration Matrix" with data from the field from "Heat Wave" to "Lightning" hazards. The macro invoked by "CreateMatrixField" is "DuplicateSheet" in "Module 2" to duplicate the "Model" worksheet of "Integration Matrix,xlsm" workbook.
  - When a worksheet has been created (one for each upazila) inside "Integration Matrix.xlsm" workbook, the current workbook ("Data from the field.xlsm") is closed.
- vi. "CreateMatrixField2" fills the "Integration Matrix" with data from the field from "Cyclone" to "Storm Surges" hazards.
  - These values are filled in hidden rows in the corresponding upazila sheet in "Integration Matrix".
- vii. "CreateMatrixHistoric" fills the "Integration Matrix" with data from the DRIP (Form 2) from "Cyclone" to "Storm Surges" hazards.
  - These values are filled in hidden rows in the corresponding upazila sheet in "Integration Matrix"
- viii. "CreateFieldHistoric" fills the "Integration Matrix" averaging the values from DRIP (Form 2) "Data from the Field (Form 3) from "Cyclone" to "Storm Surges" hazards.
  - The average is taken from the hidden rows and is filled in not hidden rows of the "Integration Matrix".

The following diagram shows stage "Ending Form 3" with its structure and macros.

### Diagram 5

# **Ending Form 3**

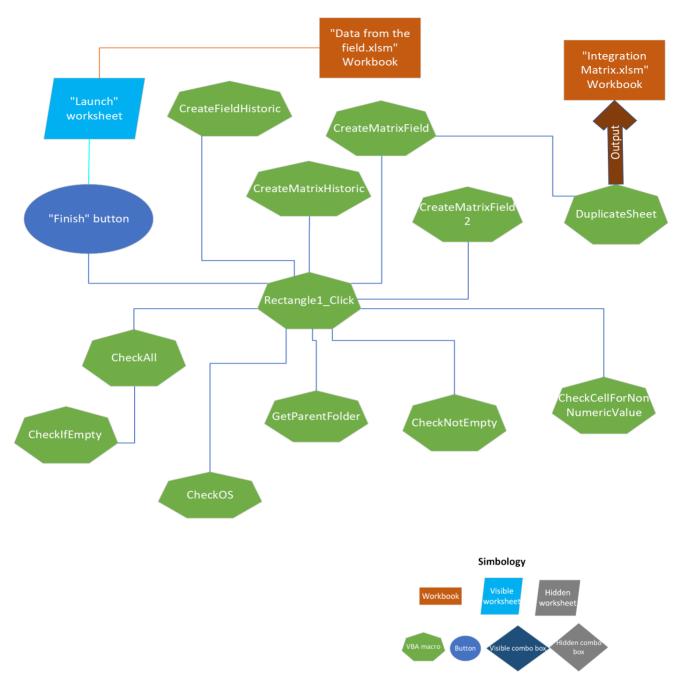

# **Continue with Integration Matrix**

Figure 4 shows how is this matrix.

I	NTEGRATION	MATRIX (activ	e cell from For	m 2 + Form 3)									
Division: Barishal													
District: Bhola													
		Upazila: B	hola Sadar										
Hazard	Hazard Level (HL)												
Variable (VH)	Very high	High	Medium	Low	Very low								
Cyclone													
Drought: Pre Kharif													
Erosion													
Flash flood													
Flood													
Landslides													
Salinity													
Sea Level Rise													
Storm surges													
Heat wave													
Heavy Rain													
Hailstorms													
Canal or stream overflow													
Erosion of coastal slopes and/or shorelines													
River-bank erosion													
Strong sedimentation													
Fresh water scarcity													
Lightning													
Aggregated Hazard Index (Ahi)	Ahi	for Upazila: Bhola Sa	adar	[37,88958	33412806]								


- ix. Review the Integration Matrix and then <u>press "Finish" on the "Launch" **tab**</u>. The CT will ask to create a projection matrix.
  - When pressing "Finish" button, "Integration Matrix.xlsm'!Rectangle4\_Click" is called for creating "Projection Matrix" which calls the "CreateProjectionMatrix" macro and "WorksheetExists" to indeed create the "Projection Matrix". For doing its job, "CreateProjectionMatrix" uses the Workbook "Bangladesh Climate Analysis Data base" and also calls other macros:
    - "GetParentFolder"
    - "DuplicateSheet"
    - "PorRangoHazard" to fill data coming from Form3 from Cyclone to Storm Surges data
    - "PorRangoField" to fill data coming from Form3 from Heat Wave to Lightning hazards
- x. Both procedures "PorRangoHazard" and "PorRangoField" in order to generate values in "Projection Matrix", take values of "Integrated Matrix" and the values of these

Workbooks "Bangladesh Climate Analysis Data base SSP2.xlsx" and 'Bangladesh Climate Analysis Data base SSP5.xlsx"

Both procedures call "RetornaTab" to find the tab in "Bangladesh Climate Analysis
Data base SSP2.xlsx" and 'Bangladesh Climate Analysis Data base SSP5.xlsx" where to
search the values. The tabs are the divisio names.

The following diagram shows stage "Continue with Integration Matrix" with its structure and macros.

#### Diagram 6

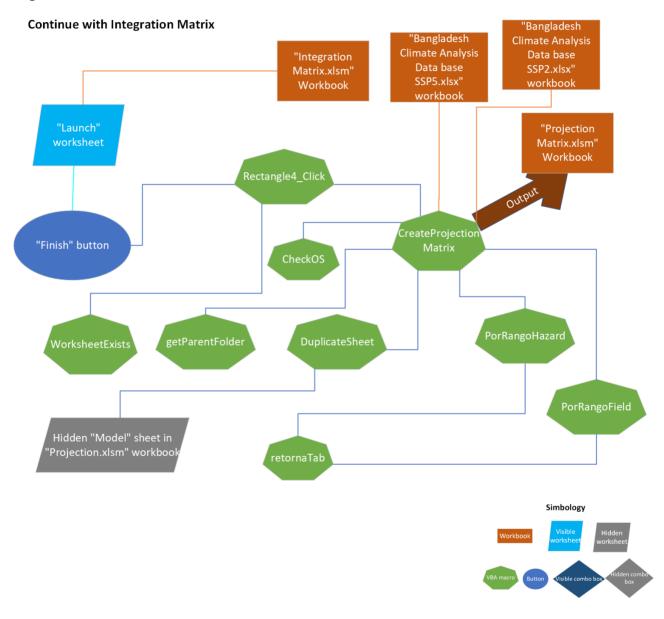

## **Projection Matrix**

For creating the "Projection Matrix", the macro duplicates the worksheets "Model SSP5" and "Model SPP2" inside the projection matrix. "Model" worksheets are the pattern of the projection matrix for each period of time.

i. Press Ok and the CT will produce two hazard projections for each upazila from the current period to 2100 (Fig. 5), using the SPP5 and the SPP2 climate change scenario.

Project	tion Matrix Pe	eriod <b>2020</b> -:	<b>2039</b> (SSP5 S	Scenario)		Projection Matrix Period 2040-2059 (SSP5 Scenario)							
	n: Barishal ct: Bhola	Project: a				ion: Barishal trict: Bhola	Project: a						
	Very High	High	Medium	Low	Very Low		Very High High Medium Low						
		zila: Bhola	Sadar			Upazila: Bhola Sadar							
Cyclone	82,95					Cyclone	85,95						
Drought: Pre Kharif				22,95		Drought: Pre Kharif				25,95			
Erosion			42,95			Erosion			45,95				
Flash flood				22,95		Flash flood				25,95			
Flood	82,95					Flood	85,95						
Landslides					2,95	Landslides					5,95		
Salinity					2,95	Salinity					5,95		
Sea Level Rise			42,95			Drought: Pre Kharif			45,95				
Storm surges			42,95			Storm surges			45,95				
Heat wave				22,95		Heat wave				25,95			
Heavy Rain				22,95		Heavy Rain				25,95			
Hailstorms				22,95		Hailstorms				25,95			
Canal or stream overflow	82,95					Canal or stream overflow	85,95						
Erosion of coastal slopes and/or shorelines	82,95					Erosion of coastal slopes and/or shorelines	85,95						
River-bank erosion						River-bank erosion							
Strong sedimentation					2,95	Strong sedimentation					5,95		
Fresh water scarcity					2,95	Fresh water scarcity					5,95		
Lightning					2,95	Lightning					5,95		
Aggregated Hazard Index (Ahi)			37,95			Aggregated Hazard Index (Ahi)			40,95				
									Print t	his upazila			

**Note:** now the CT is ready to start the next step.

# **Step 2. Assessing Infrastructure Exposure and Vulnerability**


#### This step serves one objective:

 Assess Infrastructure Probabilistic Exposure. This refers to the potential level of damage or loss that the infrastructure could suffer if exposed to the effects of a hazardous hydrometeorological event at its location; and

#### Selecting the upazila in "Projection Matrix"

2.1 The following step is to select the upazila for which the exposure and vulnerability of the proposed infrastructure will be assessed. To do this, go to the 'Launch' tab and select one of the upazilas from the list of your assessment project (Figure 6). Note: The exposure and vulnerability assessment process should be carried out separately for each upazila.

(Fig.6. Example)

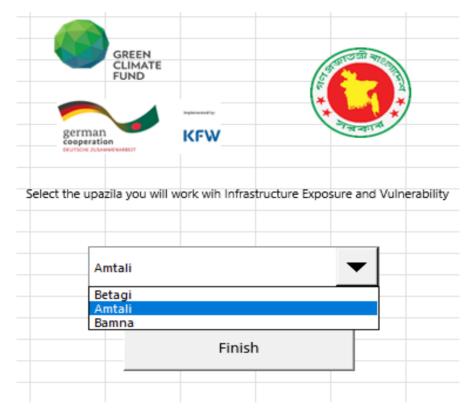


- 2.2 Once you have selected the upazila, click on the 'Finish' button and the CT will create an Excel file for the upazila you have selected in the 'Infrastructure Exposure and Vulnerability' directory.
  - i. When "Finish" button is pressed, "Button2\_Click" macro is invoked which creates a workbook for each selected upazila. This workbook is a infrastructure exposure & vulnerability assessment workbook. It's based in "Infrastructure exposure & vulnerability.xlsm" workbook. Macros invoked by "Button2\_Click" are:
    - "SaveAsXLSM" for duplicating origin workbooks
    - "LookforHighHazard" for selecting only high and very high level hazards from "Projection Matrix". Which calls to:
      - "Todo" which calls "DeterminesHazard" and "HideRows" macros.
        This last macro, hides hazard rows which do not have the very high,
        or high level.
      - "DeterminesHazard" calls to "PaintHazard" to colour the hazard row with the corresponding level hazard colour.
  - ii. The way all mentioned macros work is hiding all the hazard rows that does not have the required level and showing row by row.

The following diagram shows stage "Selecting the upazila in "Projection Matrix" with its structure and macros.

#### Diagram 7

#### Selecting the upazila in "Projection Matrix"

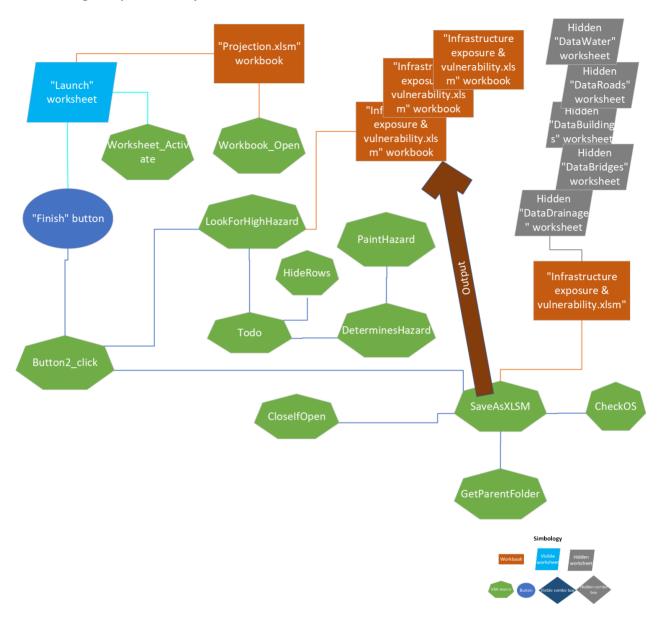

# Working with Exposure and Vulnerability Excel file with the name of the corresponding upazila

- 2.3 Go to the directory and open the created Exposure and Vulnerability Excel file with the name of the corresponding upazila.
- 2.4 When you open the file, you will be presented with a compromise text on the standard criteria to be considered when classifying the level of exposure and vulnerability.
- 2.5 Based on this, you should carefully review each classification criteria 1 to 5. The classification criteria to be used in the Exposure and Vulnerability assessment, are:
  - Very low. This refers to minor damage that does not require major repair of the infrastructure.
     Although such damage does not affect the functionality of the infrastructure services, it is important to address it to avoid further deterioration of the infrastructure that could affect the

- services if it were to occur again. In an infrastructure management system, such damage would require strict adherence to routine maintenance.
- 2. Minor. This refers to minor losses that does not require major repair or rehabilitation of the infrastructure. Although such losses is "minor", it is important to address it to avoid further deterioration of the infrastructure and consequent problems with quality and continuity of service. In an infrastructure management system, such damage would require specific, more attentive, or targeted maintenance than regular maintenance, including some additional strengthening or protection measures.
- 3. **Moderate.** This refers to more significant losses or damage that requires more intensive repair and may affect the functionality of the infrastructure in the short to medium term. These losses or damage may require a rehabilitation effort to restore the infrastructure to its original condition and are likely to require more significant financial and engineering resources to resolve.
- 4. Major. This is serious losses or damage that compromises the structural integrity of the infrastructure, renders the assets unsafe or unusable, and requires extensive repair or even complete reconstruction. The cost of repairing such losses or damage is significant, both in terms of money and time, and the impact on local communities and the economy can be long-lasting.
- 5. **Very high.** Refers to total damage and the need to completely replace the infrastructure.
- 2.6 You must confirm that you have understood those criteria clicking the button 'Confirm' which calls the "'Button1\_Click" macro. Following the confirmation, the tool will display four tabs:
  - i. *Infrastructure Exposure & Vulnerability Assessment* matrix.
  - ii. Produce a **Report**.
  - iii. Climate Risk Index SSP5.
  - iv. Climate Risk Index SSP2

When you open the Workbook, the macro named "Workbook\_Open()" is executed. It configures the "Infrastructure Exposure & Vulnerability Assessment "worksheet to show the appropriated buttons and only the first line of the first selected hazard. To make its job, "ShowHide" macro is invocated.

- 2.7 **Open** the Infrastructure Exposure and Vulnerability Assessment tab and review its structure:
  - i. The first row describes the type of infrastructure you are assessing.
  - ii. The second and third rows describe the district and upazila where the infrastructure exposure and vulnerability assessment is being conducted.
  - iii. The fourth and fifth rows describe the heading of the exposure assessment.
  - iv. The sixth and seventh row describes the infrastructure component to be assessed:
    - physical structure,
    - · construction materials and
    - site conditions.

In addition, the 5 levels of exposure can be observed.

v. The eighth row shows the type of hydro-meteorological hazard, and the colour refers to the degree of hazard as assessed in the previous steps.


						Form 5	5. B	rid	ges								
District: Bh	nola																
Upazila: Bł	Upazila: Bhola Sadar Continue to next line																
Infrast	tru	ctu	re e	exp	osı	ıre assesmen	t m	atr	ix			Projec	t: T	Tes	t		
Physical			ent ma			Constructi		Ext Da	ent ma		'	Site- location			en	t of ge	1
Structur es	1	2	3	4	5	ons Materials	1	2	3	4	5	Conditio ns	1	2	3	4	5
Cyclonic s	tor	<u>m</u>															
High winds and heavy rains causing stress and potential weakenin g of bridge structure s.						Accelerated rusting and corrosion of metal elements in the bridge due to increased moisture and saltwater intrusion.						Damage to roads leading to and from the bridge, affecting accessibili ty and functionali ty.					

- 2.8 Once you have reviewed the structure of the matrix, you will begin the analysis by following the procedure below:
  - i. Start by finding the Infrastructure Exposure Assessment section (rows 4 and 5, columns A, B, C, D, E, F), subsection "Physical Structures" (rows 6 and 7, column A), and then focus on row 8, which describes the hazard type and level.
  - ii. Once you have read and understood the scenario, proceed to classify the extent or level of damage that would occur if the hydrometeorological event were to occur at that level of severity. To do this, use the criteria described in para 2.5 above and apply your best engineering knowledge and experience.
  - iii. Apply an "X" in the appropriate box in the "Extent of Damage" section (rows 6 and 7, columns B, C, D, E or F).
    - When an "X" is marked, the macro "Workbook\_SheetChange" is called.

- This macro uses a sheet named "DataBuildings" or "DataBridges" or "DataRoads" or "DataWater" or "DataDrainage" according to the infrastructure type, which (any of them) has the same structure as the "Infrastructure Exposure & Vulnerability Assessment "worksheet (which, in turn, also depends on the type of infrastructure), and inside each cell a number exists, and the macro shows the corresponding number and color in the same position.
- iv. Continue this process of analysis and ranking until you have completed the 'Infrastructure Exposure and Vulnerability Assessment Matrix' for the upazila.
- v. To facilitate interaction, when the tab corresponding to the type of infrastructure (buildings, bridges, roads, drainage or water system) is displayed, only the first line of the first hazard to be evaluated will be displayed. To proceed with the next line you must click the "Continue to next line" button. When all the lines of the hazard in question have been evaluated, the system informs you and a button appears "Continue to next hazard"; clicking the button executes the first line of the next hazard. Continue with the "Continue to next line" and "Continue to next hazard" until the evaluation is completed.
  - When "Continue to next line" is pressed, "'Line\_Click" macro is called to show the next line of the current hazard
  - When "Continue to next hazard" is pressed Hazard\_Button1\_Click() is called to show the next hazard. This macro calls "Show" macro to make its work.
- 2.9 When you have completed the E&V assessment or even as the evaluation is completed for the selected upazila, you will now be able to generate a report of the E&V assessment. This option is available on 'Report' tab. In this report you will find:
  - i. An estimate of the exposure index for the assessed infrastructure.
- 2.10 To carry out the E&V analysis and assessment for a new upazila, you should repeat steps 2.1 to 2.9. These steps should be repeated as many times as the number of upazilas included in this assessment project.

The following diagram shows stage "Working with Exposure and Vulnerability Excel file with the name of the corresponding upazila" with its structure and macros.

#### Diagram 8

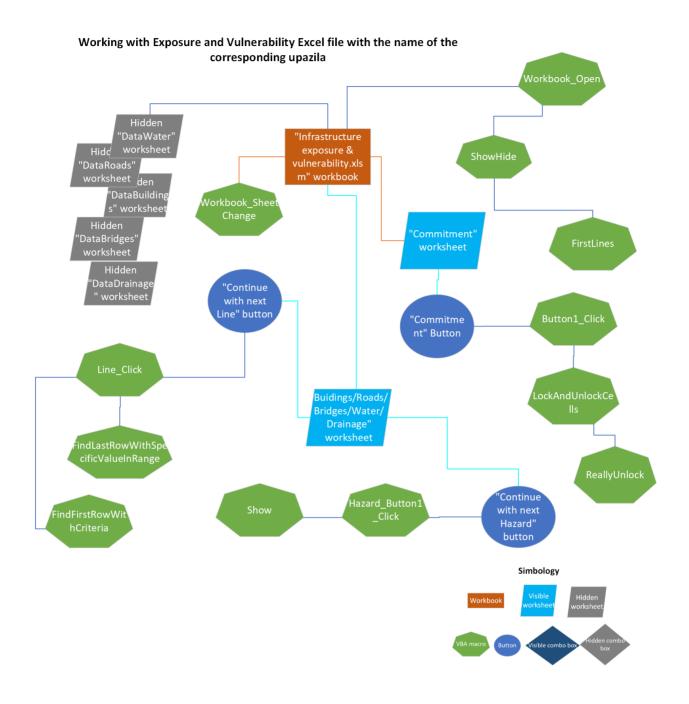

# **Step 3. Probabilistic Infrastructure Risk Index.**

- 3.1 This step measures the probability of experiencing a specified level of infrastructure damage or loss due to hydrometeorological events.
- 3.2 The risk index is derived by averaging various infrastructure risk indices calculated for each upazila. If this averaged index falls within the medium risk category or higher, a Comprehensive Climate Change Impact Assessment (CCIA) is recommended for all infrastructures across the upazilas included in this assessment.
- 3.3 If the overall averaged climate risk index is classified as low or very low, it is not mandatory to conduct assessments for all upazilas. However, it is crucial to check if any individual upazila's risk index reaches the medium or higher risk categories. Upazilas meeting these criteria should undergo the CCIA process.


Go	directly to CC	No need to	go to CCIA	
Very high	High	Low	Very low	
Range	: from 52% to	100%	Range: from 1	% to 51.99%

#### To generate the report.

- 3.4 Go to the Climate Risk Index tab of the calculation tool. This tab displays the 'Climate Risk Index', which is calculated dynamically and in real time as the assessment is carried out.
- 3.5 Select the 'Report' tab. The calculator will display the results for the selected upazila.
  - When pressing "As sessing Infrastructure Exposure Report", "Exposure Print" macro is called
  - ii. When pressing "Probabilistic Infrastructure Risk Index Report", "ClimateIndex" macro is called
- 3.6 You can save the report in a designated folder or print this report.

The following diagram shows stage "Reporting" with its structure and macros.

#### Diagram 9

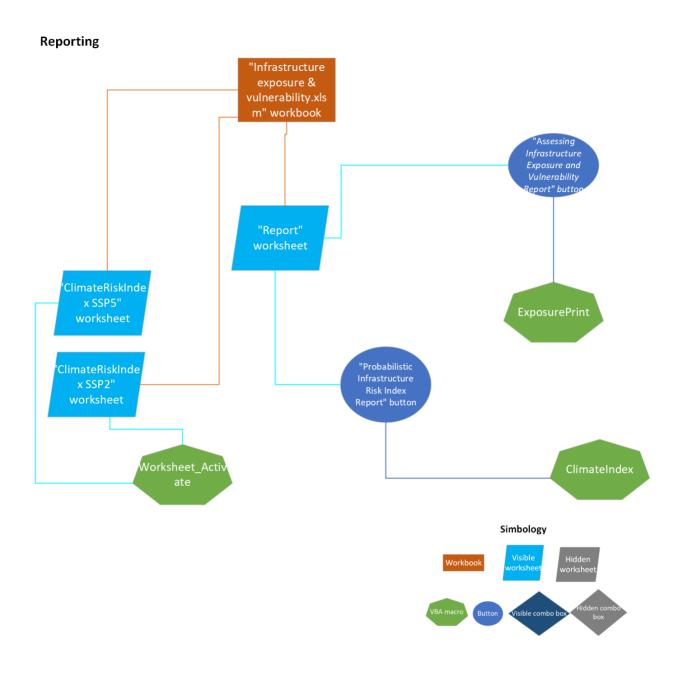

# **Utility macros**

These are functions thar are called transversally

Macro	Objective
LockAndUnlockCells	Lock and Unlock cells
ReallyUnlock	Unlock cells
CheckOS	Find if the Operating System where CT is executing is Windows or MAC
GetParentFolder	Get the parent folder where CT is located
DuplicateSheet	Duplicates "Model" sheet
HideTransaction	Hide all the background processing
ShowTransaction	Reset configurations with respect to showing alerts
WorkSheetExist	Find if a sheet exists in a certain workbook

#### **SECURITY**


The CT is structured as Excel workbooks, each with several sheets. To implement security, all these sheets have been protected with a password. This password can be changed. It's strongly suggested that only the IT team change it.

The actual password is CreliC\*01


The password change must be made by running a routine that first unprotects the sheets with the current password and then protects the sheets with the new password.

The steps to change the password in all Workbooks and all sheets is as follows:


- i. Open the workbook "Infrastructure description.xlsm"
- ii. Enable the Developer tab in Excel, follow these steps:
  - a. **In Excel** "Infrastructure description.xlsm" go to the **File** menu.
  - b. Select **Options** from the menu on the left side.
  - c. In the **Excel Options** window, click on **Customize Ribbon**.
  - d. On the right side, under the **Main Tabs** section, find and check the box next to **Developer**.
  - e. Click OK.
- iii. Click on "Developer"
- iv. Click on "Visual Basic"

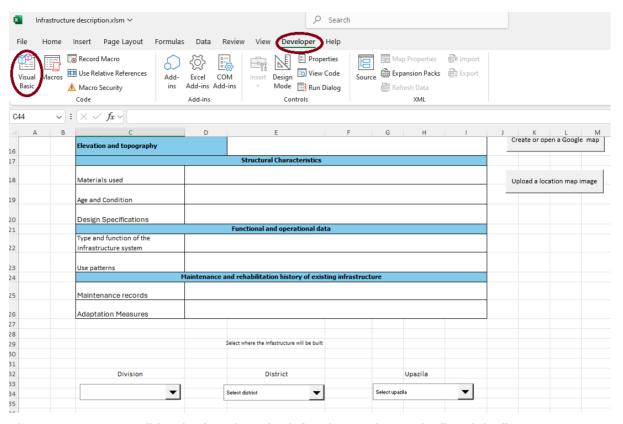


v. The VBA structure will be displayed on the left side panel. See the "Modules" group.

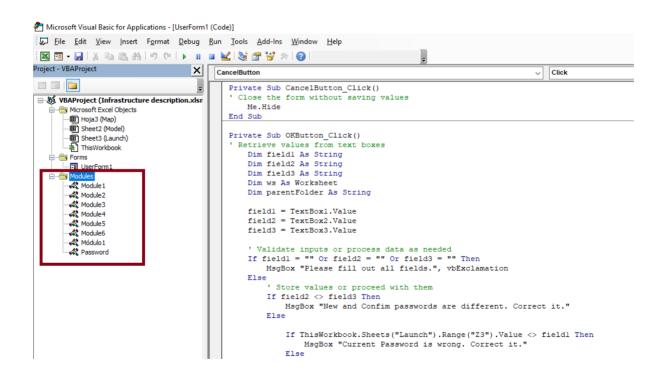


vi. Inside "Modules", you will see the "Password" Module. Double Click on it.

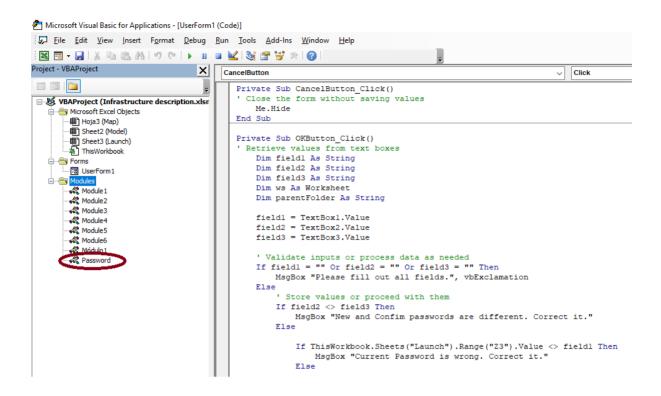

- vii. When you double click on "Password", the code will be shown at the right panel. You can see the routine "Boton1\_Haga\_clic\_en()" to change the password.
  - a. This is the VBA editor.

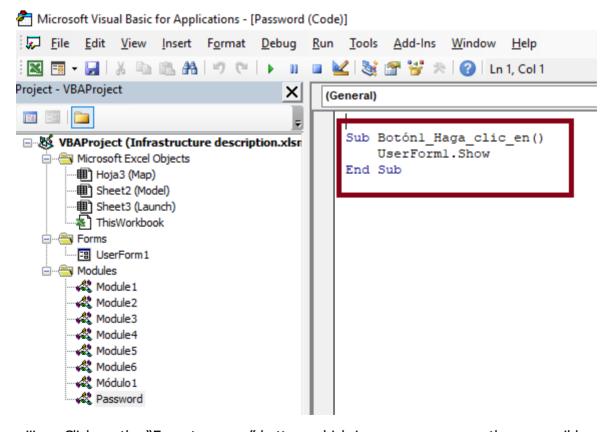

viii. Click on the "Execute macro" button, which is a green arrow on the upper ribbon of the VBA editor. You can also press F5.

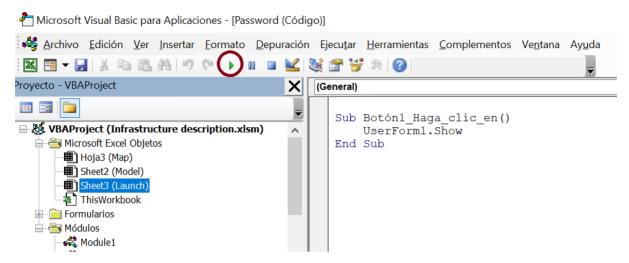


ix. When clicking on the green arrow, a screen asking for current and new credentials will be shown.



x. Fill the current, new, and confirm passwords and click "OK".



xi. The process will execute and change the password in all workbooks and all sheets. Finally a message will notify that password has been changed.

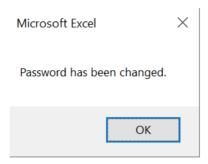

xii. Finally disable the "Developer" option before distributing the Calculator Tool.

# **Application and Database**

The application is a system developed in C#. The source code is in <u>GitHub</u>, the repository name is "crelic". Inside the repository "crelic", in the folder "RCIA Project" is the user final application. It is a ".zip" file. And the source coud of the C# application is in crelic/crelic folder.

The application is a system to populate the CT database with DRIP data. The system is an '.exe' file that must be run to populate the 'Database' file containing the weighted hazard level for each upazila and the type of hazard. The CT is built from this data.

The steps explained below were executed to obtain from the DRIP the hazard data (type and hazard level) corresponding to all upazila (567 in total<sup>5</sup>),

The steps are as follows:

1. Obtain the DRIP data for the required upazila and hazard. There are two ways to do this:

#### The first way is to go hazard by hazard for each upazila:

- i. The DRIP web url is <a href="MapView DRIP">MapView DRIP</a> (plancomm.gov.bd).
- ii. The output is a xls file that contains the hazard level for that upazila.

### The second way is searching all hazards for each upazila:

i. Within the DRIP web <u>MapView - DRIP (plancomm.gov.bd)</u>, look for the 'Report' option, select division, district, upazila and select all the hazards and generate report for the selected upazila.

- ii. The outputs are the reports for each hazard for the selected upazila. These reports must be downloaded one by one.
- iii. The outputs are 'xls' Excel files that contain the hazards level for that upazila for all the hazards.
- 2. Execute the application
  - i. Inside the folder 'Database/Application', there is a file named 'crelic.exe' that must be executed.
  - ii. When executed, a screen will be displayed:



- 3. Click the first button: 'Select the directory where the source 'xls' Excel files are for exporting to xlsx Excel format'.
  - i. To have the Excel 'xls' files available, you must select the directory where the files were downloaded in previous step, this directory could be the "download" directory or another, for example you could move the files from the download directory into the "download" directory inside de "RCIA Project Tool/Database/Application" directory (recommended).

- ii. This step must be carried out because the files must be transformed to an Excel file with 'xlsx' extension.
- 4. The result of this action is that the 'xls' file(s) are converted to a 'xlsx' file and moved into the 'Origin' folder. The final path where the file(s) with data of the DRIP is/are:

/Project/Application/Origin

- i. You can check that the file(s) is/are into the folder, they have the same name of the file downloaded from the DRIP ('.xls') with the 'xlsx' extension.
- ii. Working time depends on computer efficiency.

#### STEPS TO FILL THE DATABASE WITH THE xlsx FILE GOT IN PREVIOUS STEP

5. Open the file 'upazila.xlsx' inside the 'Administration' folder, the path is:

/Project/Database/Application/Administration

- i. Review if the upazila you are downloading the data from is in the file "Upazila" i.On Worksheet 'Upazila' you must write the division, the district and the upazila name of the new(s) upazila on columns A, B and C respectively. For example, for the upazila 'Nachole' whose data was downloaded from the DRIP, the district is 'Ch. Nawaganj', and the division is 'Rajshahi'.
- ii. Alphabetically order the list by divisions, districts and upazilas.
- 6. In the application, select the second button 'Select the directory where the source xlsx Excel file(s) are for generating data base'
  - i. Select the 'Origin' folder.
  - ii. The application will fill the database with the data of the files in the 'Origin' folder, creating or updating a worksheet for each upazila.
  - iii. Application will move the files to 'Backup' directory /Project/Database/Application/Backup
  - iv. Press the button "Alphabetically order Worksheets in database file" to get a ordered database file.
- 7. The 'database' file will be uploaded to the CT according to the upazilas that are chosen as is explained in this document.
- 8. When two upazilas have the same name, the name of the district between brackets must be set for each upazila, for example:
  - Companiganj (Noakhali)
  - Companiganj (Sylhet)
  - i.In this case, before the '.xlsx' file be generated by the application, the name inside the '.xls' (file downloaded from the DRIP) file must be changed and must be equal to the name set in 'upazila.xlsx' file into "Upazila" worksheet.

#### **WEIGHTED VALUES**


To fill the data in the "database.xlsx" file, the application takes the value from the ".xls" file (downloaded from the DRIP) and calculate the value according to the weight it gets from the "upazila.xlsx" file, worksheet "Hazard". It is as follows:

#### For example:


• The ".xls" file downloaded from DRIP for "Aditmari" upazila, for cyclone hazard is:




• The hazard level is "1,00". It means "Very Low" in the CT scale. So, it will be classified in the "Very Low" column of "database.xlsx" file:



The application will put the number in the "database.xlsx" file, worksheet "Aditmari", according to the value it gets into "upaila.xlsx" file, worksheet "Hazard", the left table, corresponding to "Cyclone", in this case is "9,5":

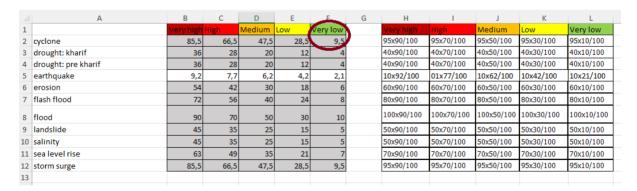

- o This value corresponds to the weight of a cyclone, as explained in this document.
- The formulas can be seen into the right table, in this case "95x10/100":

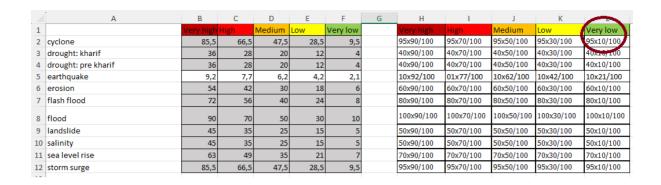

• The CT builds the "Aditmari" worksheet into the 'database.xlsx" file as follows, filled with all the hazards downloaded from the DRIP, where each hazard corresponds to one ".xls' file and transformed to a ".xlsx" by the CT:

Oi			r UPAZILA		XISX D	y uie Ci	i		
Hydrom					local stake	holders			
Division: F				,					
	almonirha	nt .							
Jpazila: A	ditmari								
Hazardou		Hazard le	vel classifi	cation fro	m the field				
s events at Upazila level	Very high	High	Medium	Low	Very low	N/A			
		Data	from the	DRIP					
1. Cydone					9,50				
2. Drought: Charif			18,60						
3. Drought: Pre Kharif				12,00					
1. Earthquak E		7,70							
5. Frosion	54,00								
5. Flash flood					8,00				
7. Flood	90,00								
3. .andslides					5,00				
). Salinity					5,00				
10. Sea .evel Rise					7,00				
11. Storm suraes					9,50				
< >	Δ	bhaynag	ar Ad	abor	Adamdig	hi Ac	litmari	Agailj	hara