UVM Framework Code Generator API Reference

Revision 3.6h

UVMF Code Generator API Reference Table of Contents

1		rerviewreministration (UVMF) Code Generators	
		neration flow	
2	Major	sections of user input	6
_	2.1.1		
	2.1.1	11110101120	
	2.1.2	Finalize	
_	_		
3		ace Code Generator	
		terface initialize API	
	3.1.1		
		Interface variablesterface body APIs	
	3.2.1	addParamDef()	
	3.2.1	addImport()	
	3.2.3	addHdlTypedef()	
	3.2.4	addHvlTypedef()	
	3.2.5	addPort()	
	3.2.6	addConfigVar()	
	3.2.7	addConfigVarConstraint()	
	3.2.8	addTransVar()	
	3.2.9	addTransVarConstraint()	17
	3.2.10	specifyResponseOperation()	18
	3.2.11	specifyResponseData()	19
	3.2.12	0	
	3.2.13	1 0 0	
	3.2.14	8 0	
	3.2.15		
	3.2.16	1 0	
		terface finalize API	
		Create()	
4	Enviro	onment Code Generator	25
	4.1 En	vironment initialize API	25
	4.1.1		
	4.1.2	Environment variables	25
		vironment body APIs	
	4.2.1	addParamDef()	
	4.2.2	addTypedef()	
	4.2.3	addImport()	
	4.2.4	addConfigVar()	
	4.2.5	addConfigVarConstraint()	
	4.2.6	addAgent()	
	4.2.7	addSubEnv()	
	4.2.8	addQvipSubEnv()define Analysis Component O	
	4.2.9	defineAnalysisComponent()	
	4.2.10	, ,	35
2	UVM	Framework Code Generator API Reference	

4.2.11	addUvmfScoreboard()	36
4.2.12	addConnection()	37
4.2.13	addQvipConnection()	38
4.2.14	addUVMCflags()	39
4.2.15	addUVMClinkArgs()	40
4.2.16	addUVMCfile()	41
4.2.17	addAnalysisPort()	42
4.2.18		
4.2.19	r s s s s s s s s s s s s s s s s s s s	
4.2.20		
4.2.21	addDPICompArgs()	
4.2.22		
4.2.23		
4.2.24	r · · · · ·	
4.2.25		
4.3 En	vironment finalize API	
4.3.1	Create()	50
5 Test B	ench Code Generator	50
	st bench initialize API	
5.1.1	BenchClass()	
5.1.2	Test bench variables	
5.2 Te	st bench body APIs	
5.2.1	addParamDef()	52
5.2.2	addImport()	53
5.2.3	addTopLevel()	54
5.2.4	addBfm()	55
5.2.5	addQvipBfm()	56
5.3 Te	st bench finalize API	
5.3.1	Create()	58

1 Introduction to the UVM Framework (UVMF) Code Generators

1.1 Overview

The UVM Framework provides code generators for creating interfaces, environments, and test benches. The generators provide a set of API's for characterizing content of the interface, environment, and test bench.

The interface generator creates the initial code for a UVM based protocol agent package and BFM's. The interface simulates as generated and is ready for the user to add protocol specific signal activity and sequences.

The environment generator creates the initial code for a UVM based chip or block level environment. Analysis components can be characterized, components instantiated, and all UVM connections between components can be done with the environment generator. The environment simulates as generated and is ready for the user to complete prediction functions.

The test bench generator creates the initial code for a UVM based test bench. The test bench generator creates the top level module, UVM test, virtual sequence, parameters package, and makefile for compilation and simulation. The generated top level virtual sequence automatically contains a random sequence for each listed UVMF agent. The test bench simulates as generated and is ready for the user to instantiate the DUT and begin creating test scenarios.

There are a number of example user input files for interfaces, environments, and test benches. The table below describes the examples found in templates/python/examples.


Interface Examples	Description
mem_if_config.py	User input file for generating an interface package named mem_pkg. This interface is used in block_a, block_b, block_c, and chip environments and test benches
pkt_if_config.py	User input file for generating an interface package named pkt_pkg. This interface is used in block_a, block_b, block_c, and chip environments and test benches
dma_if_config.py	User input file for generating an interface named dma_pkg. This interface is a responder interface and defines response data.
Environment Examples	Description
block_a_env_config.py	User input file for generating an environment that has no parametization. This environment is also used in chip_env.
block_b_env_config.py	User input file for generating an environment that has parametization. This environment is also used in chip_env.
block_c_env_config.py	User input file for generating an environment that has a QVIP configurator generated sub environment that contains

	standard protocols.
chip_env_config.py	User input file for generating a chip level
	environment that instantiates sub
	environments.
Test Bench Examples	
block_a_ben_config.py	User input file for generating a test bench to
	run the block_a environment.
block_b_ben_config.py	User input file for generating a test bench to
	run the block_b environment.
block_c_ben_config.py	User input file for generating a test bench to
	run the block_c environment.
chip_ben_config.py	User input file for generating a test bench to
	run the chip environment.

1.2 Generation flow

The diagram below shows the flow utilized by the UVMF generators. The user creates a text file that uses the provided API's for characterizing the interface, environment, or test bench. This configuration file creates an object that contains all of the information provided by the user in the arguments of the API's. The UVMF code generator, uvmf_gen.py, uses information in the object and the Jinja2 templatizing package to generate source files. Jinja2 is a free package that the user installs in order to use the UVMF code generator. Files generated include all classes, packages, BFM's, and makefiles required for an operational test bench that simulates as generated.

UVM Code Generator - Flow

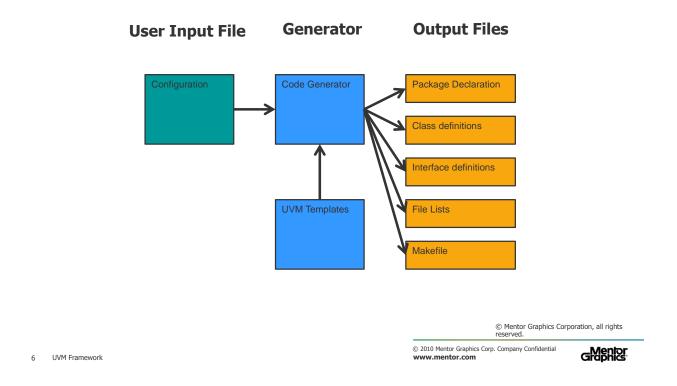

2 Major sections of user input

2.1.1 Initialize

The initialize section of user input contains three elements: python shell execution, import of UVMF code generator, and generation of object for holding all user information that characterizes the desired interface, environment, or test bench. The python shell execution and generator import is shown below and must be included in all user input files.

```
#! /usr/bin/env python
import uvmf_gen
```

The initialize API used for generating the object which holds all user information is generator specific and given below for the interface, environment, and test bench generators.

2.1.2 Body

The body section of user input contains UVMF provided API's used to characterize the content of the interface, environment, or test bench. Any number and combination of API's can be used to characterize the desired output. All of the API's are described in the "body API's" section of interface, environment, and test bench code generators below.

2.1.3 Finalize

The finalize section of user input contains the API that triggers file generation. This API is shown below and must be included in all user input files.

create()

3 Interface Code Generator

3.1 Interface initialize API

The interface initialize API creates a python object that contains all of the interface body API's listed below. These interface body API's are used to characterize information about the interface protocol. This information is used to create the following content:

Classes: Transaction, interface level sequence base, random sequence, coverage, driver, monitor, agent, agent configuration, UVM reg adapter, UVM reg predictor.

Package: Protocol package including all classes listed above.

BFM's: Driver and monitor.

Compilation flow: File list and Makefile

3.1.1 InterfaceClass()

This initialization API is used to create an object that stores all information about the interface. An example use is shown below. The protocol name is mem. The object created is named intf. All body API's and variables are members of this object and therefore must be preceded by the name of the object and separated by a period.

```
intf = uvmf_gen.InterfaceClass('mem')
```

3.1.2 Interface variables

Name	Value(s)	Description
veloceReady True False		Interface generated is Veloce
		Ready Friendly.
inFactReady True False		Interface generated is inFact ready. An
		inFact sequence and project direcories are
		created for use by inFact.
catapultReady	True False	Enables HLS related requirements.
clock 'signalName'		Name of primary clock. Additional clocks
		must be added manually.
reset	'resetName'	Name of primary reset. Additional resets

		must be added manually. If interface has no
		reset use 'dummy' and remove associated
		code from interface.
resetAssertionLevel	True False	Assertion level for this protocol.
vipLibEnvVariable 'envVariableName'		Name of environment variable that will
		point to the location of the source for this
		interface package.

3.2 Interface body APIs

These API's are member functions of the interface object created using the InterfaceClass initialization API. These API's may be used in any number and any order. They must precede the create() API.

3.2.1 addParamDef()

	115 5.6	
Name	addParamDef	
Description	This API adds a parameter to the interface classes and BFM's.	
Usage	addParamDef(
030.80	'parameterName',	
	'parameterType',	
	'parameterDefalutValue'	
Arguments		
'parameterName'	Description: Name of the parameter.	
	Value: Any valid SV parameter name.	
'parameterType'	Description: Type of the parameter.	
	Value: Any valid SV parameter type.	
'parameterDefalutValue'	Description: The default value for this parameter.	
	Value: Any valid SV value for the parameter type.	

3.2.2 addImport()

Name	addImport
Description	Adds an import of the selected package to the interface
	package.
Usage	addImport('packageName')
Arguments	
'packageName'	Description: The name of the package to be imported. Value: Any valid SV package. The location and compilation of this package must be added to the generated interface.

3.2.3 addHdlTypedef()

Name	addHdlTypedef	
Description	This API adds adds a typedef that is visible to UVM content	
•	and BFM's.	
Usage	<pre>addHdlTypedef('typedefName', 'typedefDefinition')</pre>	
Arguments		
'typedefName'	Description: The name of the typedef.	
	Value: Any valid SV typedef name.	
'typedefDefinition'	Description: Type definition of the typedef.	
	Value: Any valid SV typedef definition.	

3.2.4 addHvlTypedef()

Name	addHvlTypedef	
Description	This API adds adds a typedef that is only visible to UVM	
	content. BFM's do not have visibility to this typedef.	
Usage	<pre>addHvlTypedef('typedefName', 'typedefDefinition')</pre>	
Arguments		
'typedefName'	Description: The name of the typedef.	
	Value: Any valid SV typedef name.	
'typedefDefinition'	**Description: Type definition of the typedef.	
	Value: Any valid SV typedef definition.	

3.2.5 addPort()

Name	addPort	
Description	This API adds a signal to the interface package. Use this API	
_	for each signal in the protocol with the exception of the clock	
	and reset defined in the interface variables.	
Usage	<pre>addPort('signalName', 'signalWidth', 'signalDirection'</pre>	
)	
Arguments		
'signalName'	Description: Name of the signal.	
	Value: Any valid SV signal name.	
'signalWidth'	Description: Width of the signal.	
	Value: Any valid SV signal width value. This value can be one	
	of the parameters defined using addParamDef API.	
'signalDirection'	Description: The direction of the signal from the perspective	
	of the test bench as an initiator.	
	Value: input output inout.	

3.2.6 addConfigVar()

Name	addConfigVar
Description	This API adds a variable to the configuration class. This variable is automatically added to the convert2string function. A coverpoint for this variable is added to the generated covergroup.
Usage	<pre>addConfigVar('variableName', 'variableType', isrand=True False)</pre>
Arguments	
'variableName'	Description: Name of the variable.
	Value: Any valid SV variable name.
'variableType'	Description: Type of the variable.
	Value: Any valid SV variable type.
isrand	Description: Determines if the variable is randomizable.
	Value: True False

3.2.7 addConfigVarConstraint()

Name	addConfigVarConstraint
Description	This API adds a constraint to the configuration class.
Usage	addConfigVarConstraint('constraintName', 'constraintBody')
Arguments	
'constraintName'	Description: Name of the constraint.
	Value: Any valid SV constraint name.
'constraintBody'	Description: Body of the constraint.
	Value: Any valid SV constraint body.

3.2.8 addTransVar()

Marea	- Jar
Name	addTransVar
Description	This API adds a variable to the transaction class. This variable
	is automatically added to the convert2string function. A
	coverpoint for this variable is added to the generated
	coverage component. This variable is automatically added to
	transaction viewing in the waveform viewer.
Usage	addTransVar(
	'variableName', 'variableType',
	isrand=True False,
	isCompare=True False
)
Arguments	
'variableName'	Description: Name of the variable.
	Value: Any valid SV variable name.
'variableType'	Description: Type of the variable.
	Value: Any valid SV variable type.
isrand	Description: Determines if the variable is randomizable.
	Value: True False
isCompare	Description: Determines if the variable is included in the
	do_compare function.
	Value: True False

3.2.9 addTransVarConstraint()

Name	addTransVarConstraint
Description	This API adds a constraint to the transaction class.
Usage	<pre>addTransVarConstraint('constraintName', 'constraintBody')</pre>
Arguments	
'constraintName'	Description: Name of the constraint.
	Value: Any valid SV constraint name.
'constraintBody'	Description: Body of the constraint.
	Value: Any valid SV constraint body.

3.2.10 specifyResponseOperation()

Name	specifyResponseOperation	
Description	This API specifies the condition which determines if	
	responseData identified by the specifyResponseData API is	
	returned to the BFM.	
Usage	<pre>specifyResponseOperation('signalCondition')</pre>	
Arguments		
'signalCondition'	Description: The condition which determines if response	
	data is returned to the BFM.	
	Value: Any valid SV expression that results in a boolean.	

3.2.11 specifyResponseData()

Name	specifyResponseData	
Description	This API specifies the data required by the BFM to complete a	
	transfer initiated by a master.	
Usage	<pre>specifyResponseData(['returnedData'])</pre>	
Arguments		
'returnedData'	Description: This argument is a list of variables returned to the BFM in order to complete a transfer initiated by a master. These values must be listed as variables using the addTransVar API.	
	Value: Any variable added to the transaction using the addTransVar API.	

3.2.12 addDPIFile()

Name	addDPIFile
Description	This API adds a file to the list of C files to be compiled.
Usage	addDPIFile('fileName')
Arguments	
'fileName'	Description: Name of C file to be compiled and linked.
	Value: Any valid file name including its extension.

3.2.13 addDPICompArgs()

Name	addDPICompArgs	
Description	This API adds compilation flags to be used when compiling	
	the C files identified using addDPIFile API.	
Usage	addDPICompArgs('compArgs')	
Arguments		
'compArgs'	Description: Compile arguments to be used when compiling the C files identified using addDPIFile API. Value: Any valid compilation flag for the c compiler.	

3.2.14 addDPILinkArgs()

Name	addDPILinkArgs
Description	This API adds flags to be used when linking the C files
-	identified using addDPIFile API.
Usage	addDPIFile('linkArgs')
Arguments	
'linkArgs'	Description: Arguments to be used when linking the C files
	identified using addDPIFile API.
	Value: Any valid flag for the c linker.

3.2.15 addDPISOName()

Name	addDPISOName	
Description	This API sets the name of the shared object created by linking	
_	all compiled objects.	
Usage	addDPISOName('SOName')	
Arguments		
'SOName'	Description: Name of the shared object created by linking all compiled objects. Value: Any valid SO name.	

3.2.16 addDPIImport()

Name	addDPIImport
Description	This API adds a C function to be imported into
r.	SV using DPI.
Usage	addDPIImport('returnType', 'functionName', 'functionArguments', {'SVVariableName':'SVVariableType', 'SVVariableName':'SVVariableType'})
Arguments	
'returnType'	Description: Return type of C function.
	Value: Any valid C return type when using DPI.
'functionName'	Description: Name of C function to be imported
	into SV using DPI
	Value: Any valid C function name.
'functionArguments'	Description: All arguments of C function.
	Value: Any valid list of C function arguments
	when using DPI.
{'SVVariableName':'SVVariableType',	Description: The list of systemVerilog
'SVVariableName':'SVVariableType'}	arguments that are equivalent types to the list
	of C arguments.
	Value: Any valid SV variable name and type
	when using DPI.

3.3 Interface finalize API

3.3.1 Create()

The finalize section of user input contains the API that triggers file generation. This API is shown below and must be included in all user input files.

create()

4 Environment Code Generator

4.1 Environment initialize API

The environment initialize API creates a python object that contains all of the environment body API's listed below. These environment body API's are used to characterize information about the environment. This information is used to create the following content:

Classes: Environment, environment configuration, predictors, coverage collection components, environment level sequence base.

Package: Environment package.

Compilation flow: File list and Makefile

4.1.1 EnvironmentClass()

This initialization API is used to create an object that stores all information about the environment. An example use is shown below. The environment name is block_b. The object created is named env. All body API's and variables are members of this object and therefore must be preceded by the name of the object and separated by a period.

env = uvmf gen.EnvironmentClass('block b')

4.1.2 Environment variables

Name	Value(s)	Description
catapultReady	True False	Enables HLS related requirements.

4.2 Environment body APIs

These API's are member functions of the environment object created using the EnvironmentClass initialization API. These API's may be used in any number and any order. They must precede the create() API.

4.2.1 addParamDef()

Name	addParamDef	
Description	This API adds a parameter to the environment classes.	
Usage	addParamDef(
· · · ·	'parameterName',	
	'parameterType',	
	'parameterDefalutValue'	
Arguments		
'parameterName'	Description: Name of the parameter.	
	Value: Any valid SV parameter name.	
'parameterType'	Description: Type of the parameter.	
	Value: Any valid SV parameter type.	
'parameterDefalutValue'	Description: The default value for this parameter.	
	Value: Any valid SV value for the parameter type.	

4.2.2 addTypedef()

Name	addTypedef
Description	This API adds adds a typedef to the environment package.
Usage	<pre>addHvlTypedef('typedefName', 'typedefDefinition')</pre>
Arguments	
'typedefName'	Description: The name of the typedef.
	Value: Any valid SV typedef name.
'typedefDefinition'	Description: Type definition of the typedef.
	Value: Any valid SV typedef definition.

4.2.3 addImport()

Name	addImport
Description	Adds an import of the selected package to the environment
	package.
Usage	<pre>addImport('packageName')</pre>
Arguments	
'packageName'	Description: The name of the package to be imported.
	Value: Any valid SV package. The location and compilation of
	this package must be added to the generated environment.

4.2.4 addConfigVar()

Name	addConfigVar
Description	This API adds a variable to the configuration class for this environment. This variable is also automatically added as a
Usage	<pre>coverpoint within a covergroup in the configuration class. addConfigVar('variableName', 'variableType', isrand=True False)</pre>
Arguments	
'variableName'	Description: Name of the variable. Value: Any valid SV variable name.
'variableType'	Description: Type of the variable. Value: Any valid SV variable type.
isrand	Description: Determines if the variable is randomizable. Value: True False

4.2.5 addConfigVarConstraint()

Name	addConfigVarConstraint
Description	This API adds a constraint to the configuration class.
Usage	<pre>addConfigVarConstraint('constraintName', 'constraintBody')</pre>
Arguments	
'constraintName'	Description: Name of the constraint.
	Value: Any valid SV constraint name.
'constraintBody'	Description: Body of the constraint.
	Value: Any valid SV constraint body.

4.2.6 addAgent()

Name	addAgent
Description	This API adds an agent to the environment.
Usage	<pre>addAgent('instanceName', 'protocol', 'clock', 'reset', {'protocolParam1':'protocolParam1Override', 'protocolParam2':'protocolParam2Override'}, 'initResp')</pre>
Arguments	
'instanceName'	Description: Instance name of this agent. Value: Any valid SV instance name.
'protocol'	Description: Name of the protocol package. Example: mem_pkg would use the value mem Value: Any valid SV package name.
'clock'	Description: The name of the primary clock for this protocol. Value: Any valid SV signal name.
'reset'	Description: The name of the primary reset for this protocol. Value: Any valid SV signal name.
'protocolParamN'	Description: Name of the interface package parameter to be overridden. Value: Must match the interface parameter name to be overridden.
protocolParamNOverride'	Description: The value used to override the parameters default value. Value: Any valid SV value for overriding the identified parameter. Example: '5' or 'testLevelParameterName'
'initResp'	Description: Identifies the end of the signaling protocol. Initiator is synonymous with master. Responder is synonymous with slave. Value: INITIATOR or RESPONDER.

4.2.7 addSubEnv()

4.2.7 audSubLilv()	
Name	addSubEnv
Description	This API adds a UVMF environment to this environment.
Usage	<pre>addSubEnv('subEnvironmentInstanceName', 'subEnvironmentPackageName', numberOfAgents, { 'subEnvironmentParameter1':'parameter10verride', 'subEnvironmentParameter2':'parameter20verride' })</pre>
Arguments	
'subEnvironmentInstanceName'	Description: Instance name for this environment. Value: Any valid SV instance name.
'subEnvironmentPackageName'	Description: Package name for this environment. Value: The name of the environment package that contains this environment. Example: for package named block_b_env_pkg use the value block_b
numberOfAgents	Description: Number of agents in this environment and any environments encapsulated by this environment. Value: Total number of agents.
'subEnvironmentParameterN'	Description: Parameter of this sub environment. Value: The parameter of this environment class.
'parameterNOverride'	Description: The value to override the specified environment parameter. Value: Any valid SV value for overridding the parameter.

4.2.8 addQvipSubEnv()

Name	addQvipSubEnv
	
Description	This API adds a UVMF sub environment generated by the
	QVIP Configurator. This API is generated by the QVIP
	Configurator and contains all selected standard protocols.
	This API should not be written manually.
Usage	addQvipSubEnv('environmentInstanceName', 'environmentPackageName', [lagent1Name], lagent2Name]
	<pre>['agent1Name', 'agent2Name'])</pre>
Arguments	
'environmentInstanceName'	Description: The instance name for this environment
	Value: Any valid SV instance name.
'environmentPackageName'	Description: The pakage name generated by the QVIP
	configurator.
	Value: Defined by the QVIP configurator.
'agentNName'	Description: Name of QVIP agent within environment.
	Value: Any valid SV instance name.

4.2.9 defineAnalysisComponent()

Name	defineAnalysisComponent
Description	This API is used to define an analysis component class. This
Description	can be used to create predictors, coverage components, etc. It
	creates a component that is an extension of uvm_component.
	Any number of analysis_exports and analysis_ports can be
	added to this component. This API creates the class definition
	and adds the class to the environment package.
Паса	defineAnalysisComponent (
Usage	keyword,
	'className',
	{
	'analysisExport2Name': 'transactionType2'
	},
	'analysisPort1Name':'transactionType3',
	'analysisPort2Name':'transactionType4'
	}
Arguments	
keyword	Description: Keyword used to select a template from the
	environment generator templates. Use of the 'predictor'
	keyword generates a class with the base content required by a
	predictor. Use of the 'coverage' keyword generates a class
	with the base content required by a coverage collector.
	Value: predictor or coverage
'className'	Description: Name given to the class generated by this API.
	Value: Any valid SV class name.
'analysisExport1Name'	Description: Name of the analysis_export to be created.
	Value: Any valid SV instance name.
'analysisPort1Name'	Description: Name of the analysis_port to be created.
	Value: Any valid SV instance name.
'transactionType1'	Description: Type of the transaction to be received by the
	analysis_export or broadcasted from the analysis_port. The
	type parameterization must match that of the component
	connected to this analysis_export or analysis_port.
	Value: Transaction type matching component connecting to
	each analysis_export or analysis_port.

4.2.10 addAnalysisComponent()

Name	addAnalysisComponent
Description	This API instantiates an analysis component.
Usage	<pre>addAnalysisComponent('instanceName', 'classType')</pre>
Arguments	
'instanceName'	Description: Instance name for the component. Value: Any valid SV instance name.
'classType'	Description: Class name of the component to be instantiated. Value: The class name of the component to be instantiated.

4.2.11 addUvmfScoreboard()

Name	addUvmfScoreboard
Description	This API instantiates a UVMF scoreboard
Usage	<pre>addUvmfScoreboard('instanceName', 'scoareboardType', 'transactionType')</pre>
Arguments	
'instanceName'	Description: Instance name given to the scoreboard. Value: Any valid SV instance name.
'scoareboardType'	Description: Type of scoreboard to be instantiated. Value: Any of the UVMF scoreboard types: uvmf_in_order_scoreboard, uvmf_out_of_order_scoreboard, uvmf_in_order_scoreboard_array, uvmf_in_order_race_scoreboard. Custom scoreboards extended from uvmf_scoreboard_base can also be used.
'transactionType'	Description: Type of the transaction to be received by the scoreboard. The type parameterization must match that of the component connected to this scoreboard. Value: Transaction type matching component connecting to this scoreboard.

4.2.12 addConnection()

TILLIE GAGEOTHICCHOIN()	110	
Name	addConnection	
Description	This API connects two UVM components	
Usage	<pre>addConnection('componentAInstanceName', 'componentAConnectionPoint', 'componentBInstanceName', 'componentBConnectionPoint')</pre>	
Arguments		
'componentAInstanceName'	Description: Instance name of the component to be	
	connected.	
	Value: Instance name of the component to be connected.	
'componentAConnectionPoint'	Description: Connection point of component to be	
	connected.	
	Value: Any valid UVM connection port or export.	
'componentBInstanceName'	Description: Instance name of the component to be	
	connected.	
	Value: Instance name of the component to be connected.	
'componentBConnectionPoint'	Description: Connection point of component to be	
	connected.	
	Value: Any valid UVM connection port or export.	

4.2.13 addQvipConnection()

Name	addQvipConnection
Description	This API connects a UVM component to the analysis_port
Description	within a QVIP agent.
Usage	addQvipConnection(
Usage	'componentAInstanceName',
	'componentAConnectionPoint',
	'componentBInstanceName', 'componentBConnectionPoint'
)
Arguments	
'componentAInstanceName'	Description: Instance name of the component to be
	connected.
	Value: Instance name of the component to be connected
	preceeded by the instance name of the environment
	containing the QVIP agent. Example: qvip_env_pcie_rc
	where the QVIP Configurator generated environment is
	named qvip_env and the agent contained in the
	environment is pcie_rc.
'componentAConnectionPoint'	Description: Connection point of component to be
	connected.
	Value: Any valid UVM connection port or export.
'componentBInstanceName'	Description: Instance name of the component to be
	connected.
	Value: Instance name of the component to be connected.
'componentBConnectionPoint'	Description: Connection point of component to be
	connected.
	Value: Any valid UVM connection port or export.

4.2.14 addUVMCflags()

Name	adddUVMCflags
Description	Defines compilation flags to be used in compiling files identified using addUVMCfiles API. Use this API once to define all flags used.
Usage	addUVMCflags('flags')
Arguments	
'flags'	Description: All flags to be used in compiling files identified using addUVMCfiles. Value: Any valid compilation flags

4.2.15 addUVMClinkArgs()

Name	addUVMClinkArgs	
Description	Defines UVMC link arguments. Use this API once to define all	
	arguments used.	
Usage	addUVMClinkArgs('linkArguments')	
Arguments		
'linkArguments'	Description: All link arguments to be used with UVMC.	
	Value: Any valid link arguments	

4.2.16 addUVMCfile()

Name	addUVMCfiles
Description	This API is used to add a file to the list of files to be compiled for use with UVMC. Use this API once for each file to be compiled. Each use of this API adds the <i>fileName</i> to a list of files.
Usage	addUVMCfiles('fileName')
Arguments	
'fileName'	Description: file name of C file to be compiled for use with UVMC. Value: Any valid file name and path.

4.2.17 addAnalysisPort()

Name	addAnalysisPort
Description	This API is used to add a single instance of uvm_analysis_port to the environment. It will be parameterized to the specified type of sequence item and connected to the specified TLM port. Note: No checking for valid type or existing port is done
Usage	<pre>addAnalysisPort('portName','transactionType','connection')</pre>
Arguments	
'portName'	Description: Name of the analysis port to be instantiated Value: Any valid class handle name
'transactionType'	Description: Parameterization to use for the analysis port, should be a valid sequence item type matching the parameterization of the connected port. Value: Any valid sequence item type name. <i>Note, no checking is done by the script to ensure validity.</i>
'connection'	Description: Reference to another analysis port within the environment that will drive this analysis port. Can use hierarchical references to underlying agents if needed. Will be used as the argument to this port's 'connect()" call. Value: Any valid TLM port within the environment. Note, no checking is done by the script to ensure validity.

4.2.18

4.2.19 addAnalysisExport()

Nama	add Analysis Export	
Name	addAnalysisExport	
Description	This API is used to add a single instance of	
	uvm_analysis_export to the environment. It will be	
	parameterized to the specified type of sequence item and	
	connected to the specified TLM port. Note: No checking for	
	valid type or existing port is done	
Usage	addAnalysisExport(
	'portName','transactionType','connection'	
)	
Arguments		
'portName'	Description: Name of the analysis export to be instantiated	
	Value: Any valid class handle name	
'transactionType'	Description: Parameterization to use for the analysis export,	
	should be a valid sequence item type matching the	
	parameterization of the connected port.	
	Value: Any valid sequence item type name. <i>Note, no checking</i>	
	is done by the script to ensure validity.	
'connection'	Description: Reference to another port within the	
	environment that will be driven by this export. Can use	
	hierarchical references to underlying agents if needed. Will be	
	used as the argument to this port's 'connect ()" call.	
	Value : Any valid TLM port within the environment. <i>Note, no</i>	
	checking is done by the script to ensure validity.	

4.2.20 addDPIFile()

Name	addDPIFile
Description	This API adds a file to the list of C files to be compiled.
Usage	<pre>addDPIFile('fileName')</pre>
Arguments	
'fileName'	Description: Name of C file to be compiled and linked.
	Value: Any valid file name including its extension.

4.2.21 addDPICompArgs()

Name	addDPICompArgs	
Description	This API adds compilation flags to be used when compiling	
	the C files identified using addDPIFile API.	
Usage	addDPICompArgs('compArgs')	
Arguments		
'compArgs'	Description: Compile arguments to be used when compiling the C files identified using addDPIFile API.	
	Value: Any valid compilation flag for the c compiler.	

4.2.22 addDPILinkArgs()

Name	addDPILinkArgs
Description	This API adds flags to be used when linking the C files
-	identified using addDPIFile API.
Usage	addDPIFile('linkArgs')
Arguments	
'linkArgs'	Description: Arguments to be used when linking the C files
	identified using addDPIFile API.
	Value: Any valid flag for the c linker.

4.2.23 addDPISOName()

Name	addDPISOName	
Description	This API sets the name of the shared object created by linking	
_	all compiled objects.	
Usage	addDPISOName ('SOName')	
Arguments		
'SOName'	Description: Name of the shared object created by linking all compiled objects. Value: Any valid SO name.	

4.2.24 addDPIImport()

N	- JJDDII
Name	addDPIImport
Description	This API adds a C function to be imported into
-	SV using DPI.
Usage	addDPIImport(
o .	'returnType', 'functionName',
	'functionArguments',
	{'SVVariableName':'SVVariableType',
	'SVVariableName':'SVVariableType'}
Arguments	
'returnType'	Description :Return type of C function.
	Value: Any valid C return type when using DPI.
'functionName'	Description: Name of C function to be imported
	into SV using DPI
	Value: Any valid C function name.
'functionArguments'	Description: All arguments of C function.
	Value: Any valid list of C function arguments
	when using DPI.
<pre>{'SVVariableName':'SVVariableType', 'SVVariableName':'SVVariableType'}</pre>	Description: The list of systemVerilog
Svvaliabiewame : Svvaliabielype }	arguments that are equivalent types to the list
	of C arguments.
	Value: Any valid SV variable name and type
	when using DPI.

4.2.25 addRegisterModel()

Name	addRegisterModel
Description	This API integrates a UVM based register model into the environment. A thin register model is created to enable
	simulation of environment as generated. The thin register model should be owerwritten by the actual register model.
Usage	addRegisterModel('sequencer', 'transactionType', 'regAdapterType', 'busMap', 'useAdapter', 'useExplicitPrediction'
Argumonts	
Arguments 'sequencer'	Description: Path to sequencer to be used with register
	model through bus map.
	Value: Any valid uvm sequencer handle.
'transactionType'	Description: The class type of transaction used by the
	sequencer connected to the register model through the bus
	map.
	Value: The transaction type used by the sequencer.
'regAdapterType'	Description: The class type of the uvm register adapter to be
	used with the register model.
	Value: Register adapter class type.
'busMap'	Description: The bus map to be used with the register model.
	Value: The bus map to be used with the register model.
'useAdapter'	Description: Determines if the environment will use a uvm
	based register adapter.
L and a line in Daniel in it.	Value: True or False
'useExplicitPrediction'	Description: Determines if the environment will use a uvm
	based register predictor for explicit prediction.
	Value: True or False

4.3 Environment finalize API

4.3.1 Create()

The finalize section of user input contains the API that triggers file generation. This API is shown below and must be included in all user input files.

```
create()
```

5 Test Bench Code Generator

5.1 Test bench initialize API

The test bench initialize API creates a python object that contains all of the test bench body API's listed below. These test bench body API's are used to characterize information about the test bench. This information is used to create the following content:

Classes: top level test, top level virtual sequence.

Packages: top level test package, top level sequence package. Top level parameters package.

Modules: hdl_top, hvl_top.

Compilation flow: File list and Makefile

5.1.1 BenchClass()

This initialization API is used to create an object that stores all information about the test bench. An example use is shown below. The test bench name is block_b_ben. The environment package name is block_b. Environment parameters can be overridden using the format shown below. The object created is named ben. All body API's and variables are members of this object and therefore must be preceded by the name of the object and separated by a period.

5.1.2 Test bench variables

Name	Value(s)	Description
veloceReady	True False	Interface generated is Veloce Ready Friendly.
inFactReady	True False	Test bench generated is inFact ready.
		Makefile contains variables, switches, and
		arguments to run inFact.
catapultReady	True False	Enables HLS related requirements.
clockHalfPeriod	'timeValue'	Time duration of half period. Example: '6ns',
		or '6'
clockPhaseOffset	'timeValue'	Time duration before first clock edge.
		Exaple: '25ns' or '25'
resetAssertionLevel	True False	Assertion level of reset signal driven by test
		bench.

resetDuration	'timeValue'	Time duration reset is asserted at start of
		simulation. Example: '100ns', or '100'

5.2 Test bench body APIs

These API's are member functions of the test bench object created using the BenchClass initialization API. These API's may be used in any number and any order. They must precede the create() API.

5.2.1 addParamDef()

Name	addParamDef
Description	This API adds a parameter to the test level parameter
	package.
Usage	<pre>addParamDef('parameterName', 'parameterType',</pre>
	'parameterDefalutValue'
Arguments	
'parameterName'	Description: Name of the parameter.
	Value: Any valid SV parameter name.
'parameterType'	Description: Type of the parameter.
	Value: Any valid SV parameter type.
'parameterDefalutValue'	Description: The default value for this parameter.
	Value: Any valid SV value for the parameter type.

5.2.2 addImport()

Name	addImport
Description	Adds an import of the selected package in the test package,
	sequence package and top level module.
Usage	addImport('packageName')
Arguments	
'packageName'	Description: The name of the package to be imported.
	Value: Any valid SV package. The location and compilation of
	this package must be added to the generated test bench.

5.2.3 addTopLevel()

Name	addTopLevel
Description	This API is used to add a top level module to the vsim command line. Use this API once for each top level to be included. Each use of this API adds the <i>moduleName</i> to a list of modules.
Usage	addUVMCfiles('moduleName')
Arguments	
'moduleName'	Description: module name to be added as a top level module. Value: Any valid module name.

5.2.4 addBfm()

Name	addBfm
Description	This API adds a monitor BFM to the top level module, hdl_top.
	If the <i>activity</i> argument is ACTIVE then a driver BFM is also
	added to hdl_top. The test bench clock and reset are
	connected to these BFM's. If the <i>activity</i> argument is ACTIVE
	then the top level virtual sequence will automatically start a
	random sequence on this BFM.
Usage	addBfm(
	'instanceName', 'protocol',
	'clock',
	'reset', 'activity',
	{'protocolParam1':'protocolParam10verride',
	'protocolParam2':'protocolParam2Override'}
Arguments	
'instanceName'	Description: Instance name of this BFM.
	Value: Any valid SV instance name.
'protocol'	Description: Name of the protocol package. Example:
	mem_pkg would use the value mem
	Value: Any valid SV package name.
'clock'	Description: The name of the primary clock given in the user
	input file for this protocol.
	Value: Must match value given to clock variable in user input
	file for this protocol.
'reset'	Description: The name of the primary reset given in the user
	input file for this protocol.
	Value: Must match value given to reset variable in user input
	file for this protocol.
'activity'	Description: Determines the ACTIVE/PASSIVE state for this
	BFM.
	Value: ACTIVE PASSIVE
'protocolParamN'	Description: Name of the interface package parameter to be
	overridden.
	Value: Must match the interface parameter name to be
	overridden.
protocolParamNOverride'	Description: The value used to override the parameters
	default value.
	Value: Any valid SV value for overriding the identified
	parameter. Example: '5' or 'testLevelParameterName'

5.2.5 addQvipBfm()

<u> </u>	
Name	addQvipBfm
Description	Add a QVIP interface BFM. This API is generated by the QVIP
_	Configurator. It is located in the package as SV comments.
Usage	<pre>addQvipBfm('instanceName', 'envPackage', 'activity')</pre>
Arguments	
'instanceName'	Description: Instance name of this BFM.
	Value: Name given to instance in QVIP Configurator.
'envPackage'	Description: Name of the environment package generated using the QVIP Configurator. Value: Value given test bench in QVIP Configurator.
'activity'	Description: Determines the ACTIVE/PASSIVE state of the
	BFM.
	Value: ACTIVE PASSIVE

5.3 Test bench finalize API

5.3.1 Create()

The finalize section of user input contains the API that triggers file generation. This API is shown below and must be included in all user input files.

create()