



NW

Crestal normal faults

SE

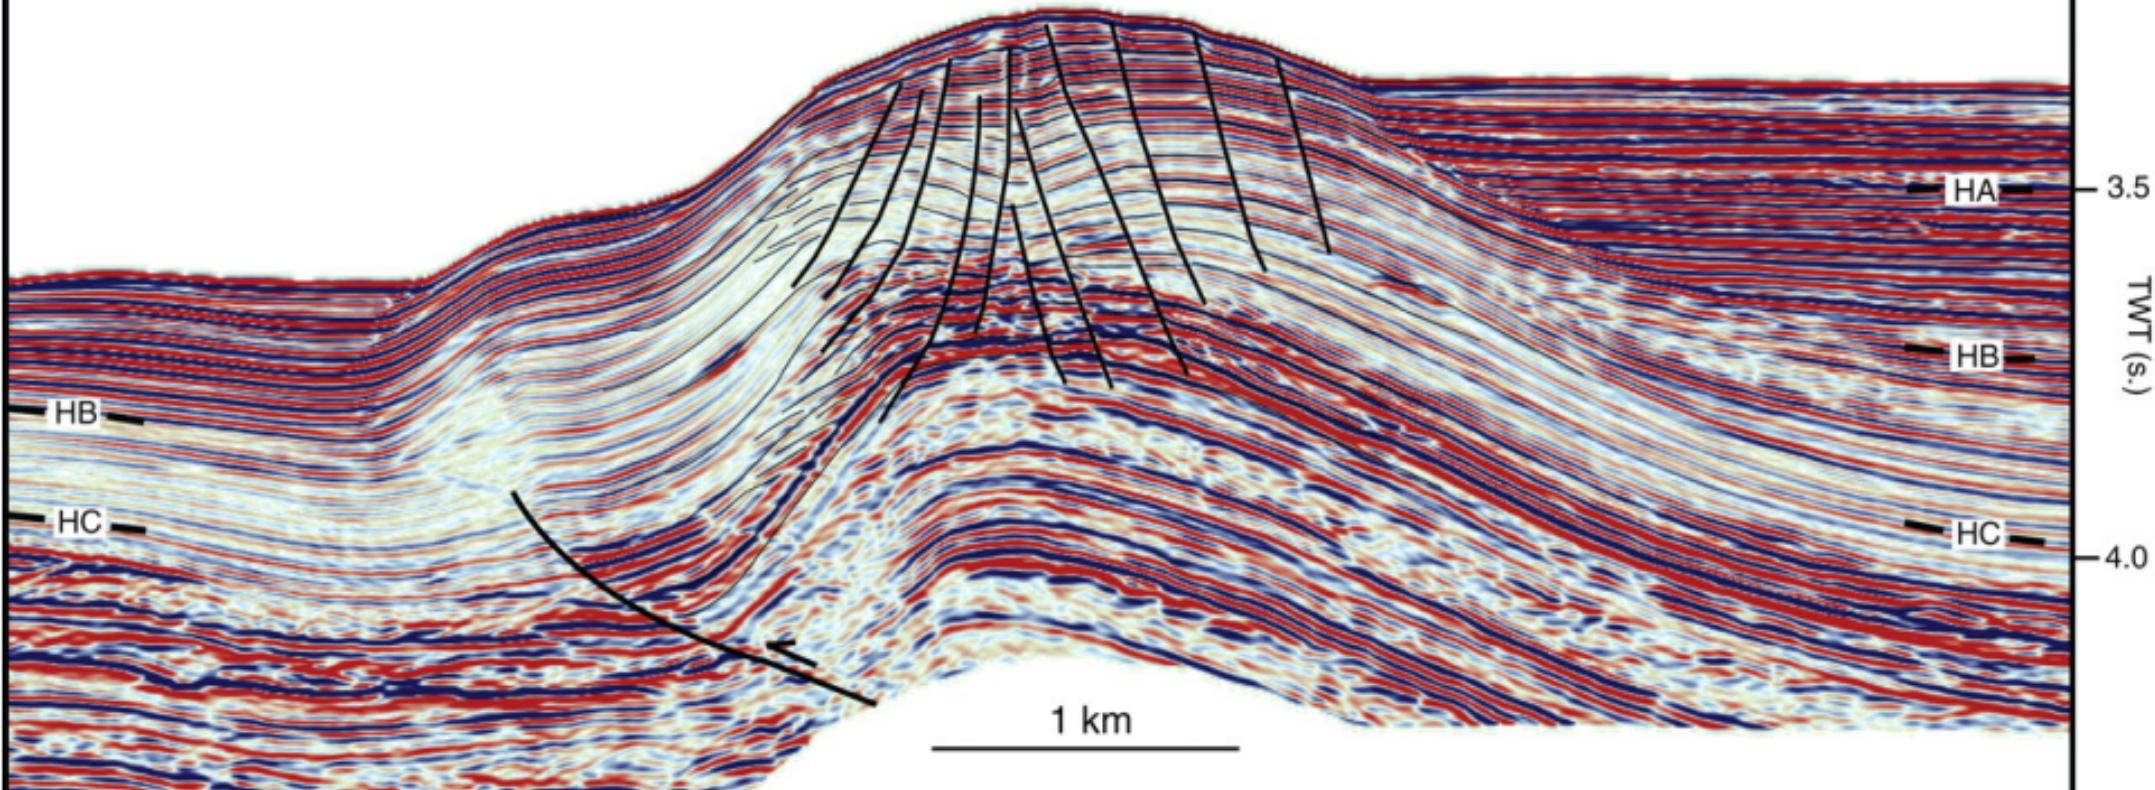

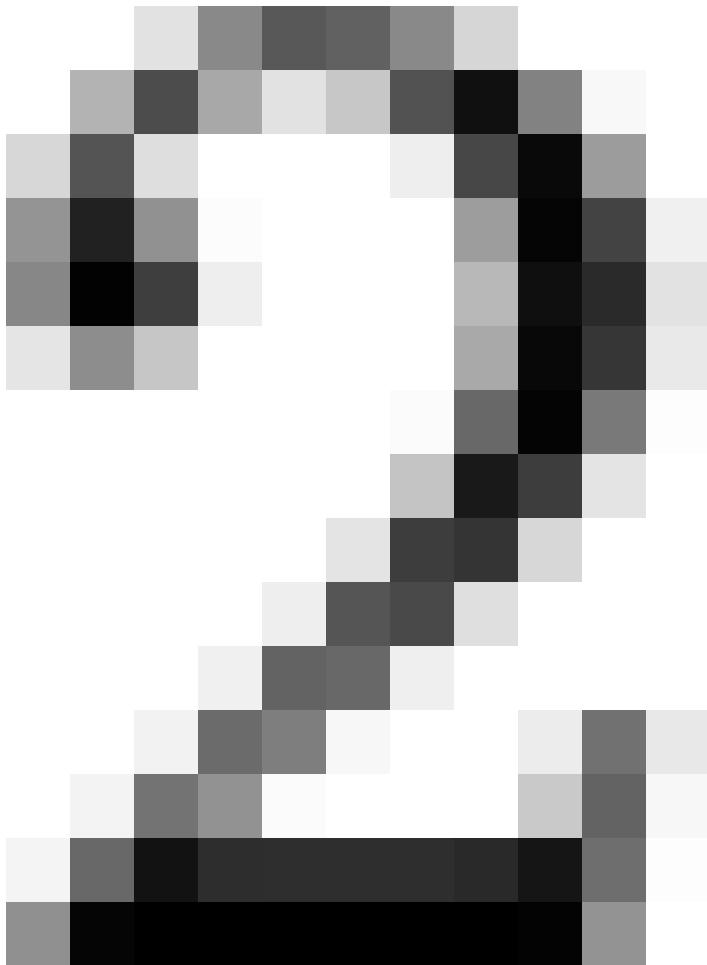



~1850



~2010



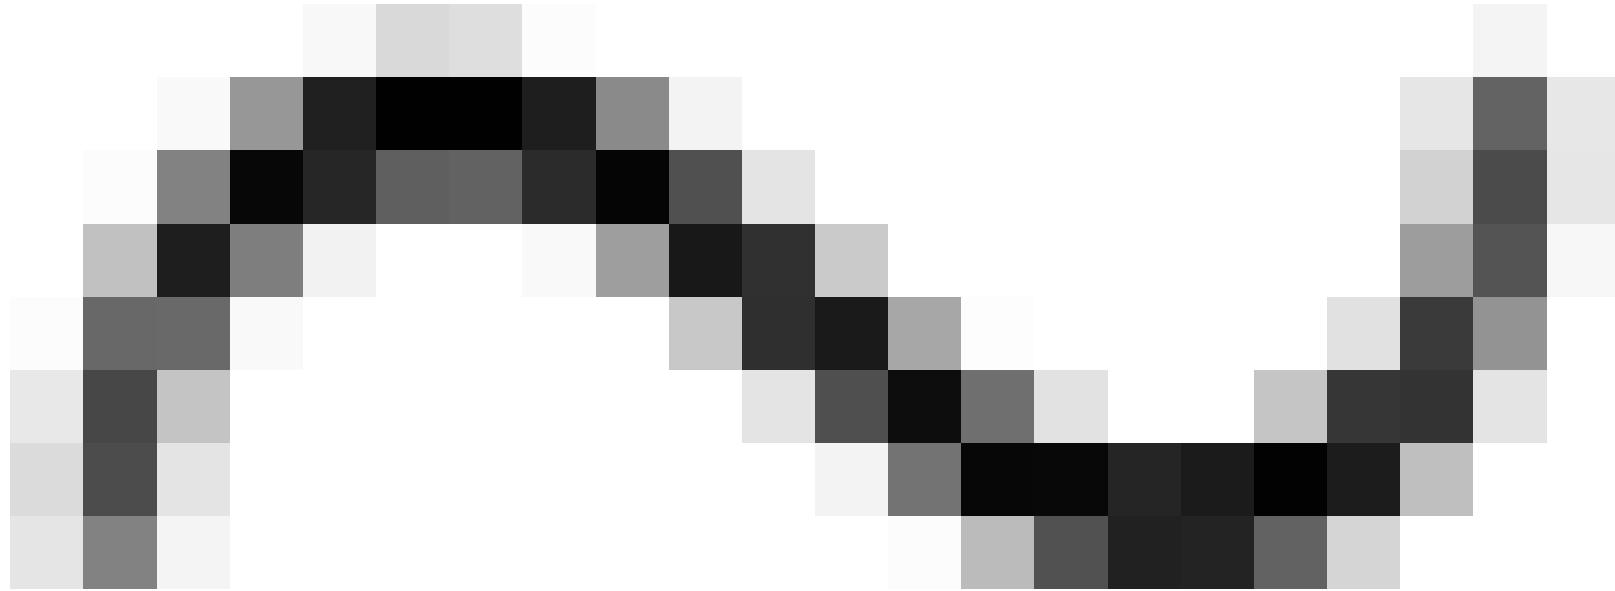

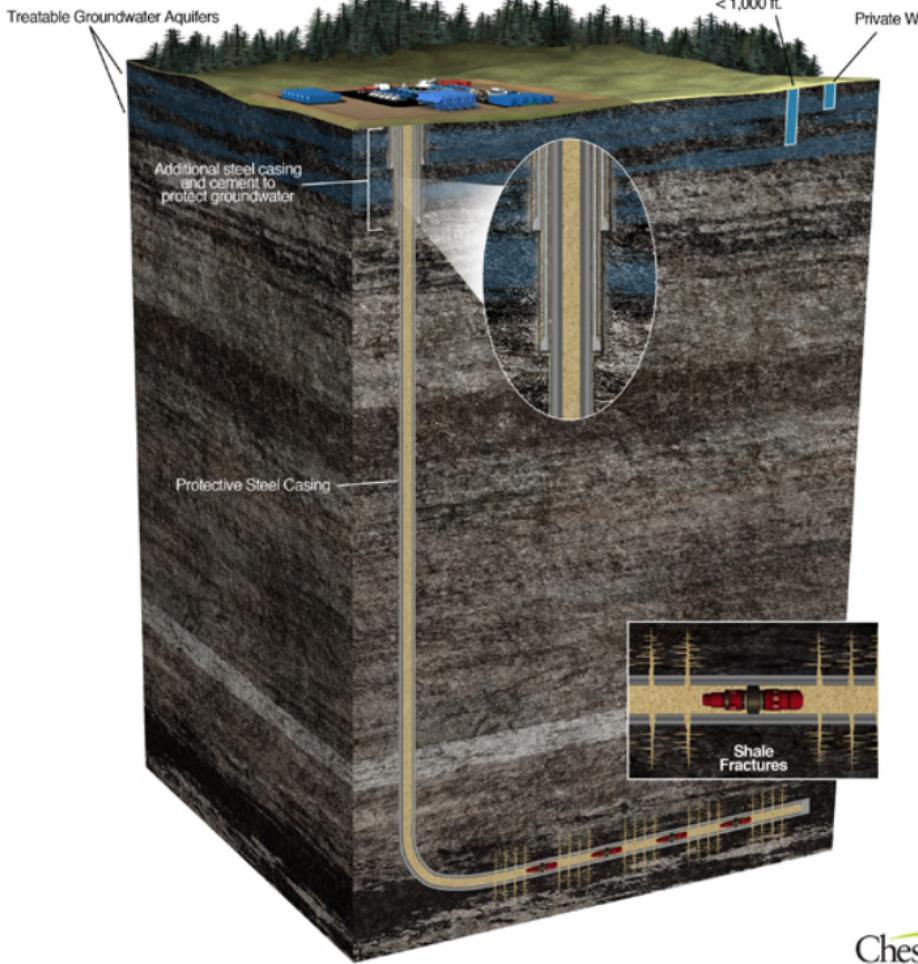

Risk-Based
Geomechanical
Screening

Stress Man

MUDLINE SUBSIDENCE



FAULT ACTIVATION

CASING CRUSHING

COMPACTION DRIVE

CASING
SHEAR

SAND PRODUCTION



RESERVOIR YIELD


PERMEABILITY LOSS

CASING BUCKLING


S_V






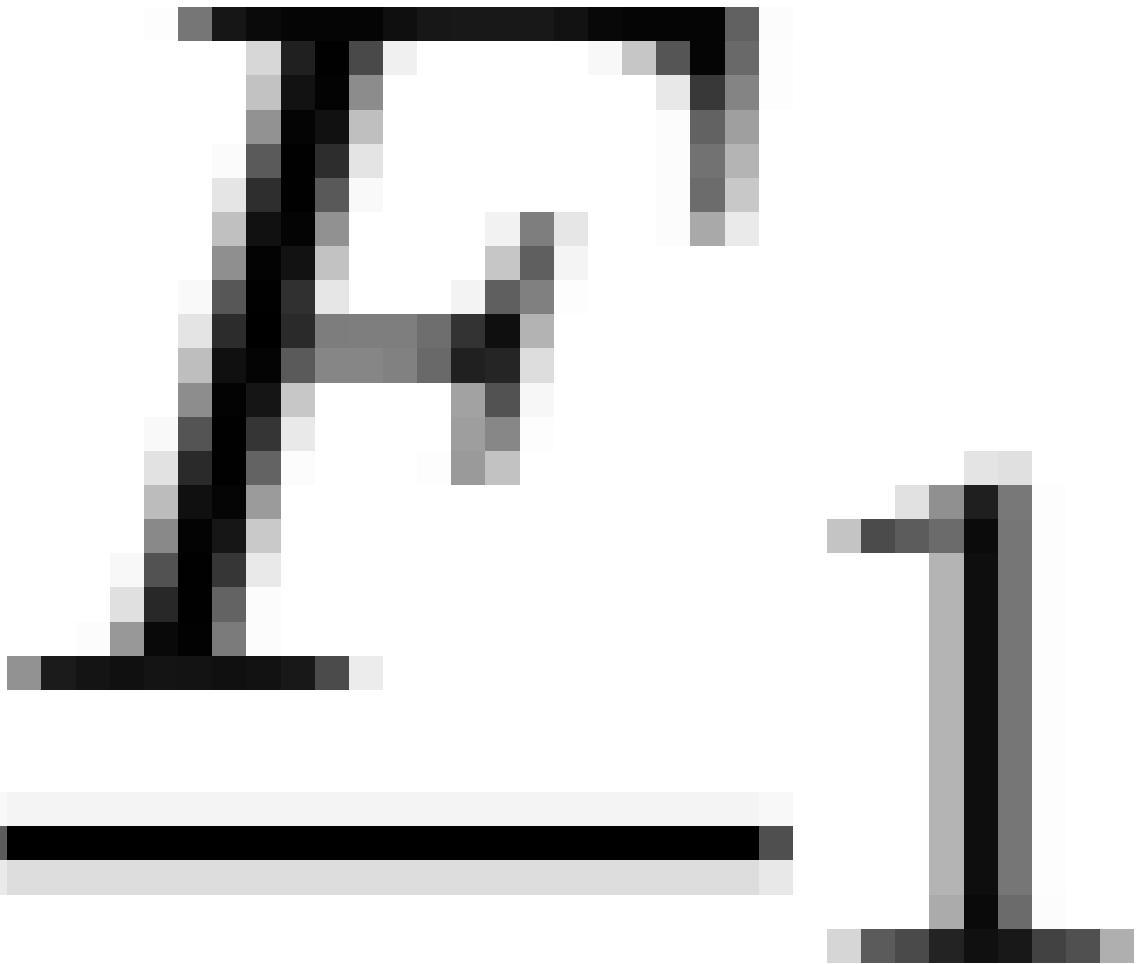





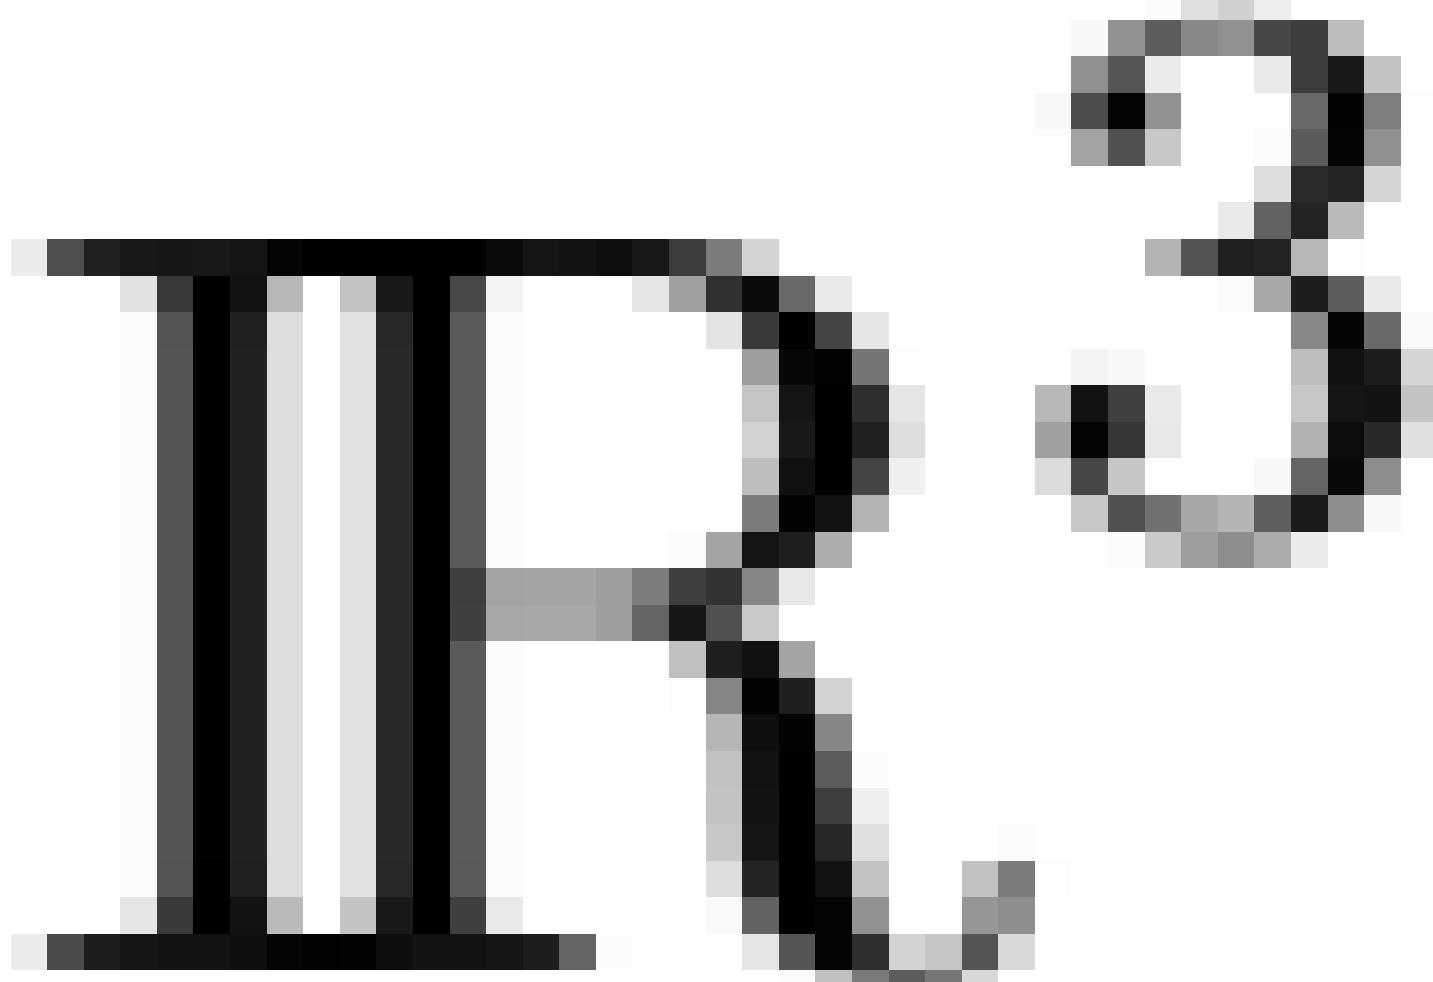


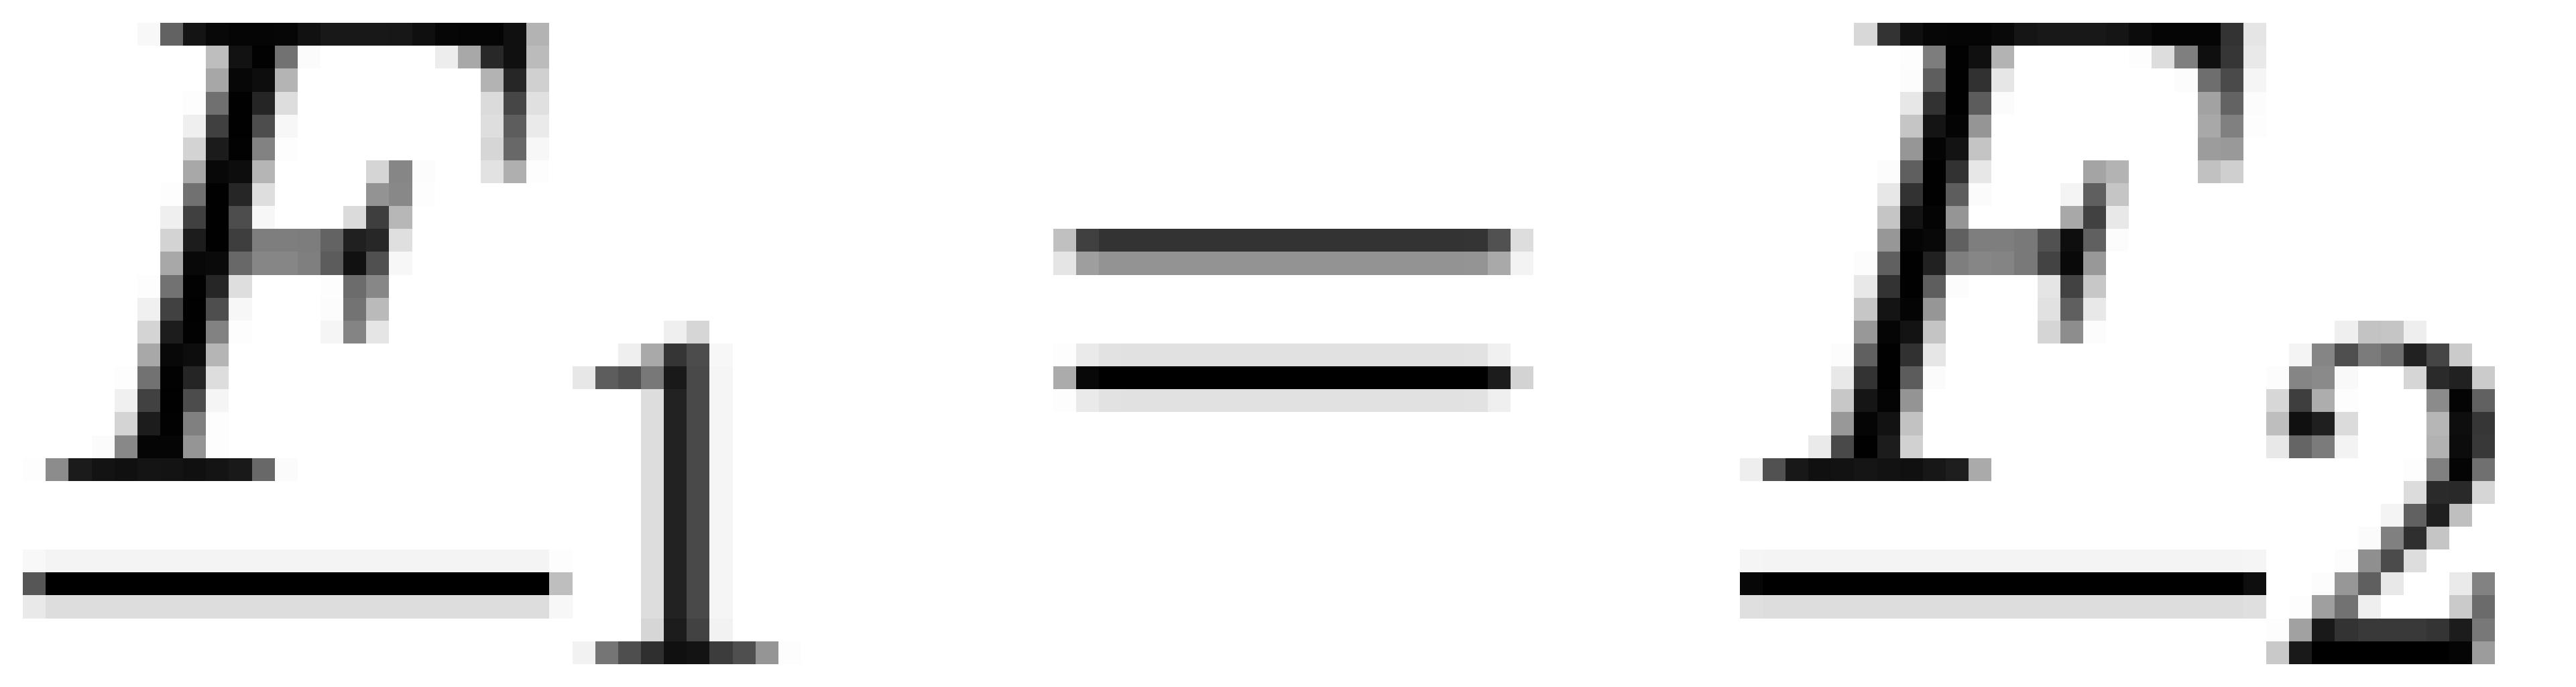



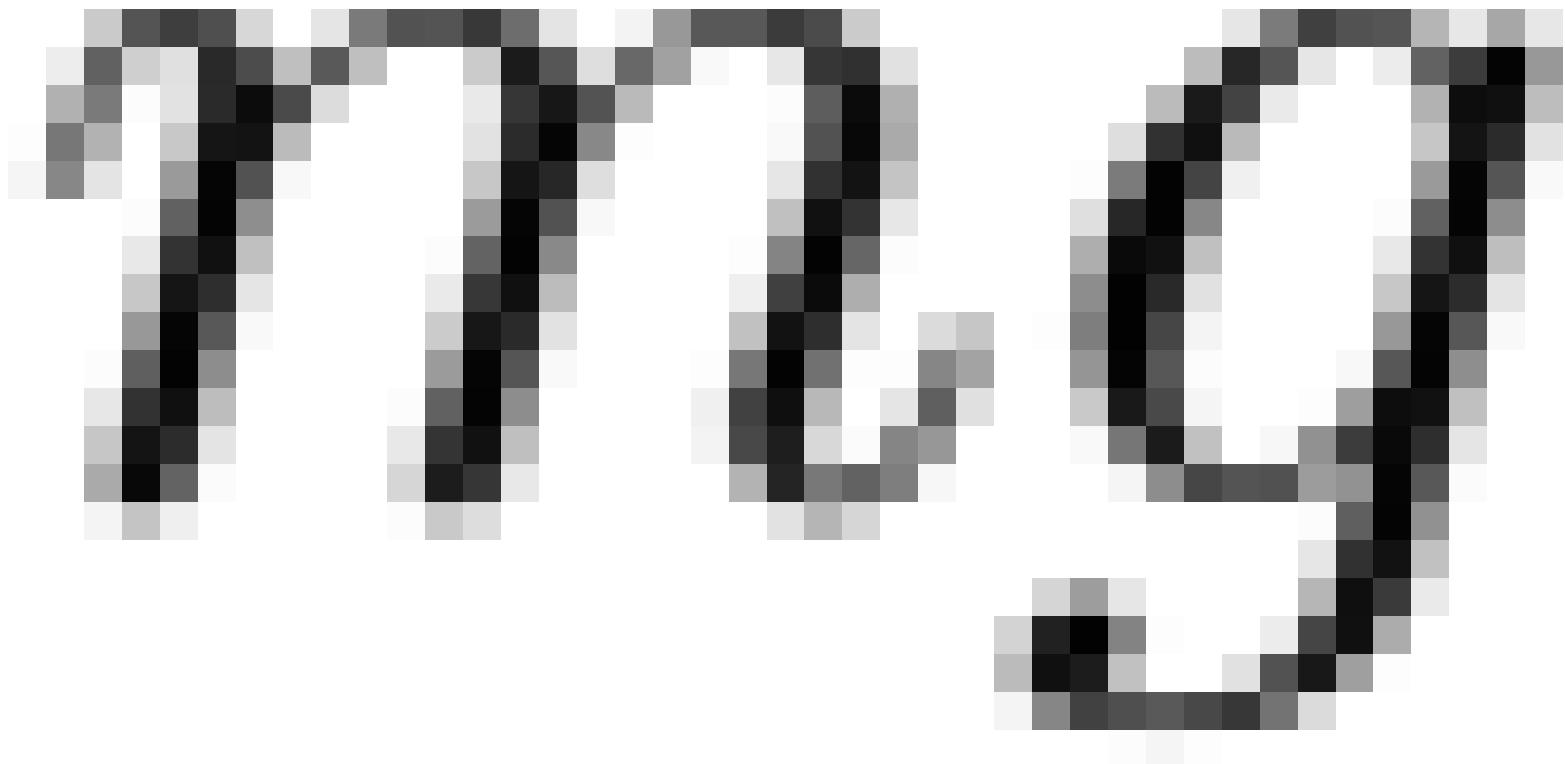

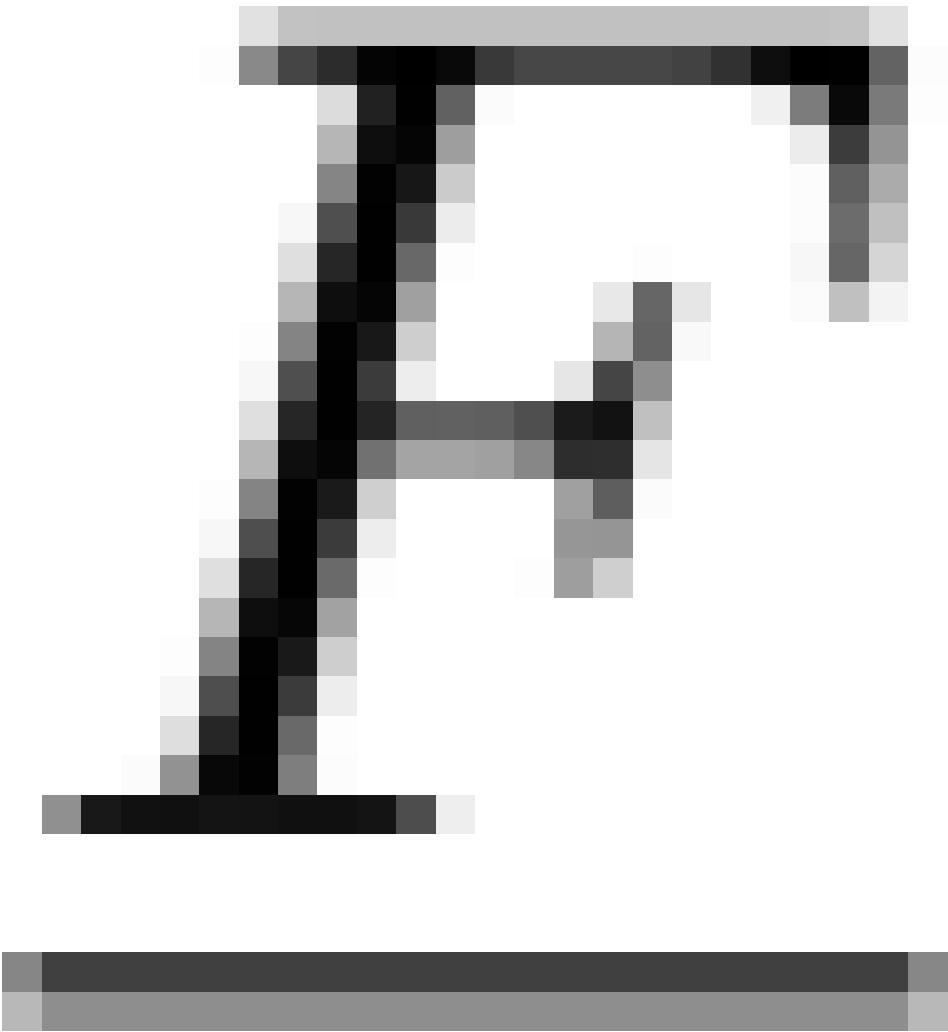

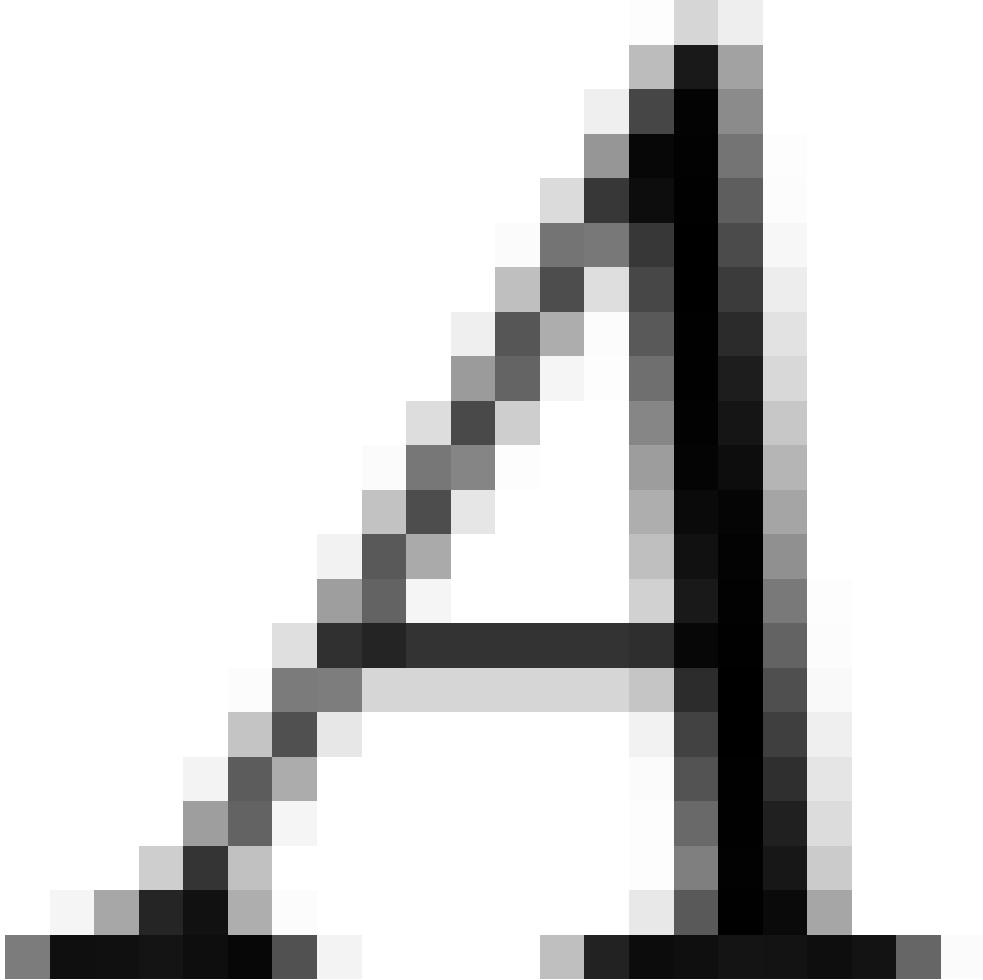

E

S

S


A

S


C



$$\Sigma F_z = +\underline{F}_1 - \underline{F}_2 = 0$$


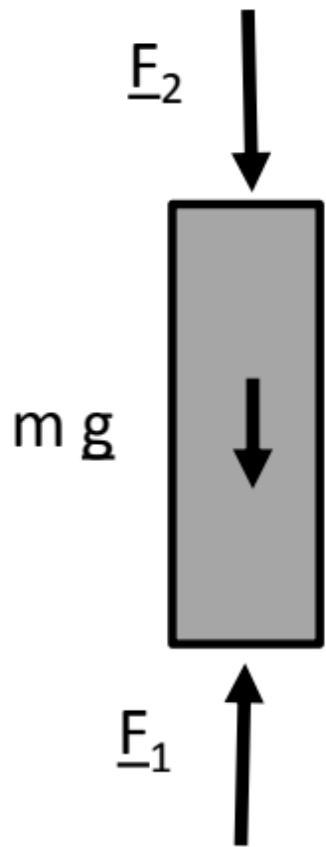




$$\Sigma F_z = +\underline{F}_1 - m g - \underline{F}_2$$


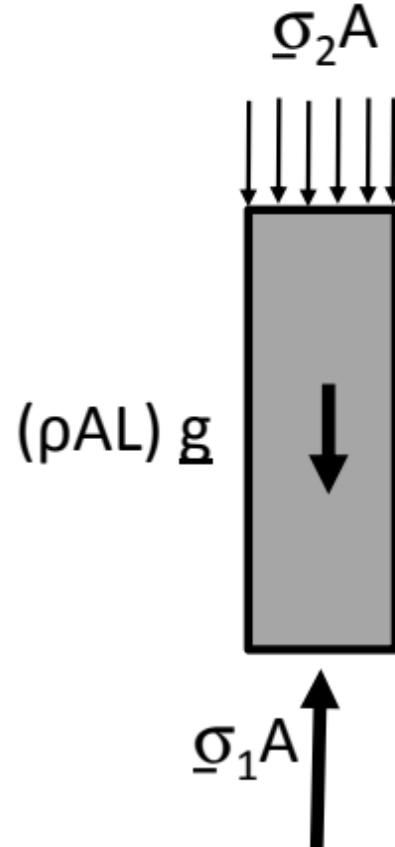


$$\Sigma F_z = +\underline{\sigma}_1 A - (\rho A L)g - \underline{\sigma}_2 A$$



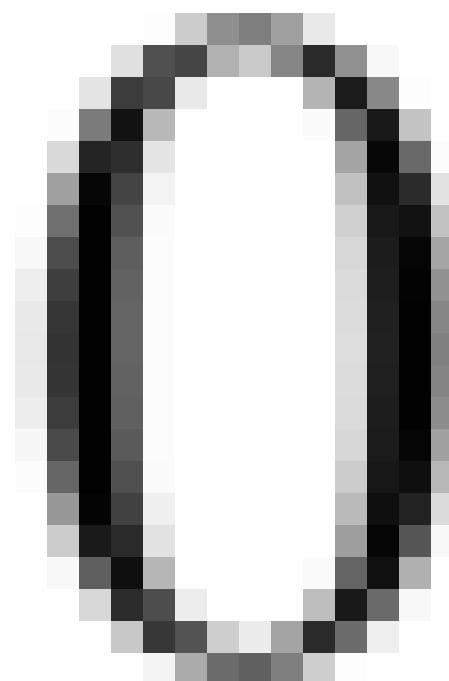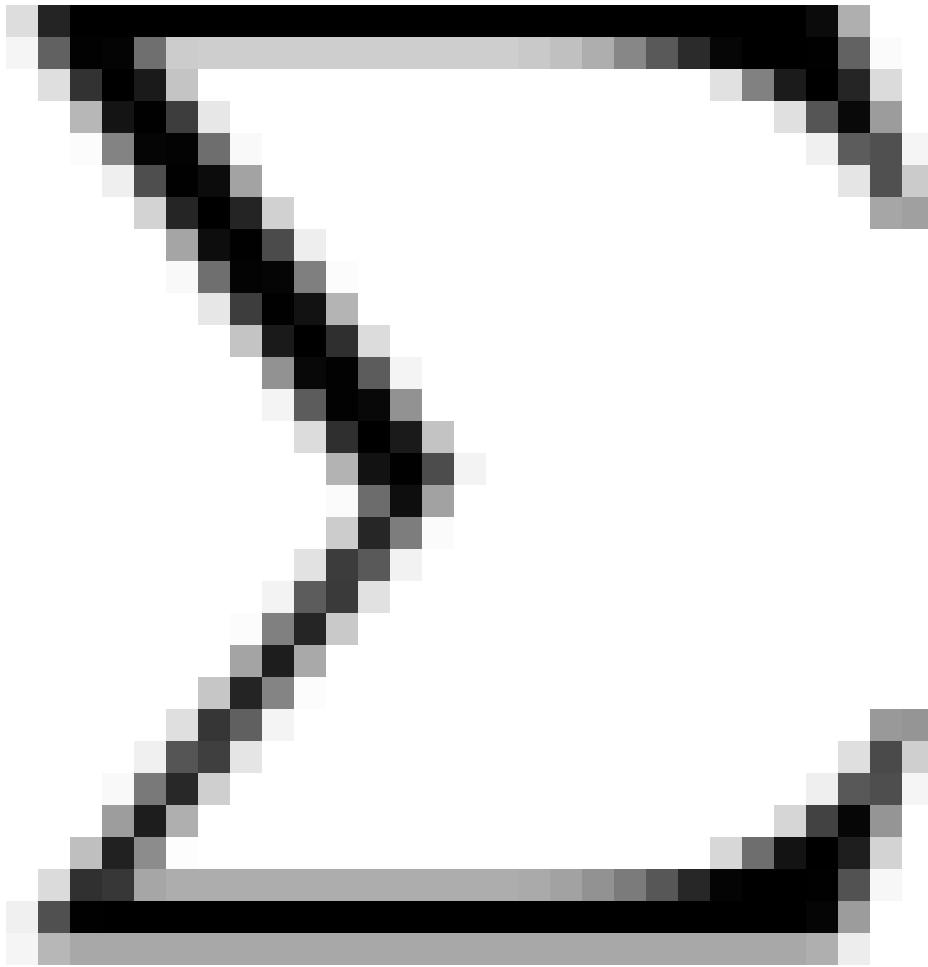

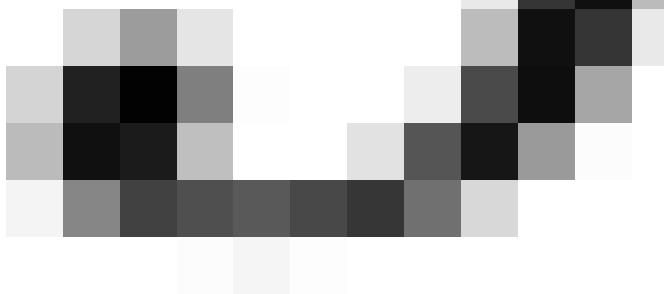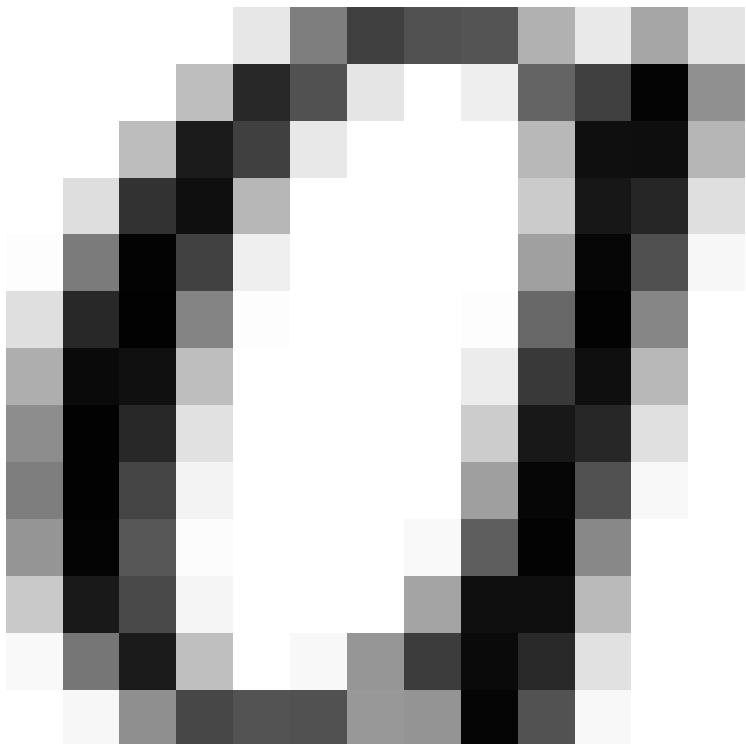

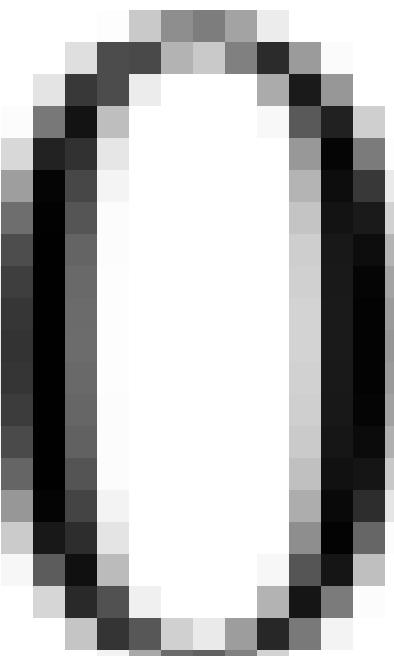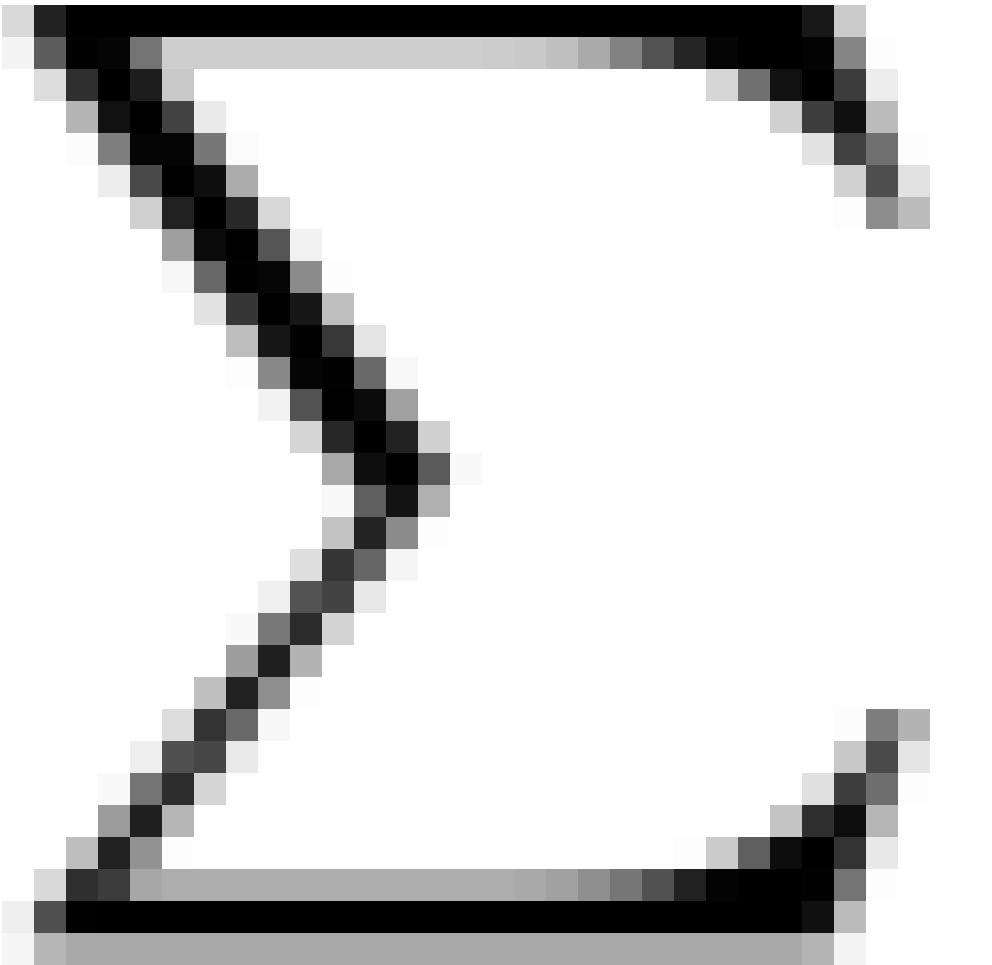






△ S₂

△ z


—


Observe 9

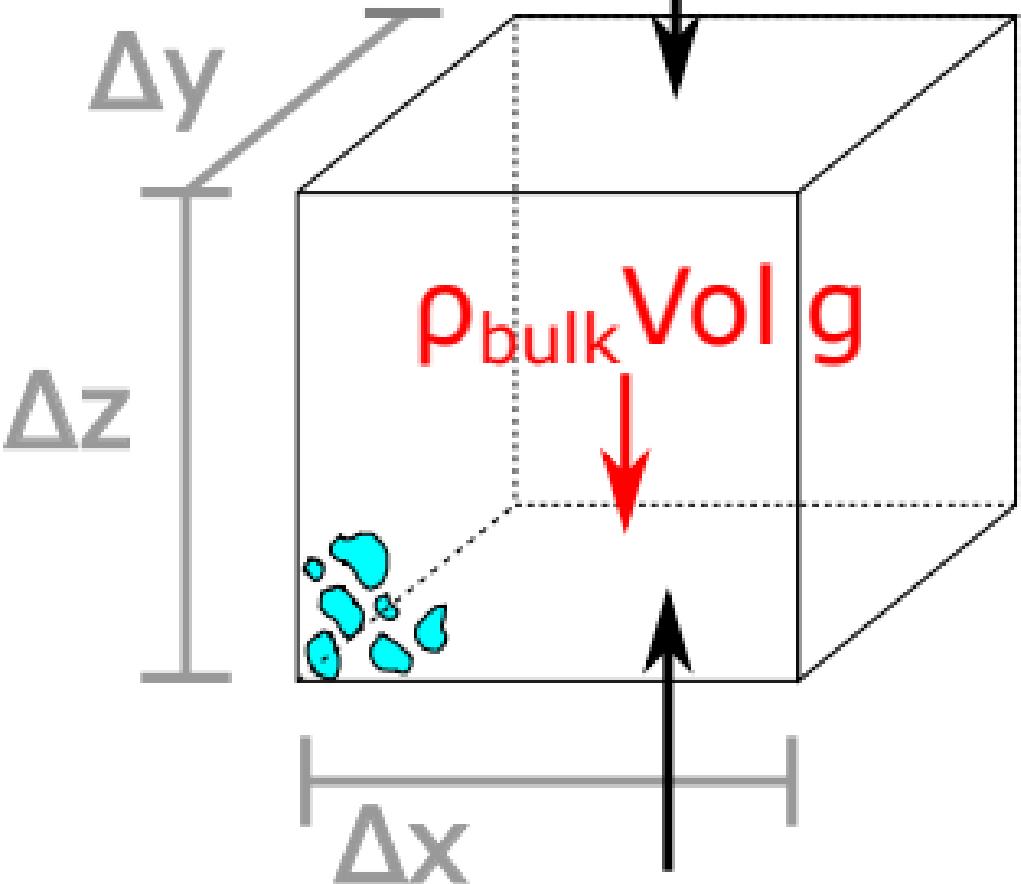
$S_v A$  $S_v A + \Delta S_v A$

$$\int_0^{S_w(z)} ds_w = \int_0^z \rho_{bulk}(z) g dz$$





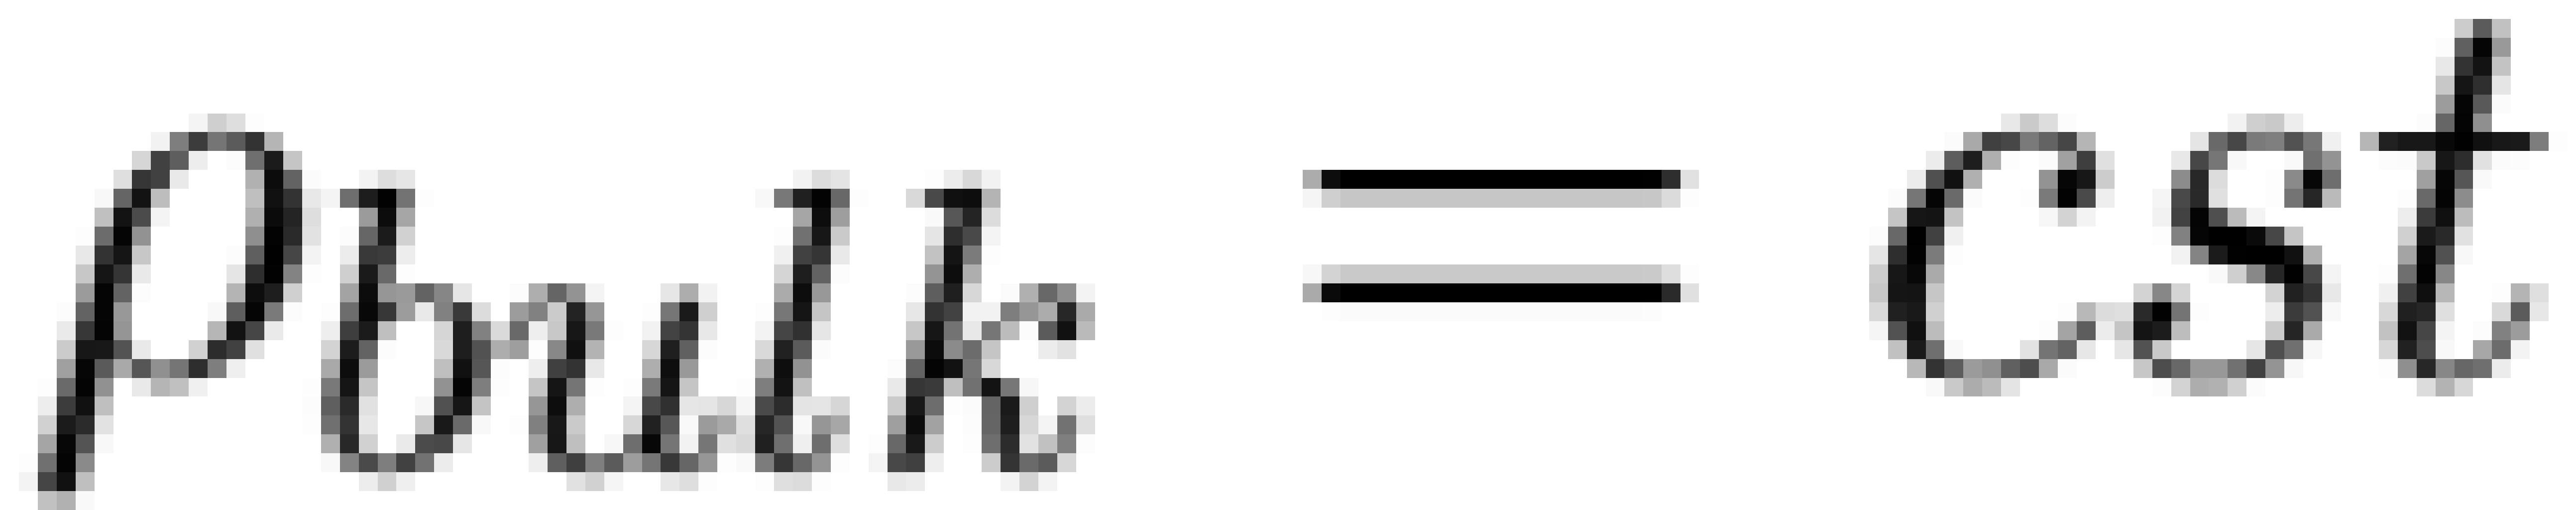

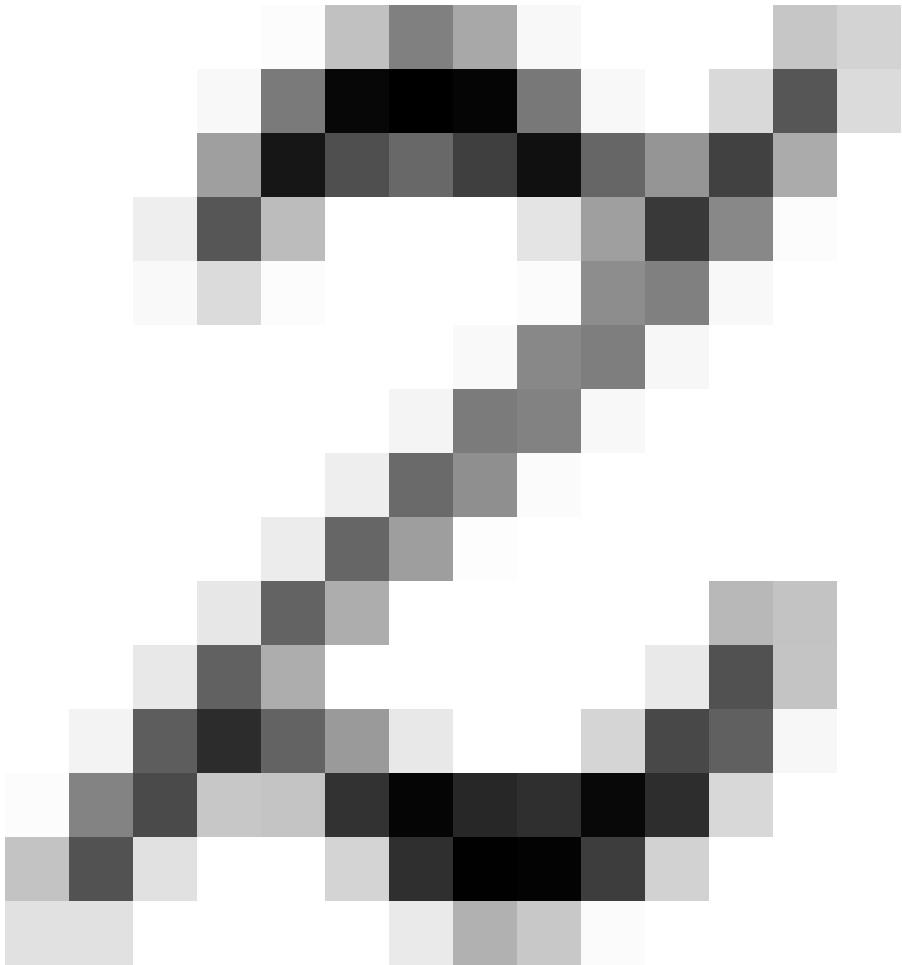















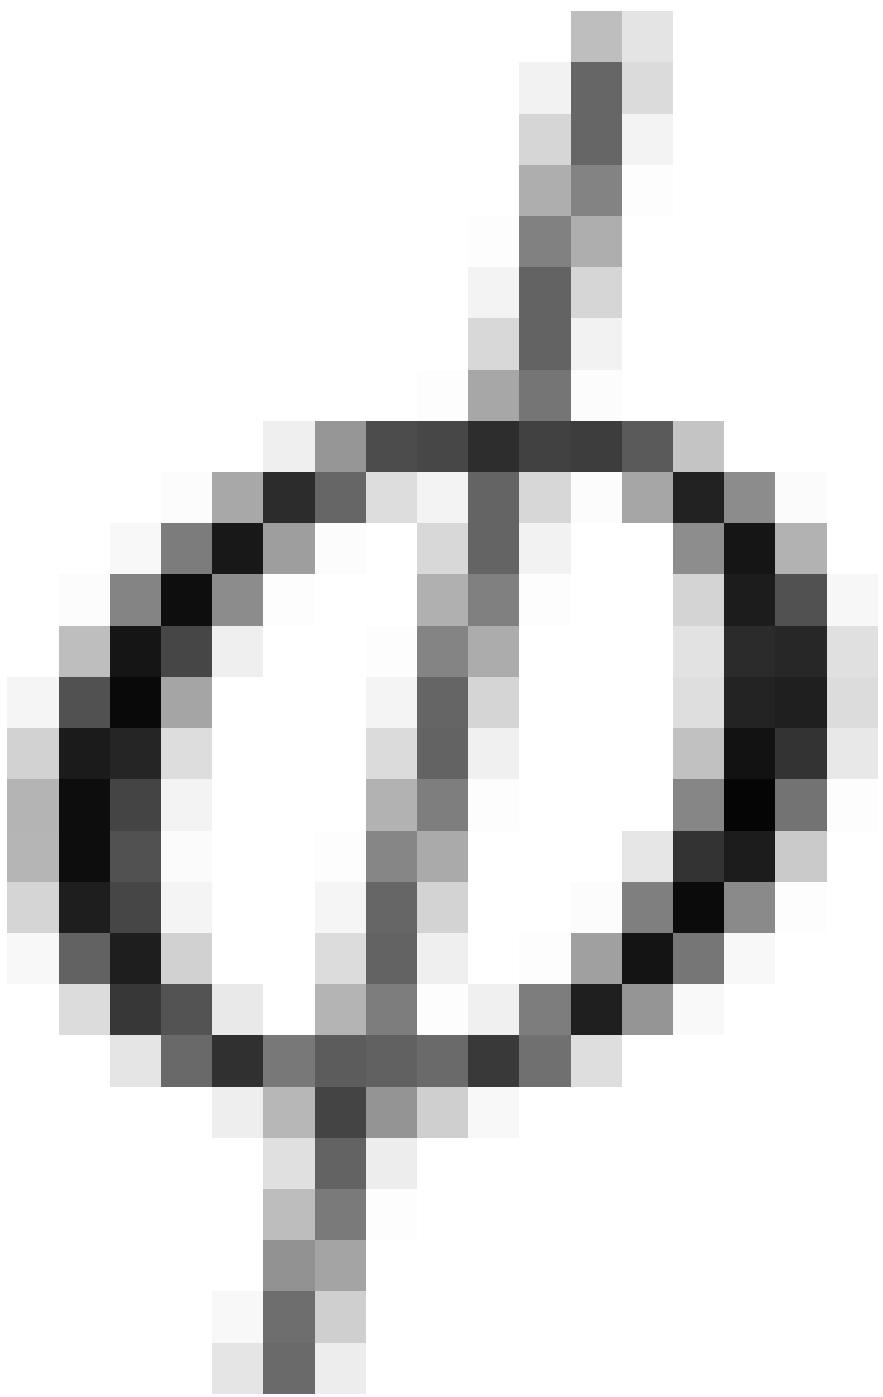





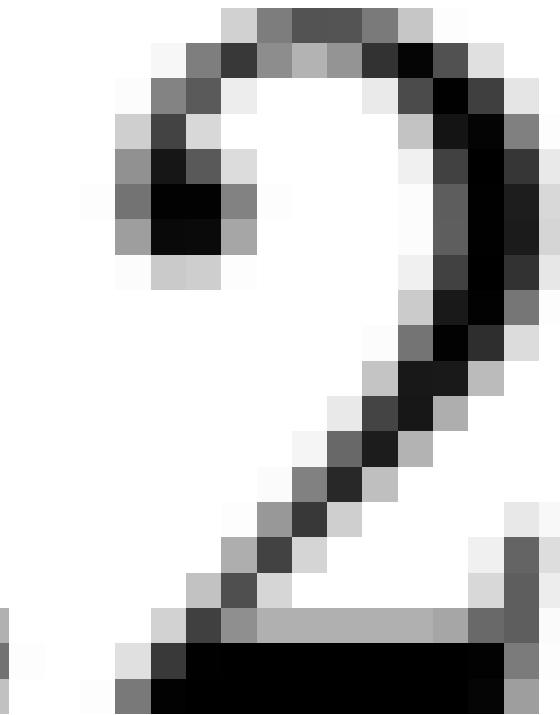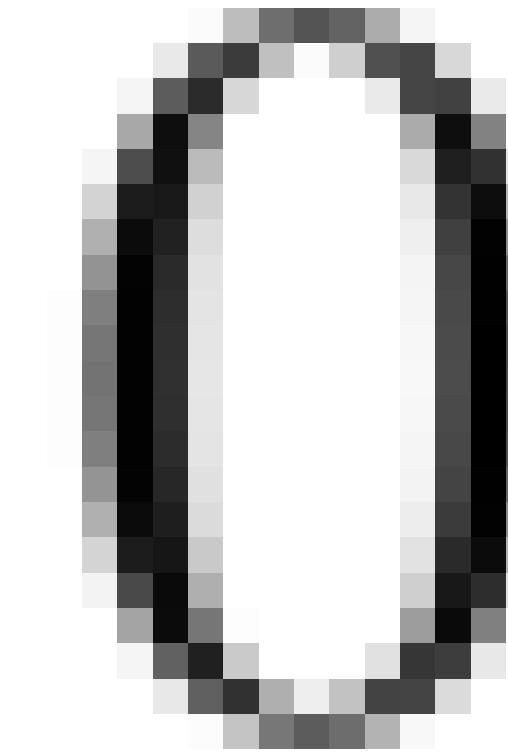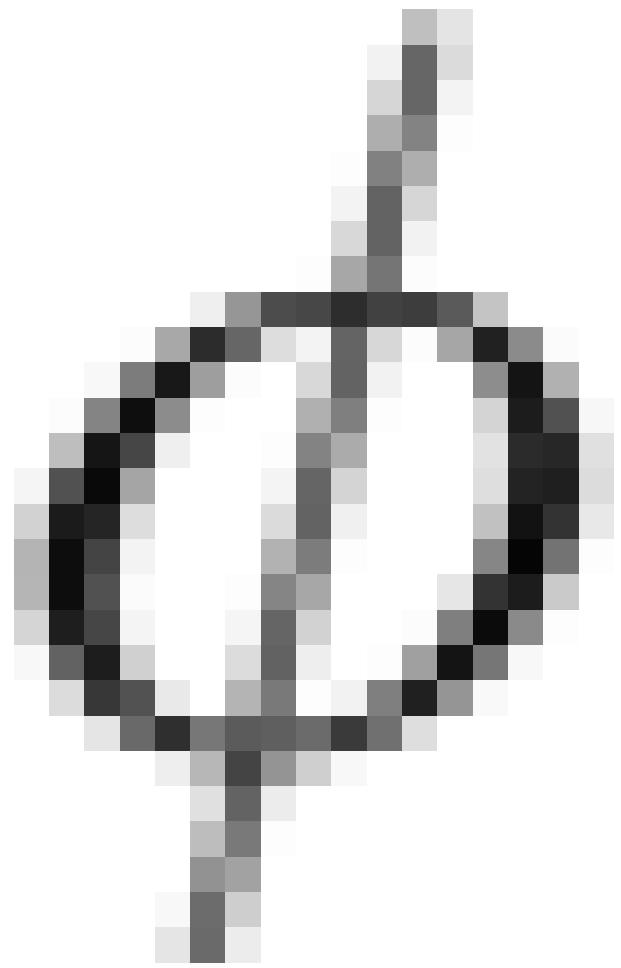





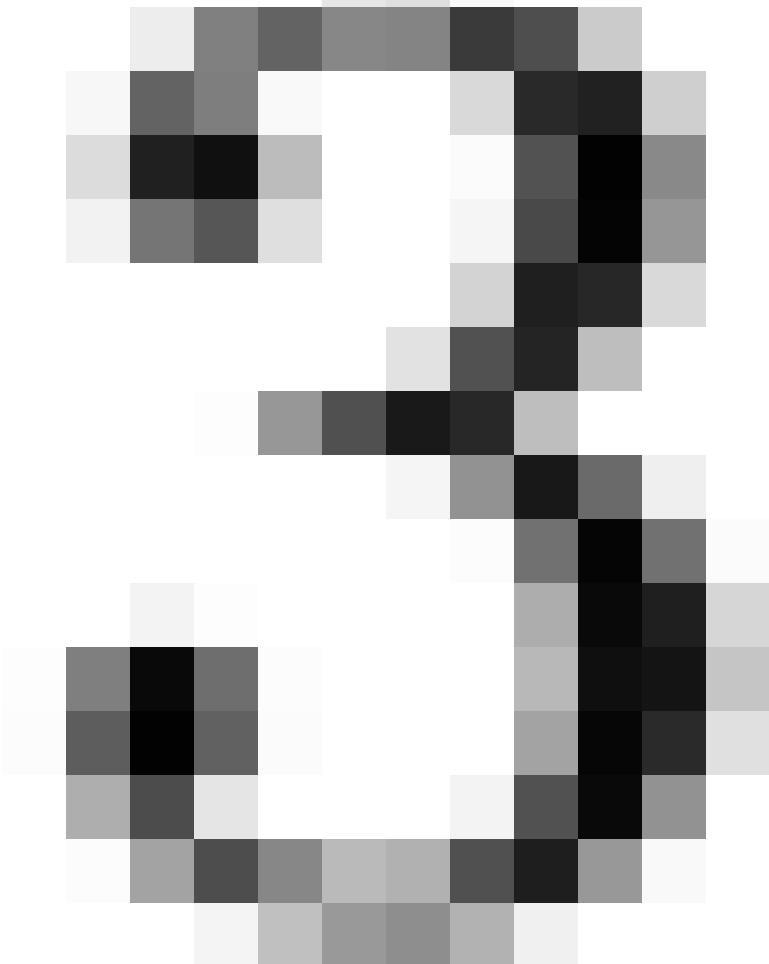


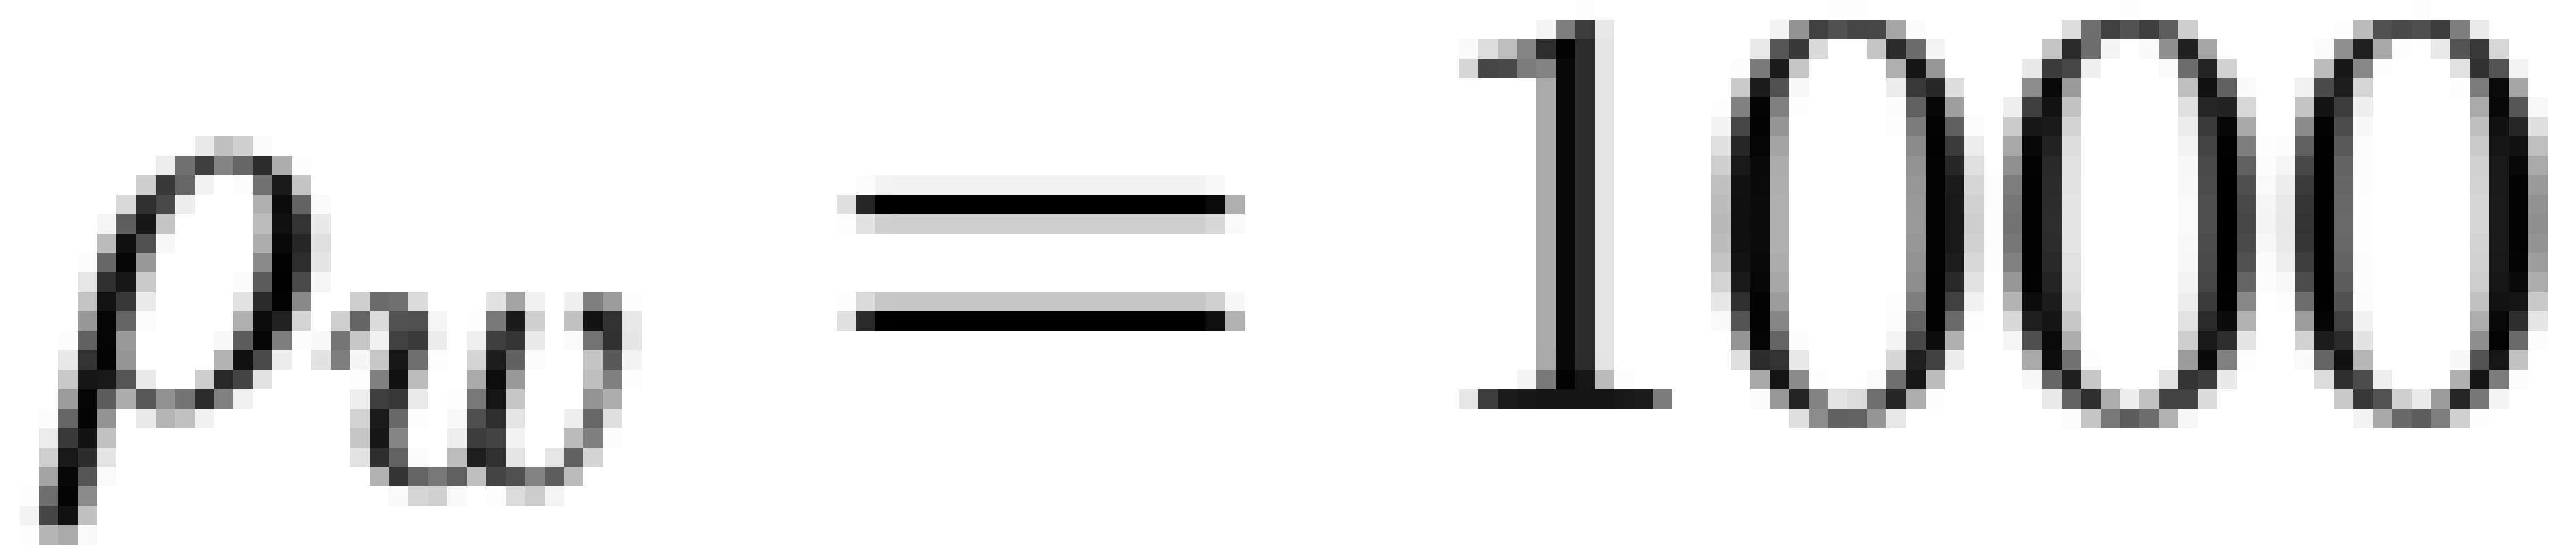




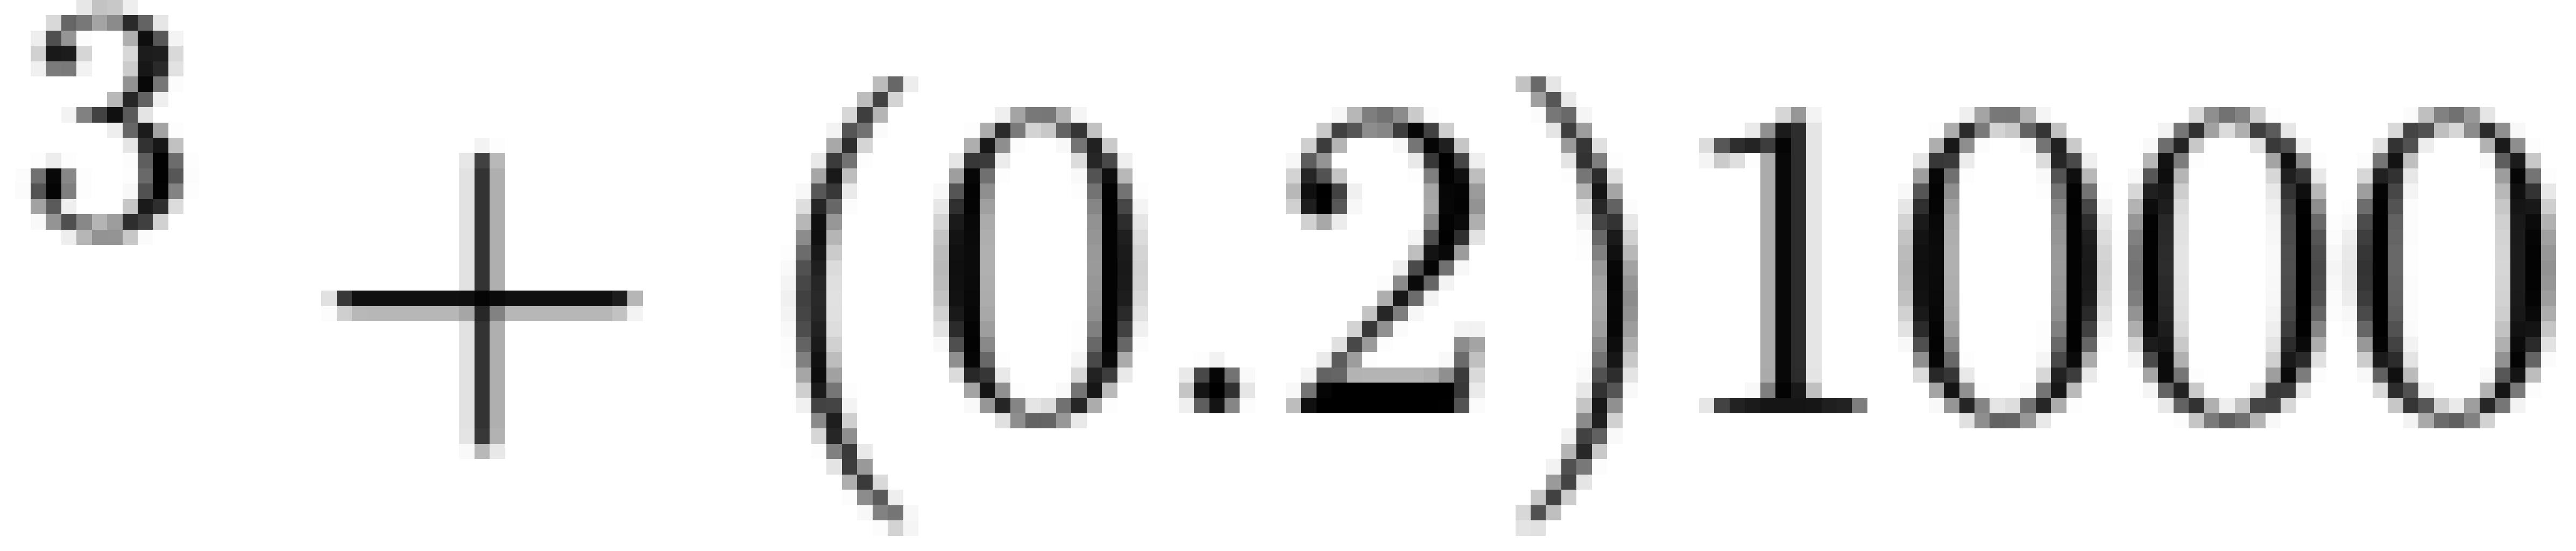











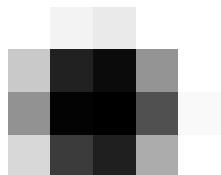
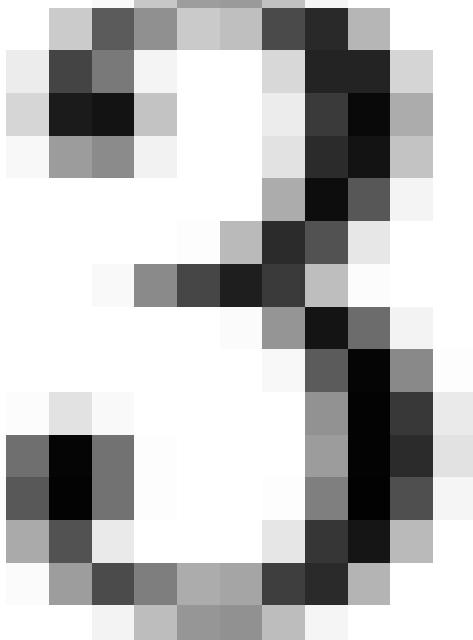



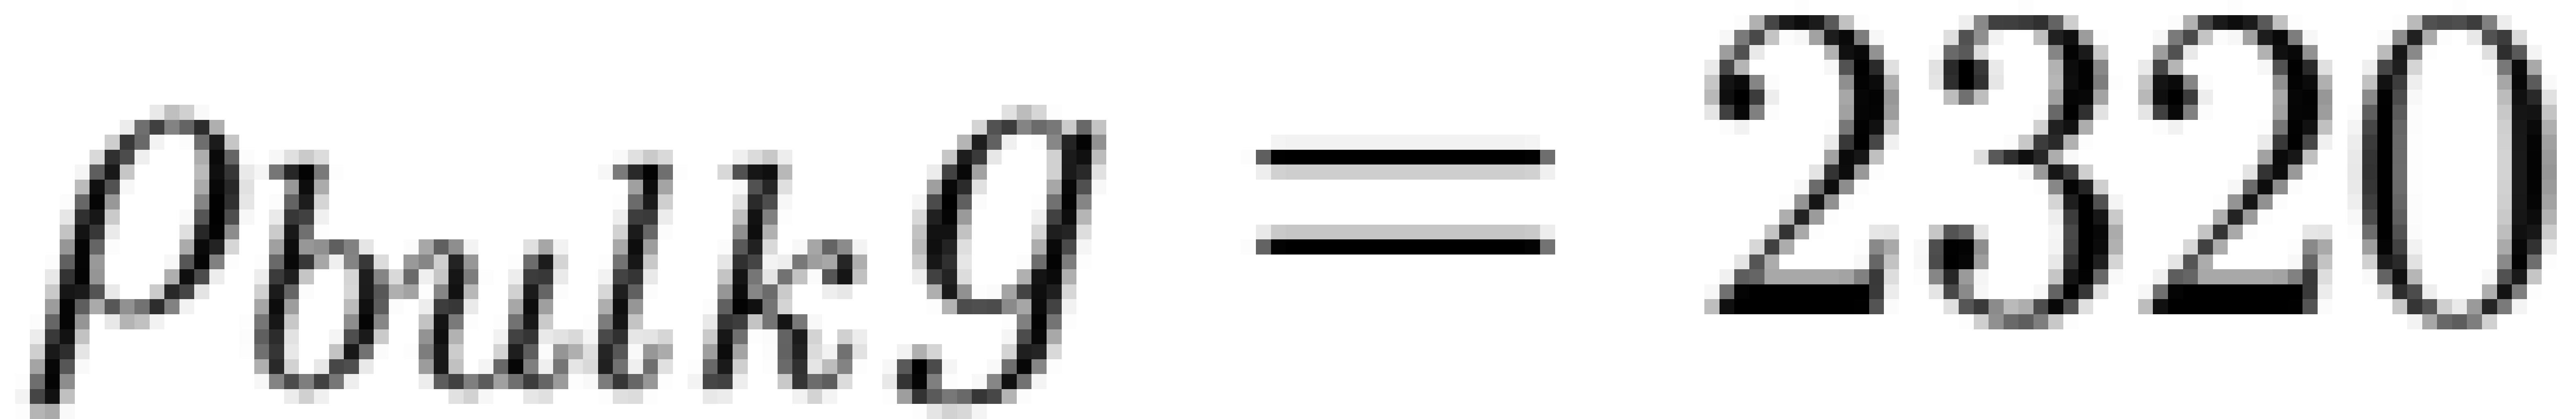










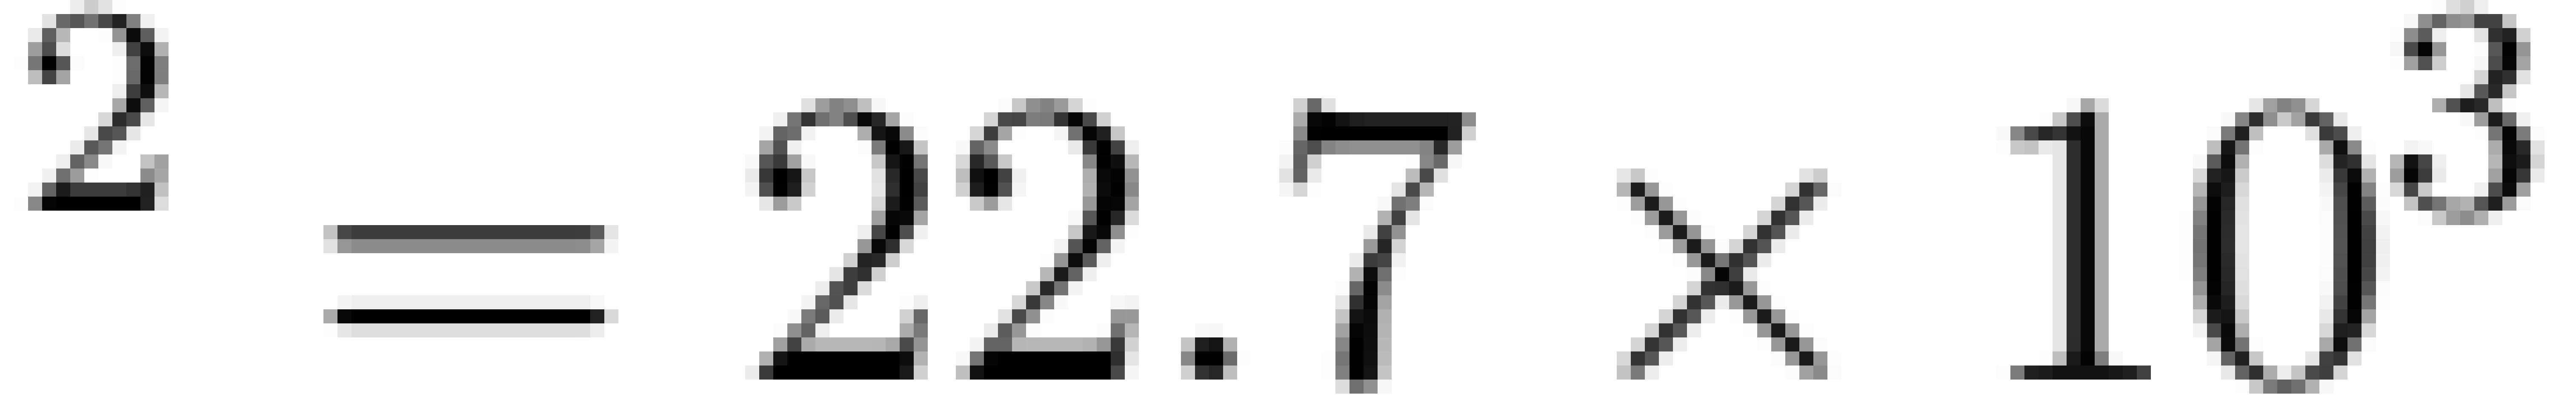


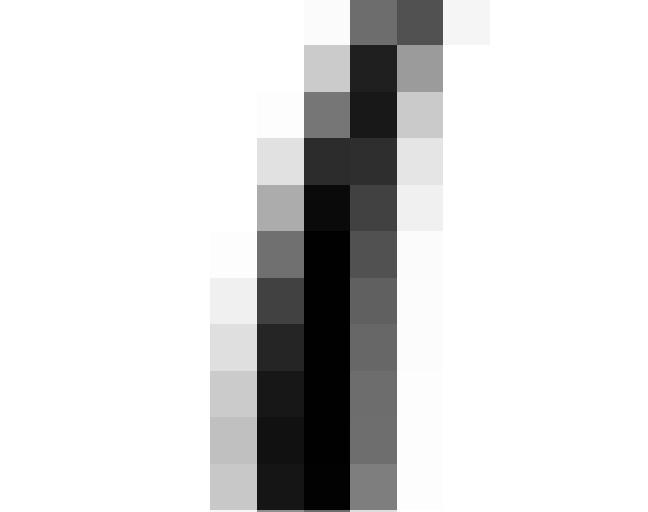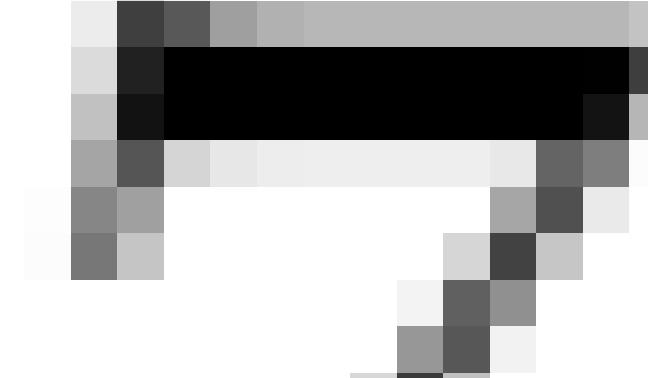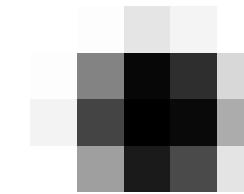
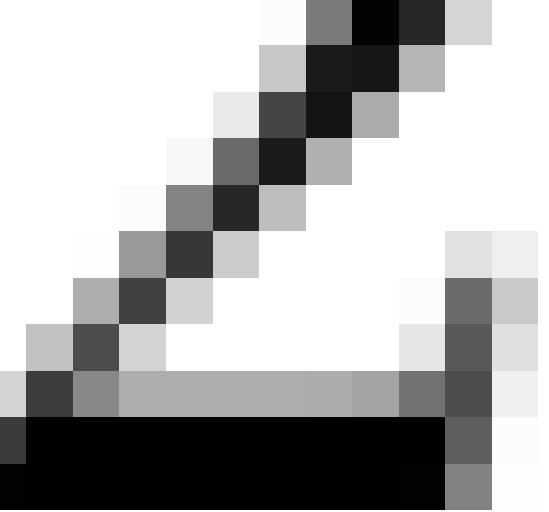
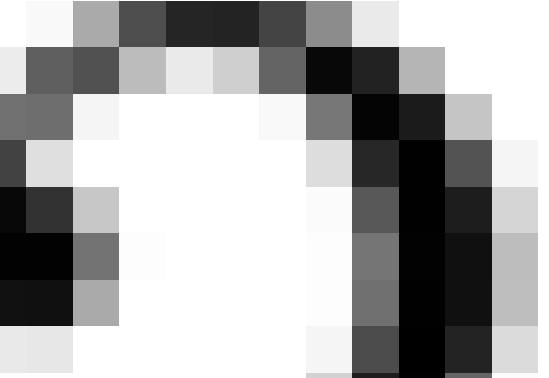
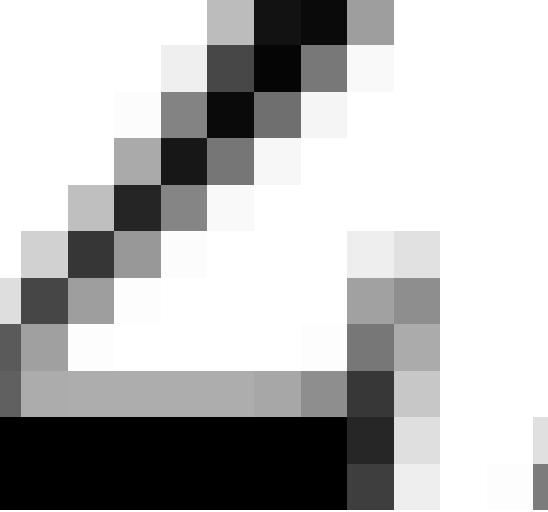
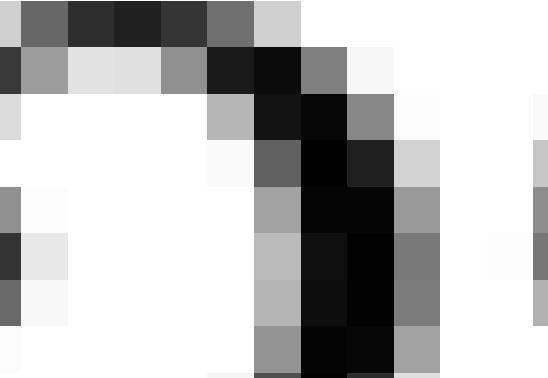



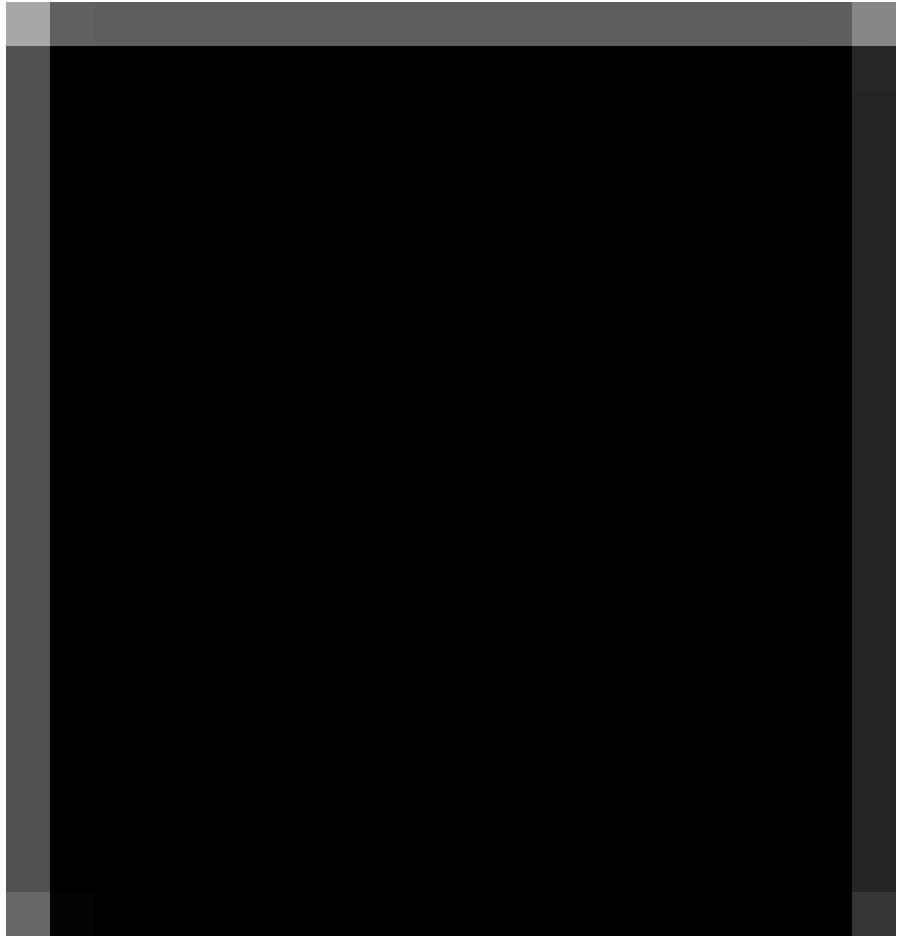
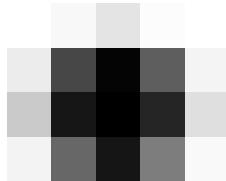


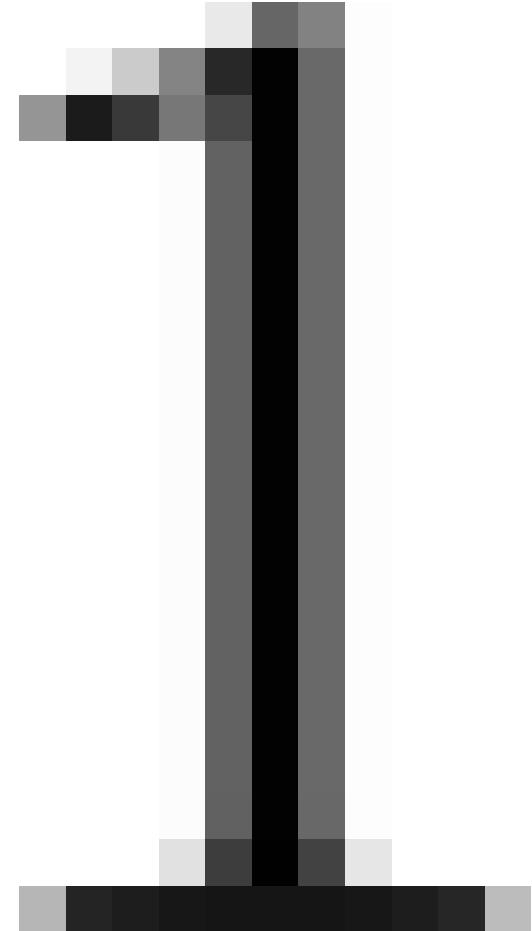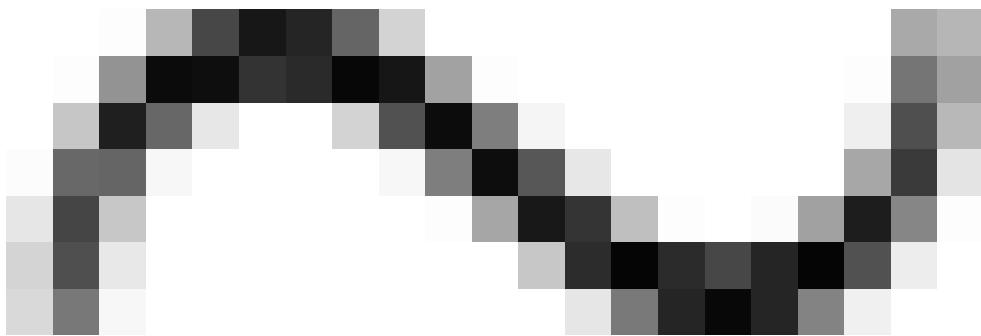

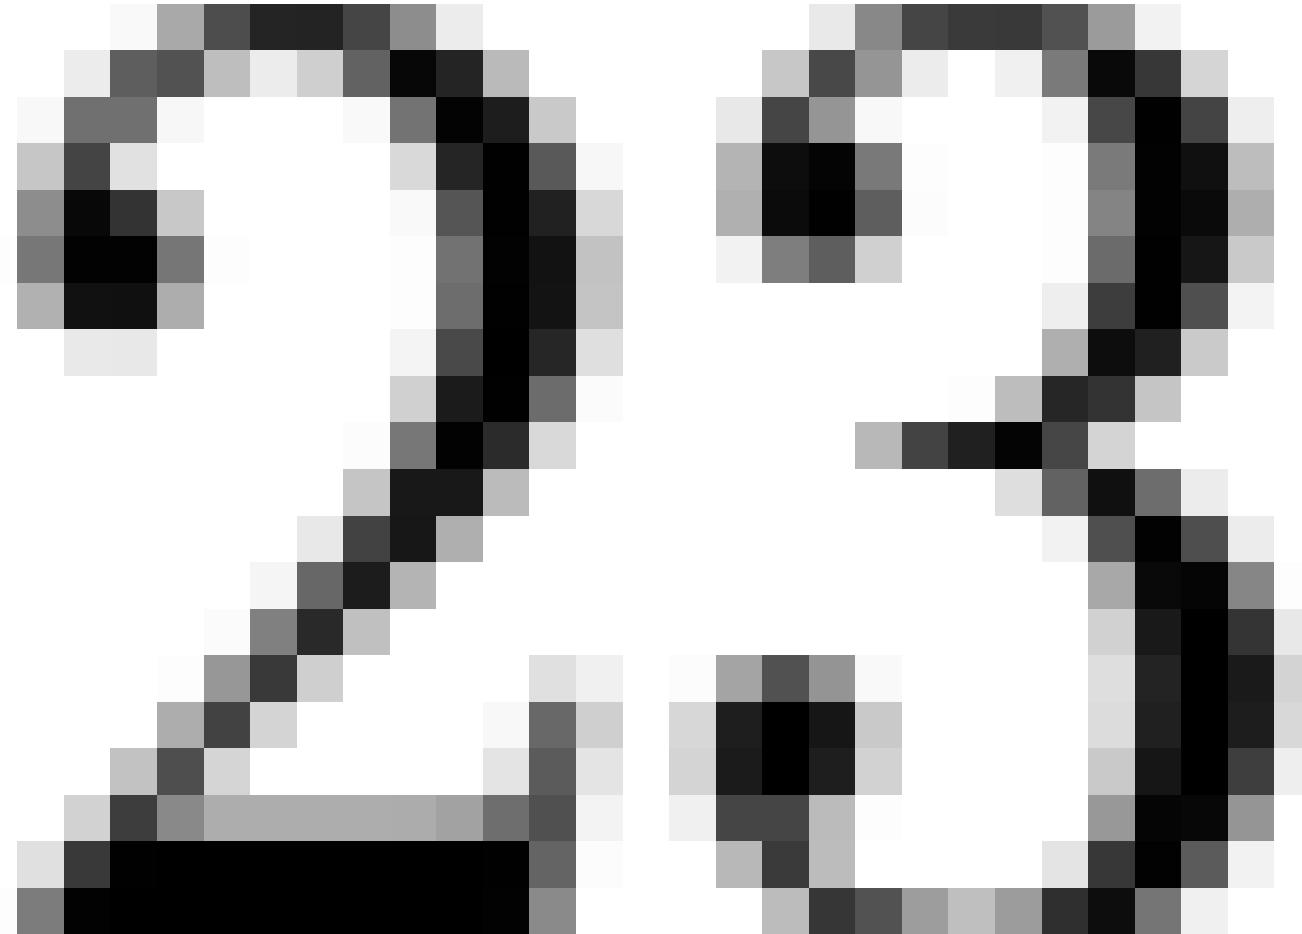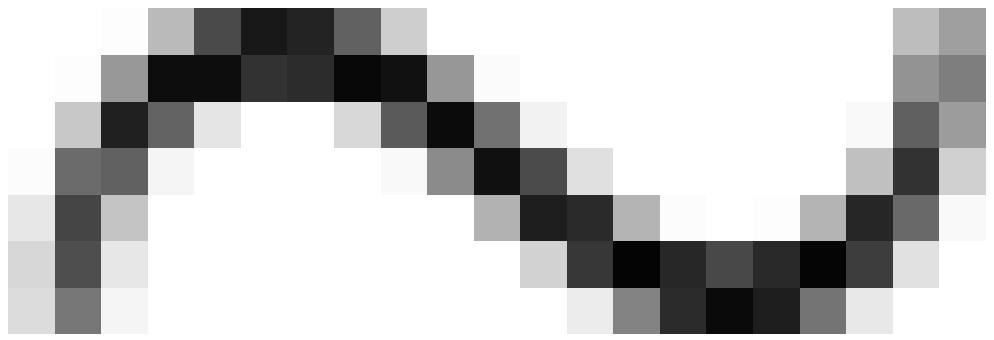


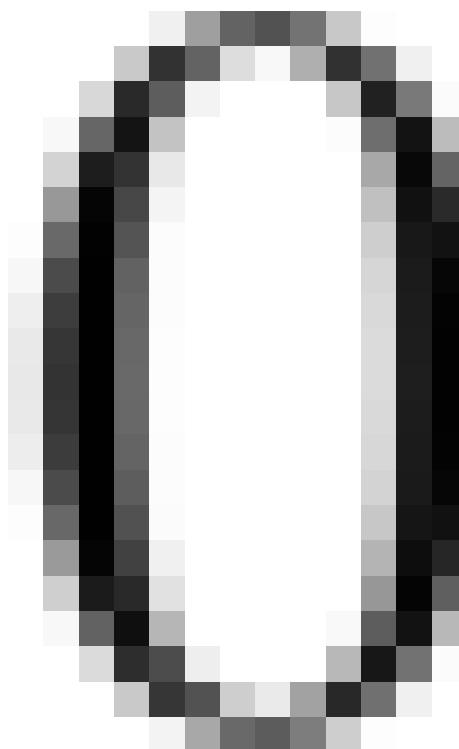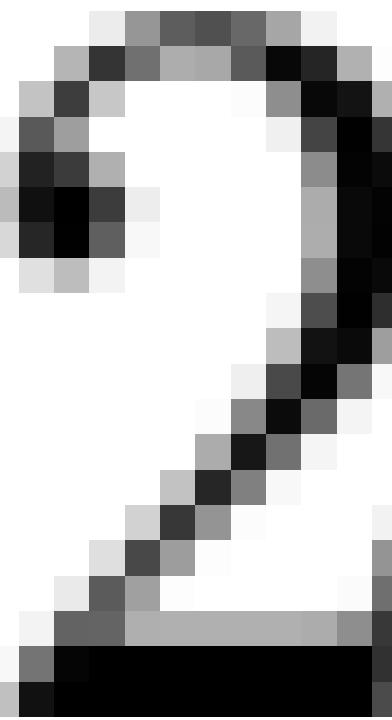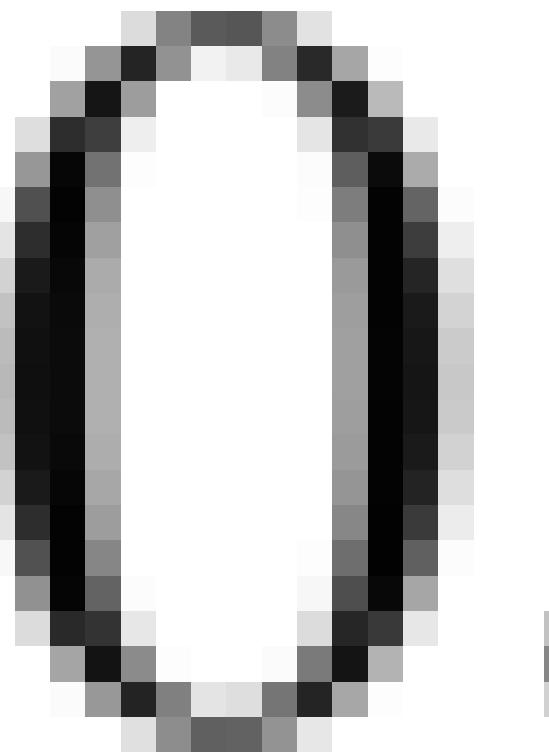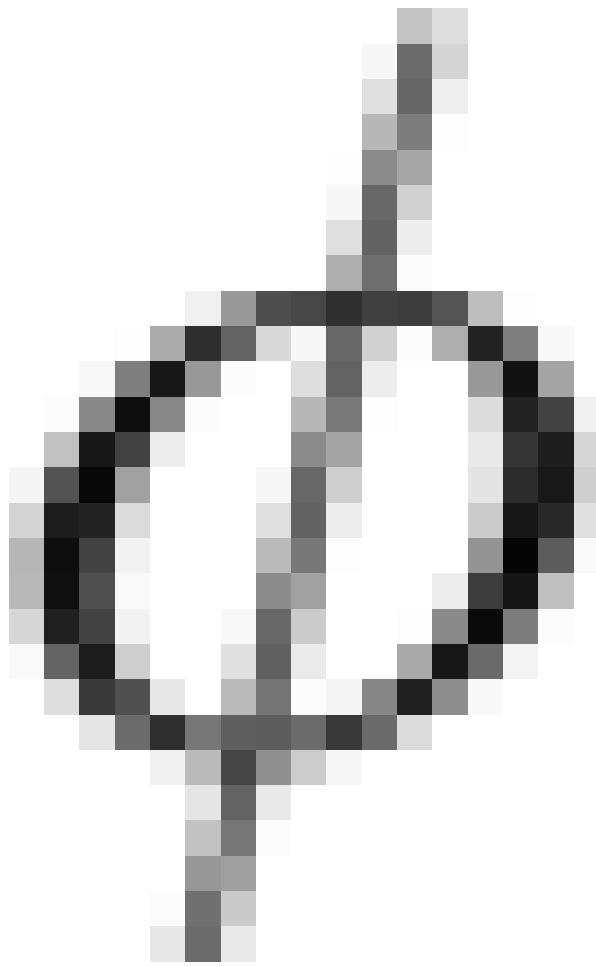

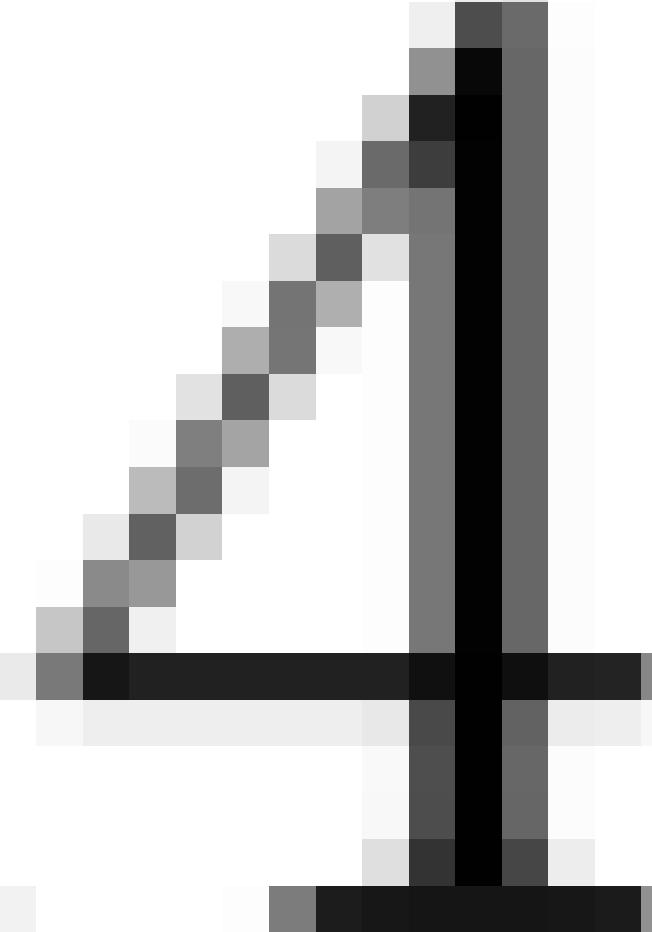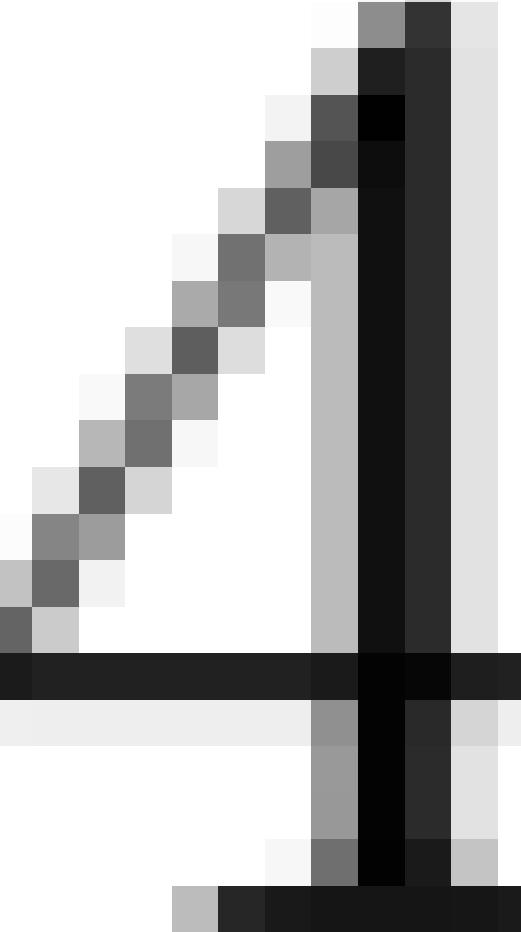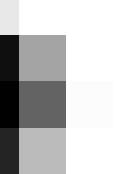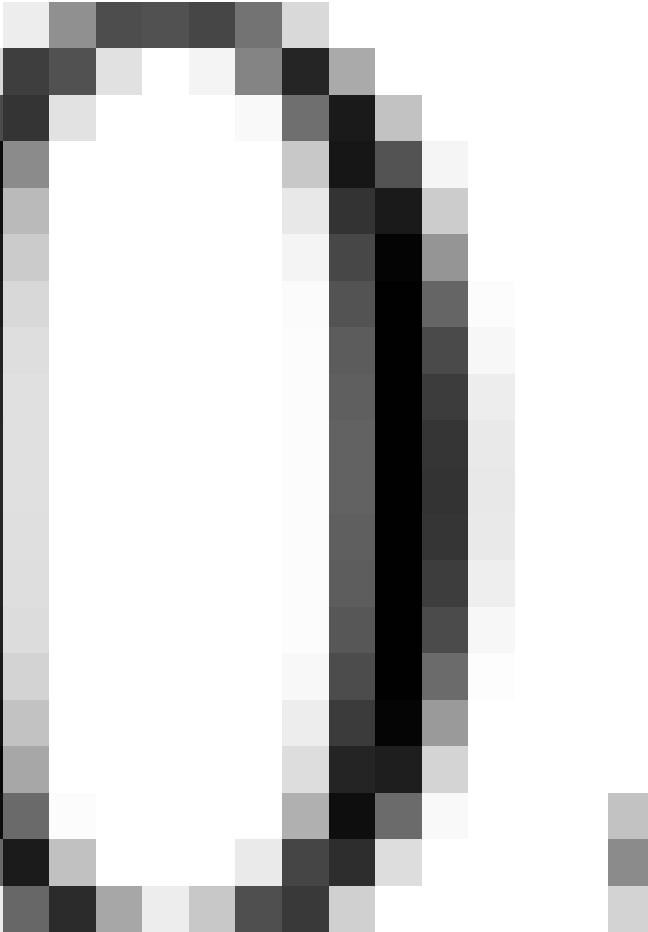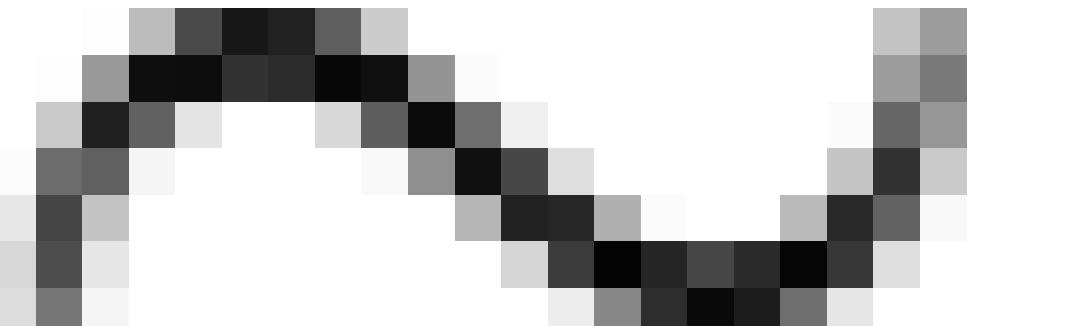


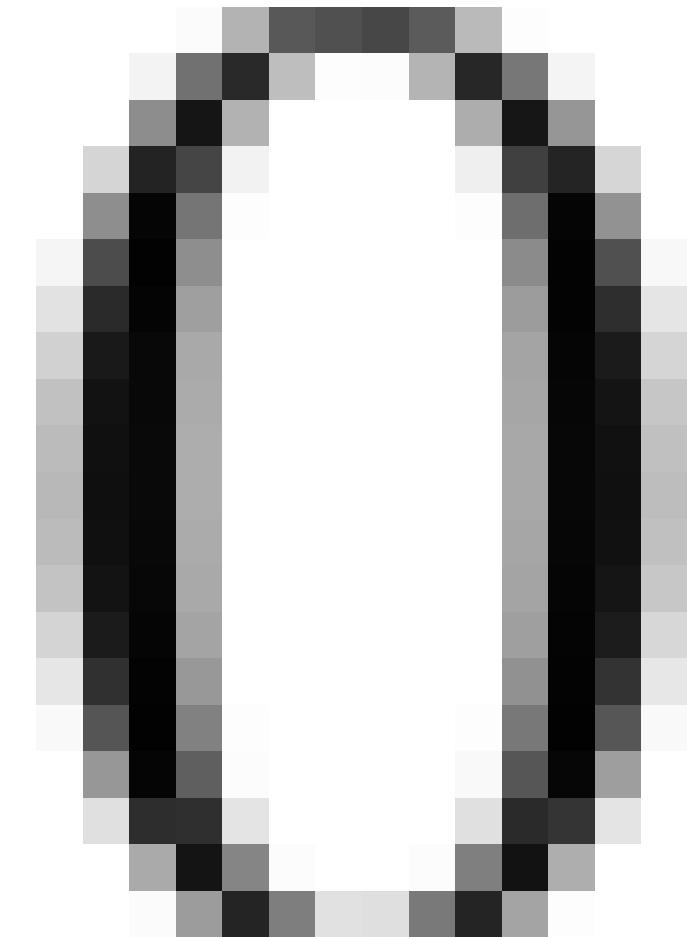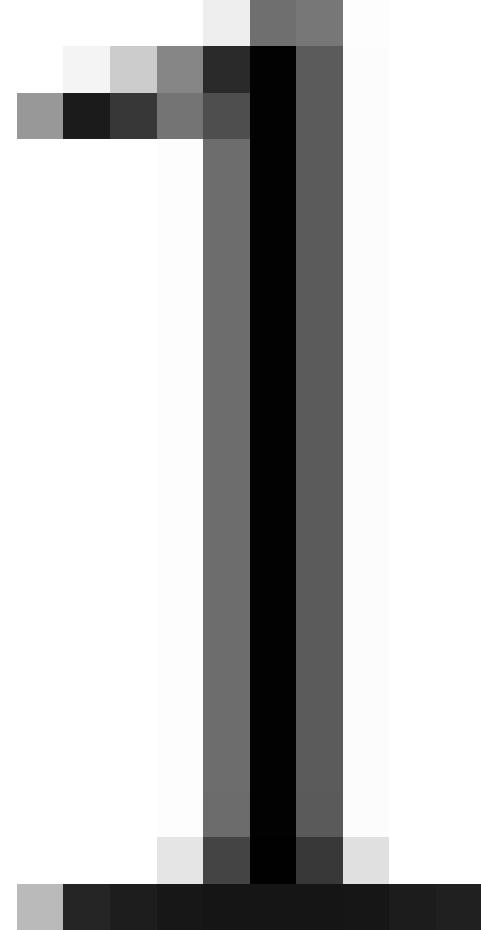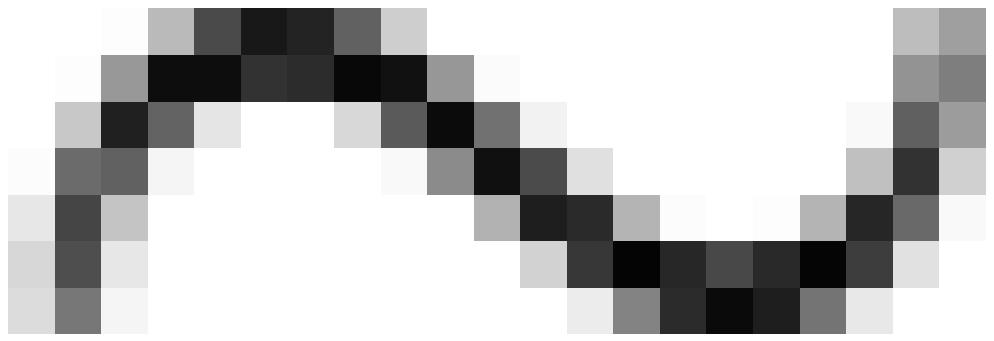







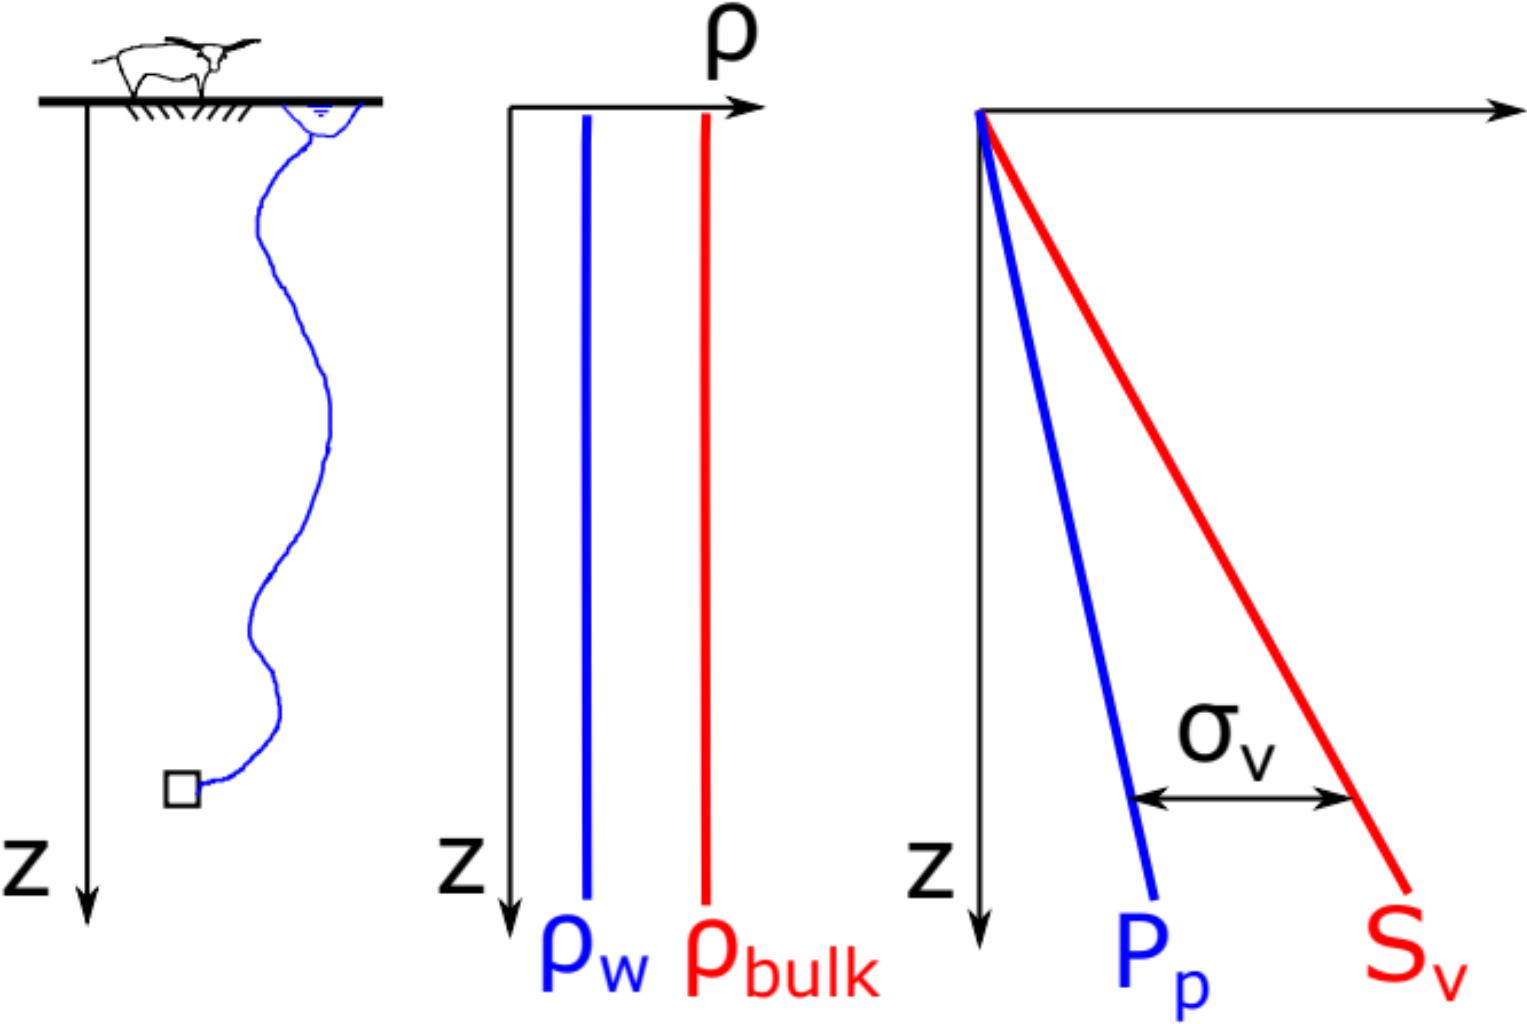




Effective stress =


Total stress – Pore pressure

$$\sigma = S - p$$

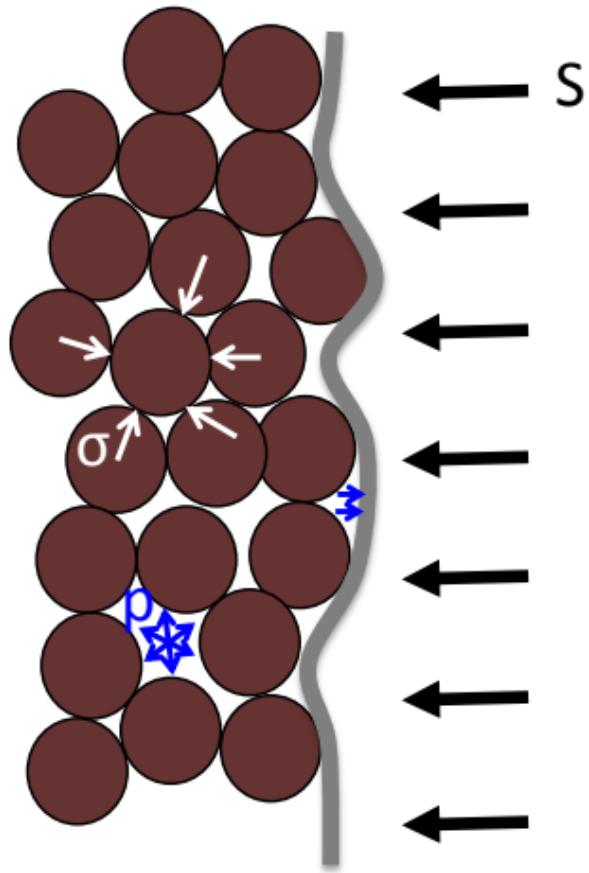



dP P $\rho_{w,9}$ 1040
 dz

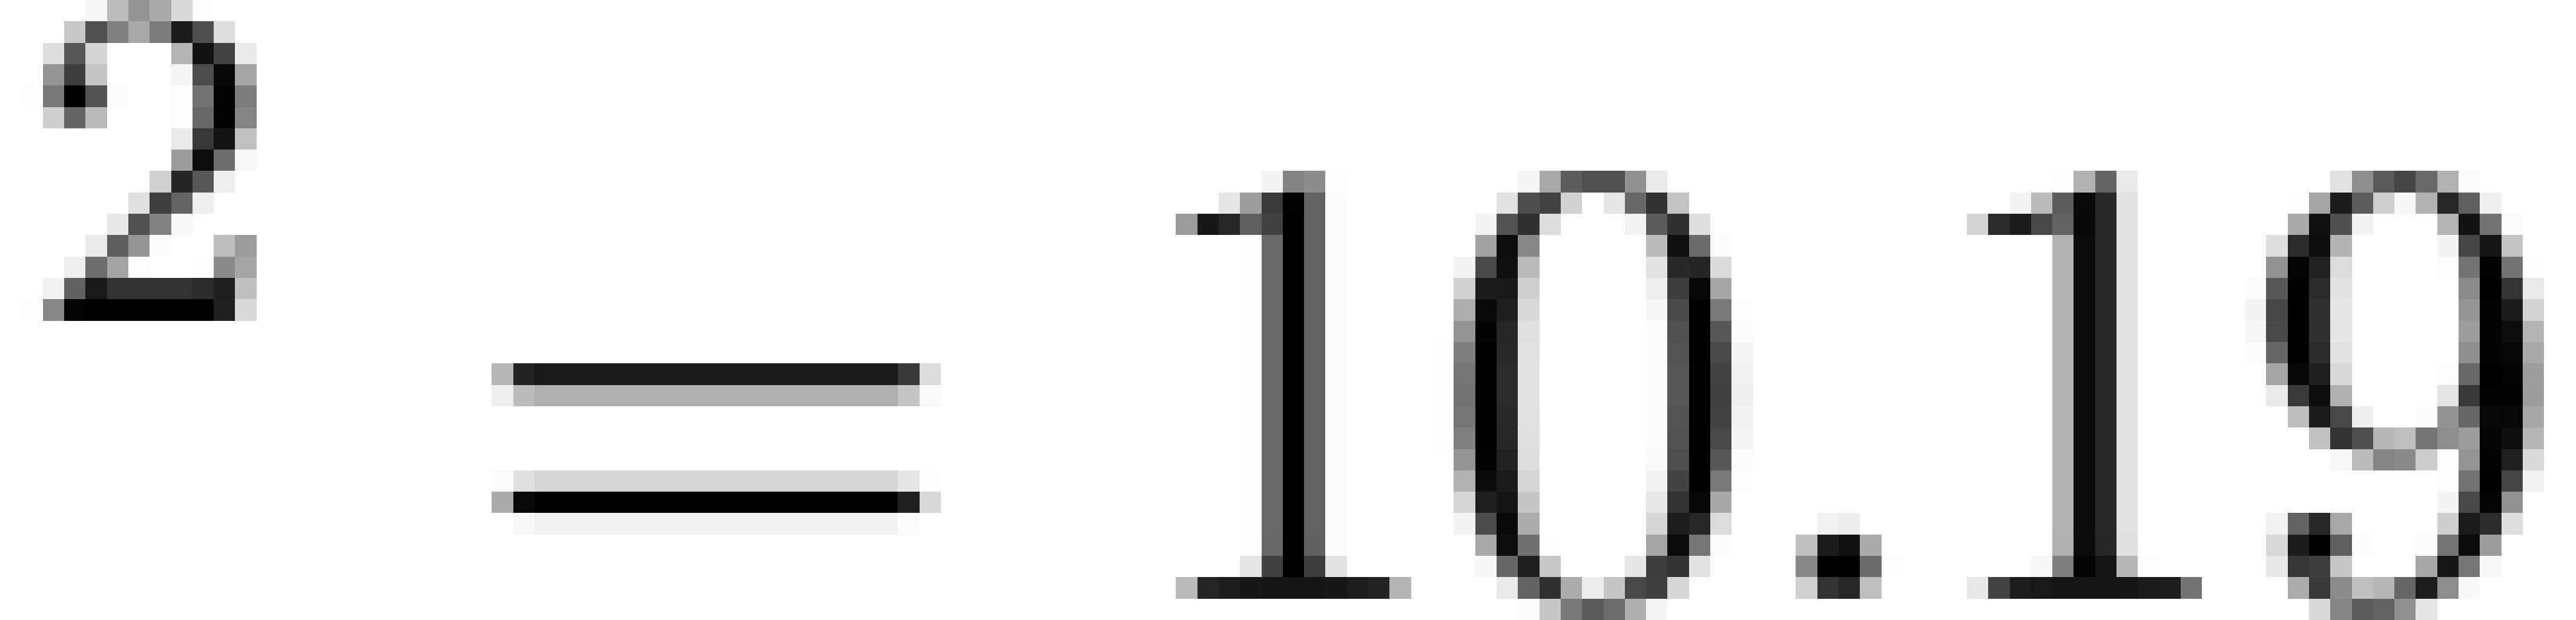






dsu = Paulk 2350








P
P

dP
dP
dZ
dZ

10.19

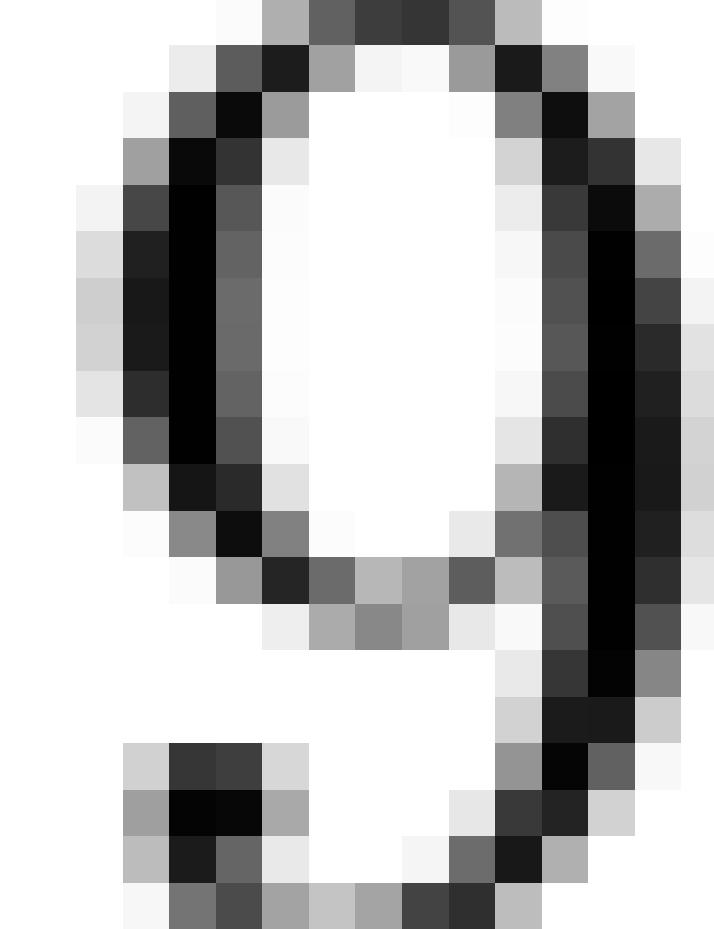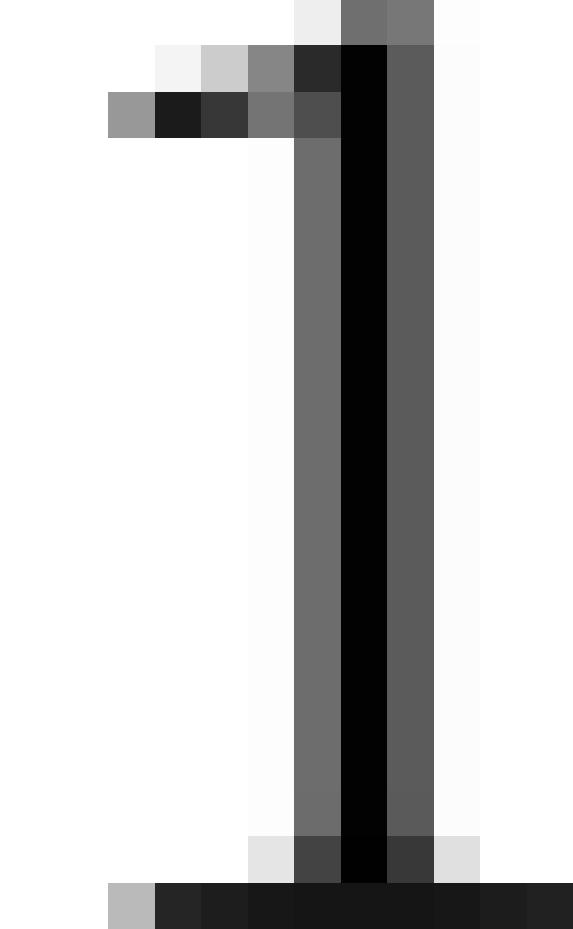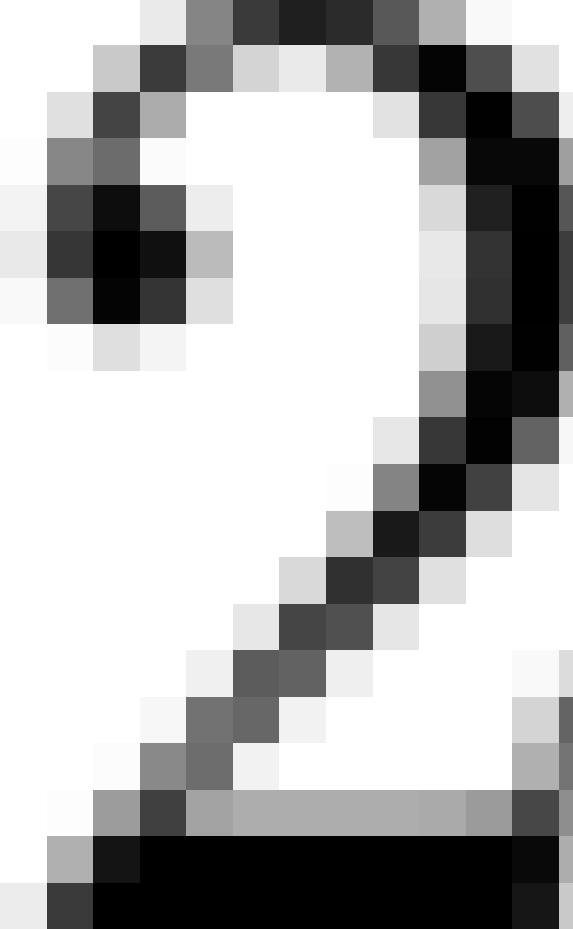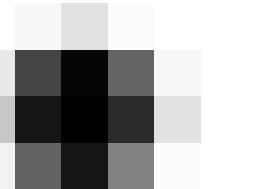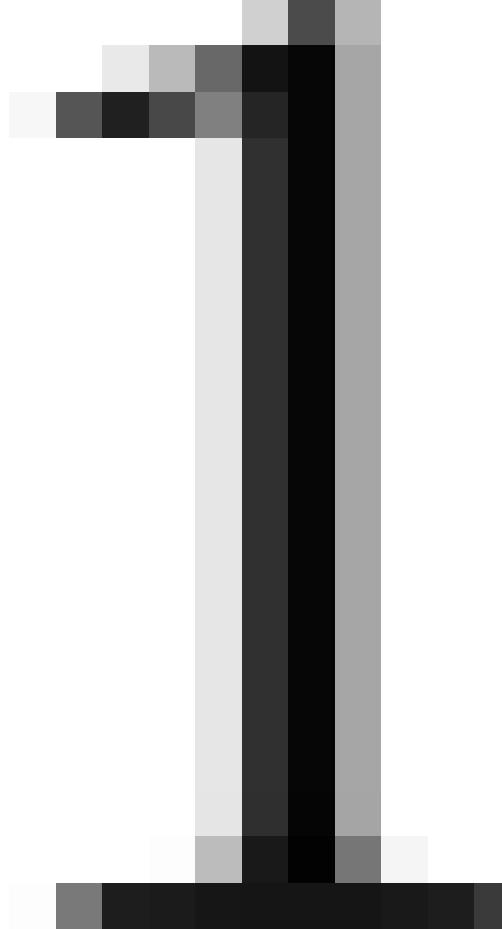

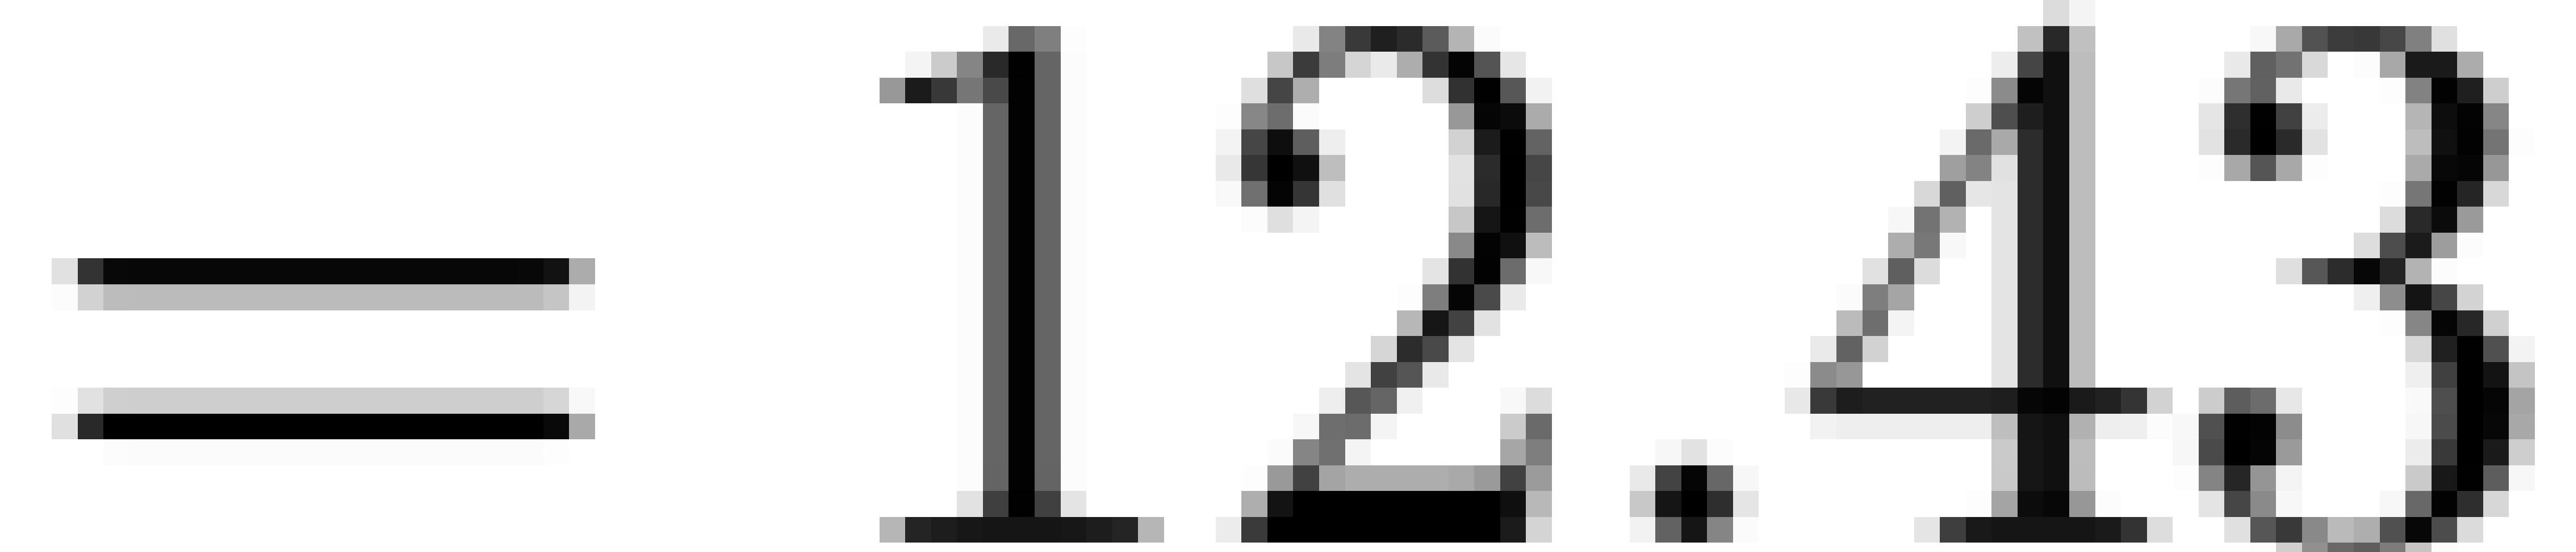


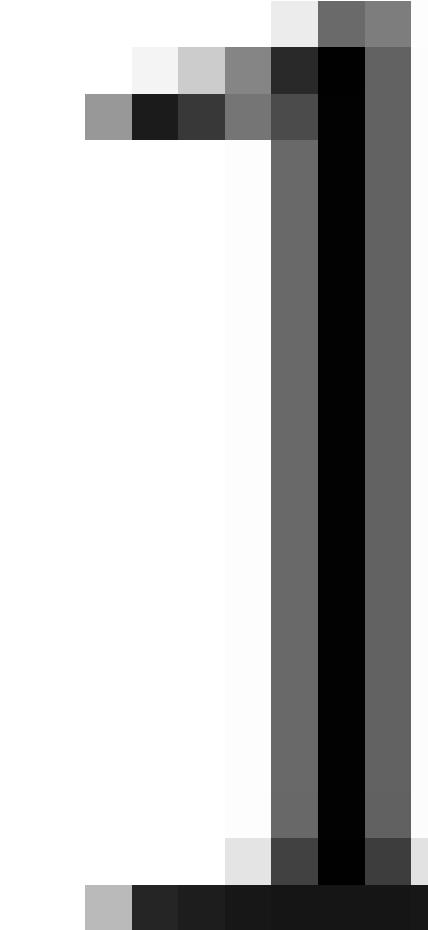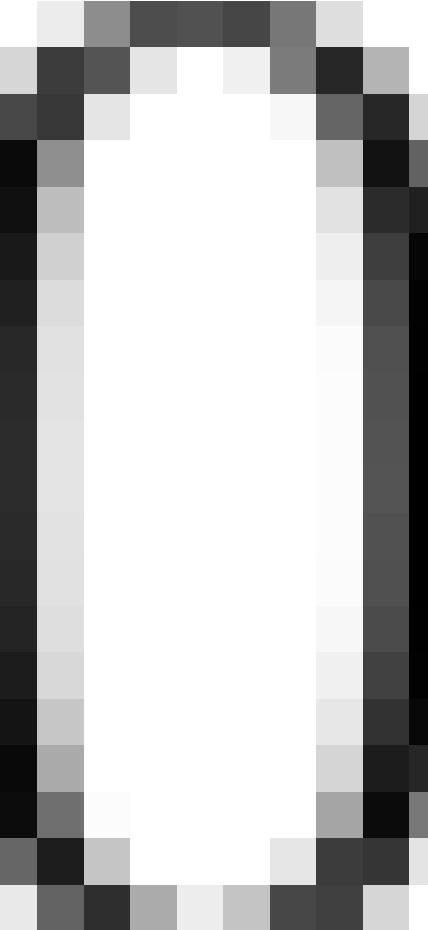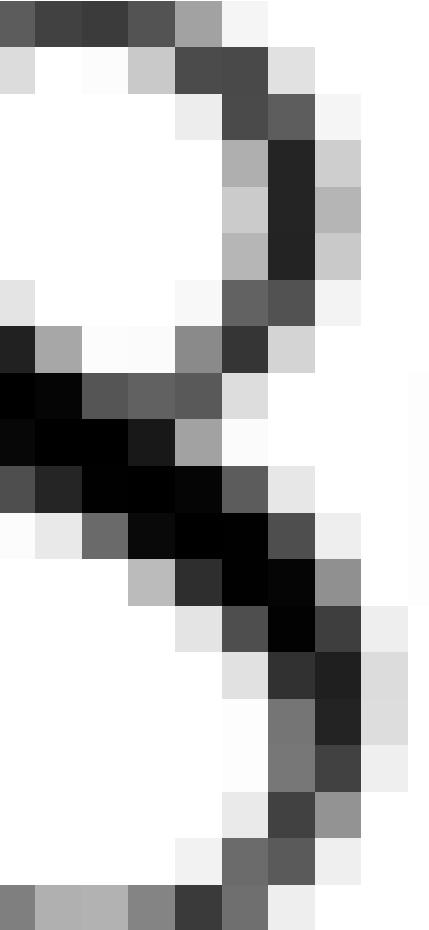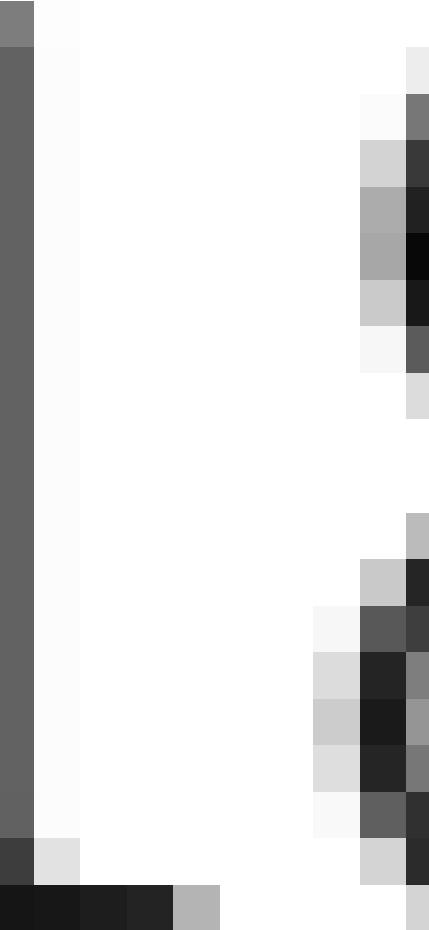

d₅









d₂

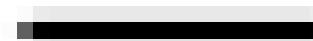



23.03


d₂

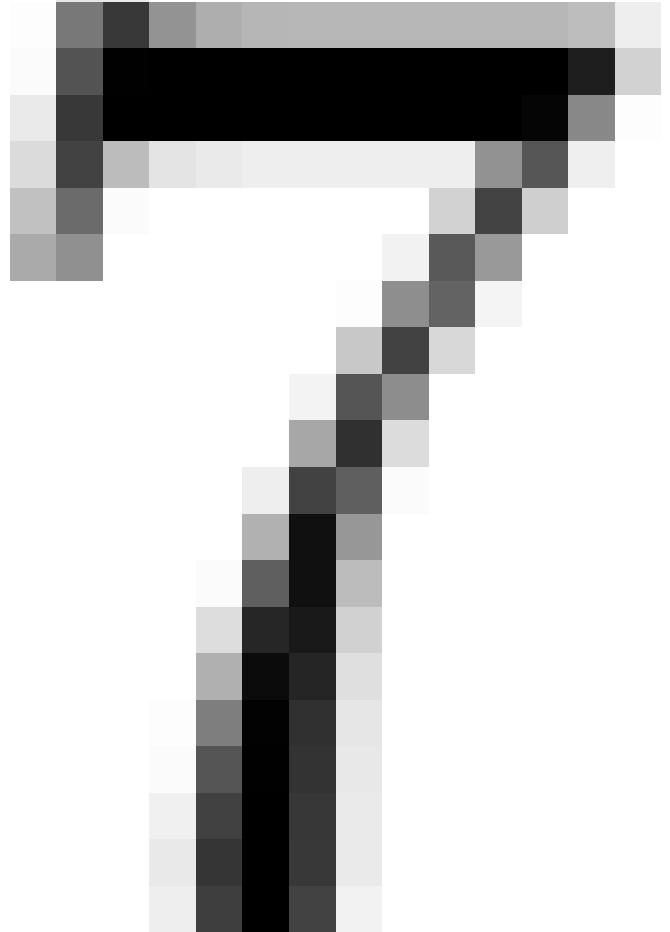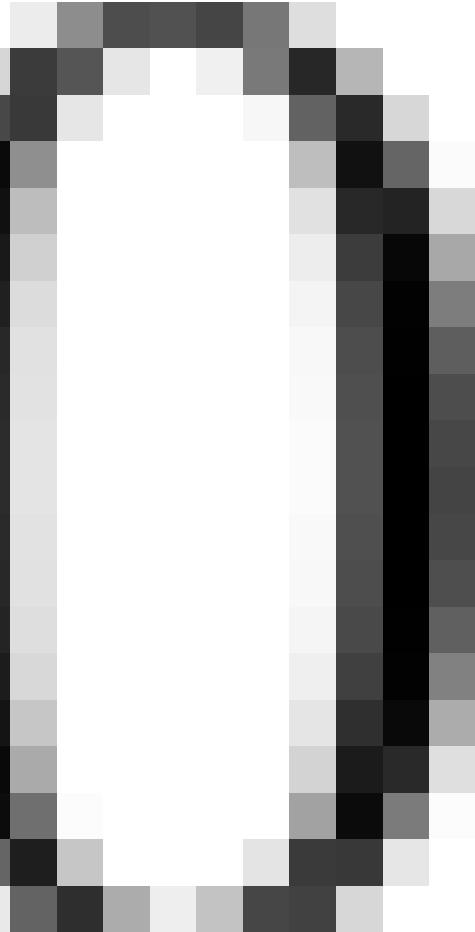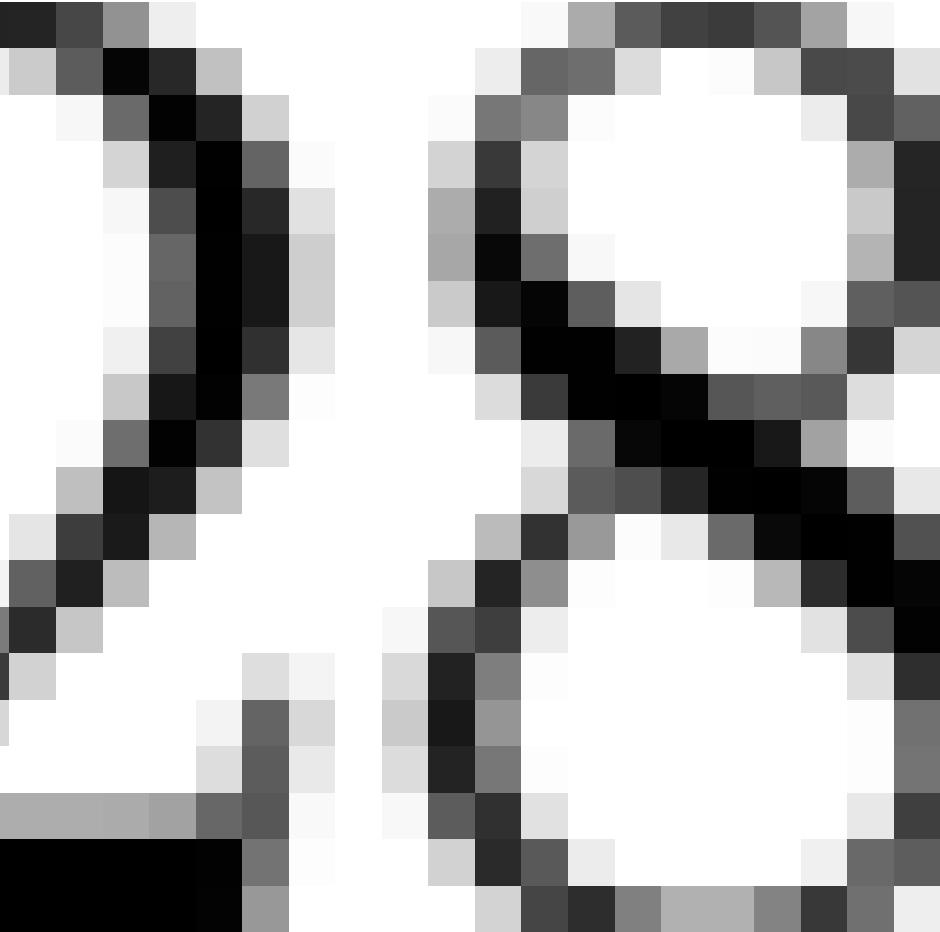

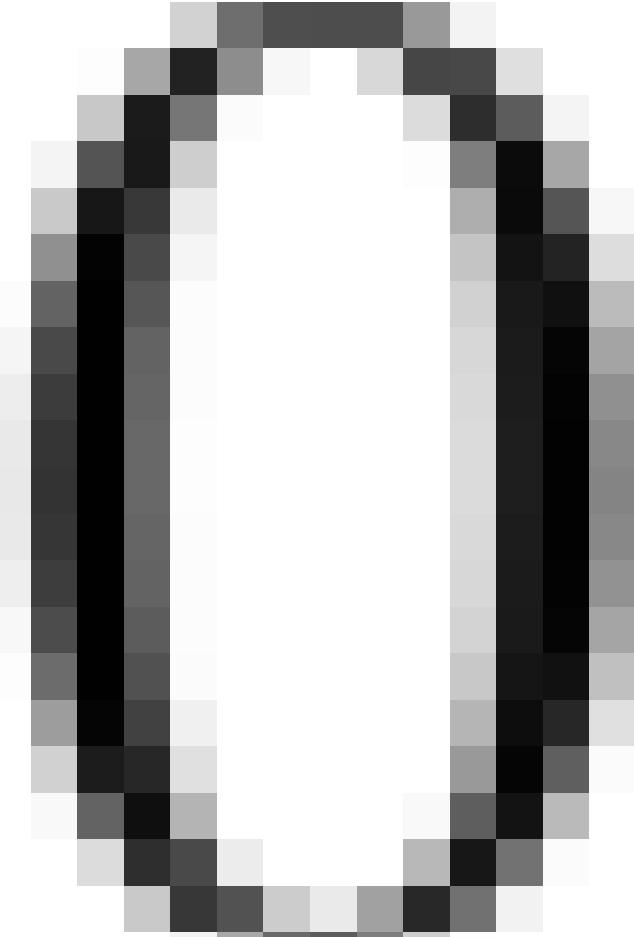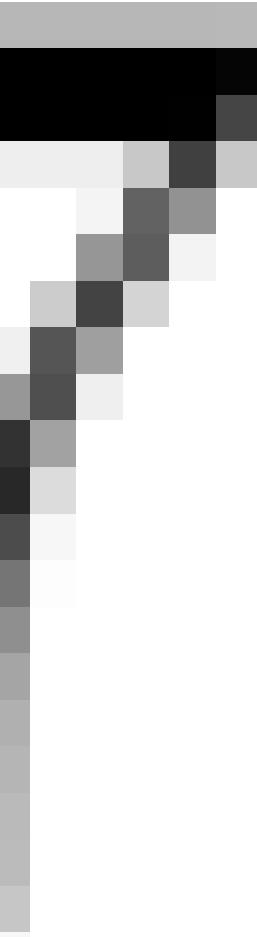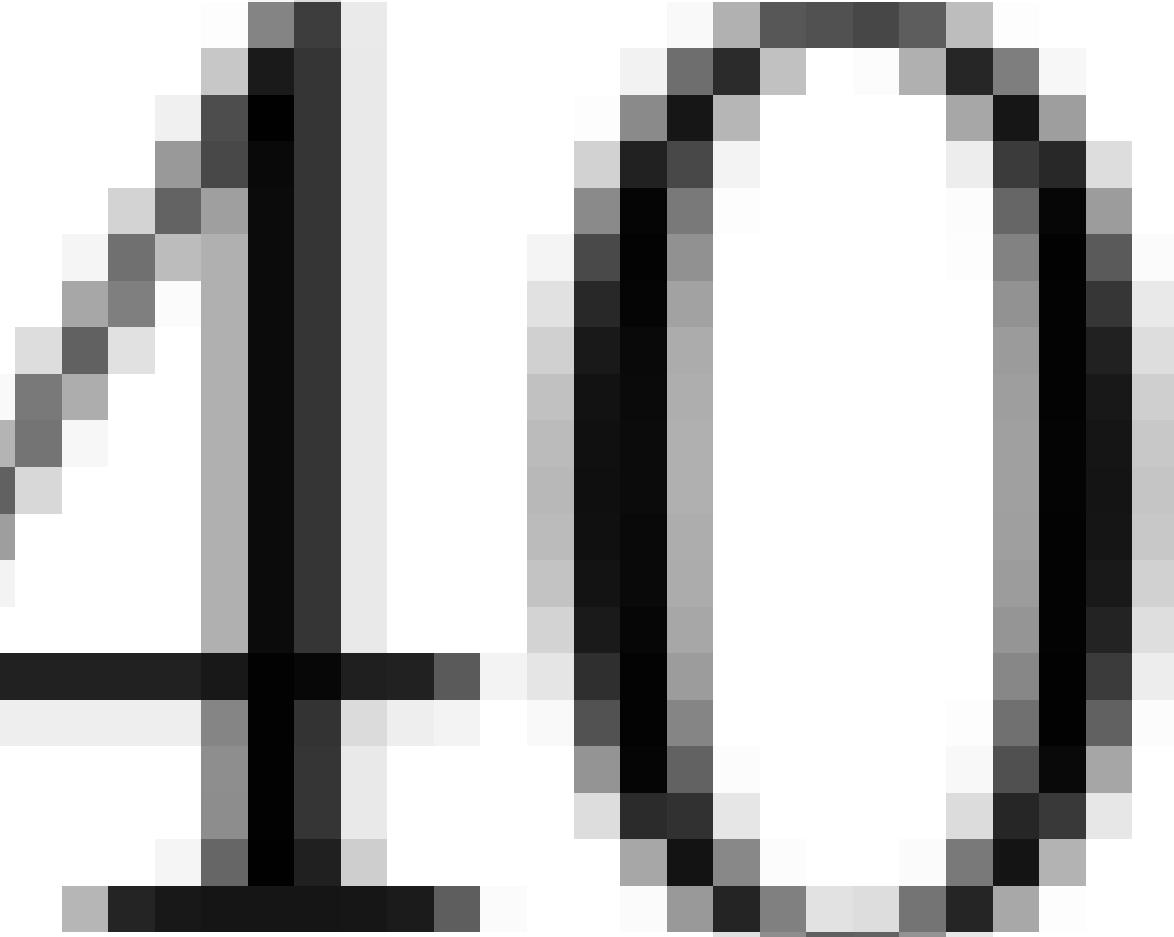





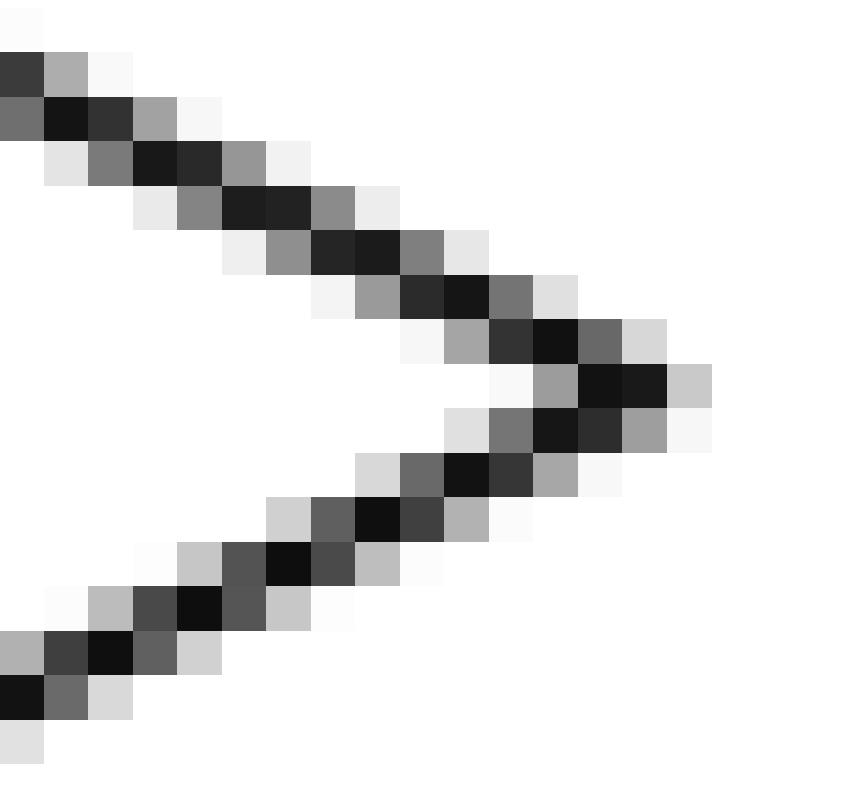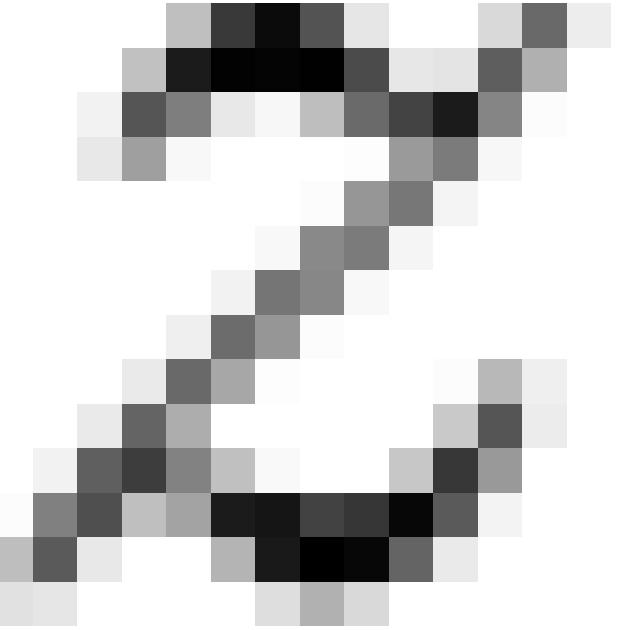













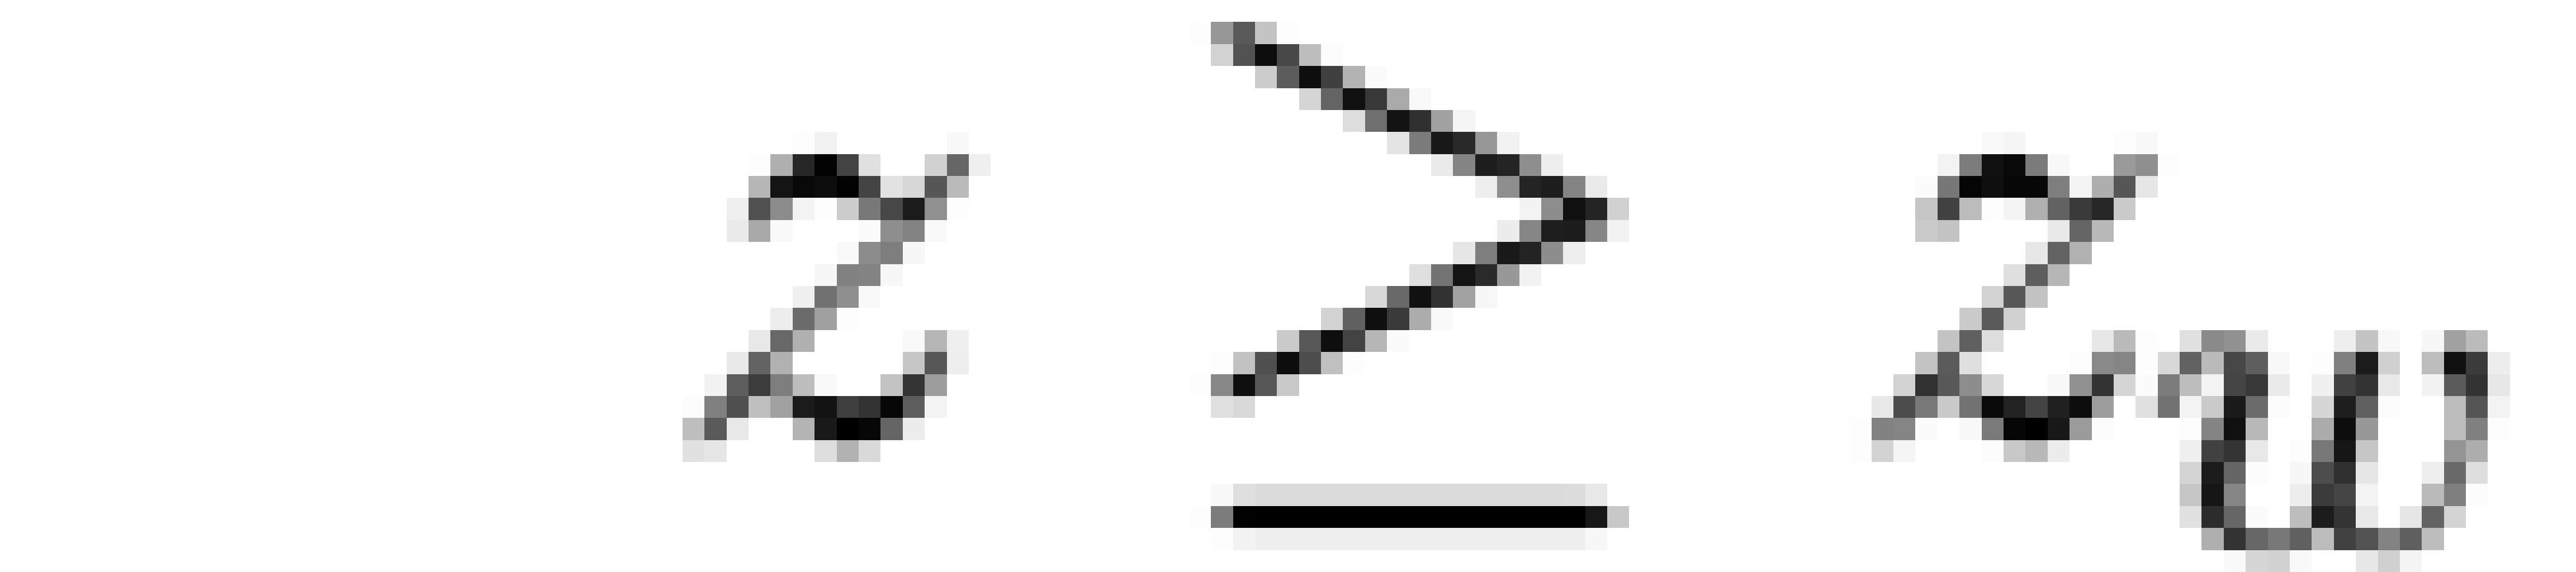



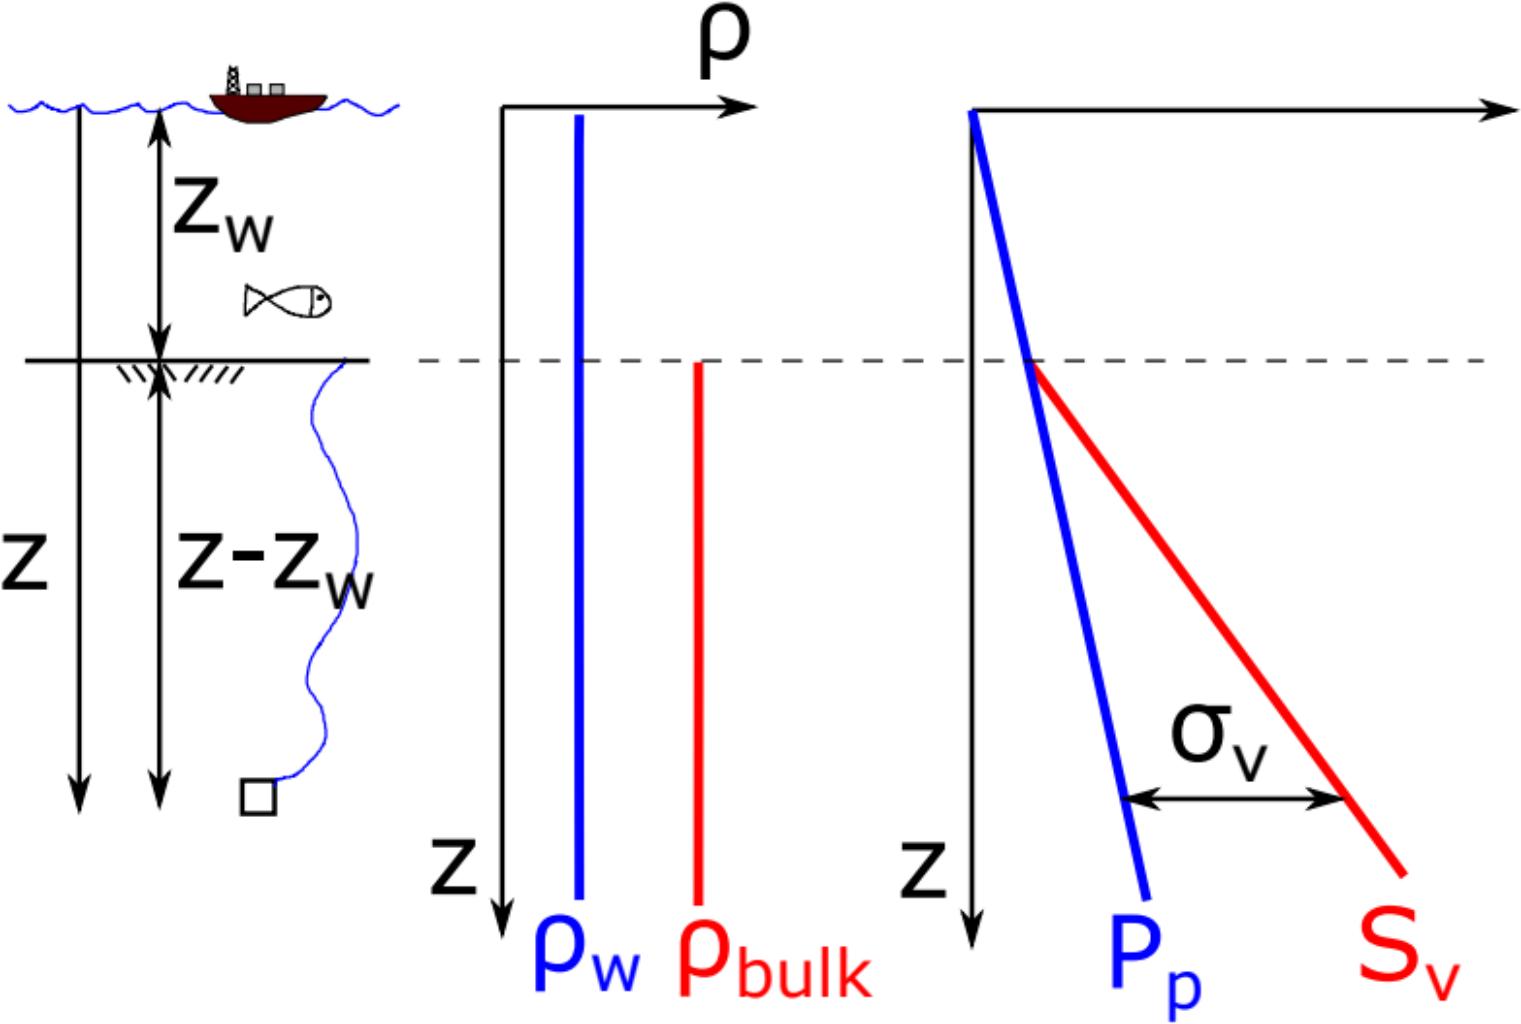


$$P_p = \rho w g z_w + \frac{dP}{dz} (z - z_w) = 0.44$$

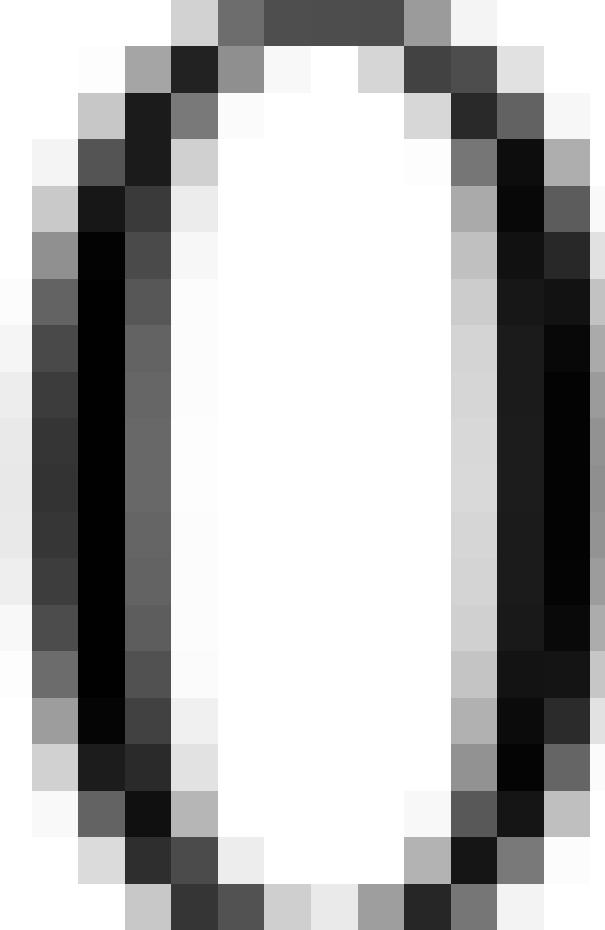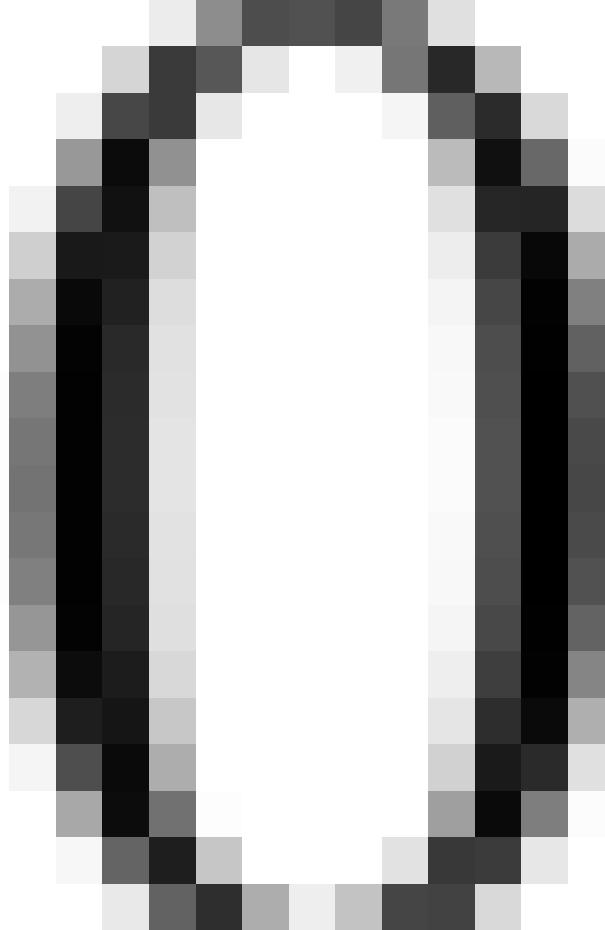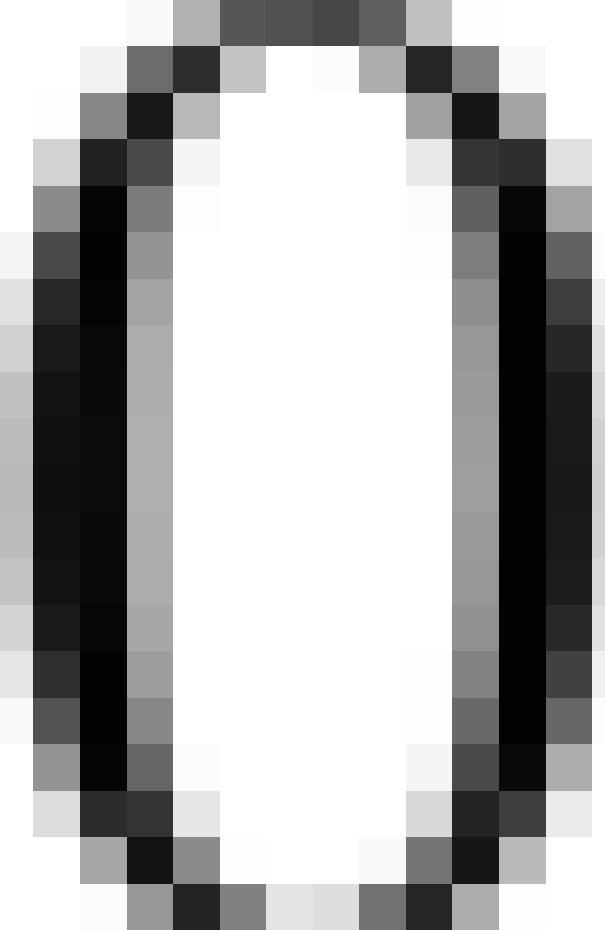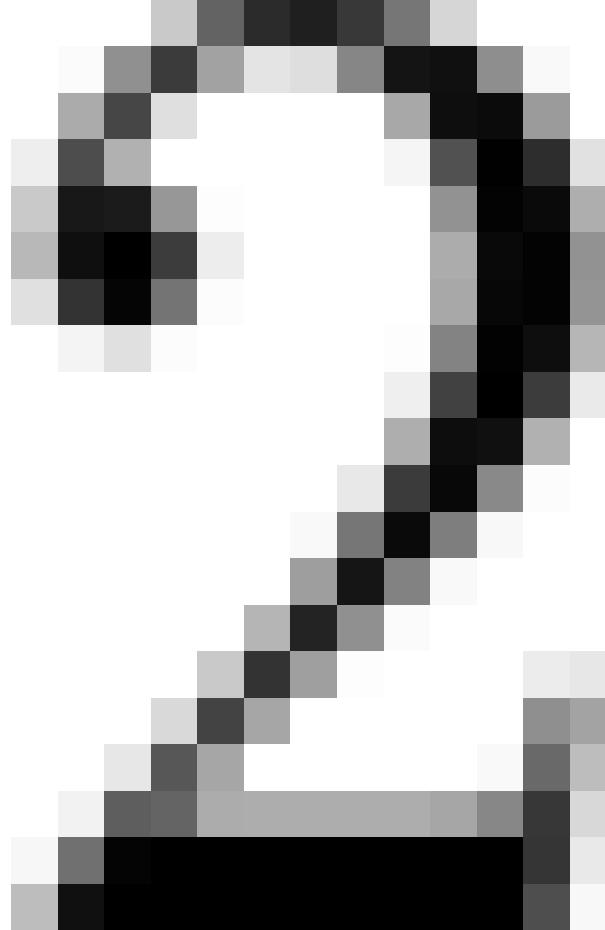





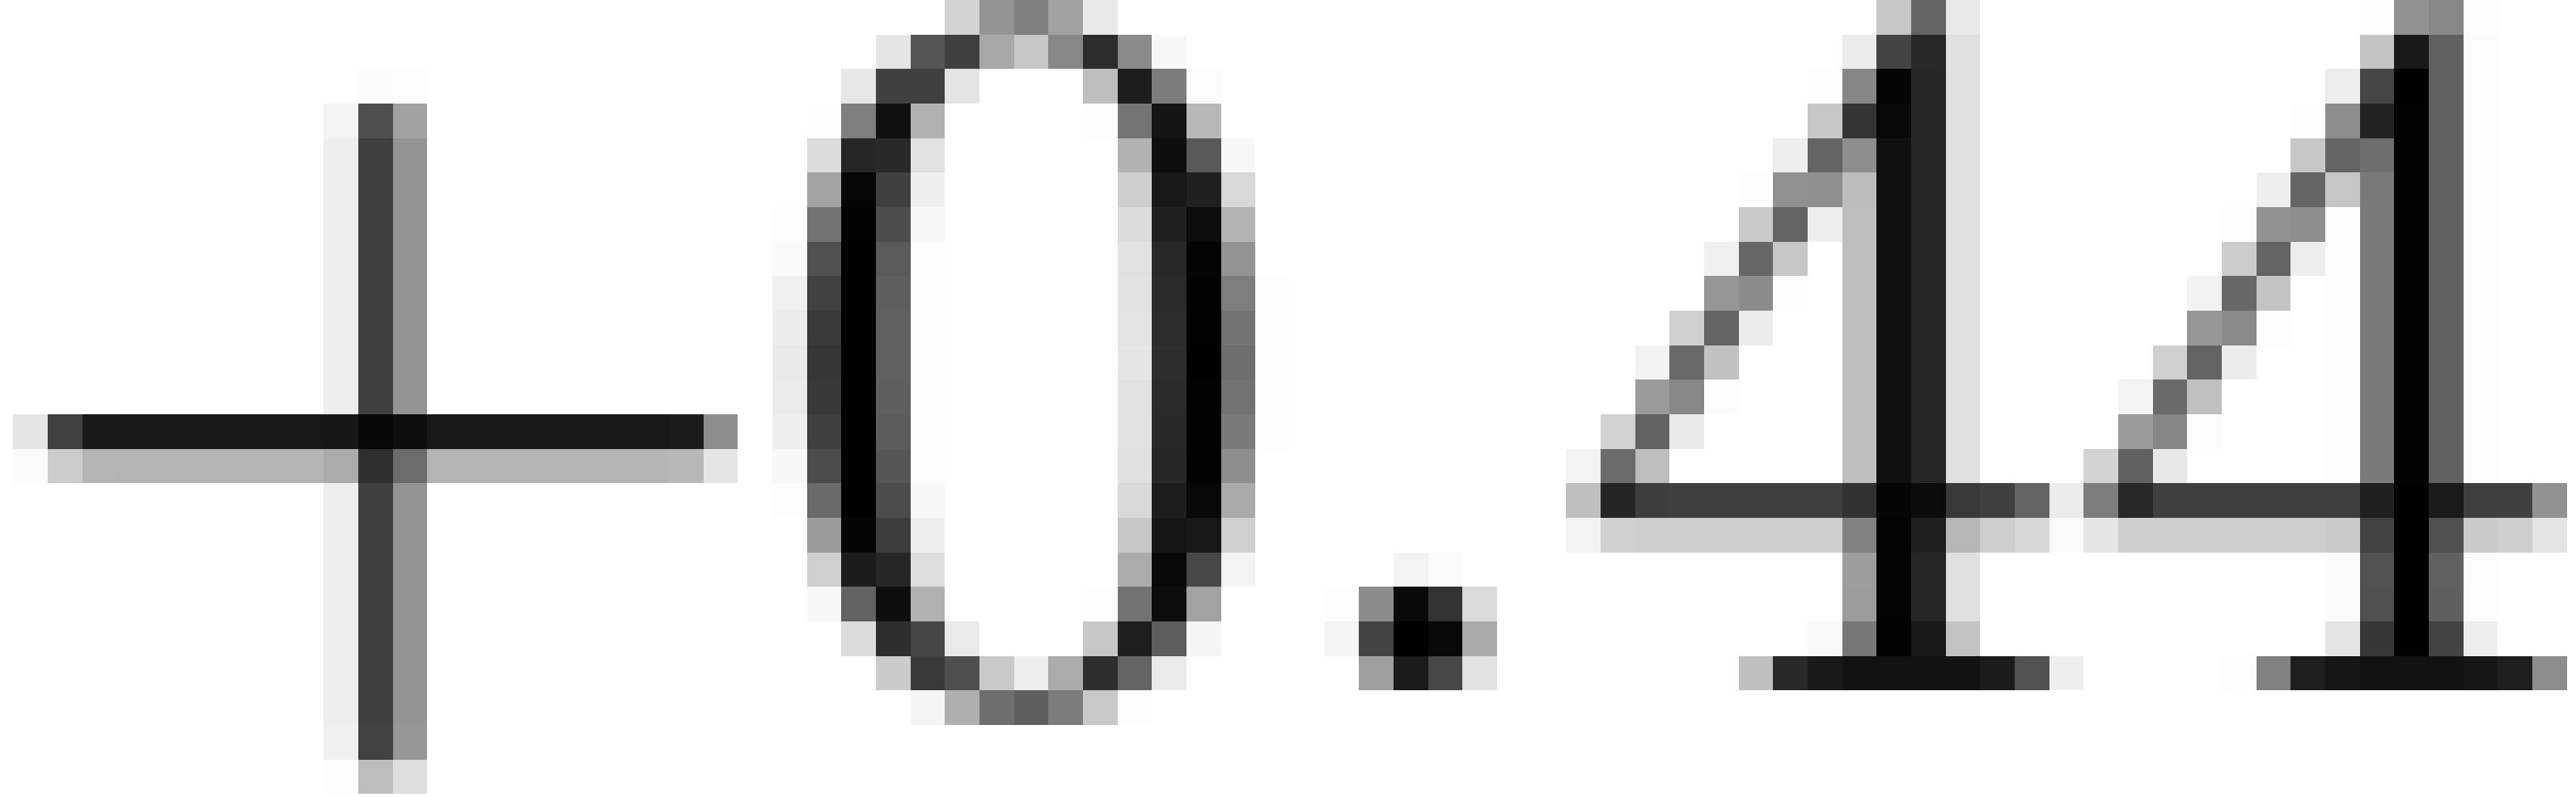





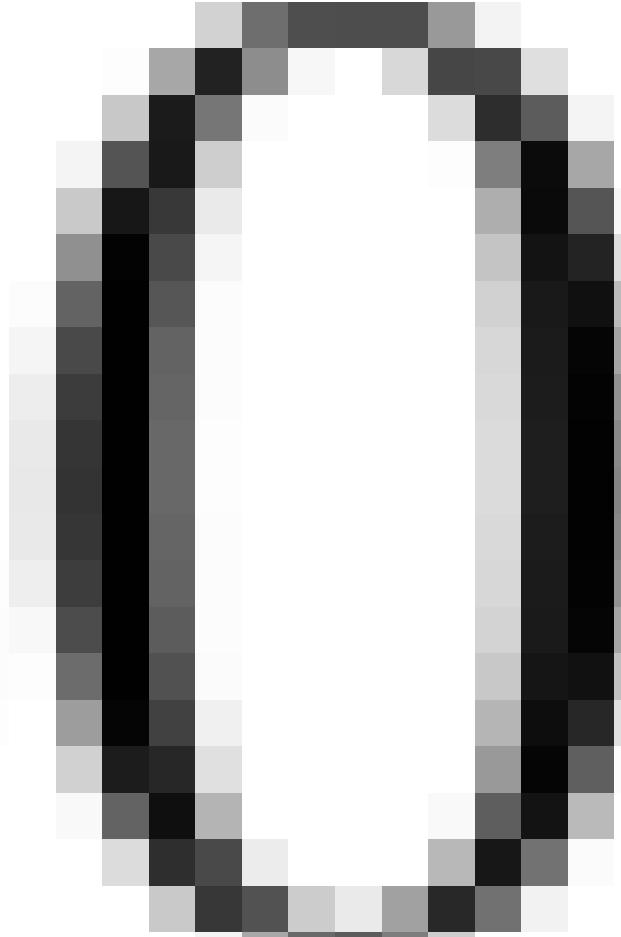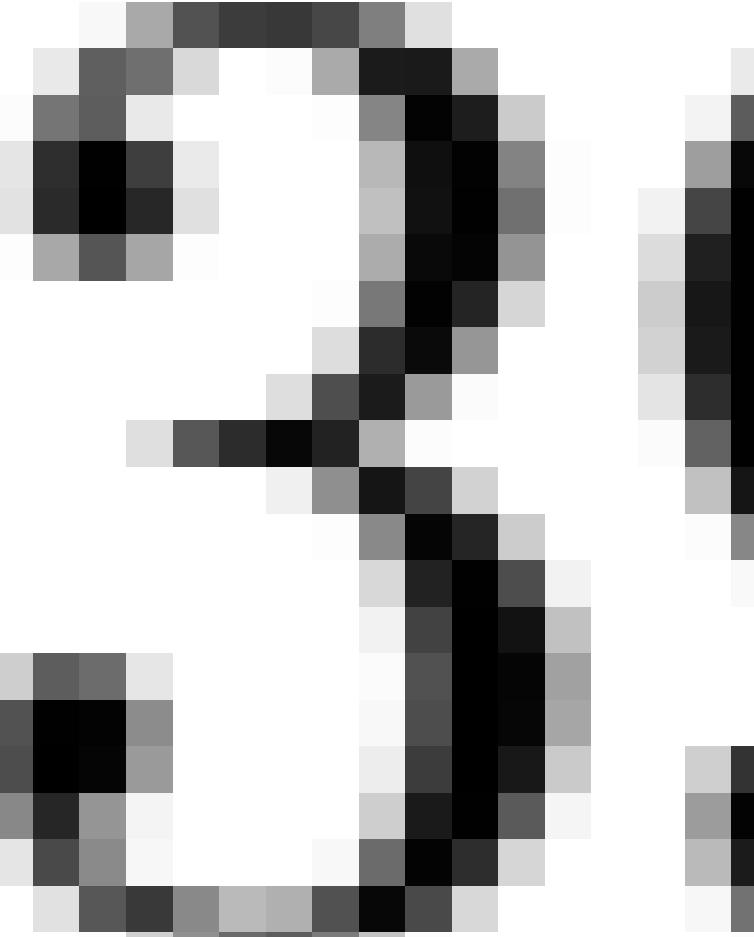






$$S_u = \rho_{u,g} z_u + \frac{dS_u}{dz} (z - z_u) = 0.44$$




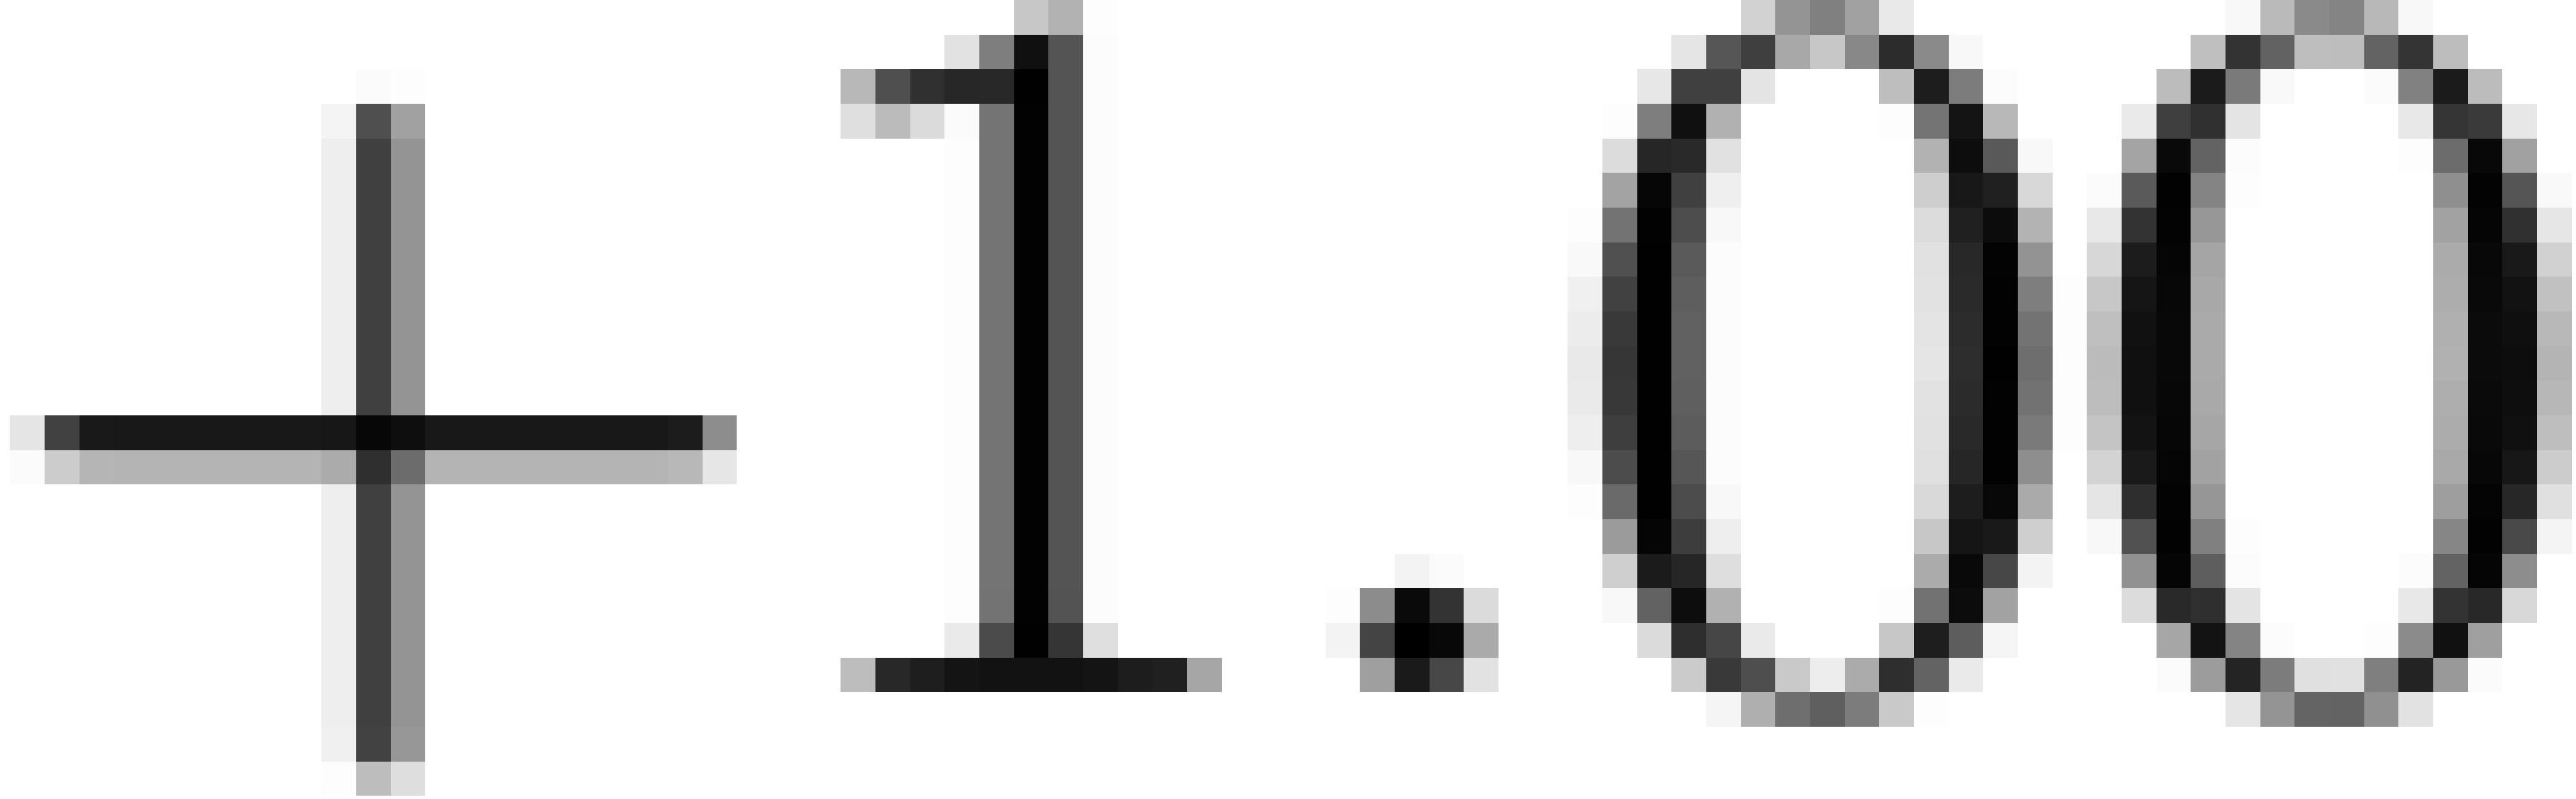


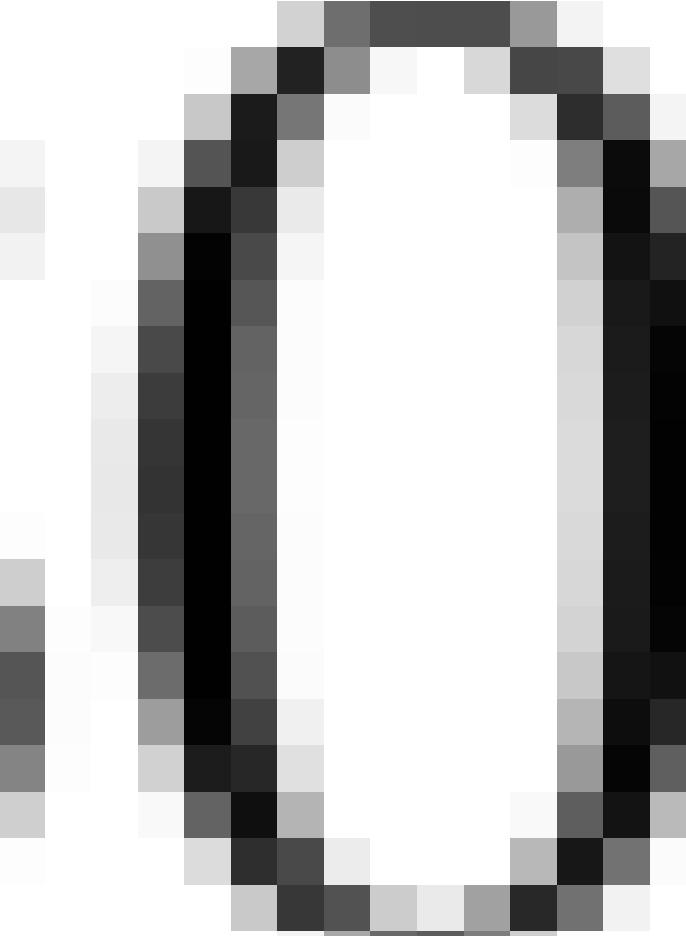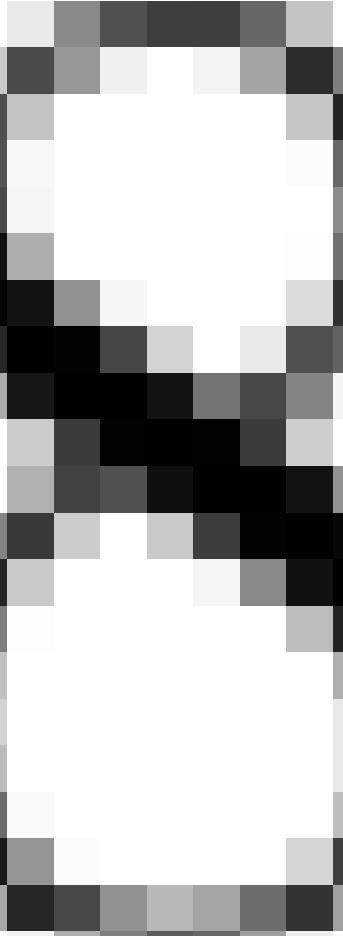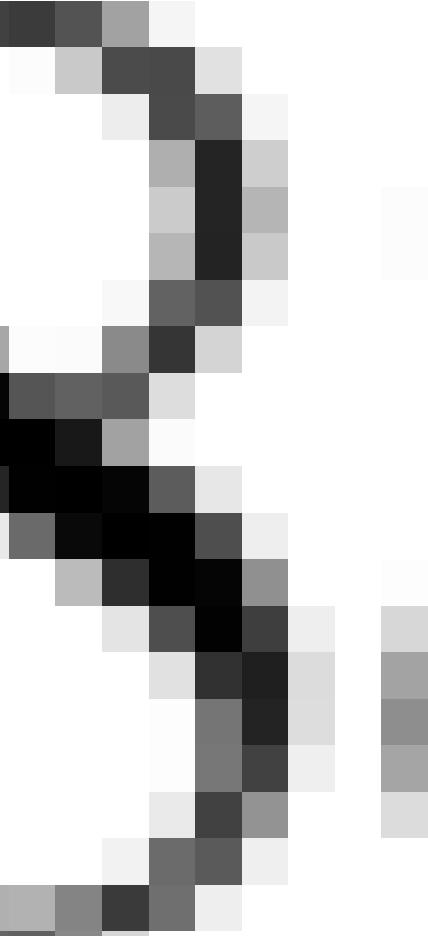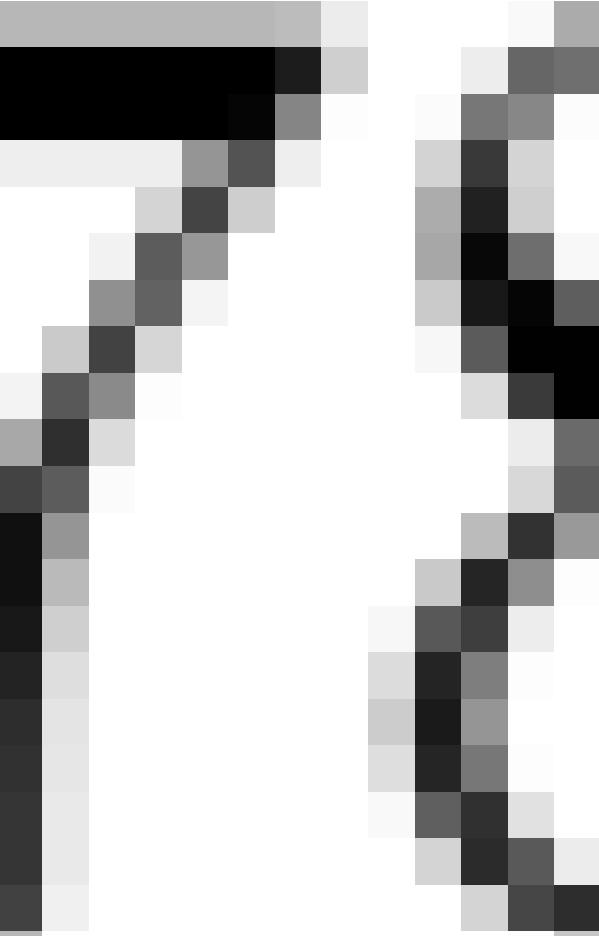


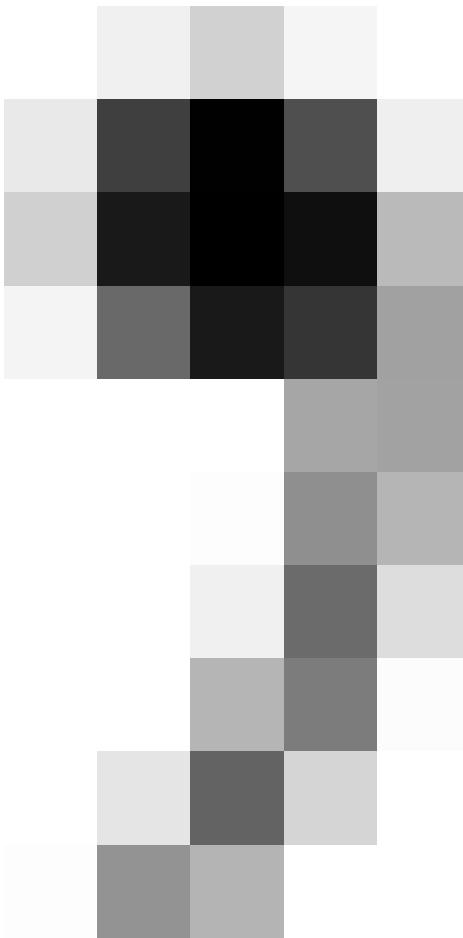




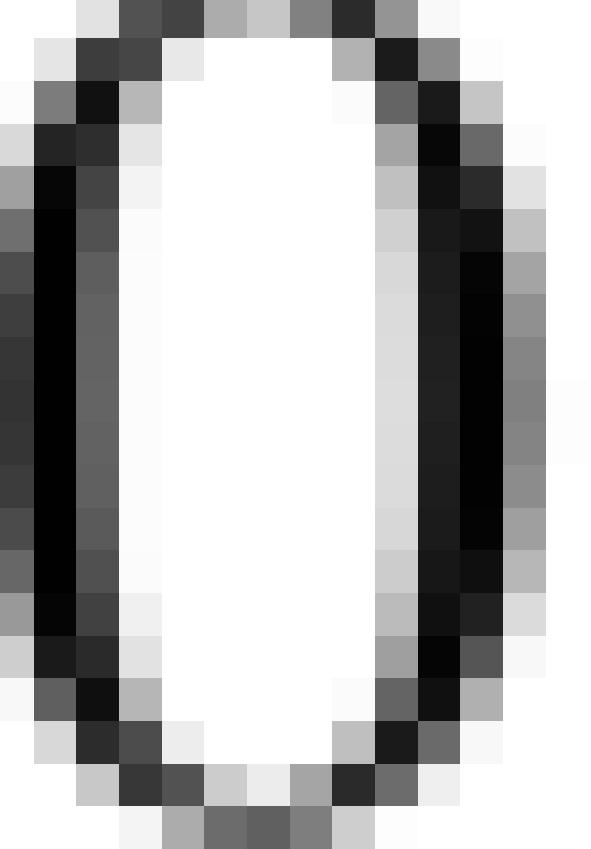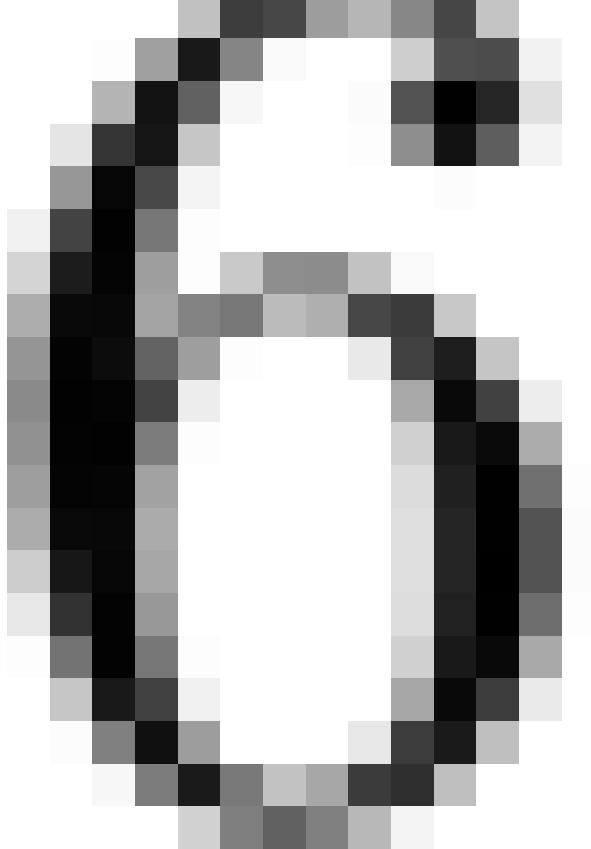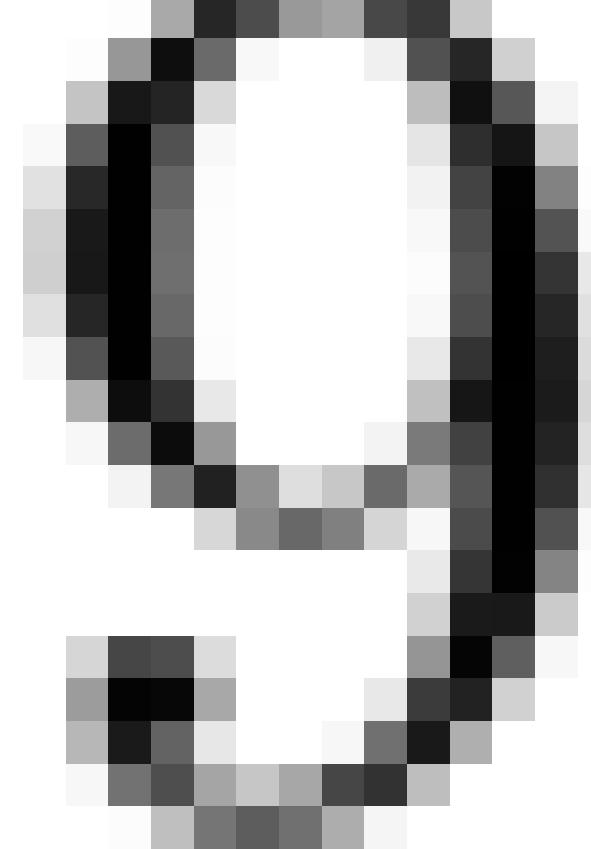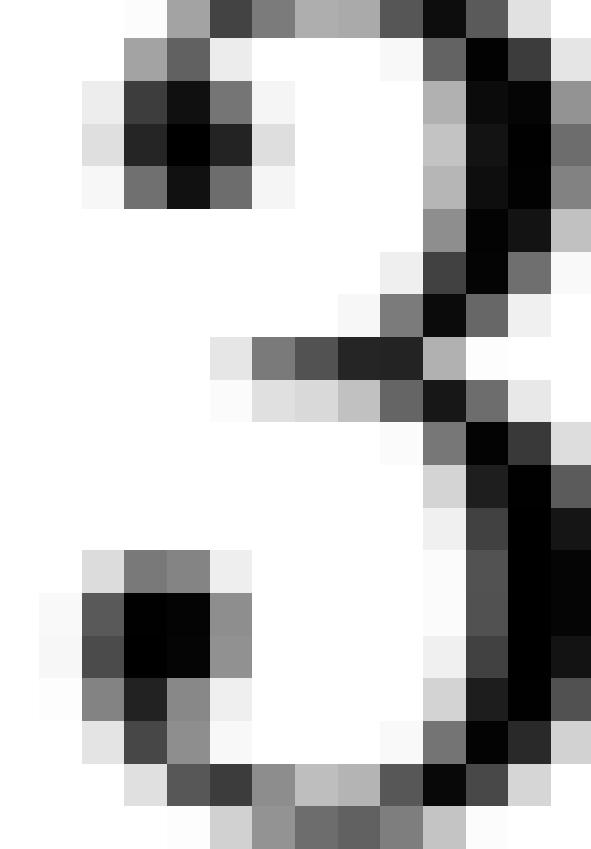

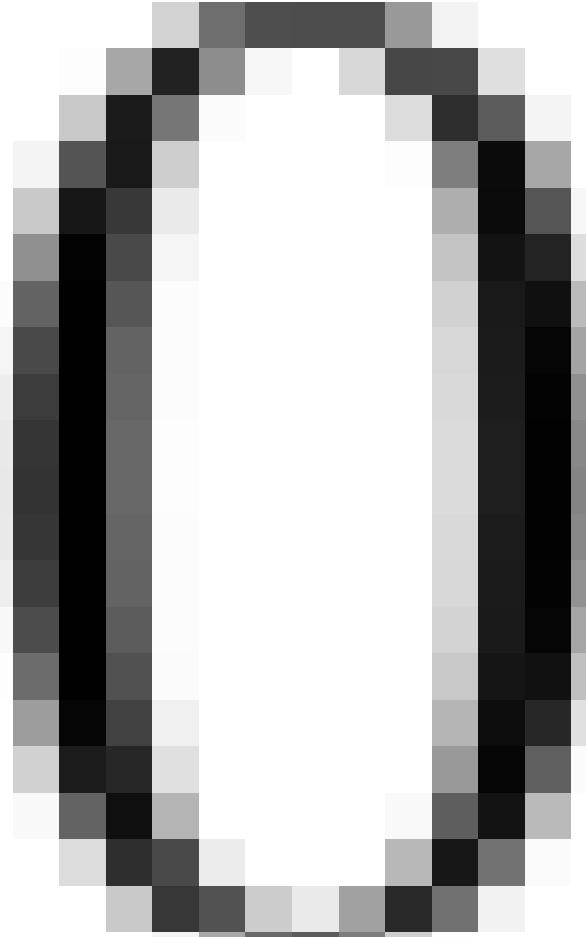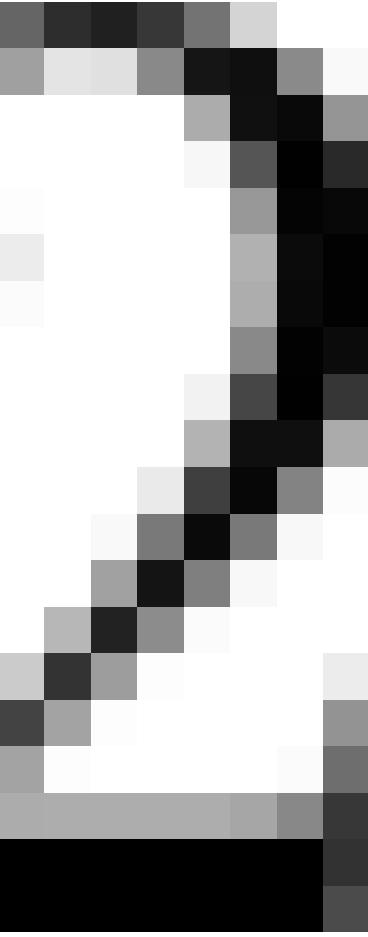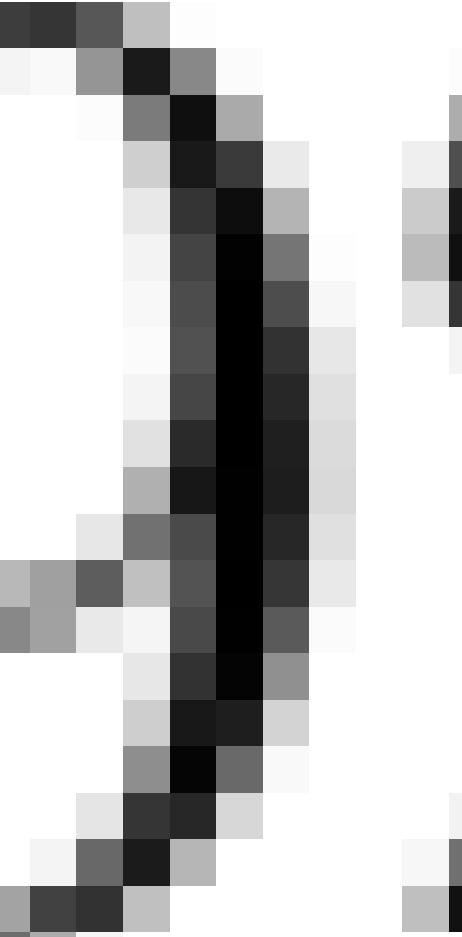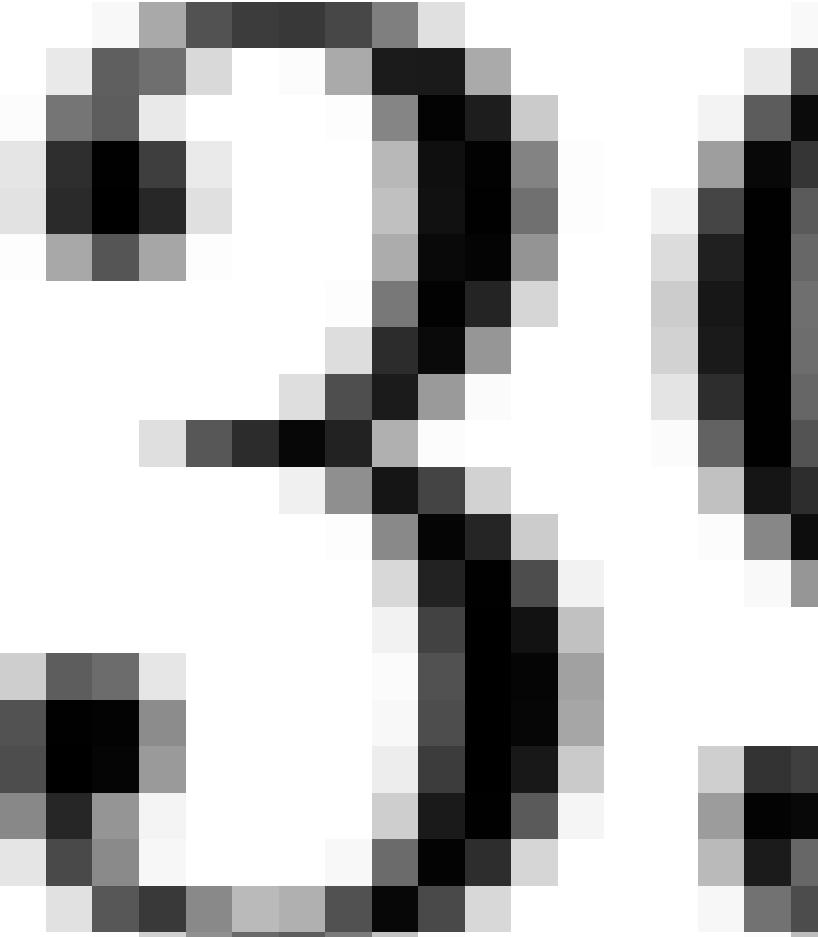


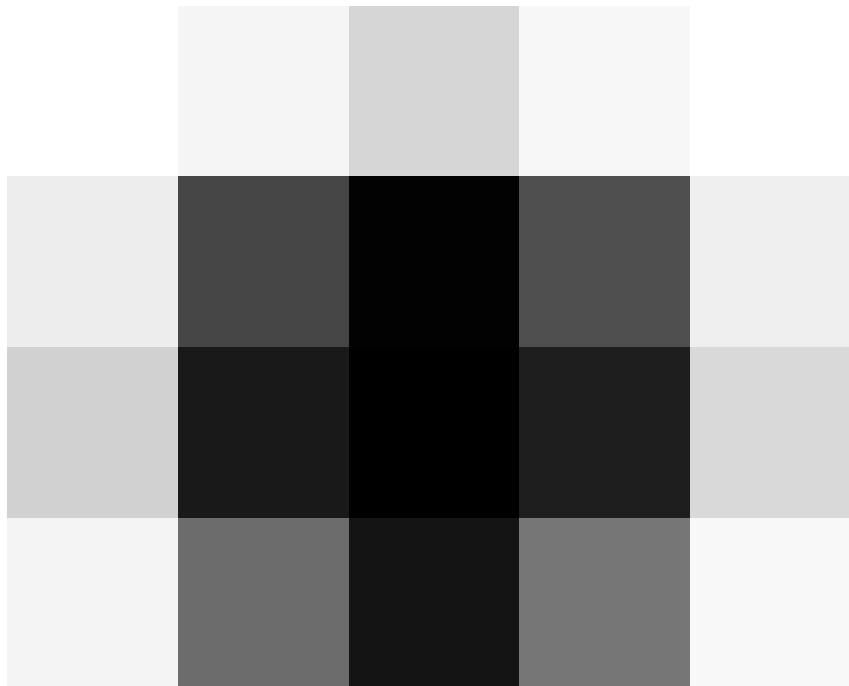










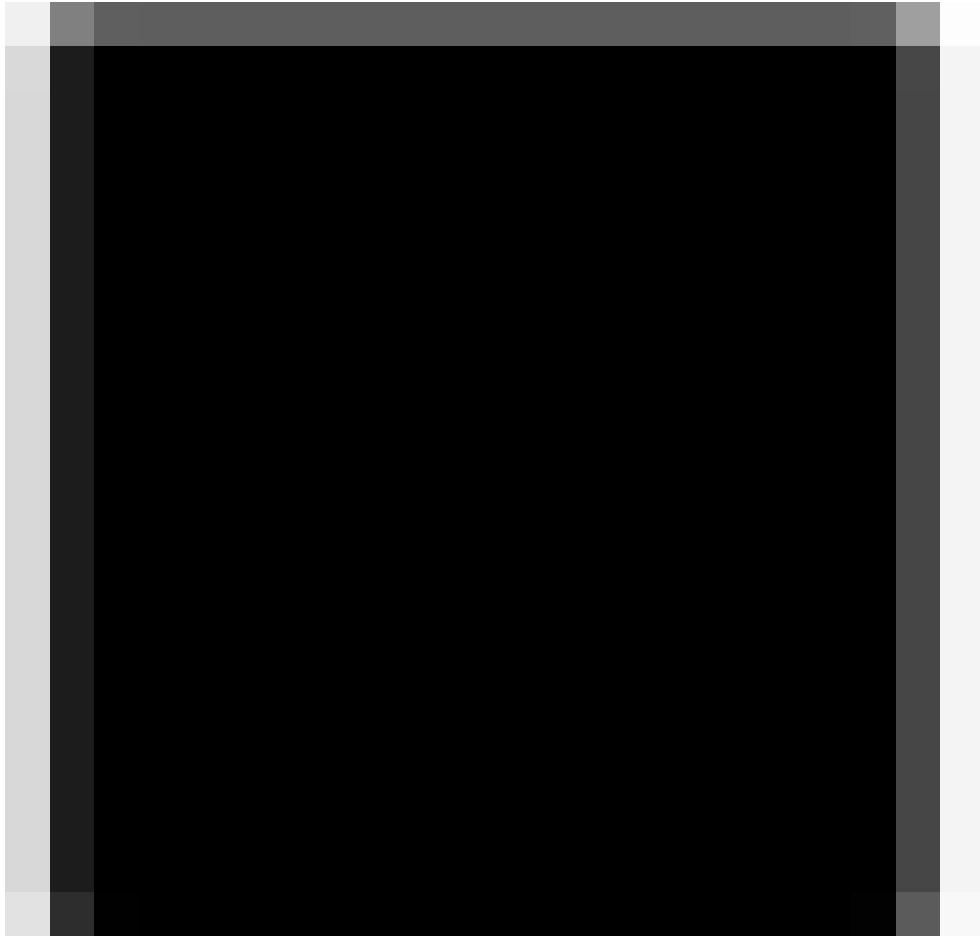





$$S_U(z) = \int_0^z \rho_{\text{bulk}}(z') dz'$$





$$S_v(z_i) = \sum_{j=1}^i \rho_{bulk}(z_i) g\Delta z_i$$

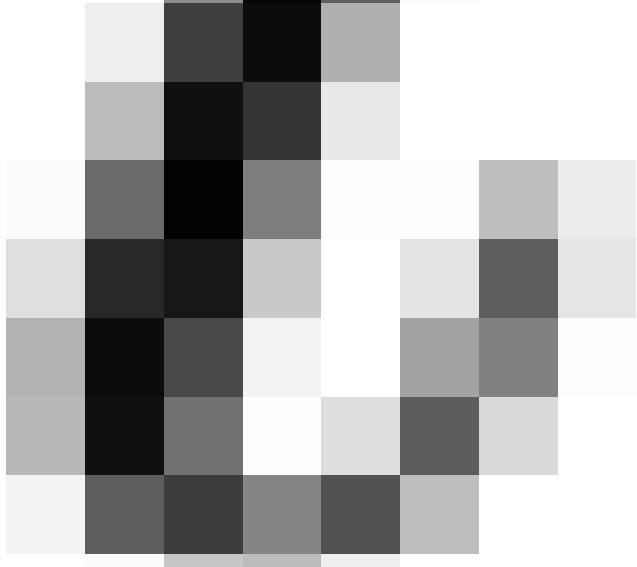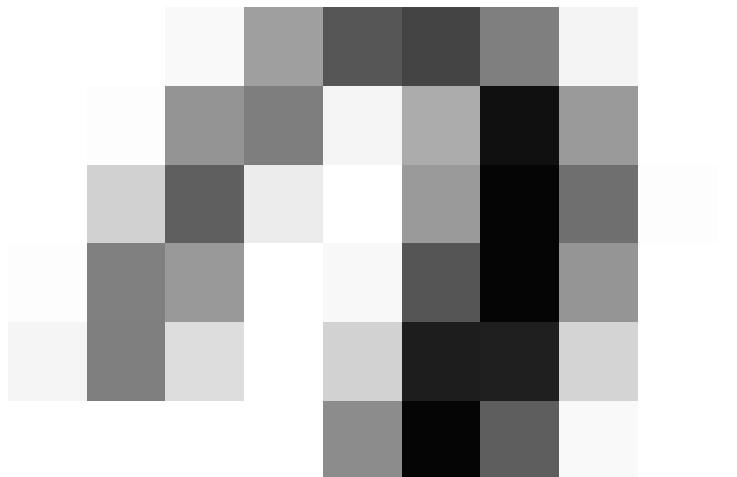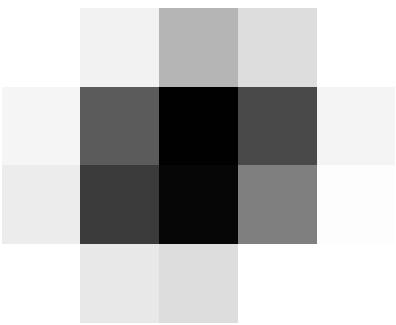

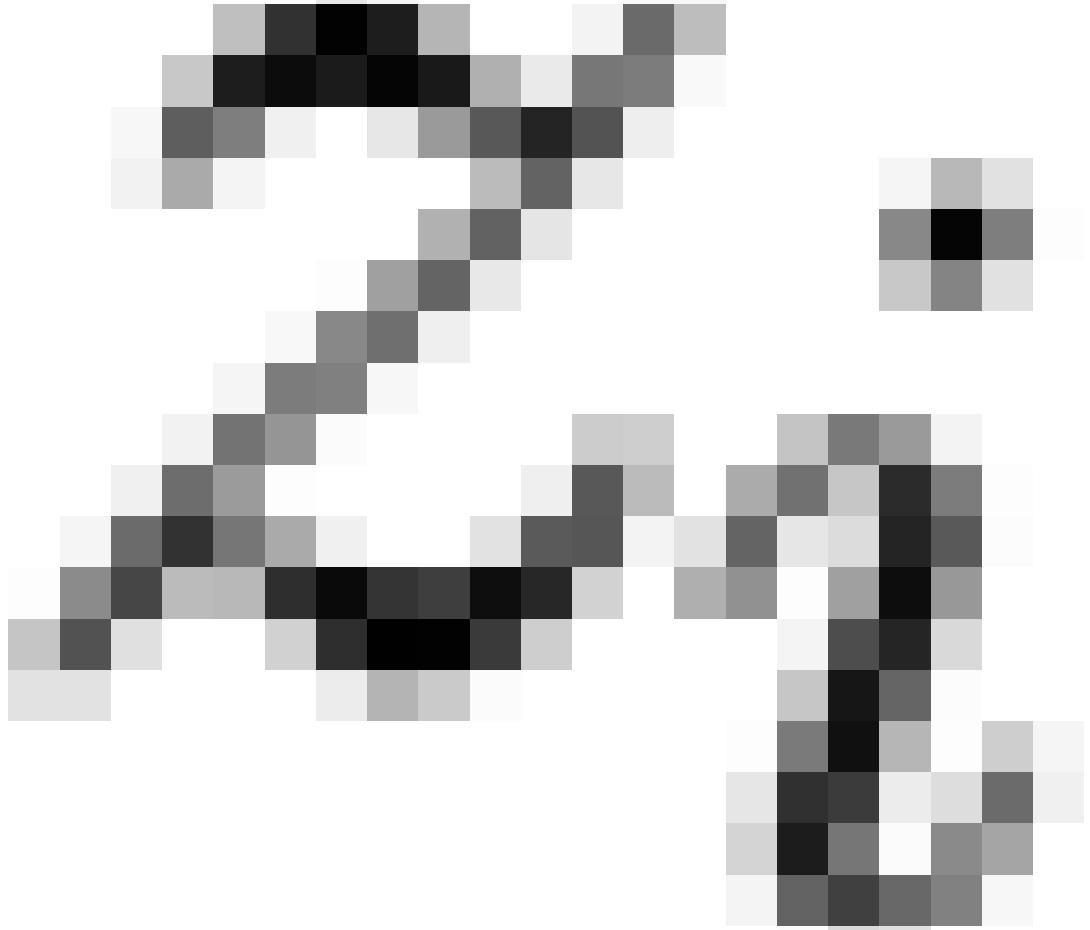


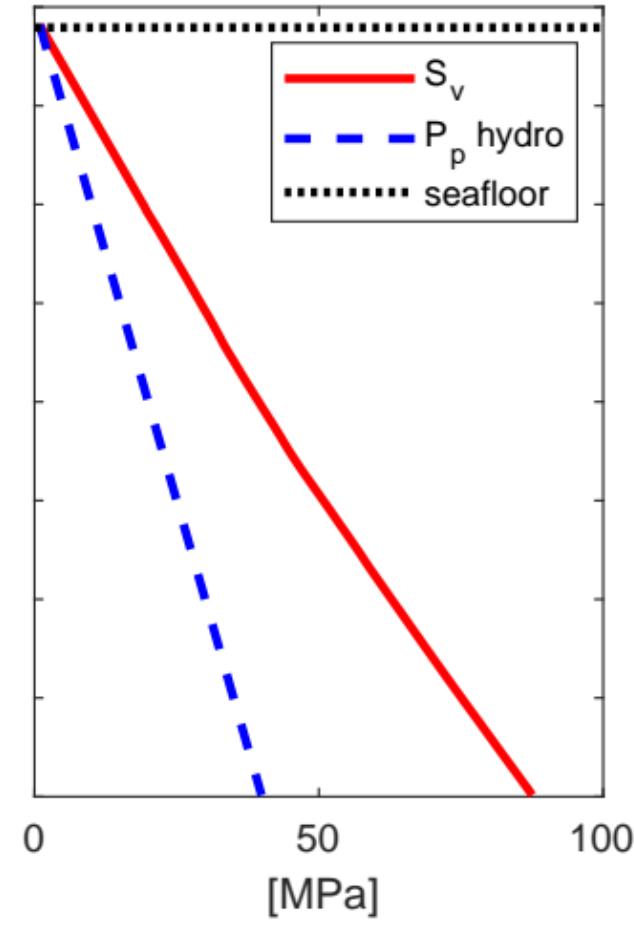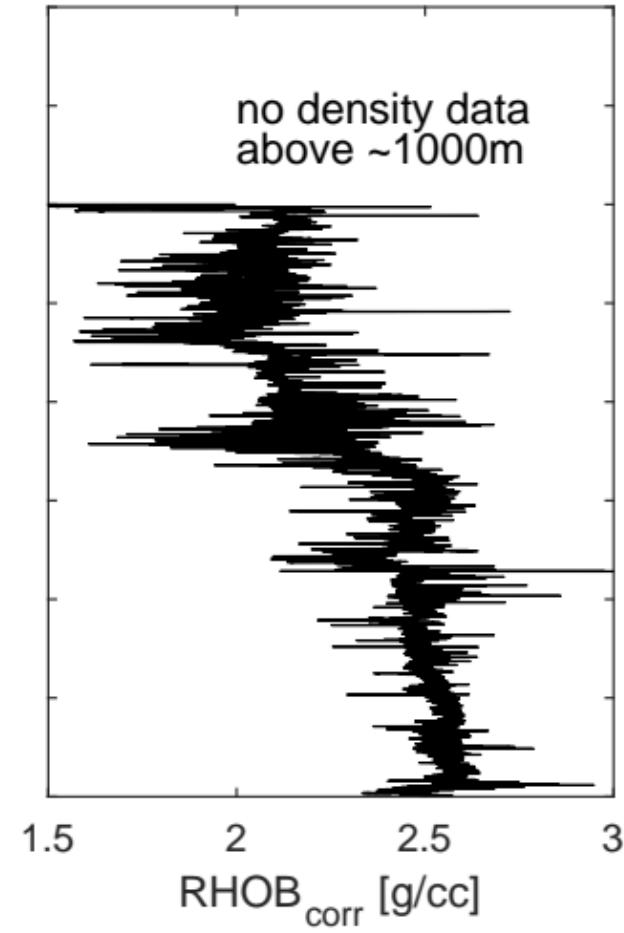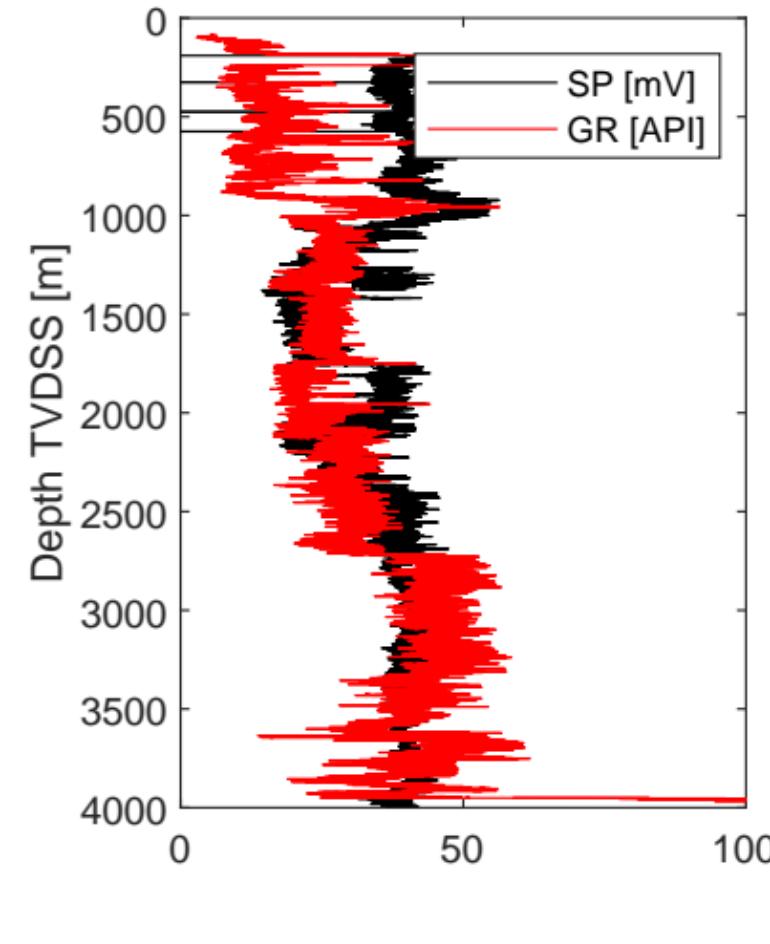

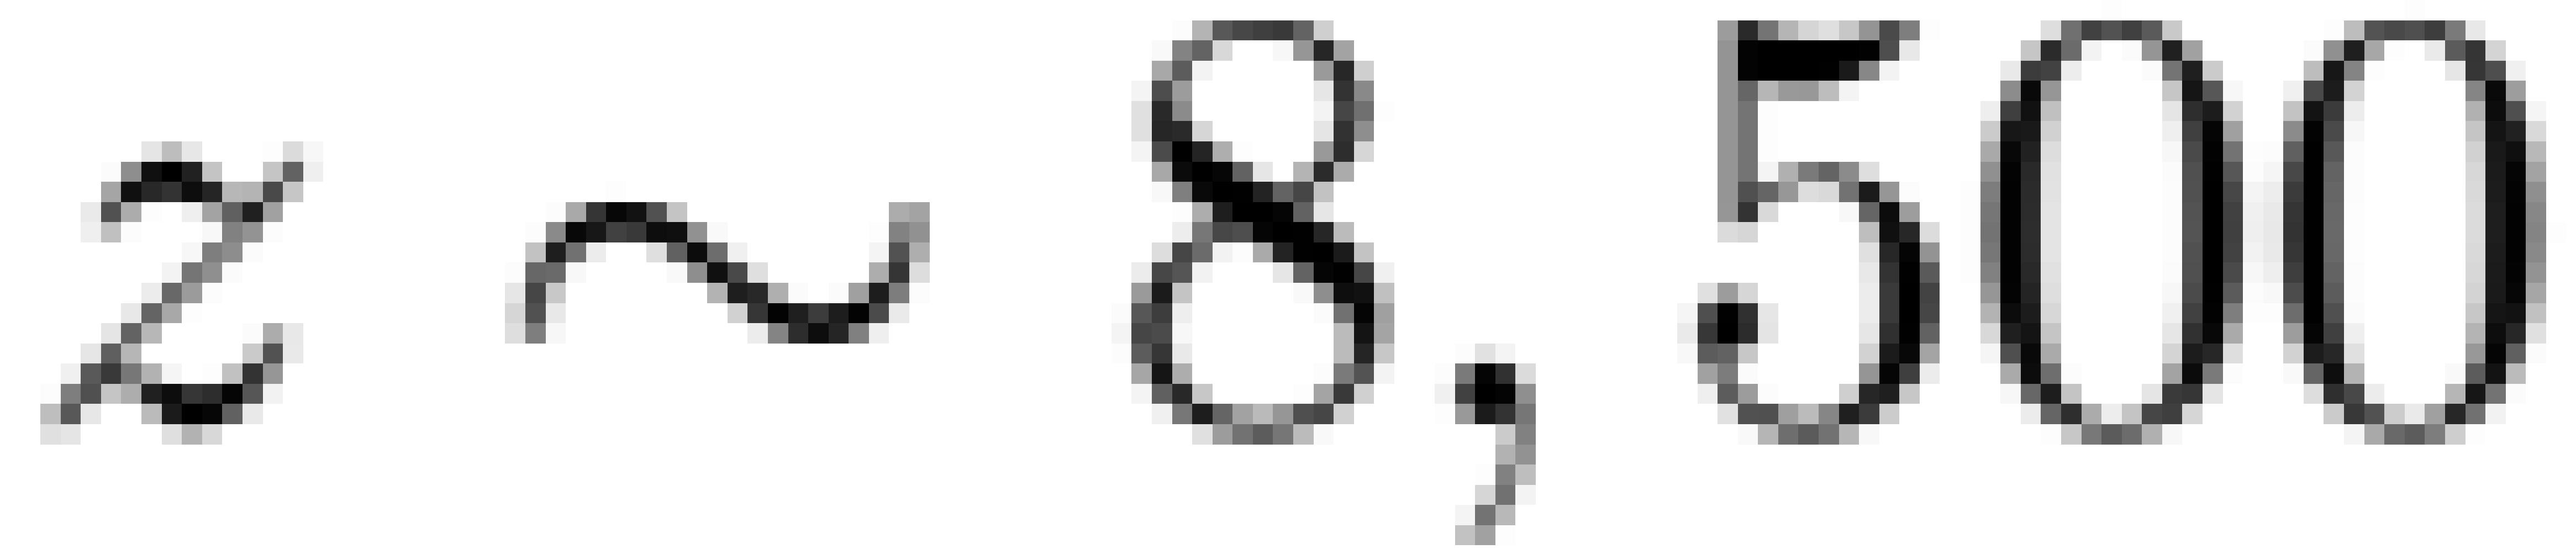

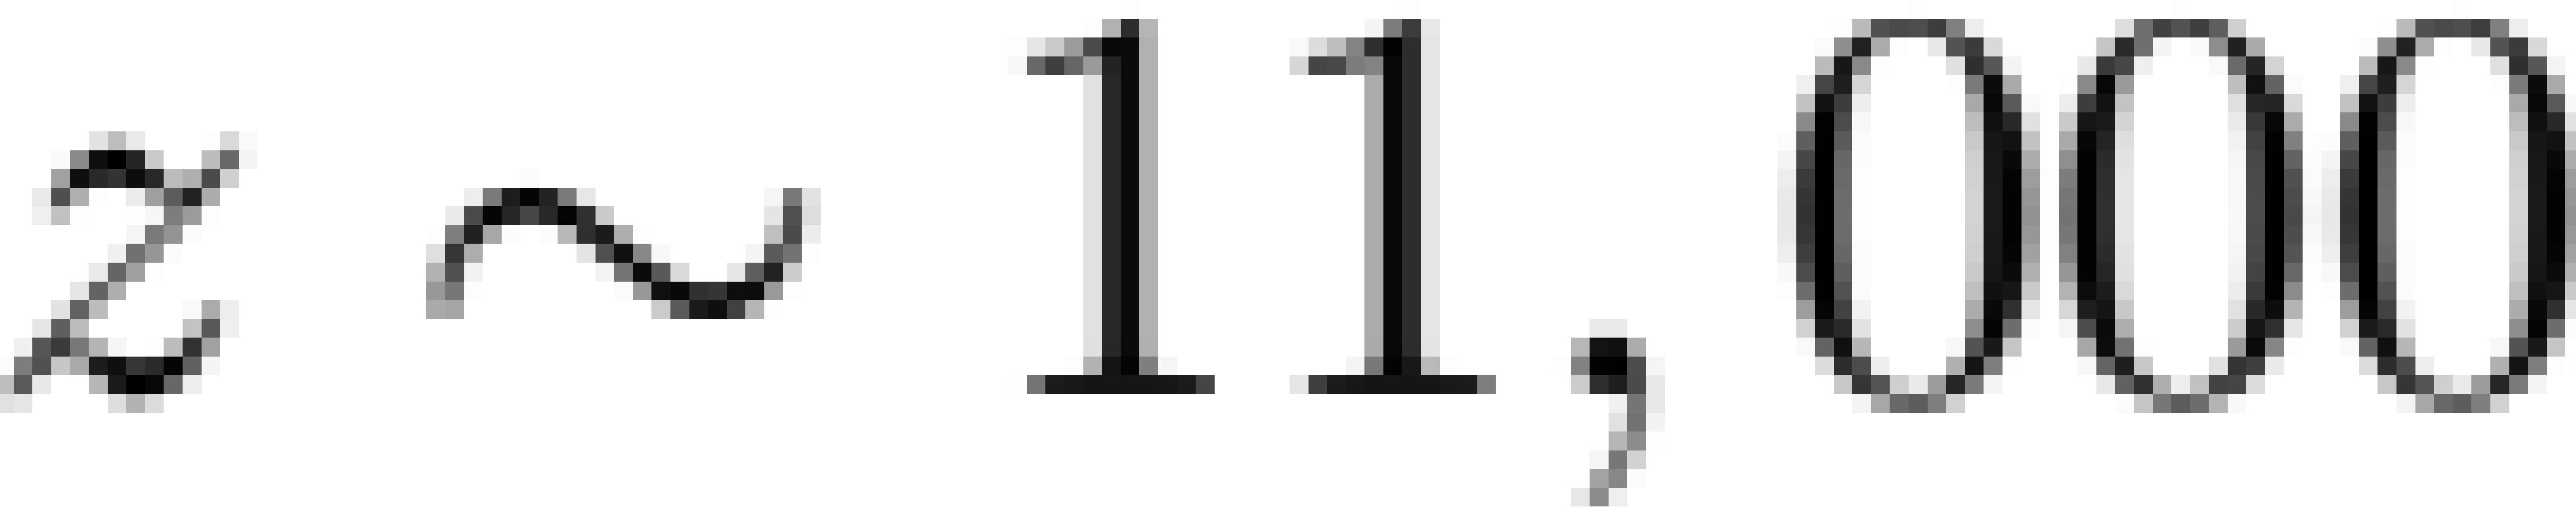

Monte Cristo field Onshore - Zoback 2013 – Figure 2.2

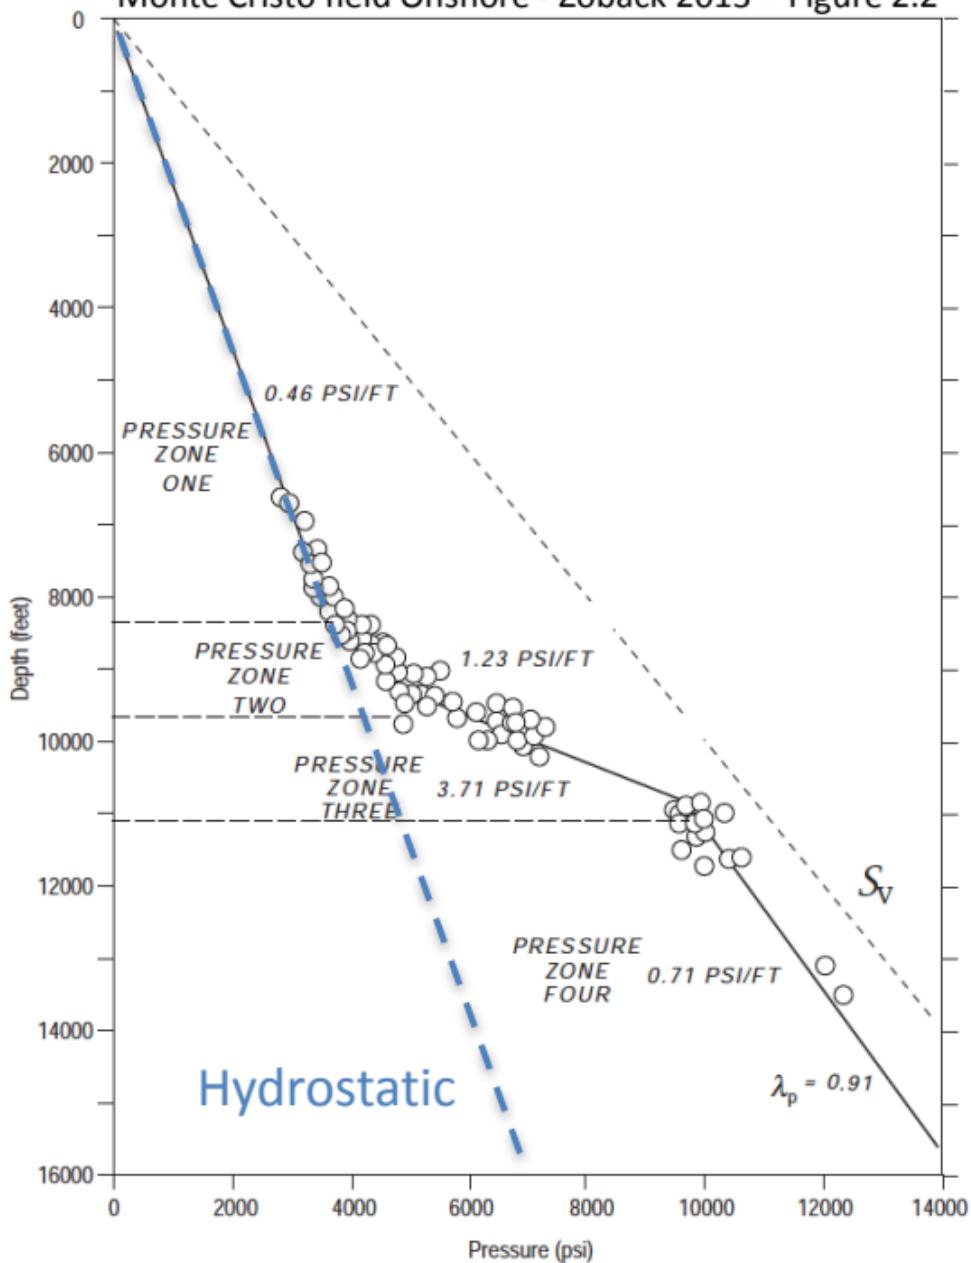









$\lambda_p(z)$






$P(z)$
 $S_T(z)$

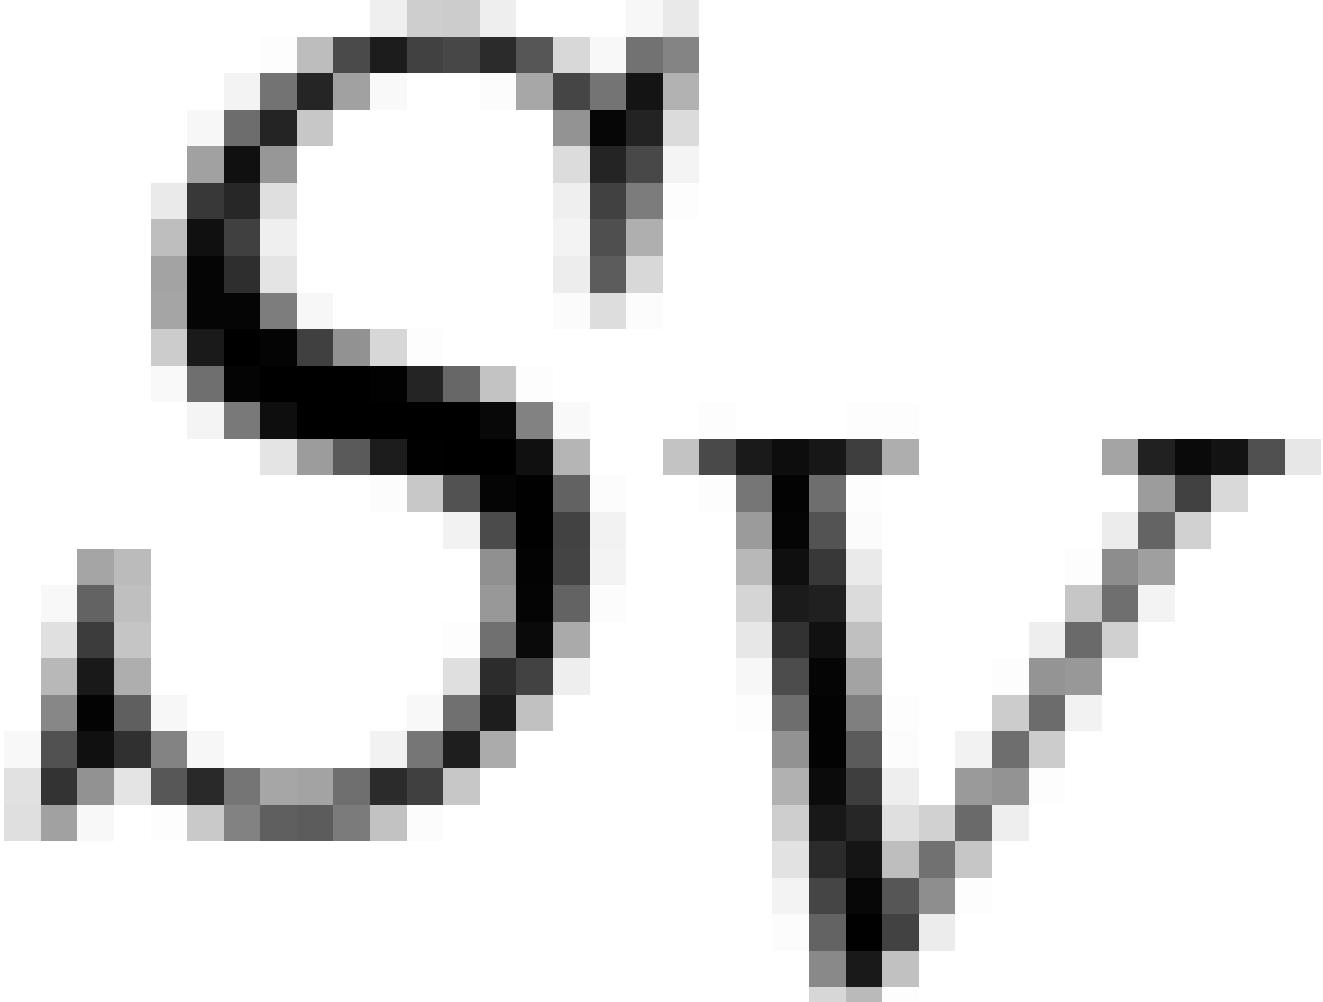


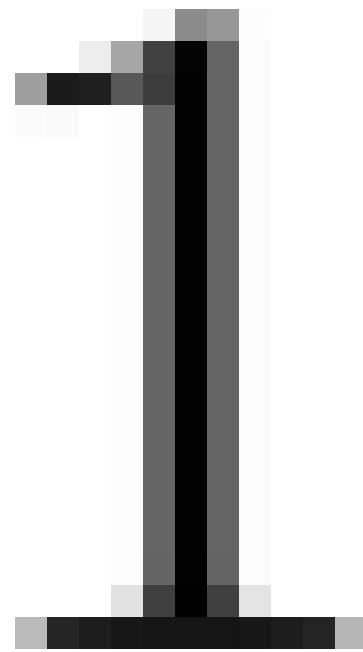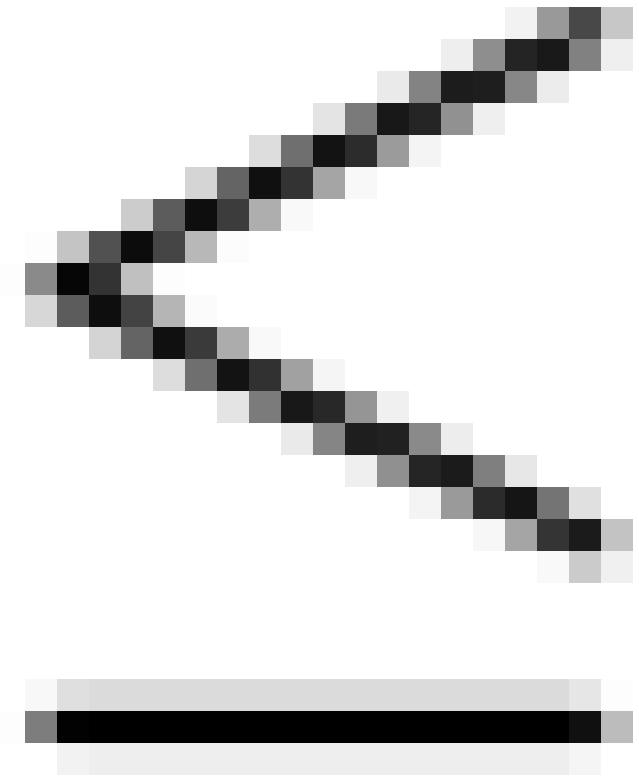

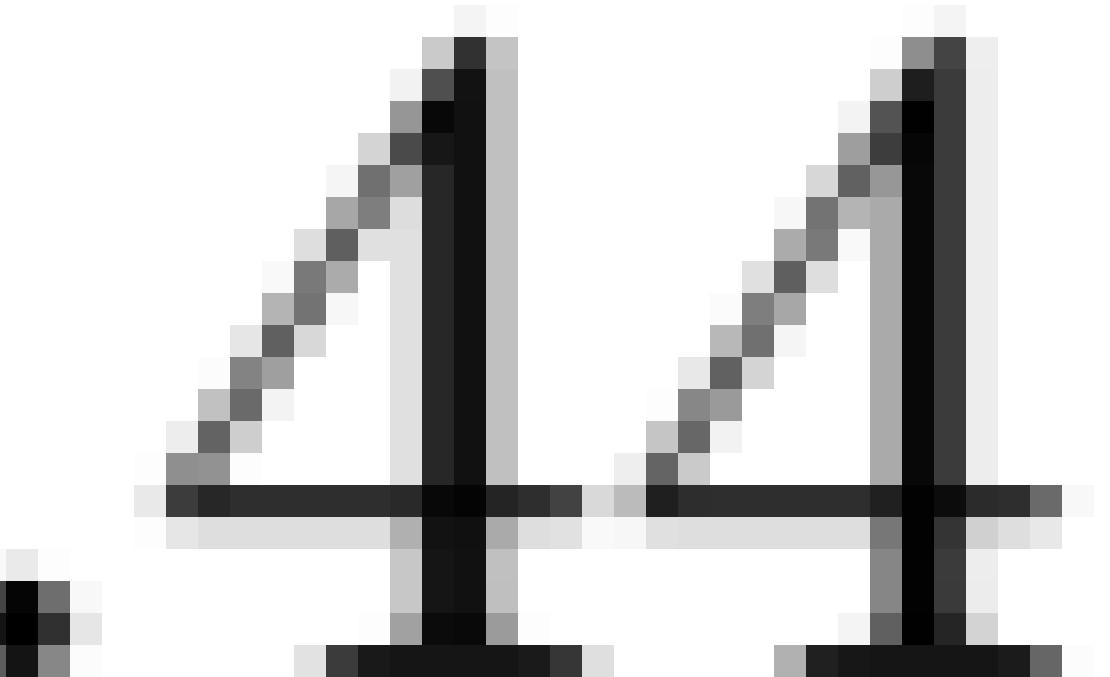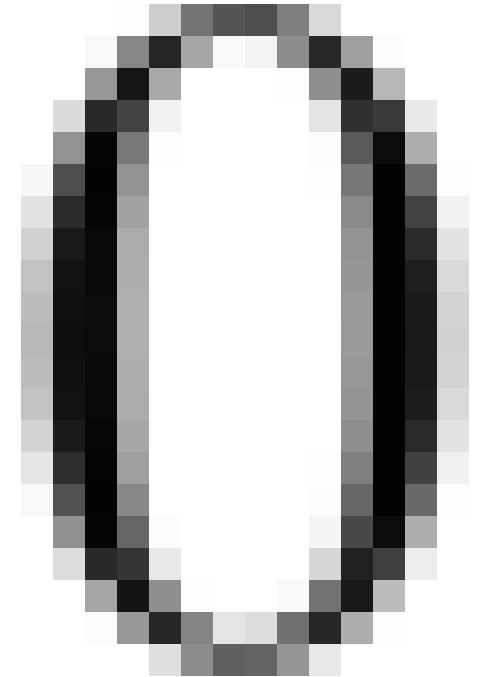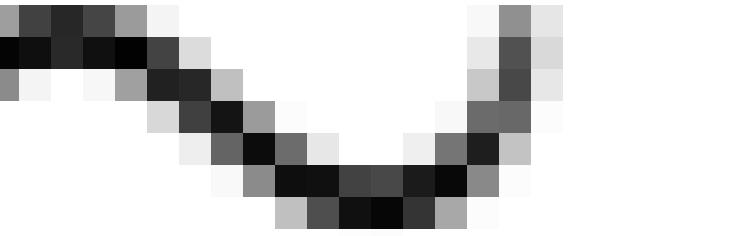


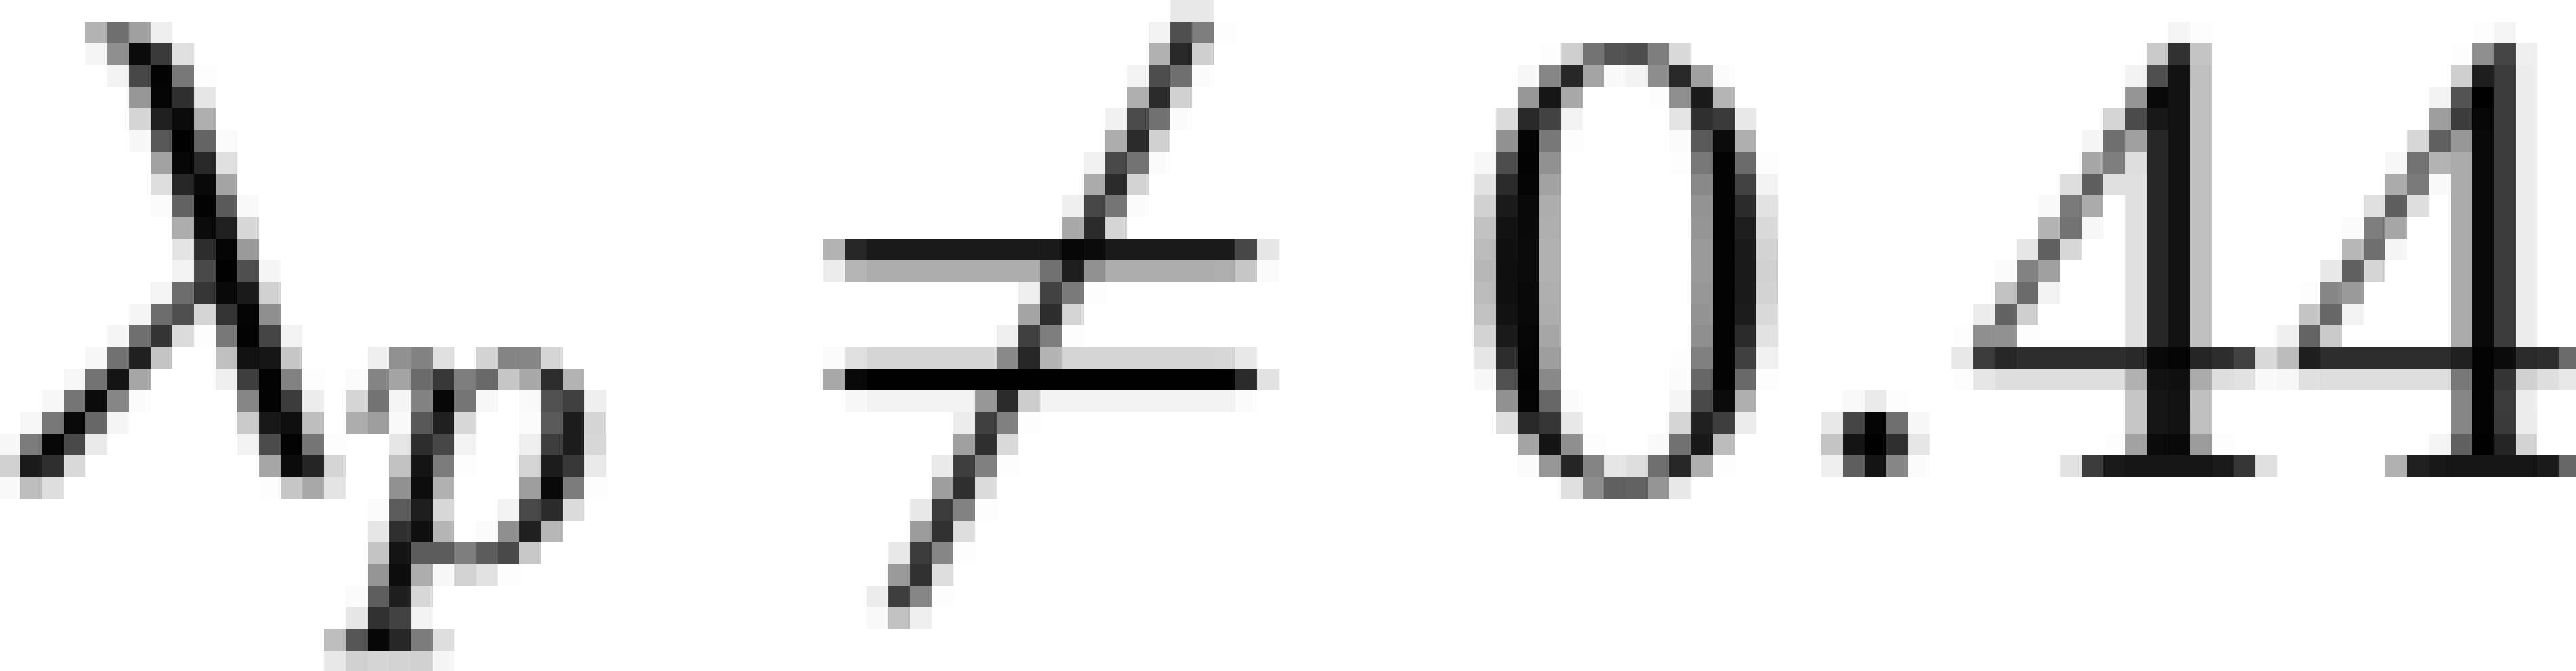

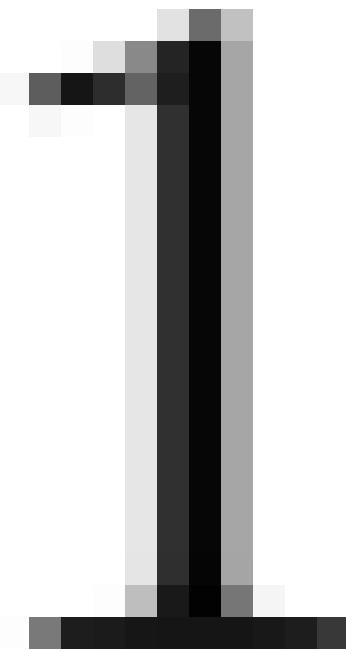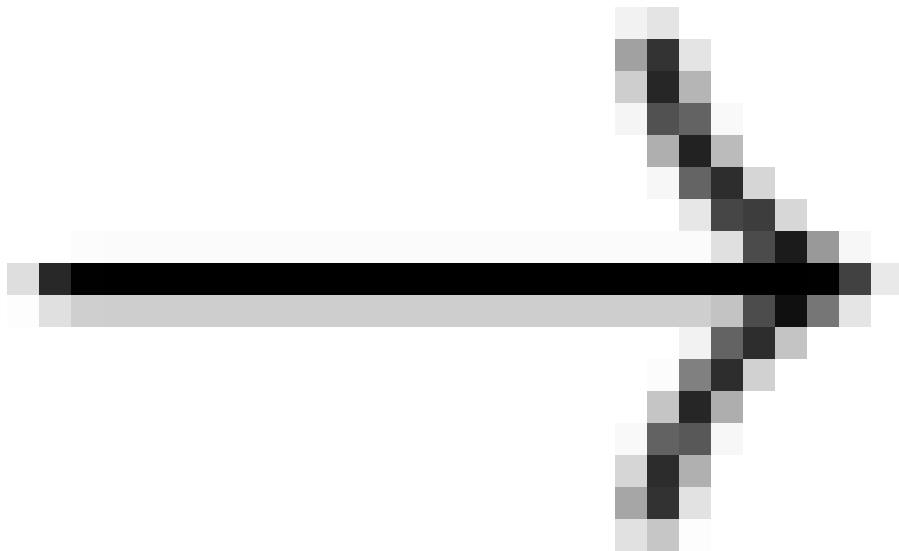

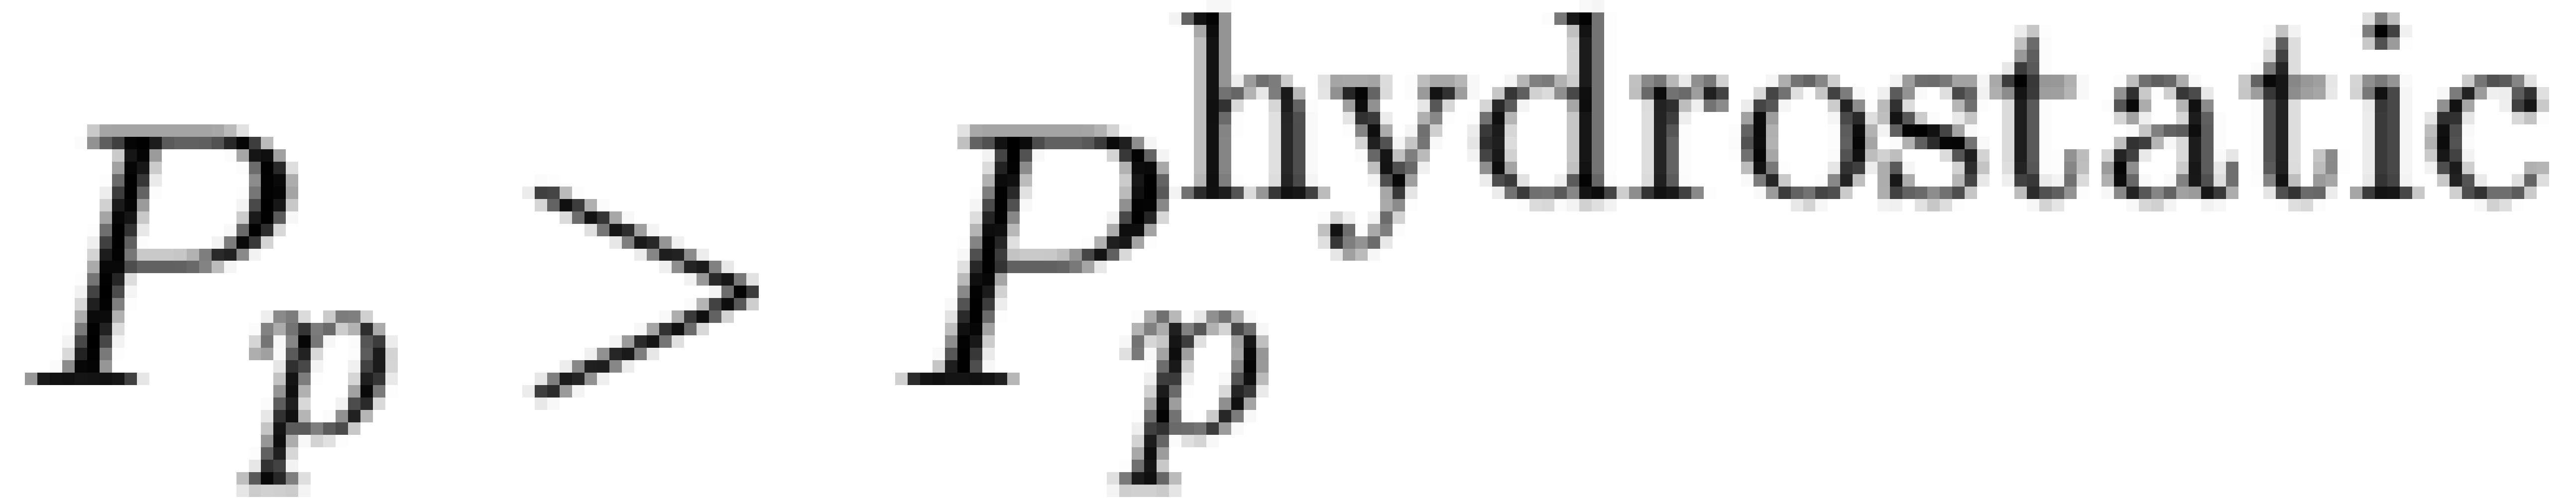



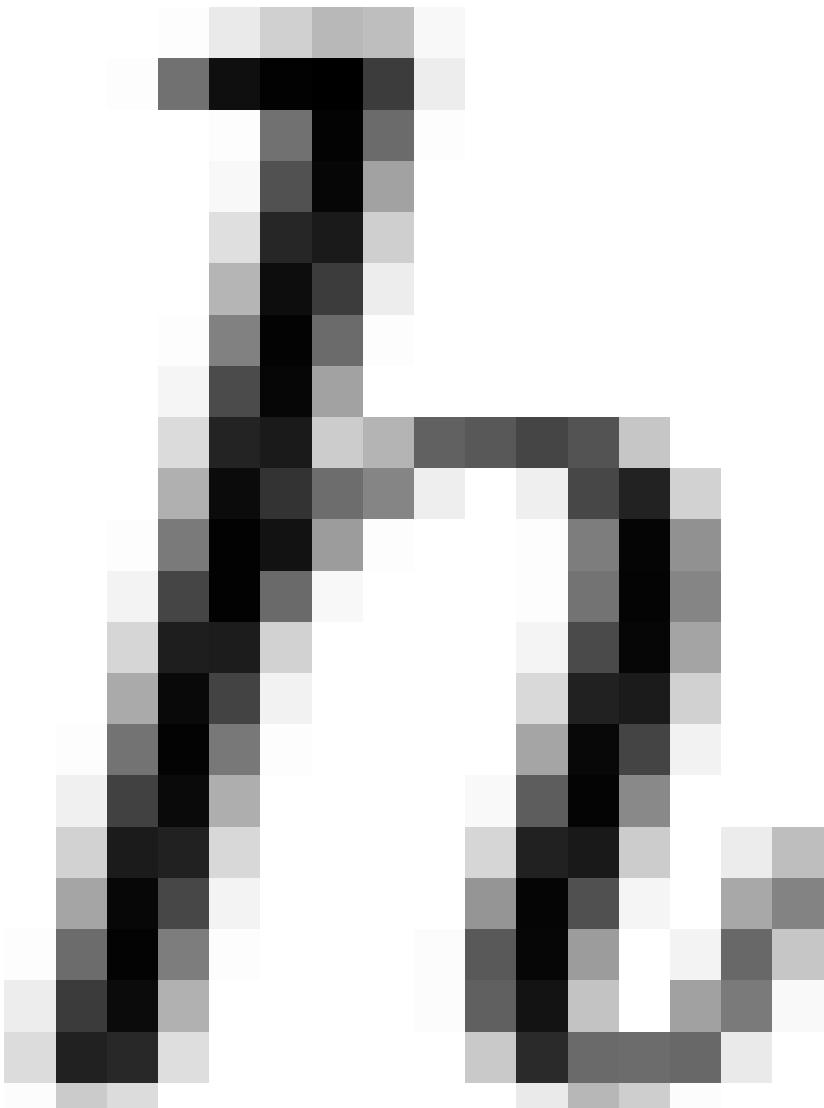






- **Aquathermal pressurization**

- $\Delta T \rightarrow \Delta P$


- **Dehydration reactions**


- $\Delta V \rightarrow \Delta P$
 - Montmorillonite to Illite (frees water)

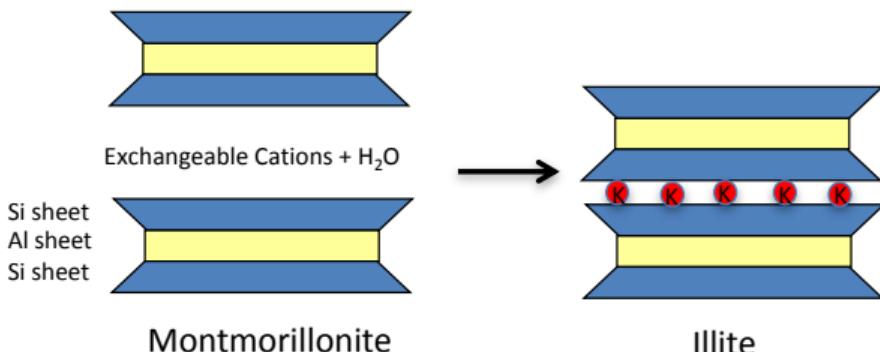



- **Hydrocarbon generation**


- $\Delta V \rightarrow \Delta P$

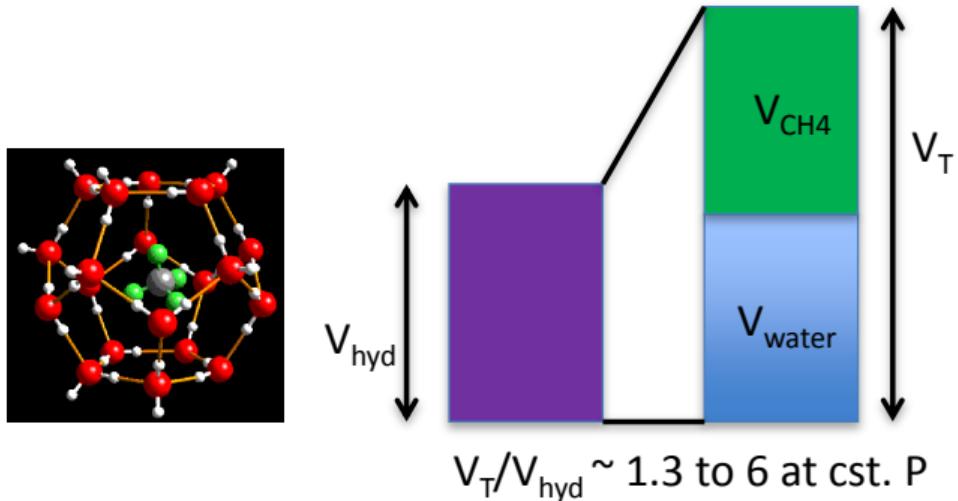

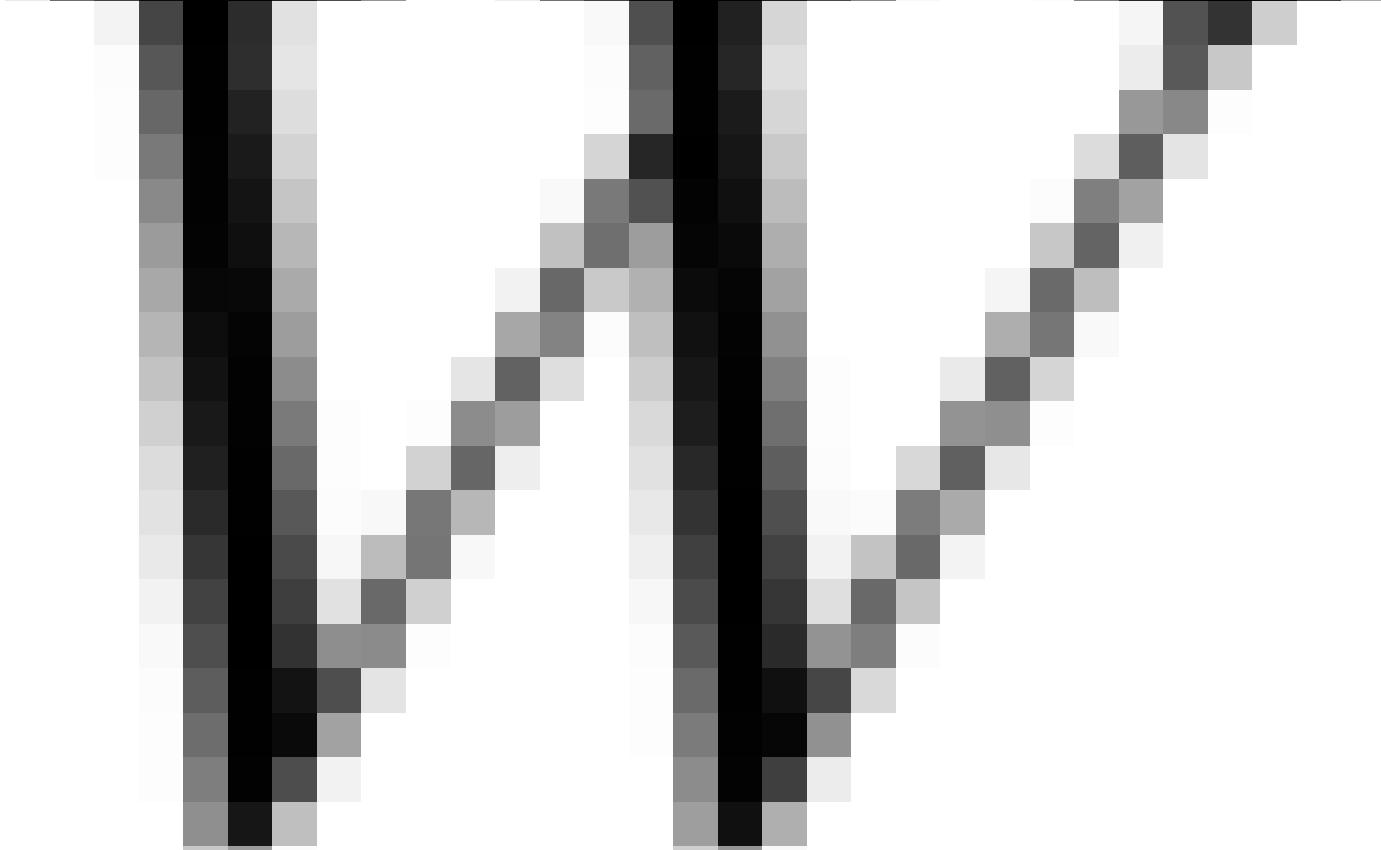


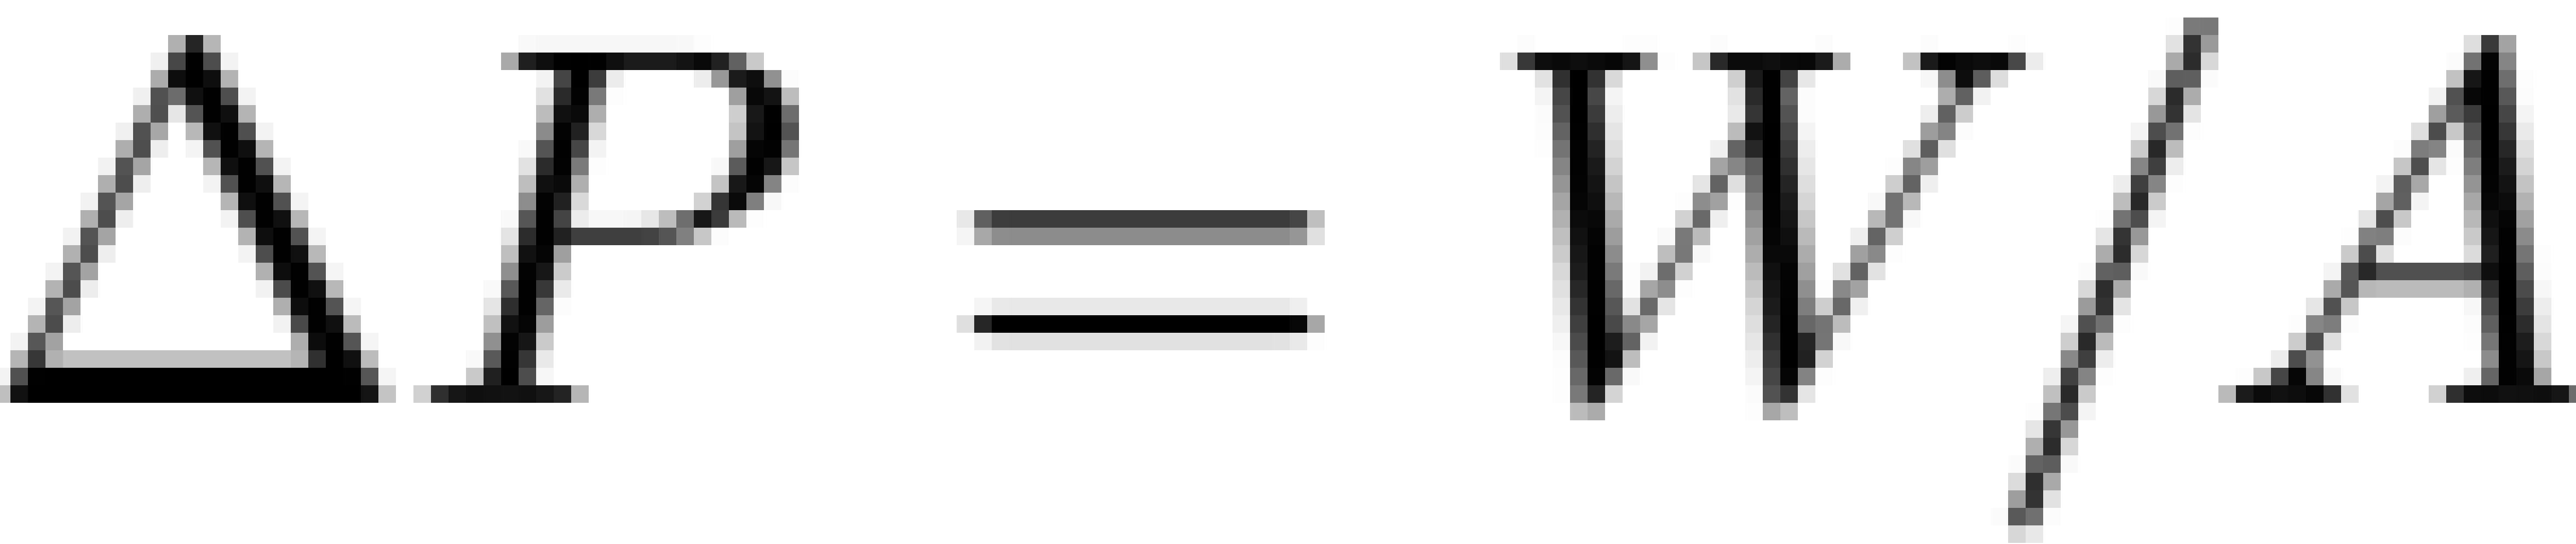





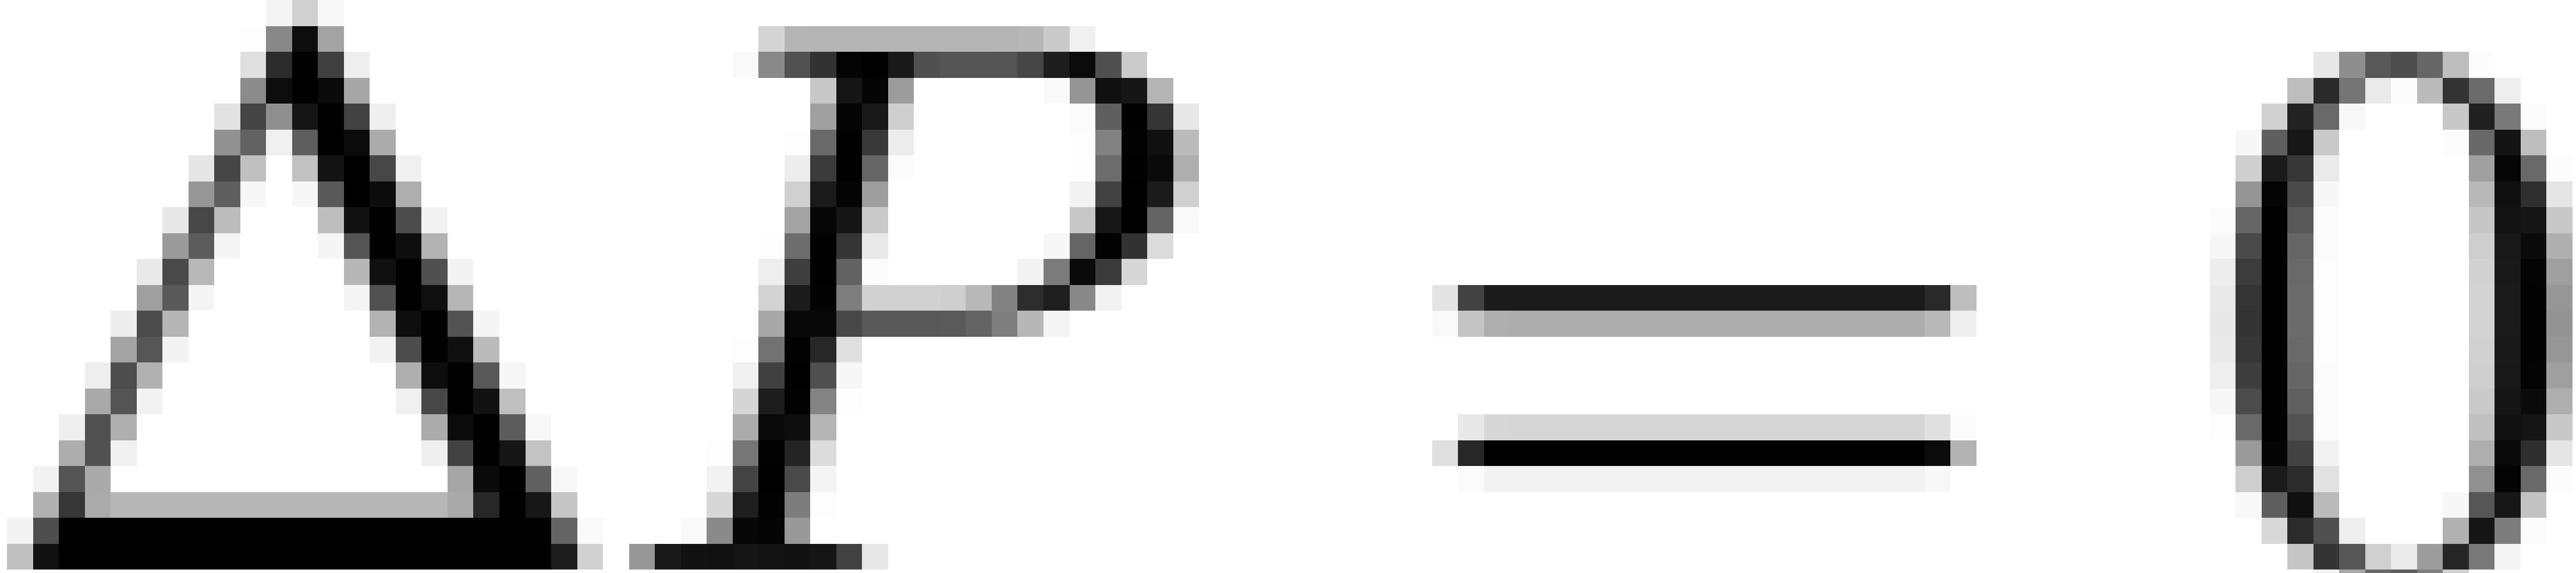


- **Disequilibrium compaction (Underconsolidation)**
 - $\Delta S \rightarrow \Delta P$ (Vertical)
- **Tectonic compression**
 - $\Delta S \rightarrow \Delta P$ (Horizontal)

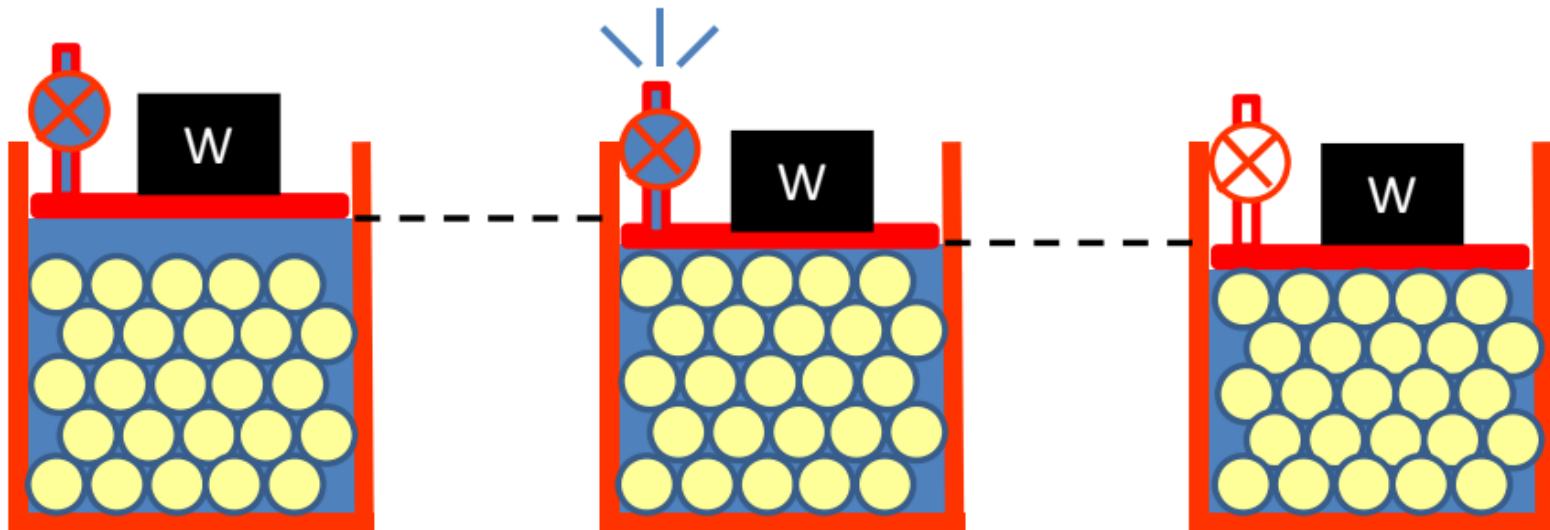

Pressure water

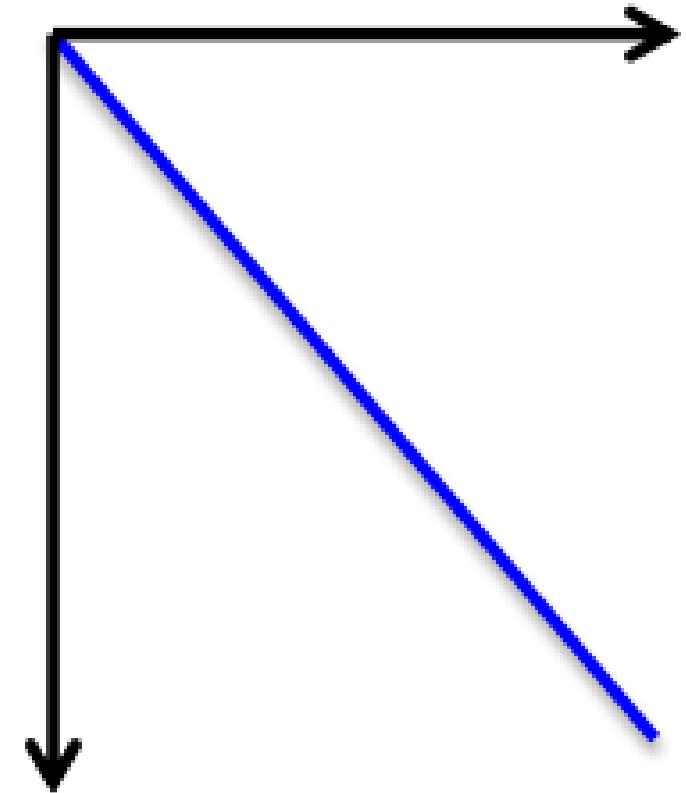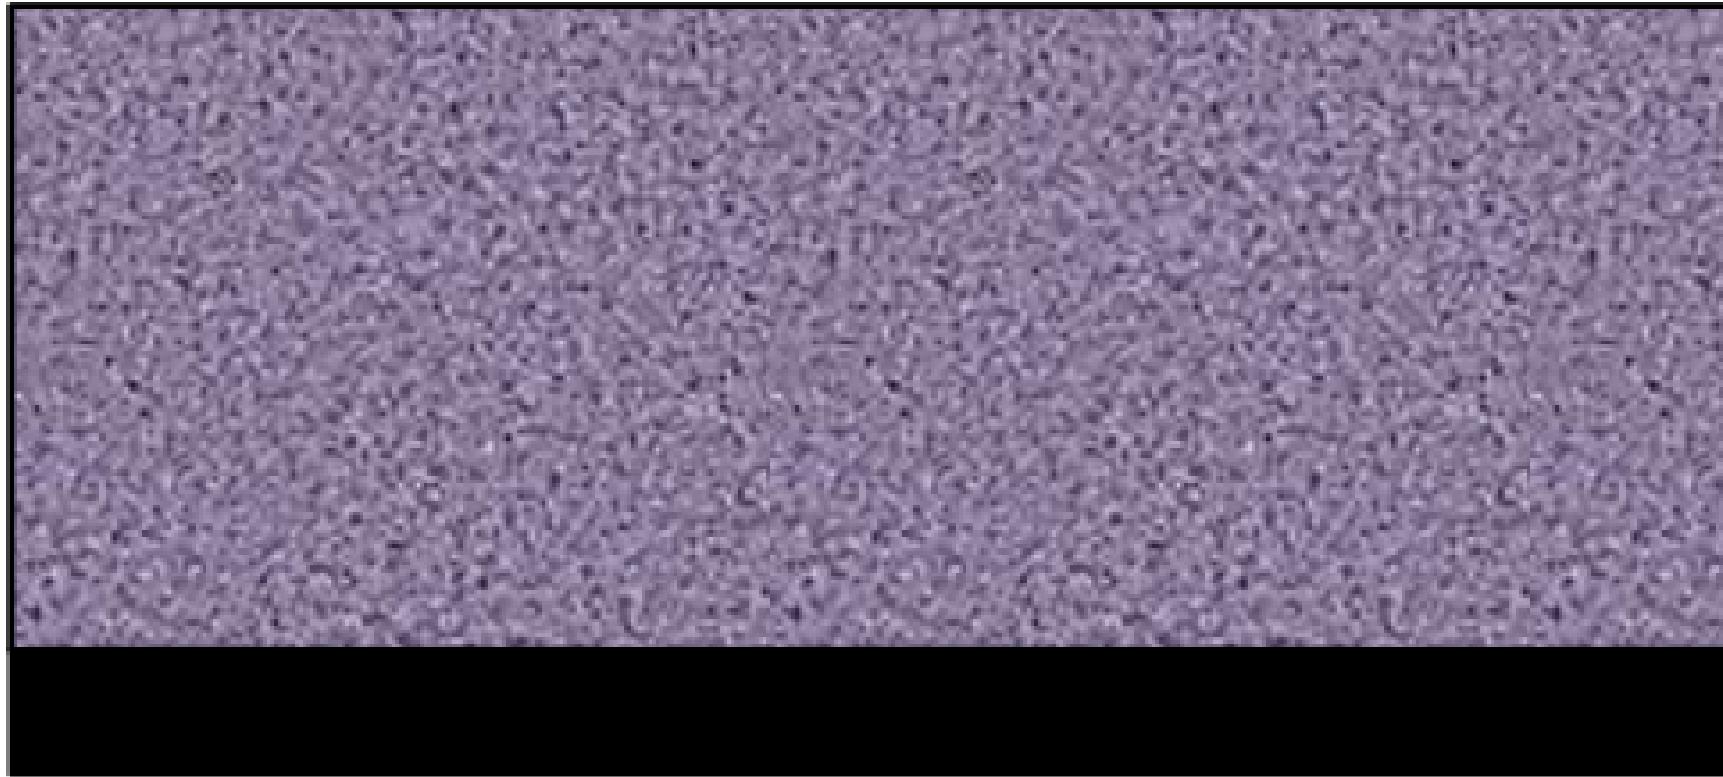

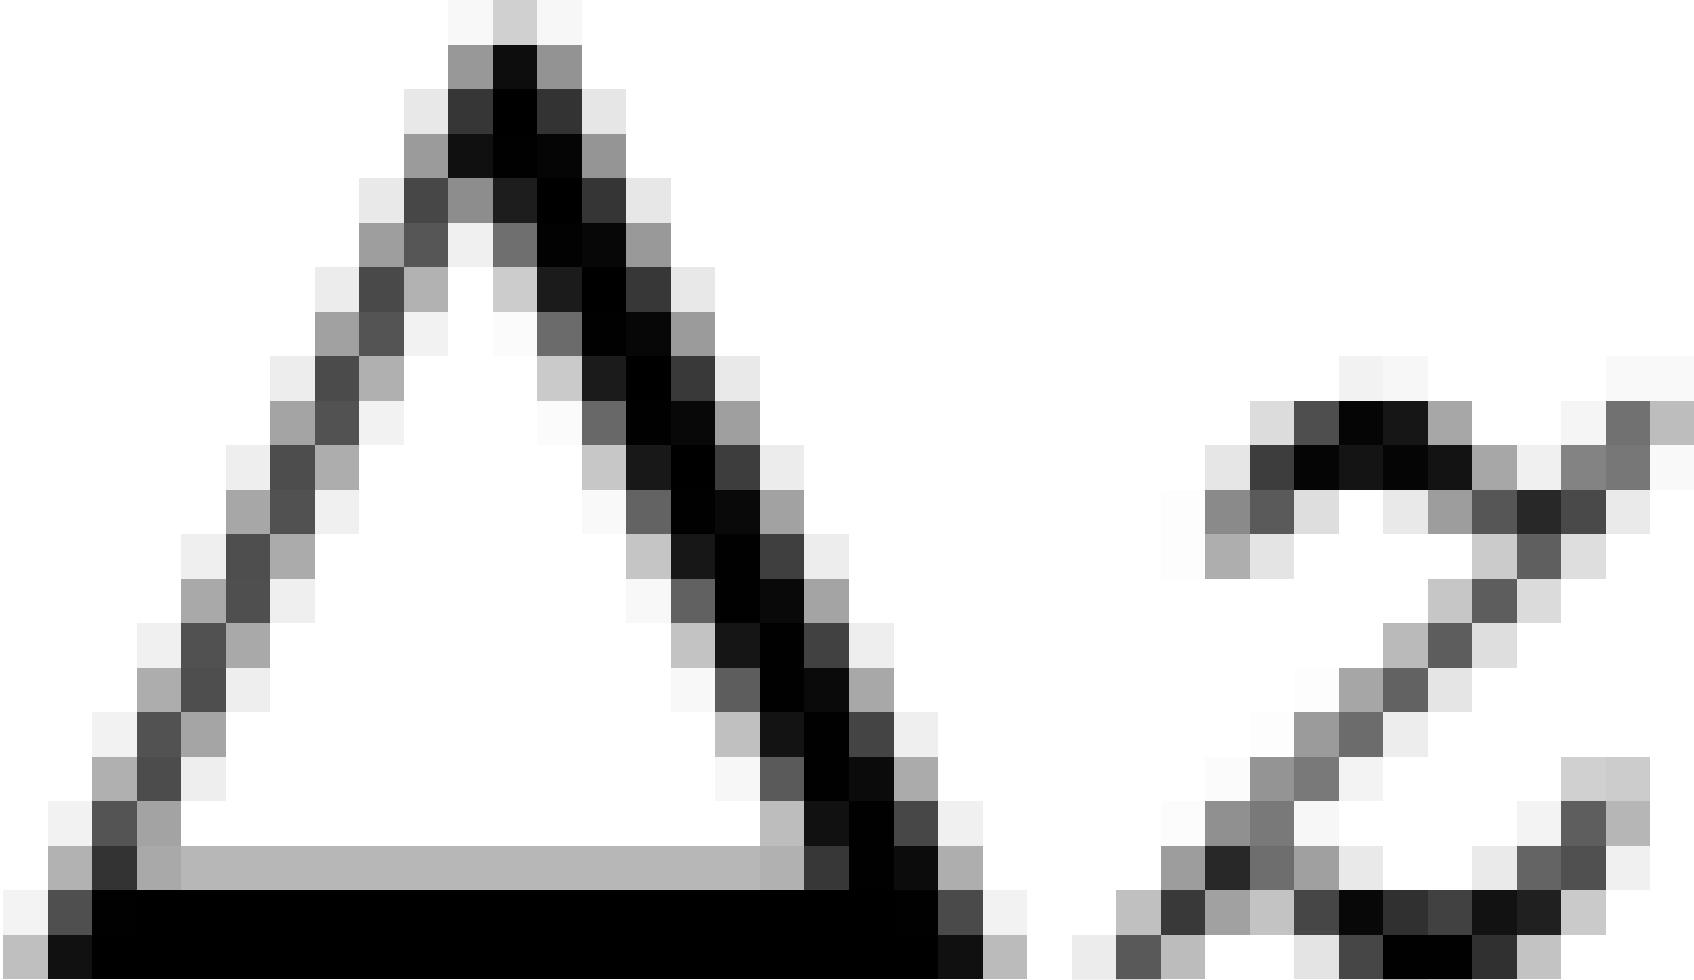


Dh


=


MK

ll

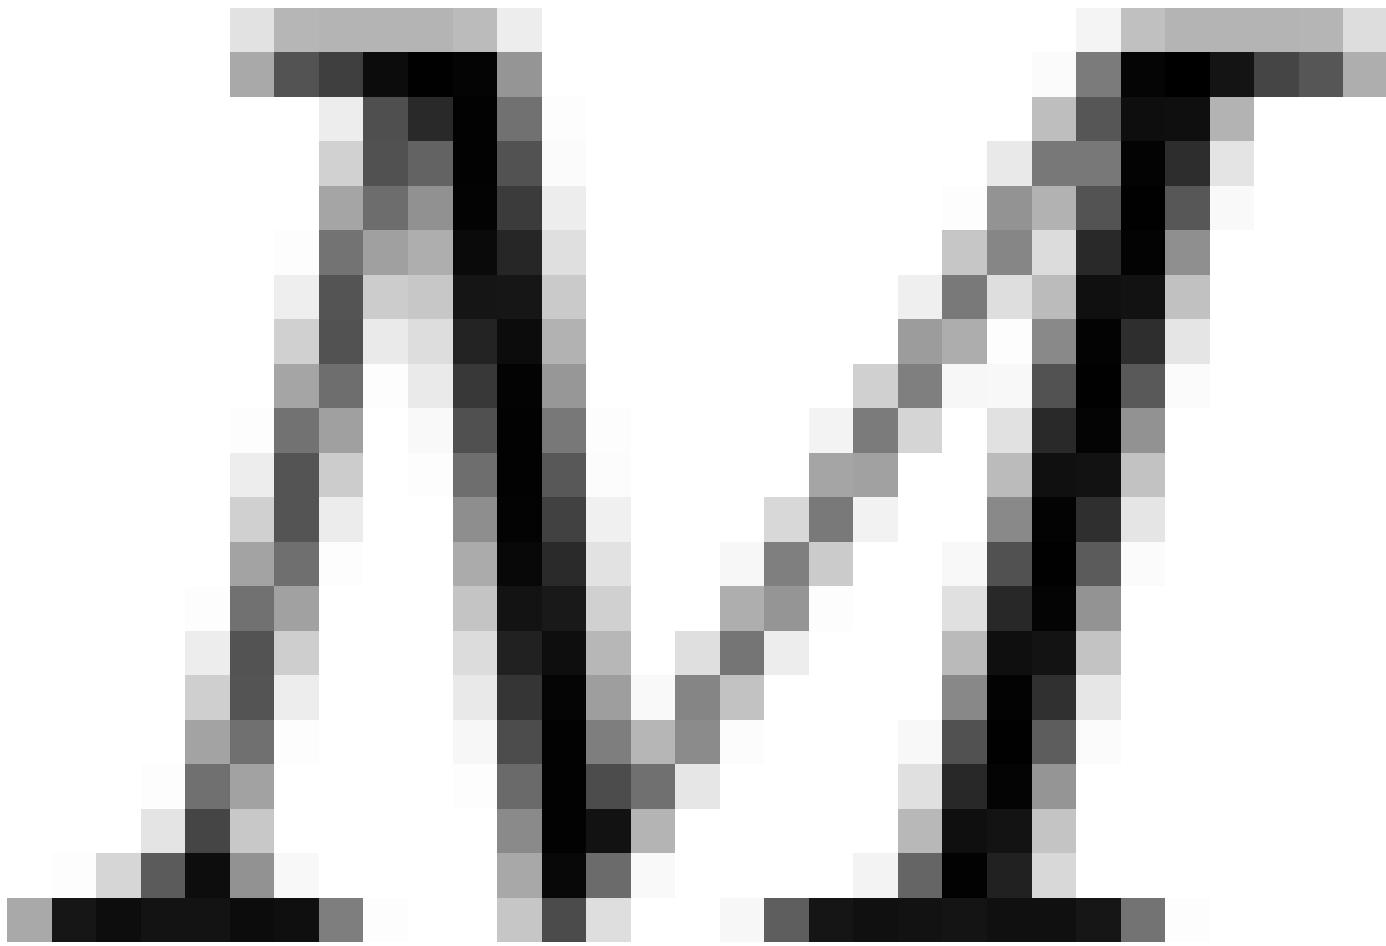



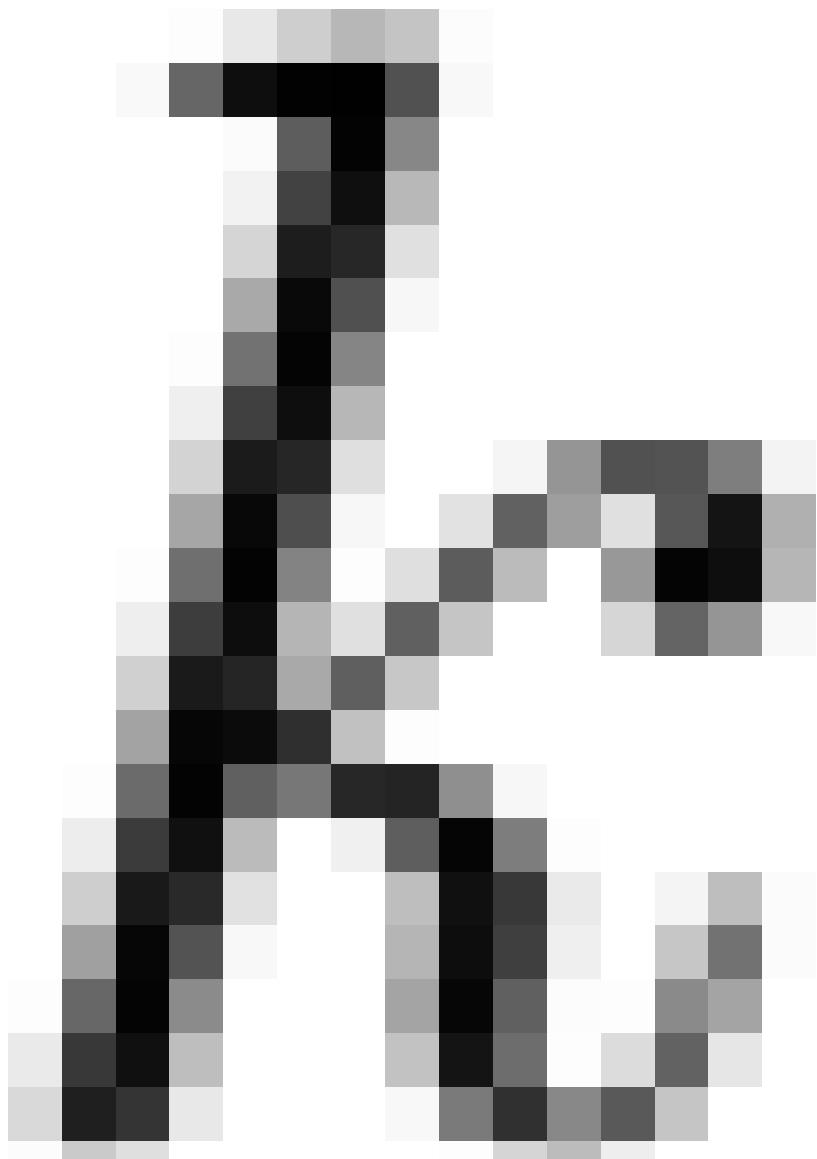

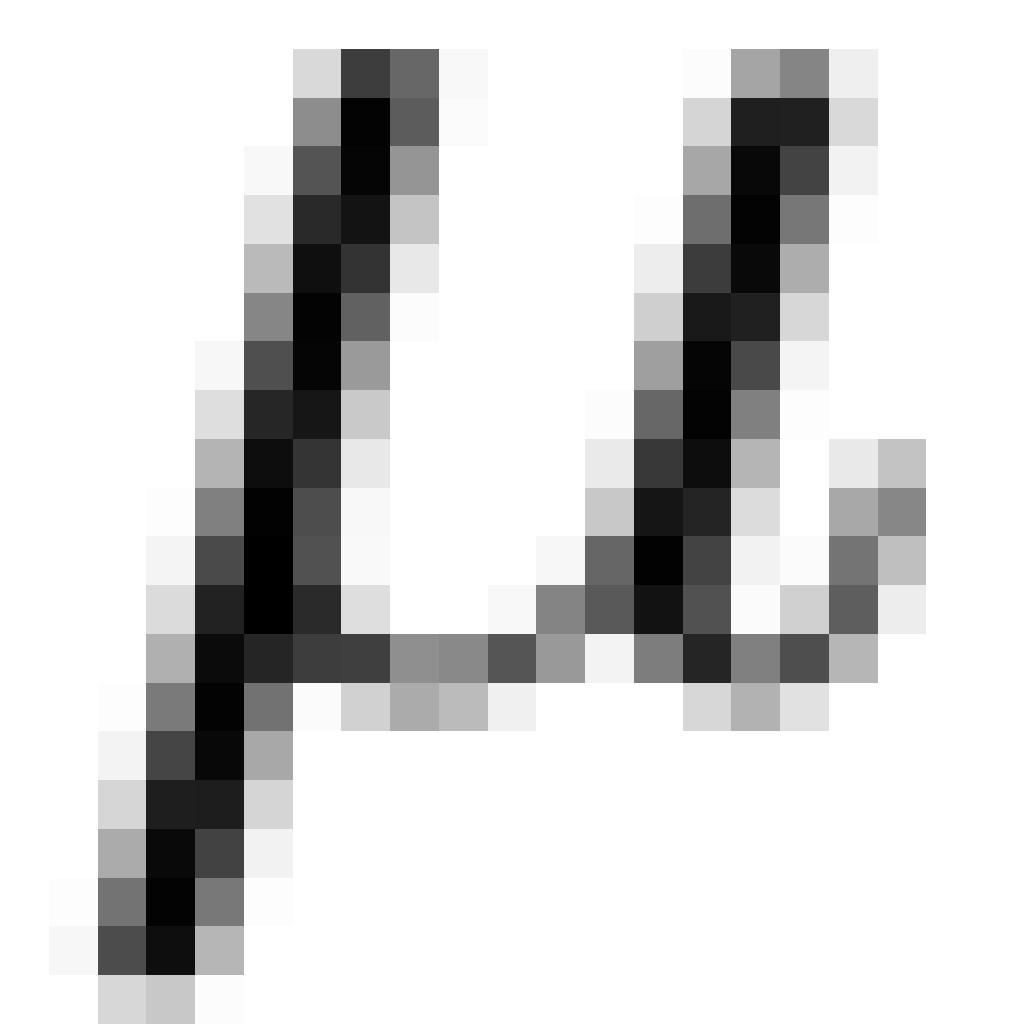

αP
 p

$=$



D_h


$d^2 P$
 p




αt

dz^2

Rate of sedimentation (loading) and rate of fluid “escape”

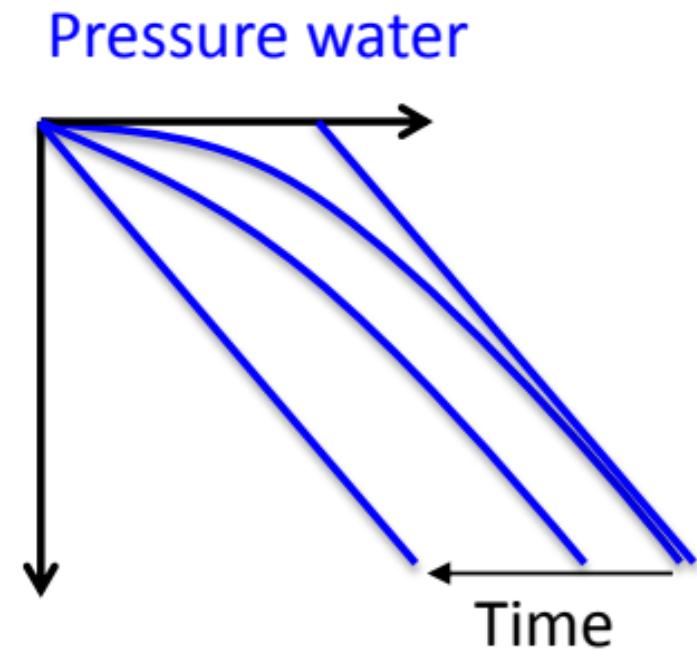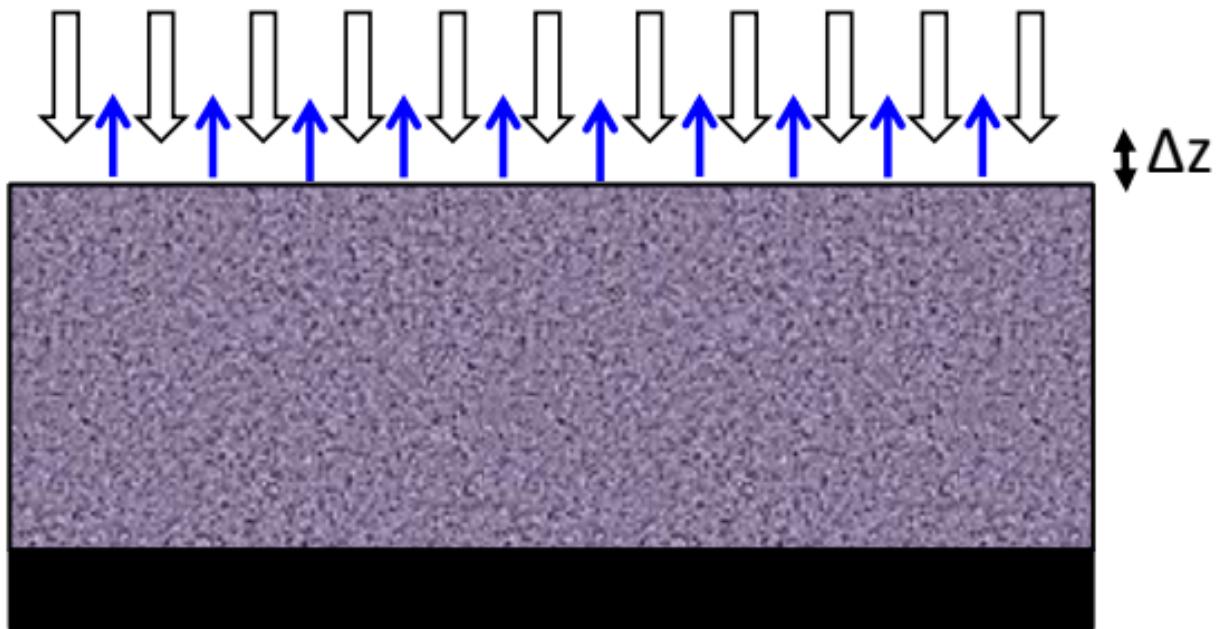

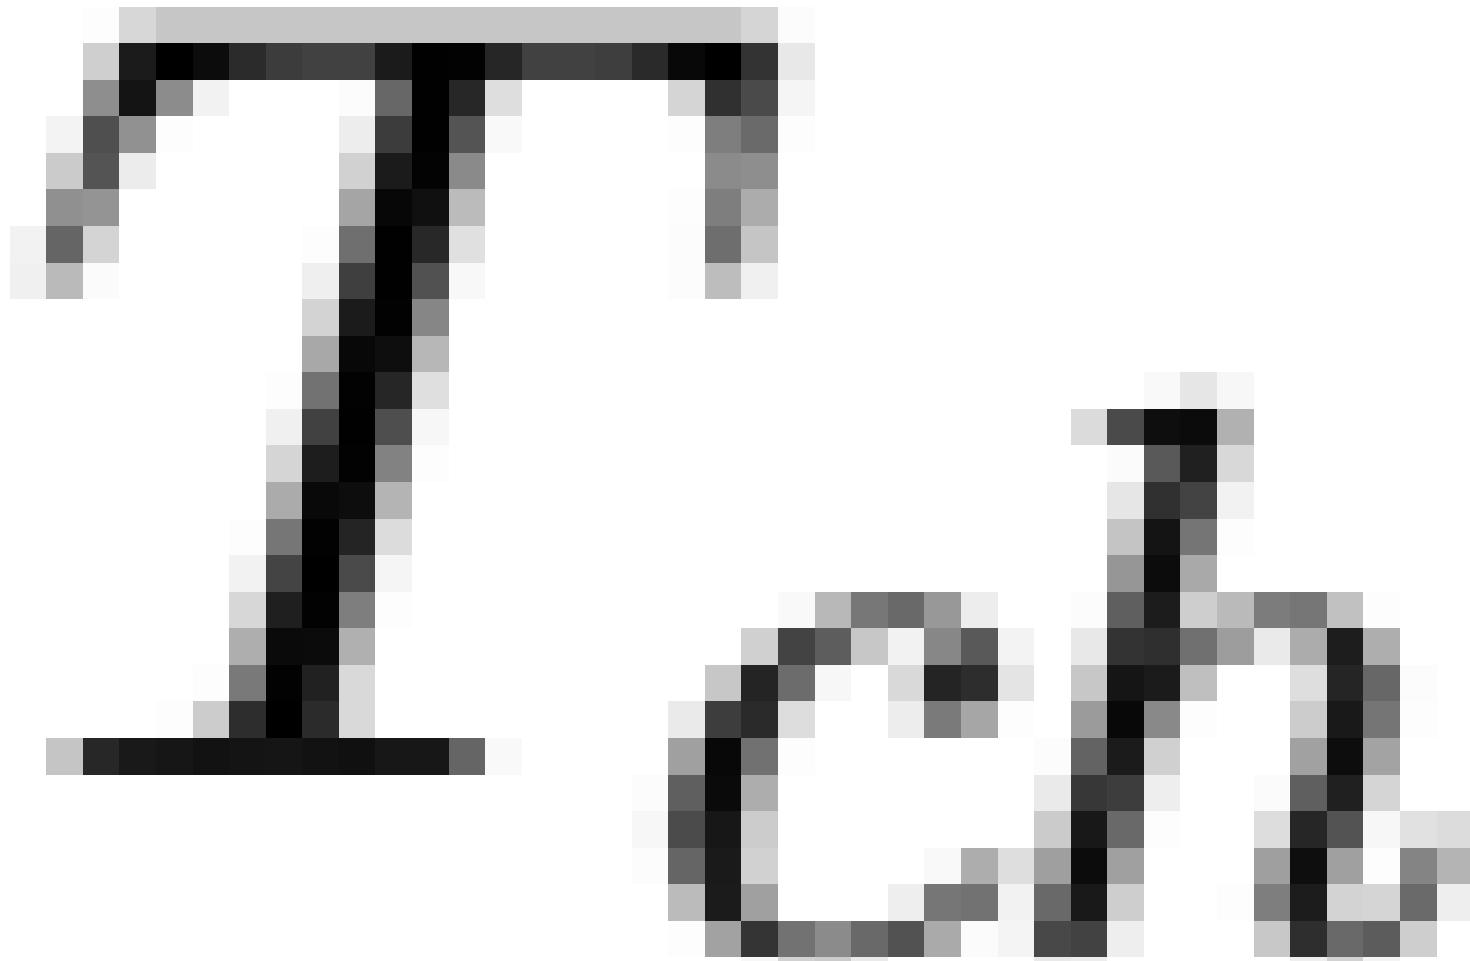

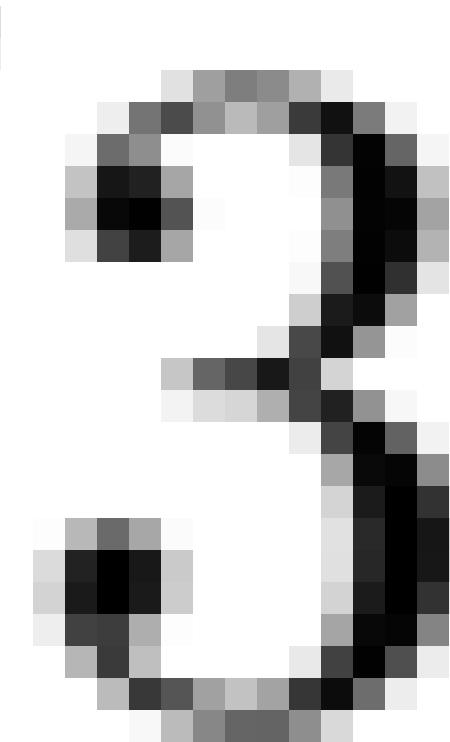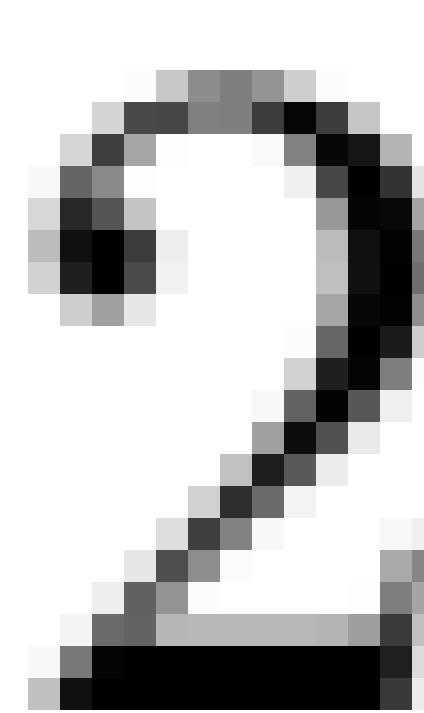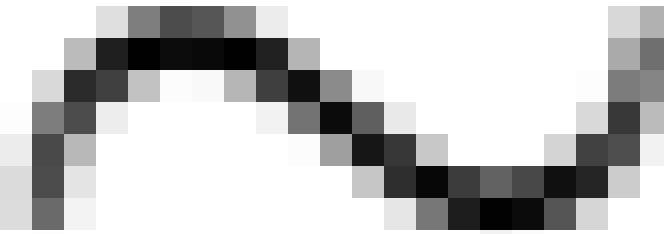



Γ_{ch}




D_h

Γ^2

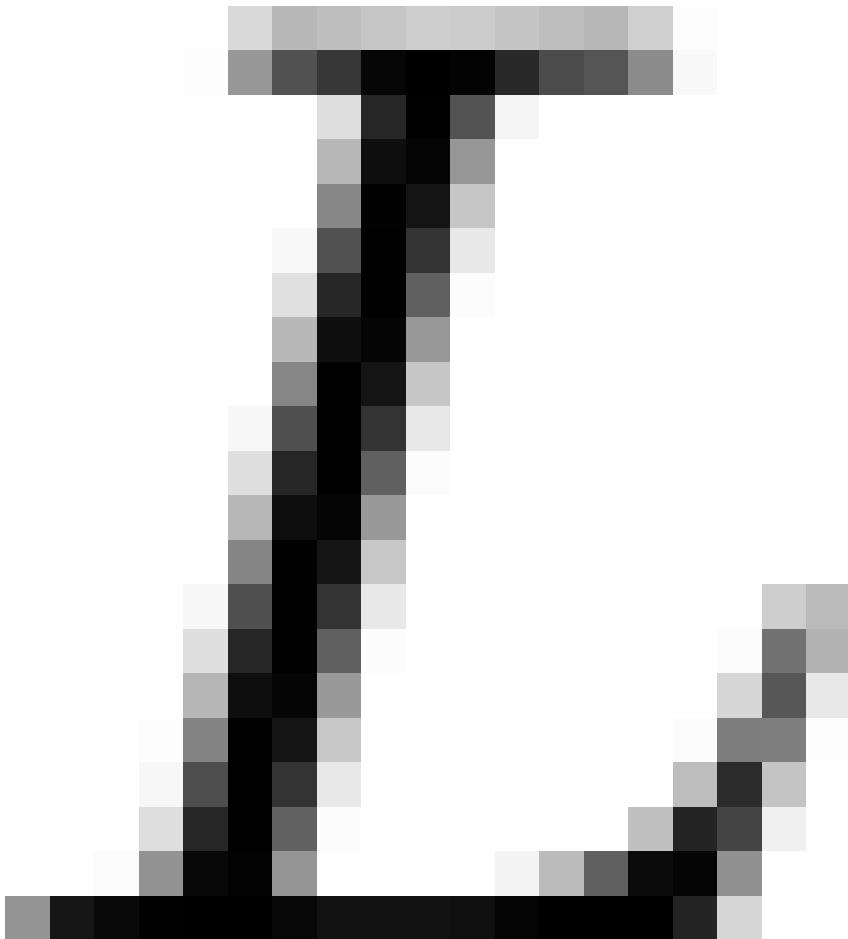


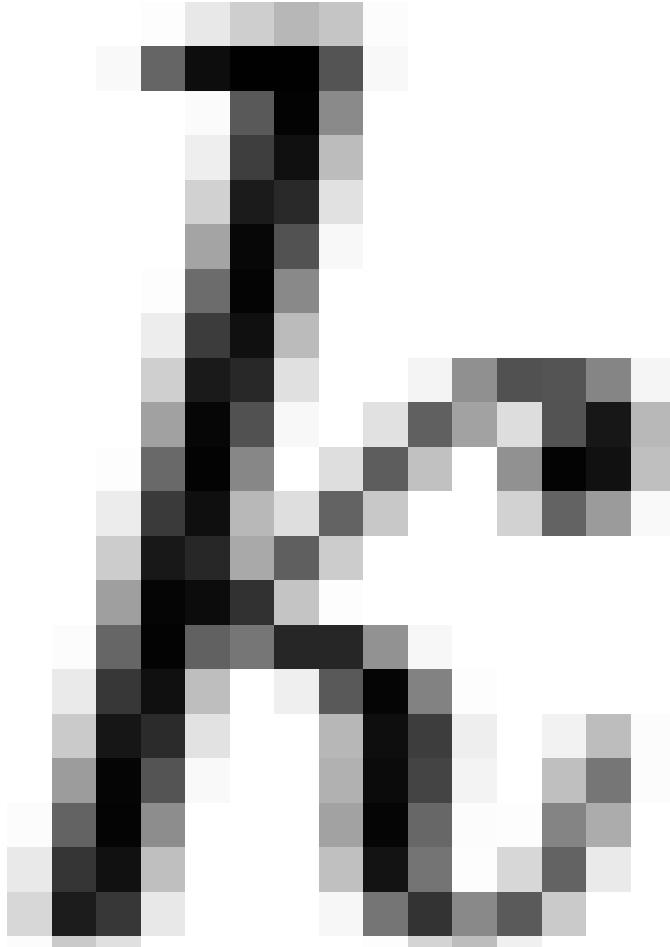

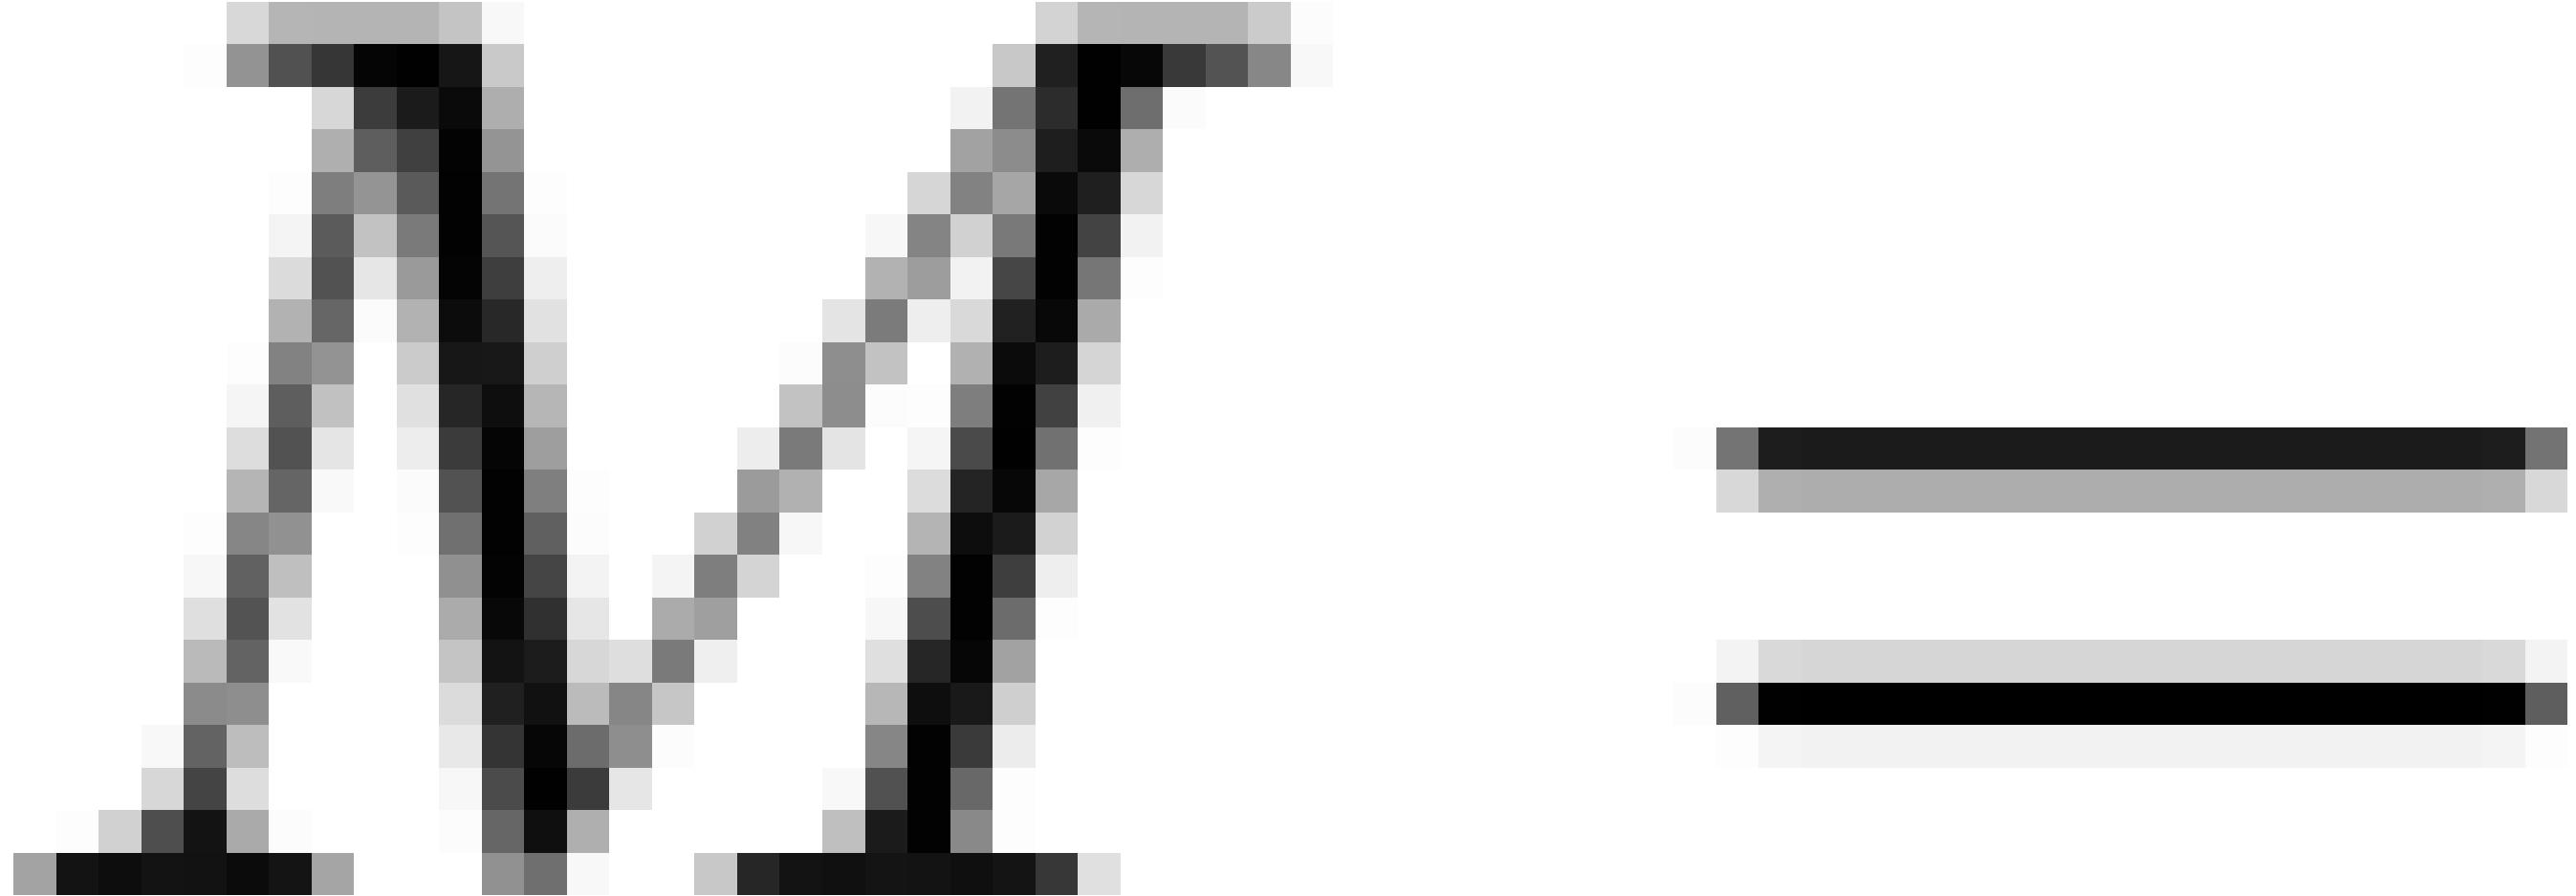








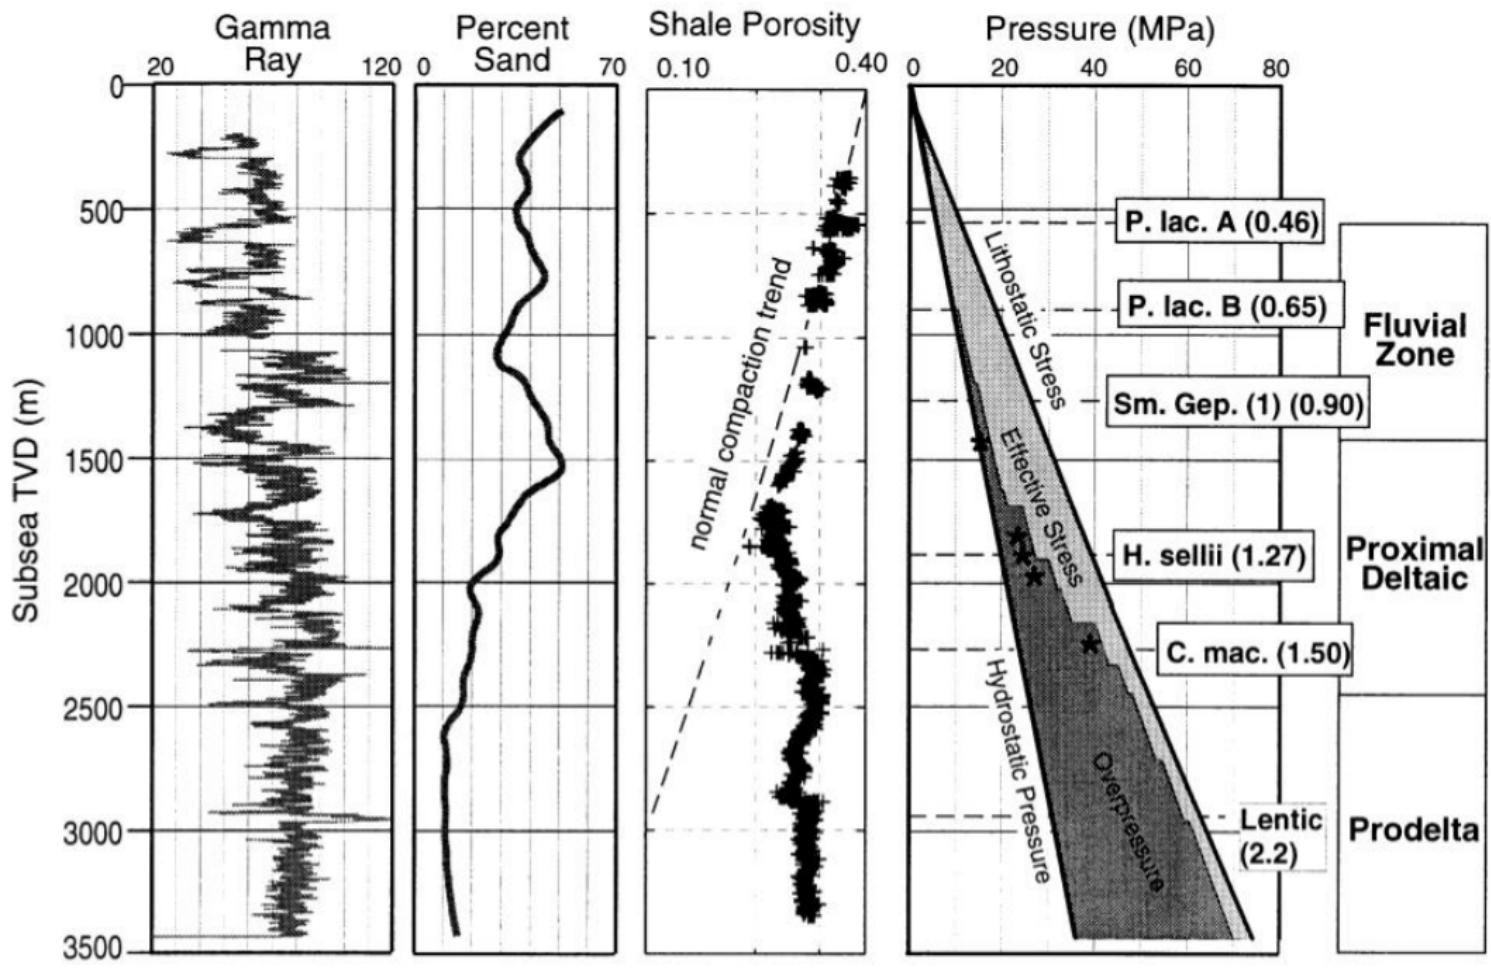


Off-shore Louisiana – Gordon and Flemings (1998) Basin Research

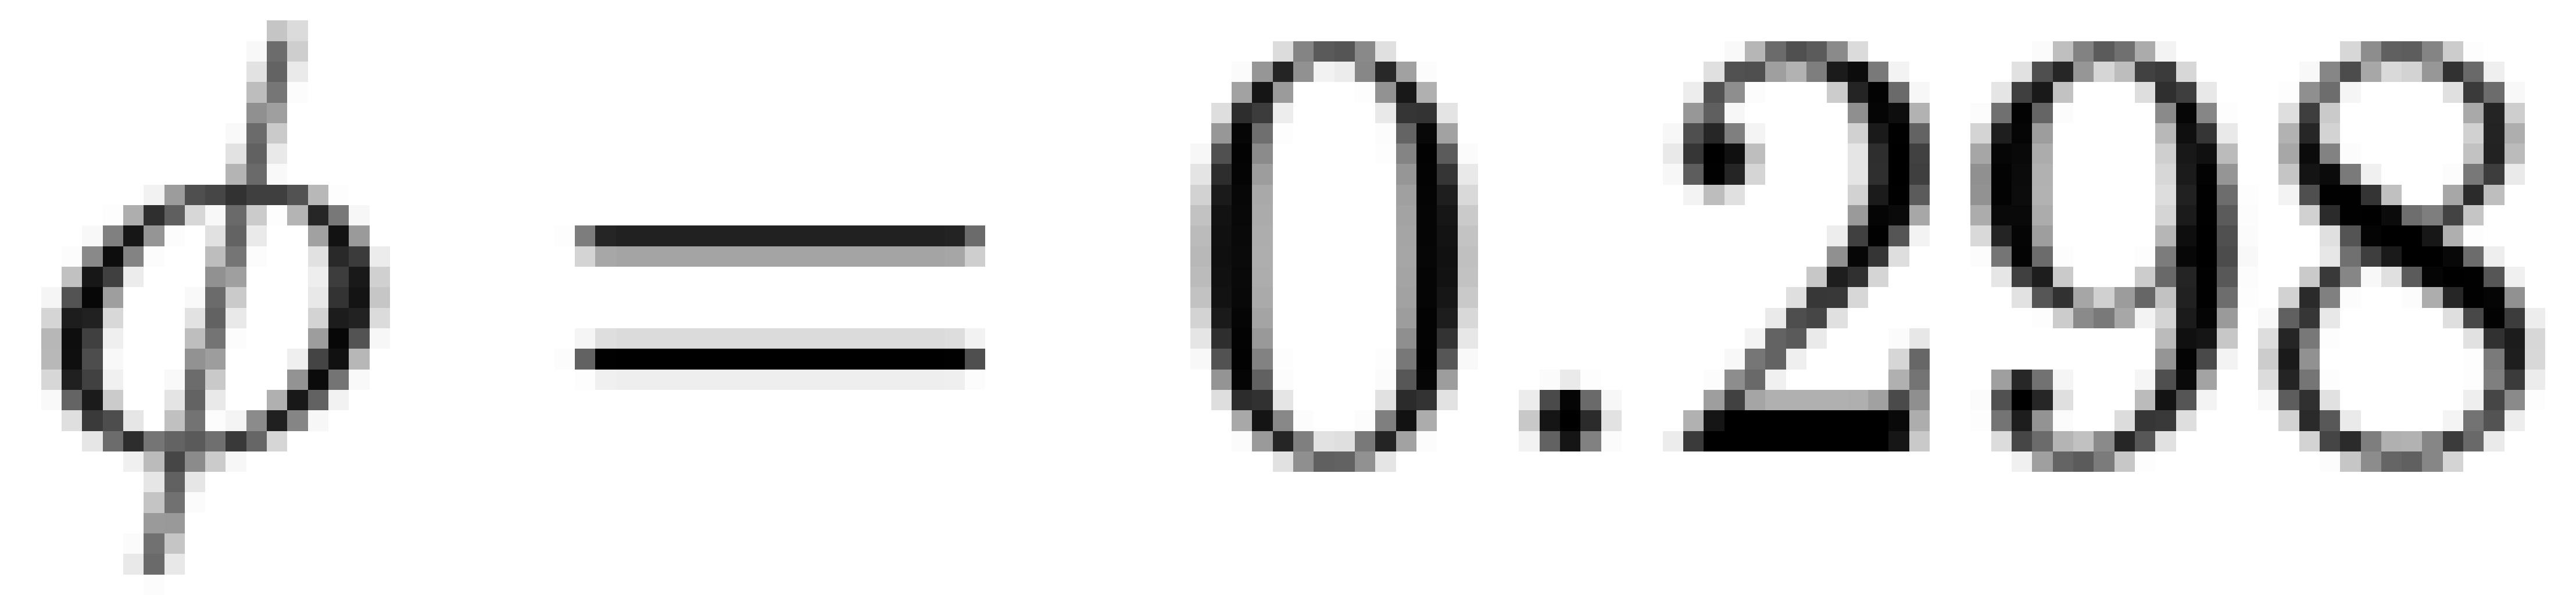



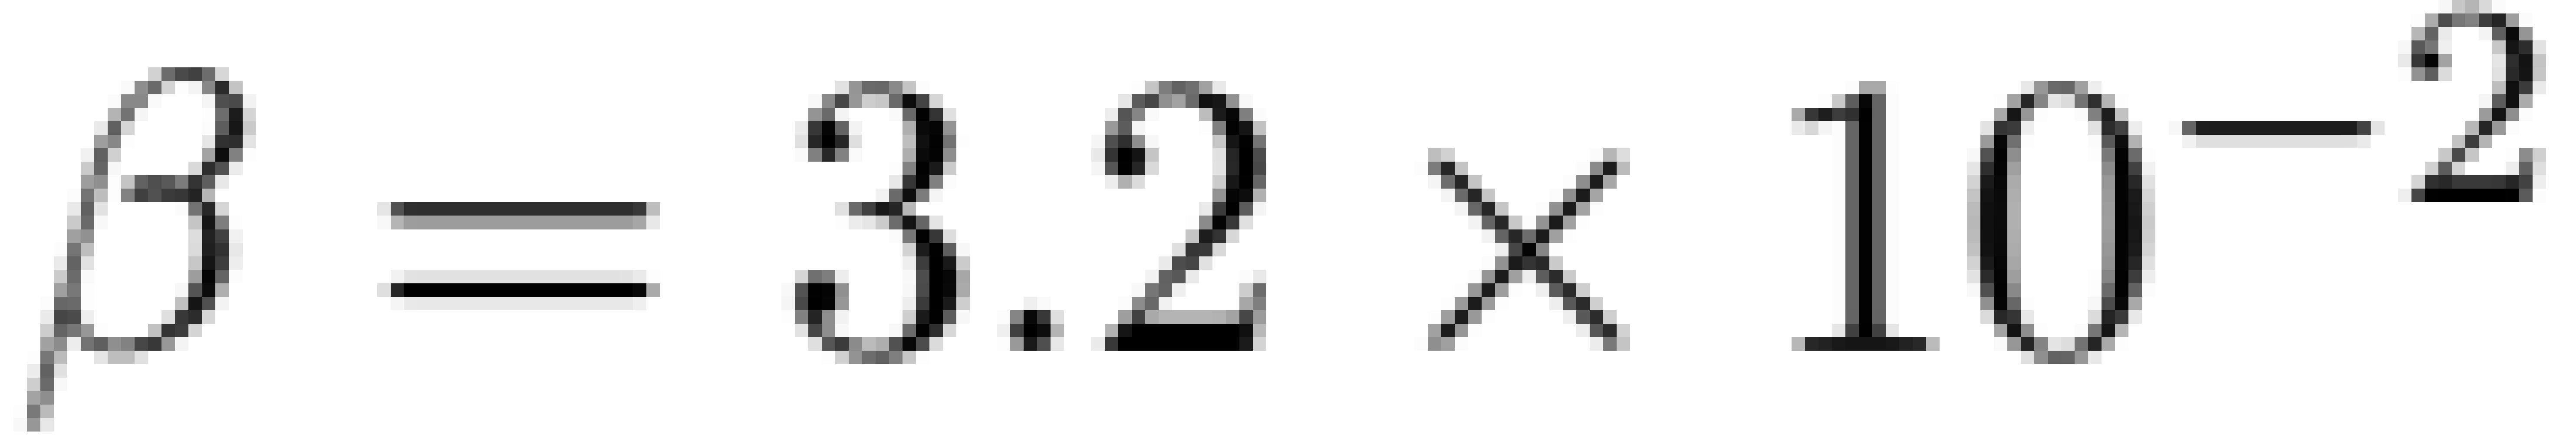


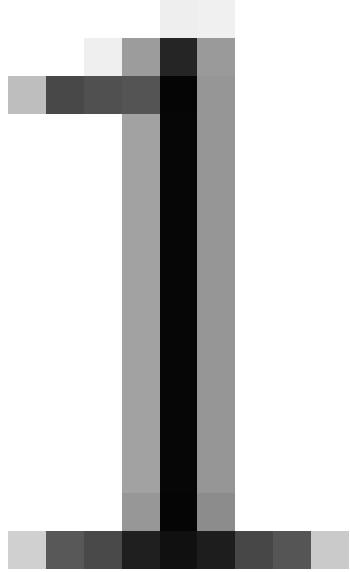


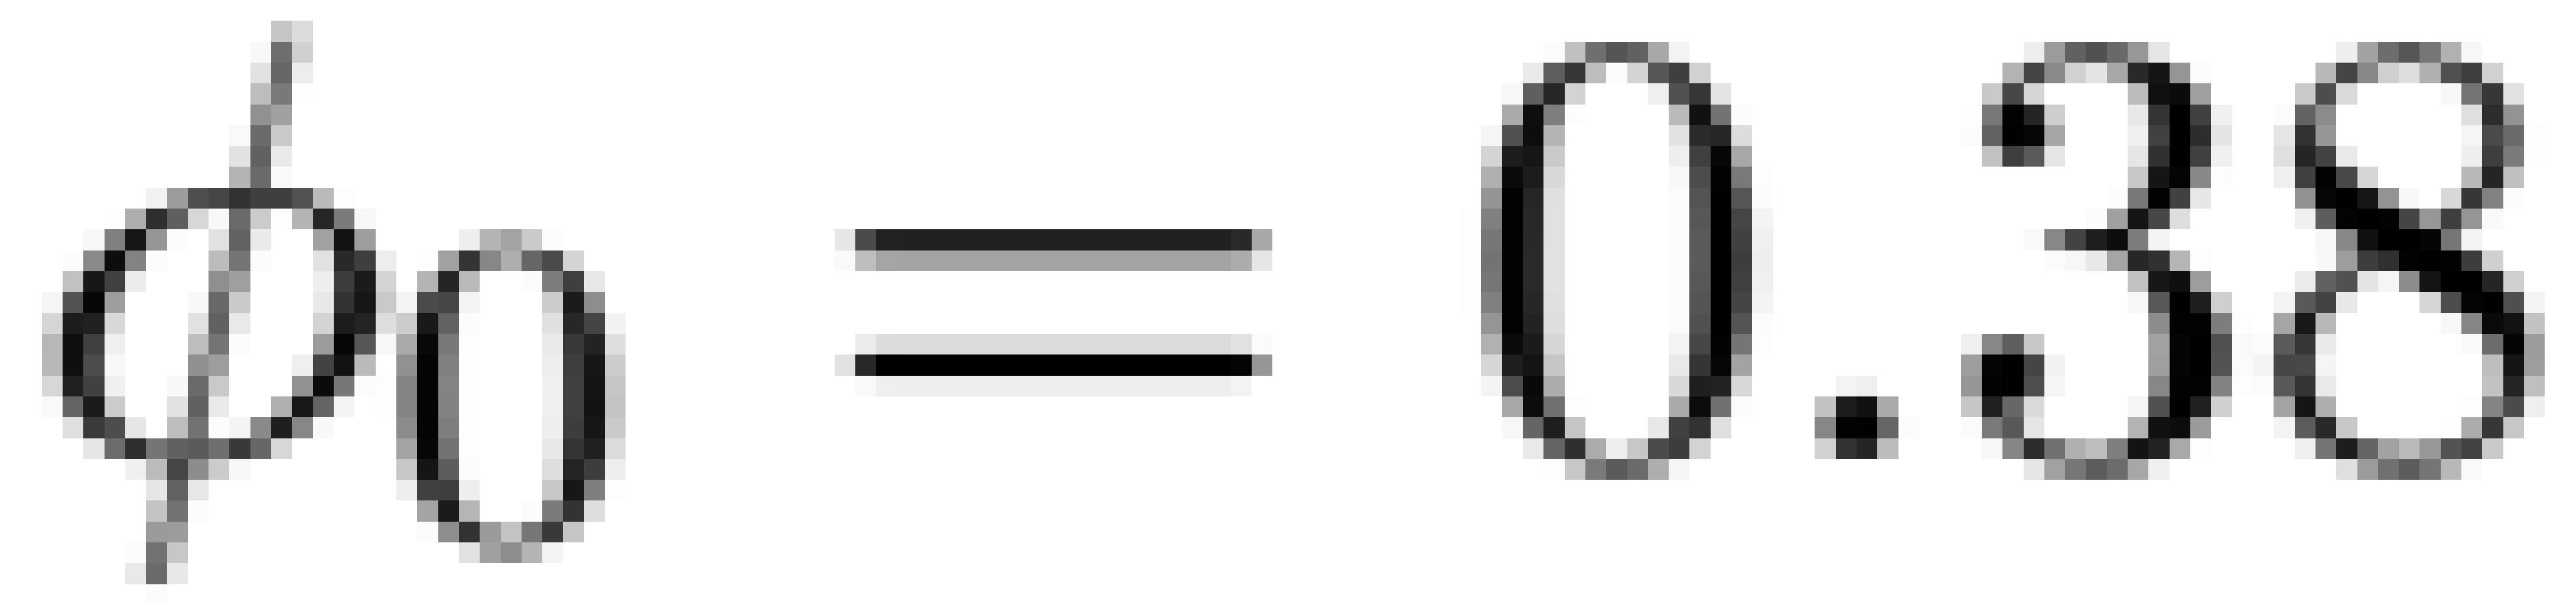





$$P_p = S_v + \frac{\ln \left(\frac{\phi}{\phi_0} \right)}{\beta} = 38$$

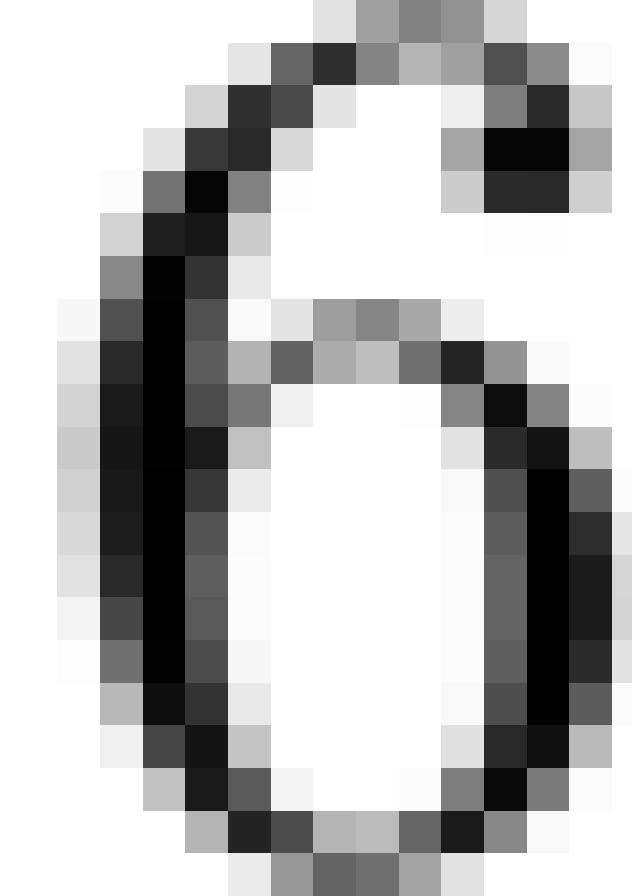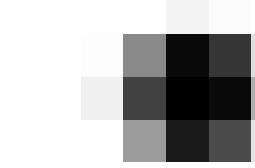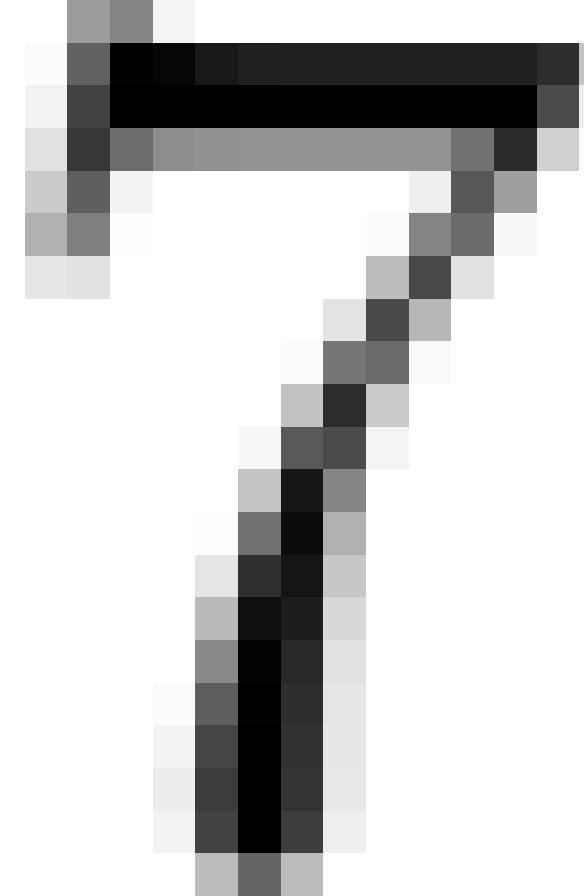

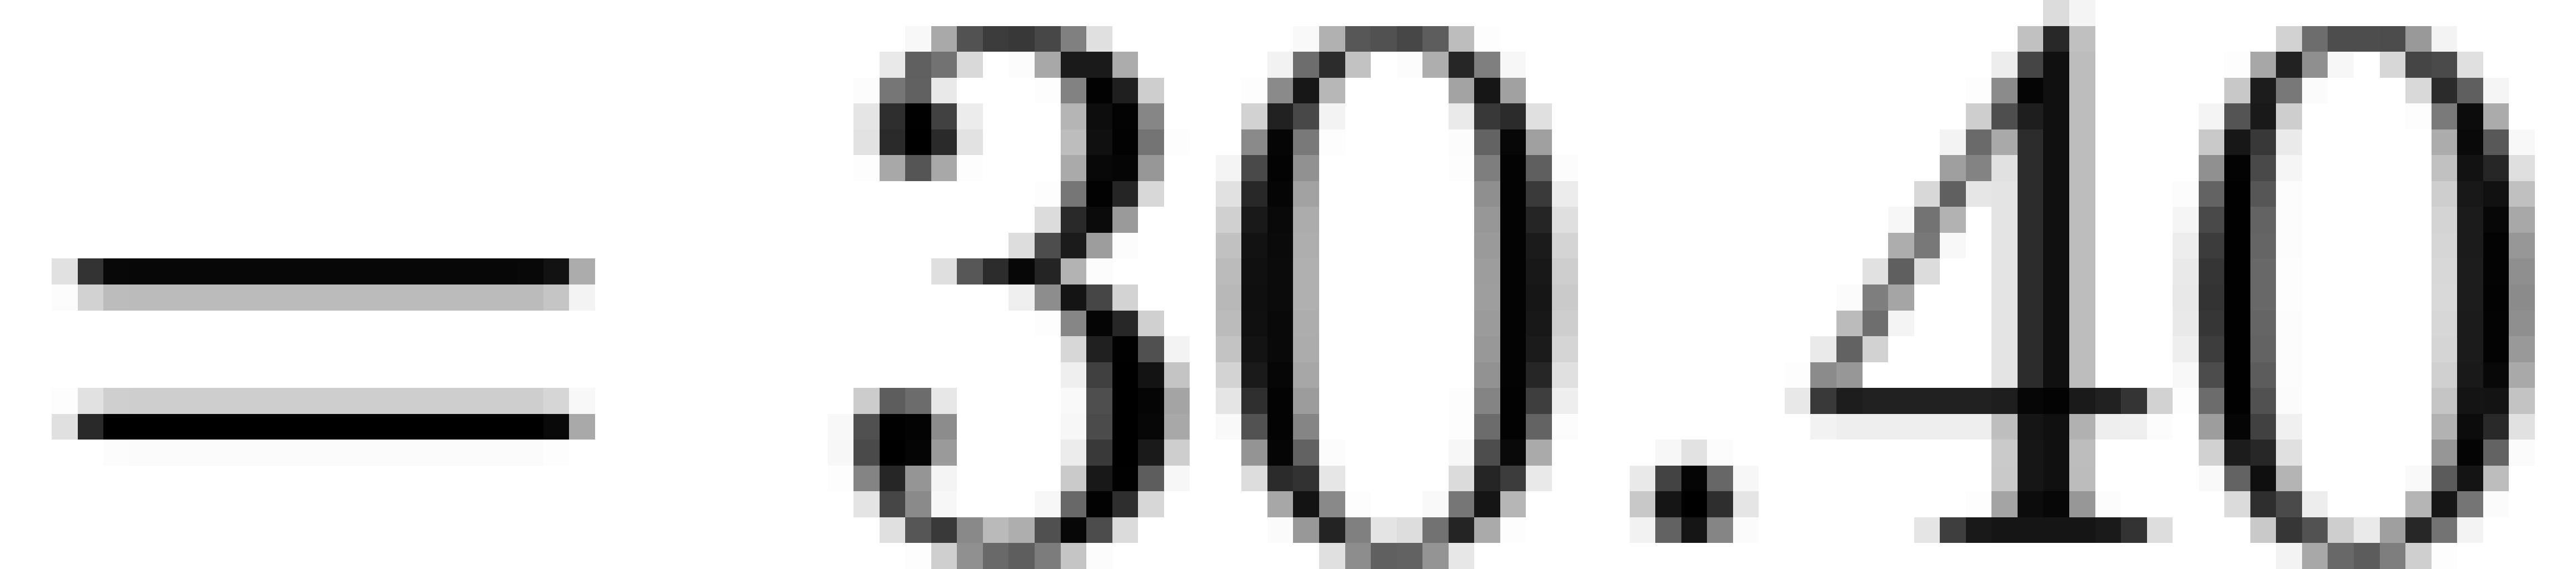


P = 30.40 MPa
 S_2 = 0.8.
 P = 38 MPa

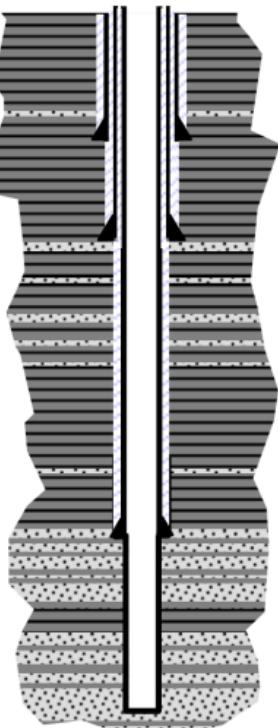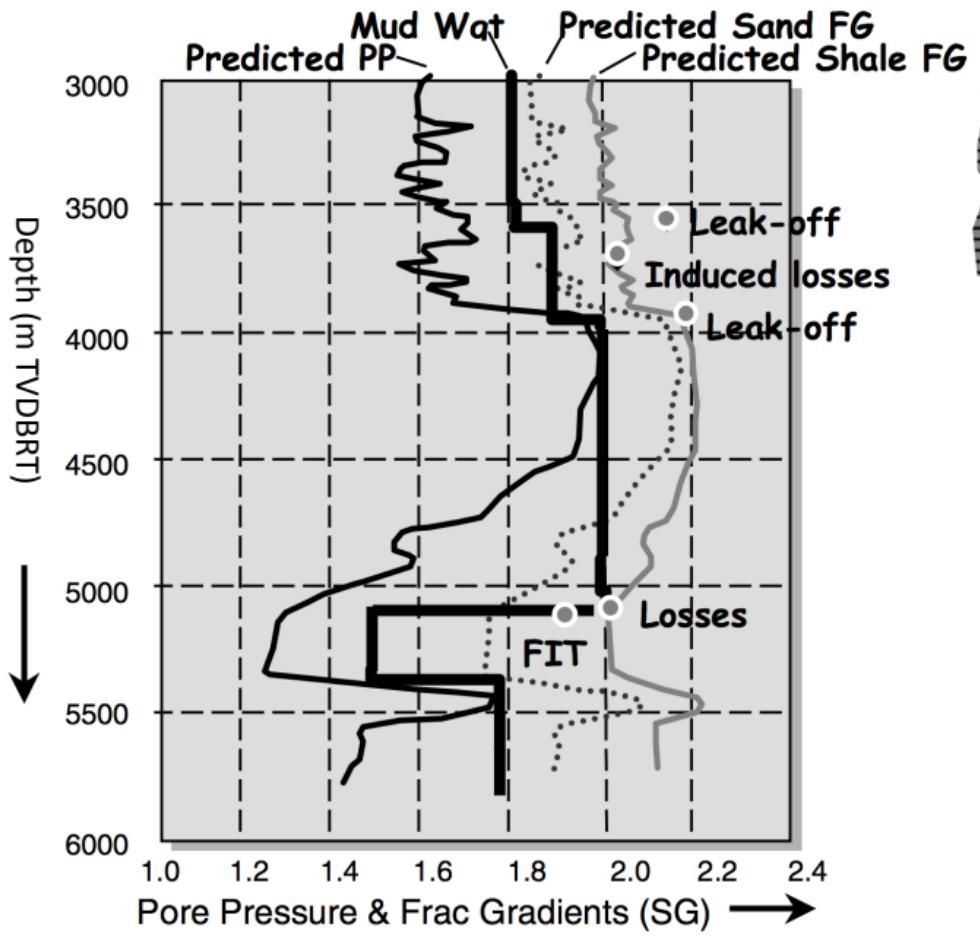


[Caspian Sea, Alberta and McLean – SPE67740]






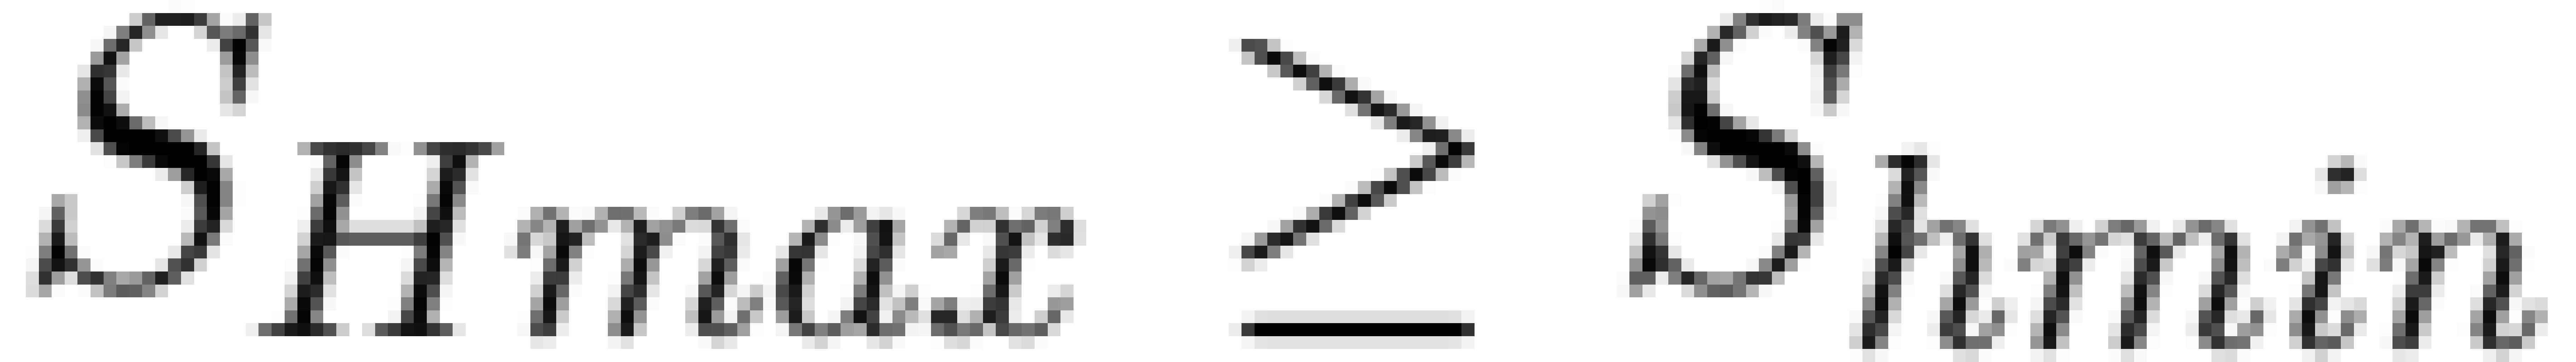

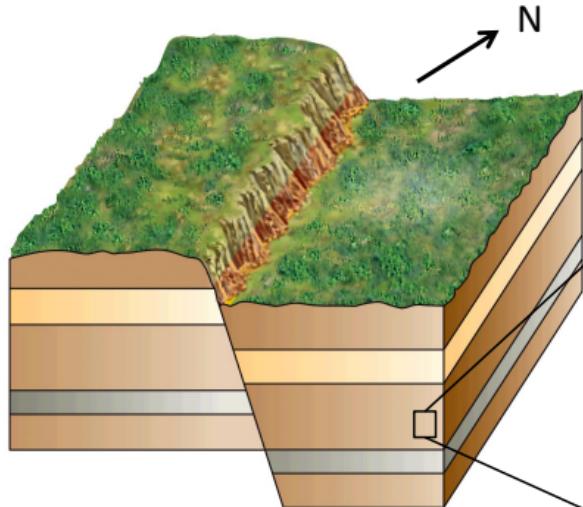

1
2
3

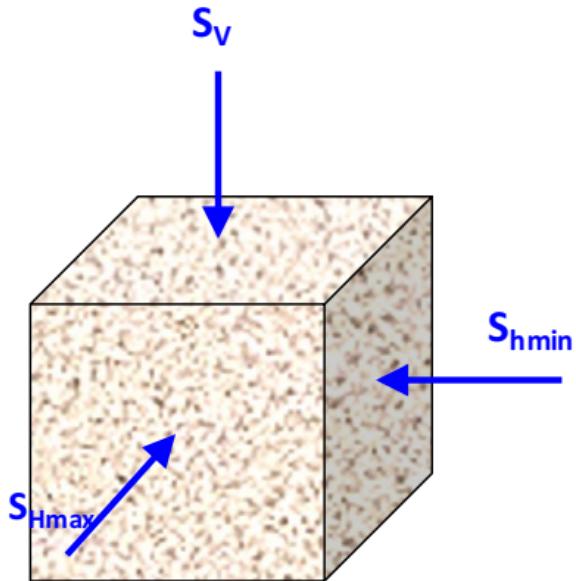


$$S = \begin{bmatrix} S_V & 0 & 0 \\ 0 & S_{H\max} & 0 \\ 0 & 0 & S_{h\min} \end{bmatrix}$$




<http://pubs.usgs.gov/gip/dynamic/understanding.html#anchor5798673>

<http://en.wikipedia.org/wiki/File:Aerial-SanAndreas-CarrizoPlain.jpg>

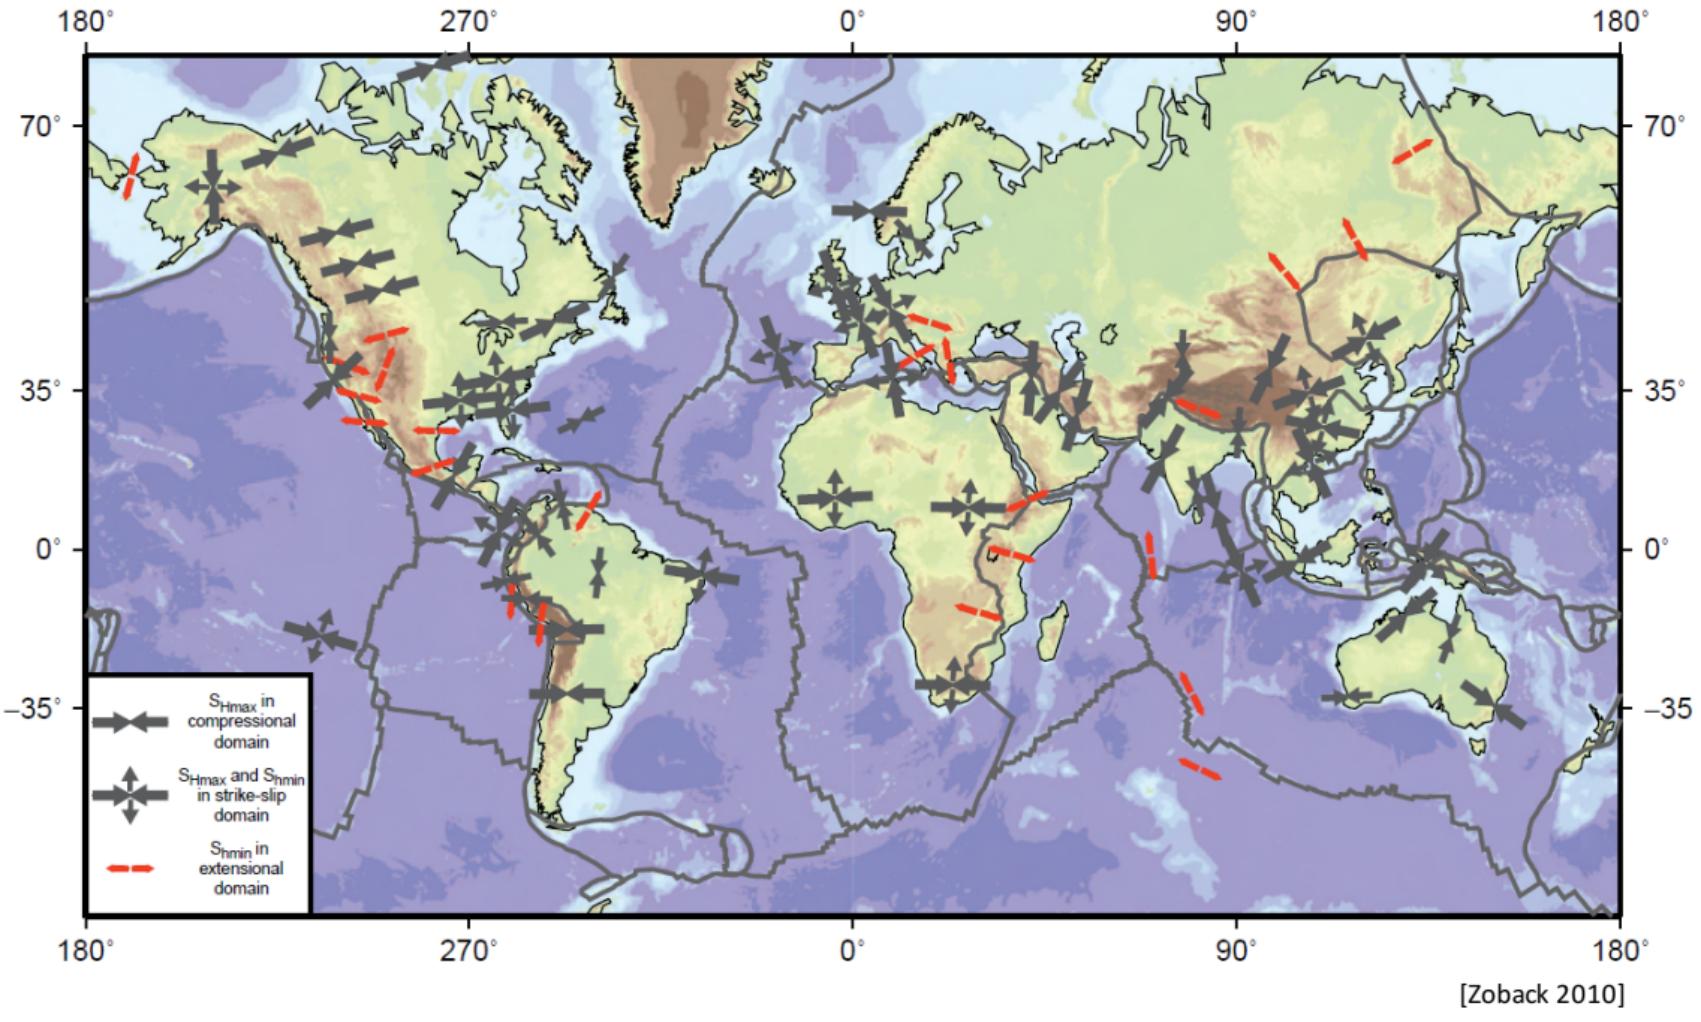

PLUTONS & VOLCANIC LANDFORMS

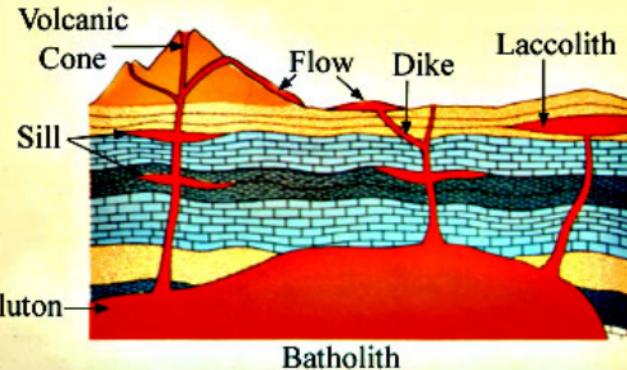

<http://www.indiana.edu/~geol105/1425chap5.htm>
<http://geophysics.ou.edu/geol1114>


















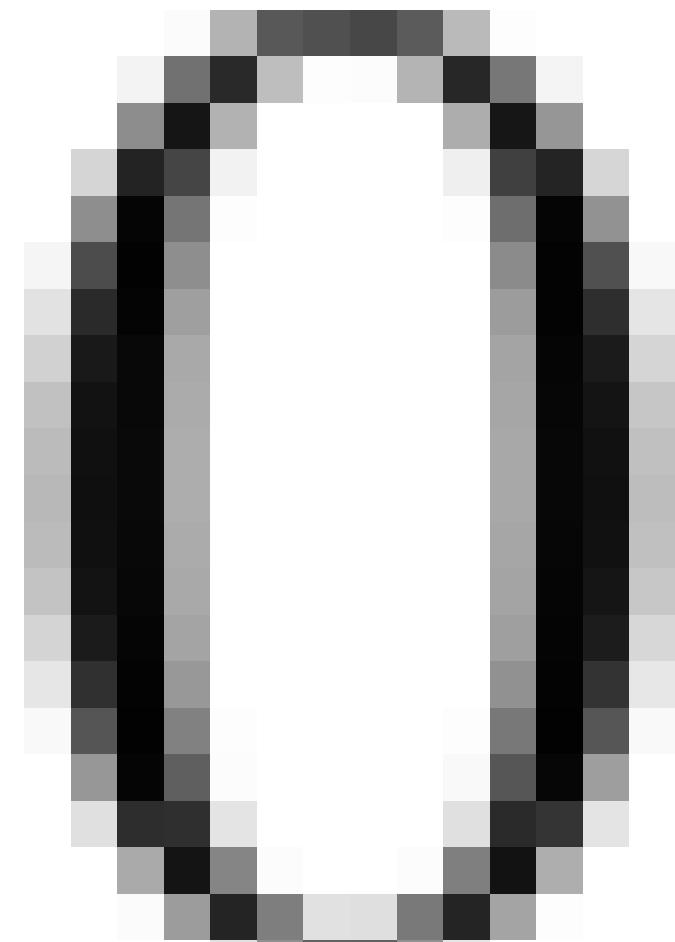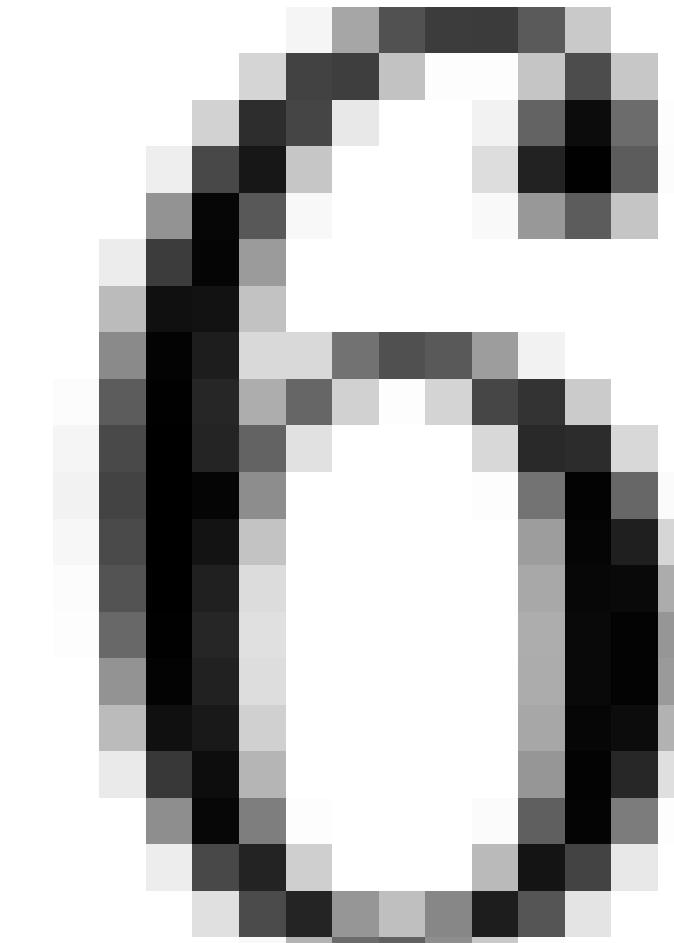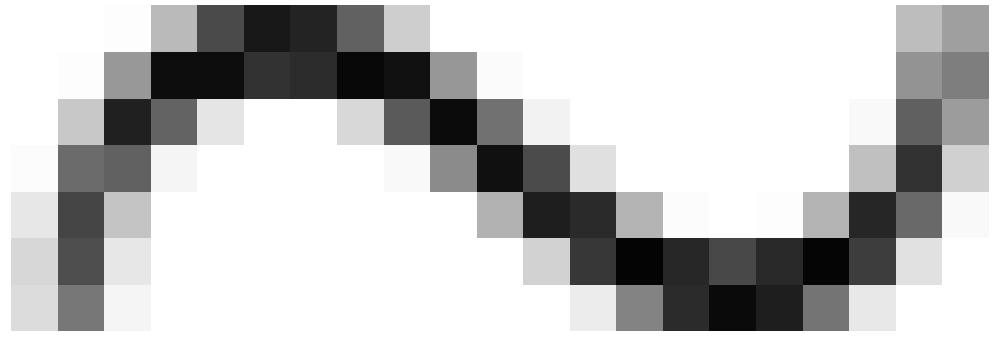









Normal faulting: $S_v > S_{H\max} > S_{h\min}$

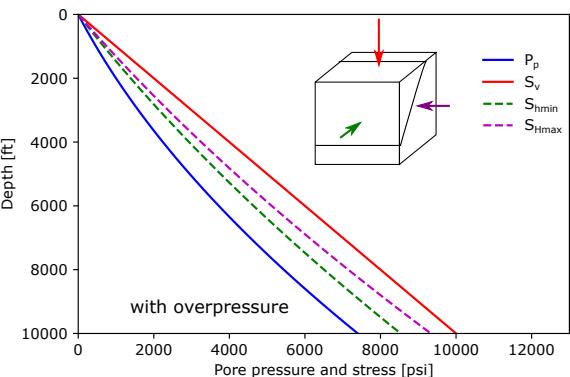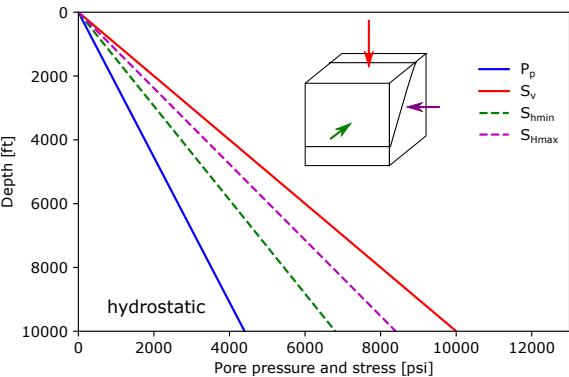


Strike slip faulting: $S_{H\max} > S_v > S_{h\min}$

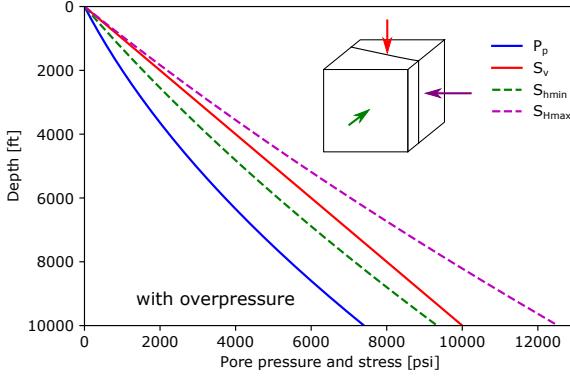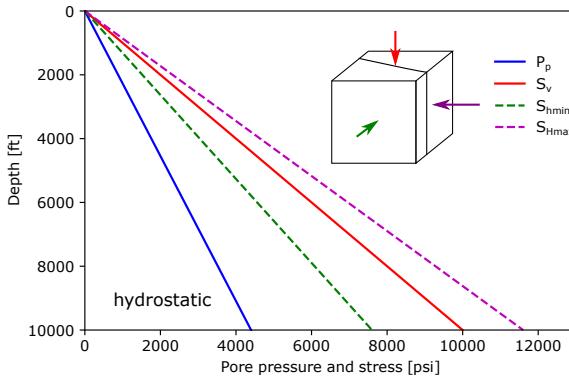

Reverse faulting: $S_{H\max} > S_{h\min} > S_v$

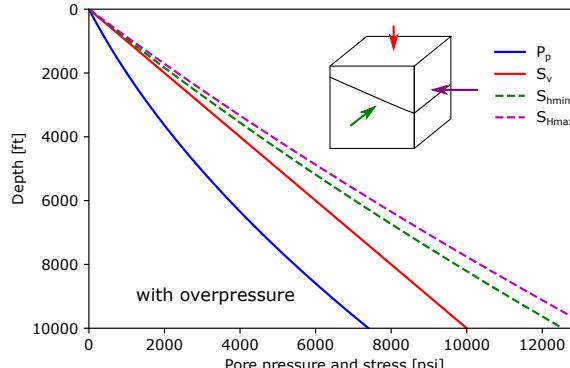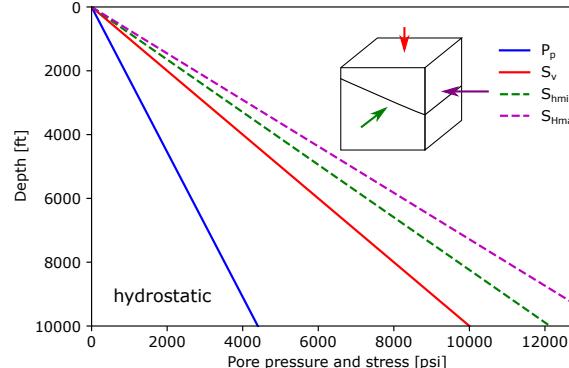






















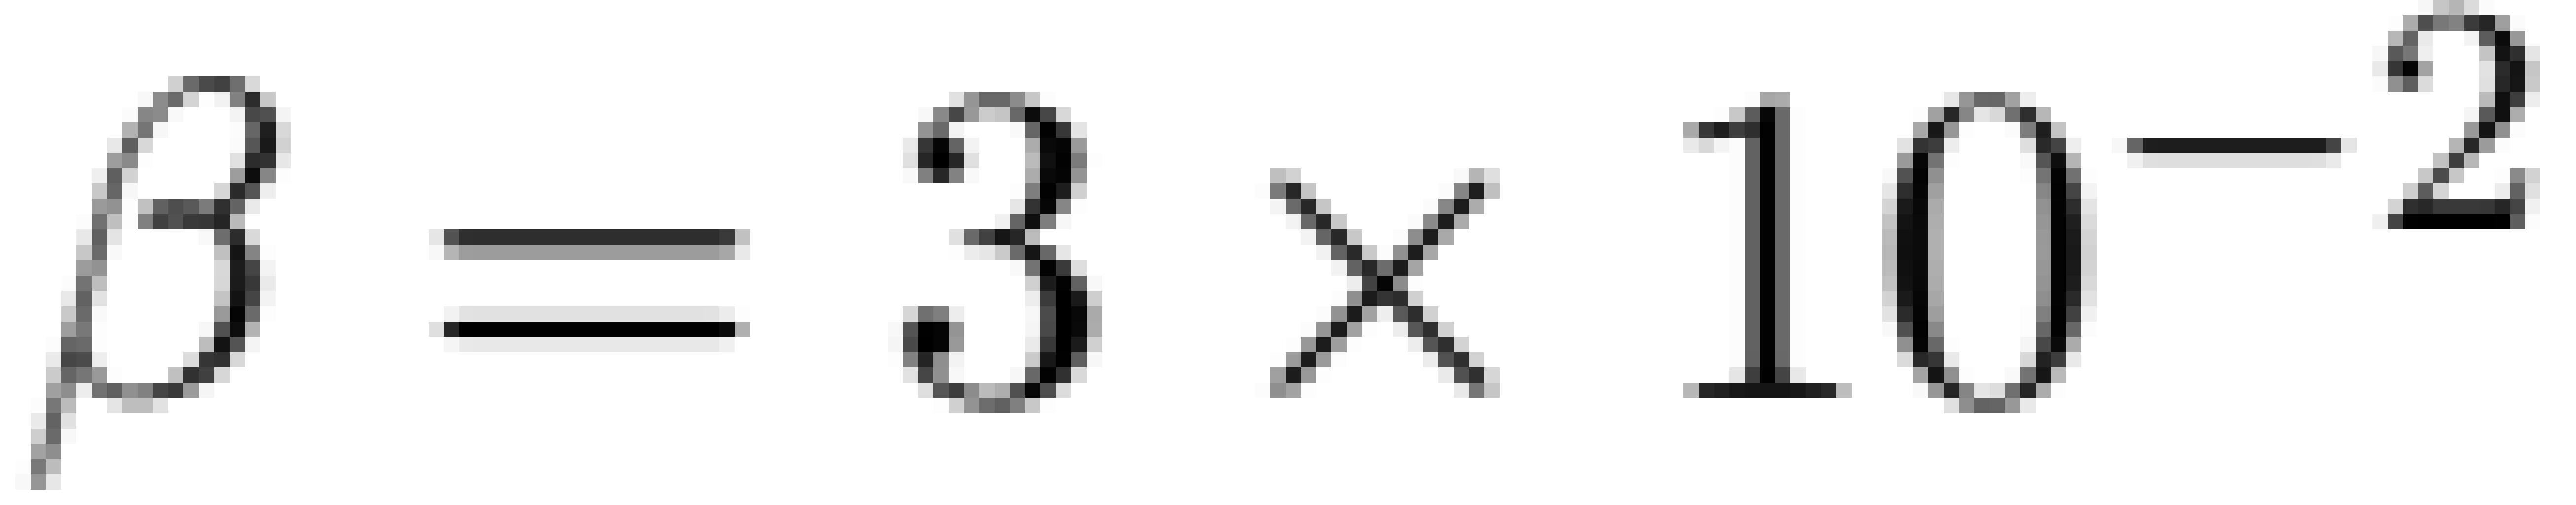


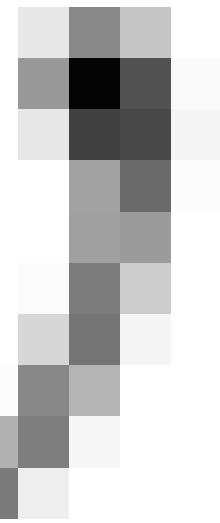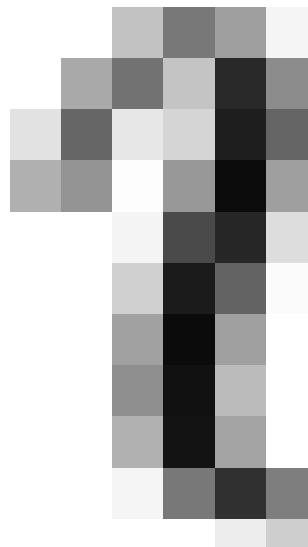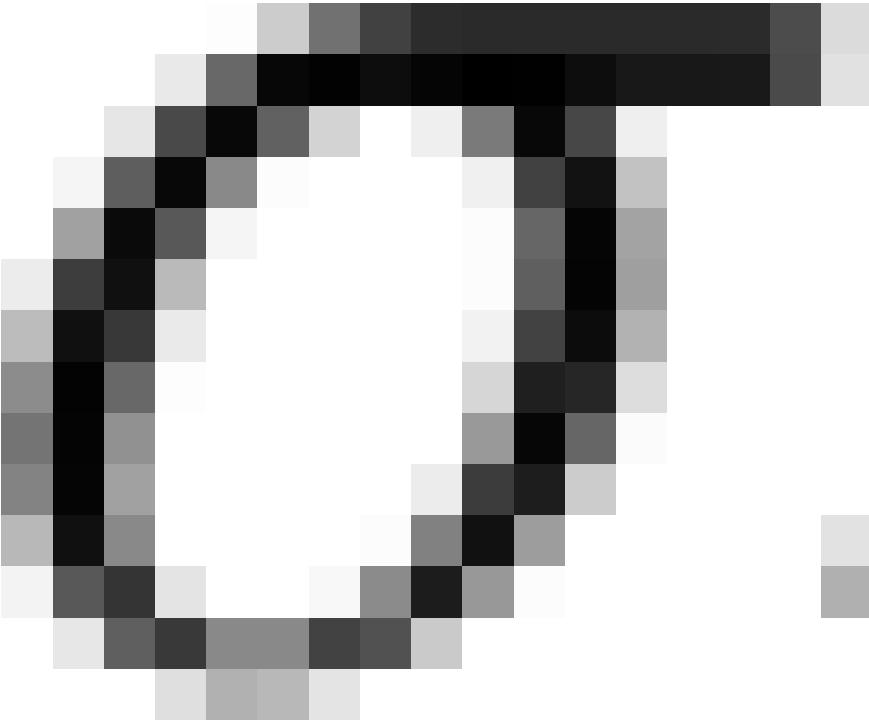

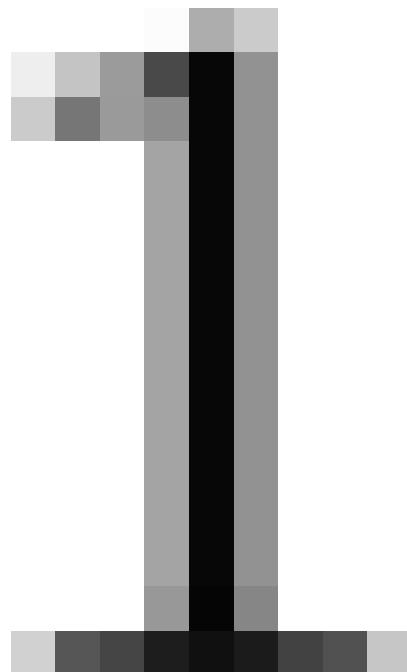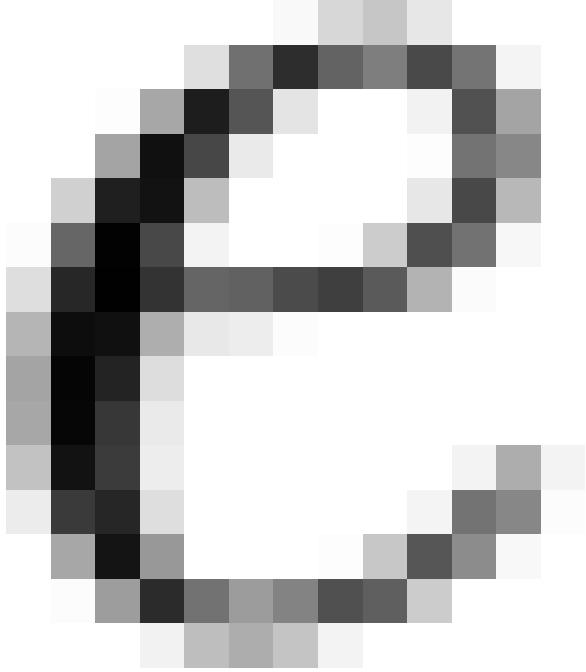


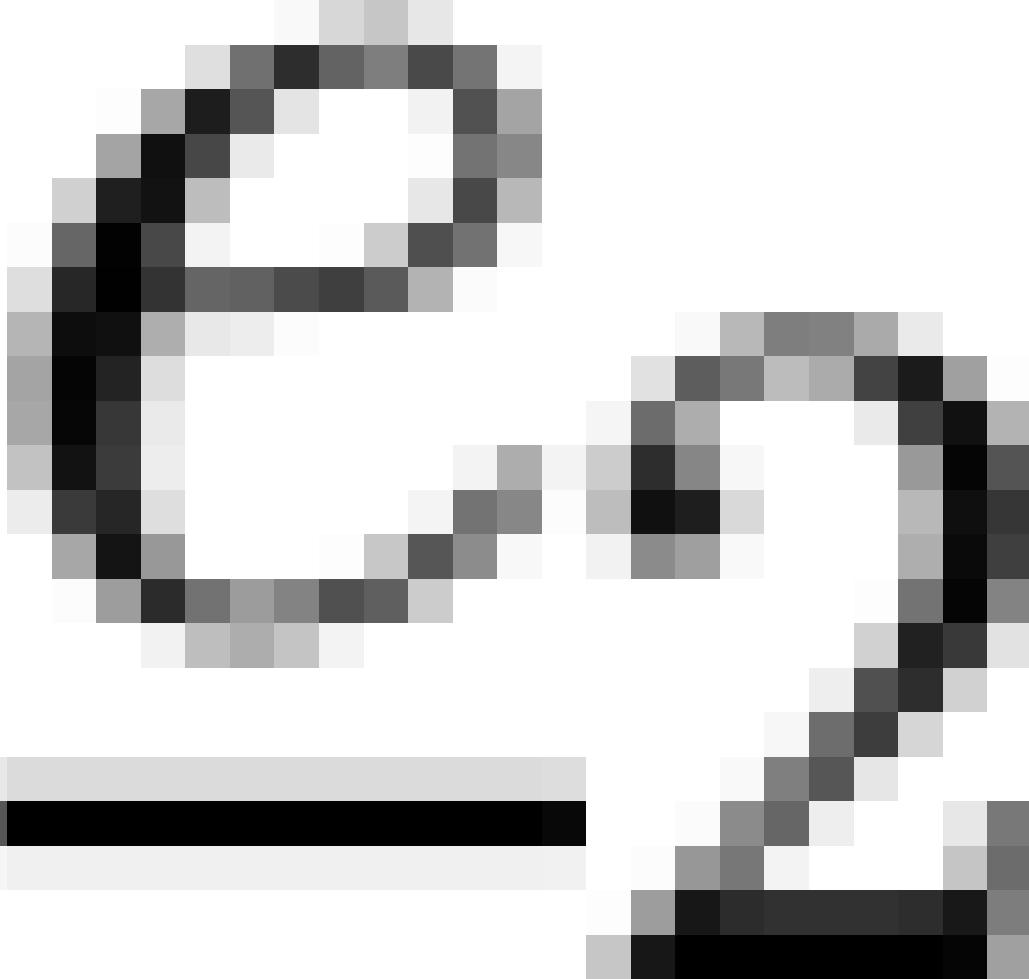

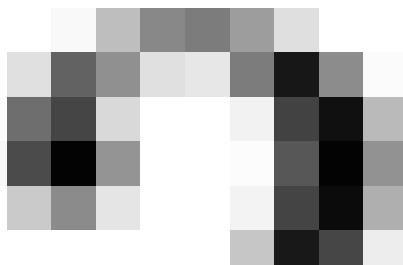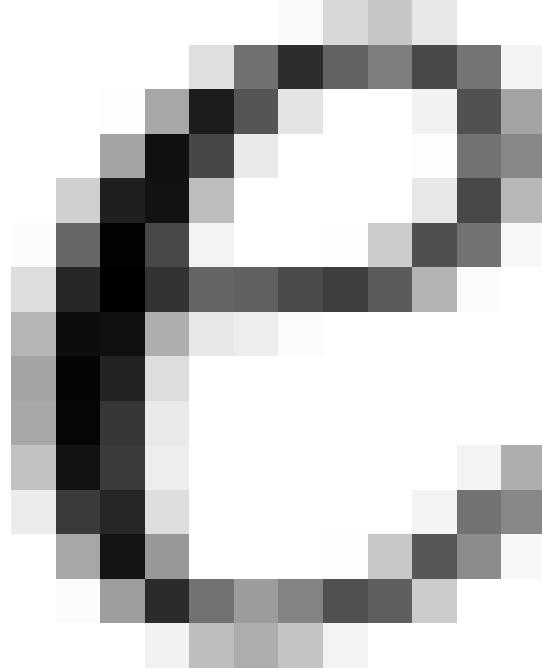


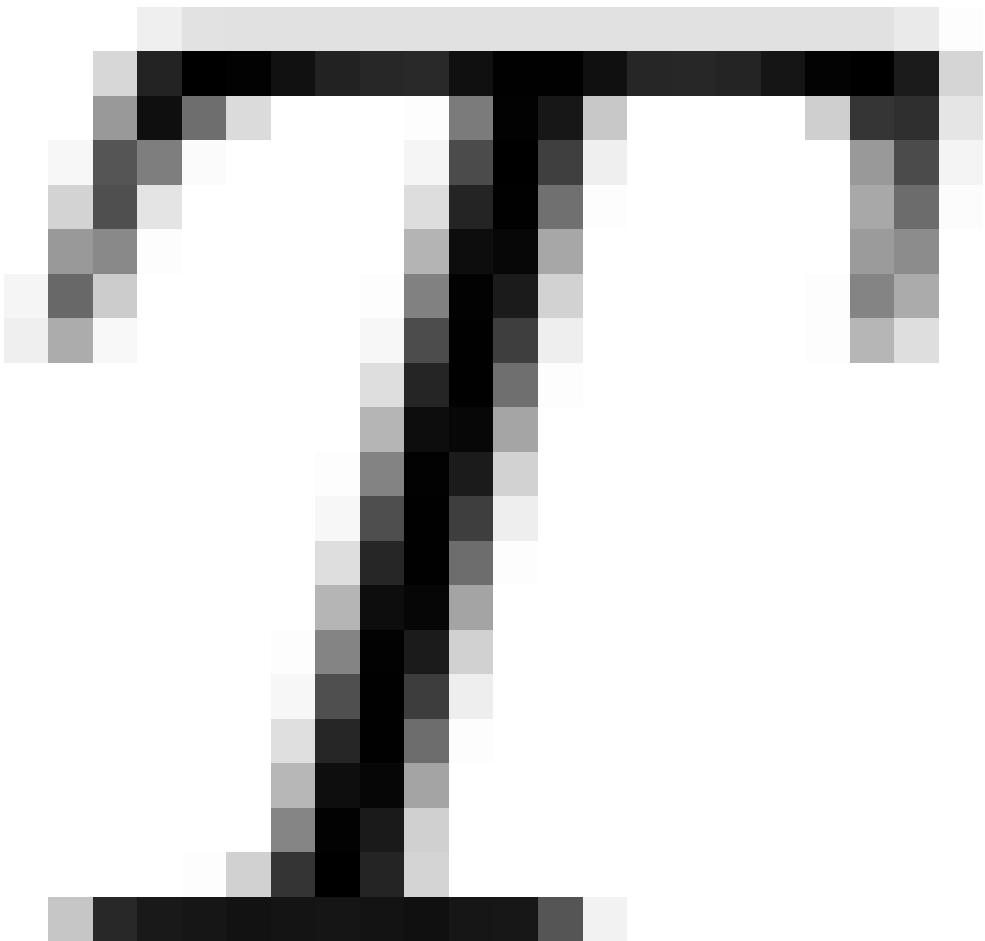





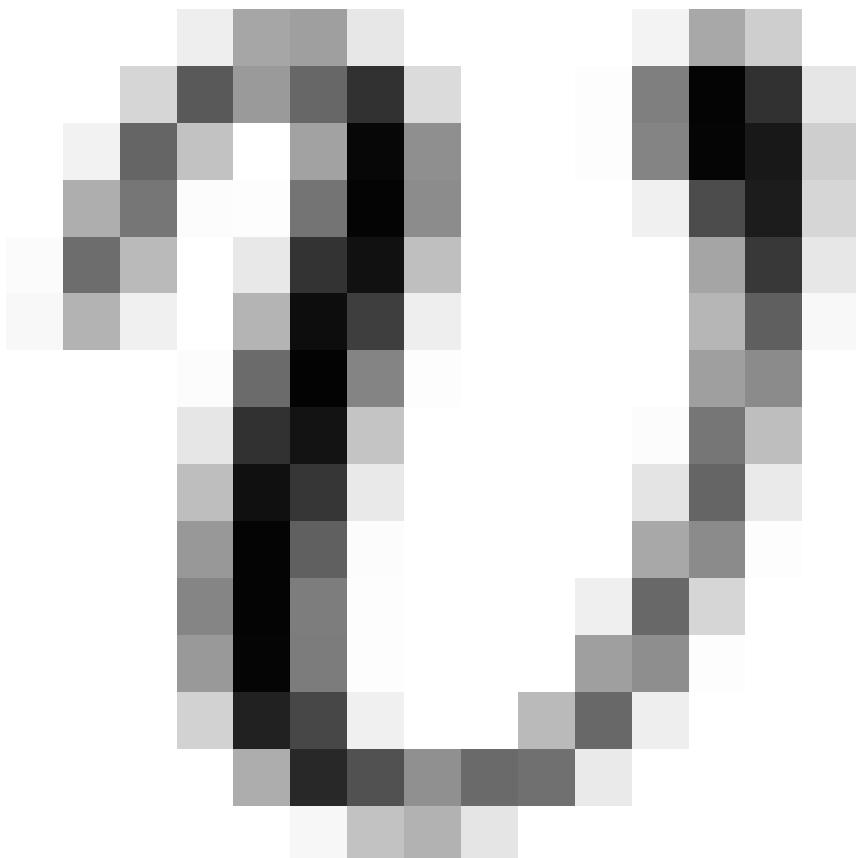




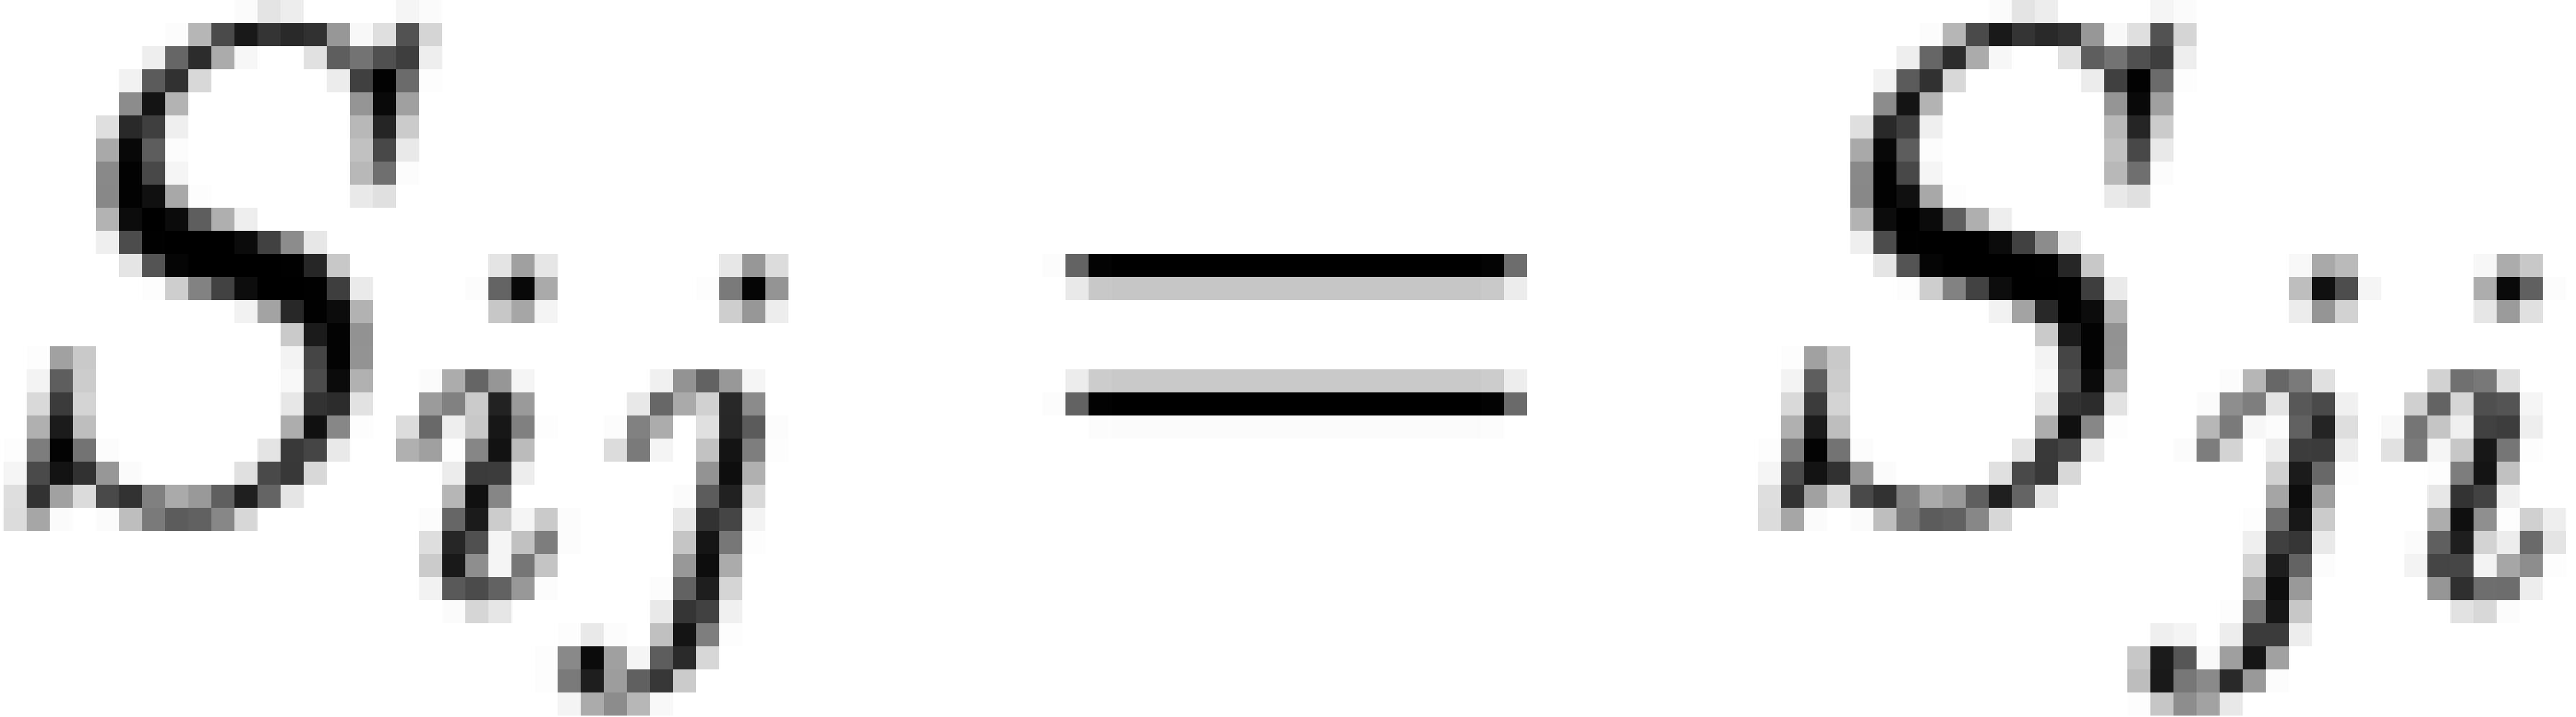


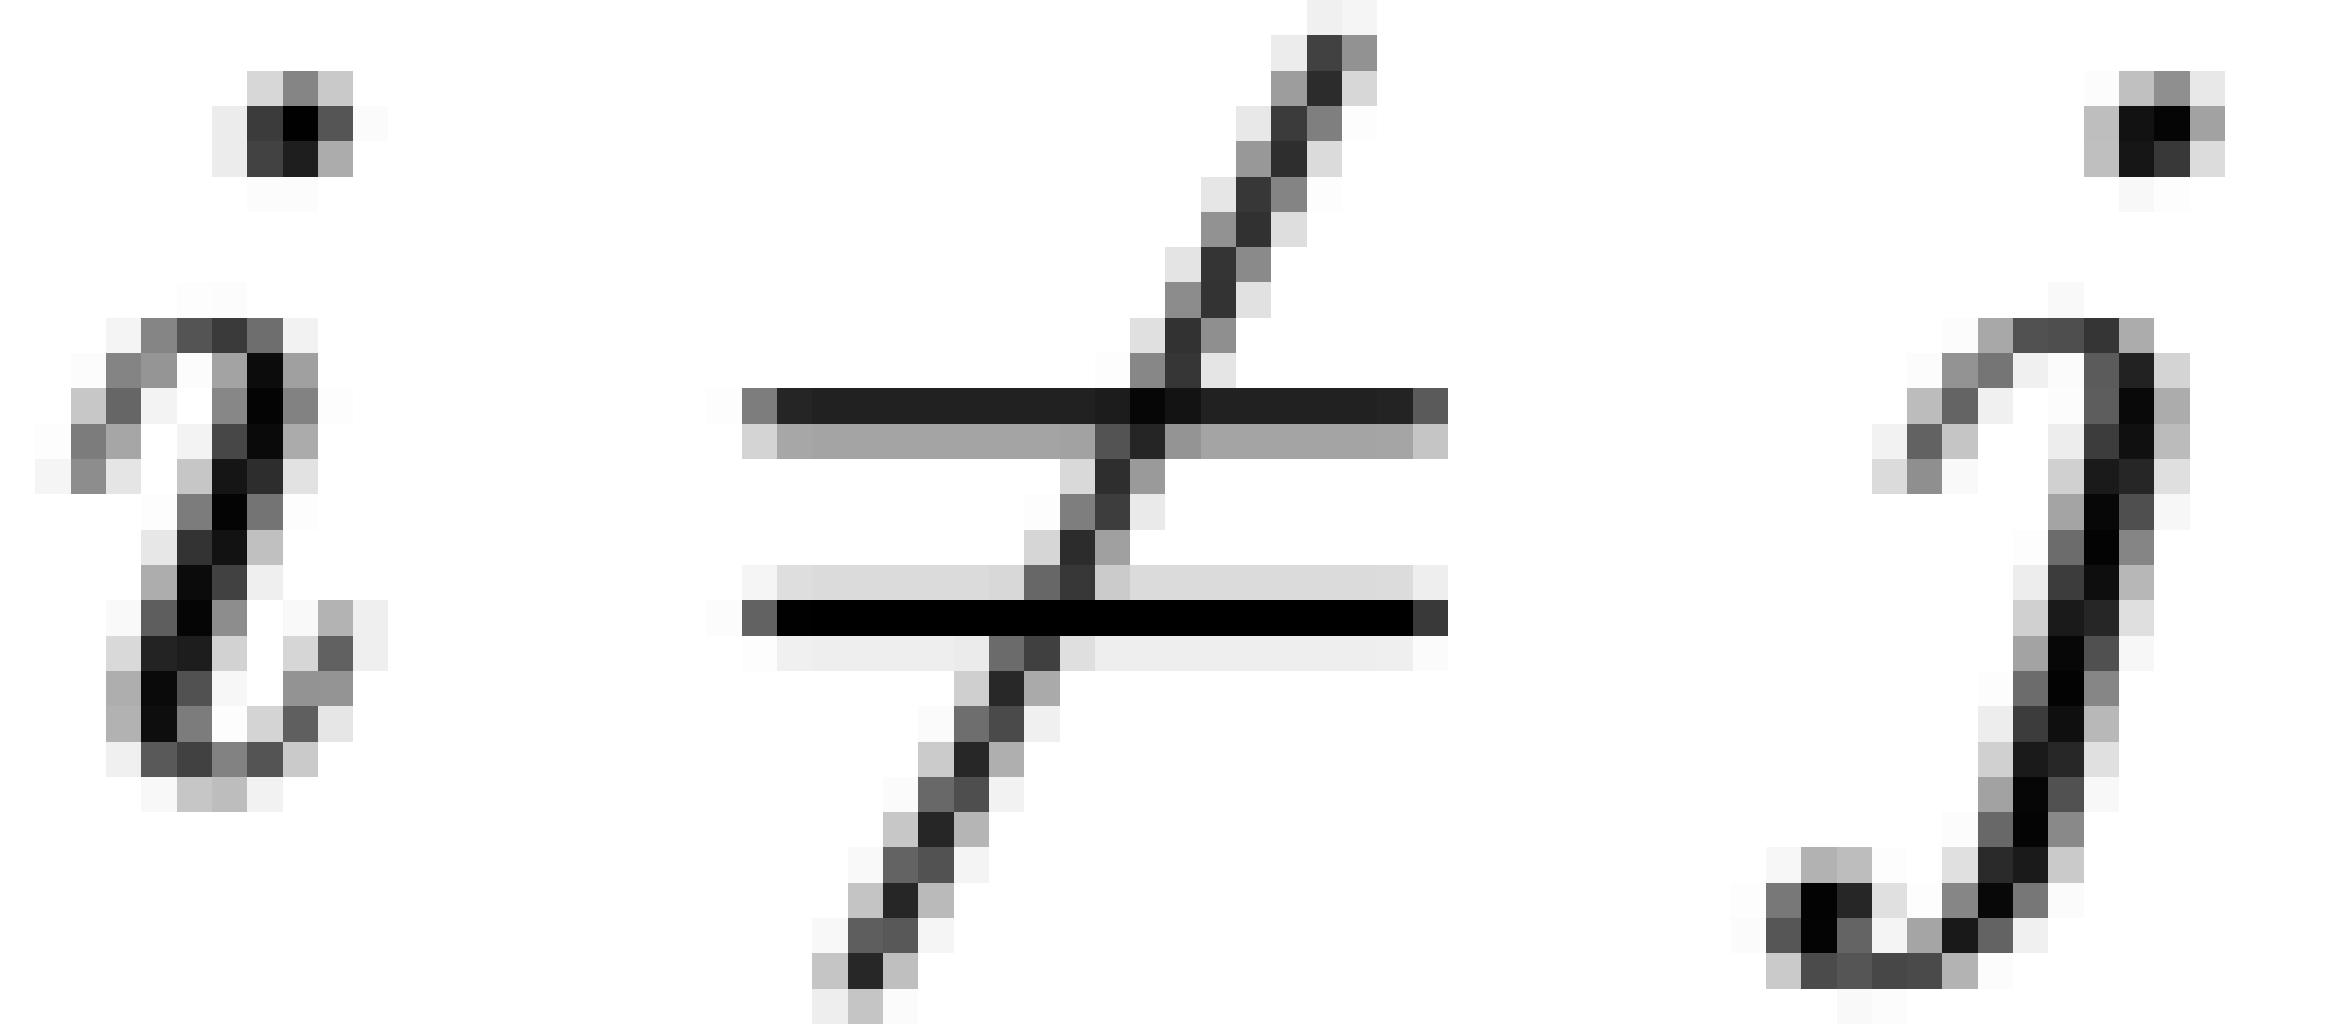

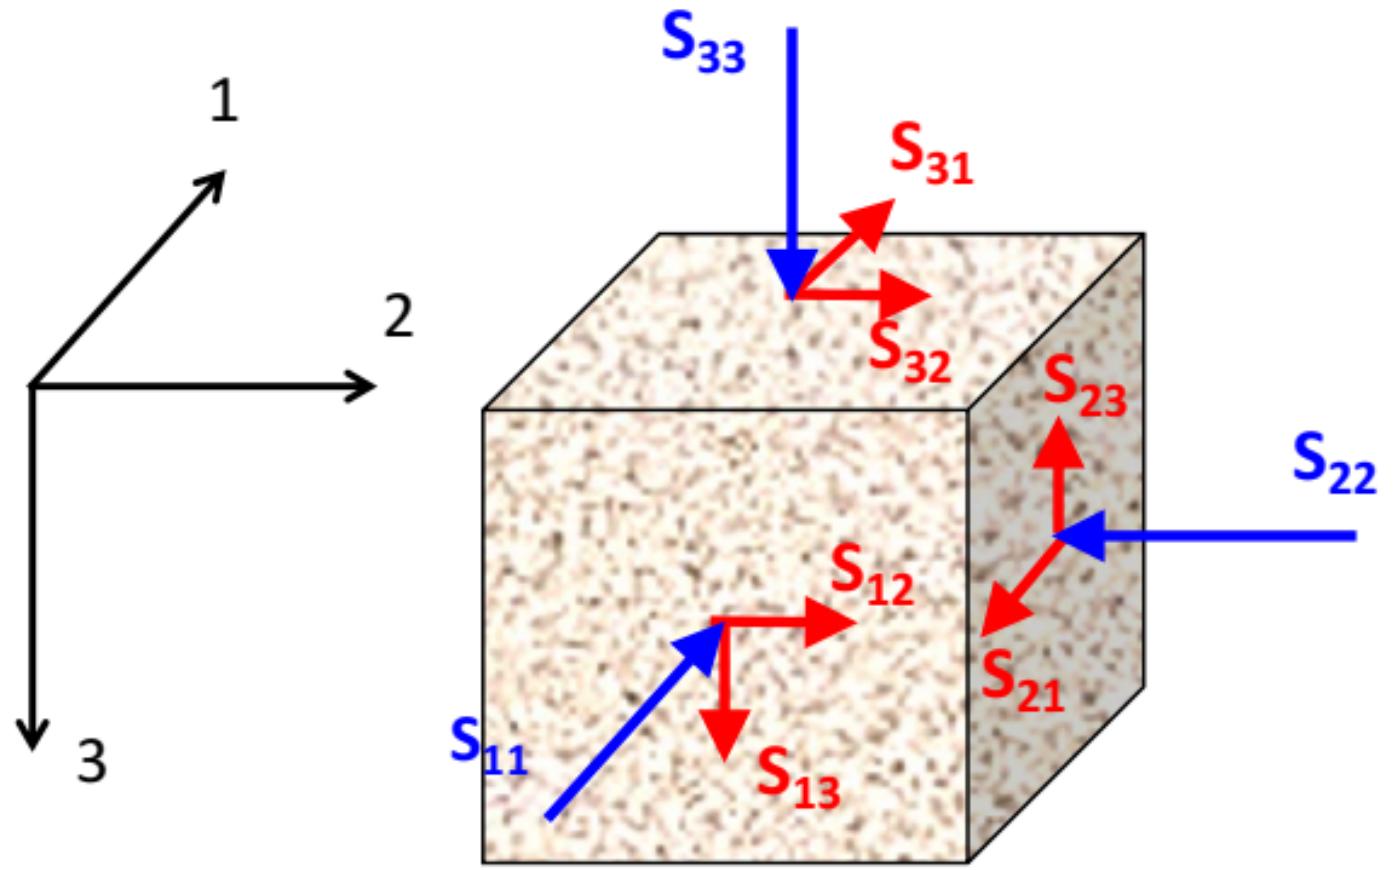


$$S = \begin{bmatrix} S_{11} & S_{12} & S_{13} \\ S_{21} & S_{22} & S_{23} \\ S_{31} & S_{32} & S_{33} \end{bmatrix}$$



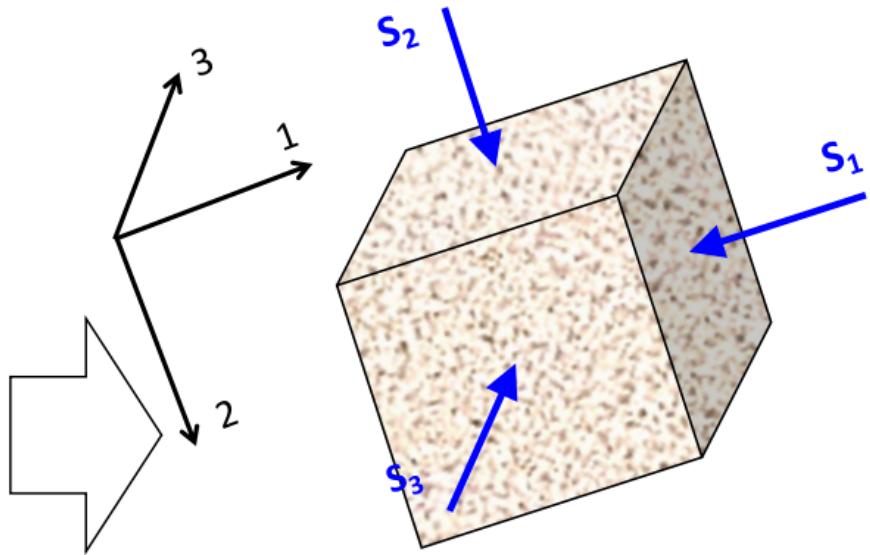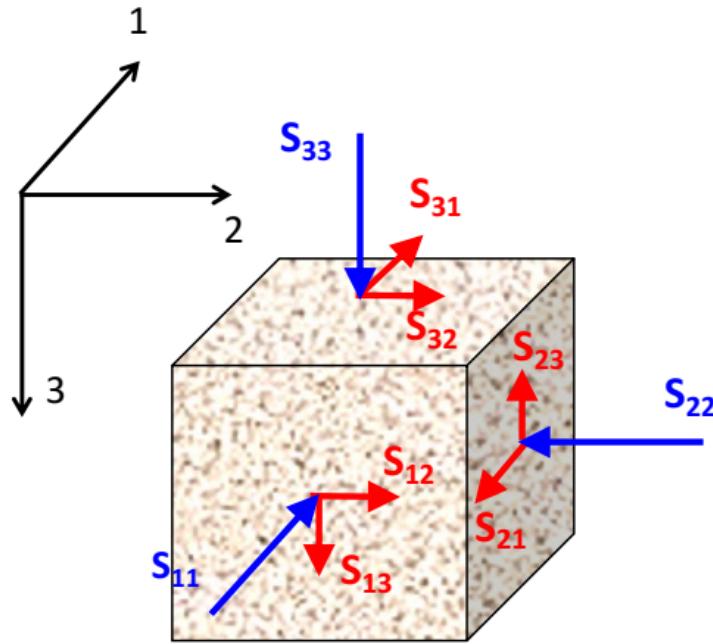




$$\underline{\underline{S}} = \begin{bmatrix} S_{11} & S_{12} & S_{13} \\ S_{21} & S_{22} & S_{23} \\ S_{31} & S_{32} & S_{33} \end{bmatrix}$$


$$\underline{\underline{S}} = \begin{bmatrix} S_1 & 0 & 0 \\ 0 & S_2 & 0 \\ 0 & 0 & S_3 \end{bmatrix}$$

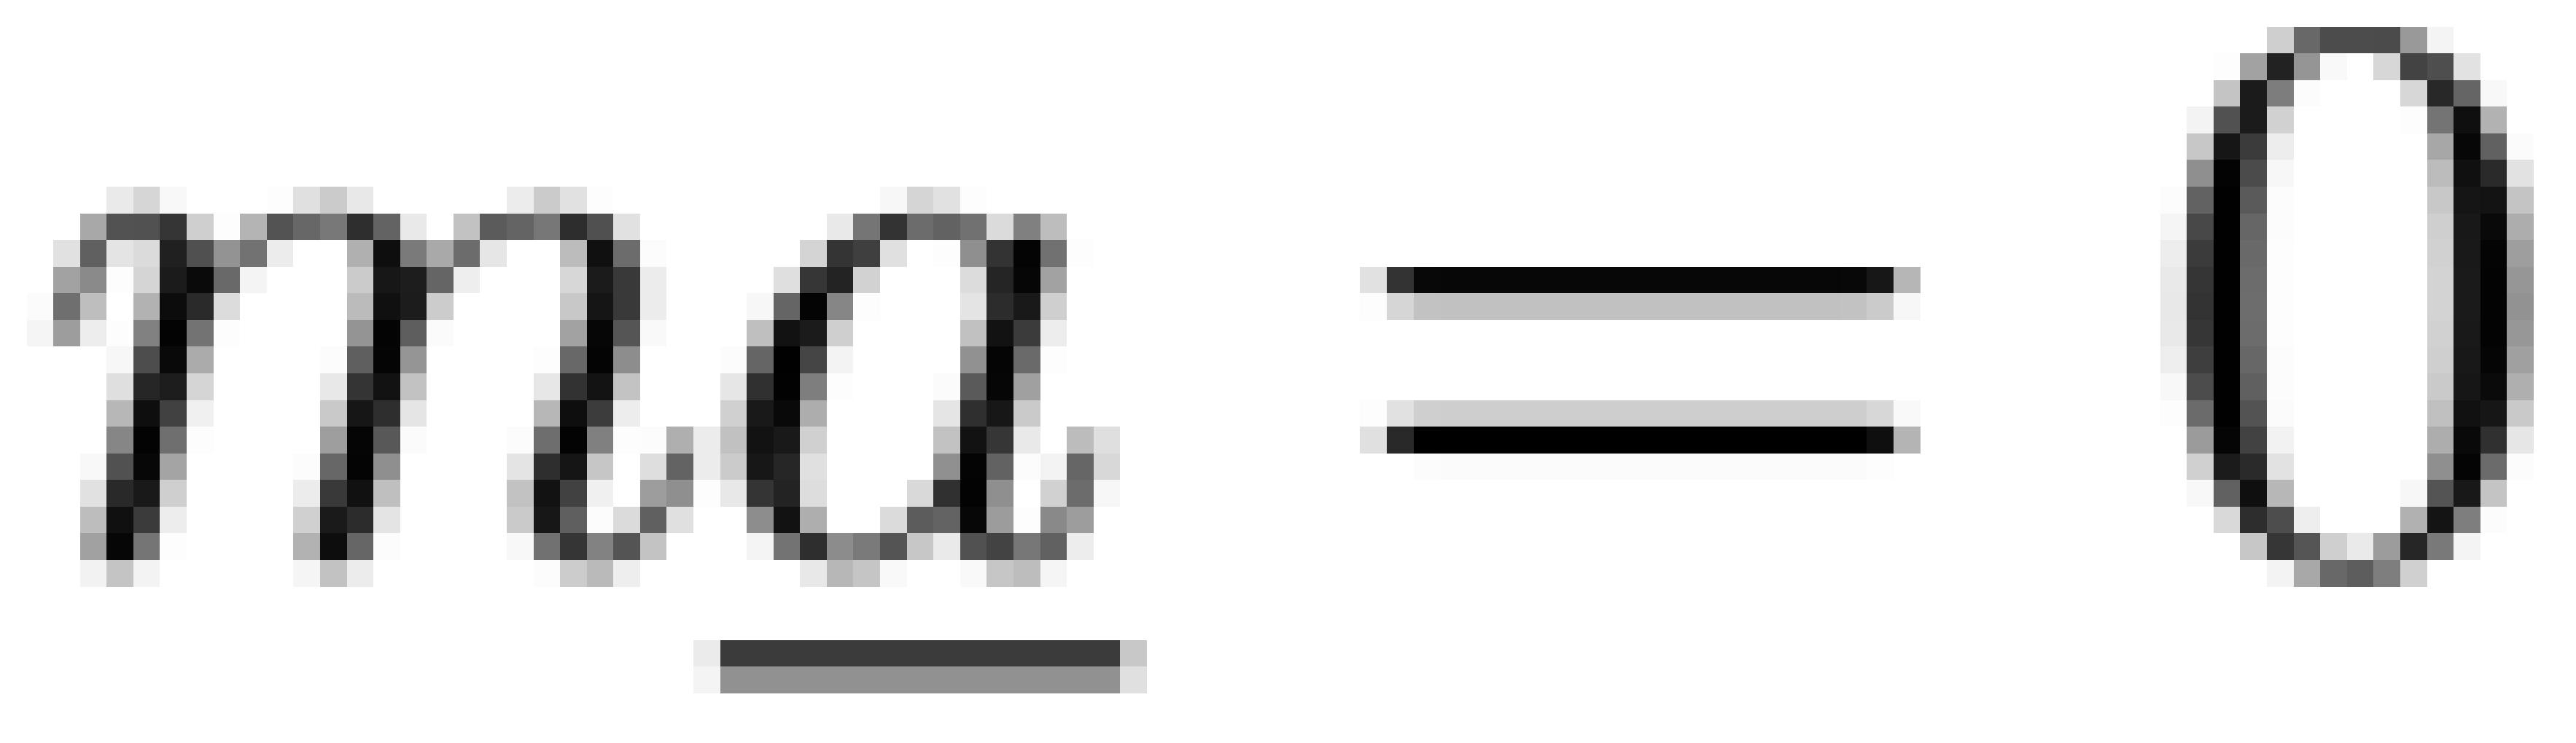



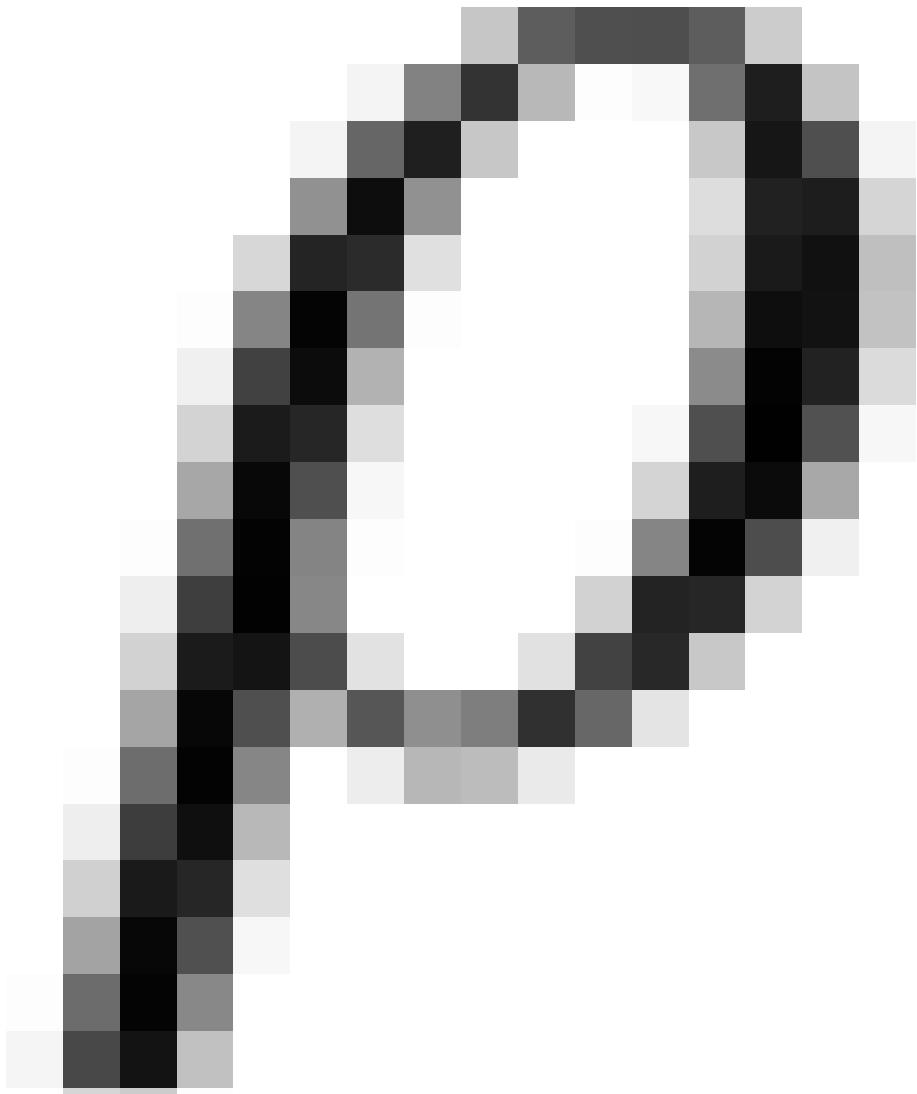

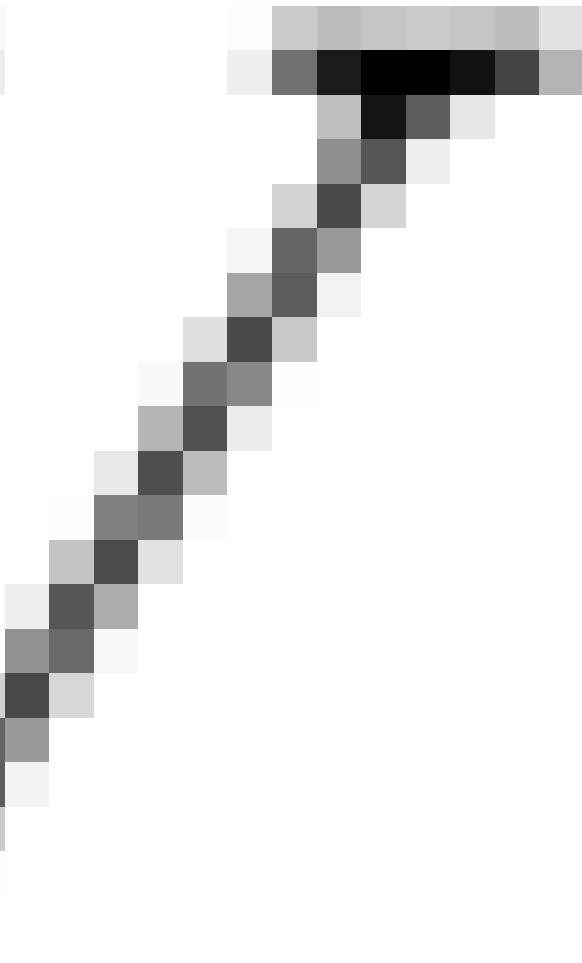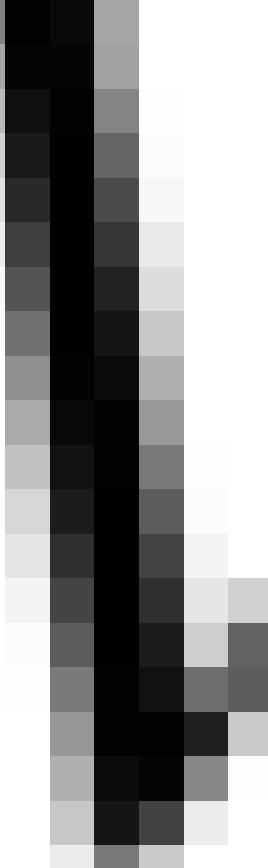



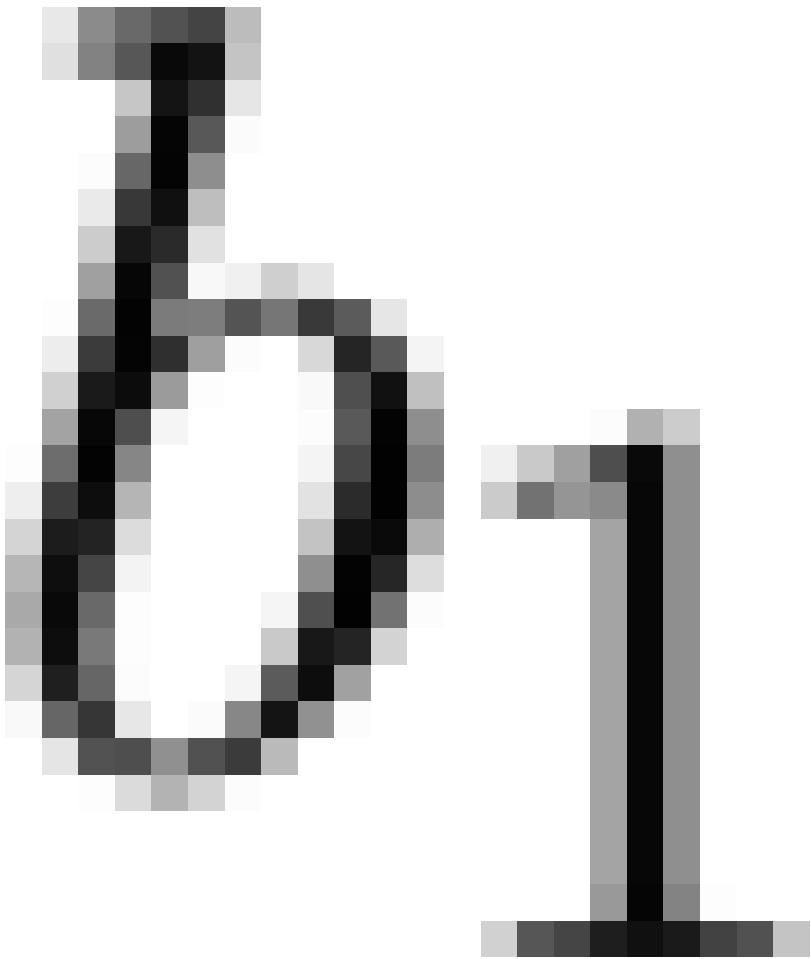


$$\sum F_1 = 0$$



$$\begin{aligned}\sum F_1 &= +S_{11}dx_2dx_3 - \left[S_{11} + \left(\frac{\partial S_{11}}{\partial x_1} \right) dx_1 \right] dx_2dx_3 \\ &\quad + S_{21}dx_1dx_3 - \left[S_{21} + \left(\frac{\partial S_{21}}{\partial x_2} \right) dx_2 \right] dx_1dx_3 \\ &\quad + S_{31}dx_1dx_2 - \left[S_{31} + \left(\frac{\partial S_{31}}{\partial x_3} \right) dx_3 \right] dx_1dx_2 \\ &\quad - \rho(dx_1dx_2dx_3)b_1 = 0\end{aligned}$$




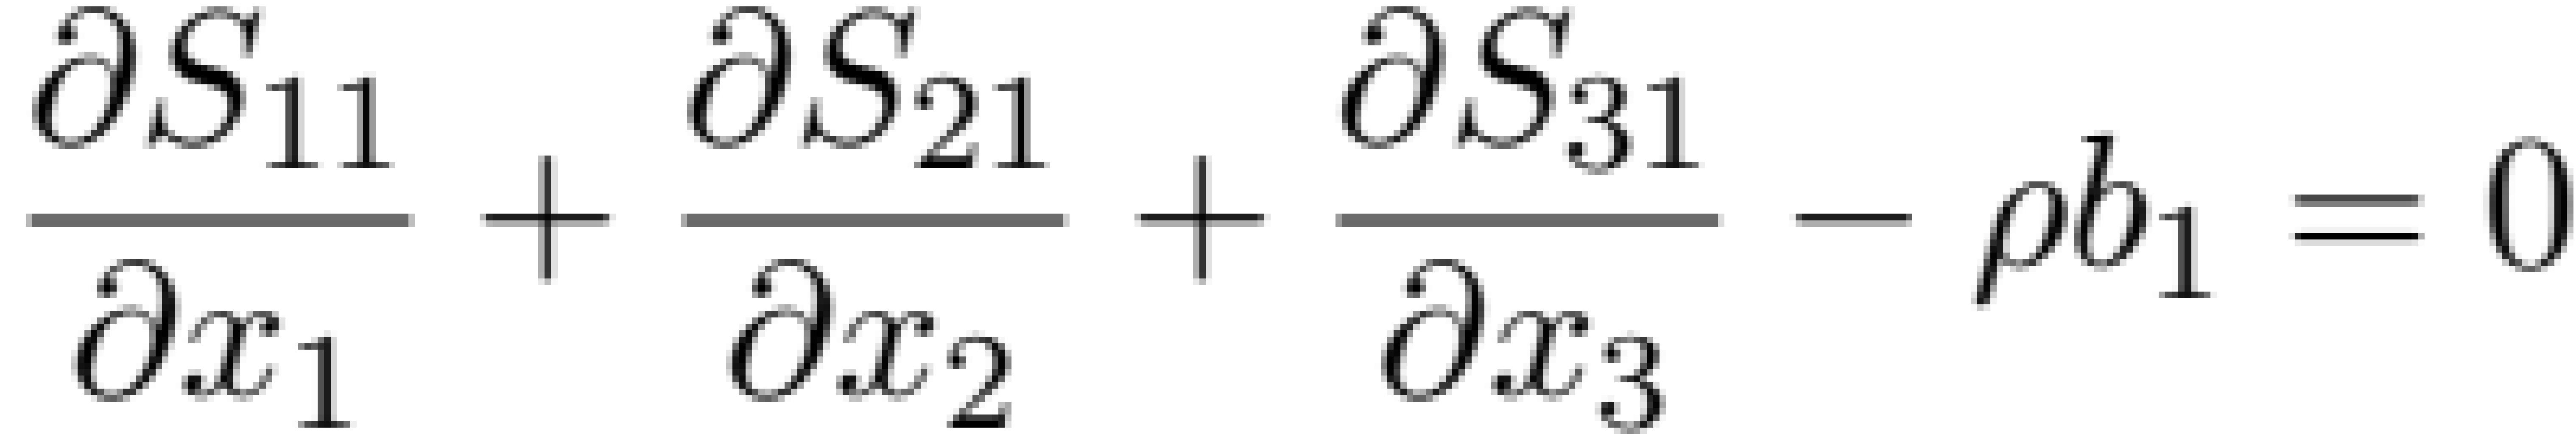

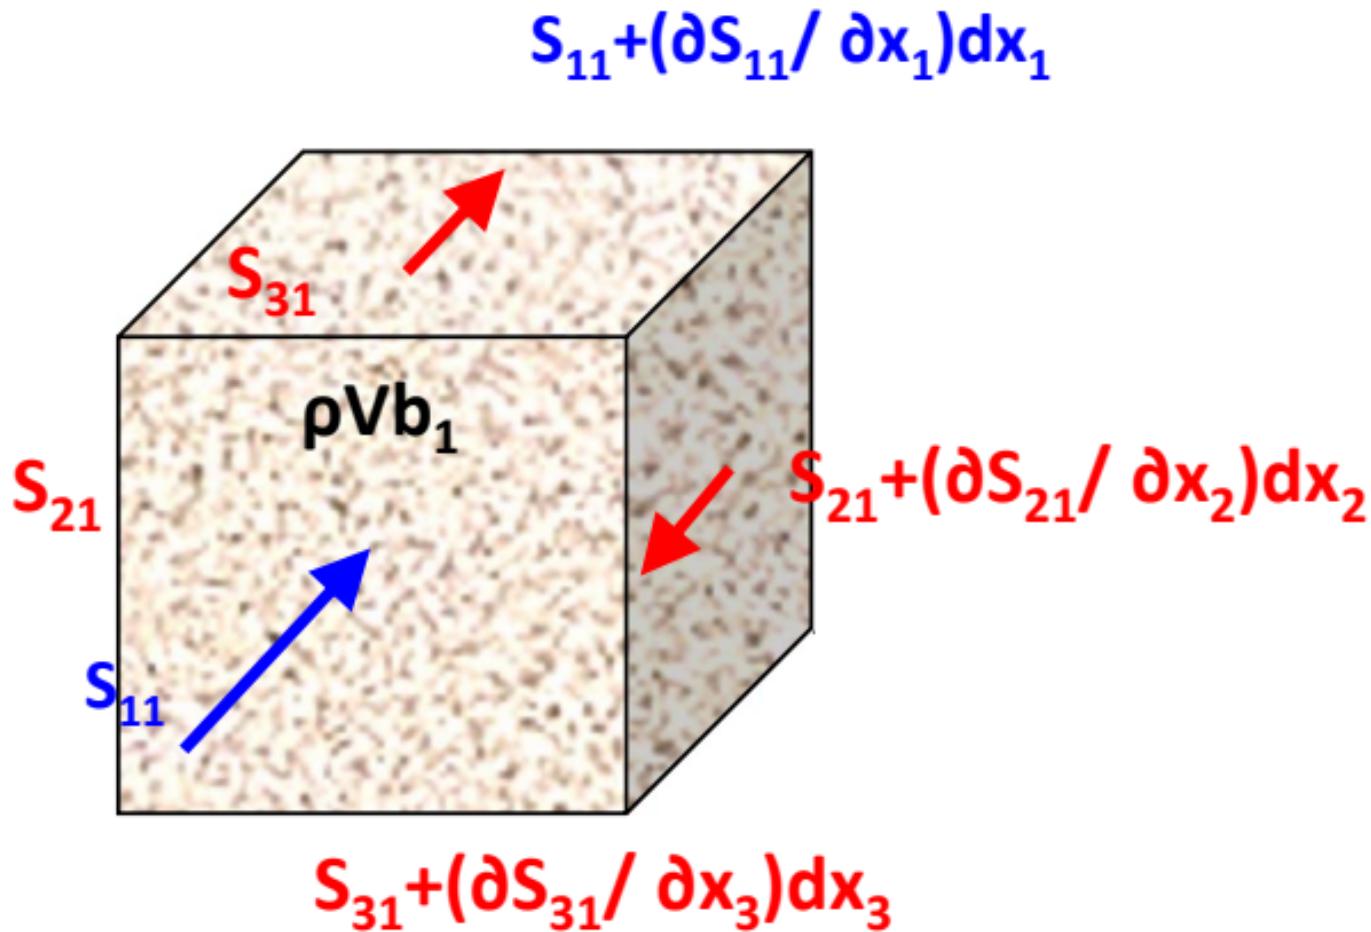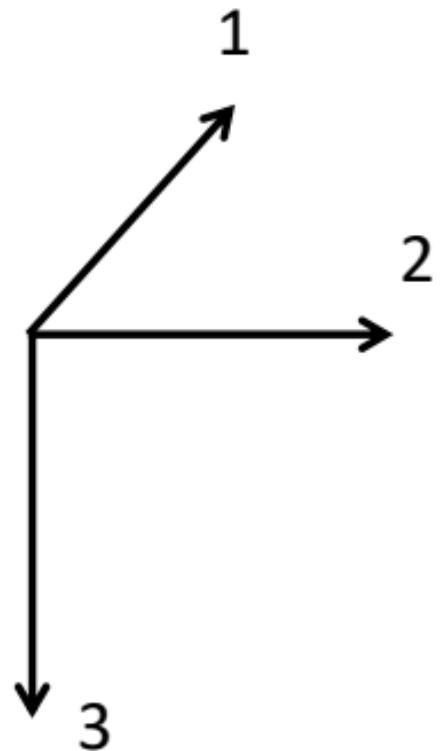

$$\left\{ \begin{array}{l} \frac{\partial S_{11}}{\partial x_1} + \frac{\partial S_{21}}{\partial x_2} + \frac{\partial S_{31}}{\partial x_3} - \rho b_1 = 0 \\ \frac{\partial S_{12}}{\partial x_1} + \frac{\partial S_{22}}{\partial x_2} + \frac{\partial S_{32}}{\partial x_3} - \rho b_2 = 0 \\ \frac{\partial S_{13}}{\partial x_1} + \frac{\partial S_{23}}{\partial x_2} + \frac{\partial S_{33}}{\partial x_3} - \rho b_3 = 0 \end{array} \right.$$

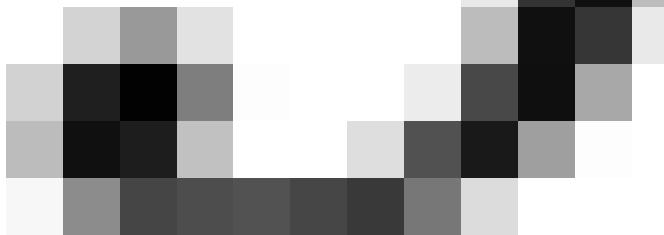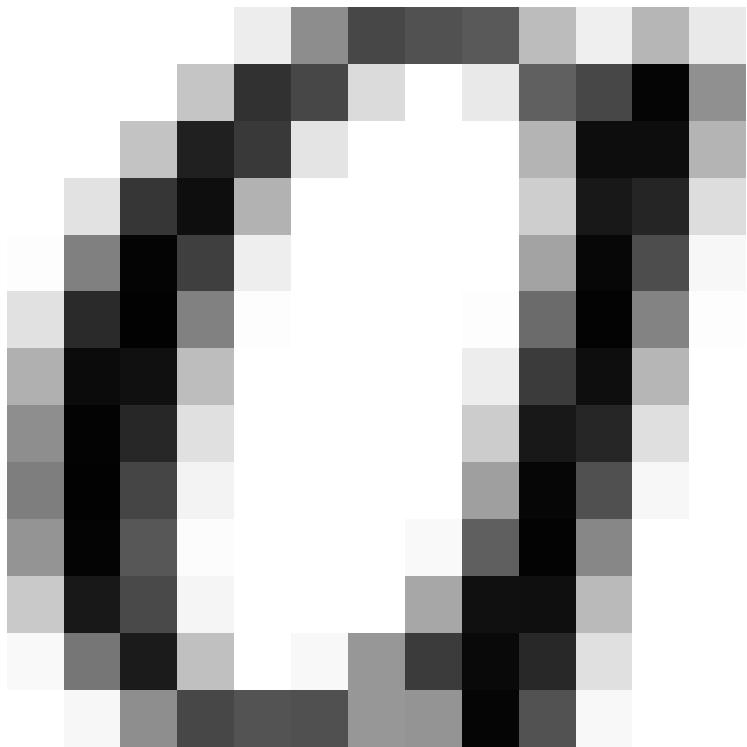


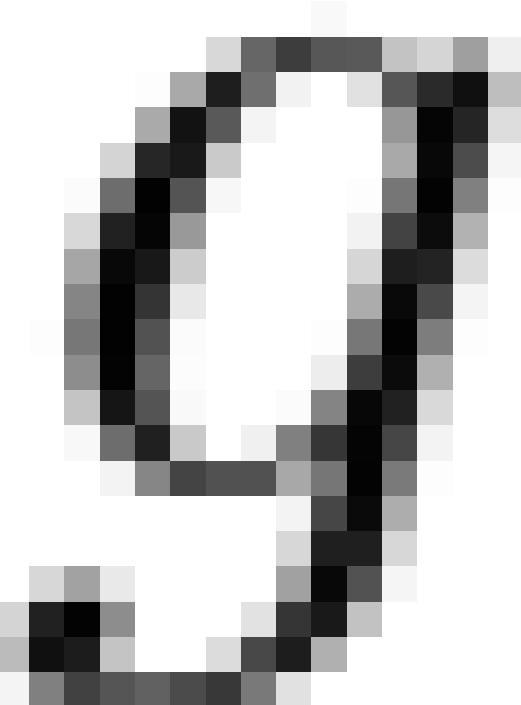





$$s_{33}(c_3) = \rho(c_3) \circ d_{c_3}$$

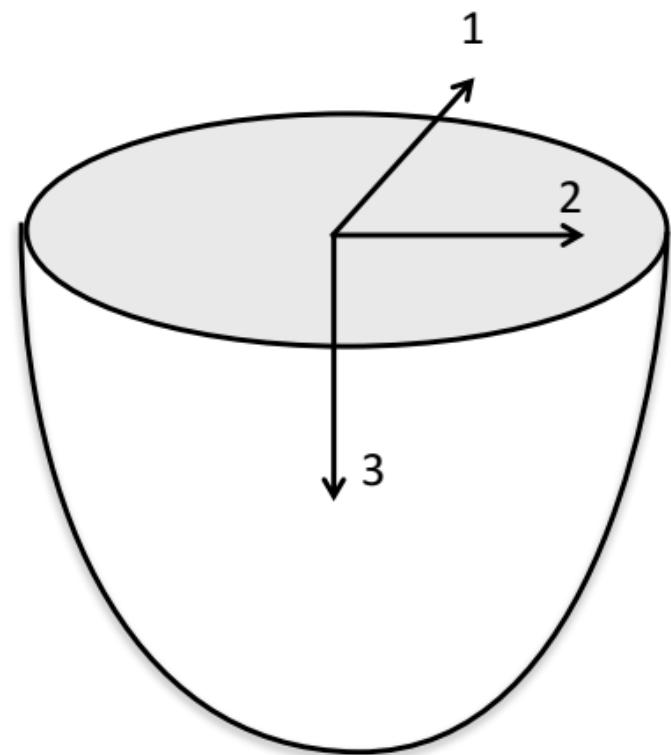


$$\left\{ \begin{array}{l} \cancel{\frac{\partial S_{11}}{\partial x_1} + \frac{\partial S_{21}}{\partial x_2} + \frac{\partial S_{31}}{\partial x_3} + \rho b_1 = \frac{\partial^2 (\rho u_1)}{\partial t^2}} \\ \cancel{\frac{\partial S_{12}}{\partial x_1} + \frac{\partial S_{22}}{\partial x_2} + \frac{\partial S_{32}}{\partial x_3} + \rho b_2 = \frac{\partial^2 (\rho u_2)}{\partial t^2}} \\ \cancel{\frac{\partial S_{13}}{\partial x_1} + \frac{\partial S_{23}}{\partial x_2} + \frac{\partial S_{33}}{\partial x_3} + \rho b_3 = \frac{\partial^2 (\rho u_3)}{\partial t^2}} \end{array} \right.$$

$$\frac{\partial S_{33}}{\partial x_3} - \rho(x_3)g = 0$$

$$S_{33} = \int_0^{x_3} \rho(x_3)g \, dx_3$$





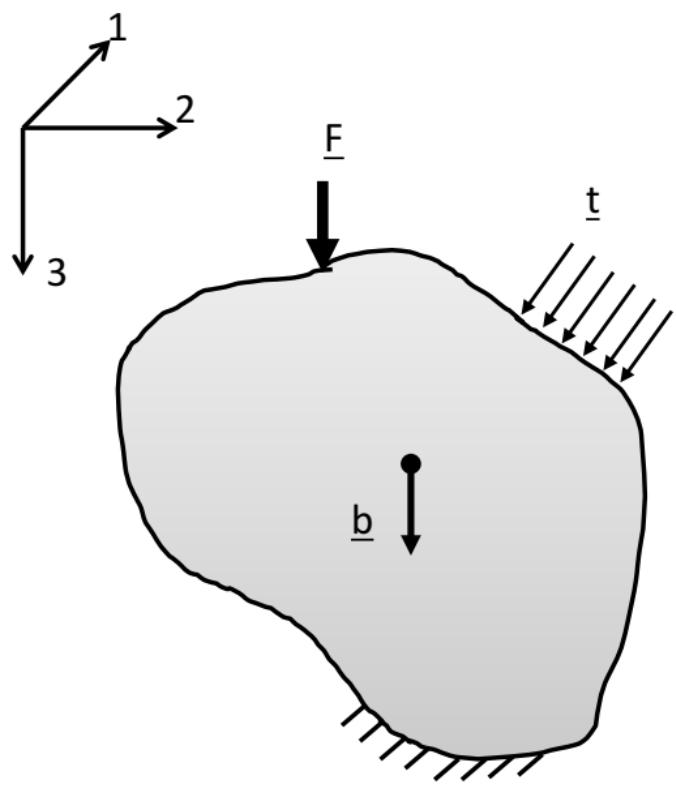

Displacement
condition

$$\begin{cases} \frac{\partial S_{11}}{\partial x_1} + \frac{\partial S_{21}}{\partial x_2} + \frac{\partial S_{31}}{\partial x_3} + \rho b_1 = \frac{\partial^2 (\rho u_1)}{\partial t^2} \\ \frac{\partial S_{12}}{\partial x_1} + \frac{\partial S_{22}}{\partial x_2} + \frac{\partial S_{32}}{\partial x_3} + \rho b_2 = \frac{\partial^2 (\rho u_2)}{\partial t^2} \\ \frac{\partial S_{13}}{\partial x_1} + \frac{\partial S_{23}}{\partial x_2} + \frac{\partial S_{33}}{\partial x_3} + \rho b_3 = \frac{\partial^2 (\rho u_3)}{\partial t^2} \end{cases}$$

And respect the boundary conditions:

- Displacement
- Boundary stresses
- Boundary Forces
- Body Forces

How do we relate stresses to displacements?

- Displacements → Strains (**Kinematic equations**)
- Strains → Stresses (**Constitutive equations**)



ϵ_{11}



α_1

α_1


ϵ_{22}

$=$

α_2


α_2

acc10(ut1) + acc10(ut2) + acc10(ut3)




$\epsilon_{12} =$ $-\frac{1}{2}$


$$\frac{1}{2} \left(u_1 - u_2 + c_1 - c_2 \right)$$

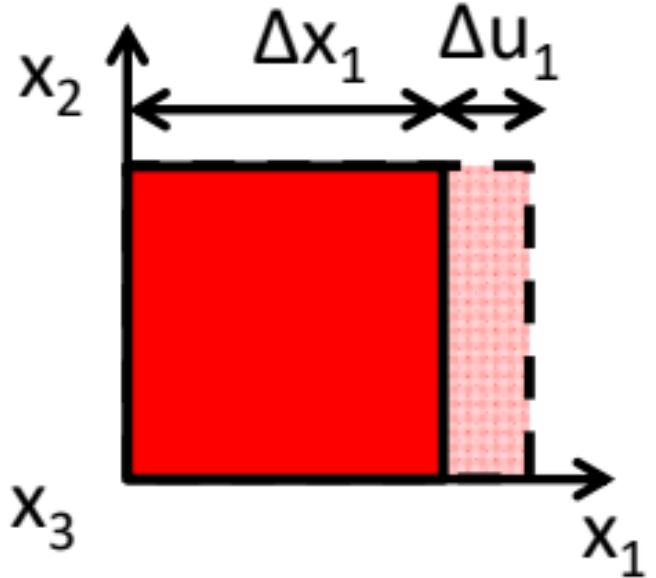


$$\varepsilon_{11} \approx \frac{\Delta u_1}{\Delta x_1}$$

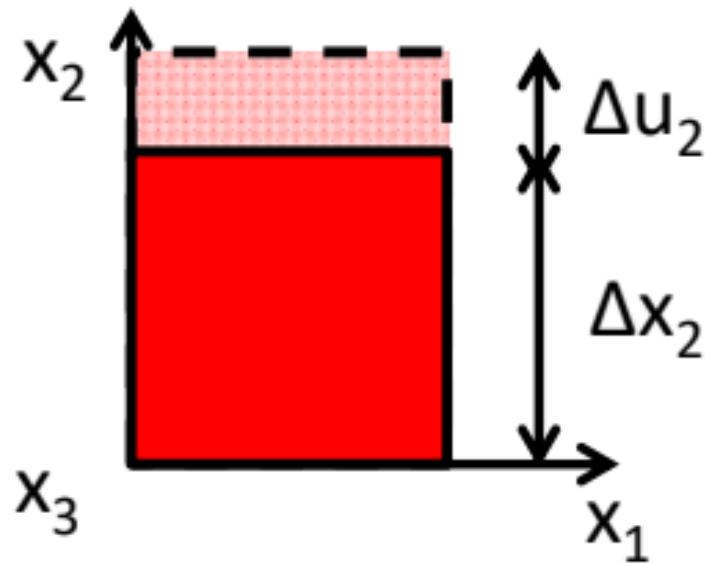


$$\varepsilon_{22} \approx \frac{\Delta u_2}{\Delta x_2}$$

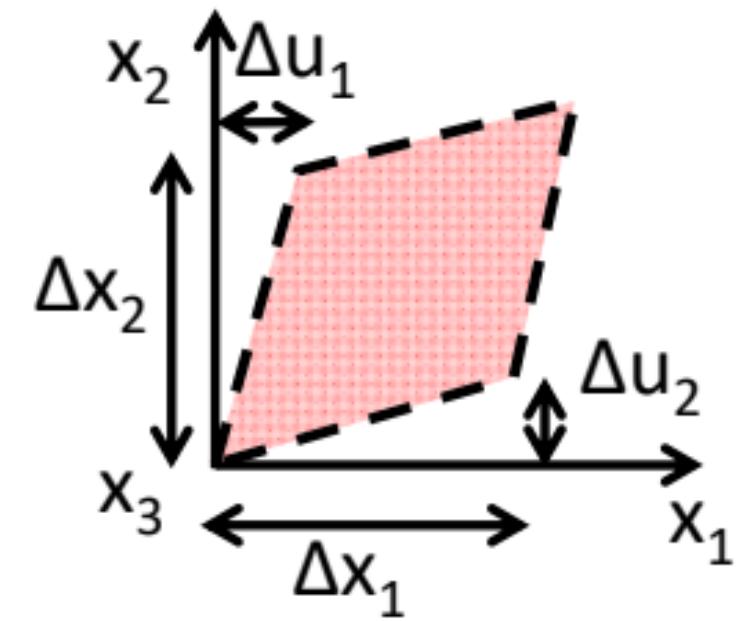



$$\varepsilon_{12} \approx \frac{1}{2} \left(\frac{\Delta u_1}{\Delta x_2} + \frac{\Delta u_2}{\Delta x_1} \right)$$

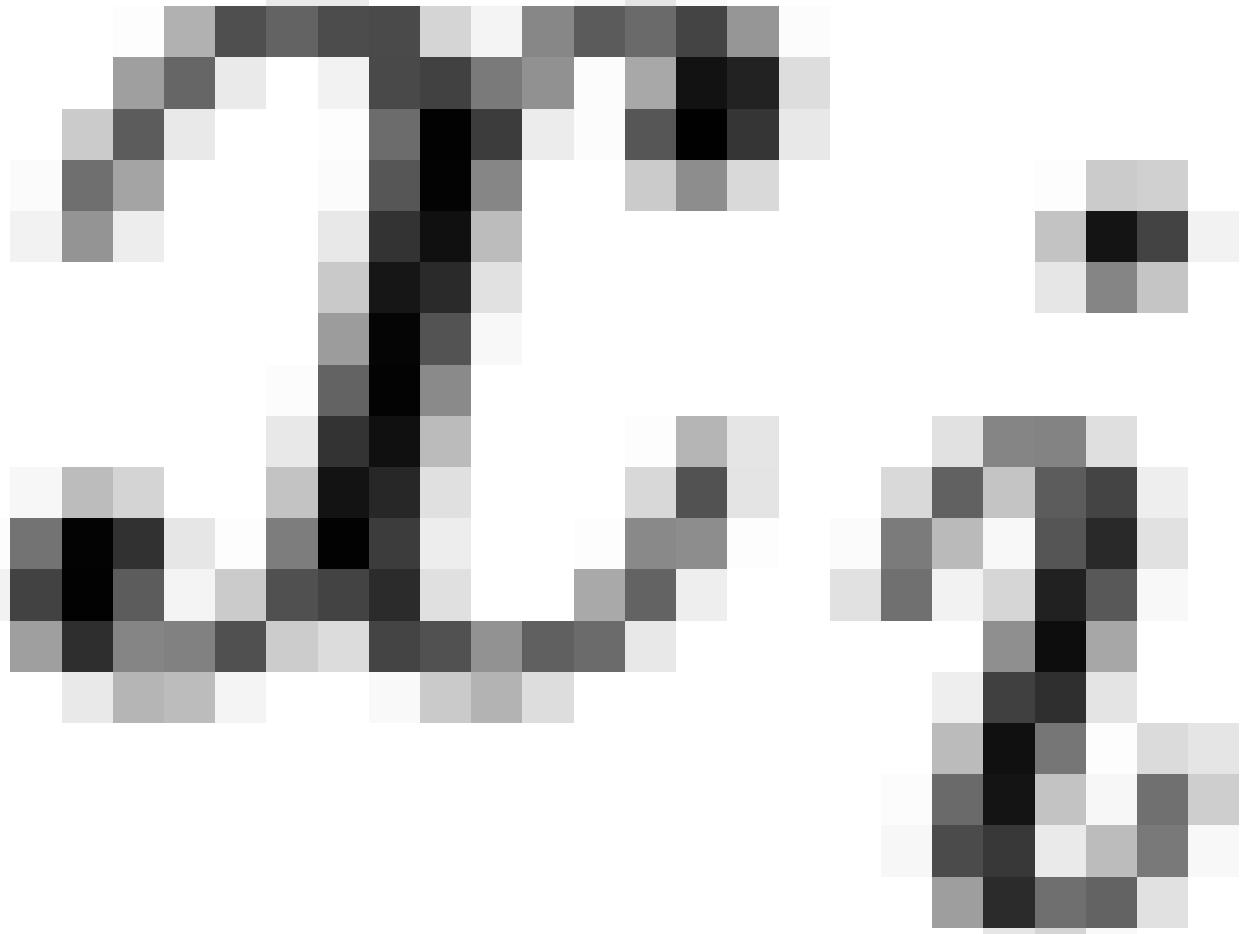







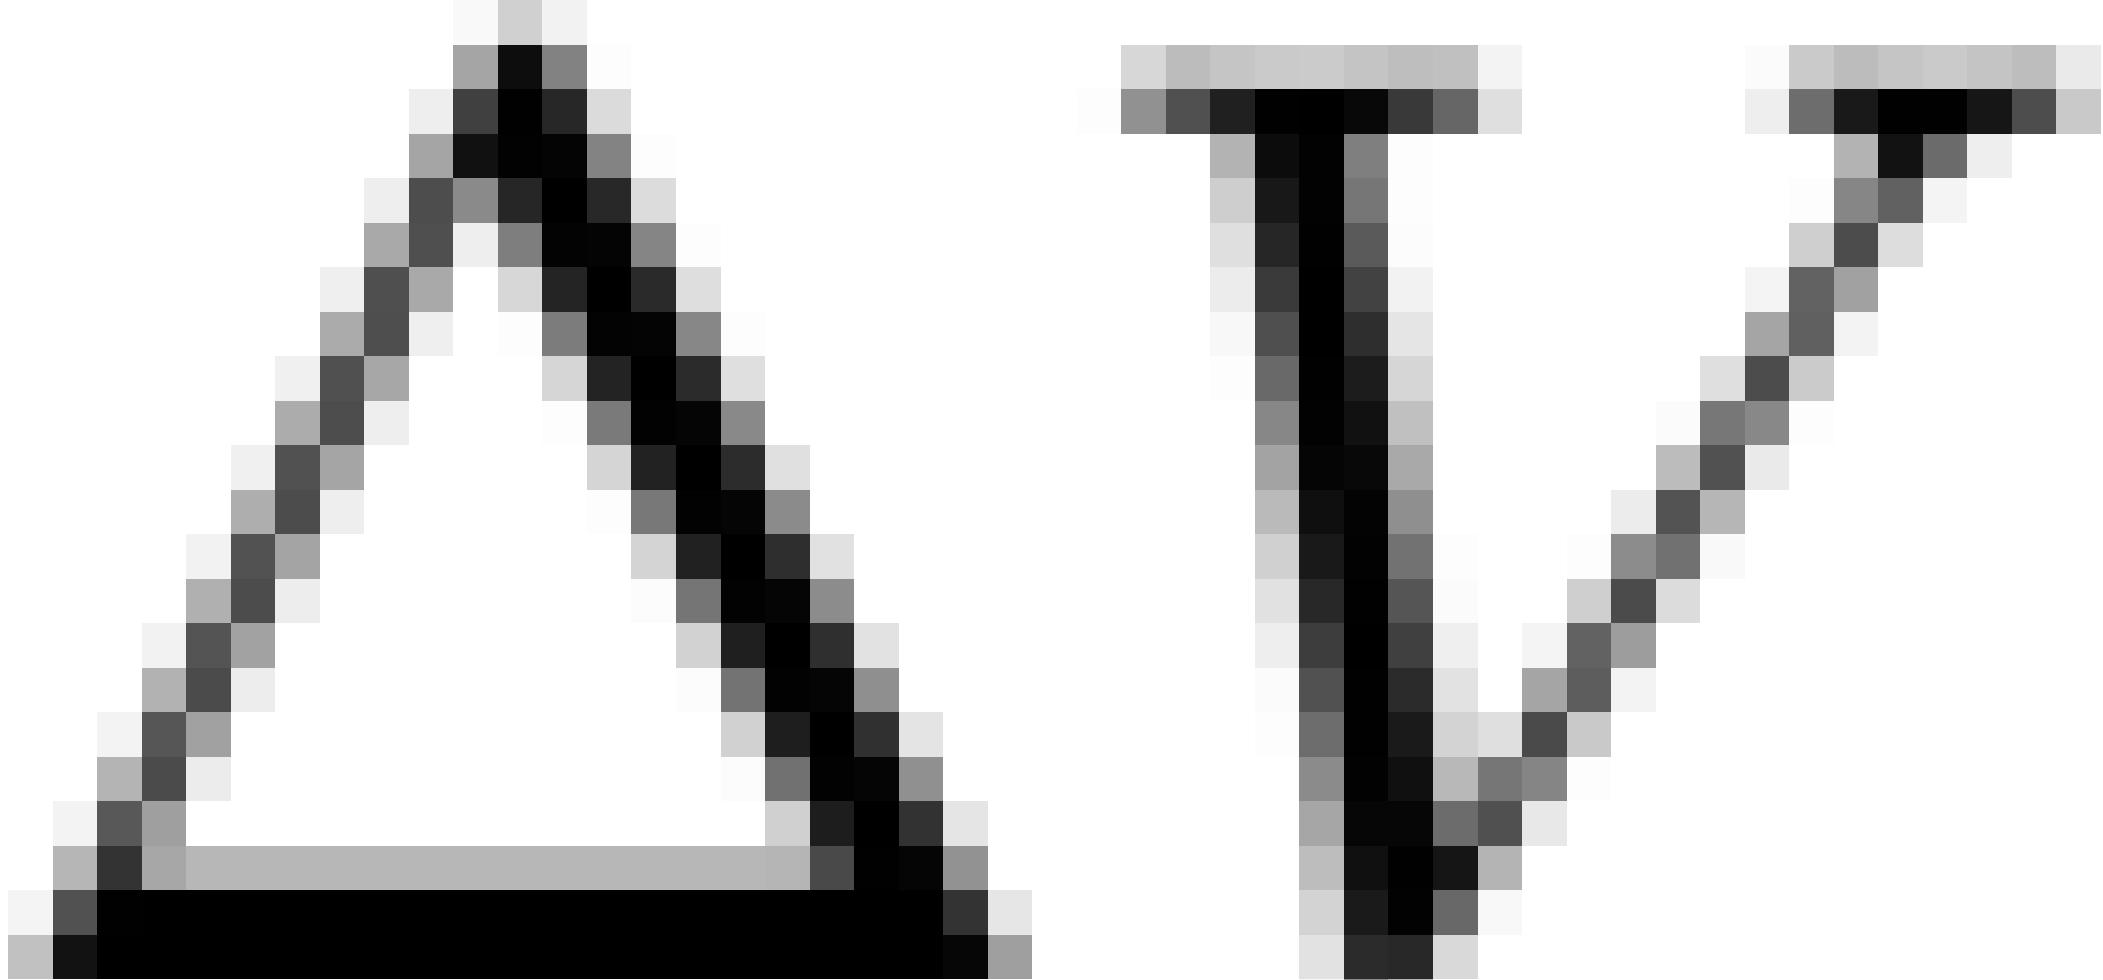


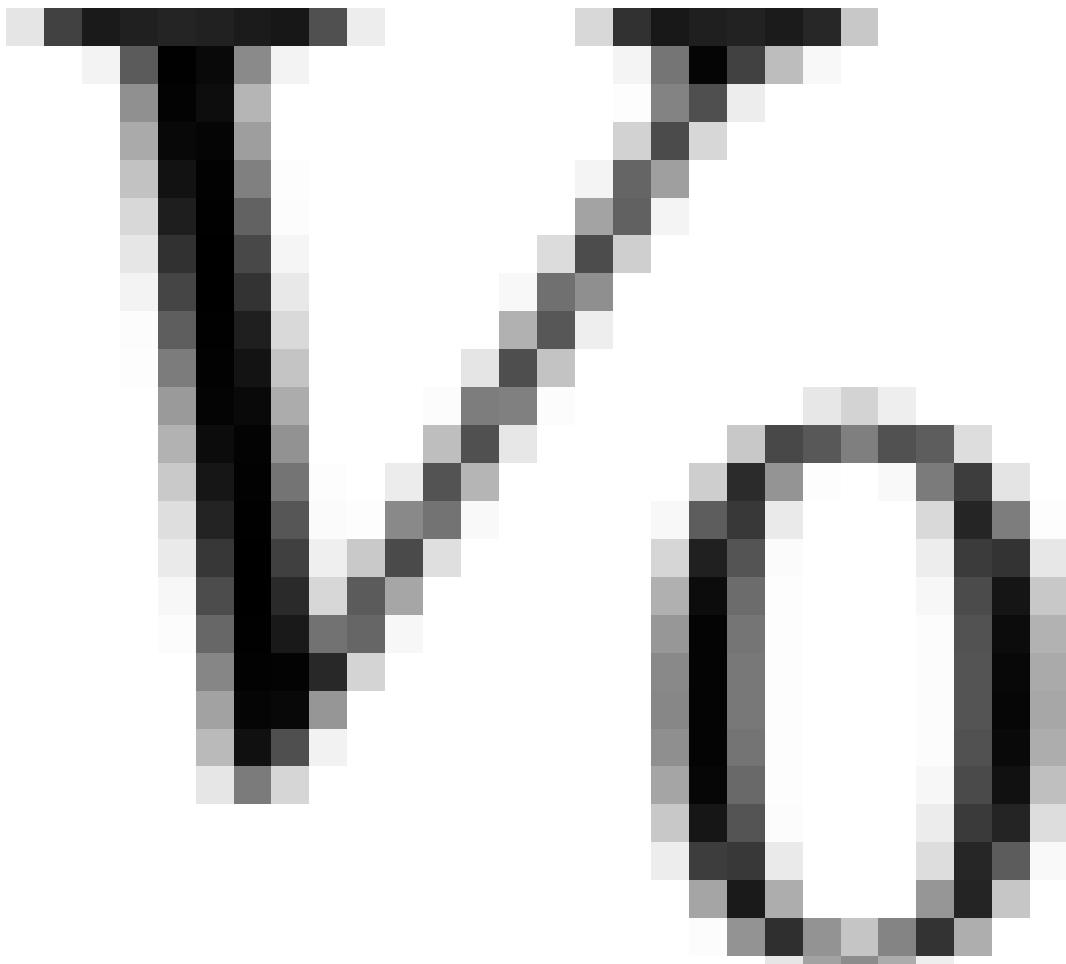

cool

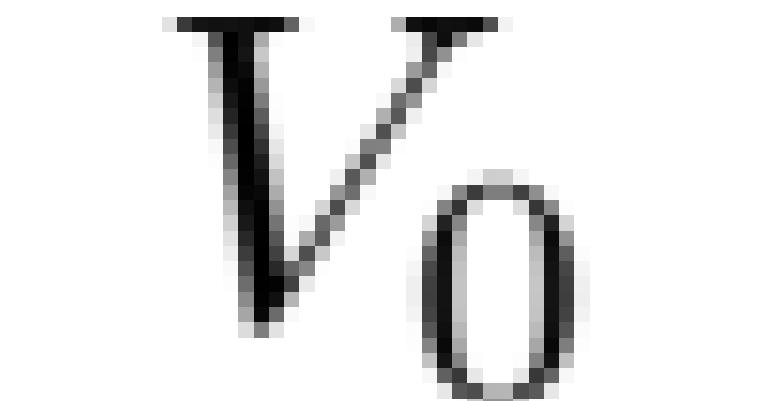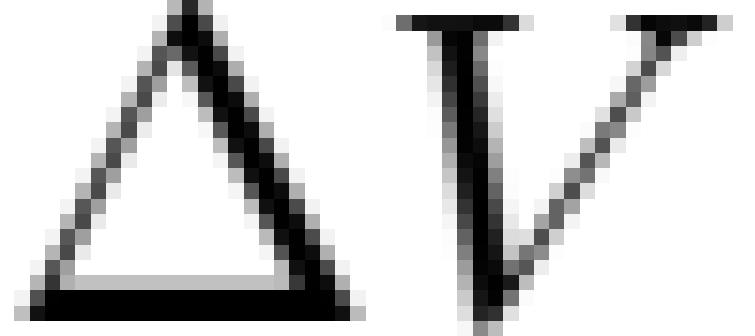






$$\epsilon_{vol} = \frac{[(dx_1 + du_1)(dx_2 + du_3) - (dx_1 dx_2 dx_3)]}{(dx_1 dx_2 dx_3)}$$









$$\text{vol}^2 \frac{(dx_1 dx_2 du_3 + dx_1 dx_3 du_2 + dx_2 dx_3 du_1)}{(dx_1 dx_2 dx_3)} = \frac{du_1}{\epsilon_{11}} + \frac{du_2}{\epsilon_{22}} + \frac{du_3}{\epsilon_{33}}$$


Hard
elastic
solid

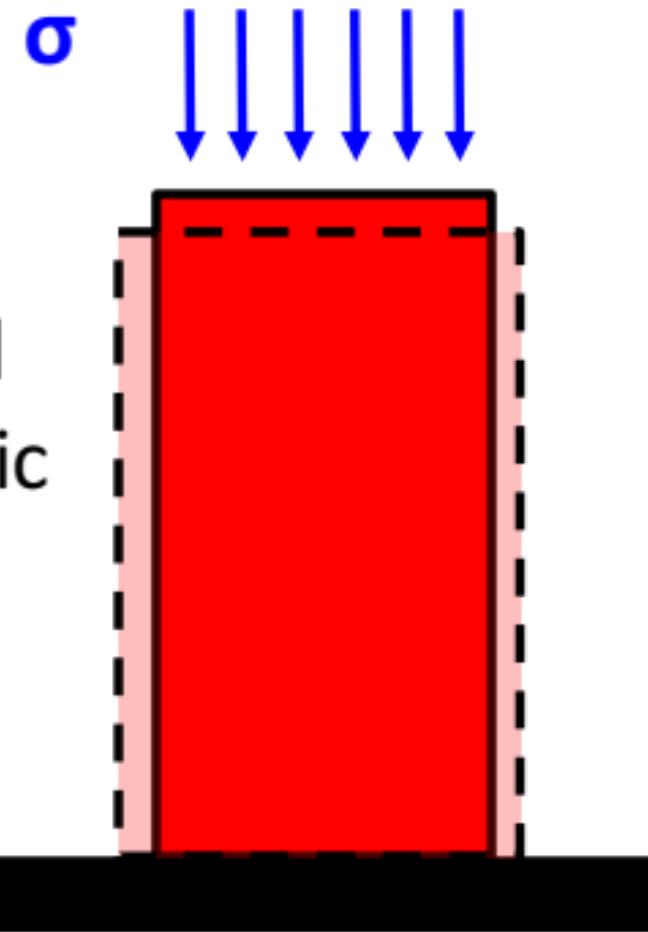



Soft
elastic
solid

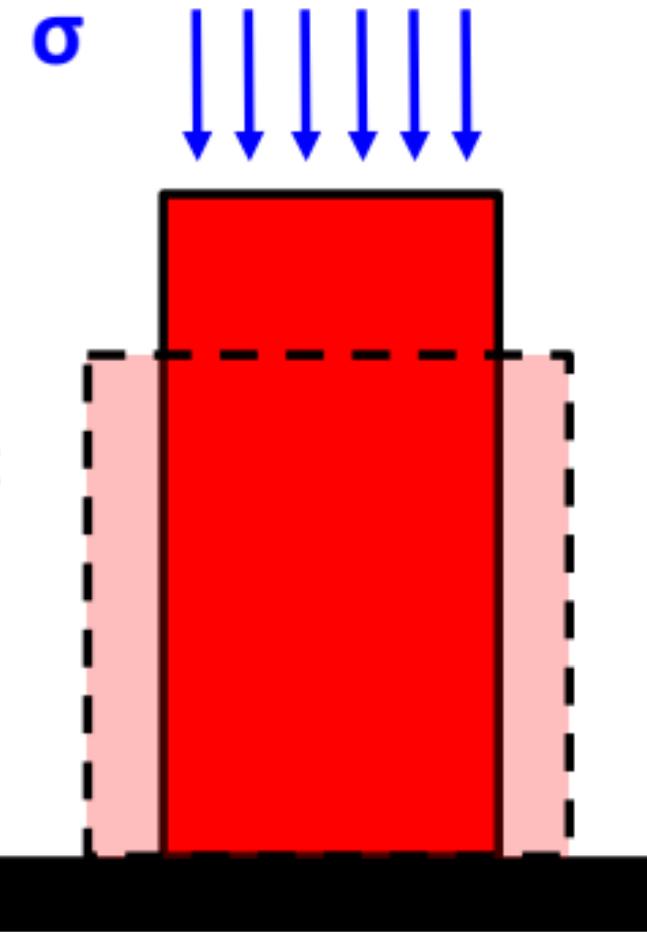



Soft
Visco-
plastic
solid

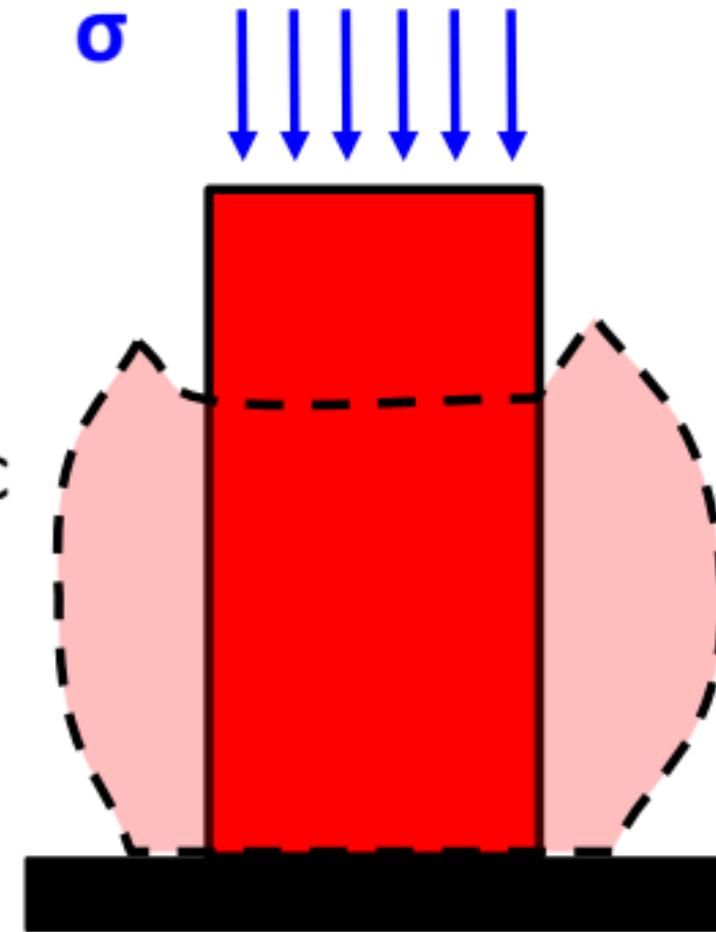

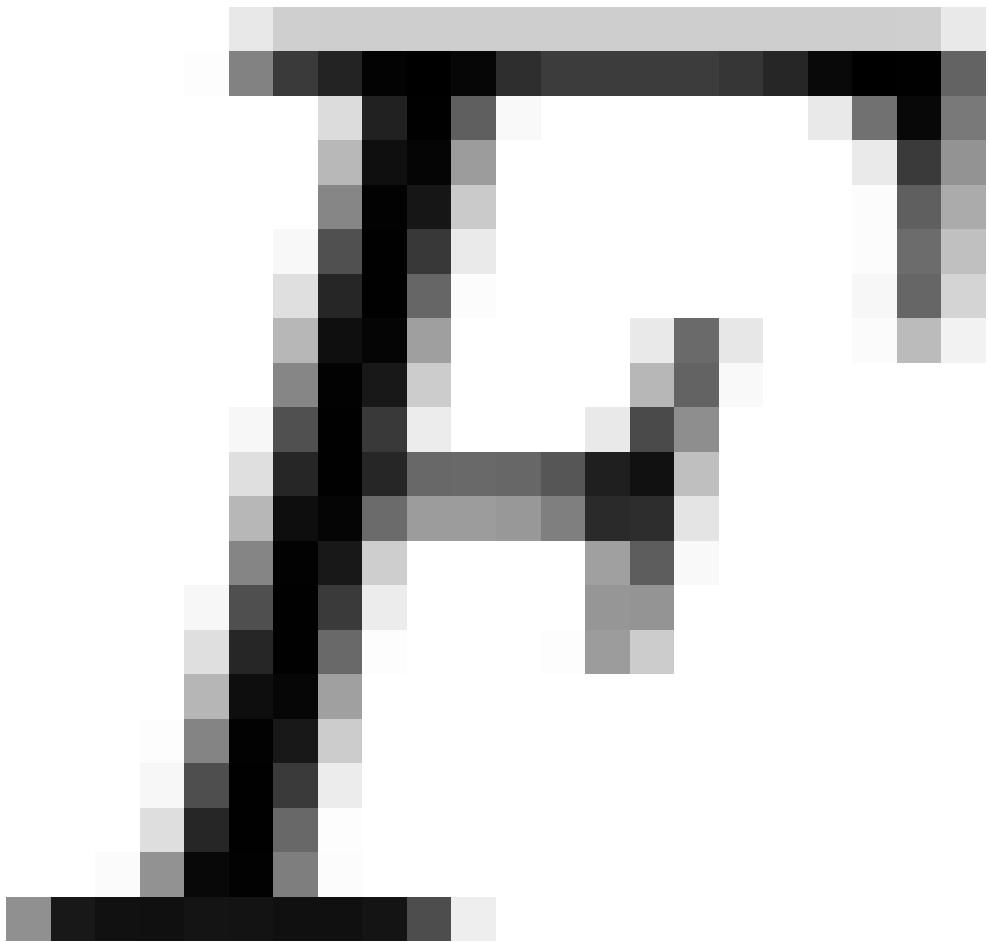

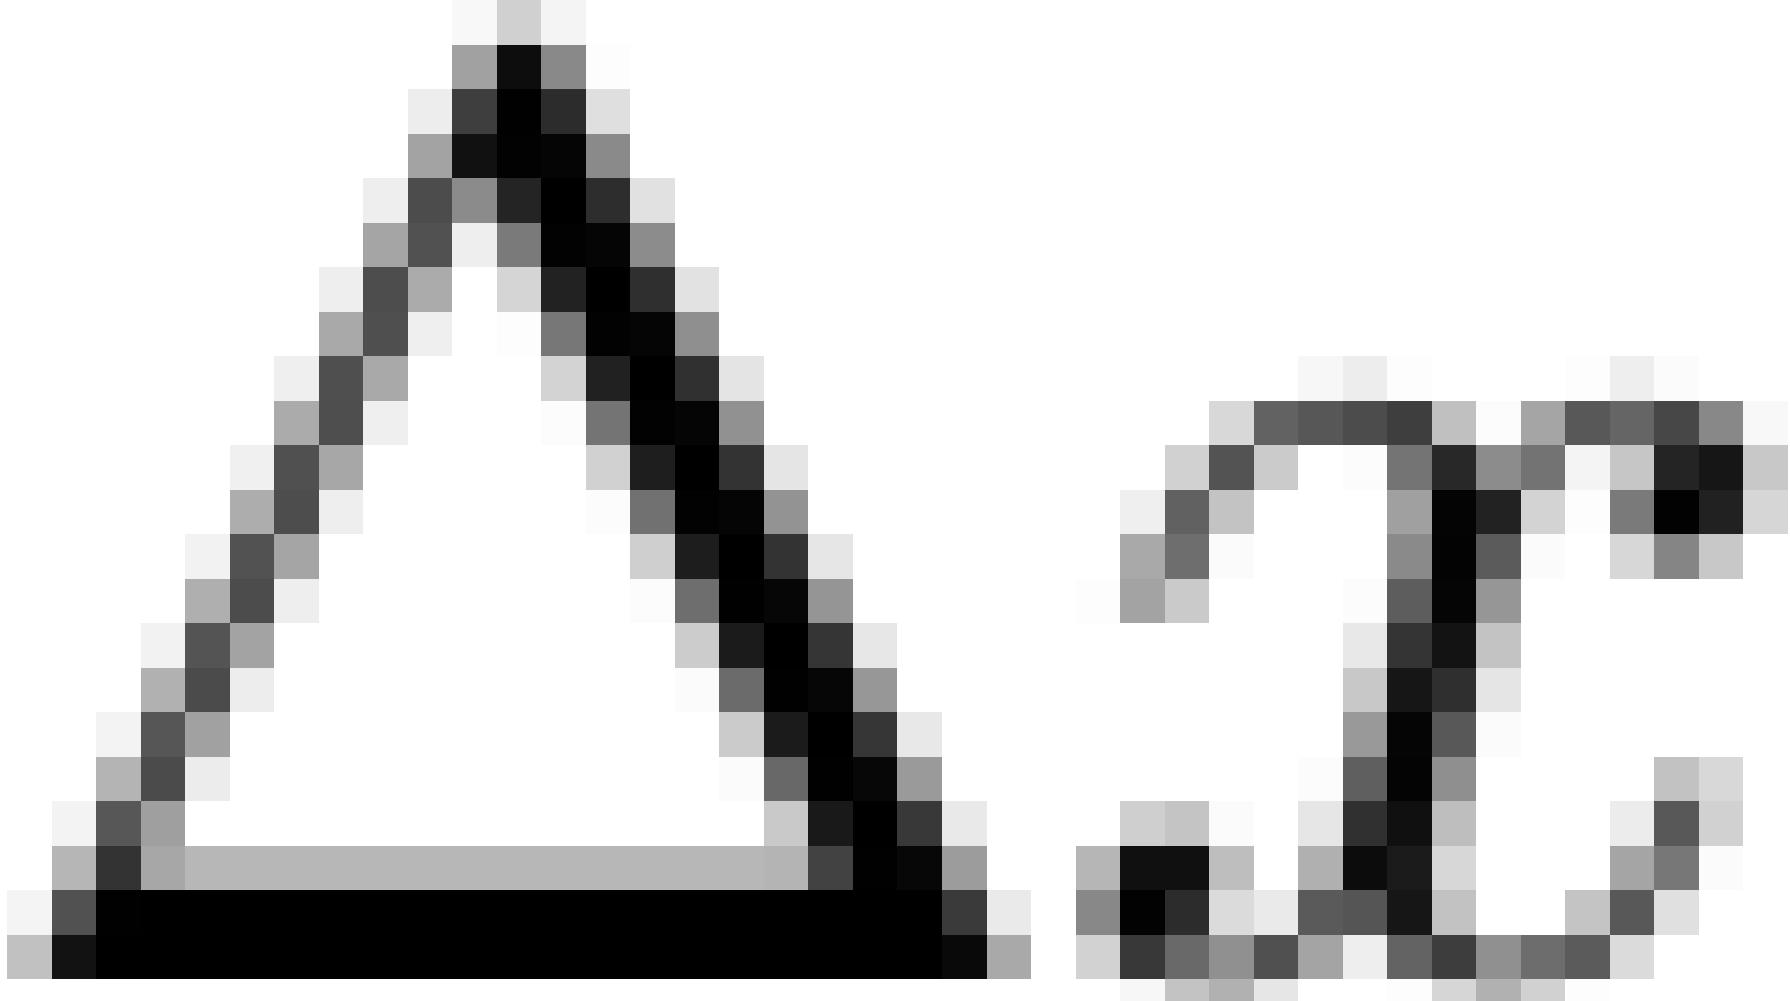

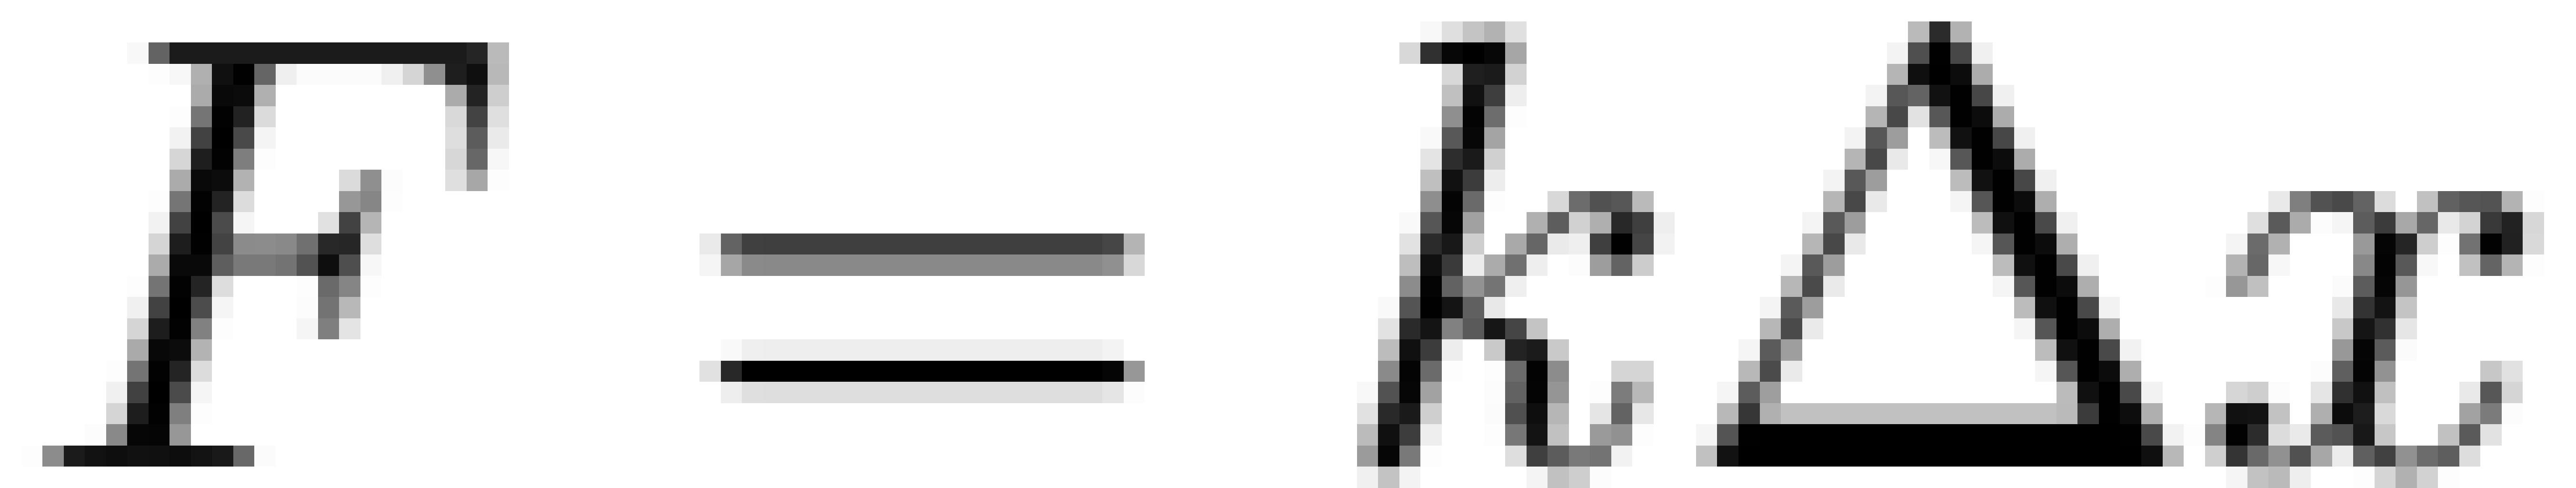

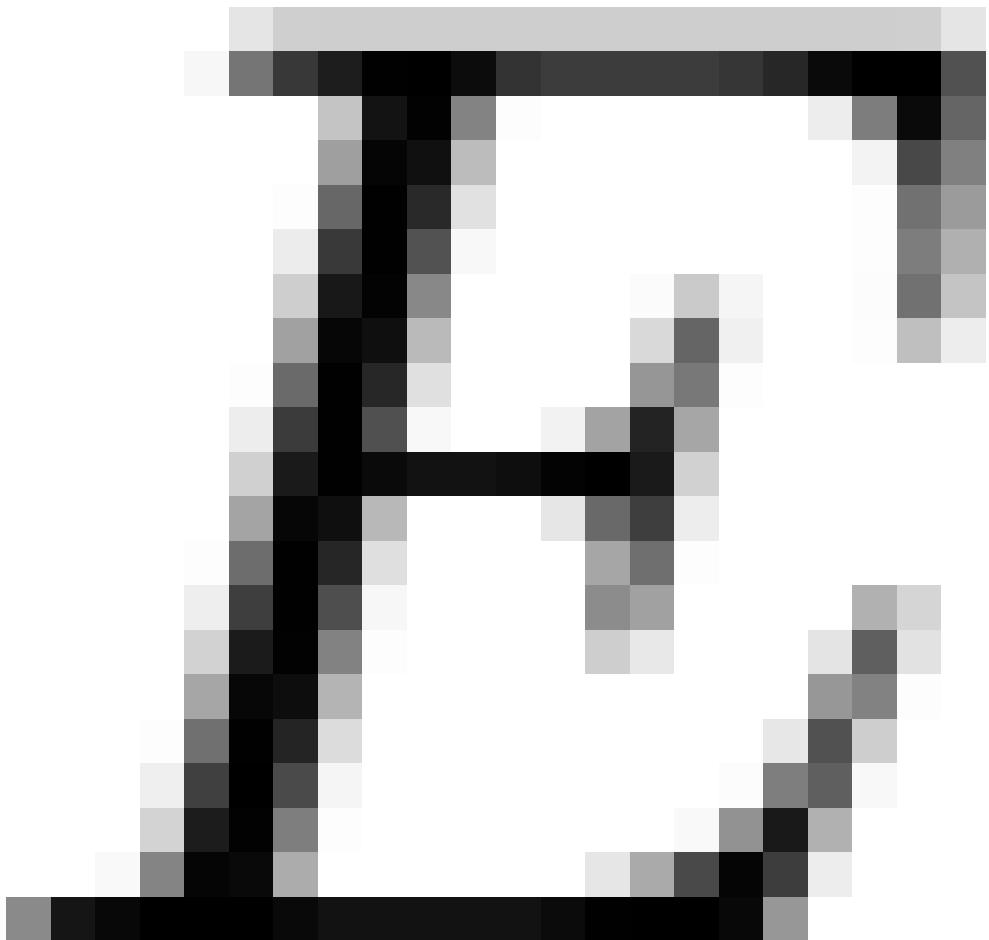

A


A



—
—



B





C

T

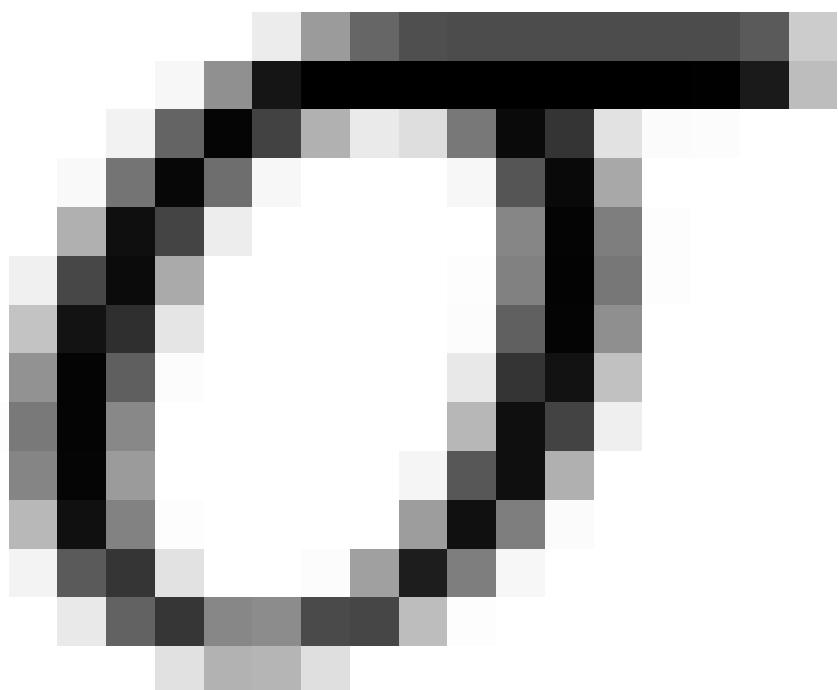

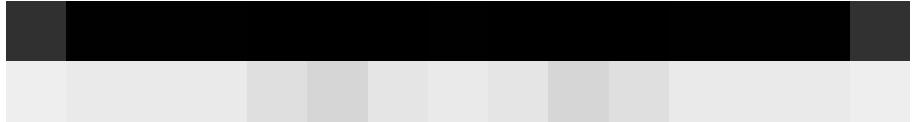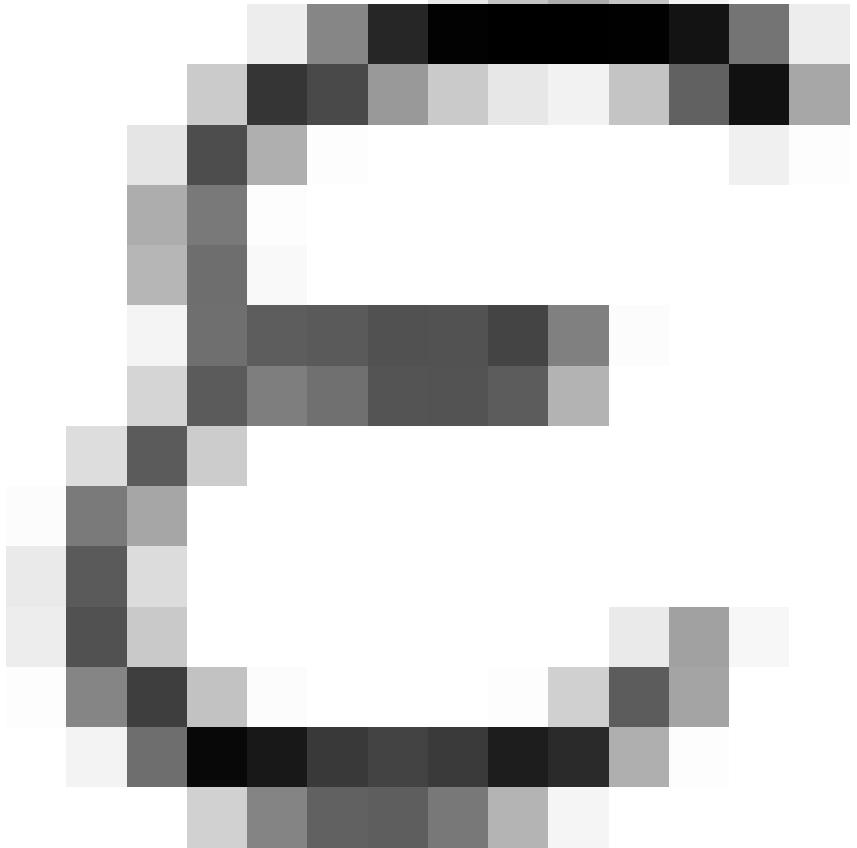


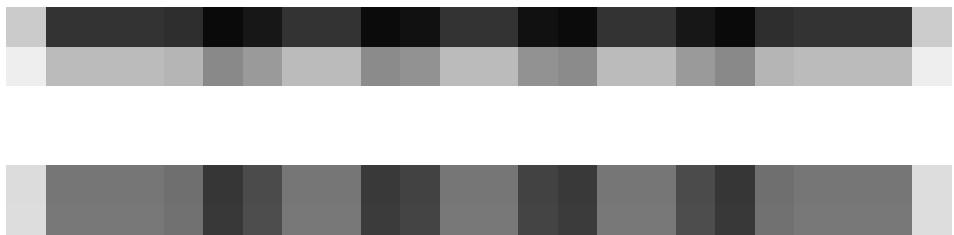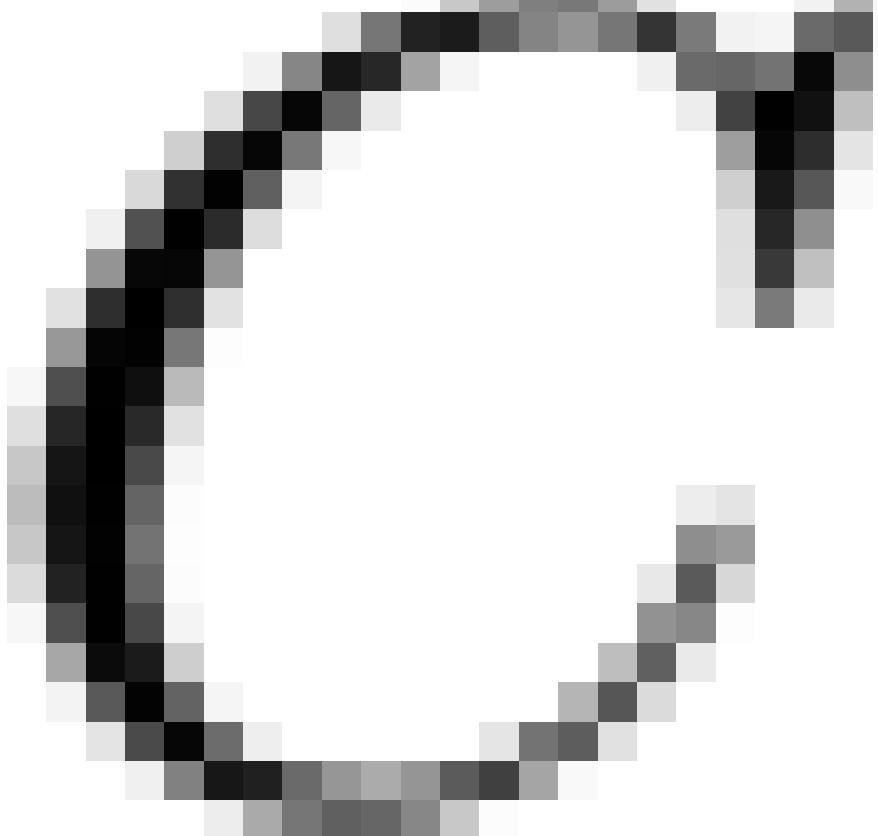

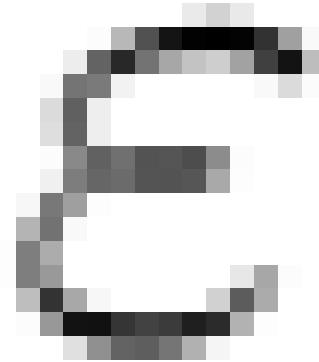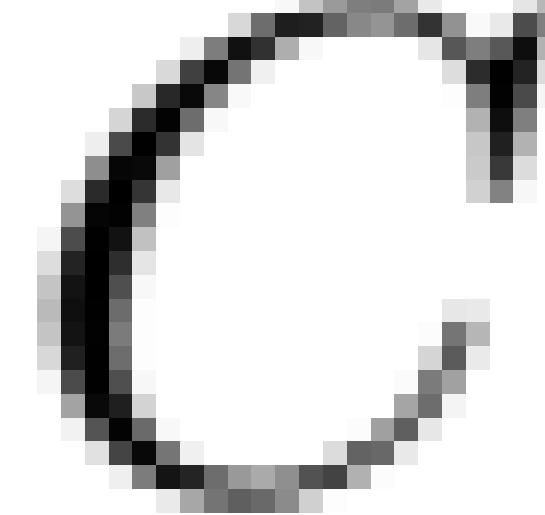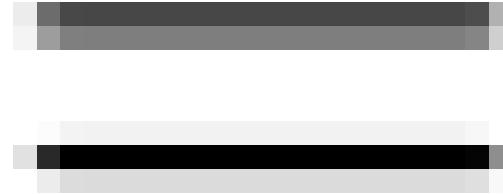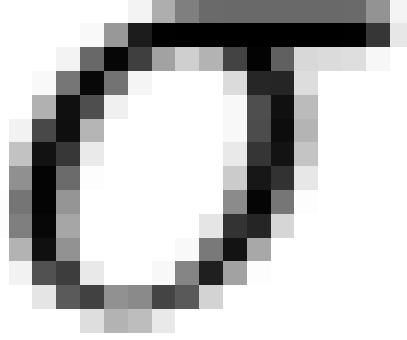

Hooke's law

$$F = k\Delta x$$

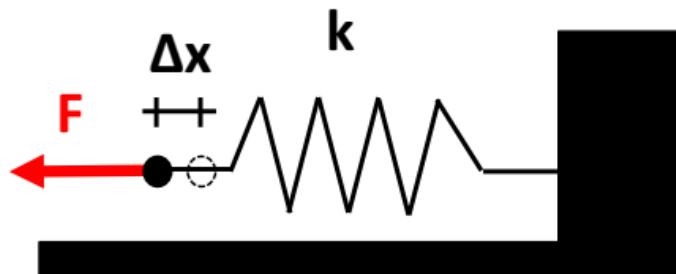





1-D (stress-strain) Hooke's law


$$\sigma = E\varepsilon$$

Generalized Hooke's law

$$\underline{\sigma} = \underline{C}\underline{\varepsilon}$$

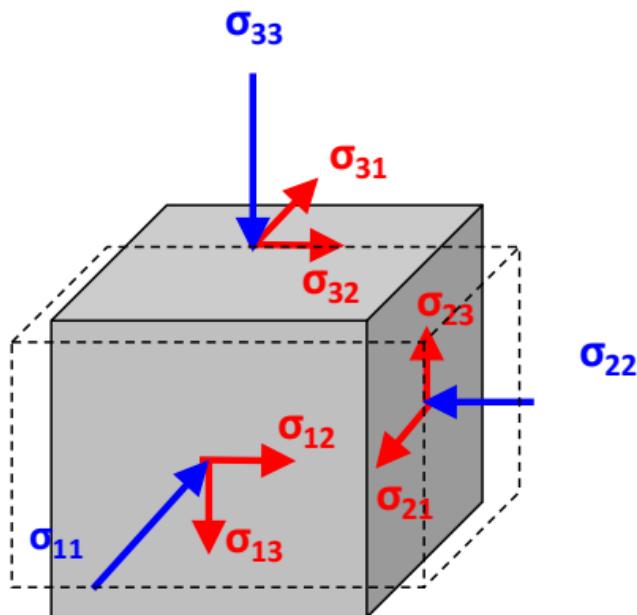

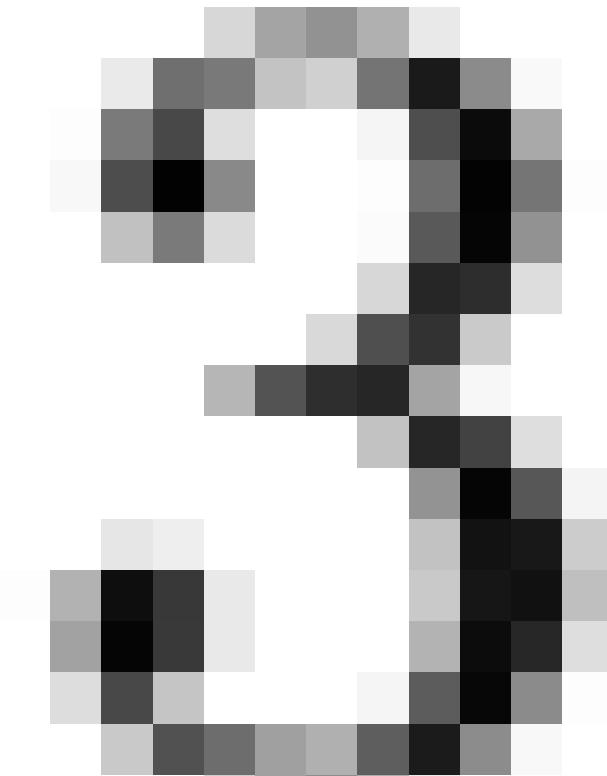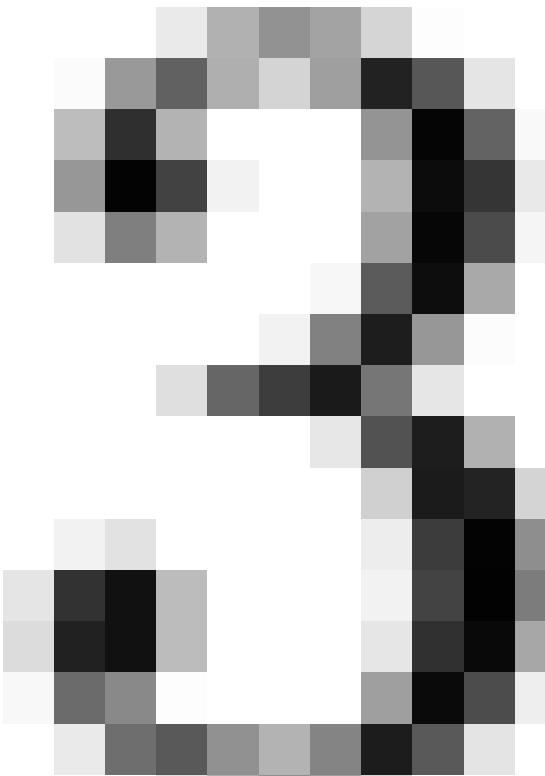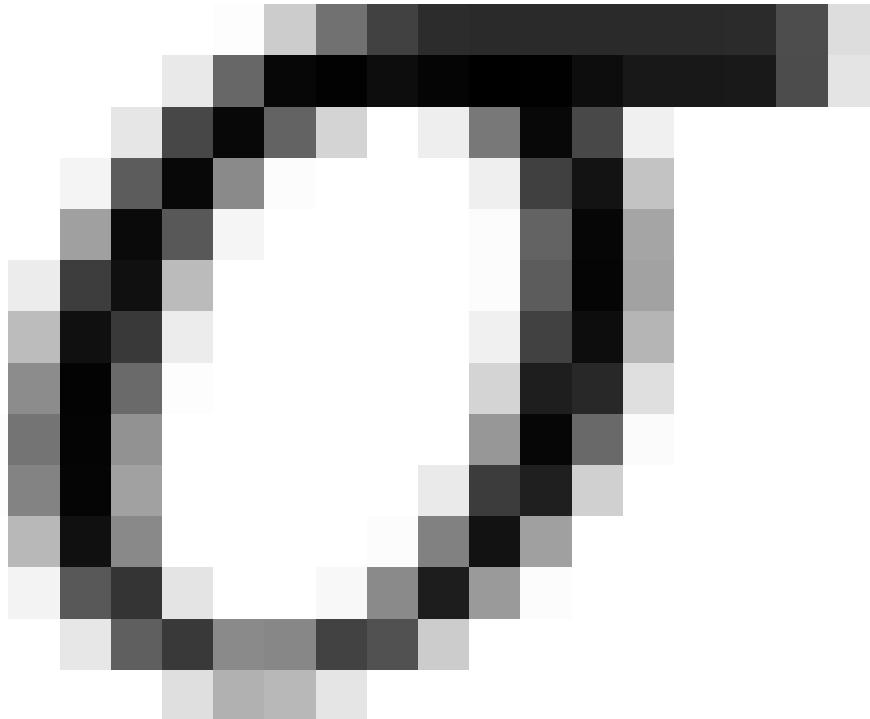

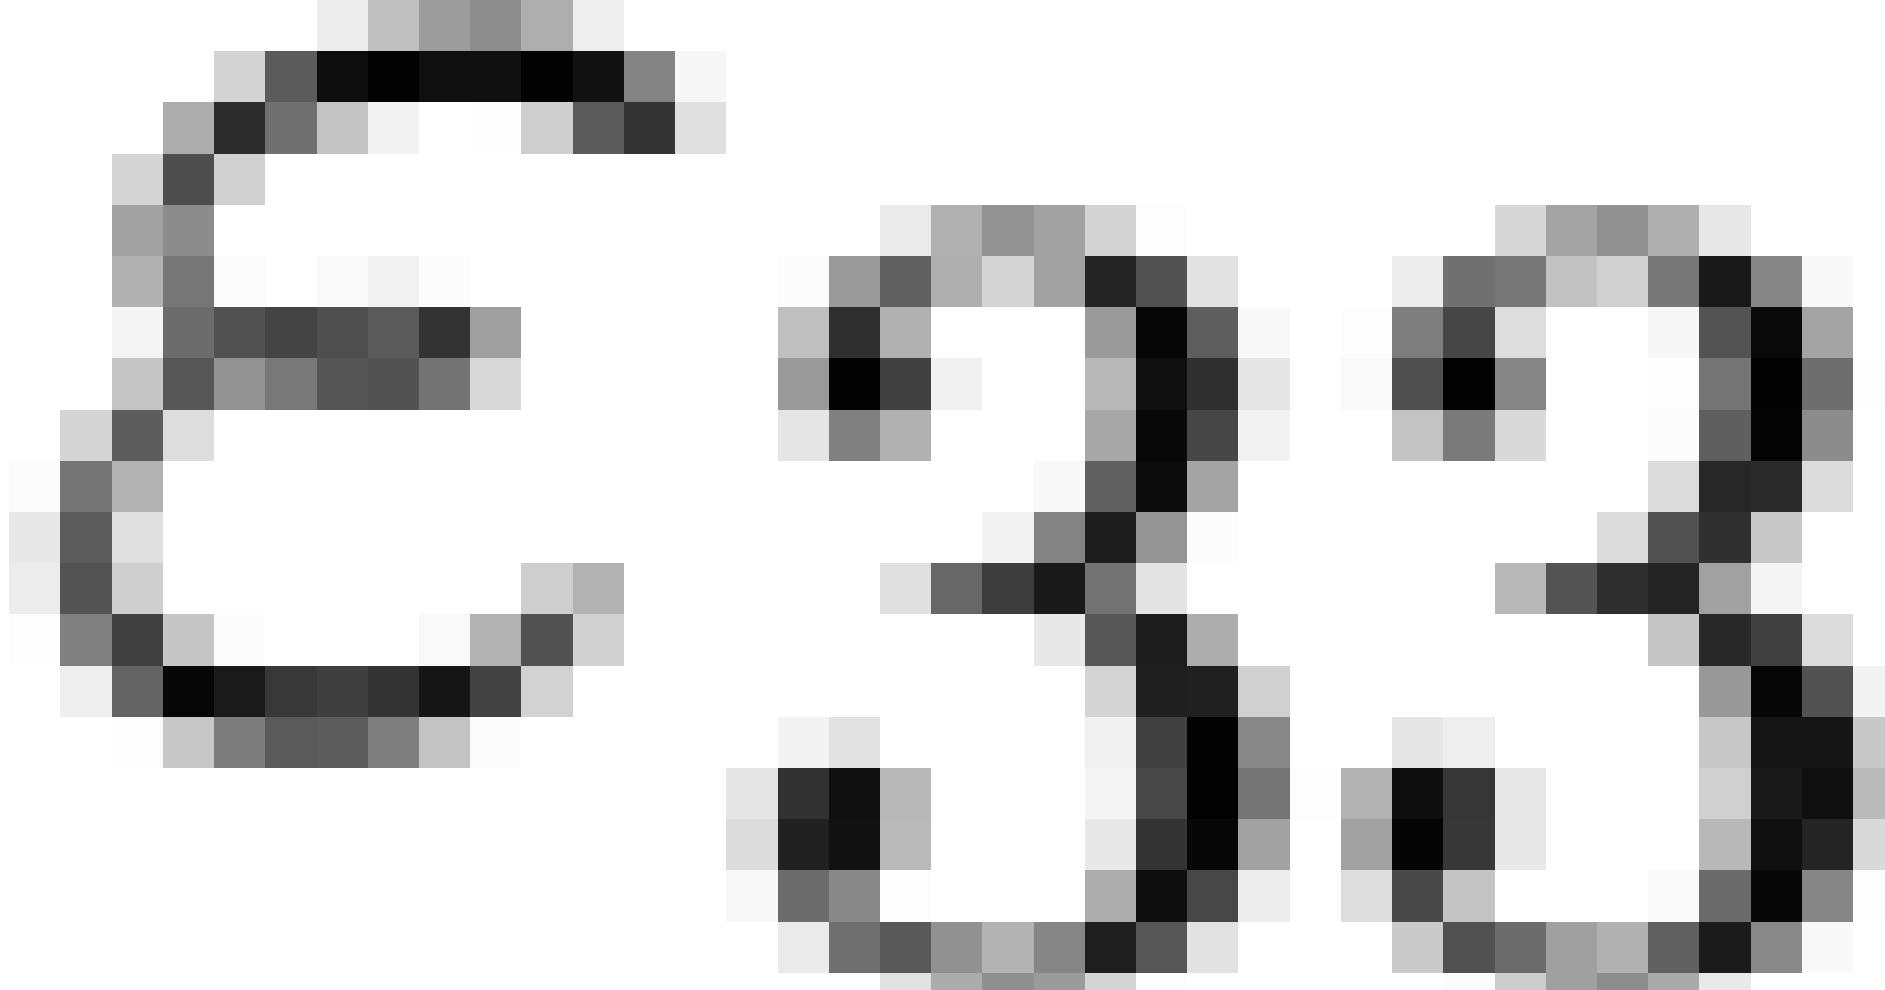


E

—
—

σ33

c33



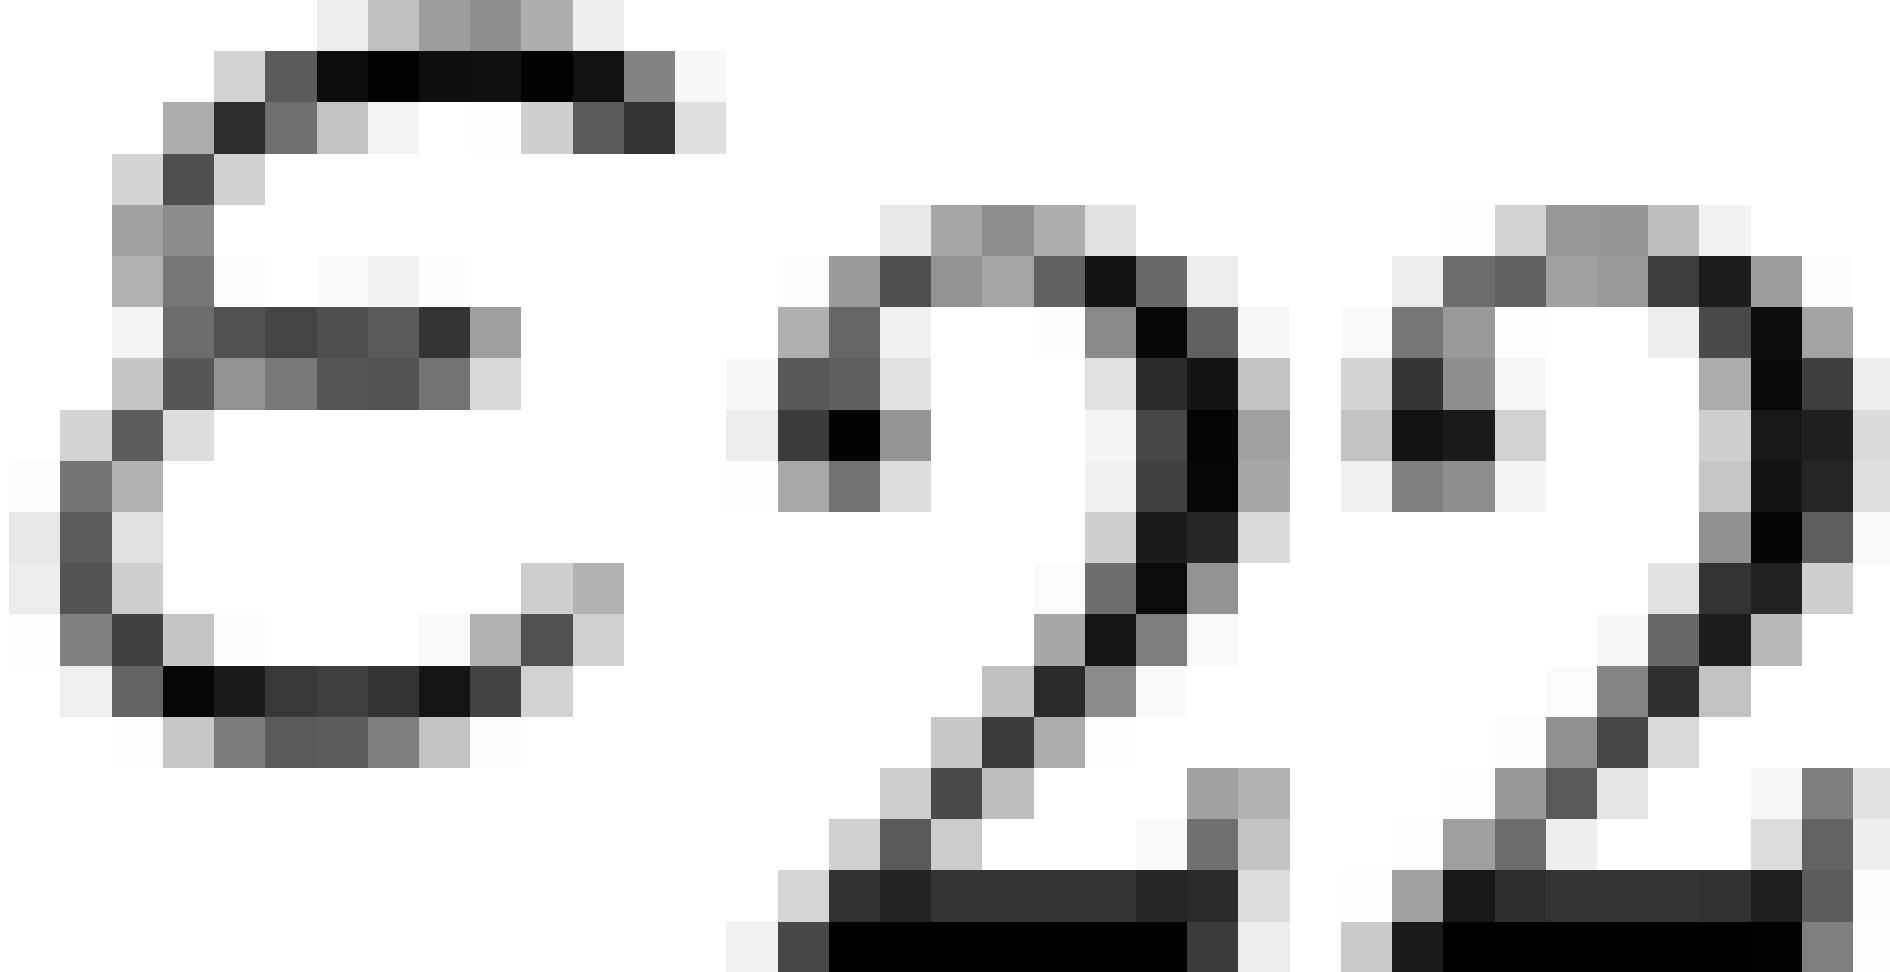

611


W

—

—

—

633


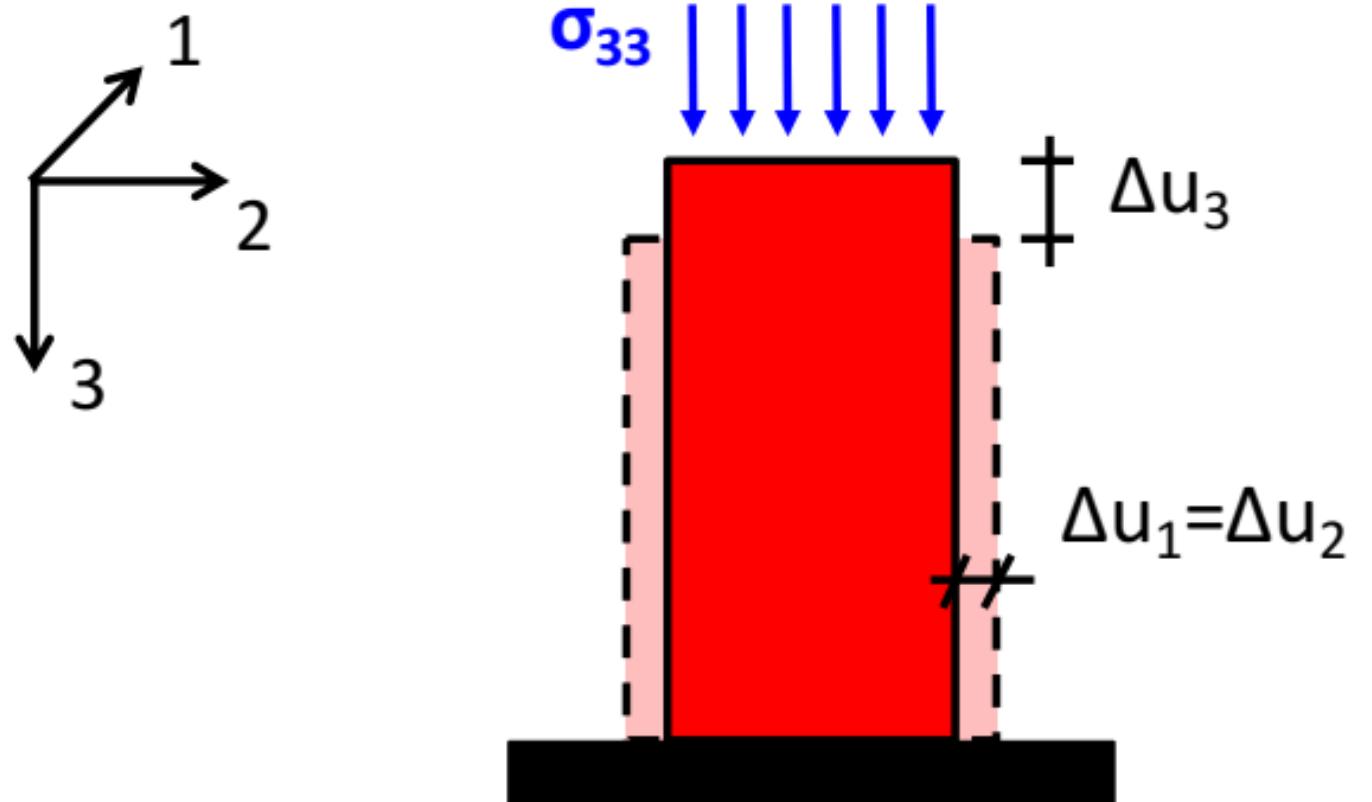




$$E = \frac{\sigma_{33}}{\epsilon_{33}}$$


Young's Modulus

$$\nu = -\frac{\epsilon_{11}}{\epsilon_{33}}$$

Poisson's ratio (nu)

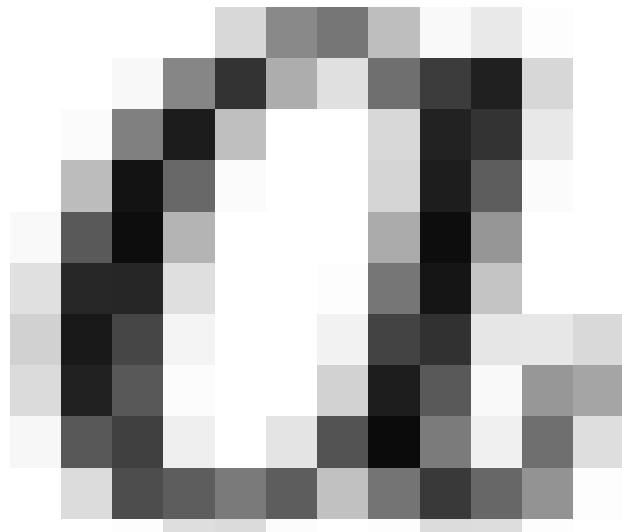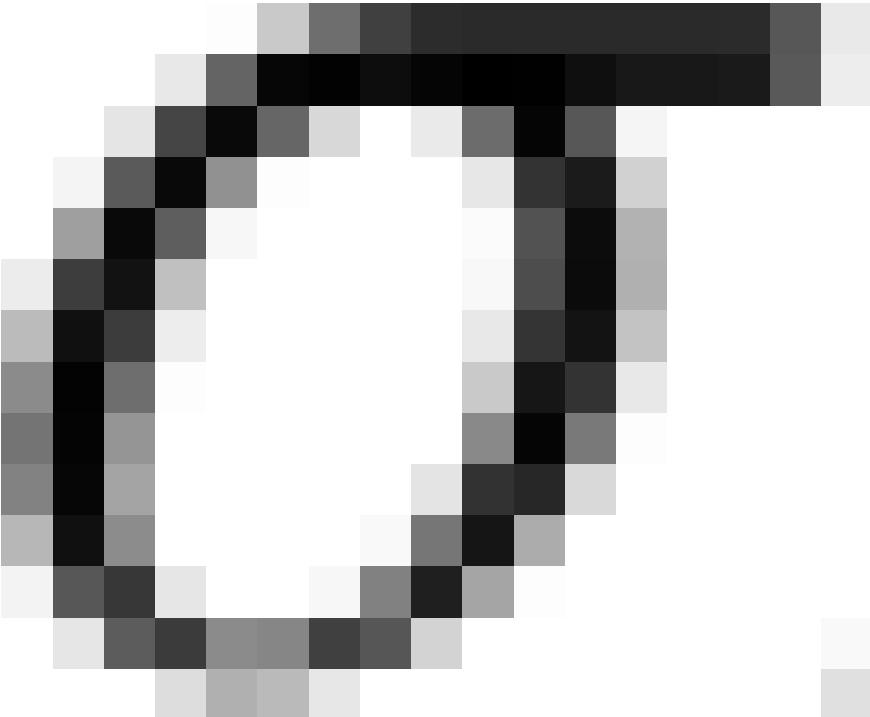

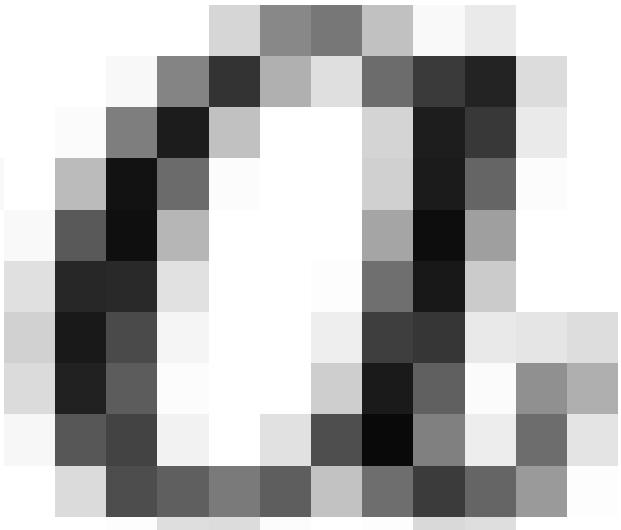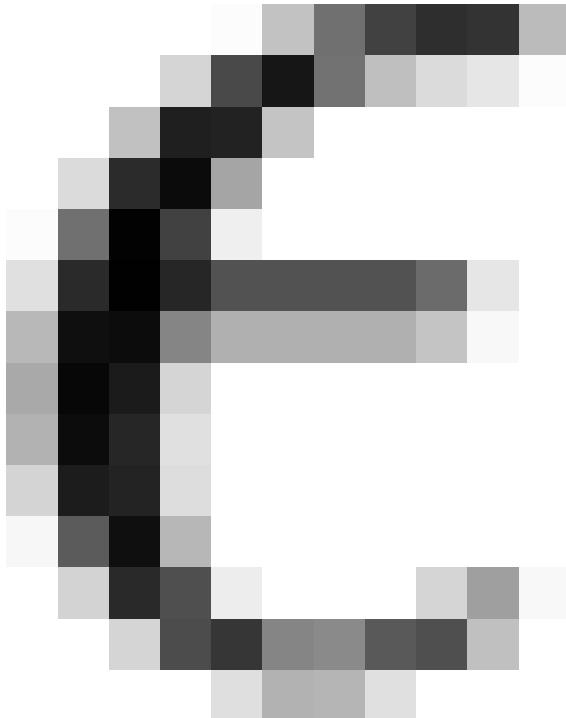



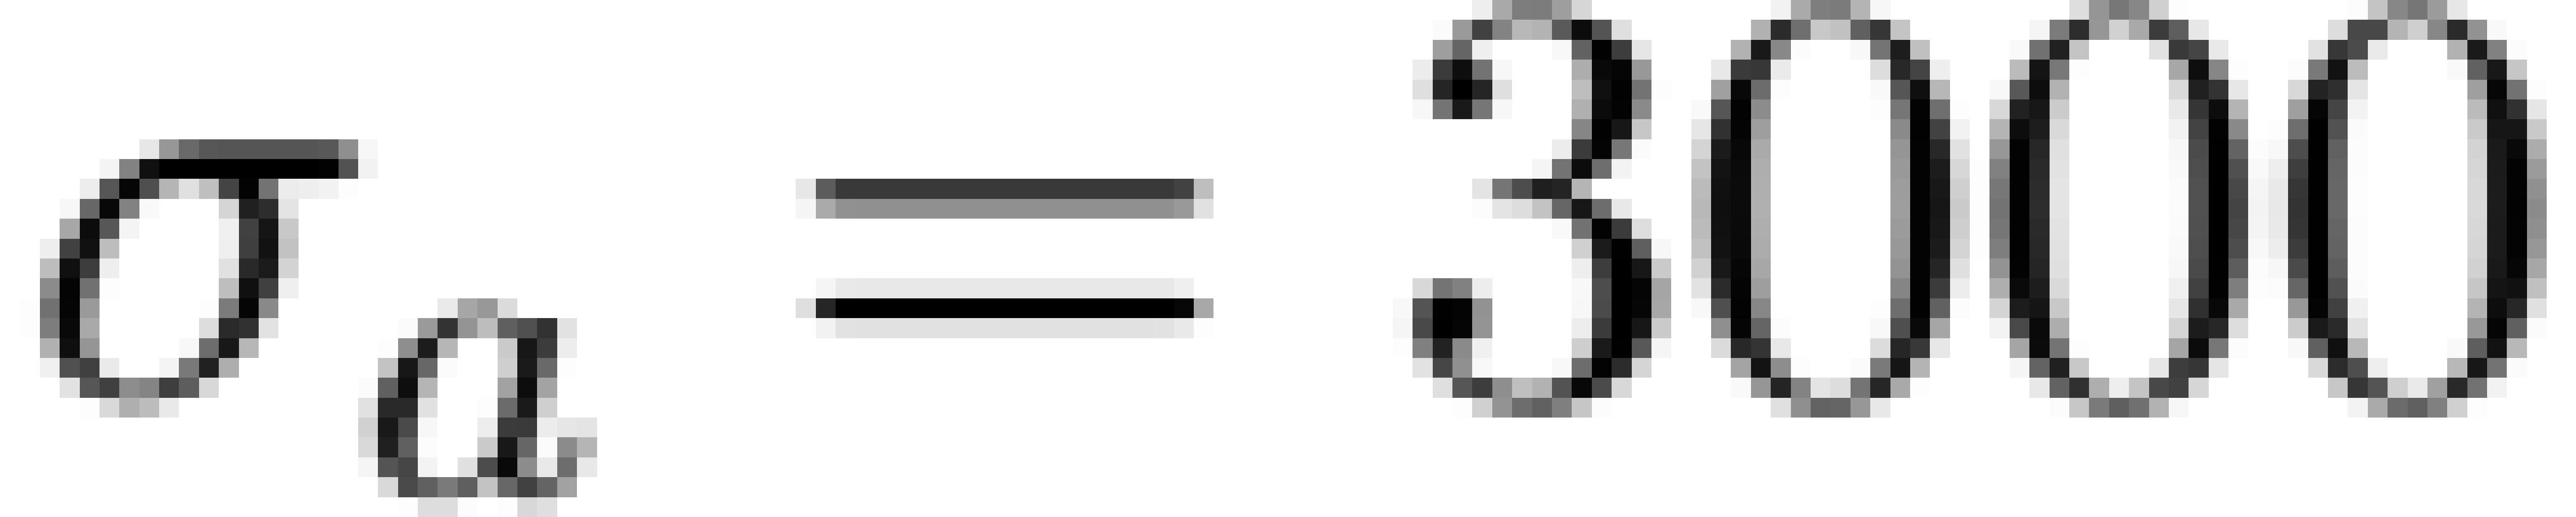



1

30000

145


—

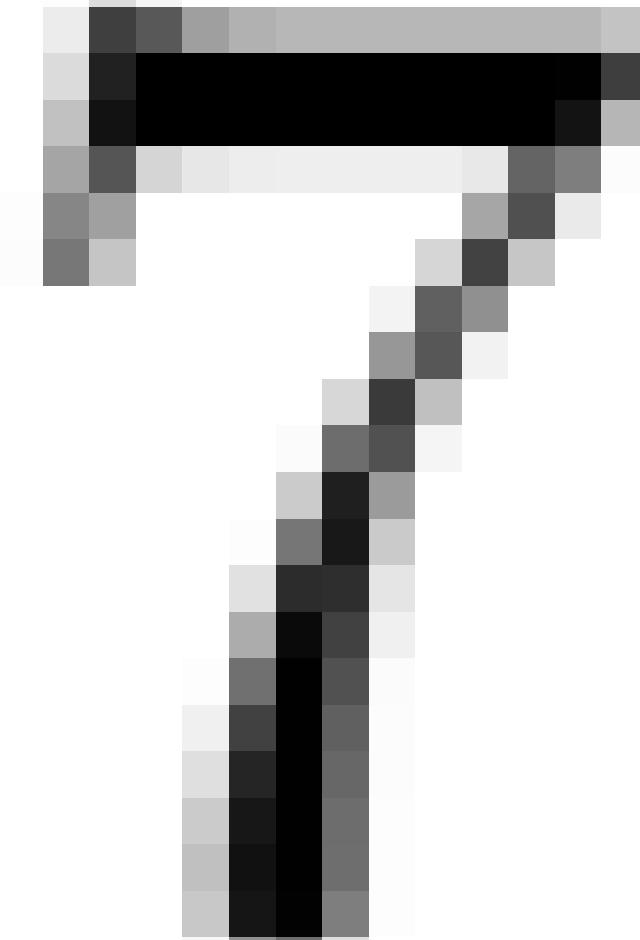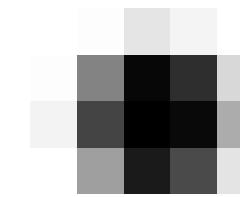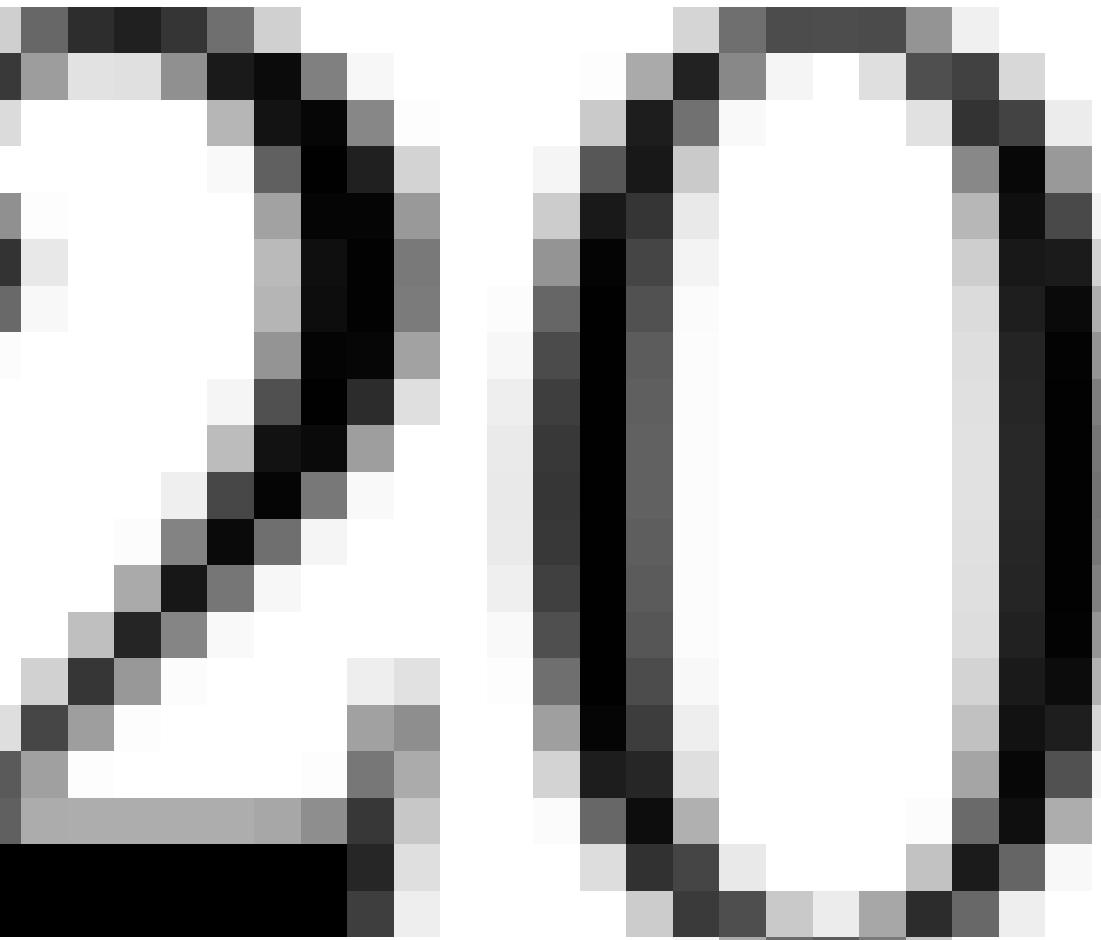



$$\frac{\sigma_a}{E} = \frac{20.7}{100} = 0.207$$

$$0.207 \times 100 \text{ MPa} = 20.7 \text{ MPa}$$



$$\frac{\sigma_a}{E} = \frac{20.7 \text{ MPa}}{100 \times 10^9 \text{ MPa}} = 0.207 \times 10^{-7}$$

$$= 0.00207 \times 10^{-7} = 0.00207 \%$$



$$\frac{\sigma_a}{E} = \frac{20.7 \text{ MPa}}{50000 \text{ MPa}} = 0.00041$$


$$= 0.041\%$$


$$\left\{ \begin{array}{lcl} \epsilon_{11} & = & +\frac{1}{E}\sigma_{11} - \frac{\nu}{E}\sigma_{22} - \frac{\nu}{E}\sigma_{33} \\ & & \nu \quad \quad \quad 1 \quad \quad \quad \nu \\ \epsilon_{22} & = & -\frac{1}{E}\sigma_{11} + \frac{1}{E}\sigma_{22} - \frac{1}{E}\sigma_{33} \\ & & \nu \quad \quad \quad \nu \quad \quad \quad 1 \\ \epsilon_{33} & = & -\frac{1}{E}\sigma_{11} - \frac{1}{E}\sigma_{22} + \frac{1}{E}\sigma_{33} \end{array} \right.$$









$$\left\{ \begin{array}{l} 2\epsilon_{12} = (1/G) \sigma_{12} \\ 2\epsilon_{13} = (1/G) \sigma_{13} \\ 2\epsilon_{23} = (1/G) \sigma_{23} \end{array} \right.$$

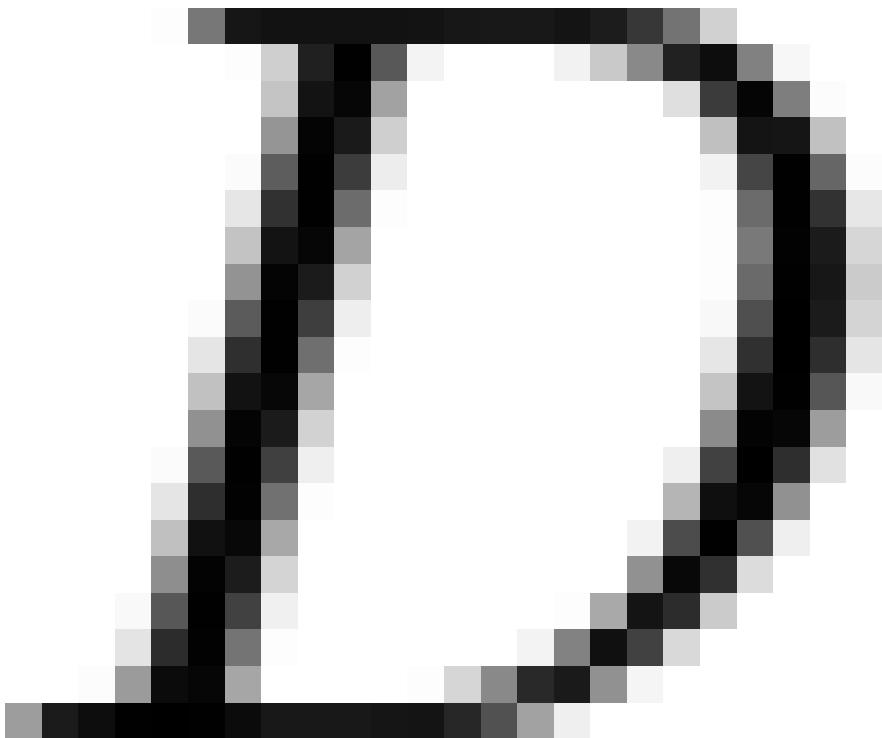


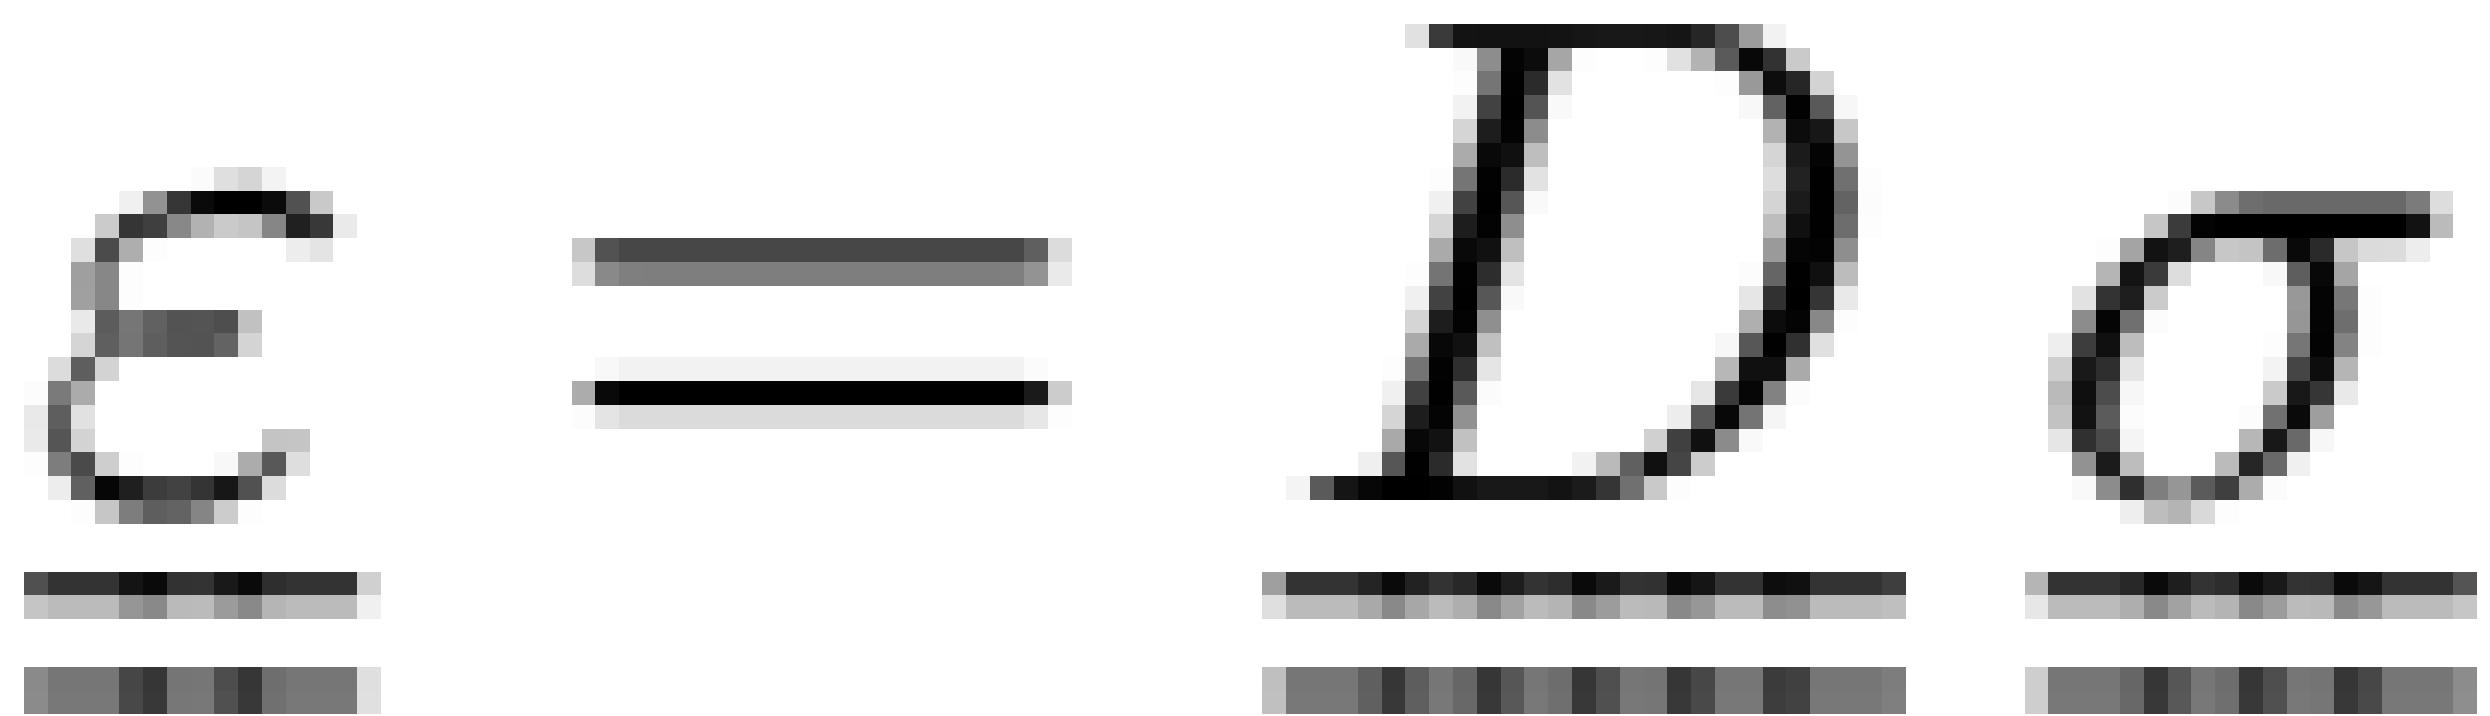


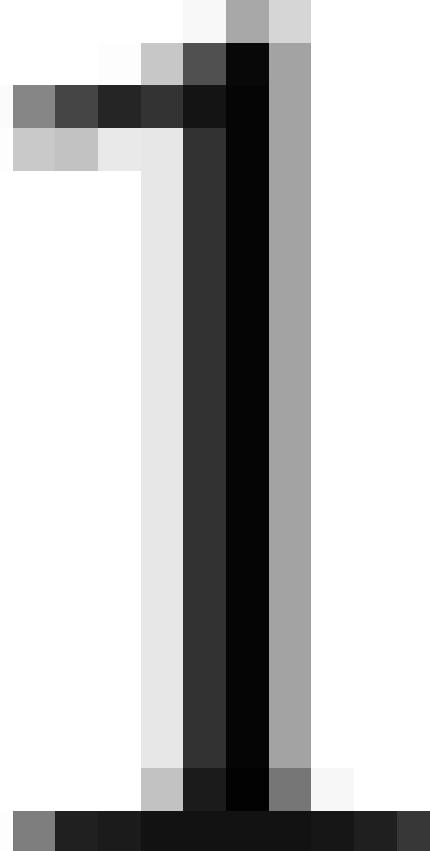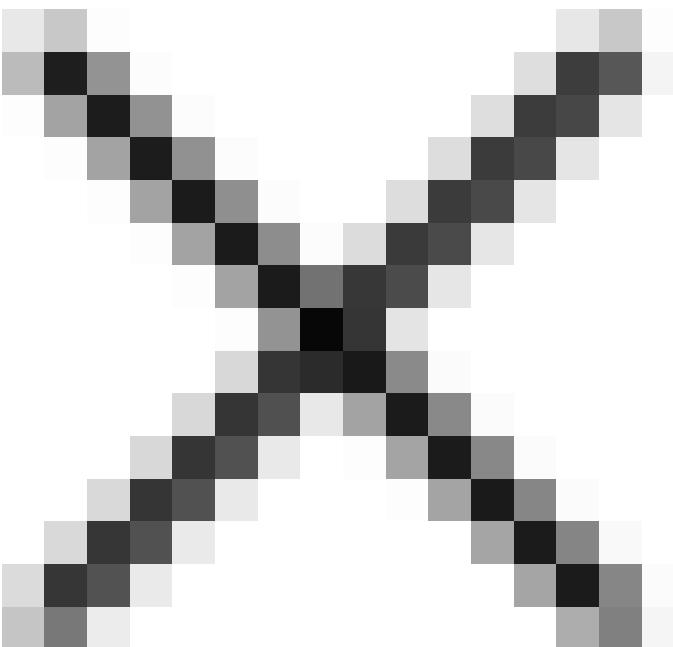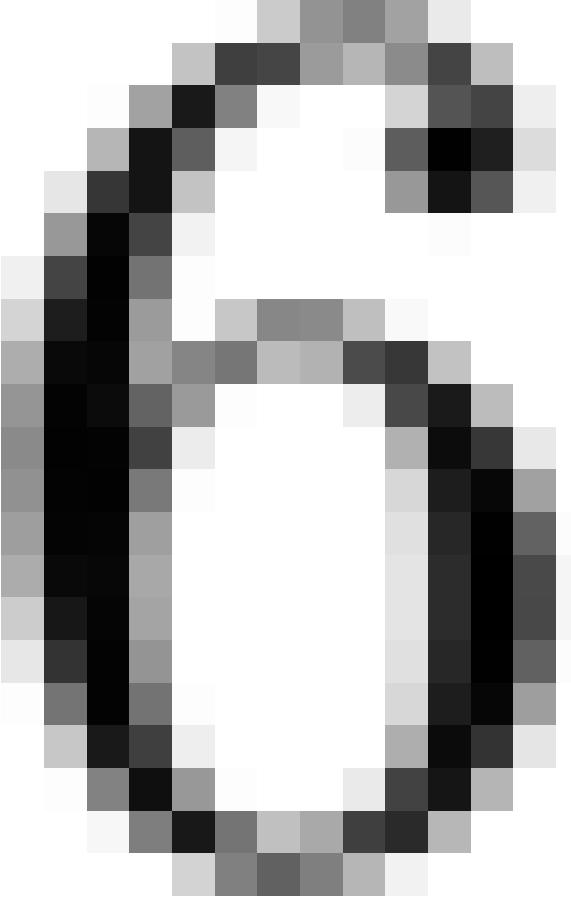

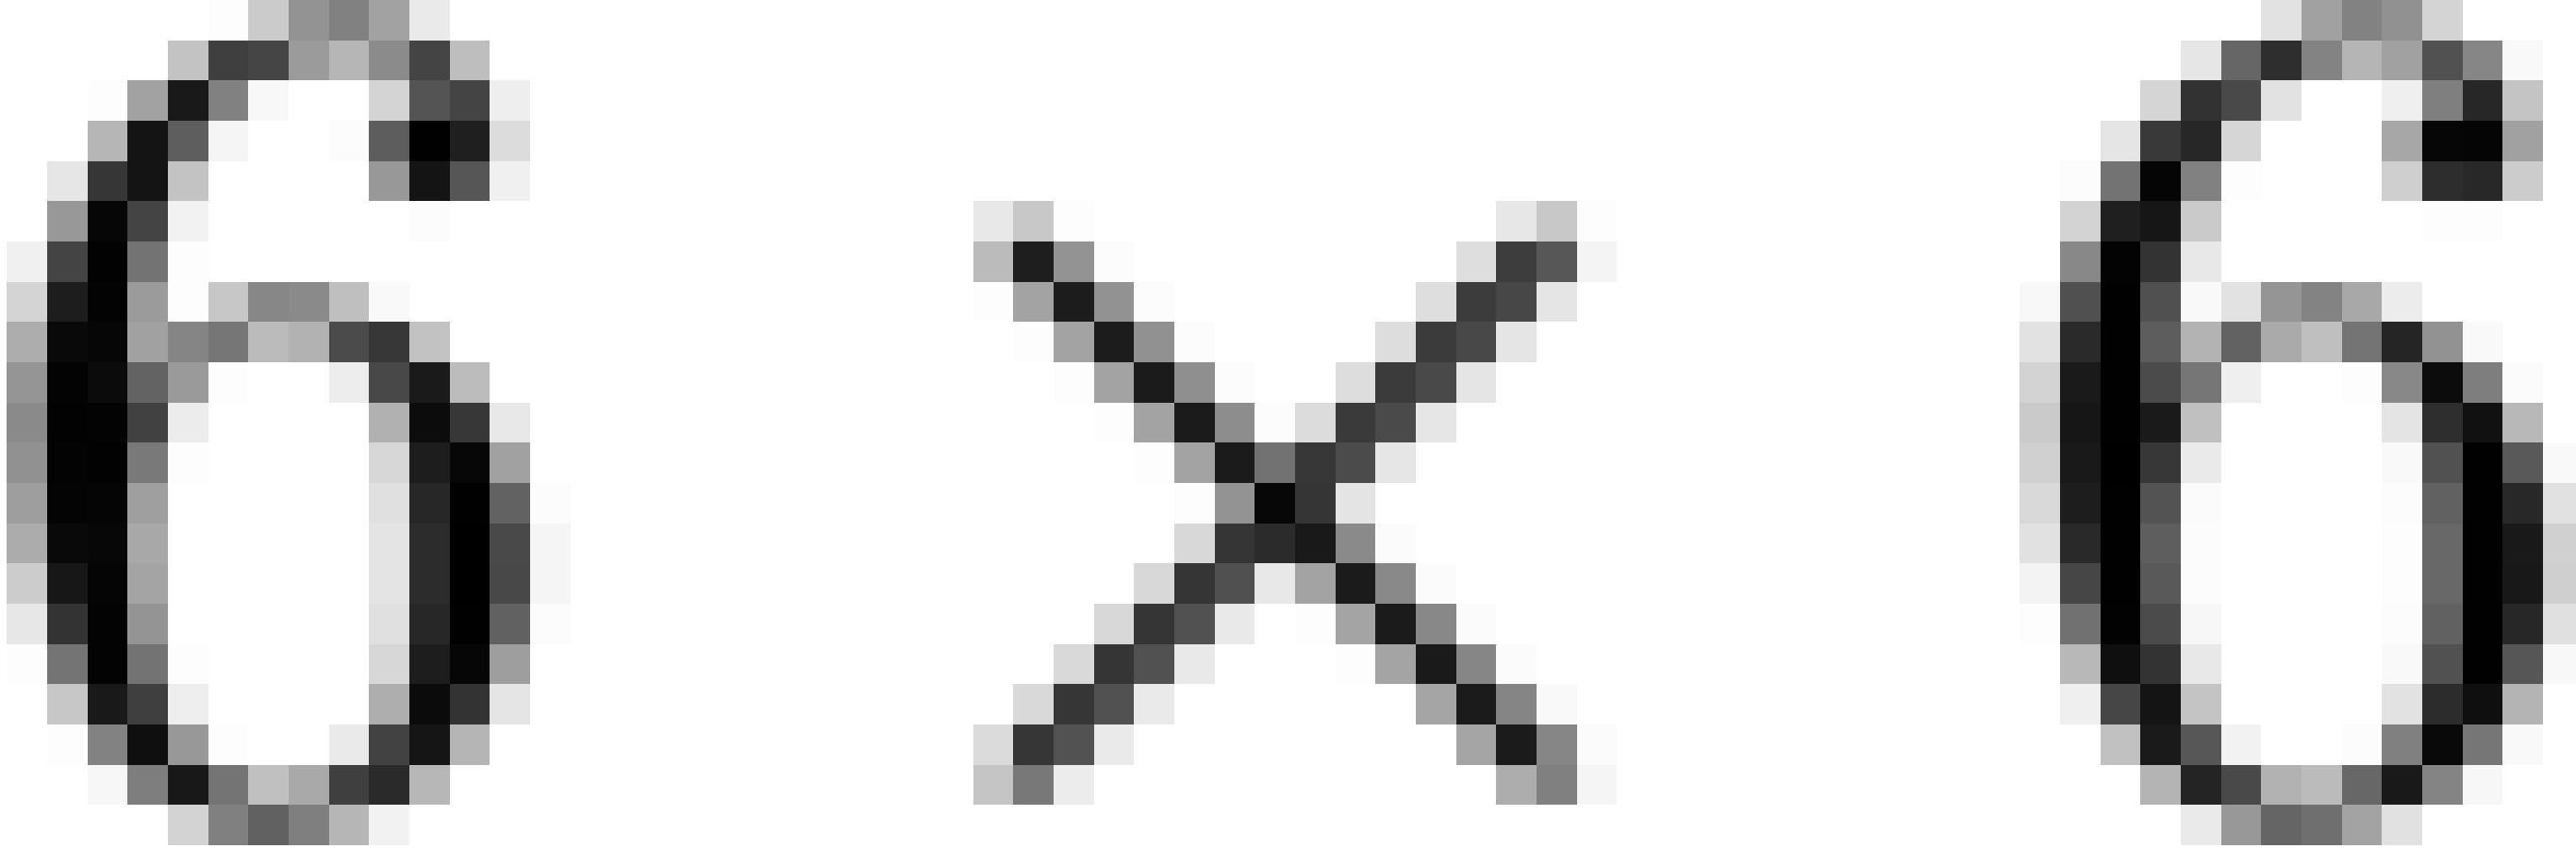



$$\begin{bmatrix} \varepsilon_{11} \\ \varepsilon_{22} \\ \varepsilon_{33} \\ 2\varepsilon_{12} \\ 2\varepsilon_{13} \\ 2\varepsilon_{23} \end{bmatrix} = \begin{bmatrix} 1 & -\nu & -\nu & 0 & 0 & 0 \\ +\frac{1}{E} & -\frac{\nu}{E} & -\frac{\nu}{E} & & & \\ -\frac{\nu}{E} & +\frac{1}{E} & -\frac{\nu}{E} & 0 & 0 & 0 \\ -\frac{\nu}{E} & -\frac{\nu}{E} & +\frac{1}{E} & 0 & 0 & 0 \\ 0 & 0 & 0 & \frac{2(1+\nu)}{E} & 0 & 0 \\ 0 & 0 & 0 & 0 & \frac{2(1+\nu)}{E} & 0 \\ 0 & 0 & 0 & 0 & 0 & \frac{2(1+\nu)}{E} \end{bmatrix} \begin{bmatrix} \sigma_{11} \\ \sigma_{22} \\ \sigma_{33} \\ \sigma_{12} \\ \sigma_{13} \\ \sigma_{23} \end{bmatrix}$$



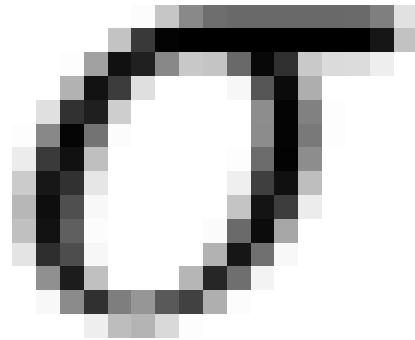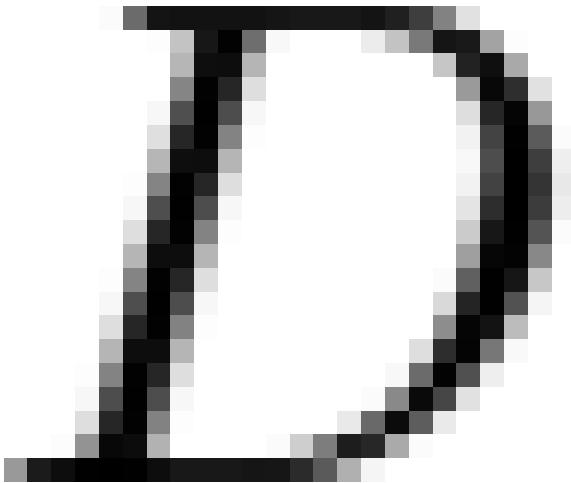


$$\underline{\underline{\epsilon}} = \begin{bmatrix} -\frac{v}{E}\sigma_{33}, -\frac{v}{E}\sigma_{33}, \frac{1}{E}\sigma_{33}, 0, 0, 0 \end{bmatrix}^T$$

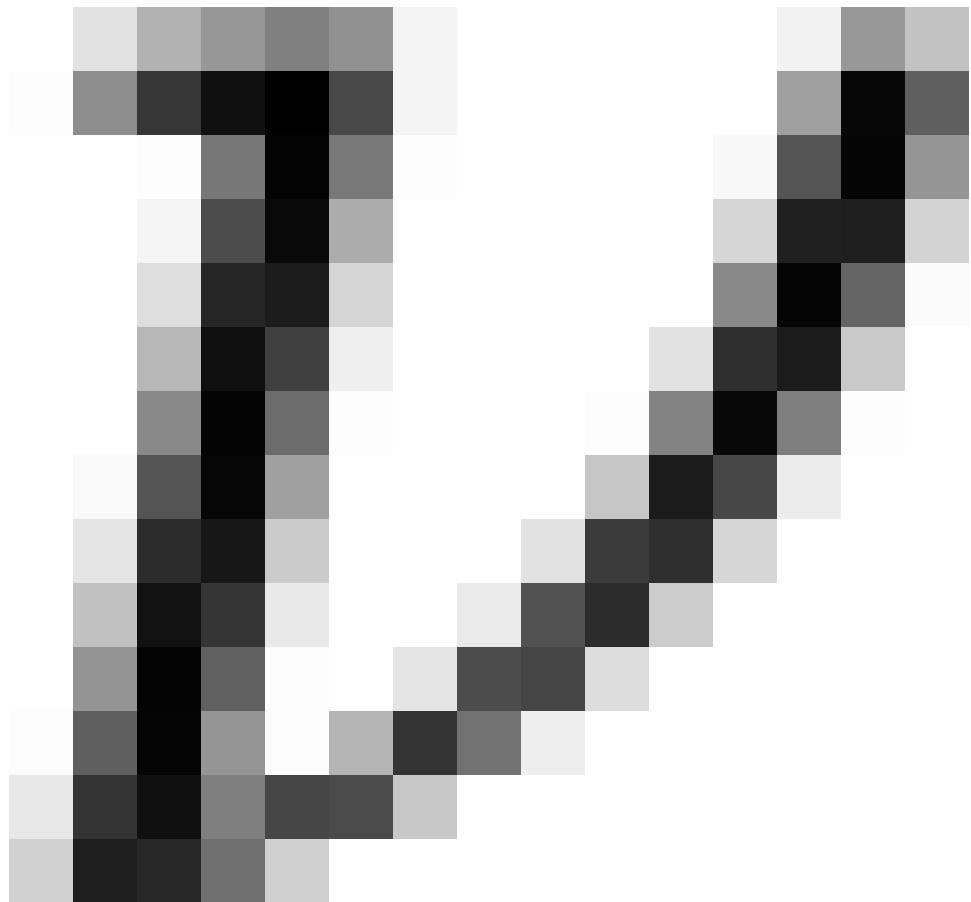

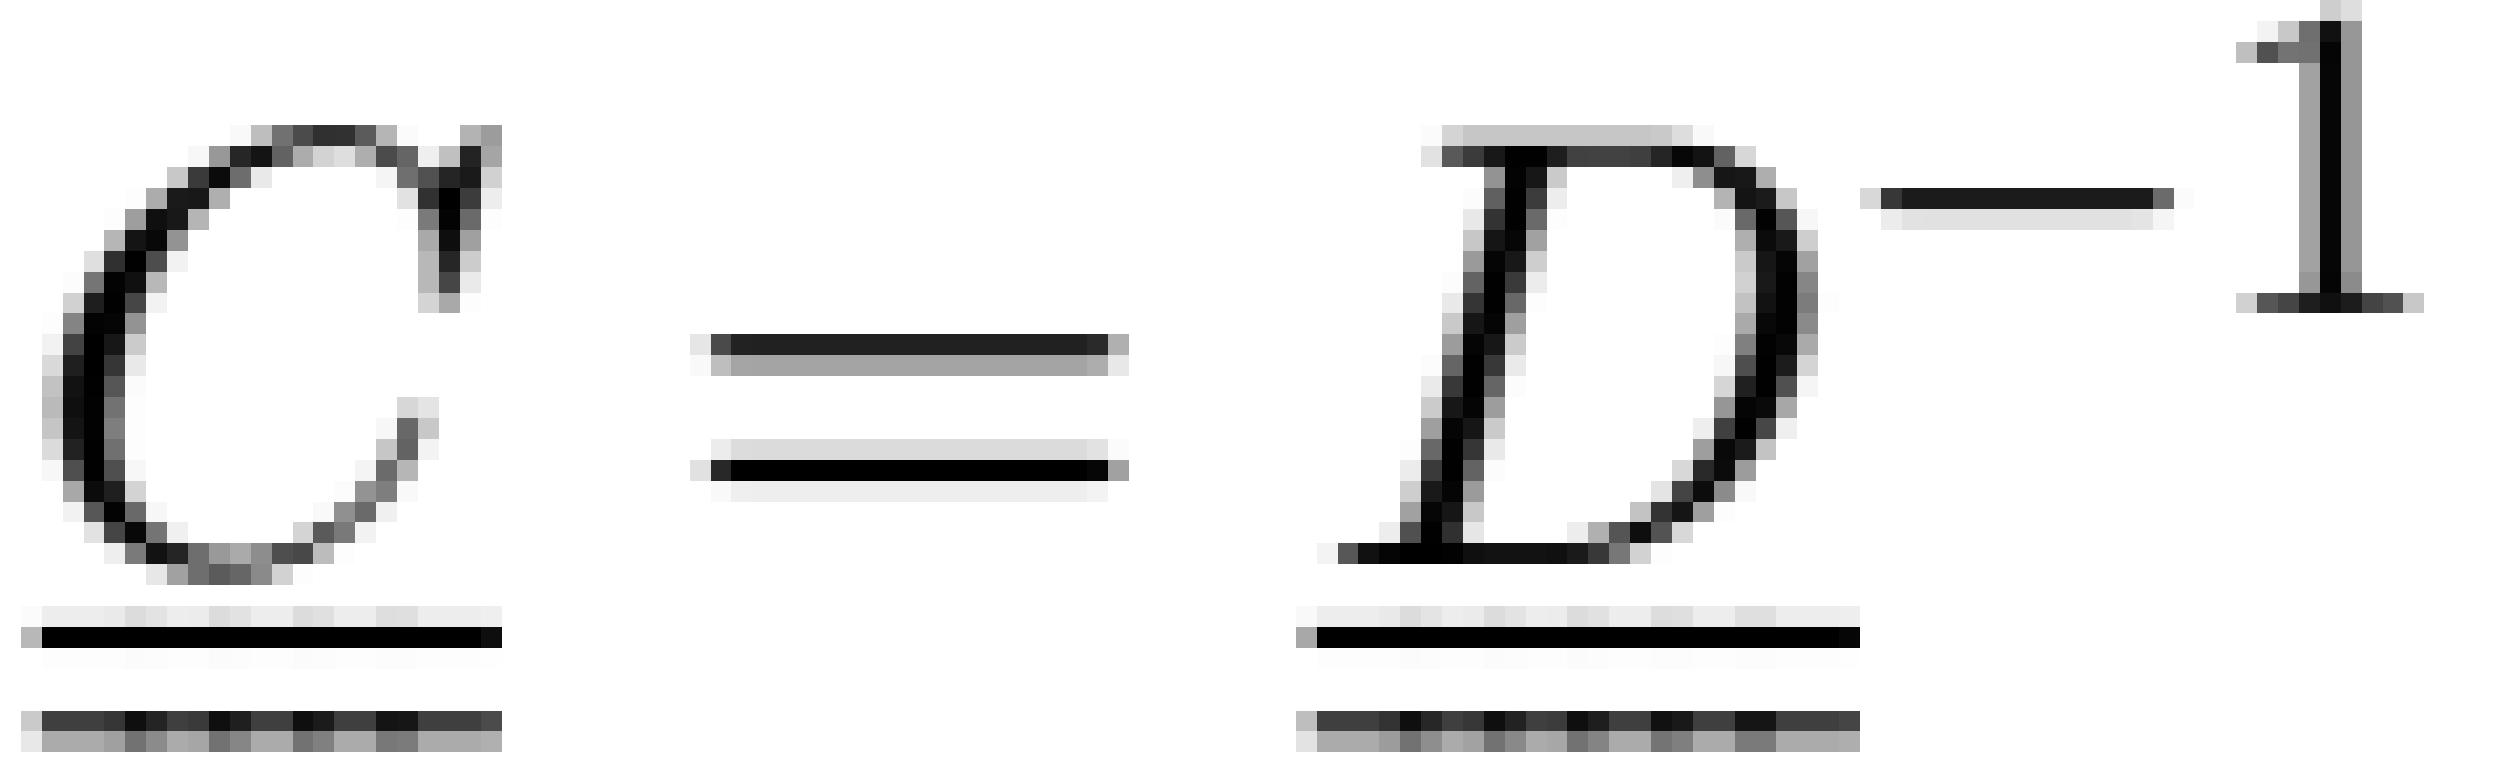

$$\begin{bmatrix} \sigma_{11} \\ \sigma_{22} \\ \sigma_{33} \\ \sigma_{12} \\ \sigma_{13} \\ \sigma_{23} \end{bmatrix} = \frac{E}{(1+\nu)(1-2\nu)} \begin{bmatrix} 1-\nu & \nu & \nu & 0 & 0 & 0 \\ \nu & 1-\nu & \nu & 0 & 0 & 0 \\ \nu & \nu & 1-\nu & 0 & 0 & 0 \\ 0 & 0 & 0 & \frac{(1-2\nu)}{2} & 0 & 0 \\ 0 & 0 & 0 & 0 & \frac{(1-2\nu)}{2} & 0 \\ 0 & 0 & 0 & 0 & 0 & \frac{(1-2\nu)}{2} \end{bmatrix} \begin{bmatrix} \varepsilon_{11} \\ \varepsilon_{22} \\ \varepsilon_{33} \\ 2\varepsilon_{12} \\ 2\varepsilon_{13} \\ 2\varepsilon_{23} \end{bmatrix}$$

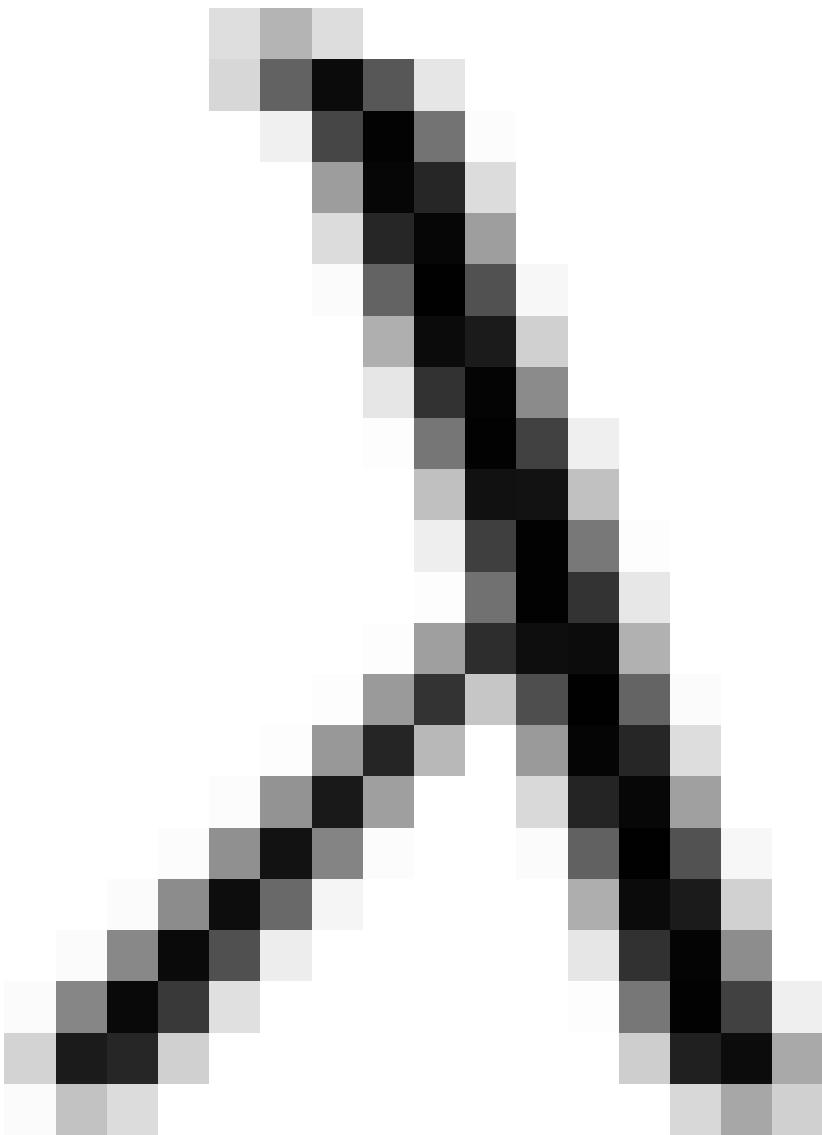

$$\sigma_{11} = \frac{E}{(1+\nu)(1-2\nu)} [(1-\nu)e_{11} + \nu e_{22} + \nu e_{33}]$$

$$\sigma_{11} = \frac{\nu E}{(1+\nu)(1-2\nu)} (\epsilon_{11} + \epsilon_{22} + \epsilon_{33}) + \frac{(1-2\nu)}{(1+\nu)(1-2\nu)} \epsilon_{11}$$

λ



$$(1 + \nu)$$

$$(1 - \nu)$$




$$2\nu$$

νE

$$2\mu =$$


$$\frac{\nu E}{(1+\nu)(1-2\nu)} =$$


$$\frac{(1-2\nu)E}{\nu} = \frac{E}{(1+\nu)}$$

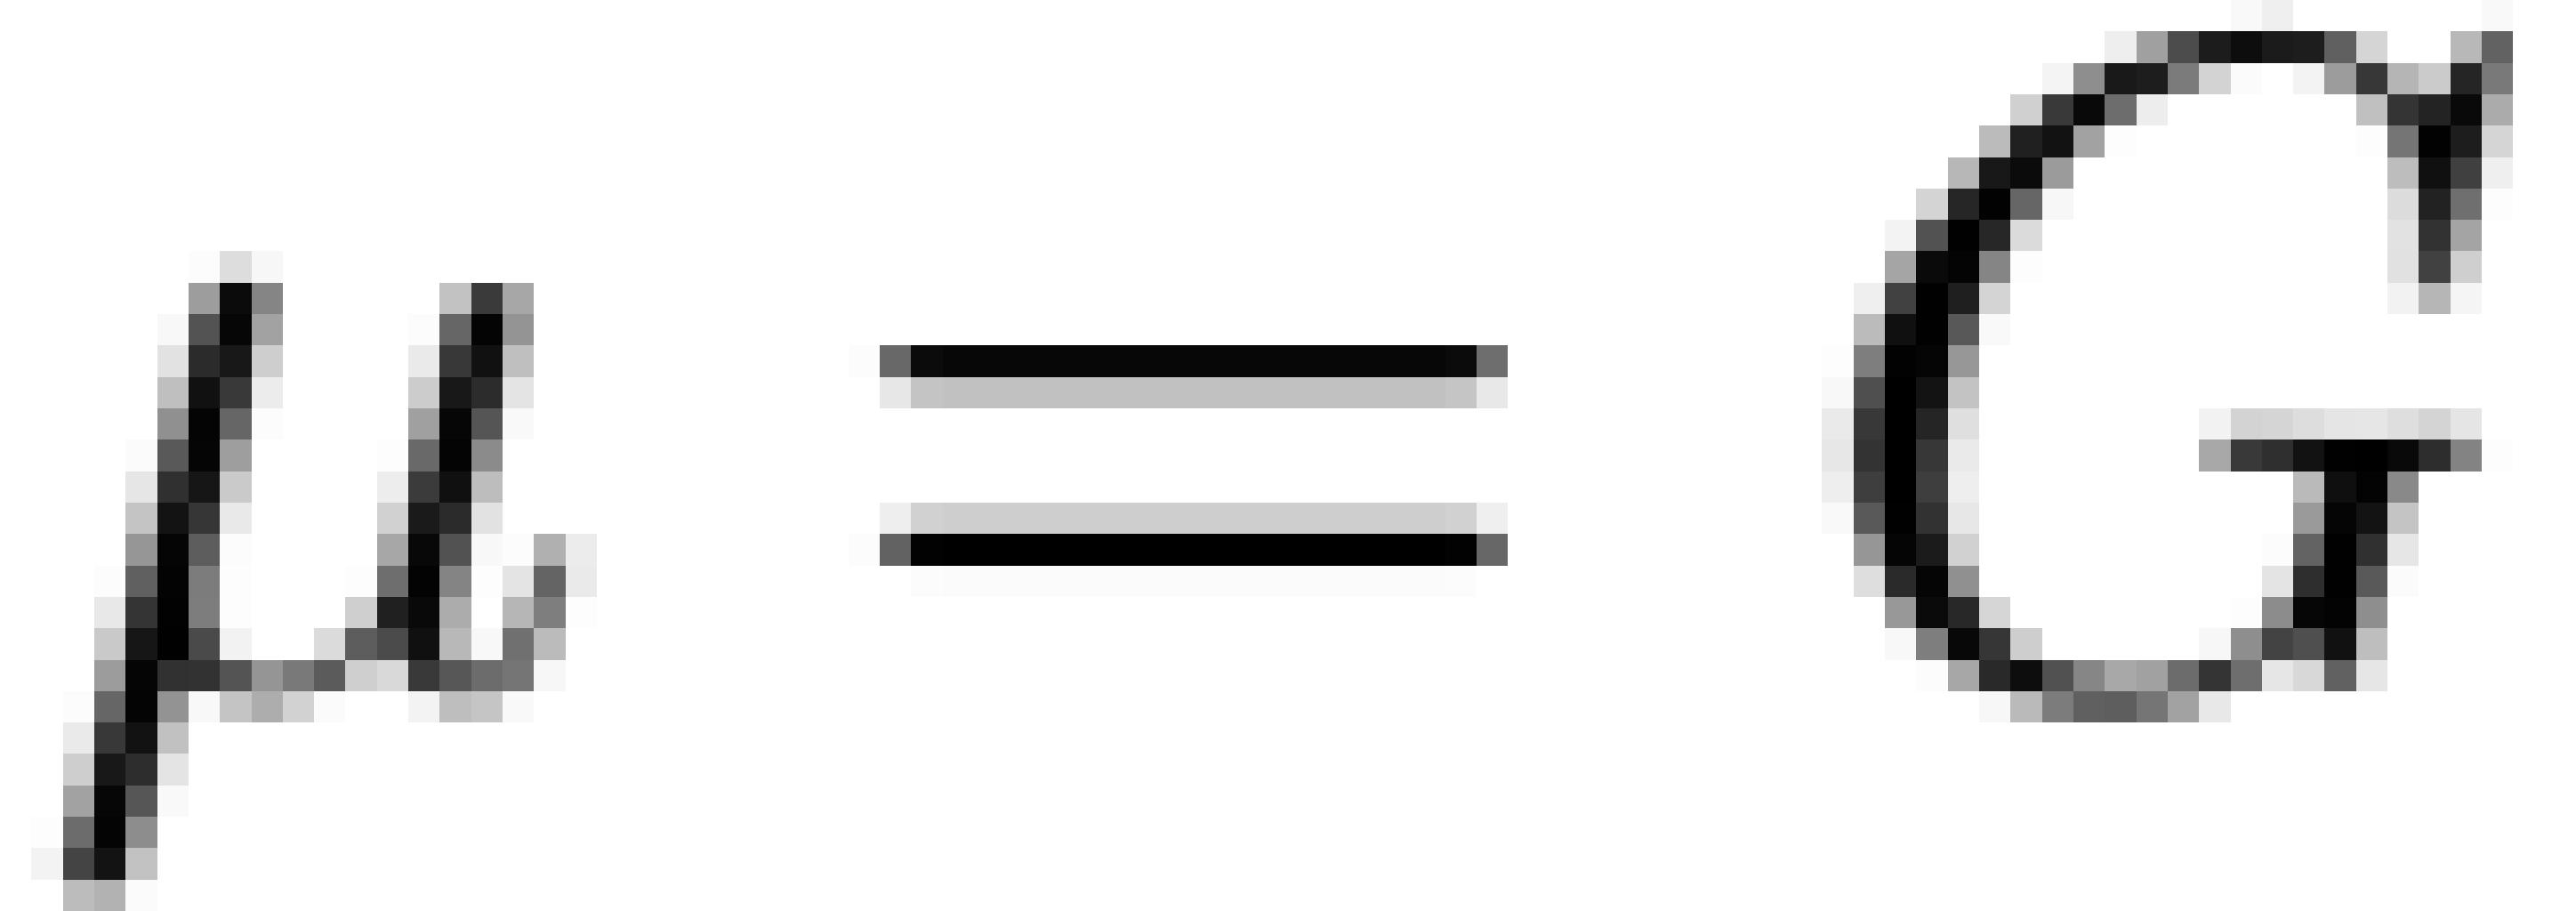



$$\left\{ \begin{array}{lcl} \sigma_{11} & = & (\lambda + 2\mu) \varepsilon_{11} + \lambda \varepsilon_{22} + \lambda \varepsilon_{33} \\ \sigma_{22} & = & \lambda \varepsilon_{11} + (\lambda + 2\mu) \varepsilon_{22} + \lambda \varepsilon_{33} \\ \sigma_{33} & = & \lambda \varepsilon_{11} + \lambda \varepsilon_{22} + (\lambda + 2\mu) \varepsilon_{33} \\ \sigma_{12} & = & 2\mu \varepsilon_{12} \\ \sigma_{13} & = & 2\mu \varepsilon_{13} \\ \sigma_{23} & = & 2\mu \varepsilon_{23} \end{array} \right. .$$


$$\begin{bmatrix} \sigma_{11} \\ \sigma_{22} \\ \sigma_{33} \\ \sigma_{12} \\ \sigma_{13} \\ \sigma_{23} \end{bmatrix} = \begin{bmatrix} \lambda + 2\mu & \lambda & \lambda & 0 & 0 & 0 \\ \lambda & \lambda + 2\mu & \lambda & 0 & 0 & 0 \\ \lambda & \lambda & \lambda + 2\mu & 0 & 0 & 0 \\ 0 & 0 & 0 & \mu & 0 & 0 \\ 0 & 0 & 0 & 0 & \mu & 0 \\ 0 & 0 & 0 & 0 & 0 & \mu \end{bmatrix} \begin{bmatrix} \varepsilon_{11} \\ \varepsilon_{22} \\ \varepsilon_{33} \\ 2\varepsilon_{12} \\ 2\varepsilon_{13} \\ 2\varepsilon_{23} \end{bmatrix}$$



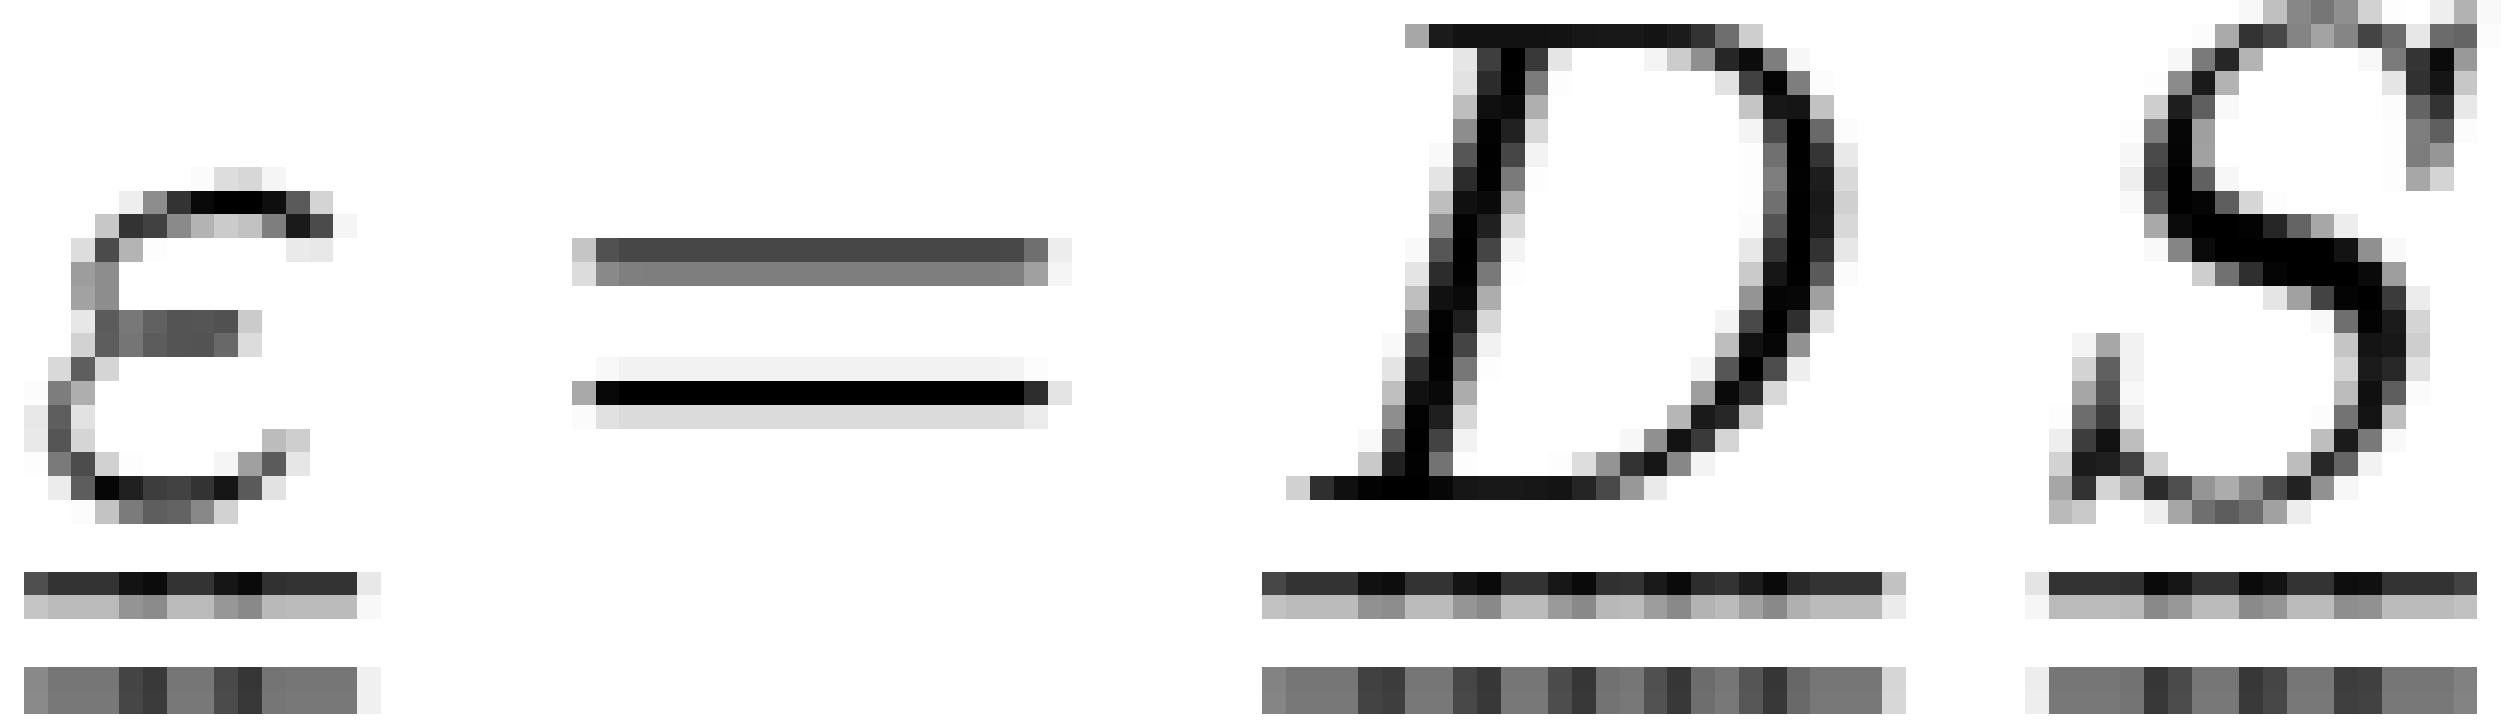


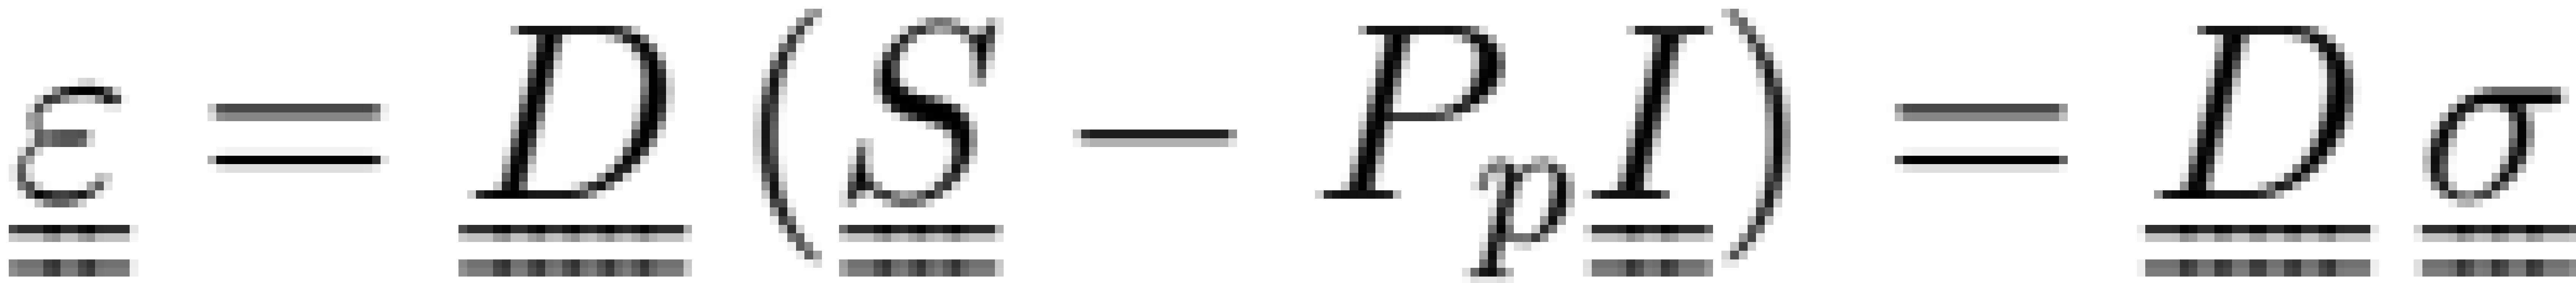

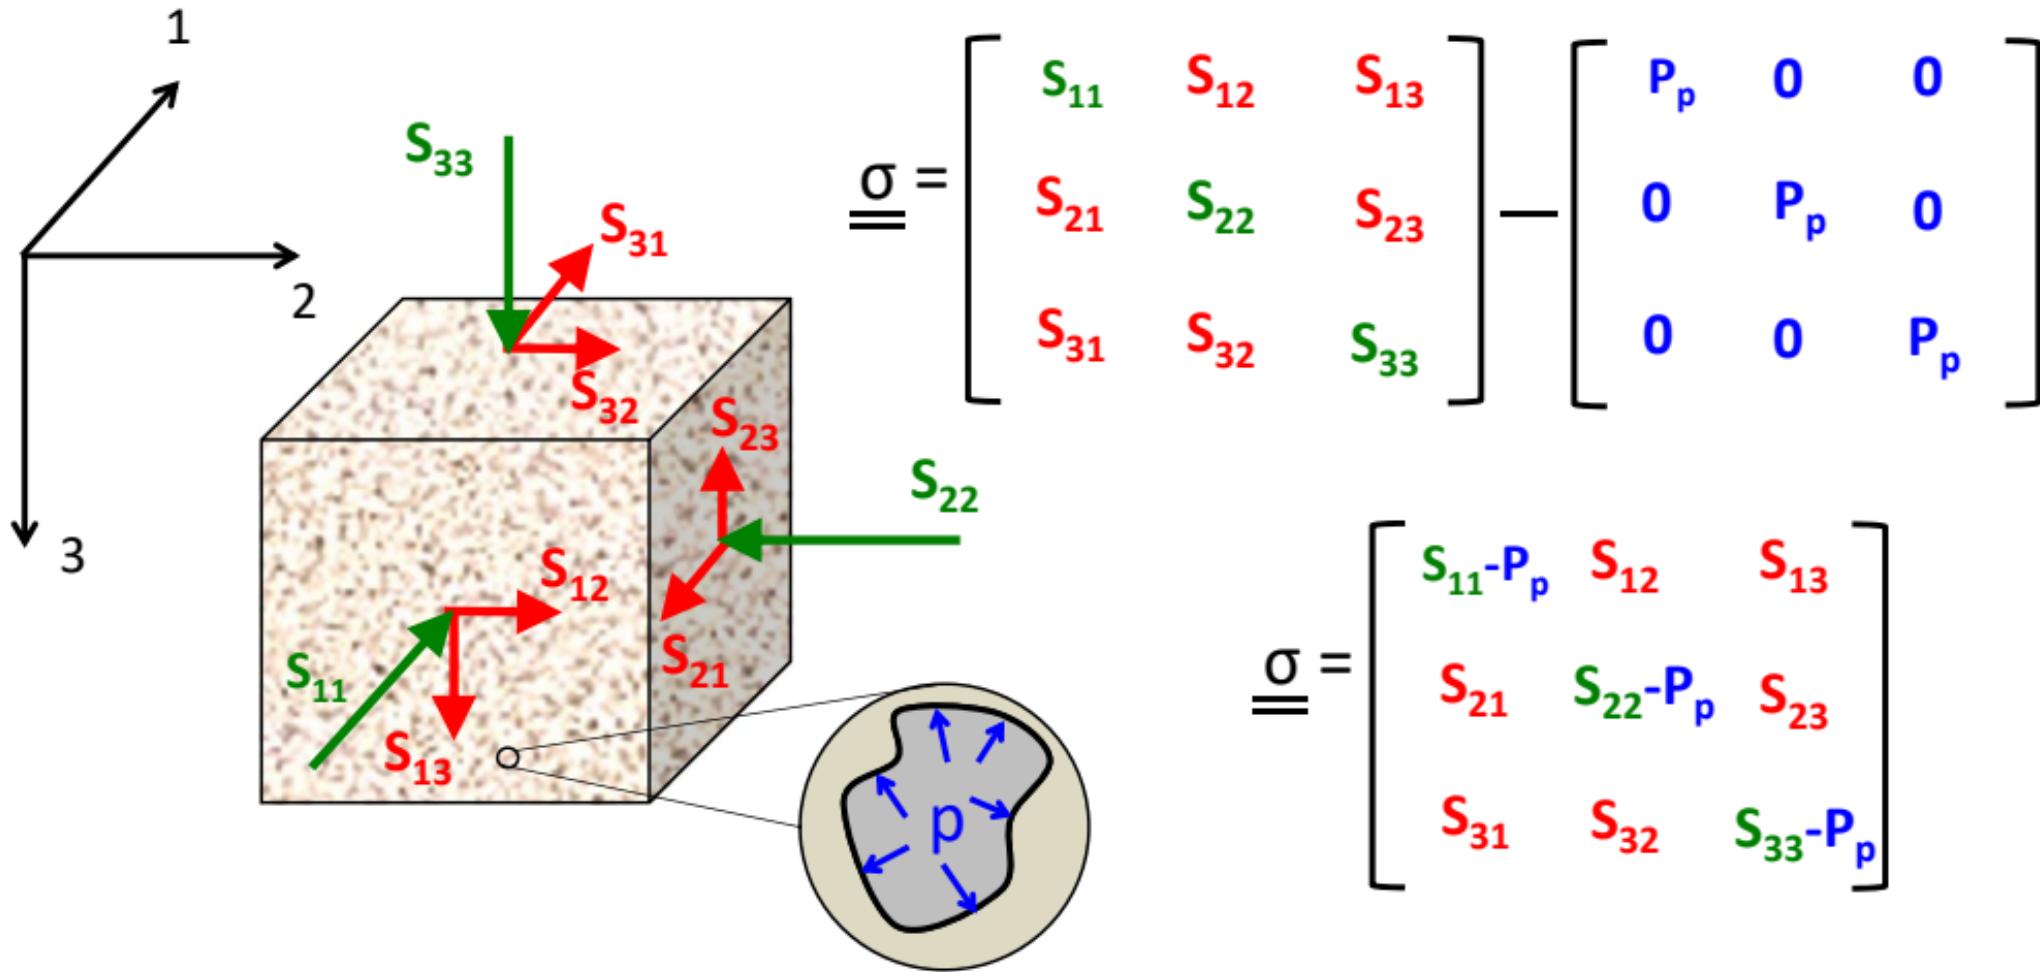

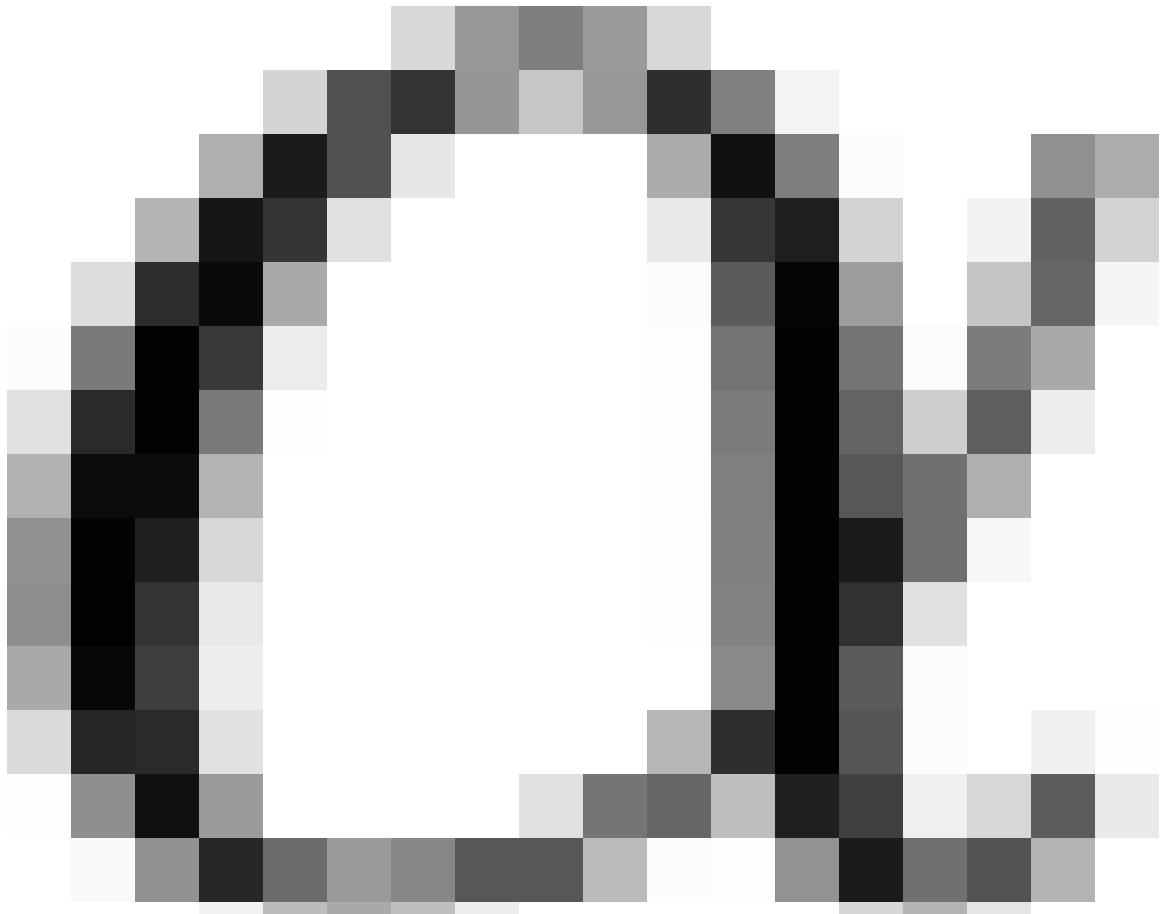

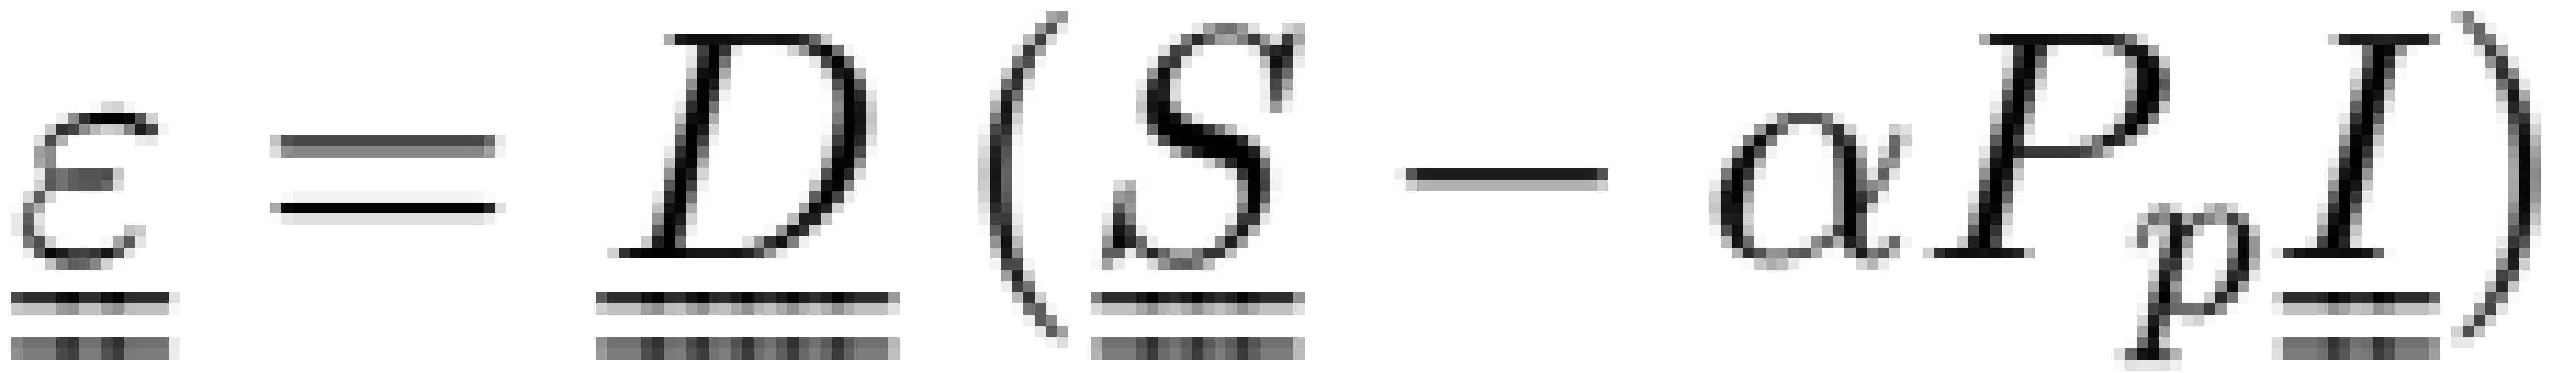


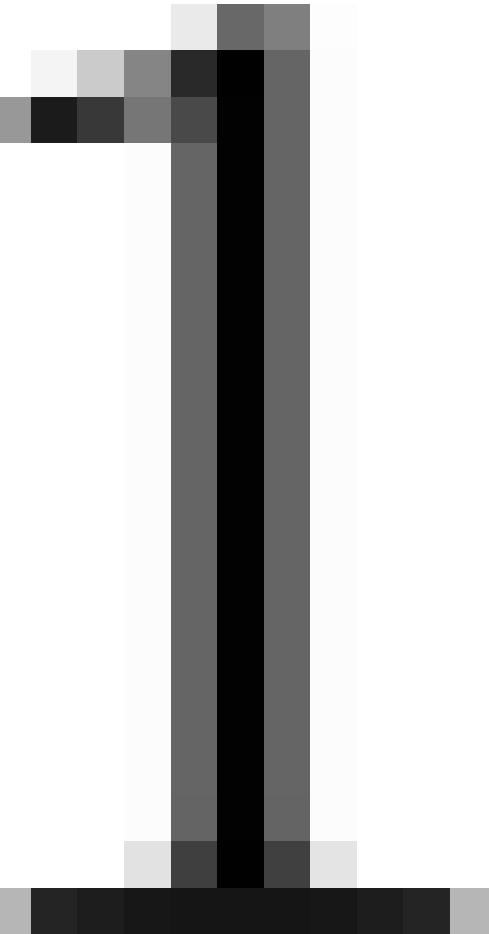
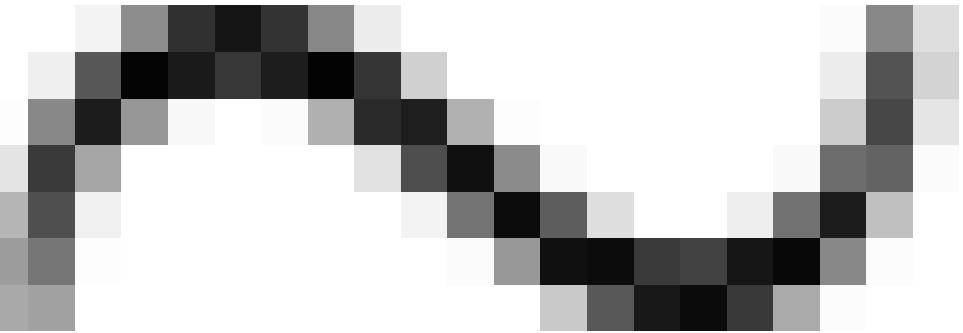
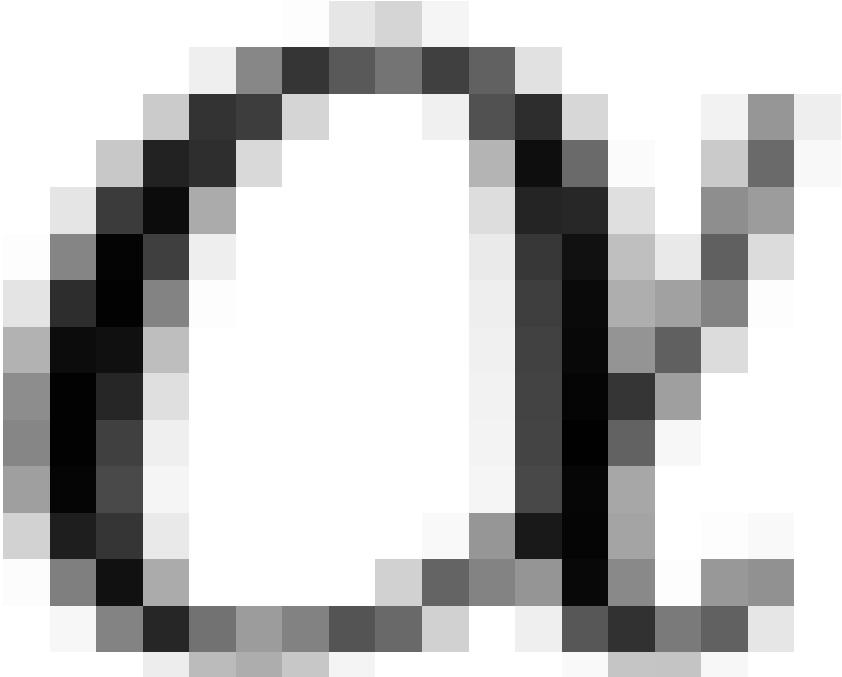










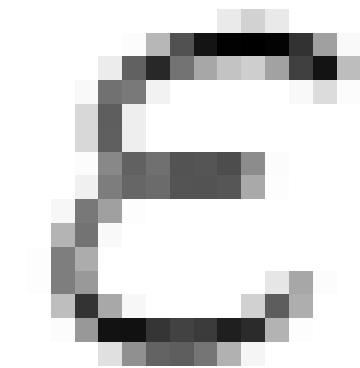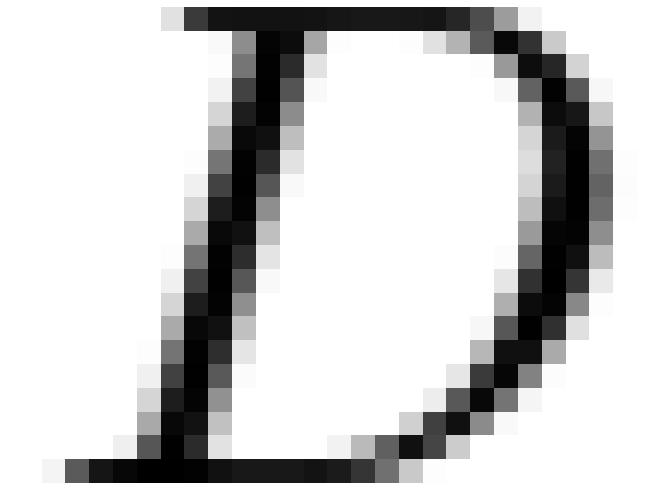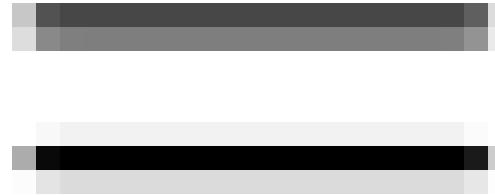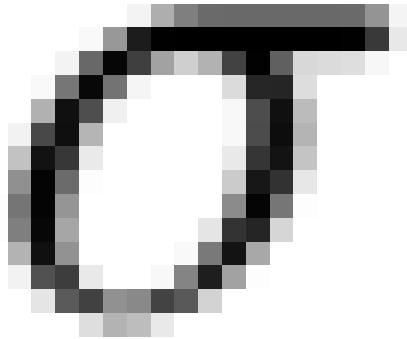



$$\left\{ \begin{array}{l} \sigma_{11} = \sigma_{22} = \frac{\nu E}{(1+\nu)(1-2\nu)} \epsilon_{33} \\ \sigma_{33} = \frac{(1-\nu)E}{(1+\nu)(1-2\nu)} \epsilon_{33} \end{array} \right.$$

σ_{11}

$$= \begin{array}{c} \text{---} \\ \text{---} \end{array}$$

 σ_{22}

$$= \begin{array}{c} \text{---} \\ | \end{array}$$

 σ_{33} ν ν

σ_b





\equiv


1


V


V






σ_w

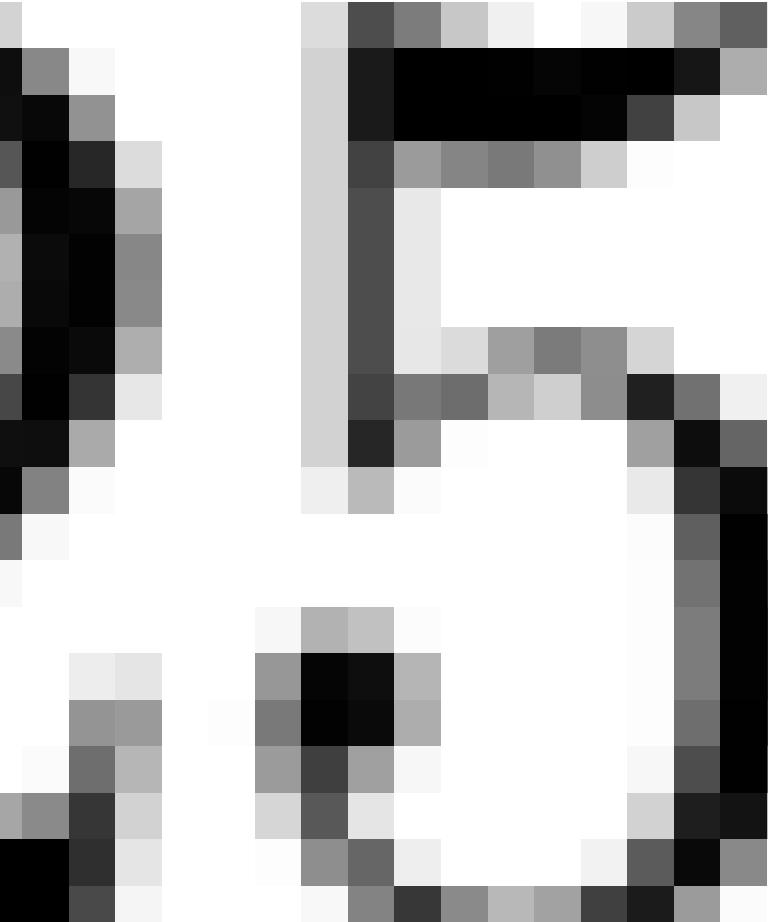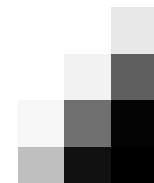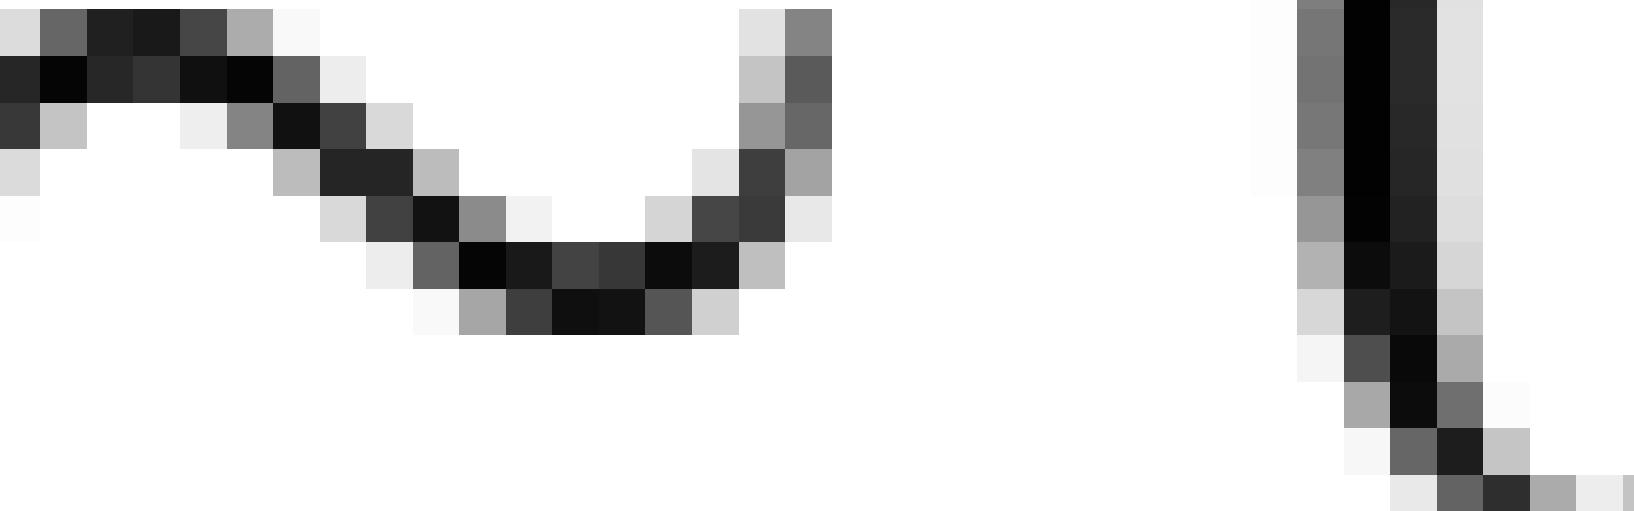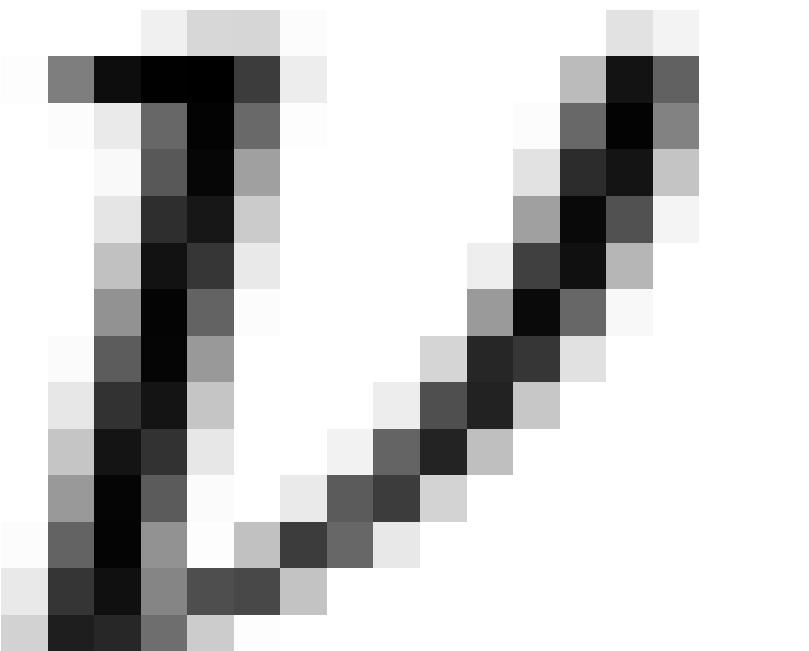



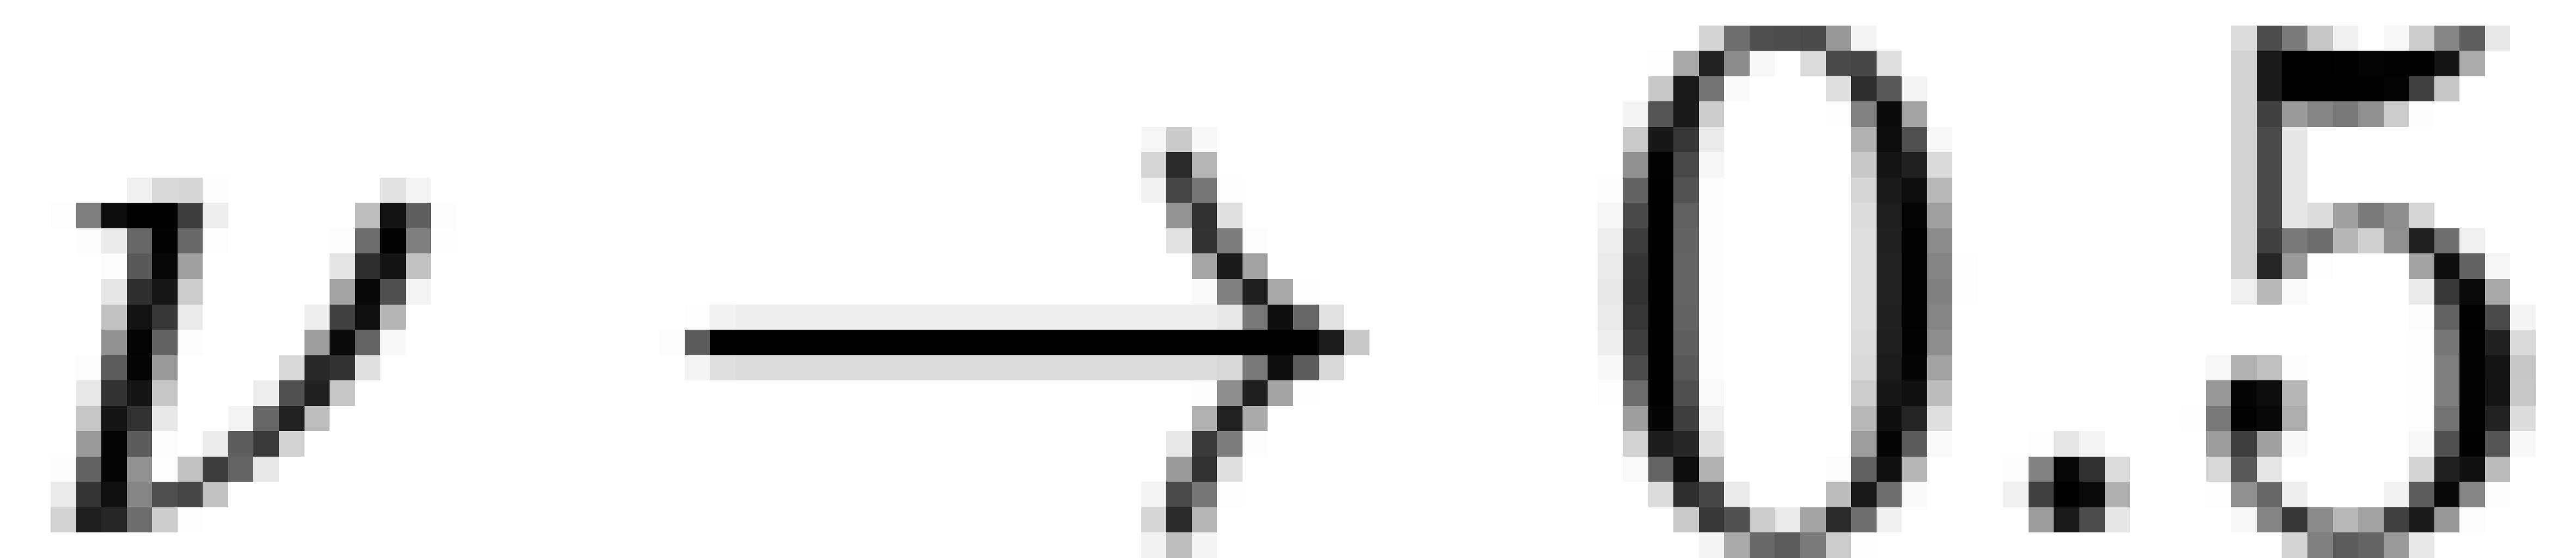







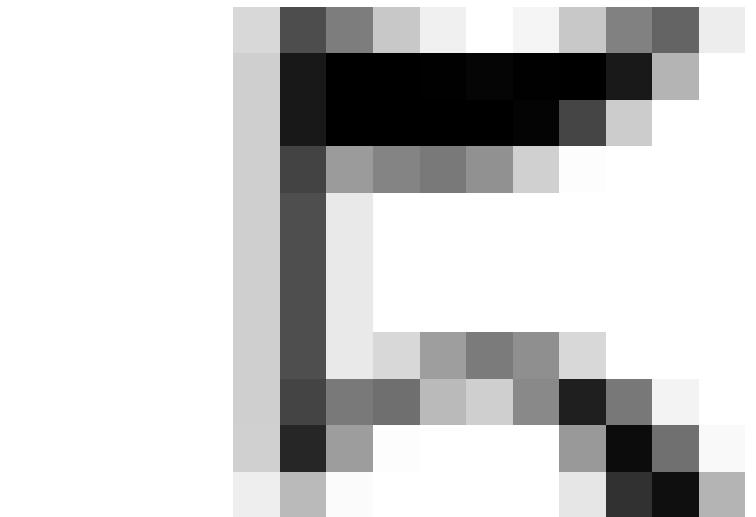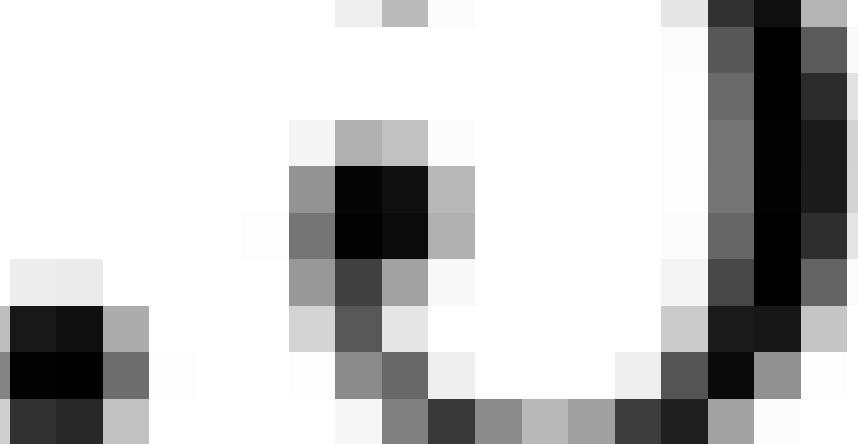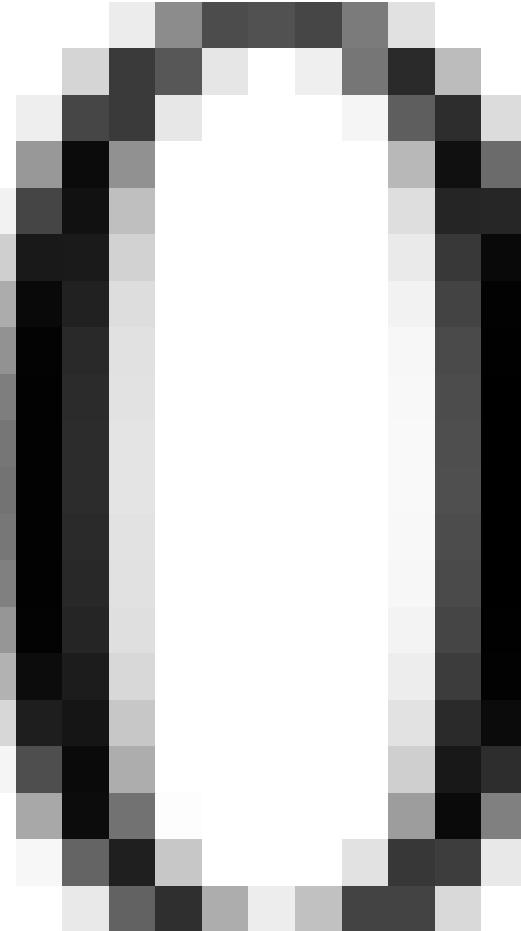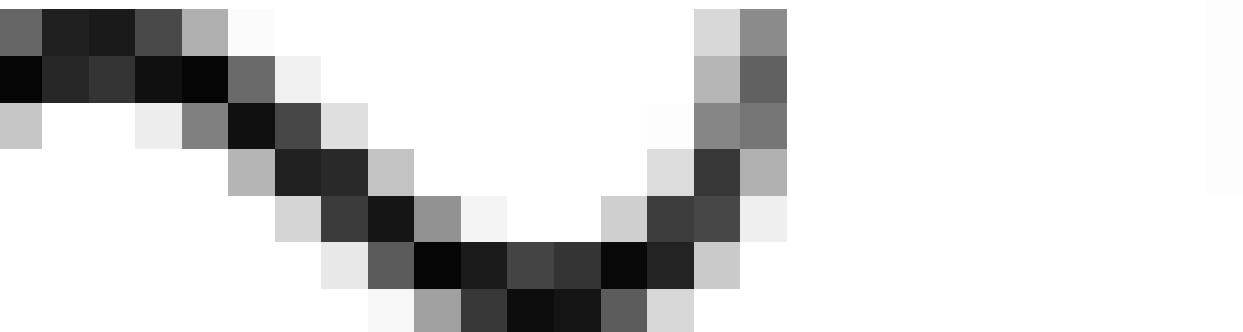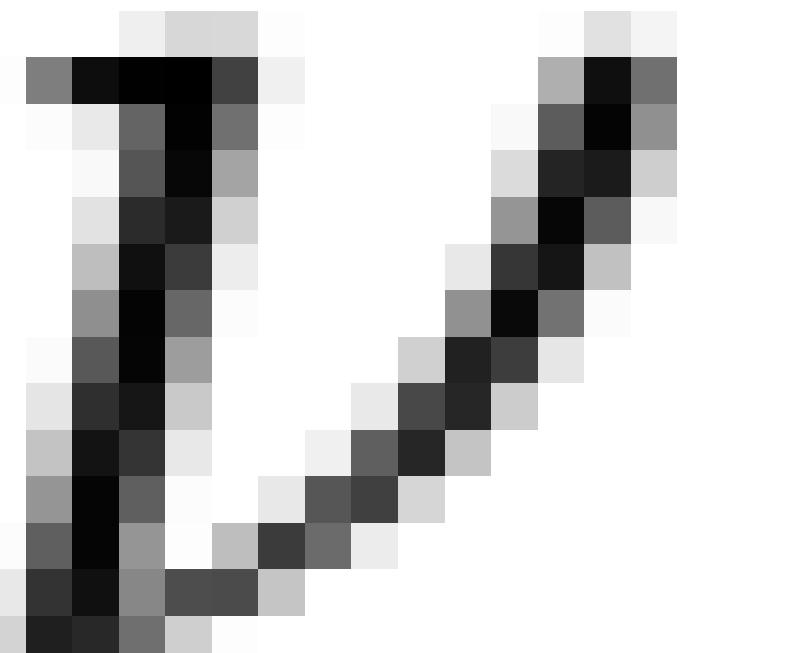













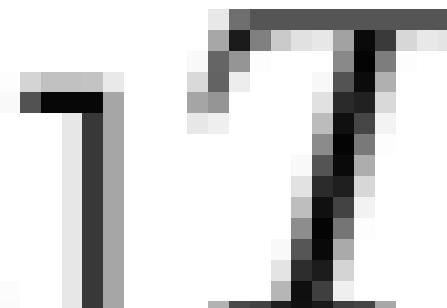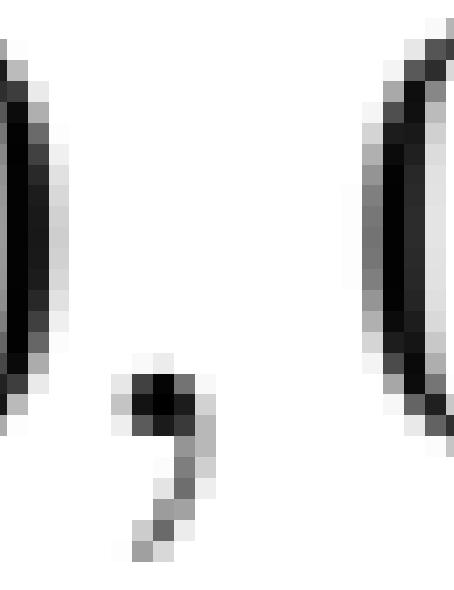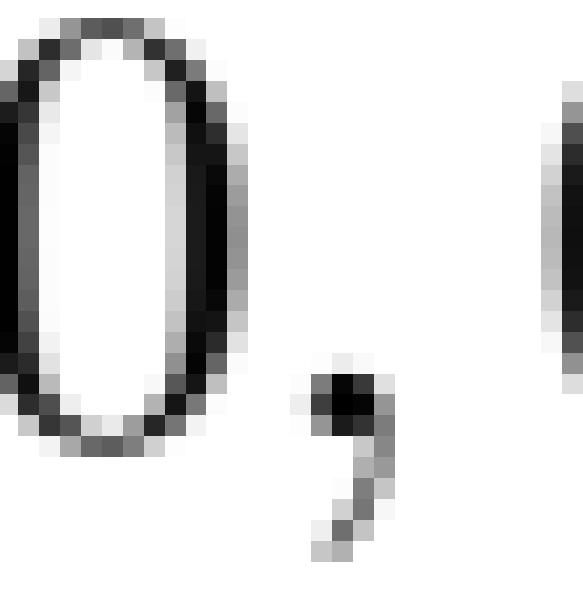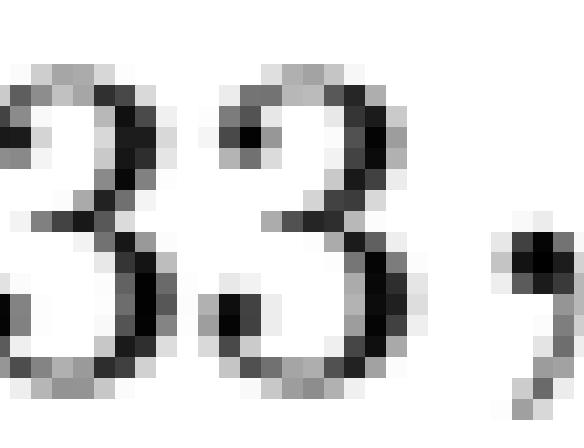

$$\left\{ \begin{array}{l} \sigma_{11} = \frac{(1-\nu)E}{(1+\nu)(1-2\nu)}\epsilon_{11} + \frac{\nu E}{(1+\nu)(1-2\nu)}\epsilon_{22} + \frac{\nu E}{(1+\nu)(1-2\nu)}\epsilon_{33} \\ \sigma_{22} = \frac{\nu E}{(1+\nu)(1-2\nu)}\epsilon_{11} + \frac{(1-\nu)E}{(1+\nu)(1-2\nu)}\epsilon_{22} + \frac{\nu E}{(1+\nu)(1-2\nu)}\epsilon_{33} \\ \sigma_{33} = \frac{\nu E}{(1+\nu)(1-2\nu)}\epsilon_{11} + \frac{\nu E}{(1+\nu)(1-2\nu)}\epsilon_{22} + \frac{(1-\nu)E}{(1+\nu)(1-2\nu)}\epsilon_{33} \end{array} \right.$$

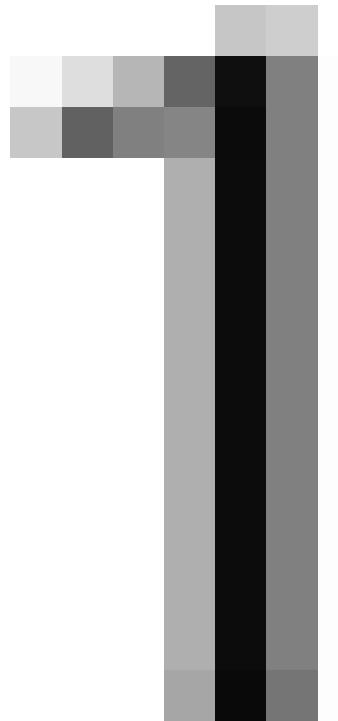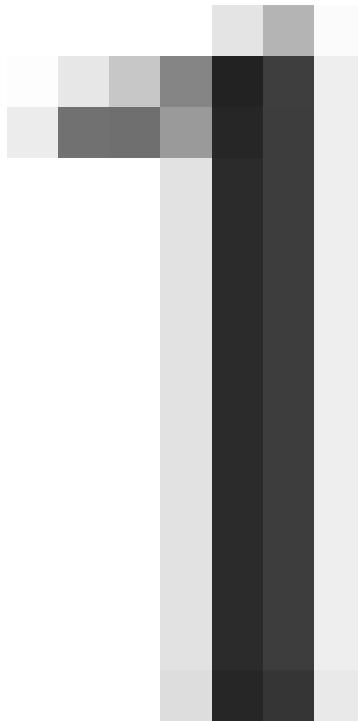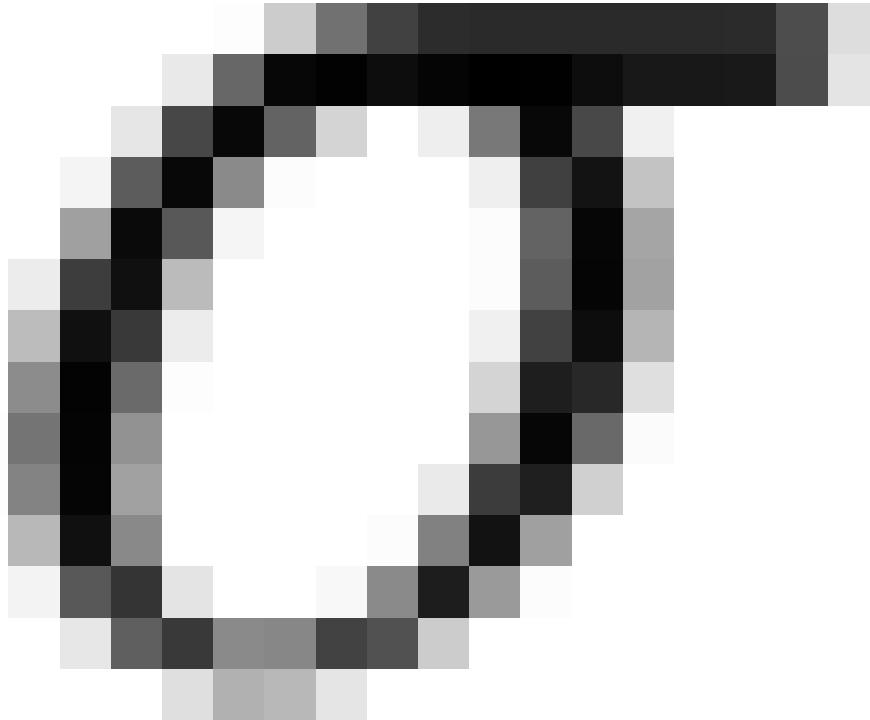


1

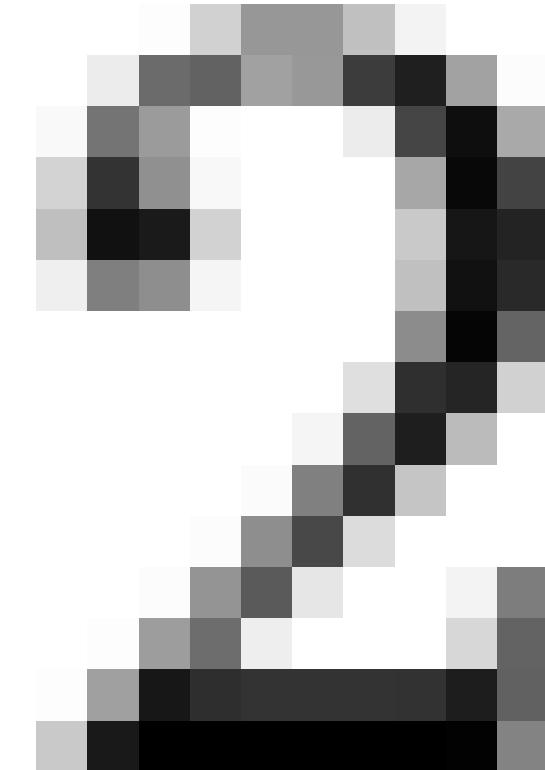
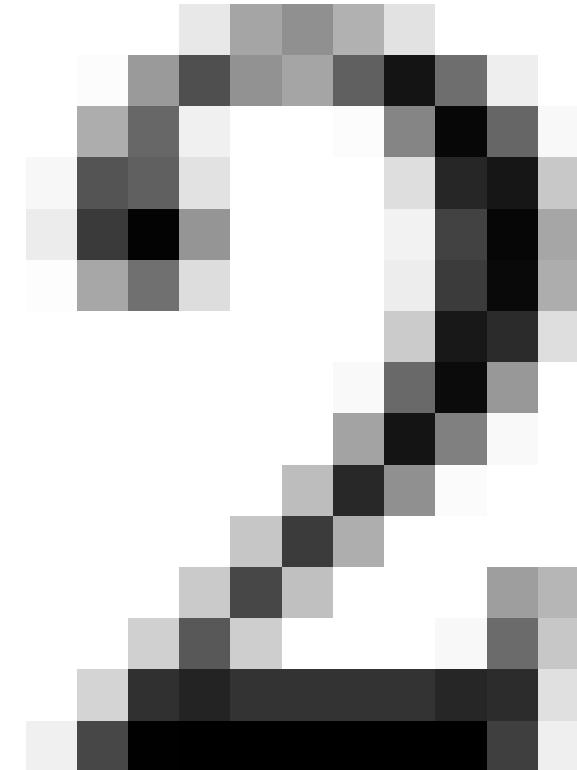
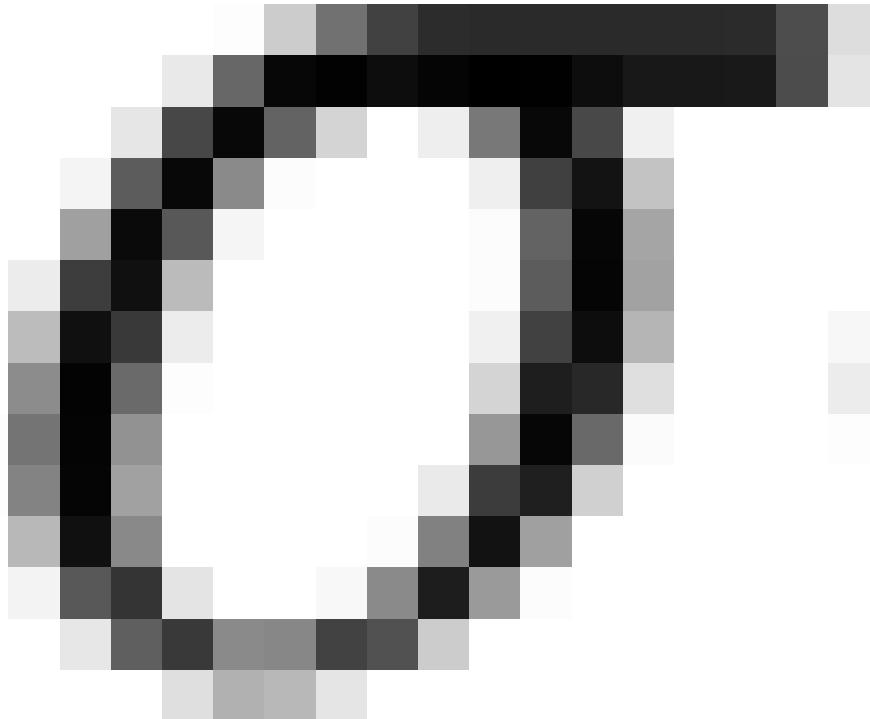


$$\left\{ \begin{array}{l} \sigma_{11} = \frac{\nu}{1-\nu} \sigma_{33} + \frac{E}{1-\nu^2} \epsilon_{11} + \frac{\nu E}{1-\nu^2} \epsilon_{22} \\ \sigma_{22} = \frac{\nu}{1-\nu} \sigma_{33} \frac{\nu E}{1-\nu^2} \epsilon_{11} + \frac{E}{1-\nu^2} \epsilon_{22} \end{array} \right.$$




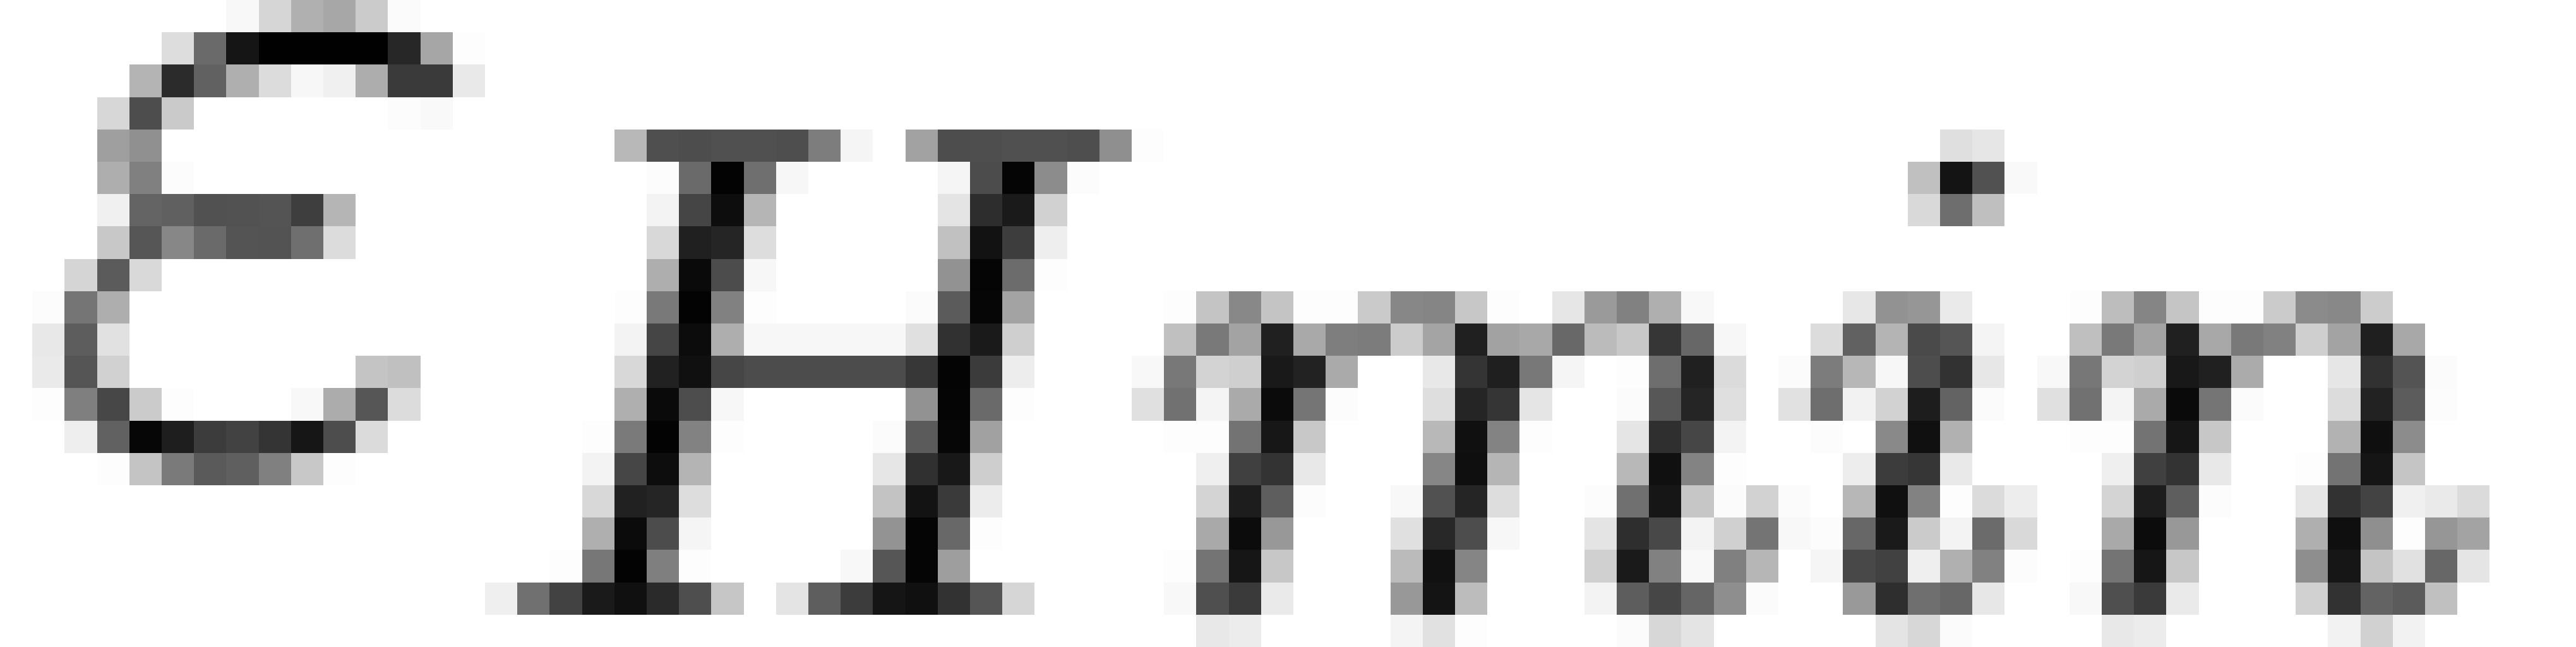

$$\left\{ \begin{array}{l} \sigma_{H\max} = \frac{\nu}{1-\nu} \sigma_v + E' \epsilon_{H\max} + \nu E' \epsilon_{hmin} \\ \sigma_{hmin} = \frac{\nu}{1-\nu} \sigma_v + E' \epsilon_{H\max} + \nu E' \epsilon_{hmin} \end{array} \right.$$

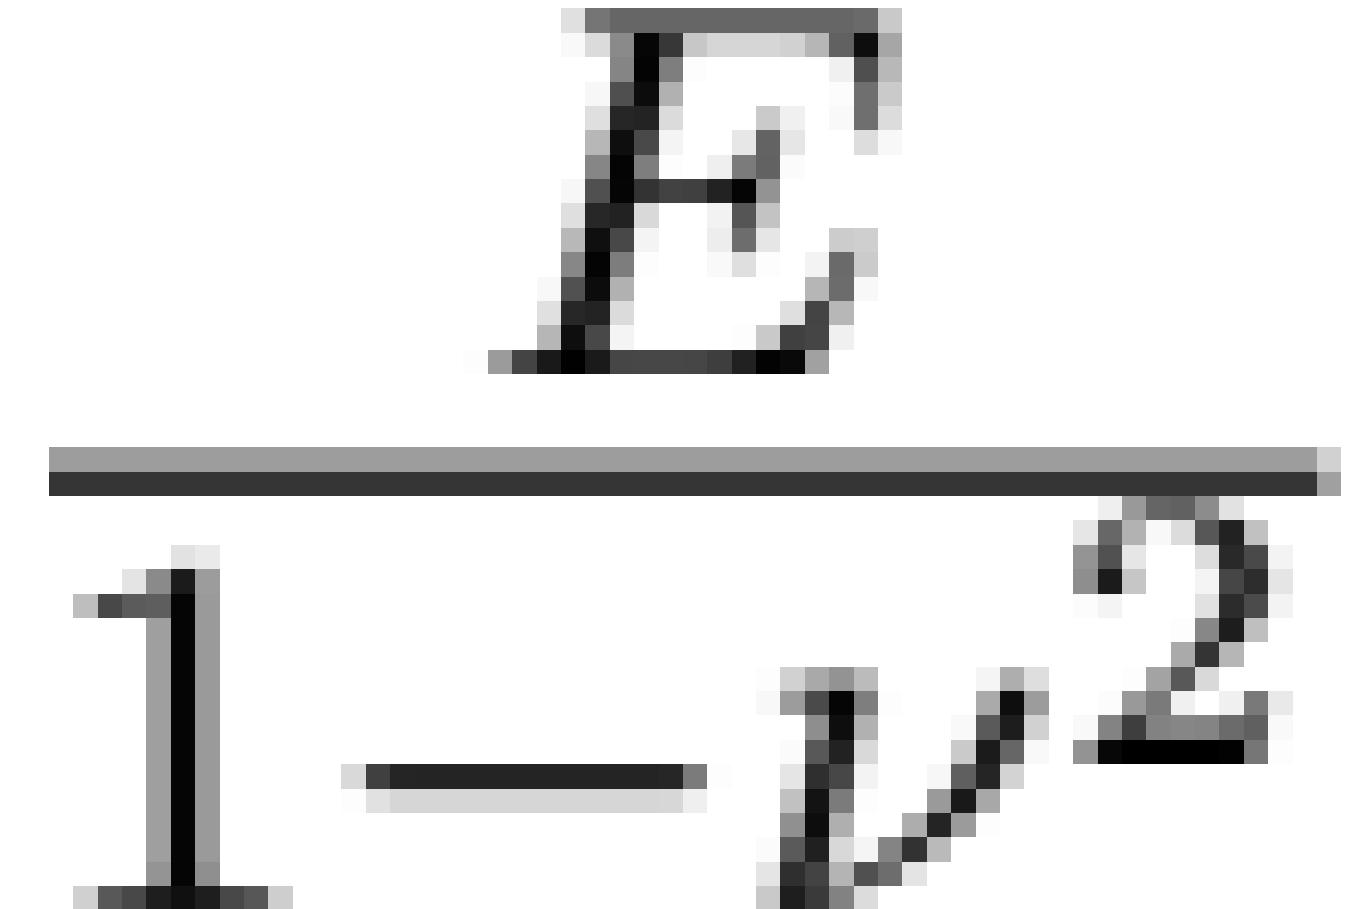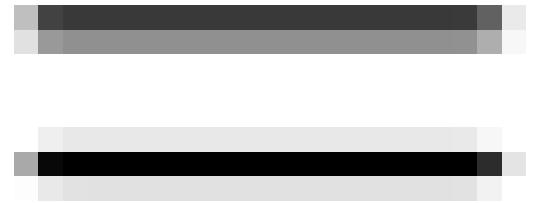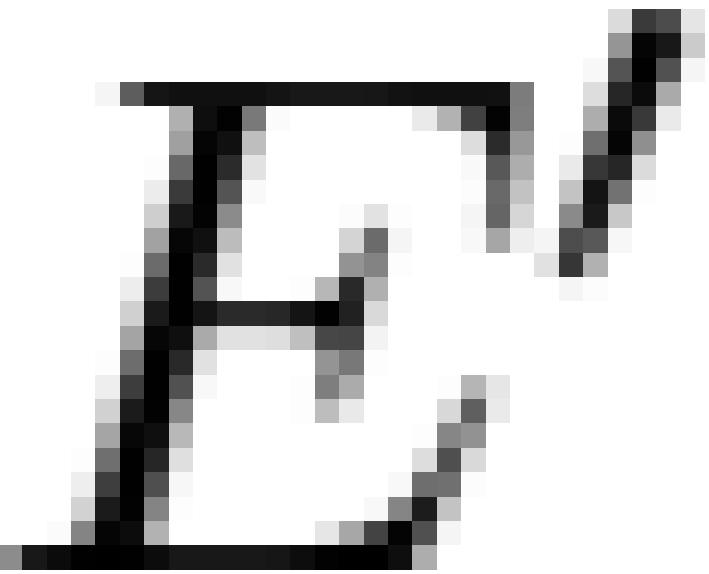















	(E, v)	(K, G)
$G =$	$\frac{E}{2(1+v)}$	<u>Shear modulus</u> (also noted as μ , S-wave)
$M =$	$\frac{(1-v)E}{(1+v)(1-2v)}$	<u>Constrained modulus</u> (uniaxial compaction, P-wave)
$\lambda =$	$\frac{vE}{(1+v)(1-2v)}$	<u>Lamé first parameter</u> (volumetric strain component)
$K =$	$\frac{E}{3(1-2v)}$	<u>Bulk modulus</u> (relates volumetric strain and isotropic stress)



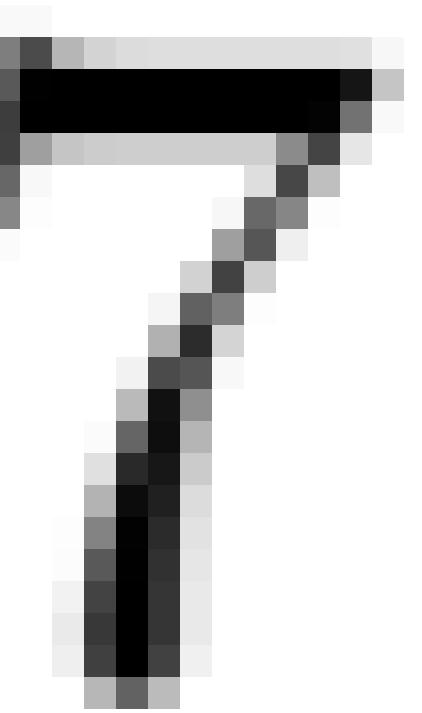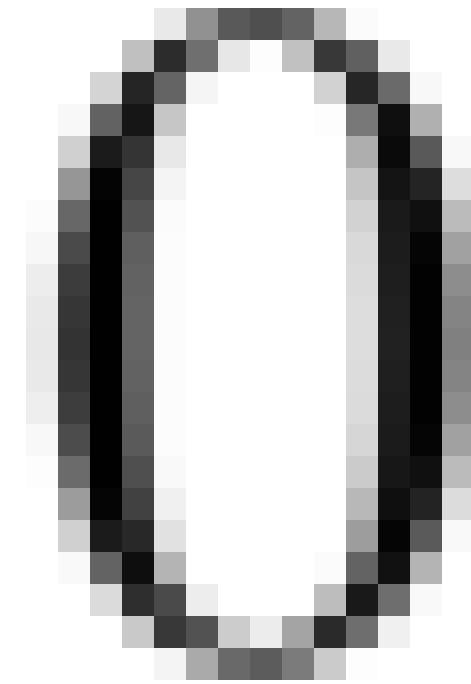

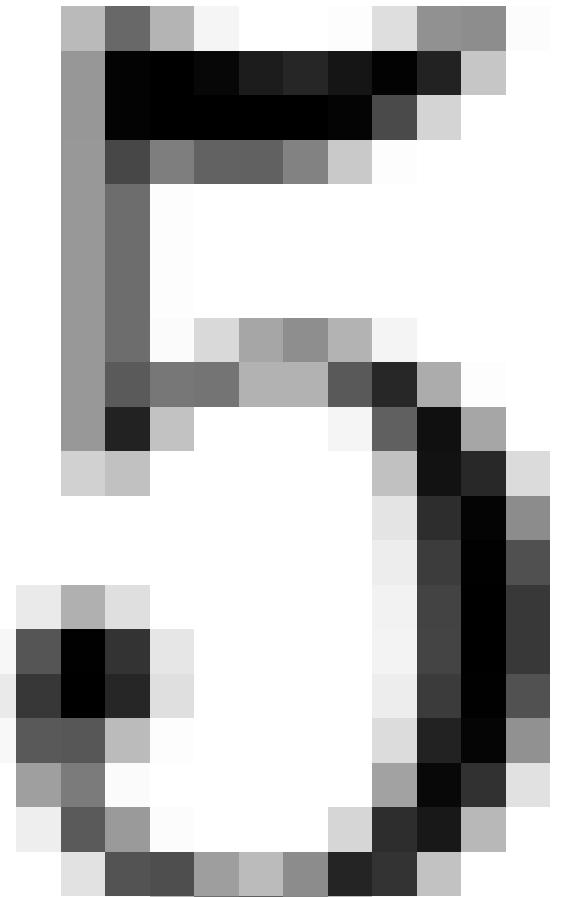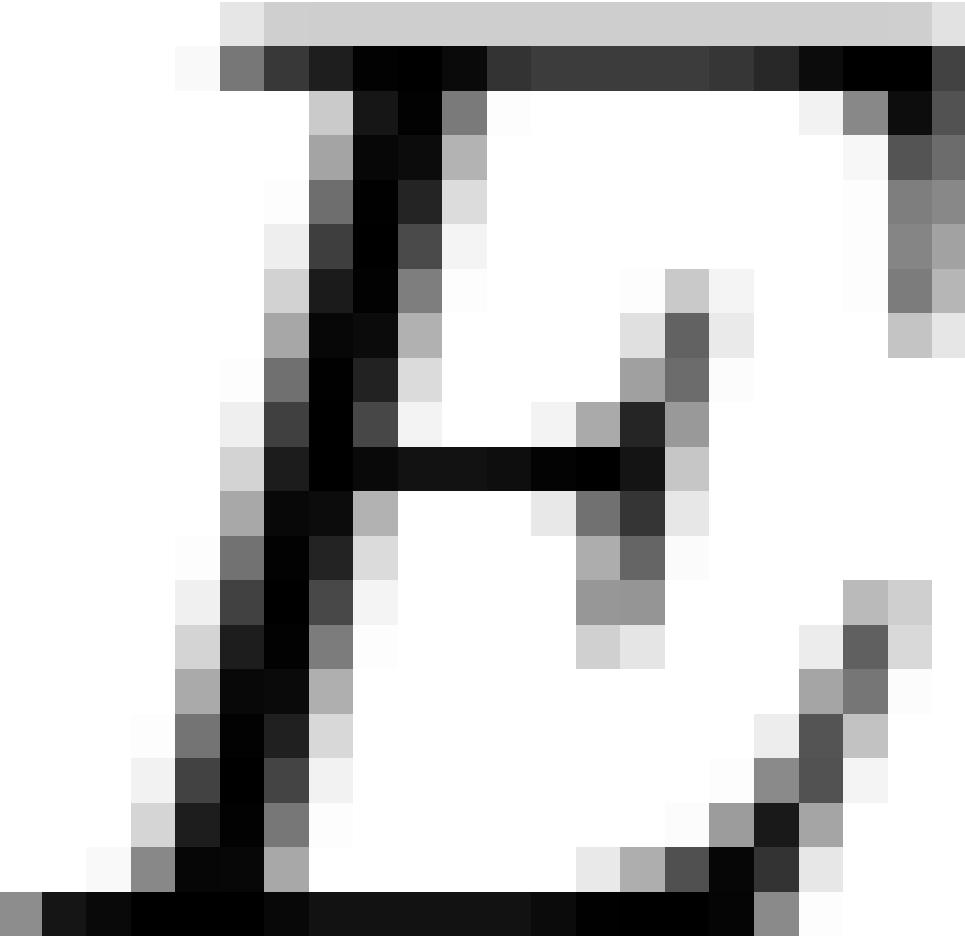


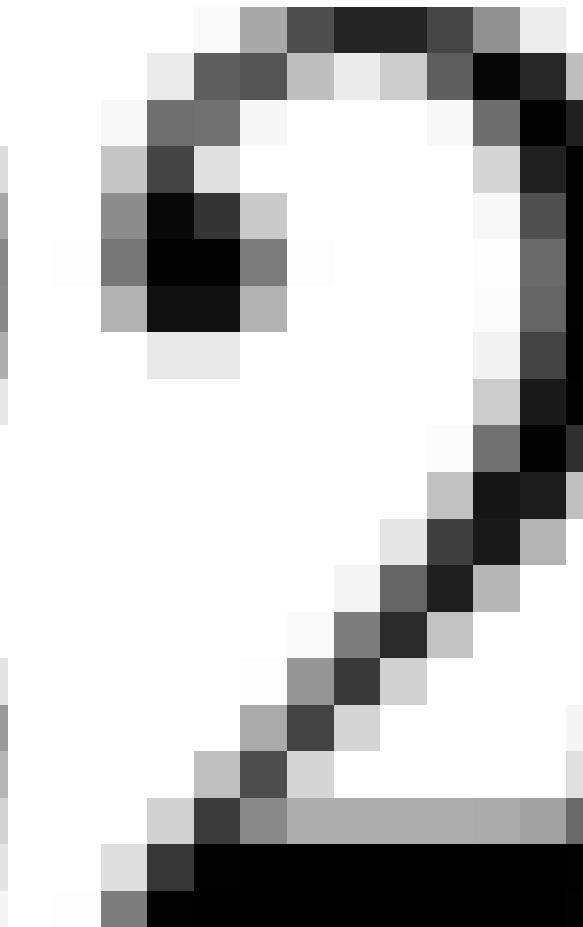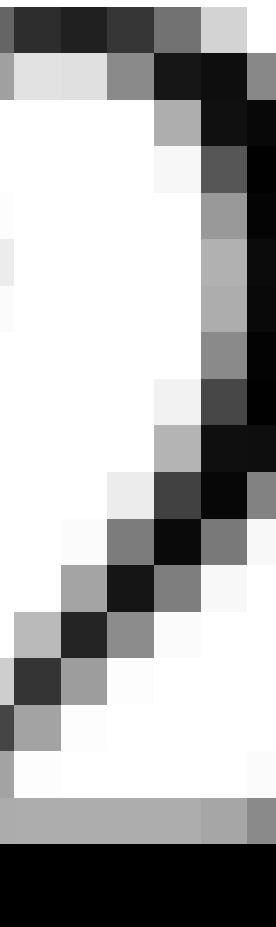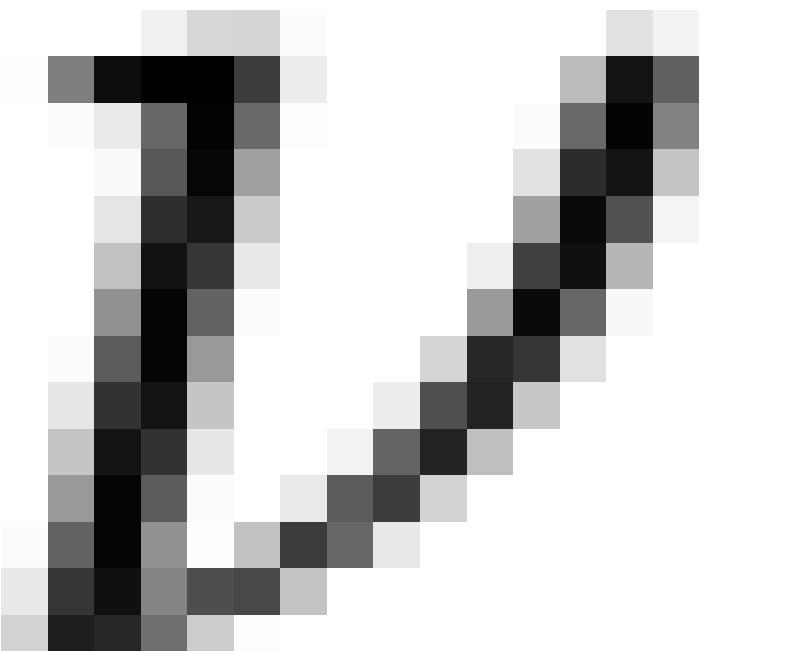






$$S_v = 23.8 \frac{\text{MPa}}{\text{km}} \cdot \frac{1 \frac{\text{psi}}{\text{ft}}}{\frac{\text{MPa}}{\text{km}}} \cdot 7950 \text{ ft} = 8227 \text{ psi}$$









$$\frac{E'}{1 - \nu^2} = \frac{E}{1 - 0.22^2} = \frac{5 \times 10^6 \text{ psi}}{5.25 \times 10^6 \text{ psi}}$$

$$\left\{ \begin{array}{l} \sigma_{Hmax} = \frac{\nu}{1-\nu} \sigma_v + E' \epsilon_{Hmax} = \frac{0.22}{1-0.22} 2468 \text{ psi} + 5.25 \times 10^6 \text{ psi} * 0.0002 = 1745 \text{ psi} \\ \sigma_{hmin} = \frac{\nu}{1-\nu} \sigma_v + E' \epsilon_{hmin} = \frac{0.22}{1-0.22} 2468 \text{ psi} + 0.22 * 5.25 \times 10^6 \text{ psi} * 0.0002 = 926 \text{ psi} \end{array} \right.$$

$$S_{H\max} = \sigma_{H\max} + P_p = 1745 \text{ psi} + 5759 \text{ psi} = 7504 \text{ psi}$$

$$S_{h\min} = \sigma_{h\min} + P_p = 927 \text{ psi} + 5759 \text{ psi} = 6686 \text{ psi}$$






$$C_{pp} =$$

$$\frac{1}{V_p} \frac{dV_p}{dP_p}$$

S_u, ϵ_h

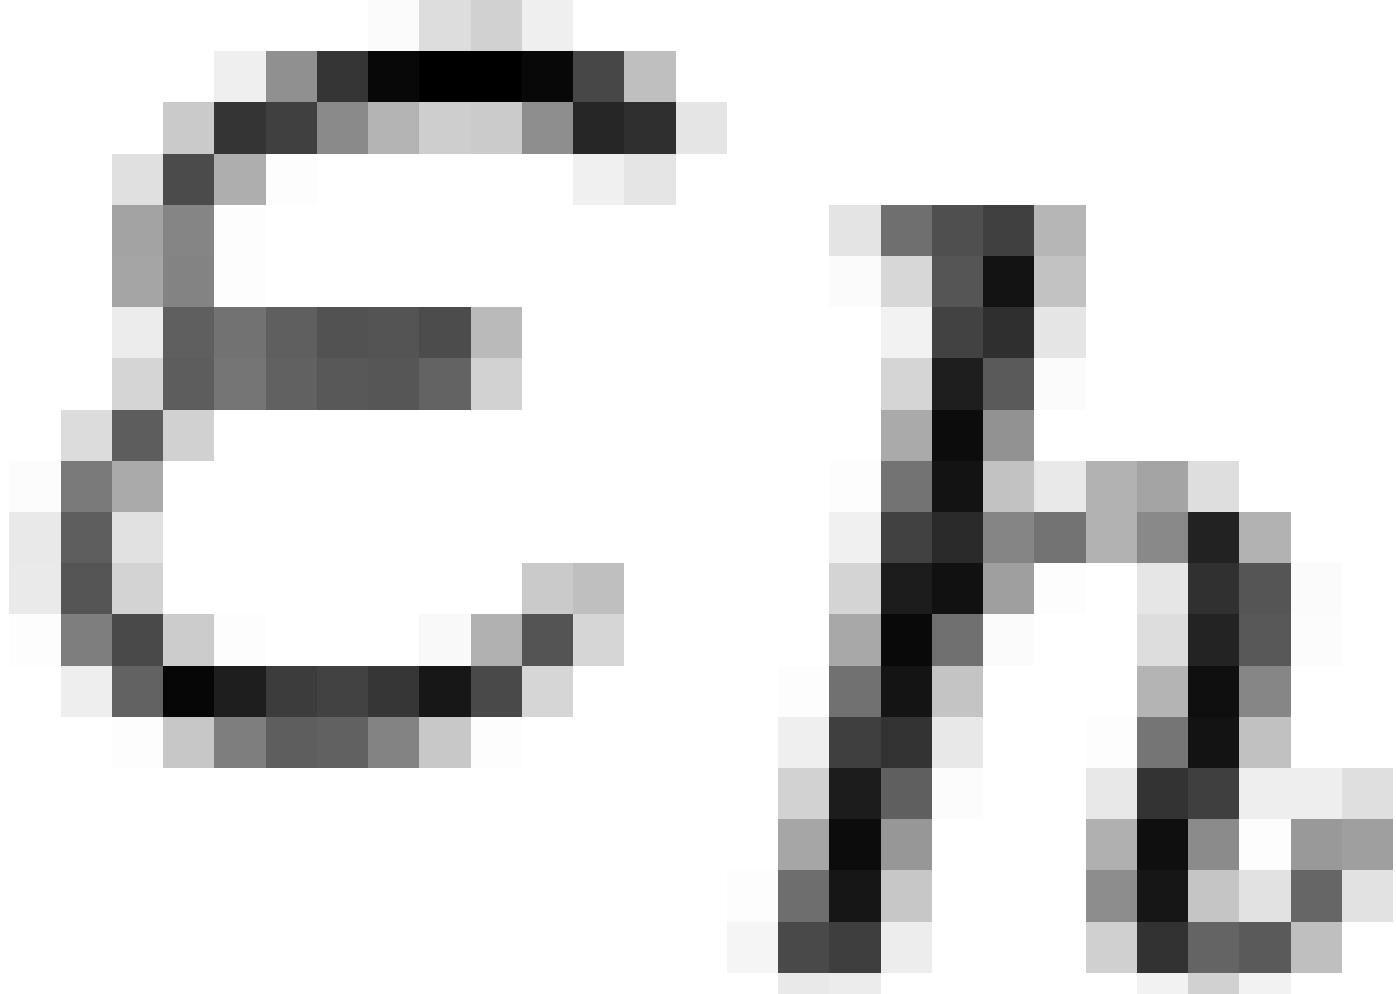


Op

$=$

Op

ϕ











$\langle pp \rangle$

$$= \begin{pmatrix} 0 & 0 \\ 0 & 0 \end{pmatrix}$$

$$\frac{(1 + \nu)(1 - \nu)}{2\nu} E^\phi$$




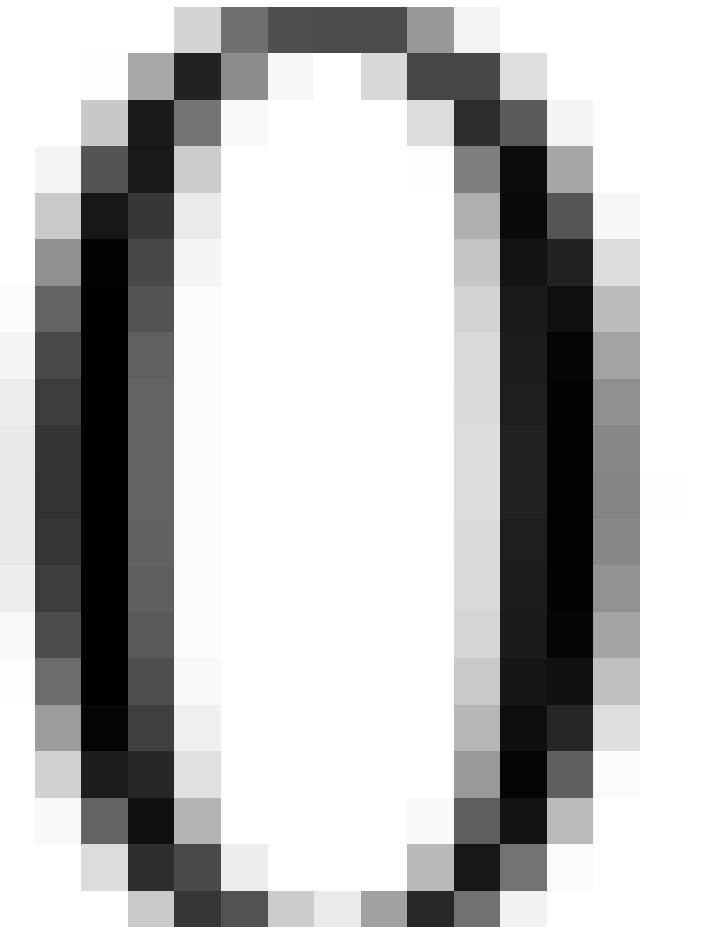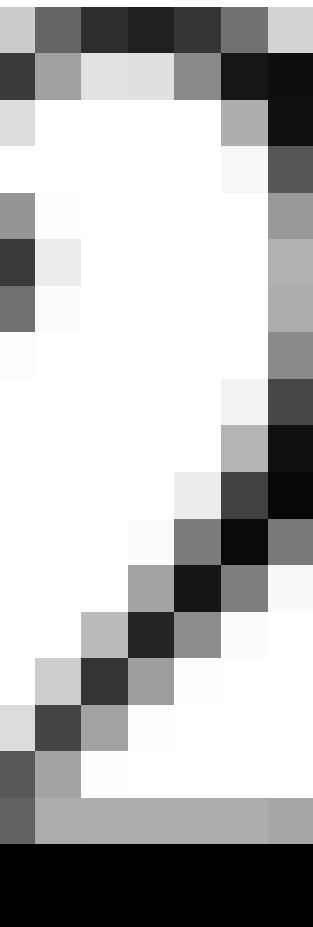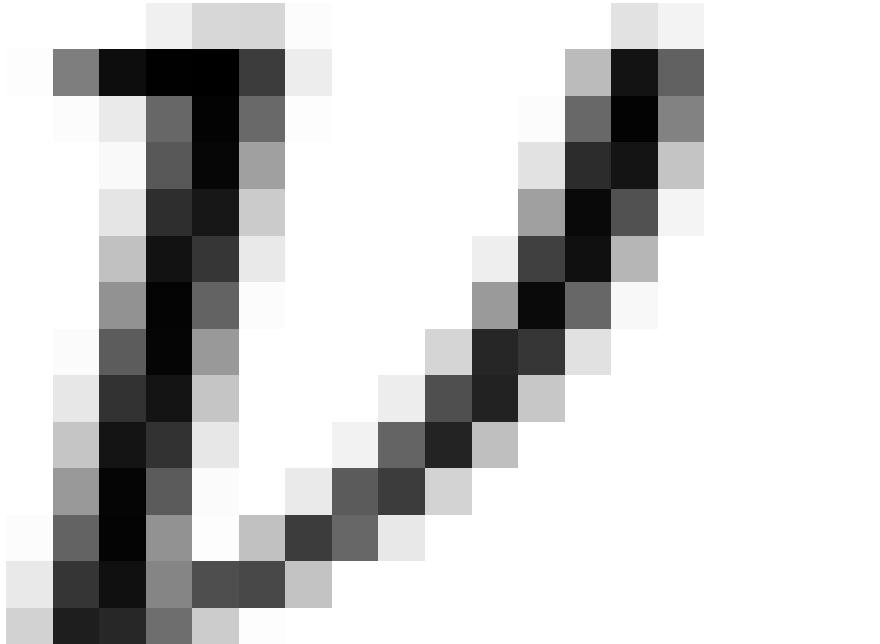


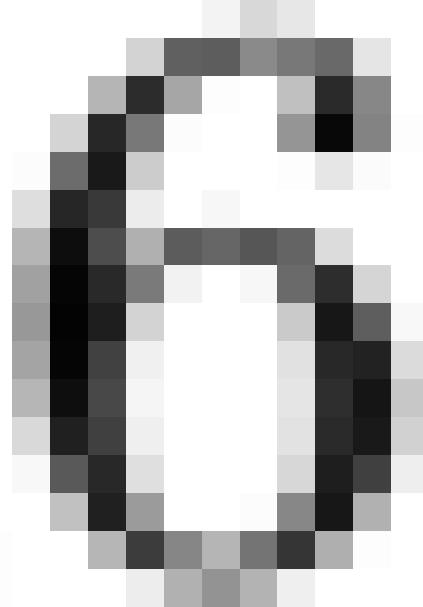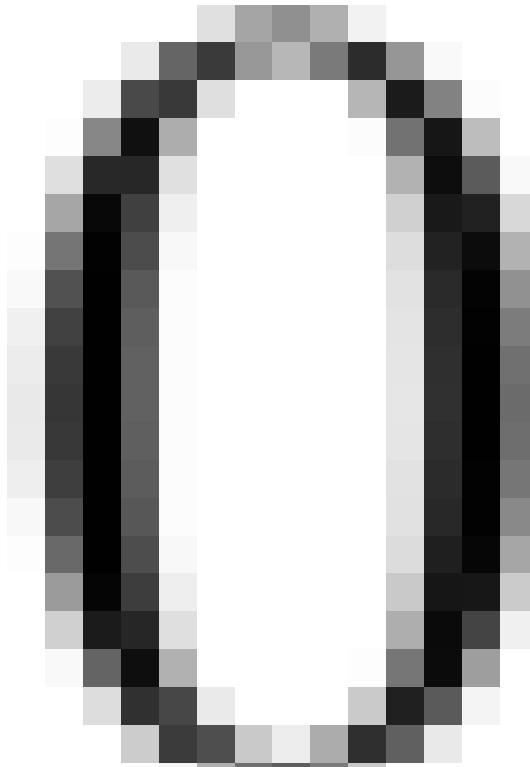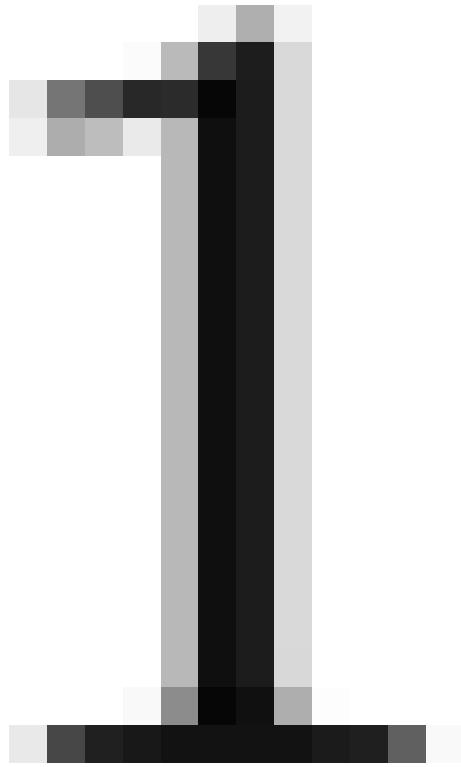



$$M = \frac{(1-\nu)E}{(1+\nu)(1-2\nu)} = \frac{(1-0.20)10 \text{ GPa}}{1.6 \times 10^6 \text{ psi}} = \frac{11.11 \text{ GPa}}{(1+0.20)(1-2 \times 0.20)}$$


$$\frac{C_{pp}}{M_\phi} = \frac{1}{3.1 \times 10^6 \text{ psi} \times 0.20} = \frac{1}{1.6 \times 10^6}$$

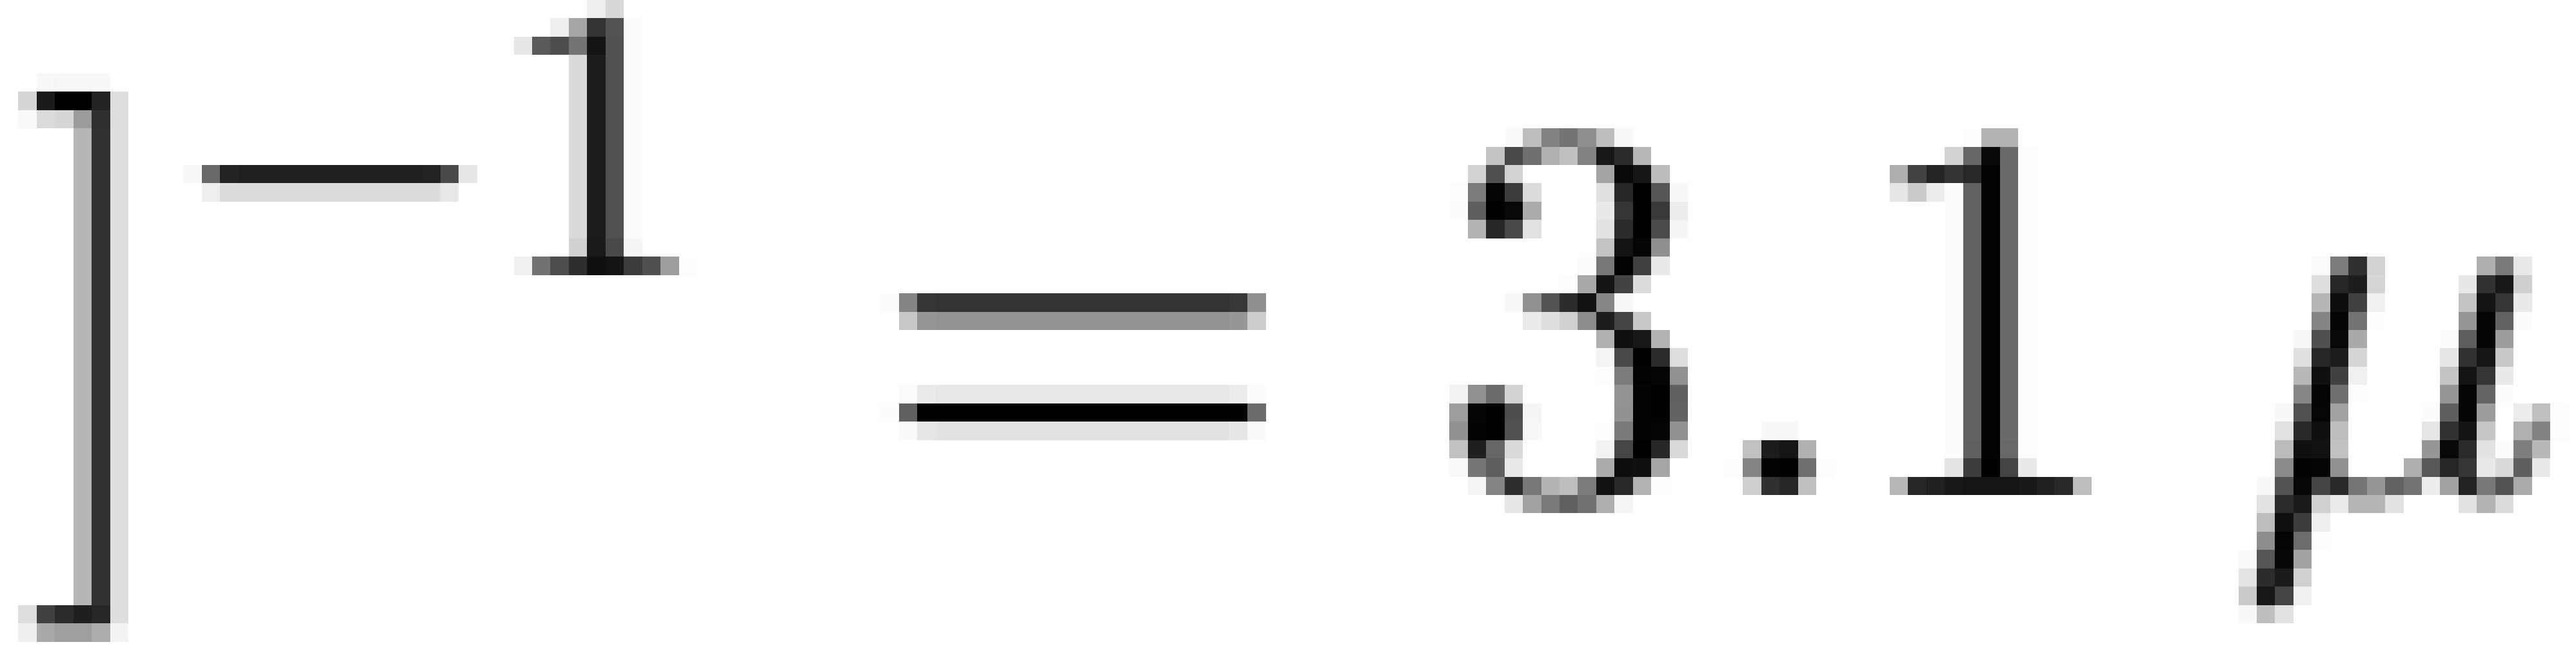


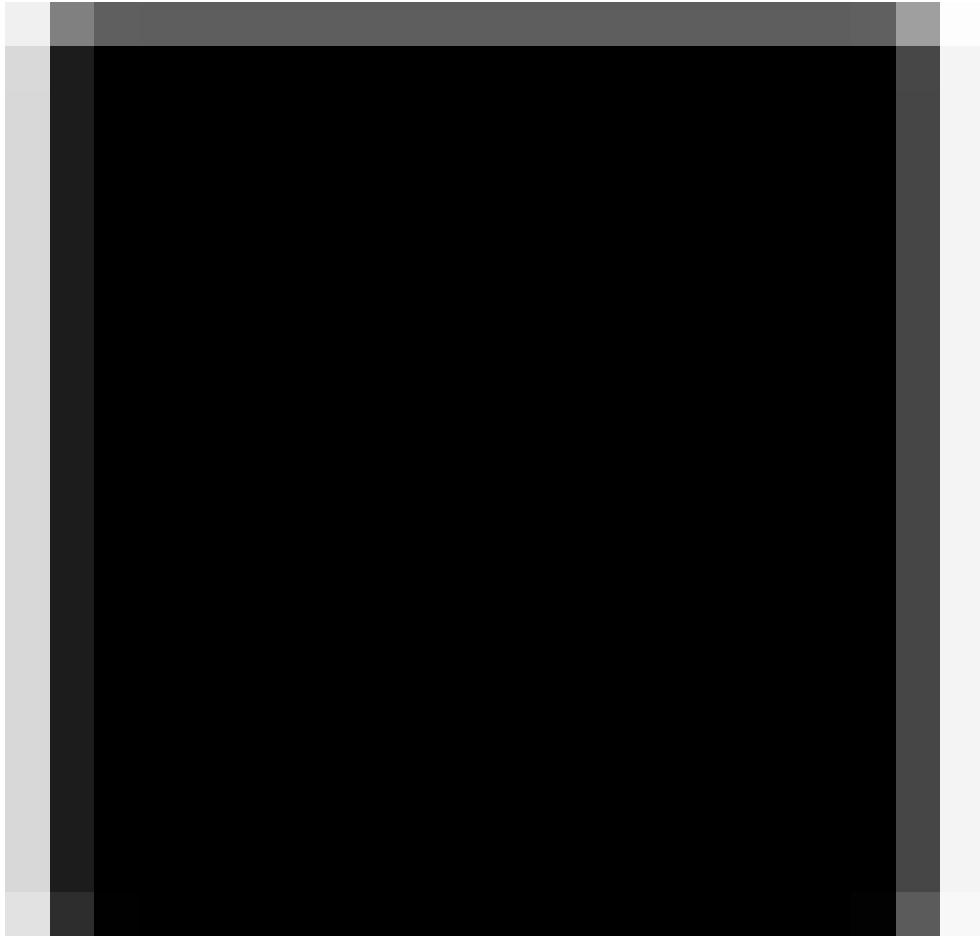


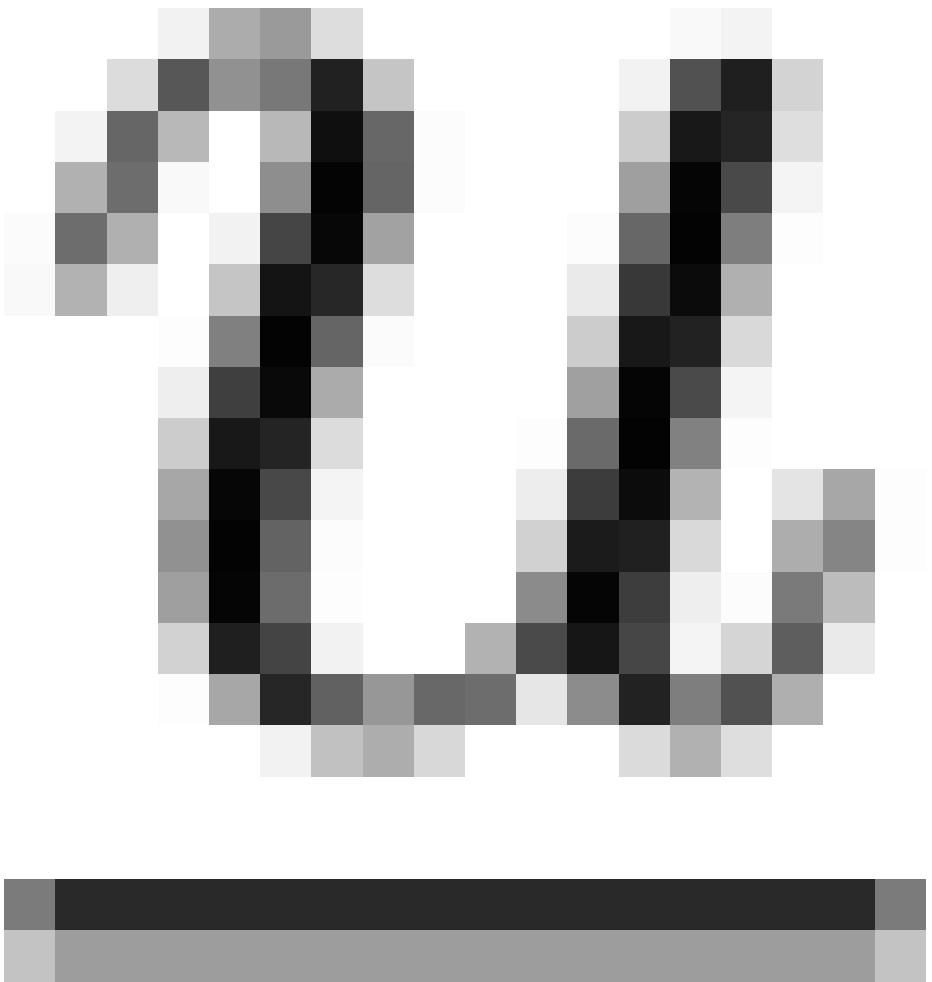






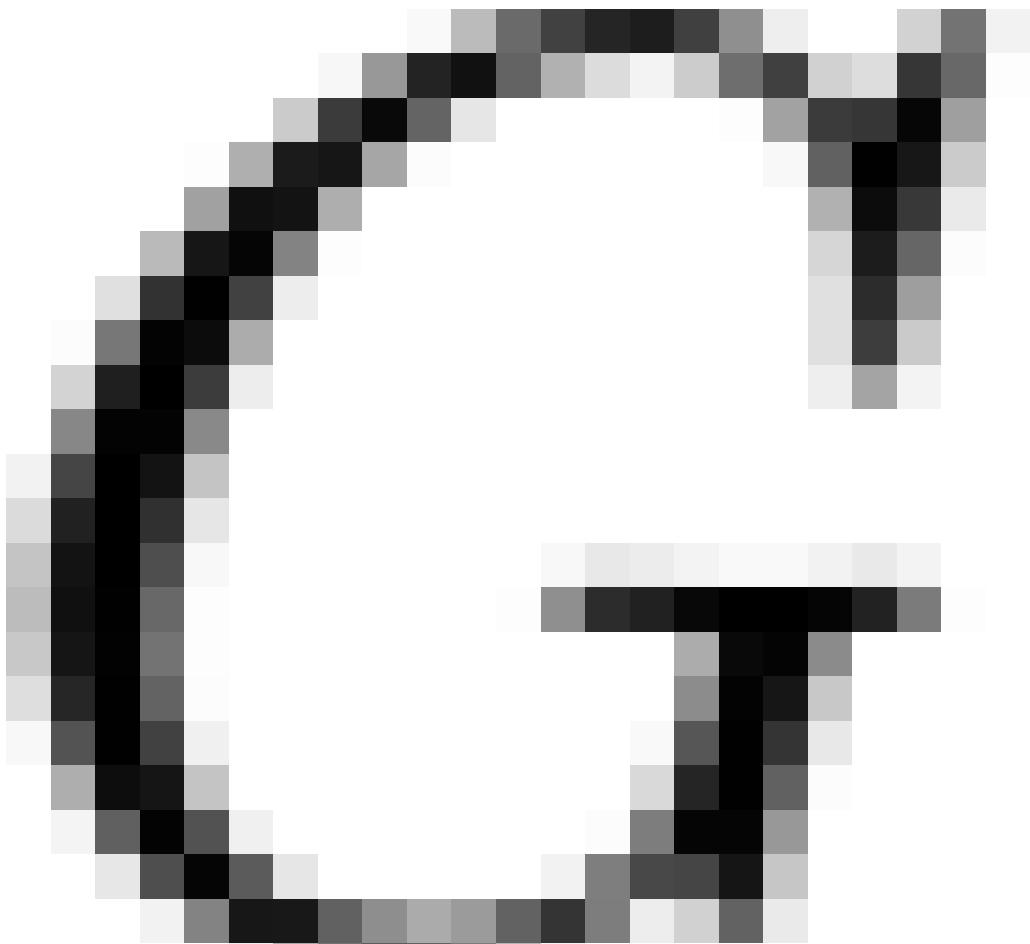

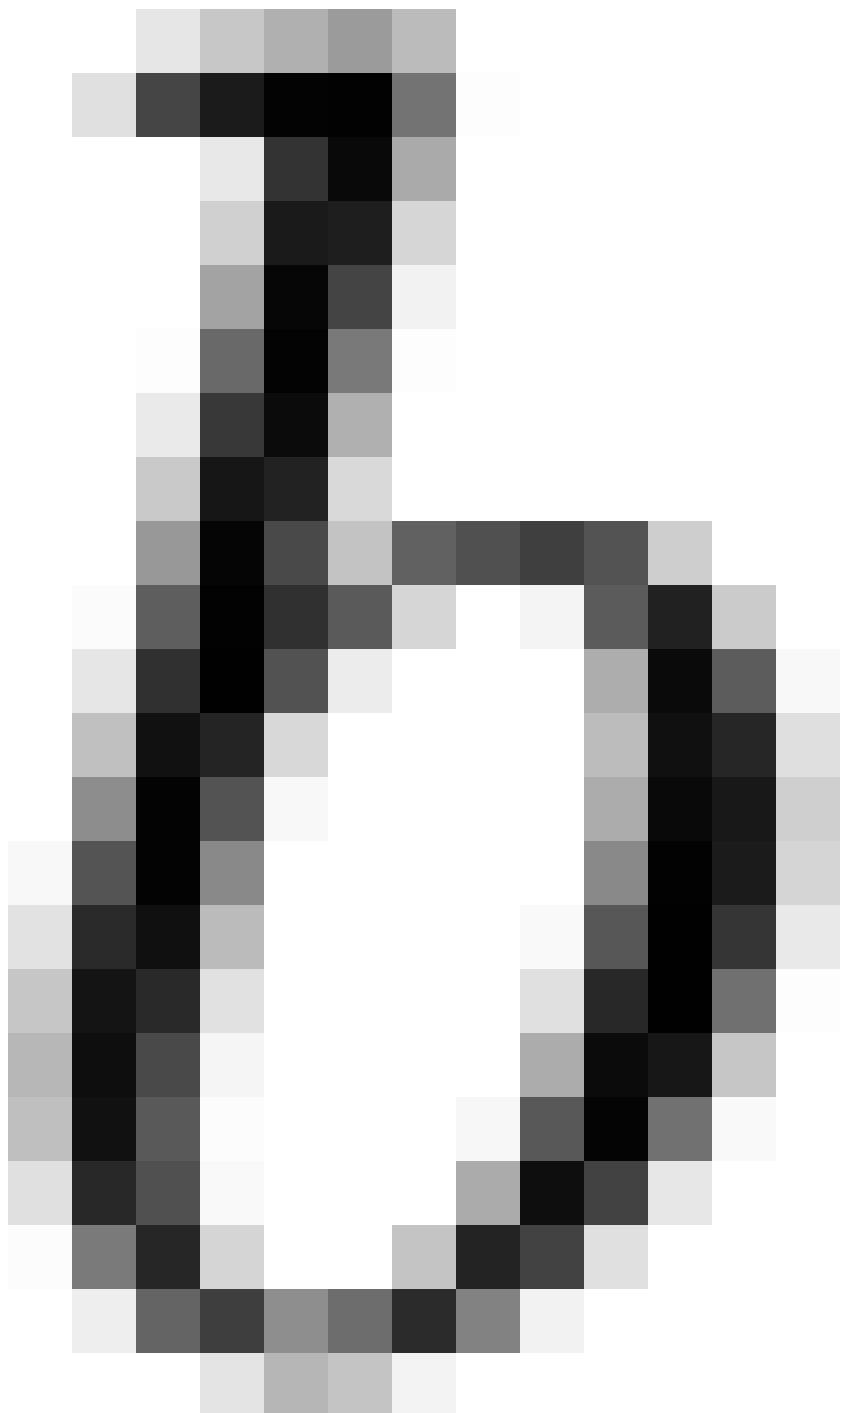


Orthorhombic symmetry
(symmetry respect to 3 orthogonal planes)

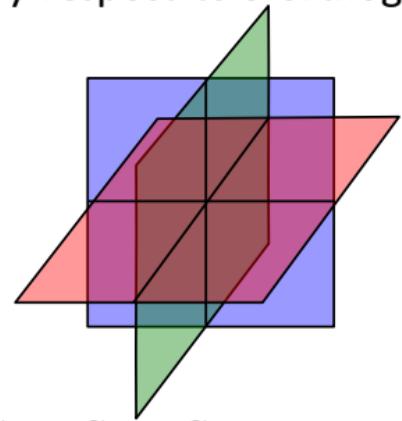

$$\underline{\underline{C}} = \begin{bmatrix} C_{11} & C_{12} & C_{13} & & & \\ C_{12} & C_{22} & C_{23} & & & 0 \\ C_{13} & C_{23} & C_{33} & & & \\ & & & C_{44} & 0 & 0 \\ & 0 & & 0 & C_{55} & 0 \\ & 0 & 0 & 0 & & C_{66} \end{bmatrix}$$



9 independent parameters


Transverse Isotropy
(symmetry respect to 1 axis)

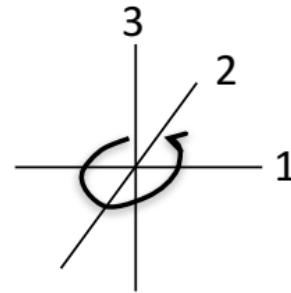


$$\underline{\underline{C}} = \begin{bmatrix} C_{11} & C_{12} & C_{13} & & & \\ C_{12} & C_{11} & C_{13} & & & 0 \\ C_{13} & C_{13} & C_{33} & & & \\ & & & C_{44} & 0 & 0 \\ & 0 & & 0 & C_{44} & 0 \\ & 0 & 0 & 0 & 0 & C_{66} \end{bmatrix}$$

5 independent parameters ($C_{12}=C_{11}-2C_{66}$)

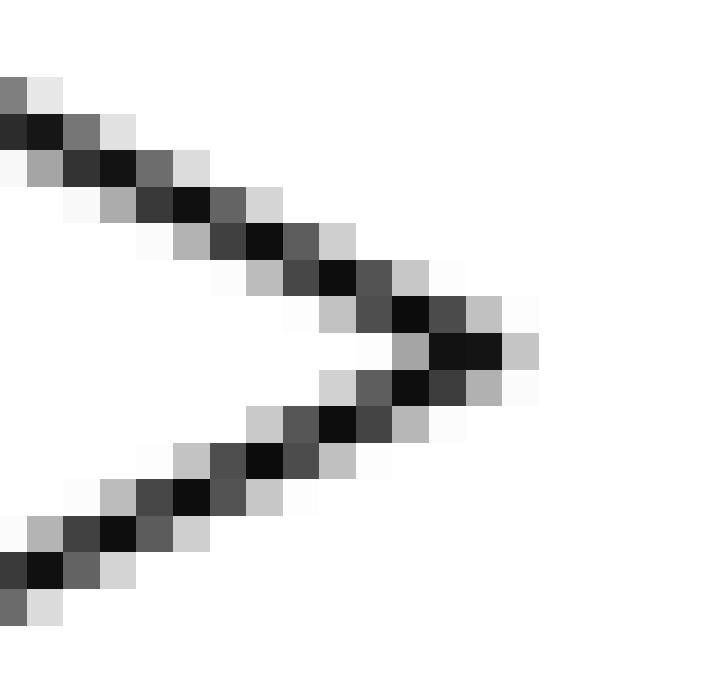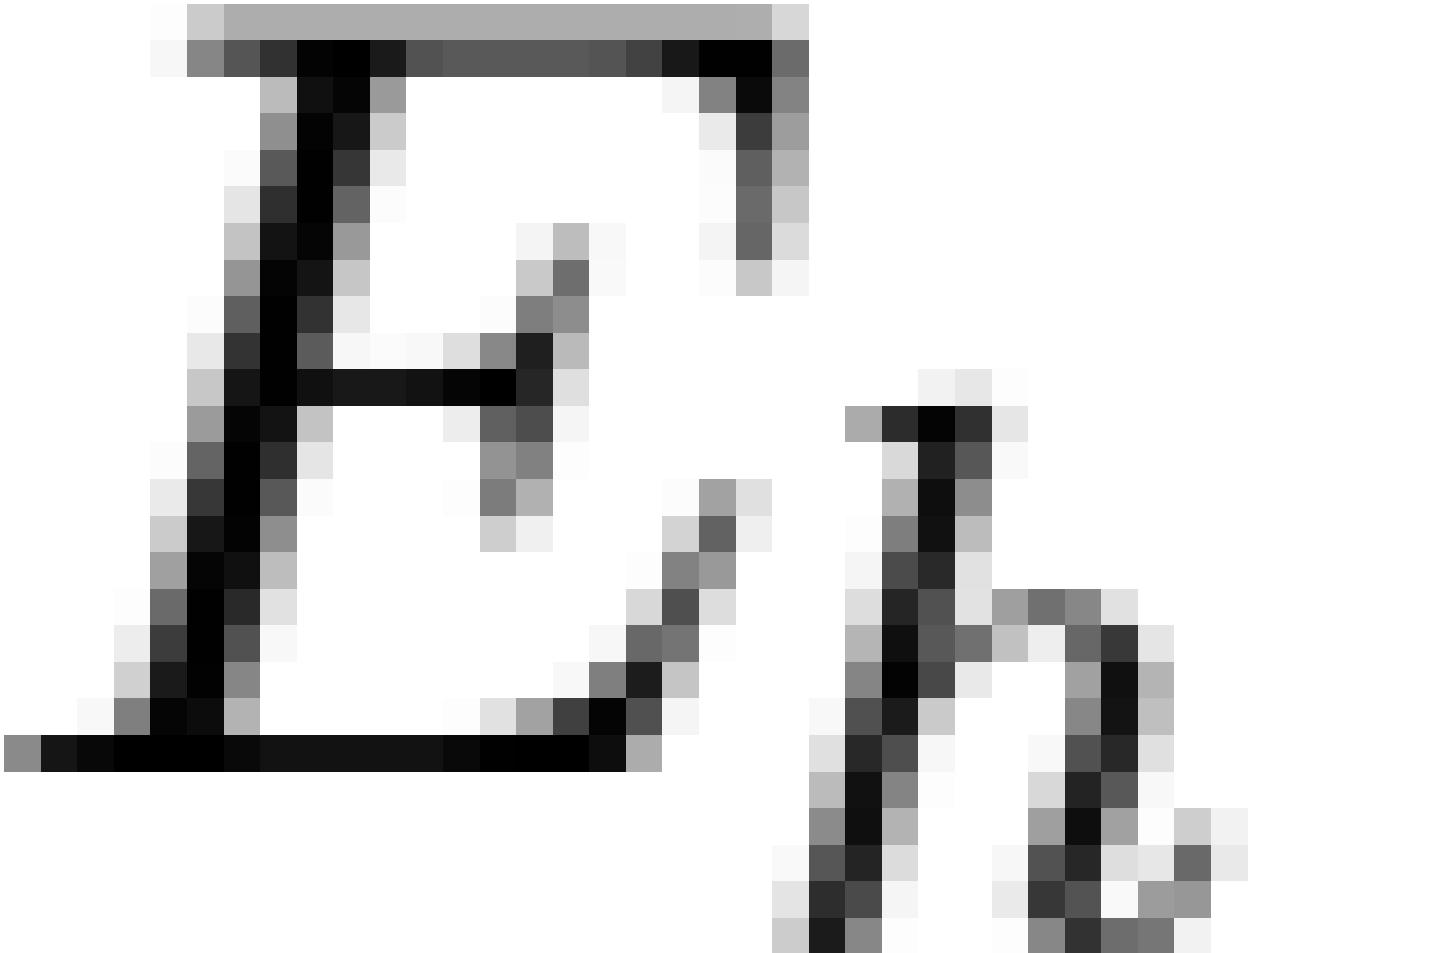


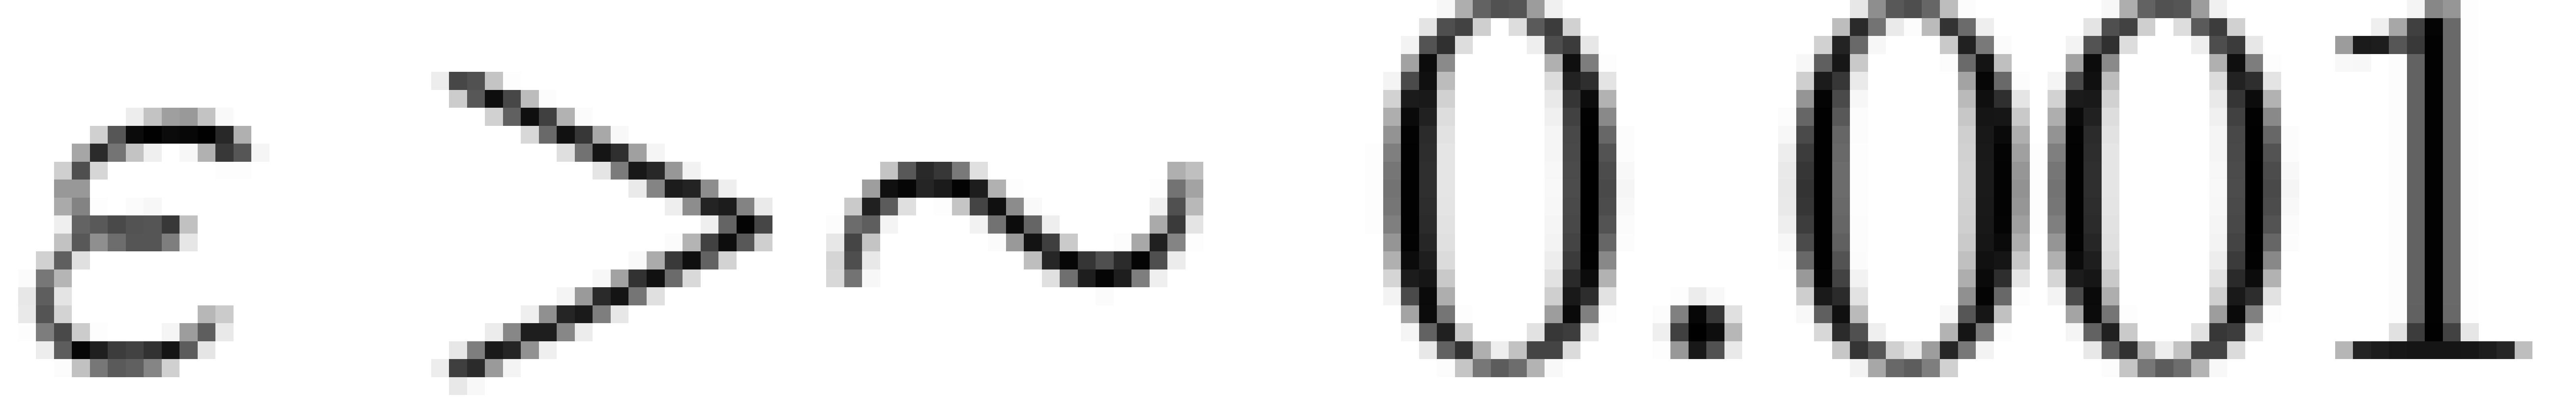


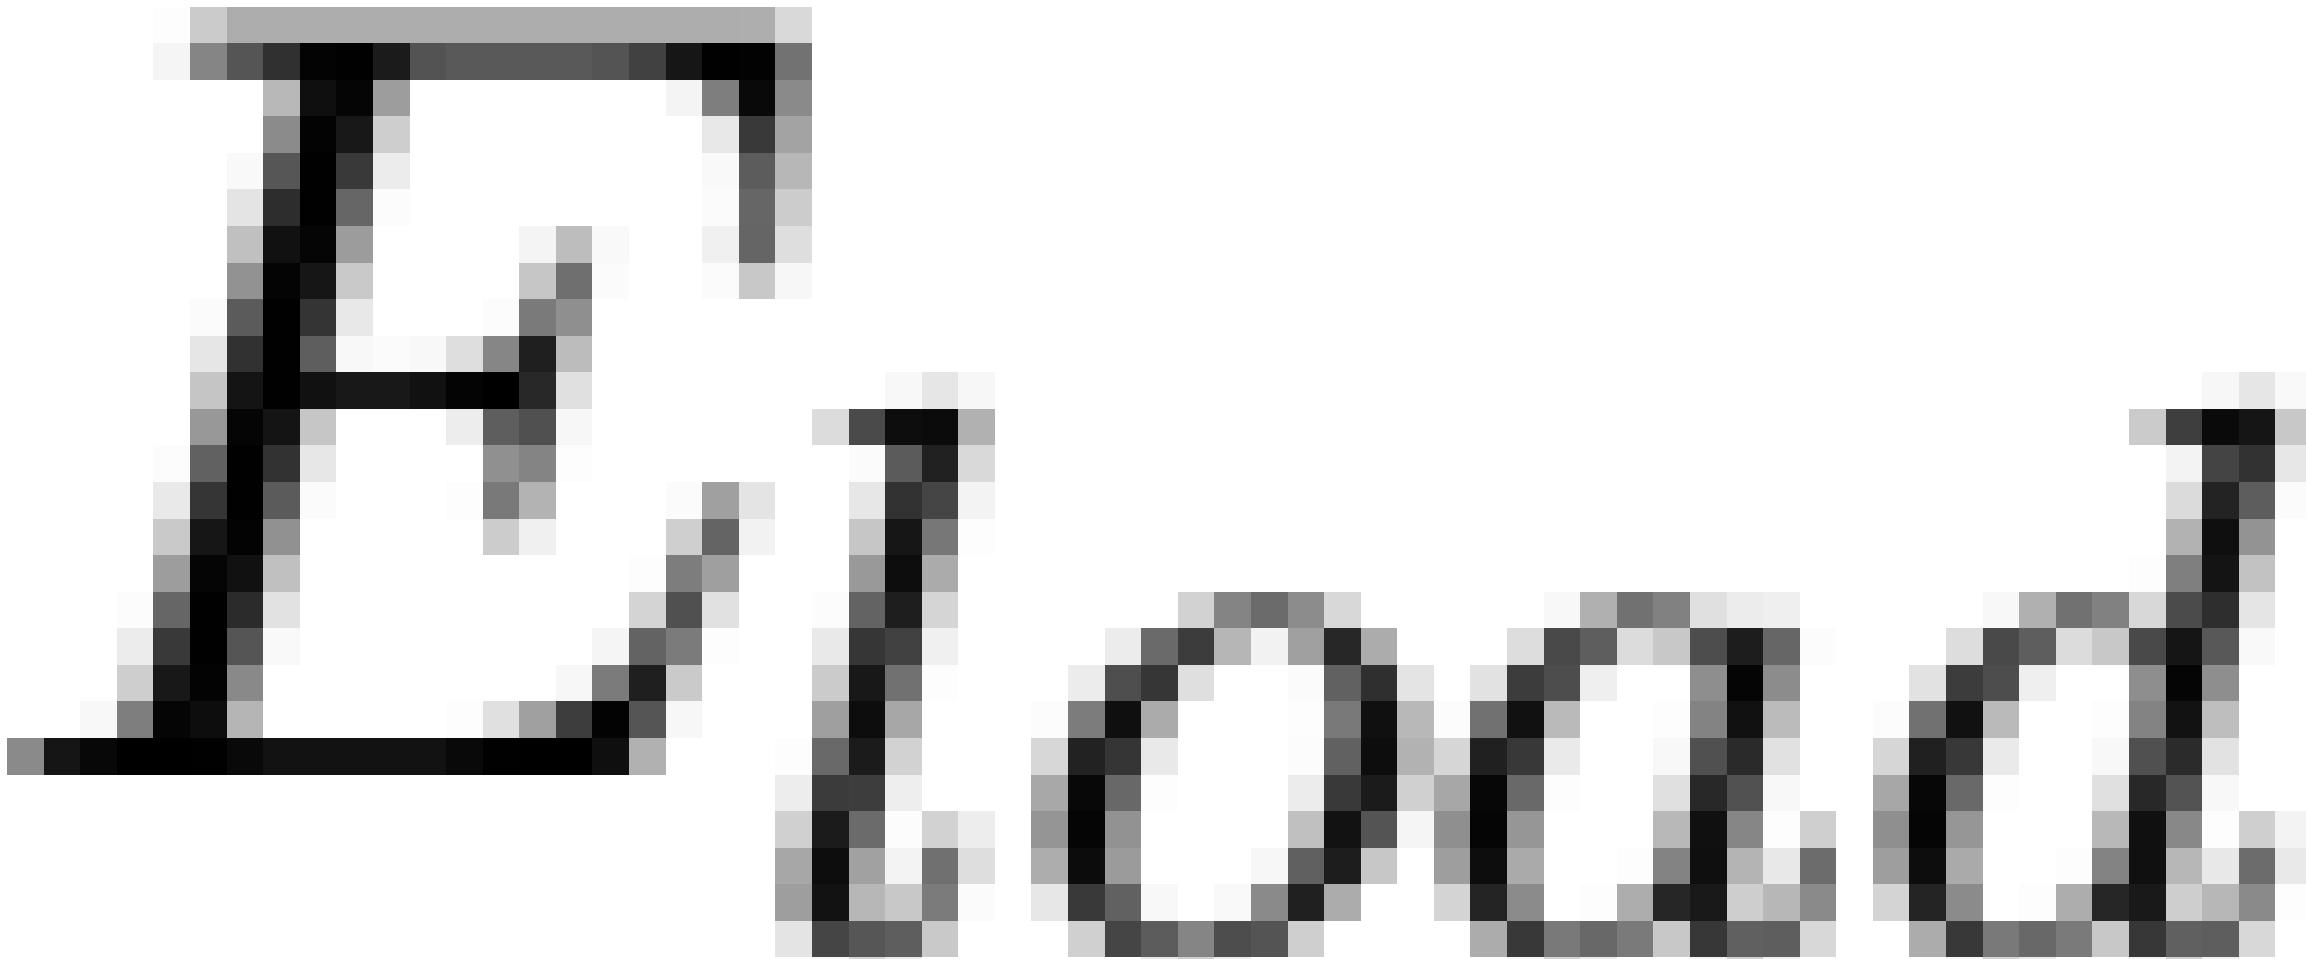







Strain rate hardening: The faster the loading, the stiffer the material

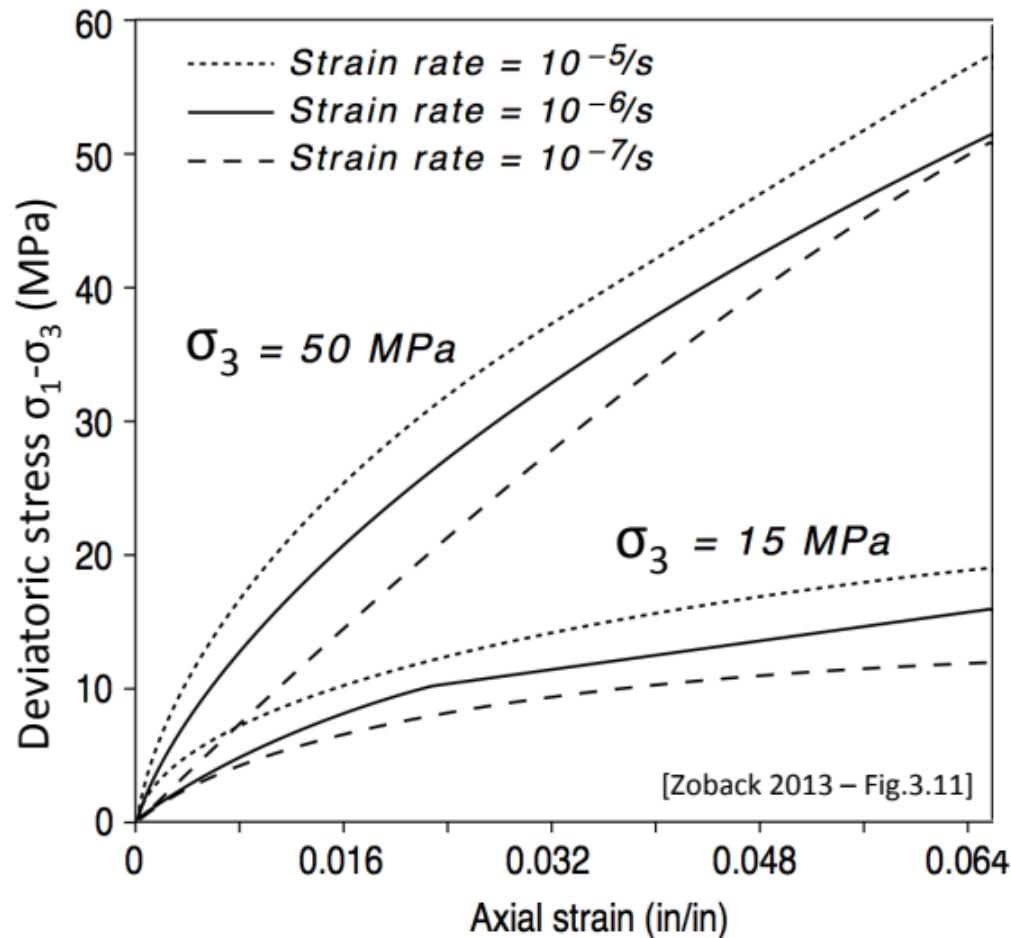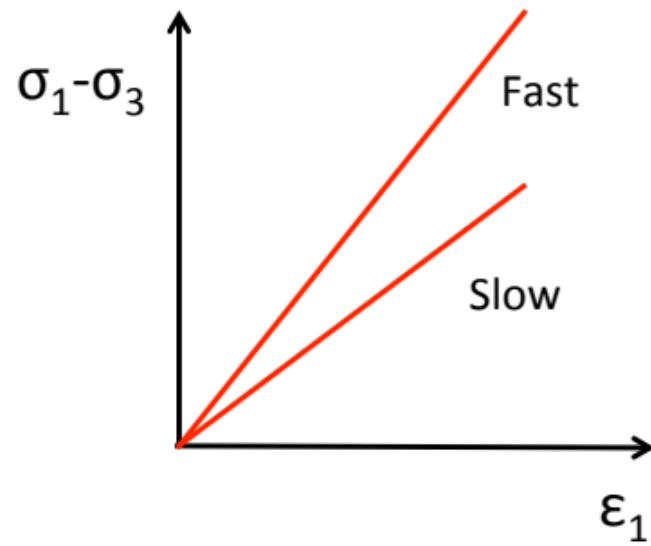



Creep strain at constant stress

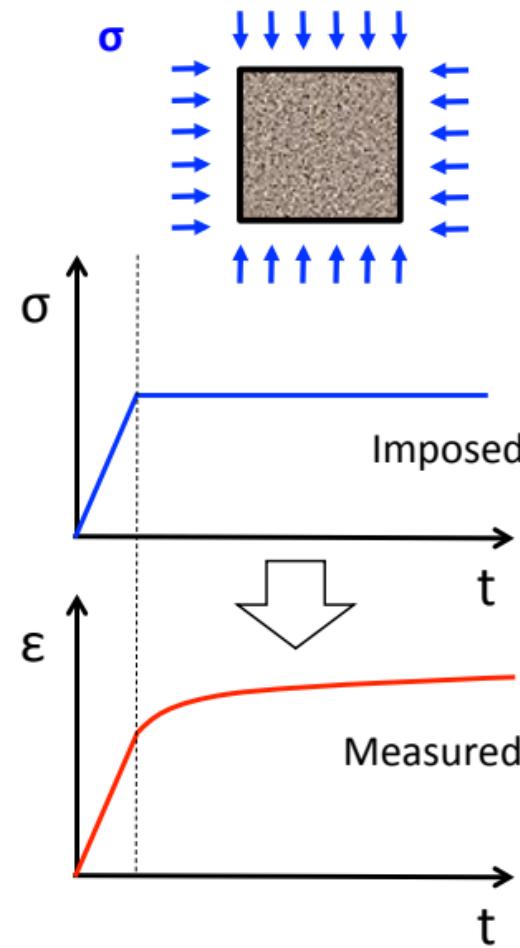


a.

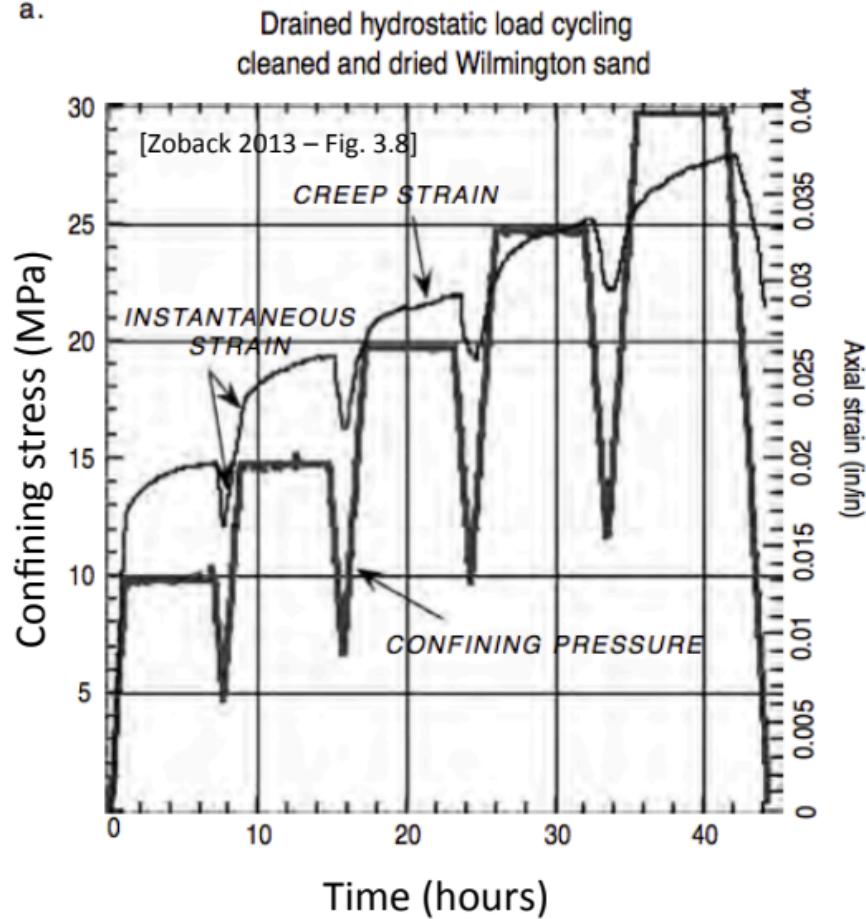


(2) Stress relaxation at constant strain

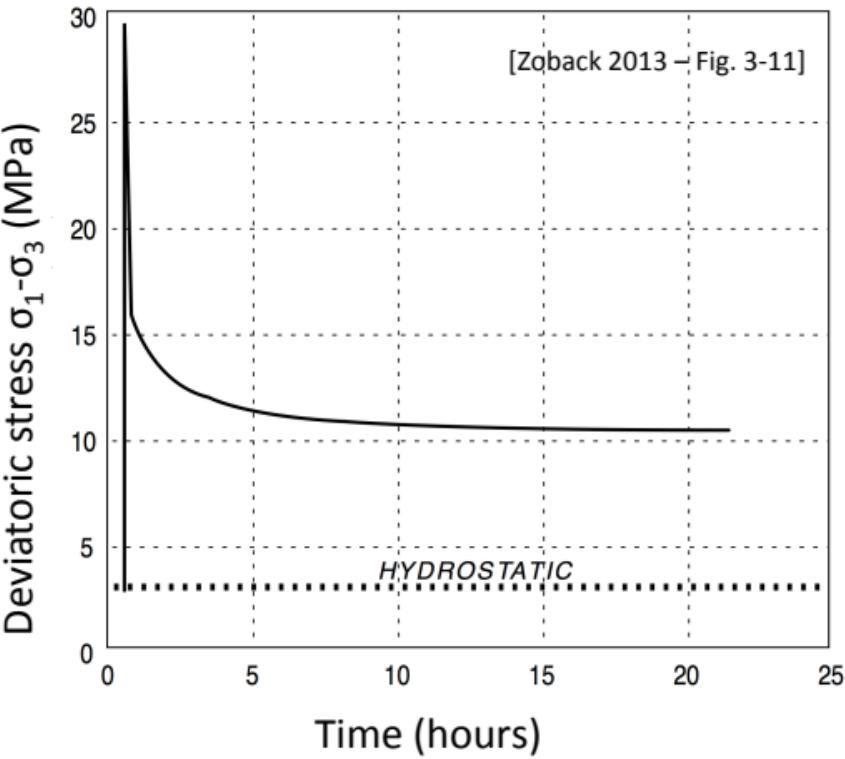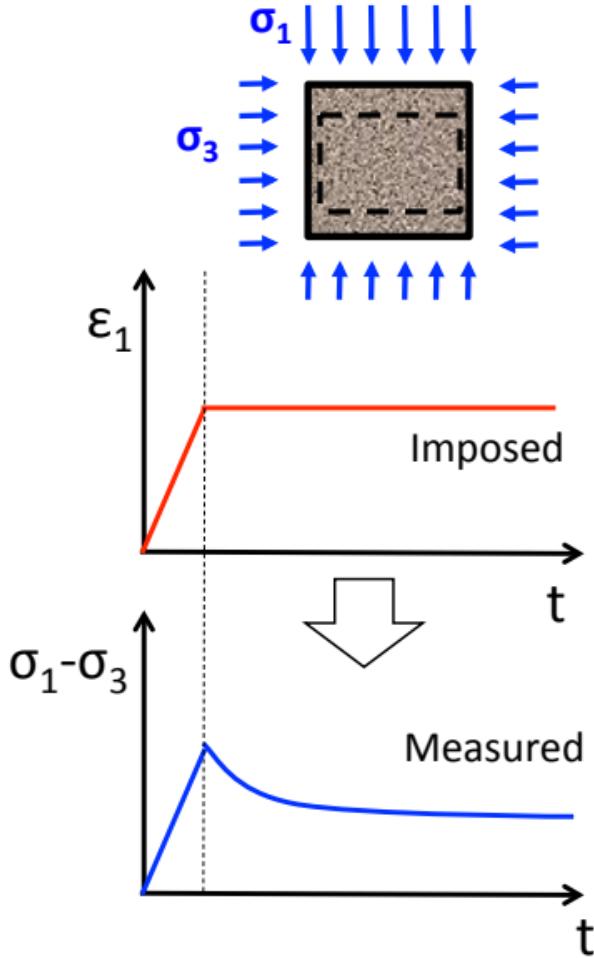

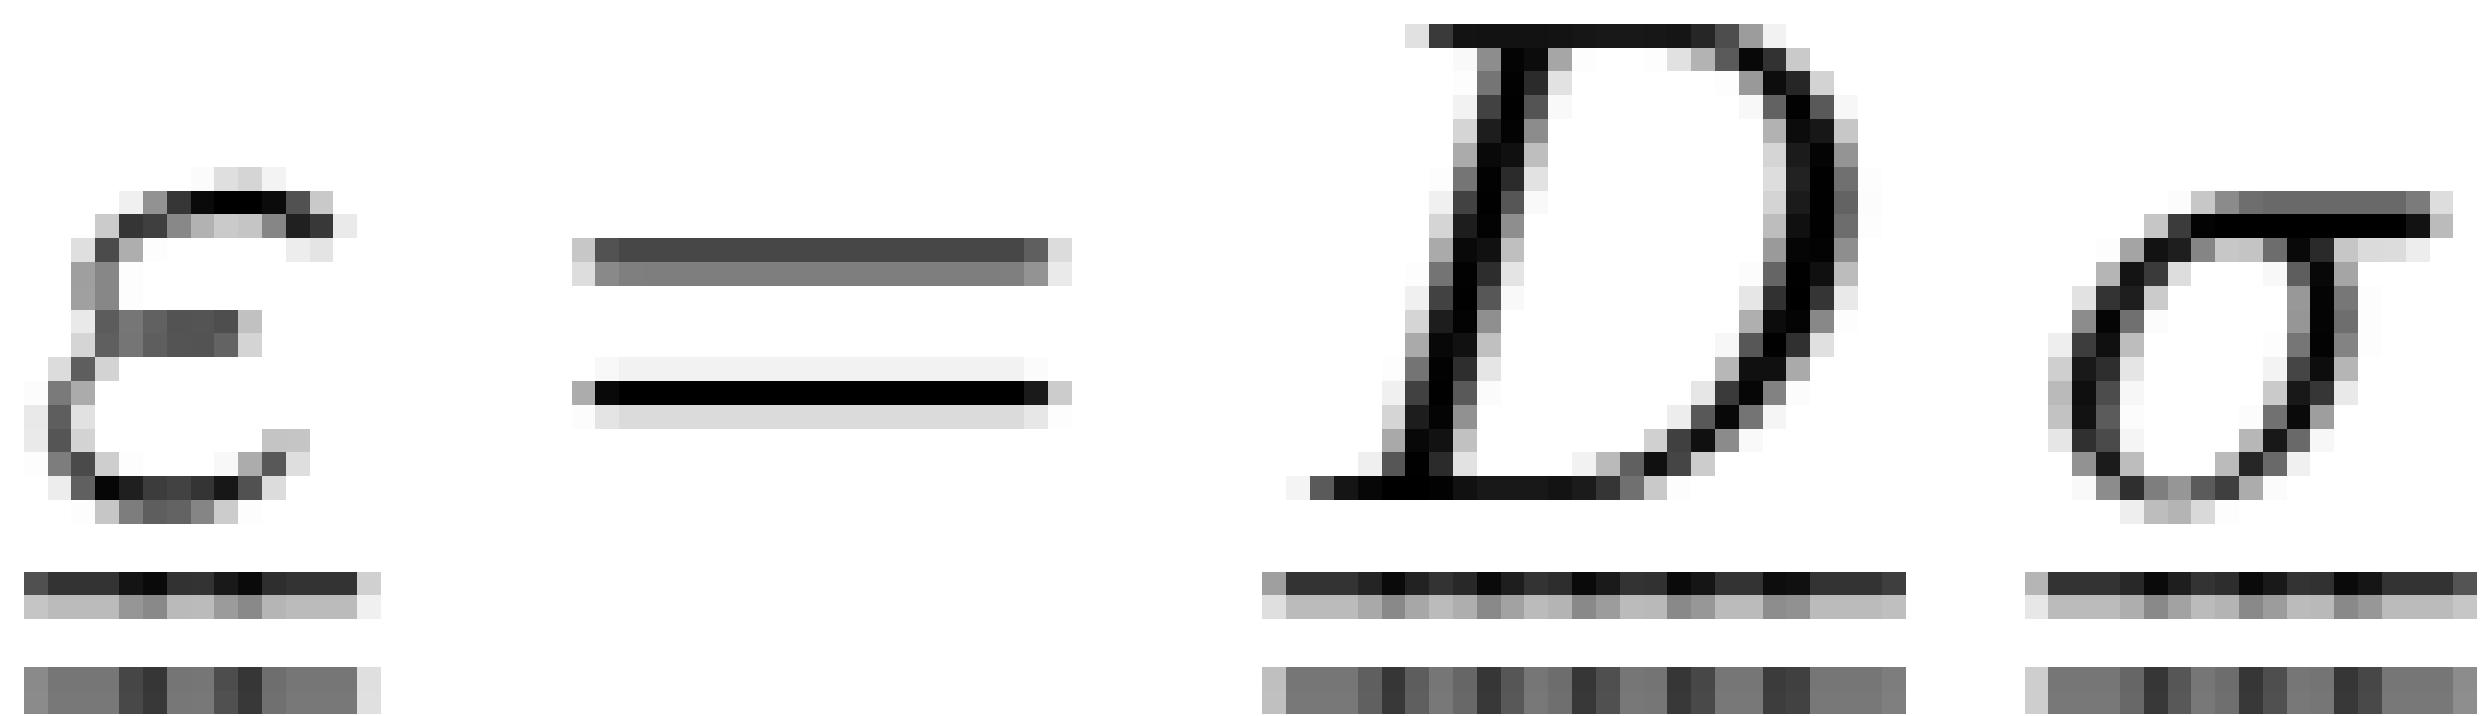



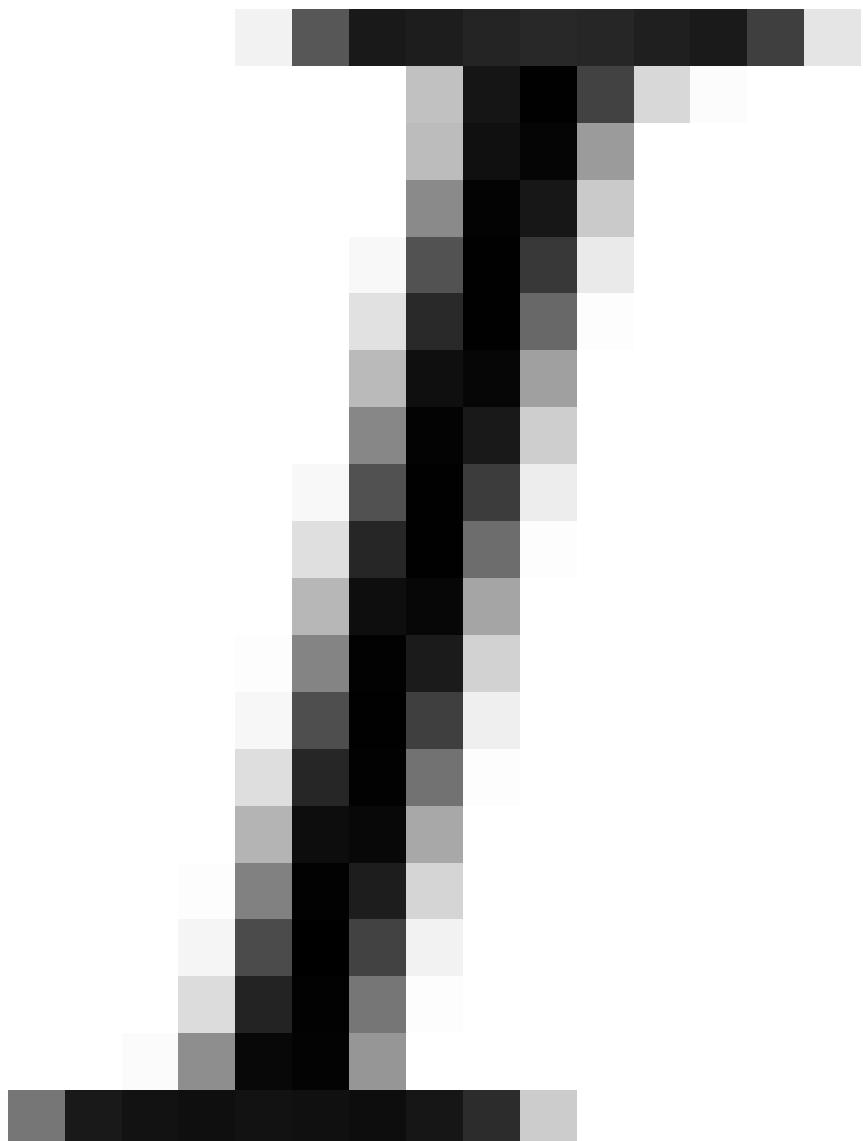

α

=

1


-


$K_{drained}$




K_{unq} .










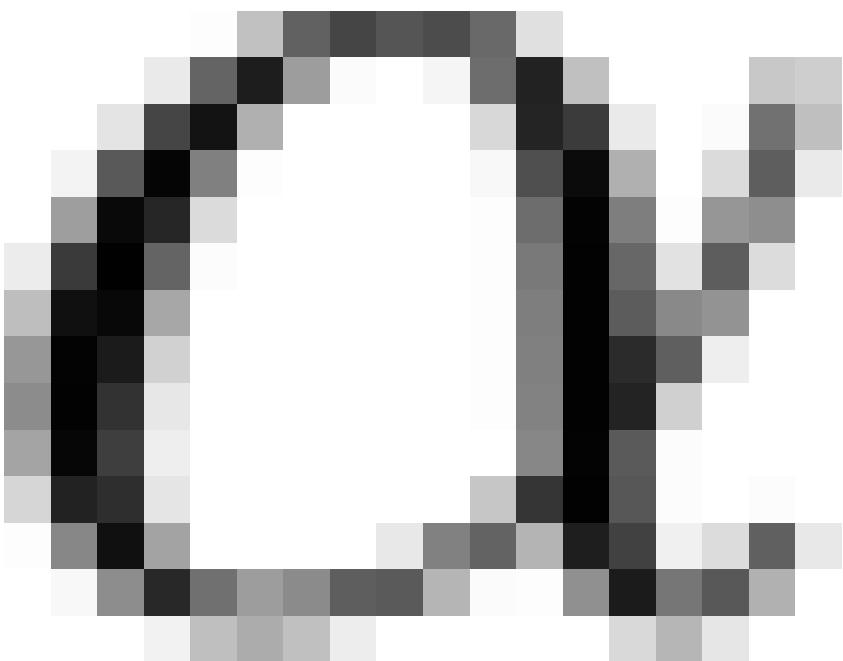


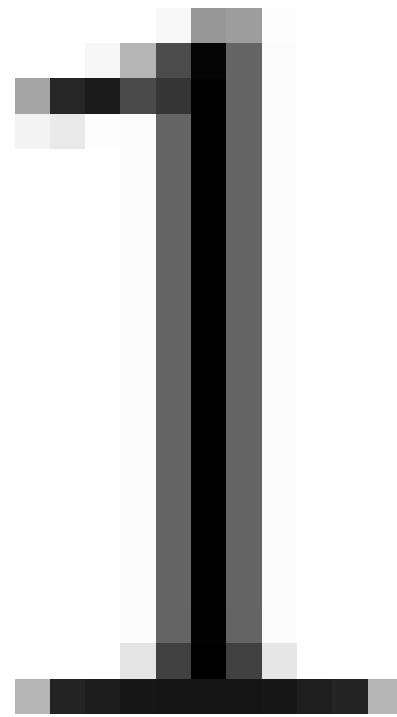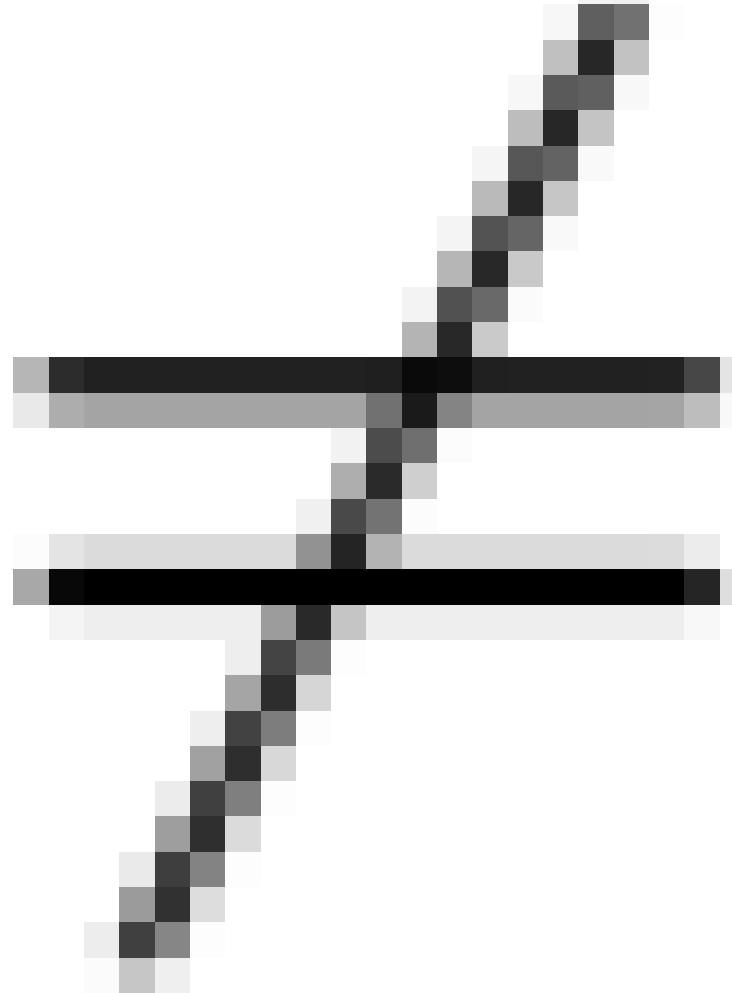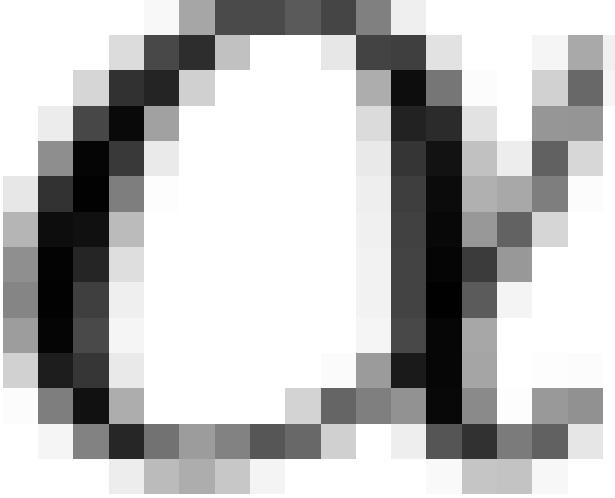

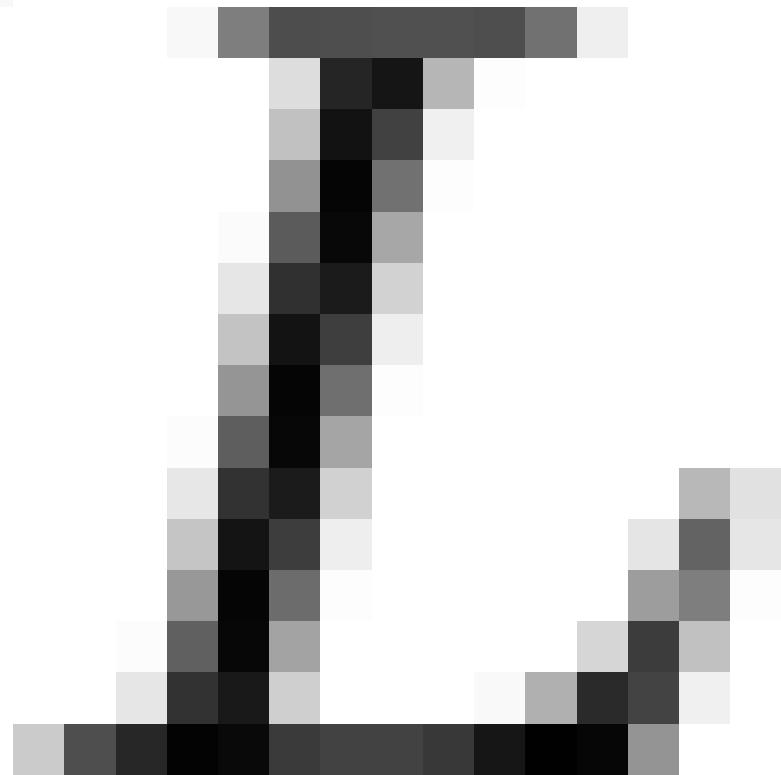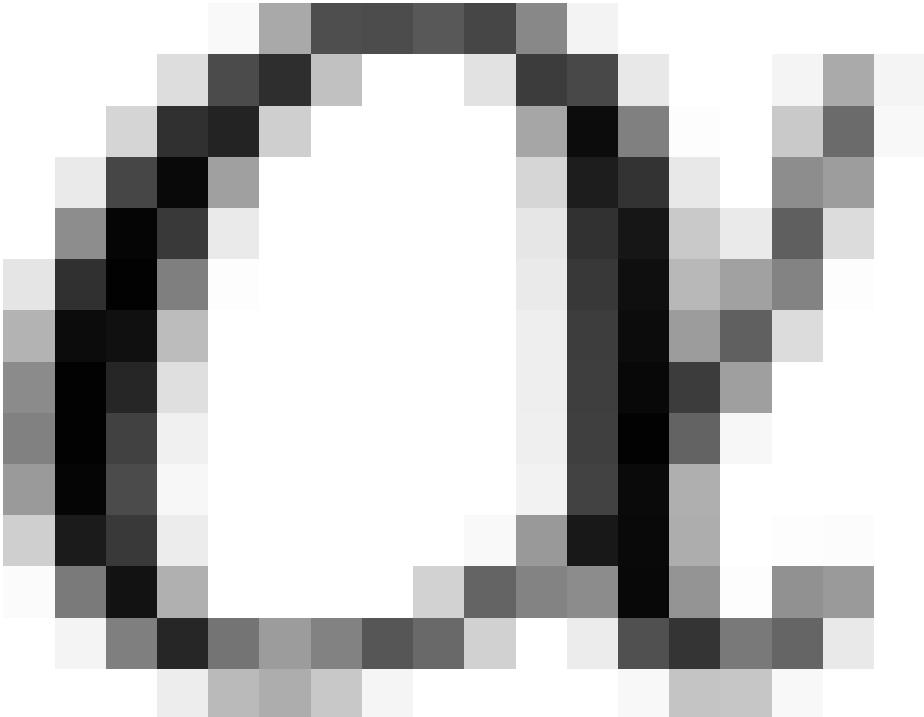


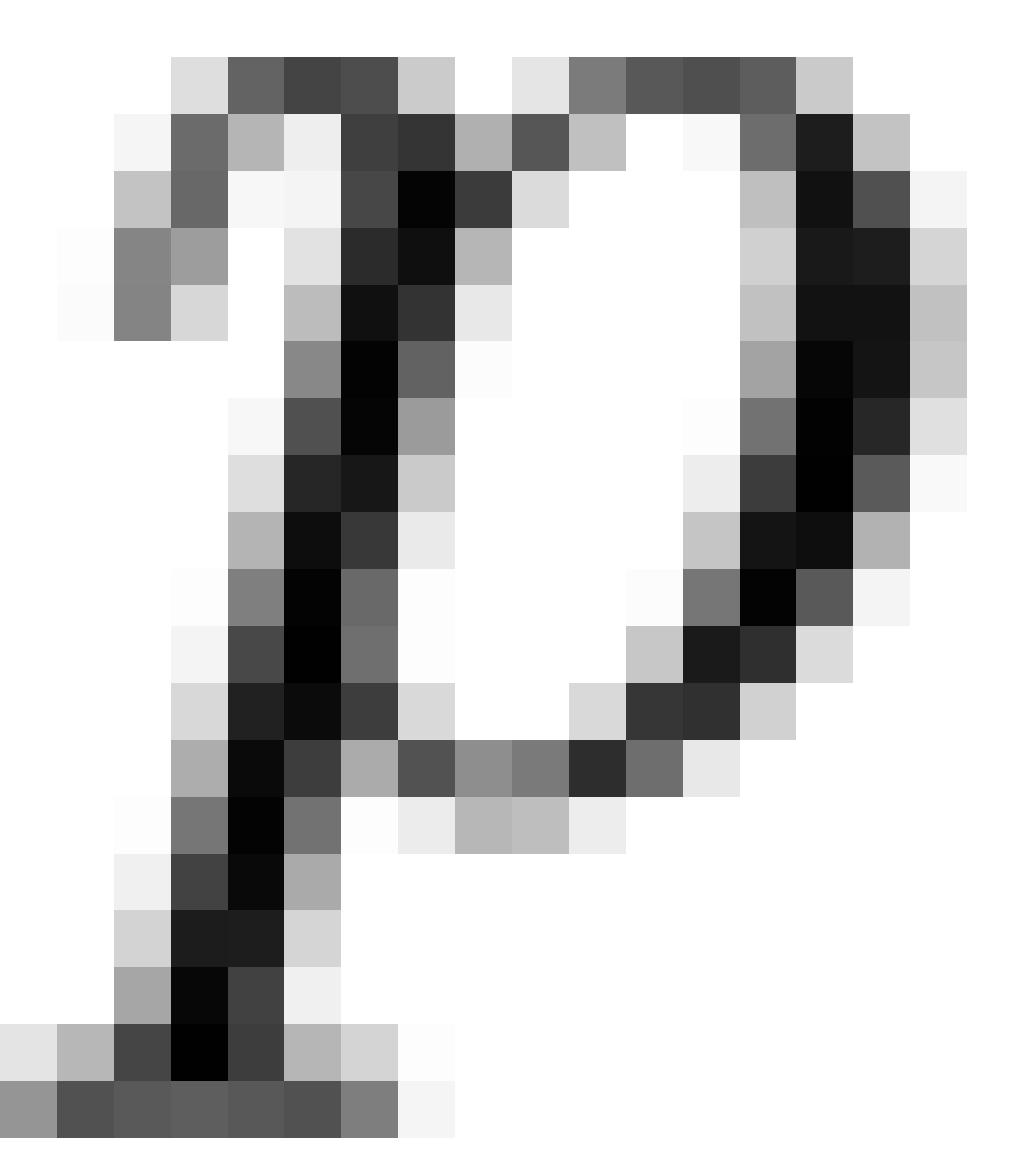


$$\alpha_L = \frac{1}{LDT} \frac{dL}{dp}$$

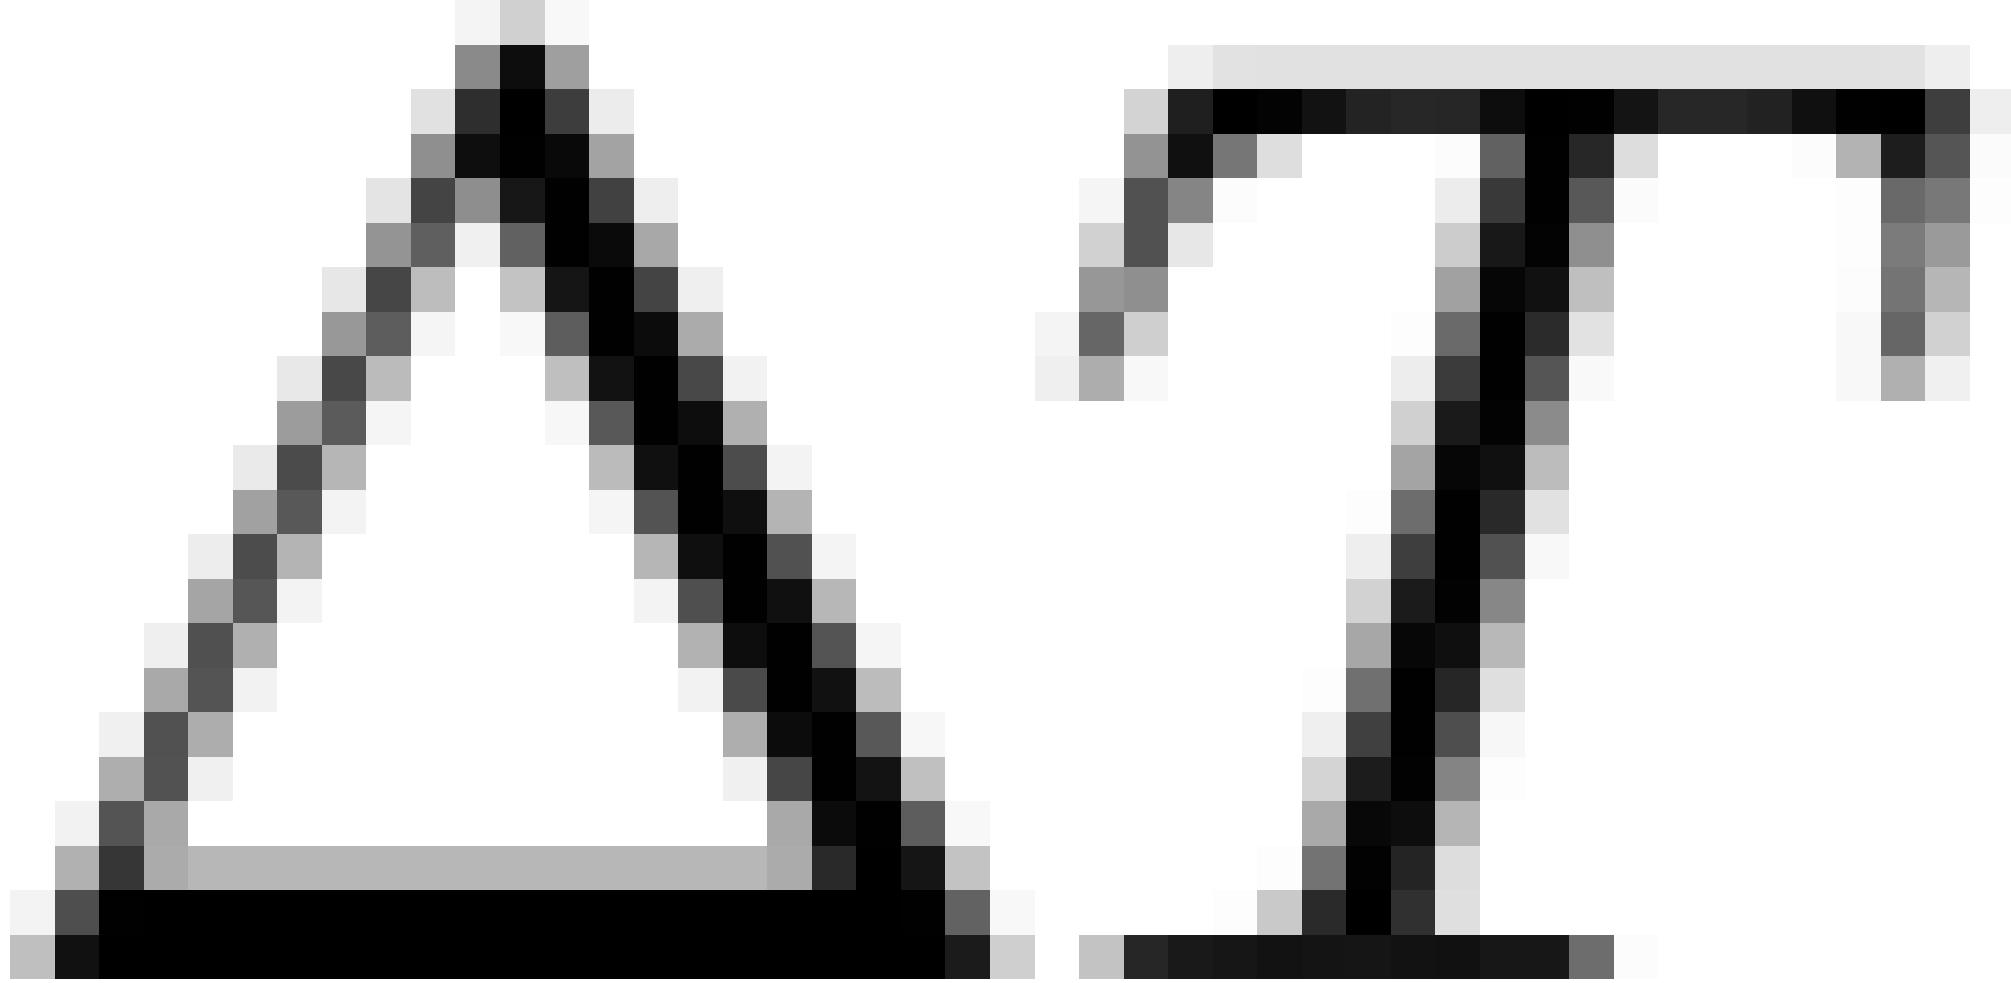

$$\left\{ \begin{array}{lcl} \sigma_{11} & = & (\lambda + 2\mu) \varepsilon_{11} + \lambda \varepsilon_{22} + \lambda \varepsilon_{33} + 3K\alpha_L \Delta T \\ \sigma_{22} & = & \lambda \varepsilon_{11} + (\lambda + 2\mu) \varepsilon_{22} + \lambda \varepsilon_{33} + 3K\alpha_L \Delta T \\ \sigma_{33} & = & \lambda \varepsilon_{11} + \lambda \varepsilon_{22} + (\lambda + 2\mu) \varepsilon_{33} + 3K\alpha_L \Delta T \\ \sigma_{12} & = & 2\mu \varepsilon_{12} \\ \sigma_{13} & = & 2\mu \varepsilon_{13} \\ \sigma_{23} & = & 2\mu \varepsilon_{23} \end{array} \right.$$

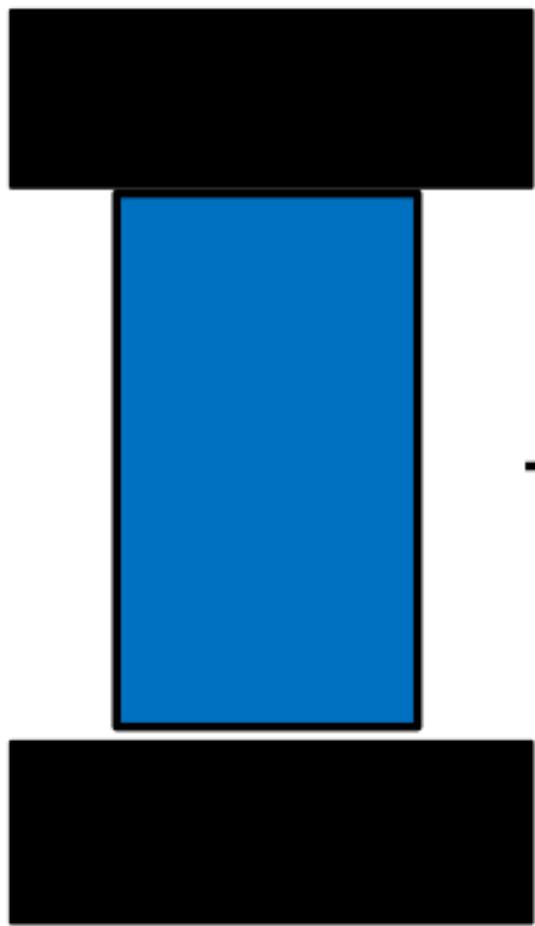



ΔT

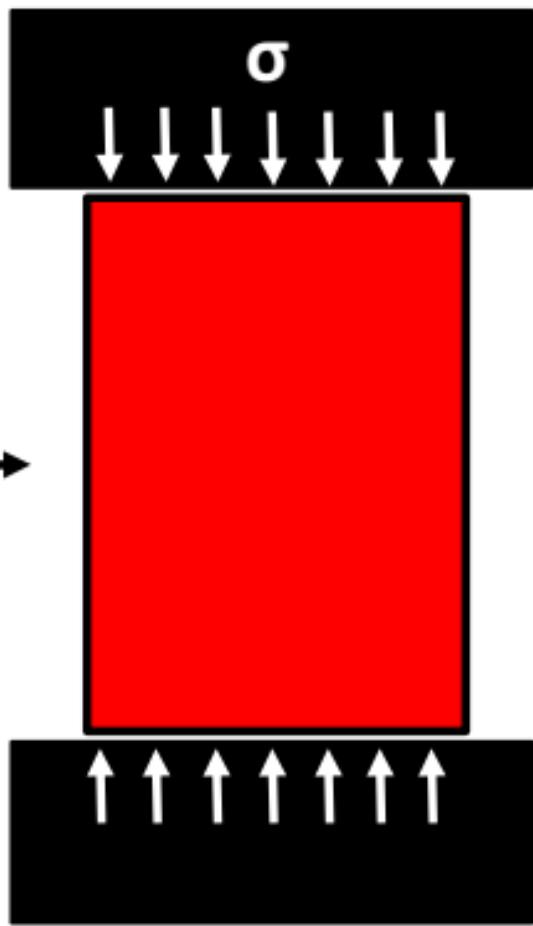





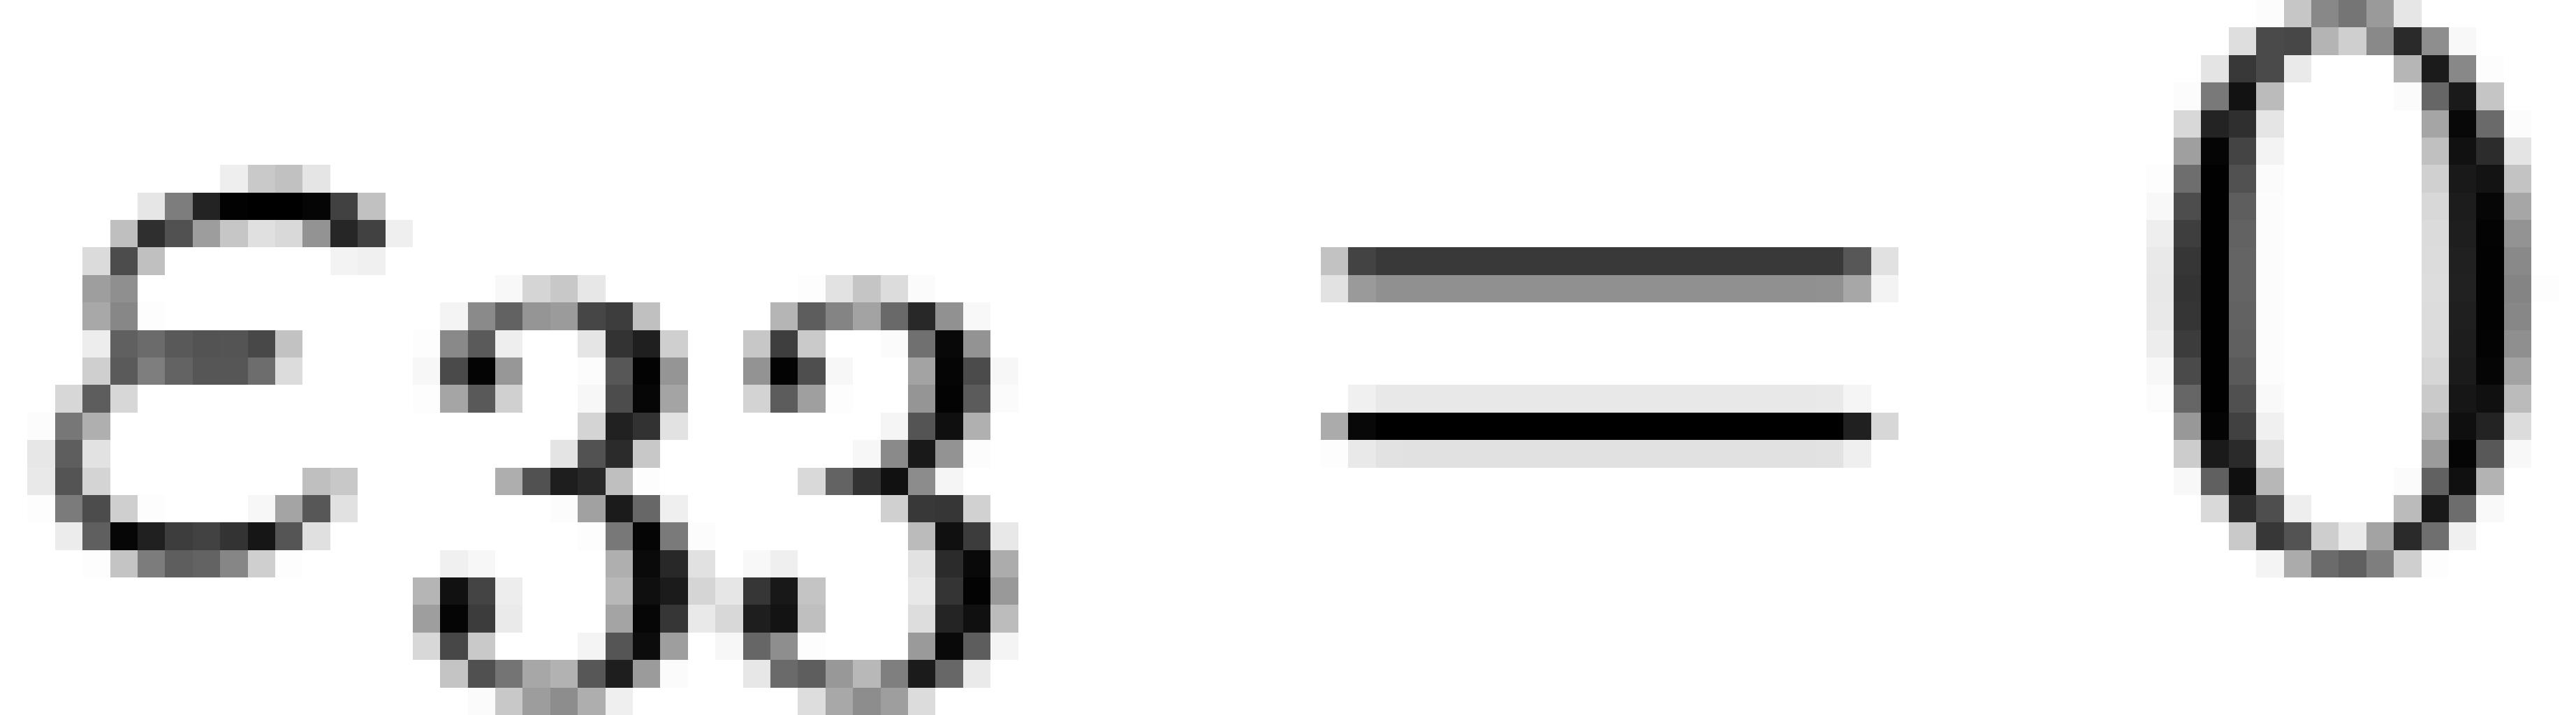

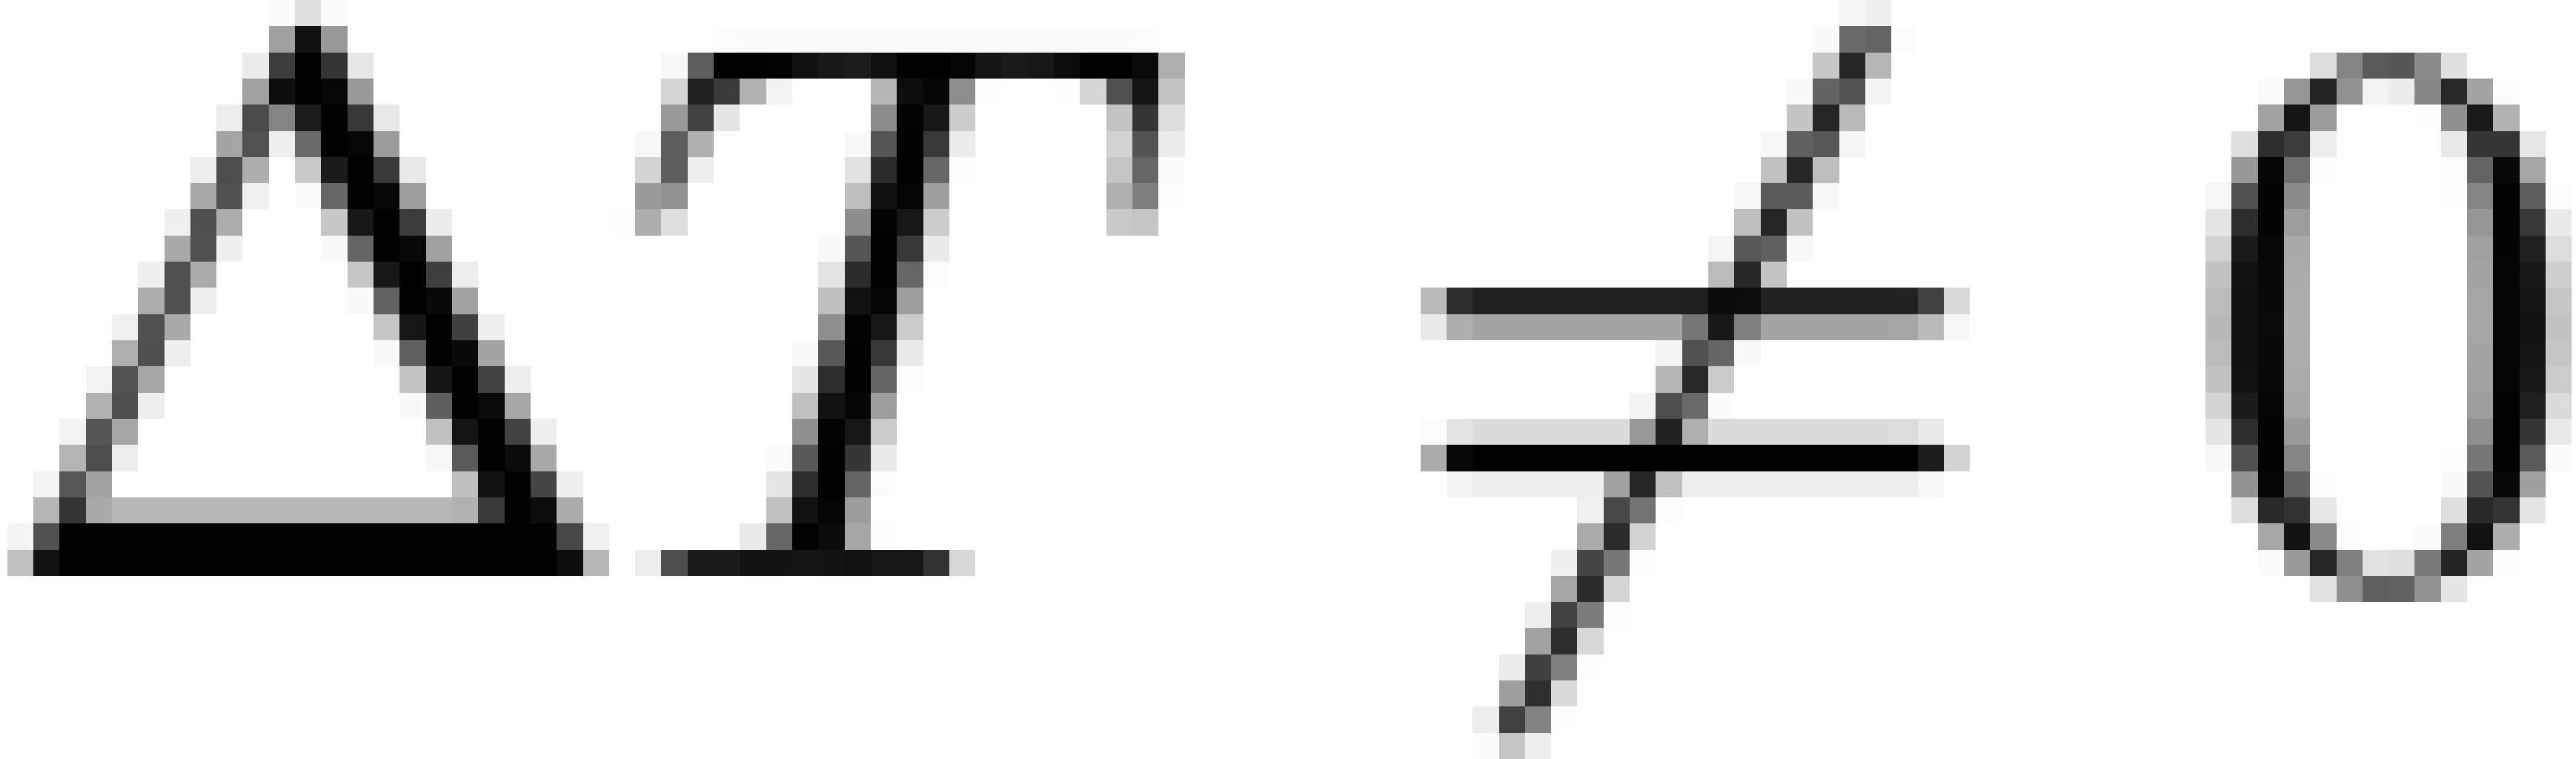

$$\begin{aligned} \sigma_{11}^0 &= (\lambda + 2\mu) \epsilon_{11} + \lambda \epsilon_{11} + 3K \alpha_L \Delta T \\ \sigma_{33} &= \lambda \epsilon_{11} + \lambda \epsilon_{11} + 3K \alpha_L \Delta T \end{aligned}$$

σ_{33}

$=$

$$\frac{6}{3} \mu K$$

$K \alpha L \Delta T$



