Analog Transmission of Vocoder Features

February 22, 2024

Given a vector of vocoder features \mathbf{f} , use an autoencoder E to map them to a dimension d latent vector \mathbf{z} where d is even. The magnitude of each element z_i of \mathbf{z} is constrained to a maximum of 1, but unlike digital modulation is continuously valued and not constrained to a discrete set of points. For bandwidth efficient transmission over the channel the elements of \mathbf{z} are mapped to d/2 complex symbols \mathbf{q} . Compared to classical digital modulation, the elements of \mathbf{z} can be considered BPSK symbols (continuously valued, analog bits), and the elements of \mathbf{q} analog QPSK symbols.

Our goal is to determine if reasonable speech quality can be obtained over a channel of bandwidth $B<3000~{\rm Hz}$ and SNR (measured in $B=3000~{\rm Hz}$) of between 0 and 6dB, roughly the lower limit of Single Side Band (SSB) - a common power and bandwidth efficient form of analog radio communication.

1 Simulation of AWGN Channels

The autoencoder output **z** is updated every $T_z = 1/R_z$ seconds, giving a BPSK symbol rate of:


$$R_b = d/T_z \tag{1}$$

For example with $T_z=0.04, d=80, R_b=2000$ symbols/s. The QPSK symbol rate is given by:

$$R_q = \frac{d}{2T_z} \tag{2}$$

For example with $T_z = 0.04, d = 80, R_q = 1000 \text{ symbols/s}.$

Figure 1: Real sampled off-air signal. We are interested in the blue bandpass interval of bandwidth B, which is single sided and hence complex valued. After shifting to baseband, it's power is unchanged, and it remains complex valued.

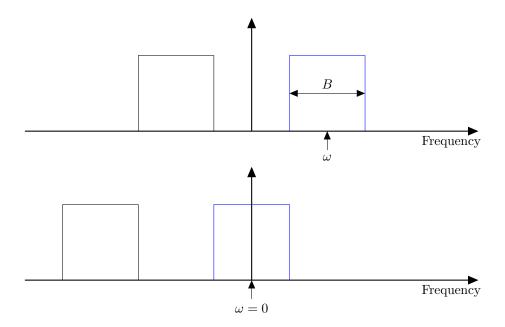

We wish to simulate an AWGN channel with a user-defined E_b/N_0 , where E_b is the energy of each BPSK symbol, and N_0 is the noise power per unit bandwidth. Consider a real valued signal sampled off air (Figure 1). We will follow convention and define signal and noise power in the "single sided" bandpass interval of the frequency spectrum with bandwidth B centered on ω . As the interval is single sided, we must use complex valued quantities to represent it.

We wish to simulate a bandpass AWGN channel at baseband ($\omega=0$). This implies a frequency shift of the complex valued signal, but the signal remains complex valued and it's power is unchanged. Note that even at baseband we must use complex valued quantities for the signal and noise. We cannot represent a bandpass baseband signal with real valued quantities. The negative frequency component is redundant and after frequency shifting can be removed by filtering.

The energy of each BPSK symbol E_b is the signal power S divided by the symbol rate $R_b = 1/T_b$. The noise per unit bandwidth is the total noise power N divided by the bandwidth B of the system. If we are simulating at one sample

per symbol, $B = R_b$:

$$\frac{E_b}{N_0} = \frac{S/R_b}{N/R_b}$$

$$= \frac{S}{N}$$

$$= \frac{A^2}{\sigma^2}$$
(3)

where A is the amplitude of each BPSK symbol and $\sigma^2 = N$ is the variance of the complex valued noise (mean noise energy per sample). Given a set point E_b/N_0 :

$$\sigma = \frac{A}{\sqrt{E_b/N_0}}\tag{4}$$

The complex noise sample r_i can be generated as:

$$r_i = \frac{\sigma}{\sqrt{2}} (\mathcal{N}_{2i}(0,1) + j\mathcal{N}_{2i+1}(0,1))$$
 (5)

where $\mathcal{N}_i(0,1)$ is the i-th sample of a unit variance, zero mean, real Gaussian noise source. Note the noise power is split evenly between the real and imaginary arms. Our symbols passing through an AWGN channel can be simulated at complex baseband as:

$$\hat{z}_i = z_i + r_i$$

$$\hat{q}_i = q_i + r_i$$
(6)

If the noise is zero mean, we can estimate σ^2 over K noise samples r_i as:

$$\sigma^2 = E[|r_i|^2] = \frac{1}{K} \sum_{i=0}^{K-1} |r_i|^2$$
 (7)

2 SNR Measurement

In order to compare with other methods of speech communication that have varying bandwidths B, it is useful to formulate expressions for estimating SNR from the BPSK and QPSK symbols. The Signal to Noise ratio (SNR) is given by:

$$\frac{S}{N} = \frac{E_b R_b}{N_0 B}$$

$$= \frac{E_q R_q}{N_0 B}$$
(8)

A noise bandwidth B needs to be selected; common choices are $B=R_b$, in which case $S/N=E_b/N_0$; for HF radio B=3000 Hz to compare with existing

analog and digital voice waveforms; or B=1 to obtain a normalised C/N_0 carrier power to noise density ratio.

At one sample per symbol, the power, the mean energy of each QPSK symbol over a window of K samples is given by:

$$E_q = E[|q_i|^2] = \frac{1}{K} \sum_{i=0}^{K-1} |q_i|^2$$
(9)

As each QPSK symbol contains 2 BPSK symbols, the energy is split evenly:

$$E_b = E_q/2 \tag{10}$$

For example if the symbol amplitude is A=1, $E_b=A^2=1$, then $E_q=1+1=2$. To model transmission over multipath channels using OFDM we arrange the QPSK symbols as N_c parallel carriers, each running at a symbol rate of $R_s=R_q/N_c$ symbols/s, where R_s is chosen based on delay spread considerations. Typical values for HF modems are $N_c=20$ and $R_s=50$ Hz. However the OFDM carriers are arranged such that the total symbol rate over the channel remains constant. So for a given signal power E_q and E_b remain constant (Table 1).

Waveform	N_c	R_s	R_q	R_b	E_q	E_b
Single Carrier BPSK	1	-	-	2000	-	S/2000
Single Carrier QPSK	1	-	1000	2000	S/1000	S/2000
OFDM QPSK	20	50	1000	2000	S/1000	S/2000

Table 1: E_b and E_q examples for single and multi-carrier OFDM waveforms for constant carrier power S

In order to evaluate the ML system early in the development process it is important to ensure the noise is correctly calibrated. The expressions above can be used to check the noise injection process:

- 1. Set a target E_b/N_0 for the simulation run, and calculate σ using (4).
- 2. Establish the equivalent target SNR from (8) evaluated using the target E_b/N_0 .
- 3. After the simulation run measure $E_q=E[|q_i|^2]$ over a sample of transmitted symbols. Note that in general $E_q\neq 2$ as the encoder outputs continuous values.
- 4. Calculate measured SNR using (8) and compare.

The calibration of the noise injection can be checked by replacing the encoder output z_i with discrete PSK symbols to create a digital modem, then measuring

the BER at E_b/N_0 points, and comparing to the theoretical BER given by:

$$BER_{awgn} = 0.5erfc(\sqrt{E_b/N_0})$$

$$BER_{multipath} = 0.5\left(1 - \sqrt{\frac{E_b/N_0}{E_b/N_0 + 1}}\right)$$
 (11)

3 Glossary

Symbol	Explanation	Units
\overline{B}	noise or signal bandwidth	Hz
d	dimension of latent vector \mathbf{z}	
E_b/N_0	energy per BPSK symbol on spectral noise density	
E_q/N_0	energy per QPSK symbol on spectral noise density	
N	total noise power	Watts
N_c	Number of carriers	
${f q}$	vector of QPSK symbols	
q_{i}	single QPSK symbol, element of \mathbf{q}	
R_b	BPSK symbol rate	symbols/second
R_q	QPSK symbol rate	symbols/second
R_s	OFDM per carrier QPSK symbol rate	symbols/second
R_z	latent vector update rate	Hz
SNR	signal to noise Ratio	
S	total signal (carrier) power	Watts
T_b	BPSK symbol period	seconds
T_q	QPSK symbol period	seconds
T_s	OFDM per carrier QPSK symbol period	seconds
T_z	time between latent vector updates	seconds
r_i	noise sample	
${f z}$	Autoencoder output latent vector	
z_i	single latent vector element of \mathbf{z} , a BPSK symbol	

Table 2: Glossary of Symbols