

Pins 1.10

# **Features**

• Any number of any type of pin

Pin\_1 Pin\_2

- Rapid setup of pin parameters
- Allows PSoC Creator to automatically place and route signals
- Pin\_3 Pin\_4
- Allows interaction with 1 or more pins simultaneously

# **General Description**

The Pins (upper case 'P') component is the preferred way for hardware resources to connect to a physical port-pin (lower case 'p'). It provides access to external data via an appropriately configured IO. It allows electrical characteristics to be associated with one or more pins; these characteristics are then used by PSoC Creator to automatically place and route the signals constrained within the component.

Pins can be used from a schematic and/or software. To access a Pins component from component APIs, the component must be contiguous and non-spanning. This ensures that the pins are guaranteed to be mapped into a single physical port. Pins components that span ports or are not contiguous can only be accessed from a schematic or with the global per-pin APIs.

Note #defines are created for each pin in the Pins component to be used with global APIs.

A Pins component can be configured into any legal combination of types and, for convenience, the Component Catalog provides four preconfigured components: Analog, Digital Bidirectional, Digital Input, and Digital Output.


# When to use a Pins Component

Use the Pins component when a design needs to generate or access an off-device signal. Pins are probably the most commonly used component in the Catalog. For example, in Cypress development and evaluation kits they are used to interface with potentiometers, buttons, LEDs, peripheral sensors such as proximity detectors and accelerometers.

# **Input/Output Connections**

This section describes the various input and output connections for the Pins component.

**Note** Pins can be configured into complex combinations of input, output, bidirectional, and analog. Simple configurations are generally shown as single pins or busses, but more complex types are shown as usual components.

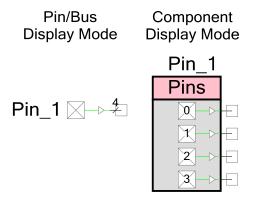


The default, and most common, configurations are shown in the following sections:

# **Analog**

When configured as analog, the terminal is shown on the right side of the symbol with the connection drawn in the color of an analog wire.

An analog Pins component may also support digital input or output connections, or both, as well as bidirectional connections.

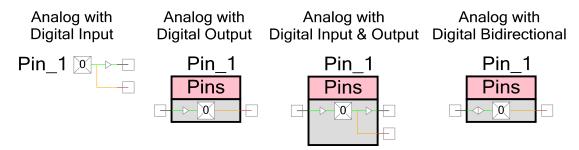


# **Digital Input**

When configured as a digital input, the terminal can be shown for use in a schematic, or hidden for software access only. When visible, the terminal is shown on the right side of the symbol. The connection is drawn in the color of a digital wire and a small input buffer.

A digital input Pins component may also support digital output and analog connections.


Digital Input with Output and Analog

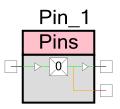

# **Digital Output**

When configured as a digital output, the terminal can be shown for use in a schematic, or hidden for software access only. When visible, the terminal is shown on the left side of the symbol. The connection is drawn in the color of a digital wire and a small output buffer.

A digital output Pins component may also support digital input and analog connections.

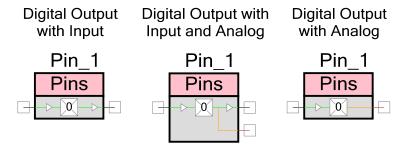




# **Digital Output Enable**


This terminal is shown when a component is configured with digital output using a schematic connection, and when the digital output enable has been selected. The digital output enable appears on the left side of the symbol into the digital output buffer. It is drawn in the color of a digital wire.

When set to Display as Bus, only one output enable is provided regardless of the Pins component width. When not displayed as a bus, individual output enables are provided per Output signal.

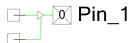

A digital output enable Pins component may also support input connections.

Digital Output Enable with Input

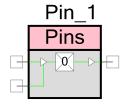


# **Digital Bidirectional**

When configured as digital bidirectional, the terminal is shown on the left side of the symbol with the connection drawn in the color of a digital wire.

A bidirectional Pins component may also support analog connections.

Digital Bidirectional with Analog

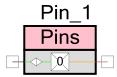



#### Vref

To configure a Pins component to use a Vref signal:

- use a Digital Input or Bidirectional terminal and configure the Threshold parameter to "Vref" on the Input subtab, or
- use a Digital Output or Bidirectional terminal and configure the **Drive Level** to "Vref" on the **Output** subtab


Using a Vref requires an SIO pin, indicated with a pink outline. The Vref specifies the voltage supplied to the pin. All pins are capable of supplying their respective Vddio supply voltage. SIO pins are also able to supply a programmable or analog routed voltage for interface with devices at a different potential than the SIO's Vddio voltage.

The Vref signal displays on the right side of the component, coming out of the bottom of the SIO single pin or the SIO pin pair depending on how it is configured.

Vref will be used with another digital connection.


Note When using VRef, Analog cannot be used.

Vref with Digital Input & Output

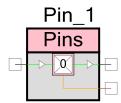

### **IRQ**

To configure a Pins component with an interrupt, you must use a Digital Input and configure the **Interrupt** parameter on the **Input** subtab. When interrupts are used, the component displays in component mode, and the IRQ is displayed coming out of the bottom of the component. One typical use case is to hook an Interrupt component to this terminal.

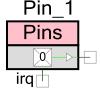

An Interrupt can be used in all types of the Pins component except analog, as long as you include Digital Input.




# **Component Parameters**

Drag a Pin component onto your design and double-click it to open the Configure dialog. This dialog is used to set component-wide parameters, such as the power-on reset state and physical pin mapping constraints. The parameters are categorized into separate tabs.

### Pins Tab

The **Pins** tab has three areas: a toolbar, pin tree, and another set of tabs (called subtabs). The toolbar is used to determine how many physical pins are managed by the component and determine their order. The subtabs are used to set the pin-specific attributes, such as type, direction, drive mode, and initial state. The pin tree works with the subtabs to allow you to choose the specific pin(s) to which these attributes are applied.

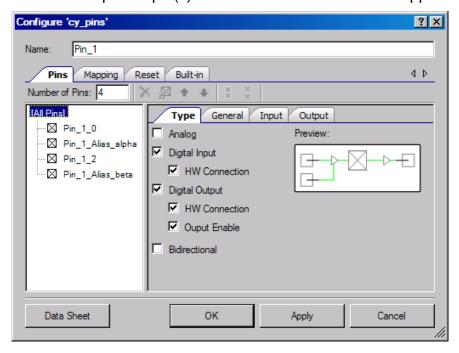

#### **Toolbar**

Contains these commands:

• **Number of Pins** – The number of device pins controlled by the component. Valid values are between 1 and 64. Default Value: 1.

**Note** Some configurations can only be placed into a single physical port; therefore, the number of pins is limited to 8 or less. When the component is configured as noncontiguous and spanning, the number of pins can be set up to 64.

- Delete Pin Deletes selected pin(s) from the tree.
- Add / Change Alias Opens a dialog to add or change the alias name for a selected pin in the tree. You can also double-click a pin or press [F2] to open the dialog.



- Move Up / Down Moves the selected pin(s) up or down in the tree.
- Pair / Unpair SIOs Pairs or unpairs selected SIO pins (denoted by a pink outline) in the tree.

This control specifies whether or not pins that require SIO should be placed in the same SIO pair on the device. Pairing pins results in fewer physical SIO pins being "wasted." This is because an unpaired pin that requires SIO cannot share its SIO pair on the device with another pin that requires SIO. For pins to share an SIO pair on the device, they must have their per-pair settings configured the same way and be adjacent.

A pin requires SIO if **Hot Swap** set to true, **Threshold Level** is set to anything but LVTTL or CMOS, **Drive Level** set to Vref, and/or **Drive Current** is set to a 25mA sink.

#### Pin Tree

This area displays all of the pins for the component. You can individually select one or more pins to use with the toolbar commands and subtabs.


## Type Subtab

This is the default subtab displayed for the **Pins** tab. This is where you choose the type of pins for your component using the checkboxes. The preview area shows what the selected pin(s) type will look like with various options selected.

- Analog
- Digital Input
  - HW Connection This parameter determines whether or not the digital input terminal
    for an input pin is displayed in the schematic. If displayed, the pin provides a digital
    signal to the Digital System Interconnect (DSI) for use with hardware components.
    Independent of this selection, all pins may always be read by the CPU through
    registers or APIs. This setting is ignored when terminals are displayed as a bus.
- Digital Output
  - HW Connection This parameter determines whether or not the digital output terminal
    for a given output pin is displayed in the schematic. If displayed, the pin outputs the
    digital signal supplied by hardware components through the DSI. If not displayed, the
    output logic level is determined by CPU register or API writes. This setting is ignored
    when terminals are displayed as a bus.
  - Output Enable
- Bidirectional



#### **General Subtab**

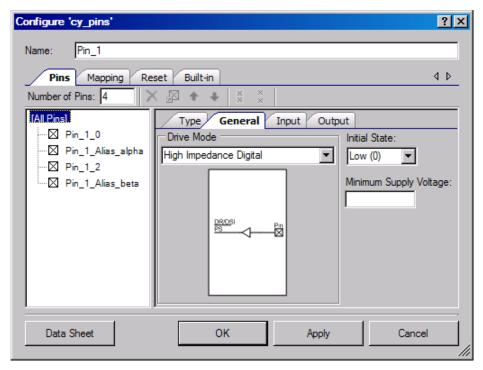

This subtab allows you to set up the drive move, initial state, and minimum supply voltage of the selected pin. The settings on this subtab include:

- Drive Mode This parameter configures the pin to provide one of the eight available pin drive modes. The defaults and legal choices are influenced from the selections on the Type subtab. Refer to the device data sheet for more details on each drive mode. A diagram shows the circuit representation for each drive mode as they are selected.
  - If the type is Digital Input or Digital Input/Analog, the default is High Impedance Digital.
  - If the pin type is Analog, the default is High Impedance Analog.
  - If the pin type is Bidirectional or Bidirectional/Analog, the default is Open Drain, Drives Low.
  - All other pin types default to Strong Drive.
- Initial State This parameter specifies the initial value written to the pin's Data Register after Power-On Reset (POR). All pins default to a logic low (0, False) in hardware at POR. The Initial State is written to the pin just after the Drive Mode is configured. The Initial State is configured high by default only for the "Resistive Pull Up" and "Resistive Pull Up/Down" drive-modes to ensure the pull up resister is active.


**Note** This should not be confused with the reset state under the main **Reset** tab. That attribute affects the state of the pin from the moment of reset (and should not be modified often to avoid damaging the device) while this is the post-boot state of the pin, which is most-often the important state.



 Minimum Supply Voltage – This parameter selects the requested minimum high logic level output voltage. The requested voltage must be provided by one of the Vddio supply inputs. This selection ensures that the component will be mapped onto pins that can support its required output voltage. If left blank, the component has no voltage requirements, allowing placement to a pin supplied by any of the available Vddio voltages.

Valid values are determined by the settings in the **System** tab of the *<project>.cydwr* file for Vio0/Vio1/Vio2/Vio3 Vio3 and to a lesser extent Vddd. Depending on the selected device, you may have a nominal number of USB pins that will use Vddd as their voltage available for placement. The pin will not be placeable if this value is not less than or equal to the maximum value set for those settings. This range check is performed outside this dialog; the results will appear in the Notice List window if the check fails.

## **Input Subtab**

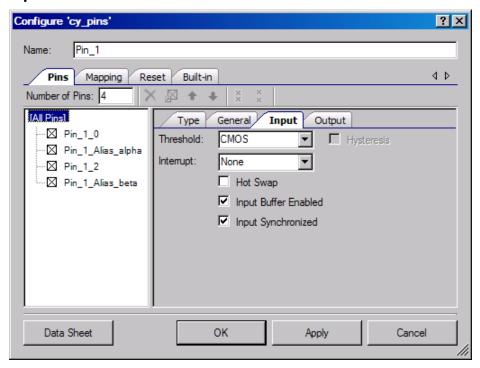

This subtab is used to specify input settings. If the pin type does not use Input or Bidirectional this tab is disabled as no input information needs to be specified.

- Threshold This parameter selects the threshold levels that define a logic high level (1, True) and a logic low level (0, False). CMOS is the default and should be used for the vast majority of application connections. The other threshold levels allow for easy interconnect with devices with custom interface requirements that differ from that of CMOS.
  - CMOS Default
  - LVTTL
  - CMOS or LVTTL




- 0.5 x Vddio Requires SIO
- 0.4 x Vddio Requires SIO
- 0.5 x Vref Requires SIO
- Vref Requires SIO
- Hysteresis Enables/Disables the SIO differential hysteresis for the pin. This feature is disabled if the Threshold is CMOS or LVTTL.
  - Disabled Default
  - Enabled
- Interrupt This parameter selects whether the pin is able to generate an interrupt and, if selected, the interrupt type. The pin interrupt may be generated with a rising edge, falling edge, as well as either edge or both edges. If set to anything but None, the component must be configured to be contiguous to ensure it is mapped into a single physical port.
  - None Default
  - Rising edge
  - Falling edge
  - Any edge
- Hot Swap A pin configured to support hot swap capability will be mapped to an SIO pin supporting this capability in hardware. Hot Swap capability allows the voltage present on the pin to raise above the pins Vddio voltage, up to 6.0V. Hot Swap also allows a pin with any voltage up to 6.0V present to not leak current into the PSoC device even when the PSoC device is not powered.
  - No Default
  - Yes Requires SIO
- Input Buffer Enabled This parameter determines if the pin's digital input buffer is enabled. The digital buffer is required to read or use the logic level present on a pin through DSI routing or a CPU read. The input buffer is required to use the pin as a digital input. Analog pins disable the digital input buffer by default to reduce pin leakage in low power modes. If the pin type is Analog, the default is Disabled. All other pin types default to Enabled.
  - Enabled
  - Disabled



- Input Synchronized Input Synchronization occurs at pins to ensure all signals entering
  the device are synchronized throughout the system for proper device operation. Input
  synchronization may be optionally disabled at the pin in limited cases where an
  asynchronous signal is required for application performance and does not violate device
  operational requirements. Refer to the TRM or device data sheet for use details.
  - Yes Default
  - No

## **Output Subtab**

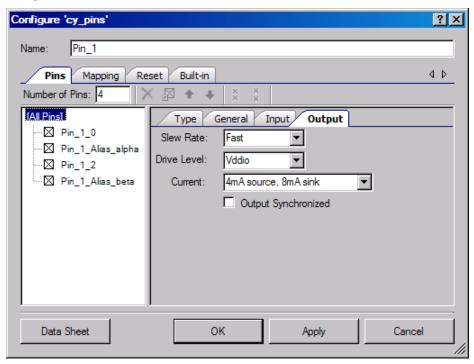


This tab is used to specify output settings. If the type is not Output or Bidirectional this tab is disabled because no output information needs to be specified.

- Slew Rate The slew rate parameter determines the rise and fall ramp rate for the pin as
  it changes output logic levels. Fast mode is required for signals that switch at greater than
  1MHz. Slow mode may be selected for signals less than 1MHz switching rate and benefit
  from slower transition edge rates reducing radiated EMI and coupling with neighboring
  signals.
  - Fast Default
  - Slow



- Drive Level Selects the output drive voltage supplied sourced by the pin. All pins are
  capable of supplying their respective Vddio supply voltage. SIO pins are also able to
  supply a programmable or analog routed voltage for interface with devices at a different
  potential than the SIOs Vddio voltage.
  - Vddio Default
  - Vref Requires SIO
- Drive Current The drive current selection determines the maximum nominal logic level current required for a specific pin. Pins may supply more current at the cost of logic level compliance or may have a maximum value that is less than listed, based on system voltages. Refer to the device data sheet for more details on drive currents.
  - 4mA source, 8mA sink Default
  - 4mA source, 25mA sink Requires SIO
- Output Synchronized Output Synchronization can be enabled to reduce pin to pin output signal skew in high speed signals requiring minimal signal skew. Please see the TRM or device data sheet for use details.
  - Disabled Default
  - Enabled

## **Mapping Tab**

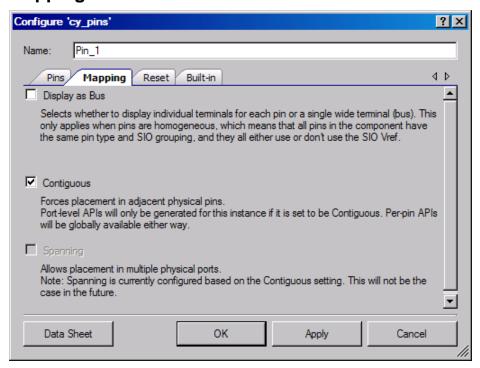

## Display as Bus

This parameter selects whether to display individual terminals for each pin or a single wide terminal (bus). This only applies when pins are homogeneous. This means that all pins in the component have the same pin type and SIO grouping, and they all either use or don't use the SIO Vref.

## **Contiguous**

Check box to force placement in adjacent physical pins. This option has the following restrictions:


- If contiguous, analog cannot be used.
- If contiguous, port level APIs will be generated for the component. If non-contiguous port level APIs will not be generated.
- If contiguous, the number of pins in the component needs to be less than or equal to 8.

## **Spanning**

Check box to allow placement in multiple physical ports. This is currently controlled by the contiguous selection. Until a future release of software offers greater flexibility and control, Contiguous implies non-spanning. Non-contiguous implies spanning.



### **Reset Tab**

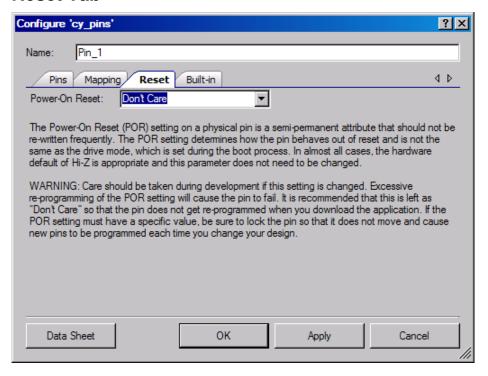

#### **Power-On Reset**

The Power-On Reset (POR) setting on a physical pin is a semi-permanent attribute that should not be re-written frequently. The POR setting determines how the pin behaves out of reset and is not the same as the drive mode. In almost all cases, the hardware default of Don't Care is appropriate and this parameter does not need to be changed.

**WARNING**: Care should be taken during development if this setting is changed. Excessive reprogramming of the POR setting will cause the pin to fail. It is recommended that this is left as Don't Care so that the pin does not get re-programmed when you download the application. If the POR setting must have a specific value, be sure to lock the pin so that it does not move and cause new pins to be programmed each time you change your design.

Don't Care – Default

When left set to Don't Care, the POR will be determined by the physical port in which this component is placed. If all the placed pins in the port are set to Don't Care, the default POR of the part will be used. Otherwise, whatever POR is specified for the other pins placed in that physical port (they must all match) will be used for the ones set to Don't Care.

- High-Z analog
- Pulled-up
- Pulled-down



# **Placement**

There is no placement specific information.

# Resources

Each signal consumes one physical pin per bit of the **Number of Pins** parameter.

# **Application Programming Interface**

Application Programming Interface (API) routines allow you to configure and use the component using software. The Pins component enables access on a per-pin and component-wide basis.

## **Per-Pin APIs**

You can access individual pins in the component by using the global APIs defined in the *cy\_boot/cypins.h* generated file. These APIs are documented in the Library Reference Guide (Help > Documentation > Reference Material) and include:

- CyPins ReadPin()
- CyPins\_SetPin()
- CyPins\_ClearPin()
- CyPins\_SetPinDriveMode()
- CyPins\_ReadPinDriveMode()

These APIs can be used with the either physical pin register name or the pin alias from the component. Accessing physical pins directly from software is not recommended because there is no safeguard against the same pins being allocated to other functions by the tool. Even if a pin is only ever accessed from software, Cypress strongly recommends the use of a Pins component. You can use the generated aliases from the component with the above APIs to safely access individual pins without performance or memory penalty.

To use the above APIs, the component generates aliases for the pin registers in the <*InstanceName>\_aliases.h* file. By default the alias is the component name with the pin number appended to it:

<InstanceName>\_x - x is the pin within the component (0 based)

If you provide an alias name in the Pins configuration dialog, then an additional #define is created with the form:

<InstanceName>\_<AliaseName>



# **Component APIs**

These APIs access all pins in the component in a single function call. Efficient implementation of component-wide APIs is only possible if all pins are placed in a single physical port on the device. They are only generated if the component is configured to be contiguous. Non-contiguous Pins components only allow access on the per-pin basis described above.

By default, PSoC Creator assigns the instance name "Pin\_1" to the first instance of a Pins component in a given design. You can rename it to any unique value that follows the syntactic rules for identifiers. The instance name becomes the prefix of every global function name, variable, and constant symbol.

The following table lists and describes the interface to each function. The subsequent sections cover each function in more detail.

Function	Description
uint8 Pin_1_Read( void )	Reads the physical port and returns the current value for all pins in the component
void Pin_1_Write( uint8 value )	Writes the value to the component pins while protecting other pins in the physical port.
uint8 Pin_1_ReadDataReg( void )	Read the current value of the port's data output register and returns the current value for all pins in the component.
void Pin_1_SetDriveMode( uint8 mode )	Sets the drive mode for each of the Pins component's pins.
uint8 Pin_1_ClearInterrupt( void )	Clears any active interrupts on the port into which the component is mapped. Returns value of interrupt status register.

## uint8 Pin\_1\_Read (void)

**Description:** Reads the associated physical port (pin status register) and masks the required bits

according to the width and bit position of the component instance.

Parameters: None

**Return Value:** The current value for the pins in the instance as a right justified number.

Side Effects: None

### void Pin\_1\_Write( uint8 value )

**Description:** Writes the value to the physical port (data output register), masking and shifting the bits

appropriately. This function avoids changing other bits in the port by using the appropriate

method (read-modify-write or bit banding).

**Parameters:** uint8 value: Value to write to the component instance.

Return Value: None Side Effects: None



## uint8 Pin\_1\_ReadDataReg( void )

**Description:** Reads the associated physical port's current data output register and masks the correct

bits according to the width and bit position of the component instance. This is not the same as the preferred Read() API because it reads the data register instead of the status register. For output pins this is an occasionally useful API to determine the value just

written to the pin.

Parameters: None

**Return Value:** The current value of the data register masked and shifted into a right justified number for

the component instance.

Side Effects: None

## void Pin\_1\_SetDriveMode( uint8 mode )

**Description:** Sets the drive mode for each of the Pins component's pins.

**Parameters:** uint8 mode: mode for the selected signals. Defined legal options are:

Pin\_1\_DM\_STRONG (Strong Drive)

Pin\_1\_DM\_OD\_HI (Open Drain, Drives High)
Pin\_1\_DM\_OD\_LO (Open Drain, Drives Low)
Pin\_1\_DM\_RES\_UP (Resistive Pull Up)
Pin\_1\_DM\_RES\_DWN (Resistive Pull Down)
Pin\_1\_DM\_RES\_UPDWN (Resistive Pull Up / Down)
Pin\_1\_DM\_DIG\_HIZ (High Impedance Digital)
Pin\_1\_DM\_ALG\_HIZ (High Impedance Analog)

Return Value: None
Side Effects: None

## uint8 Pin\_1\_ClearInterrupt( void )

**Description:** Clears any active interrupts attached with the component and returns the value of the

interrupt status register.

Parameters: None

**Return Value:** uint8: The current value of the interrupt status register.

Side Effects: Clears all bits of the physical port's interrupt status register, not just those associated

with the Pins component.



# **Sample Firmware Source Code**

The following is a C language example demonstrating the basic functionality of the Pins component. This example assumes the component has been placed in a design with the default name Pin\_1.

**Note** If you rename your component you must also edit the example code as appropriate to match the component name you specify.

```
#include <device.h>
/* The following code uses both the per-pin and component
                                                                   * /
/* APIs to drive a pair of LEDs from a Pins instance.
/* The pins are aliased to RedLED (pin 0) and GreenLED (pin 1).
/* Set both pins to Strong drive */
Pin_1_SetDriveMode( Pin_1_DM_STRONG );
Pin 1 Write( 0 ); // Turn both LEDs off
Pin 1 Write(1); // Turn pin 0 on and pin 1 off
Pin 1 Write(2); // Turn pin 1 on and pin 0 off
/* Turn just GreenLED (pin 1) off, leaving RedLED alone */
CyPins_ClearPin( Pin_1_GreenLED );
for(;;)
         /* Cause RedLED to flash
         if( CyPins_ReadPin( Pin_1_RedLED ) )
              CyPins ClearPin( Pin 1 RedLED );
         else
               CyPins_SetPin( Pin_1_RedLED );
         delay();
}
```



# DC and AC Electrical Characteristics

The following values are indicative of expected performance and based on initial characterization data.

## 5.0V/3.3V DC and AC Electrical Characteristics

Parameter	Typical	Min	Max	Units	Conditions and Notes
Input					
Input Voltage Range			Vss to Vdd	V	
Input Capacitance				pF	
Input Impedance				Ω	
Maximum Clock Rate			67	MHz	

© Cypress Semiconductor Corporation, 2009. The information contained herein is subject to change without notice. Cypress Semiconductor Corporation assumes no responsibility for the use of any circuitry other than circuitry embodied in a Cypress product. Nor does it convey or imply any license under patent or other rights. Cypress products are not warranted nor intended to be used for medical, life support, life saving, critical control or safety applications, unless pursuant to an express written agreement with Cypress. Furthermore, Cypress does not authorize its products for use a critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress products in life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

PSoC® Creator™, Programmable System-on-Chip™, and PSoC Express™ are trademarks and PSoC® is a registered trademark of Cypress Semiconductor Corp. All other trademarks or registered trademarks referenced herein are property of the respective corporations.

Any Source Code (software and/or firmware) is owned by Cypress Semiconductor Corporation (Cypress) and is protected by and subject to worldwide patent protection (United States and foreign), United States copyright laws and international treaty provisions. Cypress hereby grants to licensee a personal, non-exclusive, non-transferable license to copy, use, modify, create derivative works of, and compile the Cypress Source Code and derivative works for the sole purpose of creating custom software and or firmware in support of licensee product to be used only in conjunction with a Cypress integrated circuit as specified in the applicable agreement. Any reproduction, modification, translation, compilation, or representation of this Source Code except as specified above is prohibited without the express written permission of Cypress.

Disclaimer: CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Cypress reserves the right to make changes without further notice to the materials described herein. Cypress does not assume any liability arising out of the application or use of any product or circuit described herein. Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress' product in a life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

Use may be limited by and subject to the applicable Cypress software license agreement.

