This is an alternative to the *InvControl* element for *PVSystem*. It is based on the autonomously adjusting reference voltage option from the latest version of Clause 5.3.3 (Voltage-reactive power mode) in IEEE Standard 1547 [1]. In Figure 1, the set-point or reference voltage, V_{ref} , is not a constant value but rather tracks the grid voltage, V_{sys} , with a time constant, τ_{ref} , that is adjustable between 300s and 5000s. V_{ref} is still limited to the range 0.95 to 1.05 pu of the nominal voltage, V_N , as required in the standard. There is another time constant in Figure 1, τ_{OL} , for the open-loop response time that is adjustable up to 90s. Q_{hi} and Q_{lo} are now defined to give preference to reactive power over real power [1].

The gain value, *K*, offers a simplified version of the piecewise linear volt-var curve from the standard. For *ExpControl*, there is no deadband, so the piecewise linear curve simplifies to the example shown in Figure 2. For more details and examples, see [2].

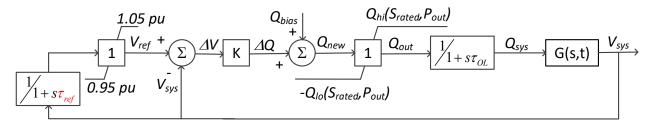


Figure 1: Control block diagram of the autonomously adjusting V_{ref} with time constant τ_{ref} .

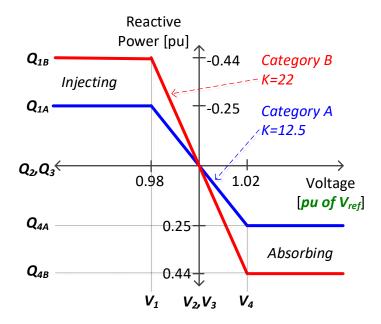


Figure 2: Translating K to the parameters of Figure H.4 of the standard [1], using passive sign convention on Q.

Key Parameters of ExpControl

The ExpControl does not require linkage to a piecewise linear curve. Its most important parameters are:

- Slope the gain, *K*, in Figure 1. The default value of 50 is usually stable, but higher than the maximum allowed value of 22 for Category B inverters [1].
- VregTau the time constant, τ_{ref} , in Figure 1. The default value of 300s is recommended.

- DeltaQ_factor still under investigation; this reactive power "acceleration factor" may need to be specified at 0.2 to 0.3.
- Tresponse with reference to Figure 1, this is the time for the change in Q_{sys} to reach 90% of the commanded change in Q_{out} . Defaults to 0 for backward compatibility, but should otherwise be set to 10s for Category A inverters or 5s for Category B inverters. Tresponse = 2.3 τ_{OL} . (The *InvControl* LPFtau attribute is similar, but defined for 95% response instead of 90% response.)
- PreferQ if required, curtail P to meet the commanded Q_{out}. Defaults to false for backward compatibility, but new models should specify true, as required in [1].
- Qbias an optional steady-state dispatch of reactive power, indicated in Figure 1. In per-unit of each controlled *PVSystem* kva rating. Negative to absorb Q, positive to inject Q. Defaults to 0. If linked to an external reactive power dispatcher, this would be the signal input connection.

The following parameters are less commonly specified:

- Vreg initial V_{ref} in per-unit of the PVSystem's voltage rating; this is less important because it will dynamically adjust to each PVSystem's terminal voltage early in the simulation.
- VregMin leave at the default 0.95 pu
- VregMax leave at the default 1.05 pu
- QmaxLag prefer use of PVSystem kvarLimit, unless the absorption and injection capabilities are different.
- QmaxLead prefer use of *PVSystem kvarLimit*, unless the absorption and injection capabilities are different.
- PVSystemList usually left blank to control all *PVSystem* components in the model
- Basefreq as with other OpenDSS components
- Enabled as with other OpenDSS components
- Like as with other OpenDSS components
- EventLog used to debug control actions in the case of non-convergence

The circle-diagram limits on Q, as depicted in Figure H.2 of [1], have not yet been implemented. The ExpControl was initially developed before [1], and it keeps the name V_{reg} in place of V_{ref} .

Examples from 2019 PVSC

The test circuit in Figure 3 was analyzed in [2] and distributed with OpenDSS under the sub-directory *Examples/ExpControl*. You can run the following example by pasting lines 1-26 into an OpenDSS script window. Note that line 3 should be modified to match the example installation directory on your own computer, so that OpenDSS can find the included *Hours.csv*, *VshapeHi_dss.*csv and *pcloud.csv*.




Figure 3: Single-phase test circuit representing one phase of a utility-scale PV about 15 miles from the substation

- 1 Clear
- 2 New Circuit.CloudAdap

```
3
    cd c:\opendss\distrib\examples\expcontrol
4
    New Loadshape. Vshape npts=1441 interval=0
5
    ~ hour=(file=Hours.csv) mult=(file=VshapeHi dss.csv)
6
    New Loadshape.Cloud npts=86401 sinterval=1
7
    ~ csvfile=pcloud.csv action=normalize
8
    New Vsource.Vth1 bus1=2a basekv=.240 R1=0.0083 X1=0.0215 phases=1
9
    ~ daily=Vshape
10
    New line.line1
                      bus1=2a bus2=3a switch=yes phases=1
11
    New PVSystem.PV1 bus1=3a phases=1 kV=.240 irradiance=1 pmpp=285 kVA=300
12
    ~ daily=Cloud %cutin=0.1 %cutout=0.1 varfollowinverter=true kvarlimit=132
13
    new monitor.pvlv element=line.line1
                                            terminal=2 mode=96
14
    new monitor.pv1pq element=PVSystem.PV1 terminal=1 mode=65 PPolar=NO
15
    new monitor.pv1st element=PVSystem.PV1 terminal=1 mode=3
16
    set controlmode=static
17
    set maxcontroliter=1000
18
    set voltagebases=[.415692]
19
    CalcV
20
    New ExpControl.pv1 deltaQ factor=0.3
21
    ~ vreg=1.0 slope=22 vregtau=300 Tresponse=5 // EventLog=Yes
22
    solve mode=daily number=86400 stepsize=1s
23
    plot type=monitor obj=pv1pg channels=[1,2] bases=[300,300]
24
    plot type=monitor obj=pv1st channels=[5]
25
    plot type=monitor obj=pv1v channels=[1] bases=[240]
```

Lines 4-5 and 7-8 implement a grid voltage that varies even in the absence of solar power fluctuations. The case can be repeated with unity power factor, by commenting out lines 20-21. Figure 4 plots the *PVSystem* output and some voltages of interest. To the right, V_{ref} starts at 1 per-unit, and quickly adapts to the grid voltage, V_{sys} or V_{unity} , which is about 1.03 per-unit. The reactive power, Q, is zero during the initial adaptation of V_{ref} because there is no real power output, P, during this time, coupled with varfollowinverter=true in line 12. From about 1030 through 1600 hours, P fluctuates and this causes voltage fluctuation. At unity power factor, the V_{unity} fluctuations are about 3%. The V_{sys} fluctuations are mitigated to about 1% by the ExpControl, with approximately zero net Q integrated over the day. The V_{ref} signal follows and smooths the V_{sys} fluctuations by using ExpControl.

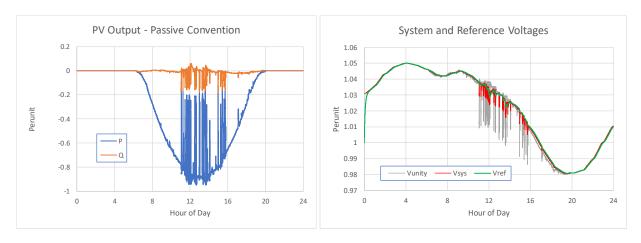


Figure 4: ExpControl produces near-zero net reactive power over time (left), while suppressing voltage fluctuations around the system voltage (right).

At around 2000 hours, P cuts out, but the value of Q is already close to zero because V_{sys} is close to V_{ref} . In other cases, the sudden cut-out of Q may lead to a significant voltage step. This might be mitigated with varfollowinverter=false, or by ramping Q, which is not currently required in [1].

For convenience, batch-mode simulation and plotting scripts have been provided:

- Run *Master.dss* to create results for a clear day with AVR and zero average Q, a cloudy day with AVR and absorbing -90 kVAR average Q, and a cloudy day at unity power factor.
- python plotadapq.py to visualize the effect of absorbing -90 kVAR average Q
- python plotadaptive.py to visualize the effect of AVR on clear and cloudy days
- python plotunity.py to visualize the effect of AVR vs. unity power factor on a cloudy day, producing Figure 4.

Comparison to InvControl and CA Rule 21 Smart Inverters

In California's Rule 21, phase 1 smart inverters have a function comparable to *InvControl* mode=VOLTVAR, while phase 3 smart inverters have a function comparable to *InvControl* mode=DYNAMICREACCURR [3]. These are denoted VV and DRC, respectively. The VV mode gives preference to real power, while the DRC mode may give preference to either real or reactive power. The DRC mode may be used either in conjunction with VV, or exclusively. One difference between DRC and *ExpControl* is that DRC uses a windowed moving average, while *ExpControl* uses the exponential time delay. The VV mode in *InvControl* also has the option for a windowed moving average on *Vref*, but this option was not adopted in CA Rule 21.

Of the CA Rule 21 options, "Dynamic Reactive Current Support Mode" in phase 3 is the closest to *ExpControl*. It should give preference to reactive power, and should not be combined with phase 1's "Dynamic Volt/Var Operations".

Of the *InvControl* options, uncombined DRC is the closest to *ExpControl*.

Use with Storage Elements

As is the case with *InvControl*, the *ExpControl* cannot be used with *Storage*, only with *PVSystem*. However, the voltage control capabilities it represents from [1] would apply equally well to storage systems. In a future version, both *InvControl* and *ExpControl* may be linked to *Storage* in OpenDSS. In the meantime, the following workaround can be used to implement reactive power control of storage systems:

- Add a parallel *PVSystem* with negligible real power (*Pmpp*), but *kva* rating equal to the storage system's reactive power rating, leaving *kvarLimit* unspecified. Let *VarFollowInverter* default to False, so the inverter can supply rated Q throughout the day.
- Attach *ExpControl* to the fictitious *PVSystem* to implement voltage/reactive power control on the storage system.

The same workaround applies to *InvControl*. A sample input listing fragment follows; it's part of a larger model in which a small impedance separates the *bess1* bus from the *pcc1* bus.

```
new Storage.bess1 bus1=bess1 phases=3 kV=13.2 kWrated=6000
     kva=7000 kWhrated=48000 kWhstored=24000 dispmode=follow daily=cycle
```

3

New PVSystem.bess1 bus1=pcc1 phases=3 kV=13.2 irradiance=0.5 pmpp=1

Examples from 2023 General Meeting

A revised application guide for IEEE 1547 [4] is now in ballot resolution, containing new material on voltage response in clause 5. This revision to IEEE 1547.2 should be published in 2023. To provide additional background on the autonomously varying reference voltage, a conference paper has also been submitted for the IEEE PES General Meeting [5]. Examples from the conference paper are now distributed with OpenDSS:

- *NantucketExpSteps.py* creates Figure 4 of the paper, using the OpenDSS COM interface. The network model is embedded in the Python source.
- Nantucket.xlsx contains data and formulas that created Table I of the paper.
- *Hawaii.py* creates Figure 5 of the paper, using the OpenDSS COM interface. The network model is embedded in the Python source.
- *SCErun.py* simulates the secondary circuit example; use command line argument *no* to run without AVR and *yes* to run with AVR. The network model is embedded in the Python source.
- *SCEplot.py* creates Figures 7-8 of the paper, from the results of *SCErun.py*. Use command line arguments *no* and *yes*.

These examples were tested with OpenDSS v9.5.1.1 and OpenDSSCmd v1.7.6.

Figure 5 simulates the 18-DER SCE was with 5 times and 10 times the default gain, or K=110 and 220, respectively. The $DeltaQ_Factor$ must be reduced from 0.3, to 0.06 and 0.03, respectively, for the simulations to converge. The OpenDSS simulations take longer than for K=22, but the result is stable. The total real energies remain at -6483.62 kwh, but the total reactive energies increase to 135.35 and 316.52 kvarh.

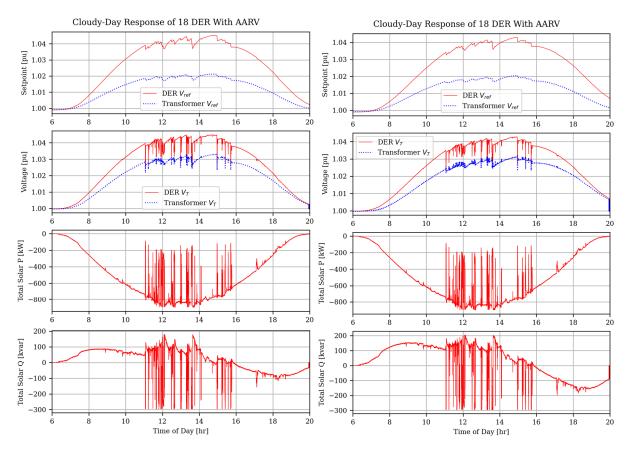


Figure 5: SCE case with K=110 (left) and K=220 (right)

References

- [1] IEEE, "IEEE Standard for Interconnection and Interoperability of Distributed Energy Resources with Associated Electric Power Systems Interfaces," *IEEE Std 1547-2018 (Revision of IEEE Std 1547-2003)*, pp. 1-138, 2018.
- [2] T. E. McDermott and S. R. Abate, "Adaptive Voltage Regulation for Solar Power Inverters on Distribution Systems," presented at the IEEE Photovoltaic Specialists Conference (PVSC-46), Chicago, 2019. [Online]. Available: https://doi.org/10.1109/PVSC40753.2019.8981277.
- [3] California Energy Commission. "Rule 21 Smart Inverter Working Group Technical Reference Materials." https://www.energy.ca.gov/electricity_analysis/rule21/ (accessed 2019).
- [4] "IEEE Application Guide for IEEE Std 1547(TM), IEEE Standard for Interconnecting Distributed Resources with Electric Power Systems," *IEEE Std 1547.2-2008*, pp. 1-217, 2009, doi: 10.1109/IEEESTD.2008.4816078.
- [5] T. E. McDermott, "Autonomous Voltage Response for Distributed Energy Resources [submitted]," presented at the IEEE PES General Meeting, Orlando, FL, July 16-20, 2023.