
Bolt Analysis Tool

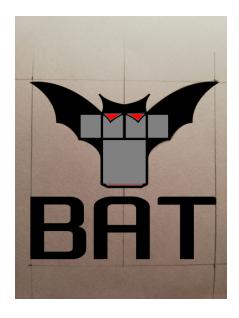

User Manual

Author: Michael Sams

Issue: 0.1

Date: January 23, 2021

Contents

1	Intr	oduction	2
2	Bolt	and Thread Geometry	3
3		t Diagram Loading Plane Factor	4
4	Met	hod B: ECSS-E-HB-32-23A	6
	4.1	Preload and Torques	6
	4.2	Thermal Influcence	8
		4.2.1 Linear Thermal Influence	8
		4.2.2 VDI Method	9
	4.3	Embedding	9
	4.4	Compliance of Bolt and Clamped Parts	11
		4.4.1 Compliance of Bolt	11
		4.4.2 Compliance of Clamped Parts	12
	4.5	Stesses in Bolt and Clamped-Parts	
		4.5.1 Stress in bolt after tightening	
		4.5.2 Stress and margins of safety in bolt at service	
5	Dof.	oroncos	17

Symbols and Abbreviations

Symbols

α_A	tightening factor
α_b	coefficient of linear thermal expansion of the bolt
α_{ci}	coefficient of linear thermal expansion of the clamped part i
δ_b	elastic compliance of the bolt
δ_c	elastic compliance of the clamped part (plate)
$arepsilon_{th}$	linear thermal elongation
θ	half angle of thread groves
$\stackrel{\circ}{\lambda}$	under-head bearing angle of bolt
μ_T	coefficient of friction in the clamped part interfaces
μ_{th}	coefficient of friction in bolt thread
μ_{uh}	coefficient of friction under bolt head
un $ u$	bolt utilization factor
φ	helix angle / slope of bolt thread
$arphi_c$	compression cone half angle
Φ	load factor of concentric joint
1	(also: force ratio or relative compliance factor)
Φ_n	load factor for concentric clamping and concentric
± 11	force load introduction via the clamped parts
ρ	friction angle in bolt thread
σ_n	normal stress in the bolt
σ_v	von-Mises stress in the bolt
$ au_v$	shear stress in the bolt
,	Shear Stress in the Bott
A_1	nominal cross section of threaded bolt
A_3	minimal thread cross section
A_i	cross sectional area of component $/$ segment i
A_p	pitch cross section of threaded bolt
A_s	stress cross section of threaded bolt
A_{sub}	substitutional compliance area (BAT specific)
C	stiffness
	bolt stiffness
c_b	clamp part stiffness
c_c	cramp part summess

 $egin{array}{lll} d & & & & & & & & & \\ d_2 & & & & & & & & \\ d_2 & & & & & & & \\ d_3 & & & & & & & \\ d_3 & & & & & & \\ \end{array}$ nominal threaded bolt diameter of threaded bolt minimal diameter of threaded bolt

 d_h minimal contact diameter under bolt head

 d_s stress diameter of threaded bolt D_{avail} available diameter for compression zone through-hole diameter (drilled bolt hole)

 D_{Km} effective diameter of under head/nut friction torque

 D_{lim} limiting diameter of compression zone

 E_b Young's Modulus of bolt

 E_c Young's Modulus of clamped part

 F_A external, axial bolt load

 F_K clamp load

 F_{KR} residual clamp load at the interface during loading in service

 F_{Kreq} required clamping force for friction grip per bolt F_M preload after tightening / assembly preload

 f_P clamped part compression

 f_{PA} additional deformation of clamped part due to loading

 F_{PA} additional axial plate load F_Q external, shear bolt load

 f_S bolt elongation F_S bolt load

 f_{SA} additional elongation of bolt due to loading

 F_{SA} additional axial bolt load ΔF_{Vth} thermal preload change

 F_V service preload incl. embedding and thermal influence

 f_Z plastic deformation due to embeddding

 F_Z preload loss due to embedding

K joint coefficient

 L_i length of component/segment i

 ΔL total change in length after temperature loading (bolt and clamped parts)

 Δl_b change in length of bolt after temperature loading

 l_{0b} initial length of bolt (= l_K) without temperature loading Δl_c change in clamped part thickness after temperature loading

 l_{ci} thickness of clamp part i

 l_{0ci} initial thickness of clamp part i without temperature loading

 $L_{eng,sub}$ substitutional length of engaged thread substitutional length of bolt head

 l_K joint clamped length

 $L_{n,sub}$ substitutional length of nut (locking device)

 M_{th} friction torque at thread interface M_p prevailing torque of bolt locking device M_{uh} under-head torque due to friction

n loading plane factor / load introduction factor

p pitch of bolt thread

 q_F number of shear force transmitting interfaces

 ΔT temperature gradient

 T_A total installation torque of bolt

 $T_{scatter}$ torque scatter of tightening device (torque wrench)

 W_p polar section modulus

w parameter for δ_c calculation (TBJ: w = 1, TTJ: w = 2)

x first parameter for φ_c calculation

 x_c parameter for δ_c calculation for multiple clamped parts (BAT specific)

y second parameter for φ_c calculation

Abbreviations

BAT Bolt Analysis Tool

CTE Coefficient of Thermal Expansion

MOS Margin of Safety
TBJ Through-Bolt Joint
TTJ Tapped Thread Joint

List of Figures

2.1	Definition of under head bearing angle [2]	3							
3.1	Joint diagram for the working state of a concentrically loaded bolted joint	4							
3.2									
4.1 4.2	Dimensioning of the bolt for compliance calculation [2] Compression zones in cylindrical clamped parts [2]								
List of Tables									
4.1	Guide values for amounts of embedding of bolts, nuts and compact clamped parts made of steel, without coatings [3]	10							

List of Algorithms

1 Introduction

This document will include the **BAT** (Bolt Analysis Tool) User Manual.

BAT Info:

The current design status of the *Bolt Analysis Tool* **BAT** only includes *Concentric Axially Loaded Bolted Joints*.

2 Bolt and Thread Geometry

 D_{Km} is the effective diameter of under head/nut friction torque and is defined by

$$D_{Km} = \frac{D_{hole} + d_h}{2} \tag{2.1}$$

where D_{hole} is the through-hole diameter in the clamped parts and d_h is the minimum bearing surface outer diameter of the bolt head or nut. An other input value to calculate the under-head friction torque (4.2) is the under head bearing angle λ seen in Figure 2.1.

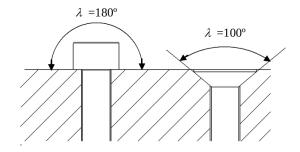


Figure 2.1: Definition of under head bearing angle [2]

3 Joint Diagram

The *joint diagram* seen in Figure 3.1(a) [3] visualizes the forces and displacements and helps to understand the loading conditions of a concentrically loaded bolted joint.

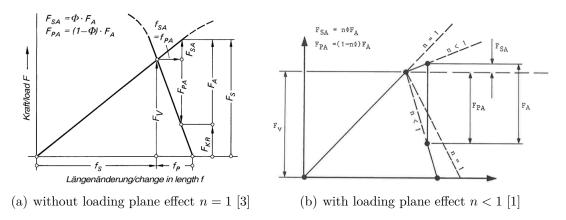


Figure 3.1: Joint diagram for the working state of a concentrically loaded bolted joint

The preload force F_V (see §4.1) compresses the clamped parts f_P and elongates the bolt f_S during tightening. If an external load F_A is acting on the bolted joint the bolt is streched much further and the clamped parts are relaxed ($f_{SA} = f_{PA}$) due to the loading. The additional axial bolt load F_{SA} and the additional axial plate load¹ F_{PA} are given to

$$F_{SA} = n\Phi F_A, \qquad F_{PA} = (1 - n\Phi)F_A$$
 (3.1)

where Φ is the load factor, which is defined as the quotient of the additional bolt load F_{SA} and the axial working load component F_A . n is the loading plane factor and is crucial for determining the size of the additional bolt loads. As seen in Figure 3.1(a) F_{KR} is the residual clamping load at the interface during relief or loading by F_{PA} and after embedding in service and F_S is the maximum bolt load.

¹If the bolt is loaded in tension F_{PA} is better described as an axial plate relaxation force.

3.1 Loading Plane Factor

A simple explanation of the *loading plane effect* is given in [1] and this text is used directly for the description in this document.

Figure 3.2 shows the external load applied at planes under the bolt head and under the nut. The extreme case where the external bolt force F_A is acting directly under head / nut is rare (n = 1), usually the effective loading planes are considered to be within the joint as seen in Figure 3.2, nl_K apart (n < 1).

Between the loading planes the joint is reliefed by F_A but outside of the loading planes the clamped material is subjected to F_A in addition to F_K the clamping load. The effect of this to the loading diagram is shown in Figure 3.1(b). The effective bolt stiffness is reduced and the effective joint stiffness increased as n reduces. Hence the closer the load application is to the joint interface the smaller is the external force seen by the bolt F_{SA} .

For a more detailed explanation of the *loading plane factor* and for the correct derivation and analysis of n see [3, 2].

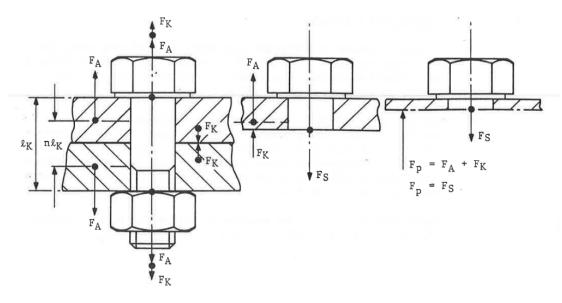


Figure 3.2: Tension joint loading planes and the forces acting within the joint [1]

Approximate Method [2]:

The loading plane factor depends on the deformation of the joint caused by preload. For uncritical verification purposes with simple joint geometry the loading plane factor may be set to n=0.5, which assumes that the loading planes are at the center of each flange.

4 Method B: ECSS-E-HB-32-23A

This chapter provides a quick overview and summary of the equations used in **BAT**. A detailed description can be found in the complete ECSS-E-HB-32-23A ESA handbook [2]. Some used variables in the following equations have been changed compared to [2] by the author to increase clarity and consistency.

4.1 Preload and Torques

The torque present at the thread interface M_{th} is dependent of the axial bolt preload F_V and is given by

$$M_{th} = F_V \tan(\varphi + \rho) \frac{d_2}{2} \tag{4.1}$$

and the under-head torque M_{uh} due to friction between bolt head or nut and the adjacent clamped part (or shim) is defined by

$$M_{uh} = F_V \frac{\mu_{uh} D_{Km}}{2} \frac{1}{\sin^{\lambda/2}} \tag{4.2}$$

where λ is the under head bearing angle seen in Figure 2.1. It is assumed that the friction force for M_{uh} is acting at mean bearing radius of the bolt head D_{Km} (2.1). φ is the helix angle of the thread and ρ is given by the relation

$$\tan \rho = \frac{\mu_{th}}{\cos \theta/2} \tag{4.3}$$

where θ is the half angle of the thread groves (for Unified or Metric threads $\theta = 60^{\circ}$).

The total installation torque T_A (without torque device scatter) applied to bolt head or nut during tightening to produce the axial bolt preload F_V is

$$T_A = M_{th} + M_{uh} + M_v (4.4)$$

where M_p is the prevailing torque of the locking device. With the approximation $\tan \varphi \tan \rho \ll 1$ the expression $\tan(\varphi + \rho)$ can be written as $\tan(\varphi + \rho) \approx \tan \varphi + \tan \rho$. Now equation (4.4) can be rewritten to

$$T_A = F_V \underbrace{\left[\frac{d_2}{2} \left(\tan \varphi + \frac{\mu_{th}}{\cos \theta/2}\right) + \frac{\mu_{uh} D_{Km}}{2 \sin \lambda/2}\right]}_{K} + M_p \tag{4.5}$$

where K is the joint coefficient.

BAT Info:

For calculation of the minimum and maximum axial bolt preload, BAT implements the *experimental coefficient method* [2] with an explicit torque scatter torque of the tightening device $T_{scatter}$.

The minimum and maximum total installation torques with included torque scatter are defined

$$T_A^{min} = T_A - T_{scatter}, \qquad T_A^{max} = T_A + T_{scatter}.$$
 (4.6)

To calculate the minimum and maximum axial bolt preload after tightening $F_M^{min/max}$. (4.5) and (4.6) are combined

$$F_M^{min} = \frac{T_A^{min} - M_p^{max}}{K^{max}}, \qquad F_M^{max} = \frac{T_A^{max} - M_p^{min}}{K^{min}}.$$
 (4.7)

If also the thermal influence and embedding is considered, this leads to the minimum and maximum axial bolt preload at service $F_V^{min/max}$

$$F_V^{min} = \frac{T_A^{min} - M_p^{max}}{K^{max}} + \Delta F_{Vth} - F_Z$$

$$\tag{4.8a}$$

$$F_V^{min} = F_M^{min} + \Delta F_{Vth} - F_Z \tag{4.8b}$$

$$= \frac{T_A^{min} - M_p^{max}}{\frac{d_2}{2} \left(\tan \varphi + \frac{\mu_{th}^{max}}{\cos \theta/2} \right) + \frac{\mu_{uh}^{max} D_{Km}}{2 \sin \lambda/2}} + \Delta F_{Vth} - F_Z$$
 (4.8c)

$$F_V^{max} = \frac{T_A^{max} - M_p^{min}}{K^{min}} + \Delta F_{Vth}$$
(4.9a)

$$F_V^{max} = F_M^{max} + \Delta F_{Vth} \tag{4.9b}$$

$$= \frac{T_A^{max} - M_p^{min}}{\frac{d_2}{2} \left(\tan \varphi + \frac{\mu_{th}^{min}}{\cos \theta/2} \right) + \frac{\mu_{uh}^{min} D_{Km}}{2 \sin \lambda/2}} + \Delta F_{Vth}$$
(4.9c)

where ΔF_{Vth} is thermal preload change (see §4.2) and F_Z is the preload loss due to embedding (see §4.3).

4.2 Thermal Influcence

If a thermal load is applied to a bolted joint, the bolt sees a change ΔF_{Vth} in the preload force due to the CTE mismatch of bolt and clamped parts seen in (4.8c) and (4.9c).

4.2.1 Linear Thermal Influence

For the following derivation it is assumed that the Young's Modulus E of bolt and clamped parts does not change with temperature (temperature independent material properties). $c_b = 1/\delta_b$ and $c_c = 1/\delta_c$ are defined as bolt stiffness and clamp-part stiffness respectively. Linear thermal elongation is defined

$$\varepsilon_{th} = \alpha \Delta T = \frac{\Delta l}{l_0}$$

The thermal elongation for bolt (index b) and clamped-parts (index c) are given to

$$\Delta l_b = \alpha_b \cdot \Delta T \cdot l_{0b}$$
$$\Delta l_c = \sum_i \alpha_{ci} \cdot \Delta T \cdot l_{0ci}$$

where $l_K = l_{0b} = \sum_i l_{0ci}$ is the clamping length of the joint.

BAT Info:

The sign definition in BAT is $\Delta L = \Delta l_c - \Delta l_b$ and this leads to

$$\alpha_c > \alpha_b \Rightarrow +\Delta F_{Vth}$$

 $\alpha_c < \alpha_b \Rightarrow -\Delta F_{Vth}$

where $+\Delta F_{Vth}$ defines an increase and $-\Delta F_{Vth}$ a loss in bolt preload.

If the standard stiffness equation $F = c \cdot \Delta x$ is used for the bolt / clamp-part joint, this leads to

$$\Delta F_{Vth} = c \cdot \Delta L \tag{4.12a}$$

$$=\frac{\Delta L}{\frac{1}{c_h} + \frac{1}{c_c}} \tag{4.12b}$$

$$= \Delta L \frac{c_b c_c}{c_b + c_c} = \Delta L \frac{1}{\delta_b + \delta_c}$$
 (4.12c)

4.2.2 VDI Method

to be filled

4.3 Embedding

When bolts are first tightened the male and female thread, the under-head and under-nut surfaces and the clamped parts interface contact each other only on microscopically small high spots (surface roughness). The material at these hight spots will be overloaded, well past their yield point, during initial tightening and will subsequently creep until a large enough area of the available contact surface has been engaged to stabilize the process. In addition, plastic flow will often occur at the highest stressed points such as thread roots or at the first engaged thread in the nut. These relatively short-term relaxation effects are known as *embedding*. After tightening the rate of relaxation is a maximum, reducing exponentially, usually over the first few minutes, to a constant very low rate of creep. Typically embedding accounts for only a few percent loss of initial preload, however 5% to 10% are not uncommon [2]. The value significantly depends on the amount and hardness of the clamping parts.

The embedding preload loss F_Z depends on the plastic deformation f_Z of the joint.

$$\frac{F_Z}{F_V} = \frac{f_Z}{\left(\delta_b + \delta_c\right) F_V}$$

This it follows that,

$$F_Z = \frac{f_Z}{\delta_b + \delta_c} \tag{4.13}$$

where f_Z depends on surface roughness, the number of clamped parts interfaces in the joint and the material type (and hardness). For uncritical cases a value of 5% of the preload can be used for calculation purposes [2].

BAT Info:

In BAT, the 5% embedding preload loss is defined for the maximum bolt preload after tightening.

$$F_Z = 0.05 F_M^{max}$$

It is always recommended that the correct embedding preload loss is determined by experiment. If no experimental data is available Table 4.1 can be used to find approximate values. This table may only be used if the service temperatures are below 50% of the recrystallization temperatures of the used materials. The table used in ECSS-E-HB-32-23A [2] is used out of the VDI 2230 guideline [3].

Average roughness height	Loading	Guide values for amounts of embedding in µm			
R _z accord- ing to DIN 4768		in the thread	per head or nut bearing area	per inner interface	
< 10 µm	tension/compression	3	2,5	1,5	
	shear	3	3	2	
10 µm up to	tension/compression	3	3	2	
< 40 µm	shear	3	4,5	2,5	
40 µm up to	tension/compression	3	4	3	
< 160 µm	shear	3	6,5	3,5	

Table 4.1: Guide values for amounts of embedding of bolts, nuts and compact clamped parts made of steel, without coatings [3]

BAT Info:

Only the maximum embedding values listed in Table 4.1 for tension/compression and shear are used in BAT (no distinction between external loading types).

4.4 Compliance of Bolt and Clamped Parts

4.4.1 Compliance of Bolt

The bolt consists of different sections with dedicated compliances seen in Figure 4.1.

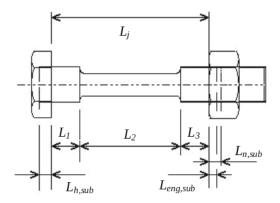


Figure 4.1: Dimensioning of the bolt for compliance calculation [2]

Applying the Hook's law to each segment of the bolt and combining the equations, the compliance of the bolt δ_b can be written

$$\delta_b = \frac{1}{c_b} = \frac{1}{E_b} \sum \frac{L_i}{A_i} \tag{4.14}$$

where $c_b = 1/\delta_b$ is the bolt stiffness, A_i and L_i are the segment cross section and segment lengths respectively. E_b is the bolt Young's Modulus and A_i are the cross sections for each bolt segment. Expanding (4.14) and introducing substitution lengths for deformation in the bolt head and engaged region in thread and nut the equation leads to

$$\delta_b = \frac{1}{E_b} \left[\frac{L_{h,sub}}{A_1} + \frac{L_{eng,sub}}{A_3} + \left(\frac{L_1}{A_{L_1}} + \frac{L_2}{A_{L_2}} + \dots + \frac{L_i}{A_{L_i}} \right) \right] + \frac{L_{n,sub}}{E_n A_1}$$
(4.15)

where $L_{h,sub}$ and $L_{n,sub}$ are substitutional lengths of bolt head and nut (locking device) respectively. $L_{eng,sub}$ is the substitution length for the engaged thread and the value depends on the type of joint. For through bolt joint (TBJ) $L_{eng,sub}^{TBJ} = 0.4d$ and for tapped thread joints (TTJ) $L_{eng,sub}^{TTJ} = 0.33d$.

BAT Info:

The current BAT implementation does not include shank bolts with different diameter sections; complete shaft length is threaded $(\sum L_i/A_i = l_K/A_3)$. Also for the bolt head compliance only cylindrical head is considered $L_{h,sub} = 0.4d$ for simplicity. The same substitution length is used for the locking device (nut) $L_{n,sub} = 0.4d$ according to [2]. It is assumed that the nut has the same Young's Modulus than the bolt $E_n = E_b$.

$$\delta_b = \frac{1}{E_b} \left(\frac{L_{h,sub}}{A_1} + \frac{L_{eng,sub}}{A_3} + \frac{L_i}{A_{L_i}} + \frac{L_{n,sub}}{A_1} \right) \tag{4.16a}$$

$$= \frac{1}{E_b} \left(\frac{0.4d}{A_1} + \frac{L_{eng,sub}}{A_3} + \frac{l_K}{A_3} + \frac{0.4d}{A_1} \right)$$
(4.16b)

4.4.2 Compliance of Clamped Parts

The calculation of the compliance of the clamped parts δ_c is more complicated than that of the bolts presented in §4.4.1 because of the 3-dimensional stress state in the joint that is induced by the preload. The presented method [2] neglects the compliance of the interfaces and therefore it is most accurate for joints with a small number of clamped parts. If more clamped parts are required the correct compliance can be determined by test or finite element analysis.

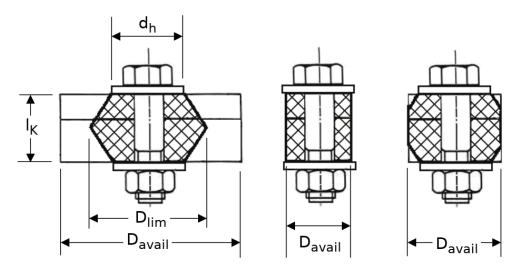


Figure 4.2: Compression zones in cylindrical clamped parts [2]

The configuration of the *compression zone* depends on the geometry of the clamped parts (joint geometry). Figure 4.2 shows the three possible compression

zones for cylindrical clamped parts³. The configuration on the left of Figure 4.2 has flanges that are sufficiently wide to allow full spreading of the compression zone to the limiting diameter D_{lim} . In reality, the shape of the 3-dimensional zone of compression in an isotropic material is a paraboloid. The used approximate method simplifies the shape to a pair of compression cones. The two cones are symmetric about the mid-point of the clamped parts length l_K , which does not necessarily correspond to the interface between the flanges. If the flanges are too small for the compression cone to fully develop $D_{avail} < D_{lim}$, a full or partial compression sleeve develops. For tapped thread joints (TTJ) the analysis model assumes only one compression cone in the non-threaded clamped parts. For the general case with clamped parts that are not axially symmetric about the bolt axis, multiple edge distances are present; here the configuration of the deformation zone D_{avail}^{min} should be determined by the minimum edge distance (inscribed diameter).

Analysis Method

If the edge distance of the flanges and hence the available diameter for the compression zone D_{avail} is known, it can be compared with the limit diameter of the compression cone D_{lim} , given by

$$D_{lim} = d_h + wl_K \tan \varphi_c \tag{4.17}$$

where φ_c is the compression cone half angle and the parameter w is defined according to the joint type. For through bolt joints TBJ: w = 1 and for tapped thread joints TTJ: w = 2. The compression cone half angle φ_c can be derived with an empirical equation [2]

$$TBJ:$$
 $\tan \varphi_c = 0.362 + 0.032 \ln (x/2) + 0.153 \ln y$ (4.18a)
 $TTJ:$ $\tan \varphi_c = 1.295 - 0.246 \ln x + 0.94 \ln y$ (4.18b)

$$TTJ: \tan \varphi_c = 1.295 - 0.246 \ln x + 0.94 \ln y$$
 (4.18b)

where the following non-dimensional parameters are used $x = l_K/d_h$, $y = D_{avail}/d_h$. The existence of a compression sleeve is determined as follows:

CASE 1: $D_{avail} > D_{lim}$ the compression zone is fully developed into a cone or a pair of cones for TBJ joints. The compliance of the clamped parts δ_c for a compression cone is given by

$$\delta_c = \frac{2\ln\left[\frac{(d_h+d)(D_{lim}-d)}{(d_h-d)(D_{lim}+d)}\right]}{wE_c\pi d\tan\varphi_c}$$
(4.19)

³The figure assumes that the flanges are compressed between infinitely stiff washers with the diameter equal to the minimal diameter under bolt head d_h for the compression zone. In BAT the washer is considered as clamp part.

CASE 2: $\mathbf{D_{avail}} < \mathbf{d_h}$ only a compression sleeve and no compression cone develops due to small clamped part dimesions. The compliance of the clamped parts δ_c for a compression sleeve is given by

$$\delta_c = \frac{4l_K}{E_c \pi \left(D_{avail}^2 - d^2\right)} \tag{4.20}$$

CASE 3: $\mathbf{d_h} < \mathbf{D_{avail}} < \mathbf{D_{lim}}$ partial compression sleeve and cone(s) develops. The compliance of the clamped parts δ_c for a combined cone / sleeve compression zone is given by

$$\delta_c = \frac{\frac{2}{wd \tan \varphi_c} \ln \left[\frac{(d_h + d)(D_{avail} - d)}{(d_h - d)(D_{avail} + d)} \right] + \frac{4}{D_{avail}^2 - d^2} \left[l_k - \frac{D_{avail} - d_h}{w \tan \varphi_c} \right]}{E_c \pi}$$
(4.21)

This equation includes the effect of both the compression cone(s) and sleeve and is therefore appropriate when the clamped parts have the same Young's Modulus. If the compliances of the cone and sleeve should be calculated separately (multiple materials / different Young's Moduli present in the clamped parts) the clamped part compliances should be calculated by a different method $[2] \rightarrow \mathbf{OPEN}$ ISSUE IN BAT - TO BE CHECKED.

BAT Info:

Multiple clamped parts with different materials can be defined in BAT. To calculate the overall clamped part compliance δ_c the equations described above for CASE~1,~2~and~3 are restructured. For each case a parameter x_c is evaluated, which is simply the δ_c -equations (4.19), (4.20) and (4.21) without the Young's Modulus E_c

$$\delta_c = \frac{l_K}{E_c A_{sub}} = \frac{x_c}{E_c} \qquad \to \qquad A_{sub} = \frac{l_K}{x_c} \tag{4.22}$$

where A_{sub} is the derived substitutional compliance area of the clamped parts. It is assumed that A_{sub} can be used to calculate the overall clamped part compliance for multiple clamped parts with different Young's Moduli E_{ci} and thicknesses l_{ci}

$$\delta_c = \frac{l_K}{\tilde{E}_c A_{sub}} = \sum_i \frac{l_{ci}}{E_{ci} A_{sub}} \tag{4.23}$$

4.5 Stesses in Bolt and Clamped-Parts

4.5.1 Stress in bolt after tightening

Based on §4.1 the stresses in the bolt after tightening can be derived. The minimum and maximum shear stress in the bolt $\tau^{min/max}$ after tightening can be calculated as follows

$$\tau^{min} = \frac{T_A^{min} - M_{uh}^{max}}{W_p}, \qquad \tau^{max} = \frac{T_A^{max} - M_{uh}^{min}}{W_p}$$
(4.24)

where T_A is defined in (4.6), M_{uh} in (4.2) with $F_V = F_M$ and $W_p = \frac{\pi d_s^3}{16}$ is the polar section modulus. The minimum and maximum normal stress $\sigma_n^{min/max}$ in the bolt caused by the preload is defined

$$\sigma_n^{min/max} = \frac{F_M^{min/max}}{A_s} \tag{4.25}$$

The minimum and maximum von-Mises equivalent stress $\sigma_v^{min/max}$ in the bolt after tightening (with 100% shear stress contribution / 0% shear stress relaxation) is defined

$$\sigma_v^{min/max} = \sqrt{\left(\sigma_n^{min/max}\right)^2 + 3\left(\tau^{min/max}\right)^2} \tag{4.26}$$

Based on the von-Mises equivalent stress in the bolt the minimum and maximum bolt utilization $\nu^{min/max}$ is defined

$$\nu^{min/max} = \frac{\sigma_v^{min/max}}{\sigma_y} \tag{4.27}$$

where σ_y is the bolt material yield strength and this defines the tightening status of the joint.

4.5.2 Stress and margins of safety in bolt at service

The bolted joint can be loaded with an axial force F_A and a shear force F_Q . For the axial loading the additional bolt load is defined in (3.1) and for the shar loading the required clamping force for friction grip per bolt is defined

$$F_{Kreq} = \frac{F_Q}{q_F \mu_T} \tag{4.28}$$

where q_F is the number of shear force transmitting interfaces and μ_T the coefficient of friction in the clamped part interfaces.

Local Slippage Margin MOS_{slip}^{local}

The local slippage margin is defined for a minimum preload F_V^{min}

$$MOS_{slip}^{local} = \frac{F_V^{min} - F_{PA}}{F_{Kreq}FOS_{slip}} - 1 \tag{4.29}$$

where FOS_{slip} is the factor of safety against slippage. It is also possible that the local slippage margin is defined with the mean preload $F_V^{mean} = 0.5(F_V^{min} + F_V^{max})$, based on engineering judgedment.

Local Gapping Margin MOS_{gap}

The $local\ gapping\ margin$ is defined for a minimum preload F_V^{min}

$$MOS_{gap} = \frac{F_V^{min}}{F_{PA}FOS_{gap}} - 1 \tag{4.30}$$

where FOS_{gap} is the factor of safety against gapping.

Yield and Ultimate Bolt Margin $MOS_{y/u}$

The yield and ultimate margins are defined for a maximum preload F_V^{max}

$$MOS_y = \frac{\sigma_y}{\sqrt{\left(\frac{F_V^{max} + F_{SA}FOS_y}{A_s}\right)^2 + 3(0.5\tau^{max})^2}} - 1$$
 (4.31a)

$$MOS_u = \frac{\sigma_u}{\sqrt{\left(\frac{F_V^{max} + F_{SA}FOS_u}{A_s}\right)^2 + 3(0.5\tau^{max})^2}} - 1$$
 (4.31b)

where $FOS_{y/u}$ is the factor of safety against yield and ultimate. For the $MOS_{y/u}$ calculation a 50% shear load reduction $\tau=0.5\tau^{max}$ is considered².

²After tightening the shear stress in the bolt relaxes significantly after a few minutes and a conservative 50% relaxation is assumed for margin evaluation [2, 3].

5 References

- [1] Guidelines for threaded fasteners. ESA Guideline ESA PSS-03-208 Issue 1, Structures and Mechanism Division ESTEC, December 1989.
- [2] Space engineering threaded fasteners handbook. ECSS Handbook ECSS-E-HB-32-23A, ECSS European Cooperation for Space Standardization, 16 April 2010.
- [3] Systematic calculation of highly stressed bolted joints joints with one cylindrical bolt. VDI Guideline VDI2230 Part 1, VDI Verein Deutscher Ingenieure, November 2015.