# Suguru Sai Akshita - EE24BTECH11054 Sai Akhila Reddy Turpu - EE24BTECH11055

## $January\ 24,\ 2025$

# Contents

1	Objective	2
2	Apparatus and procedure	2
	2.1 Materials	2
	2.2 Procedure	2
3	Results	2
4	Theory	9
	4.1 Case 1:	9
	4.2 Case 2:	9
	4.3 Case 3:	9
	4.4 Case 4:	9
	4.5 Case 5:	9
	4.6 Case 6:	10
5	Capturing One time event Using CRO	10
	5.1 Procedure	10
	5.2 Plots	10

# 1 Objective

- 1. Observing and analyzing Lissajous figures on a Cathode Ray Oscilloscope (CRO)
- 2. Capturing a one-time event using a CRO

### 2 Apparatus and procedure

#### 2.1 Materials

- Cathode ray Oscilloscope
- Function Generator (2 channels)
- Probes
- Connecting wires

#### 2.2 Procedure

- 1. Connect the probe to function generator and turn it off.
- 2. Press Mode/Coupling button and then change sweep mode from auto to normal.
- 3. In the Trigger menu, press Mode until "Edge" is selected.
- 4. Then select Single mode. Wait until mode will initiate.
- 5. Turn on the signal and get a captured one-time event.

#### 3 Results

The functions plotted on X and Y axis respectively, are:

$$V_1(t) = A_x \sin(2\pi f_x t),$$
  

$$V_2(t) = A_y \sin(2\pi f_y t + \phi),$$


Where:

 $A_x$  and  $A_y$  = Amplitudes of the signals.

 $f_x$  and  $f_y$  = Frequencies.


 $\phi = \text{Phase Difference}.$ 



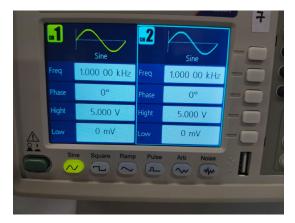


(a) Plot


Figure 1: Case 1

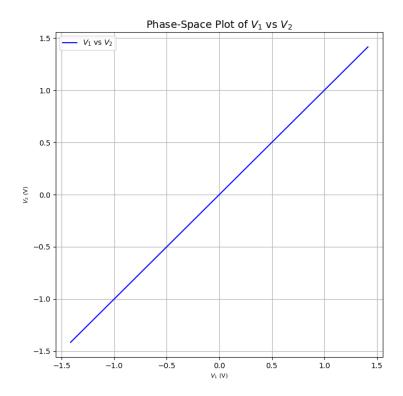

Parameter	Value
$V_1(t)$	5 V
$V_2(t)$	5 V
$f_x$	$1000\mathrm{Hz}$
$f_y$	$1000\mathrm{Hz}$
$\phi$	0°


Table 1: Data Table

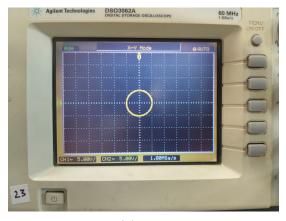

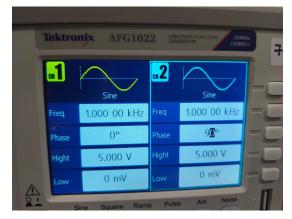


(a) Plot

Figure 2: Case 2

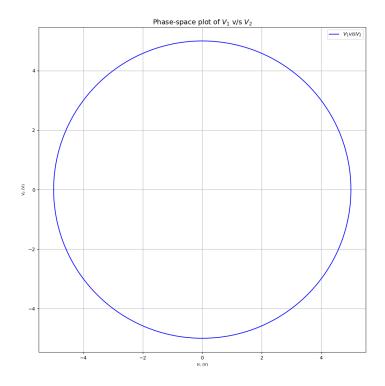

Parameter	Value
$V_1(t)$	5 V
$V_2(t)$	5 V
$f_x$	$1000\mathrm{Hz}$
$f_y$	$1000\mathrm{Hz}$
$\phi$	90°

Table 2: Data Table

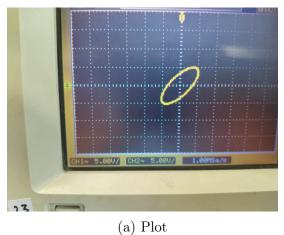


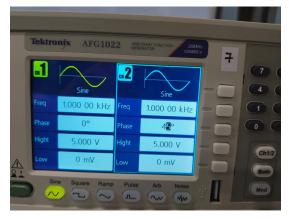



Figure 3: Case 3



Parameter	Value
$V_1(t)$	5 V
$V_2(t)$	5 V
$f_x$	$1000\mathrm{Hz}$
$f_y$	$1000\mathrm{Hz}$
$\dot{\phi}$	45°


Table 3: Data Table

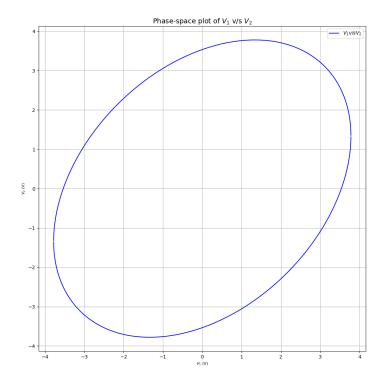

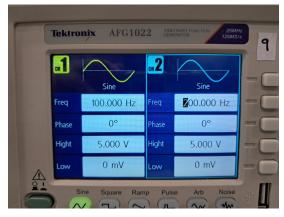

(a) Plot

Figure 4: Case 4

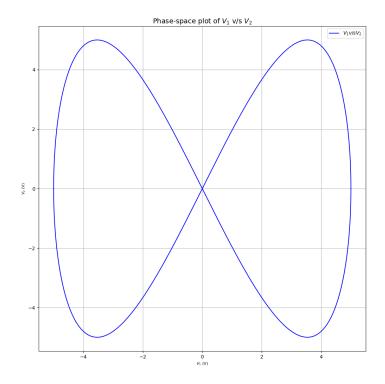

Parameter	Value
$V_1(t)$	5 V
$V_2(t)$	$5\mathrm{V}$
$f_x$	$100\mathrm{Hz}$
$f_y$	$200\mathrm{Hz}$
$\phi$	0°

Table 4: Data Table




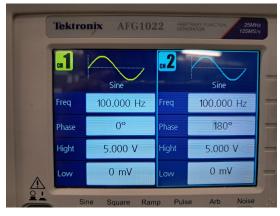


Figure 5: Case 5

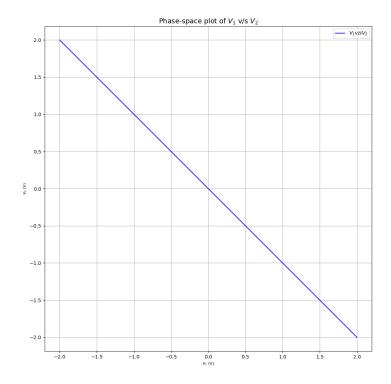

Parameter	Value
$V_1(t)$	5 V
$V_2(t)$	$5\mathrm{V}$
$f_x$	$100\mathrm{Hz}$
$f_y$	$100\mathrm{Hz}$
$\phi$	180°

Table 5: Data Table




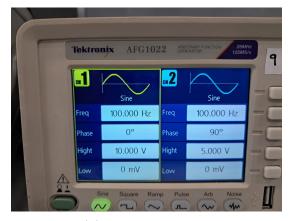


Figure 6: Case 6

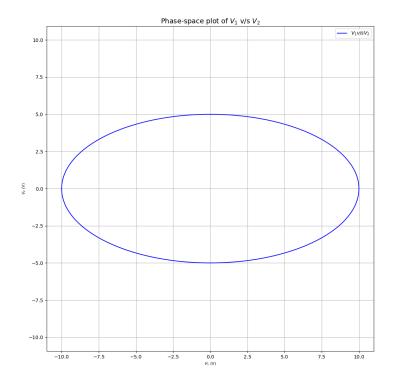

Parameter	Value
$V_1(t)$	10 V
$V_2(t)$	5 V
$f_x$	$100\mathrm{Hz}$
$f_y$	$100\mathrm{Hz}$
$\phi$	90°

Table 6: Data Table

# 4 Theory

### 4.1 Case 1:

$$V_1 = 5\sin(2\pi 1000t)V$$

$$V_2 = 5\sin(2\pi 1000t)V$$

$$V_1 = V_2$$

### 4.2 Case 2:

$$V_1 = 5\sin(2\pi 1000t)V$$
  

$$V_2 = 5\cos(2\pi 1000t)V$$
  

$$V_1^2 + V_2^2 = 25$$

### 4.3 Case 3:

$$V_1 = 5\sin(2\pi 1000t)V$$

$$V_2 = 5\sin(2\pi 1000t + \frac{\pi}{4})V$$

$$2V_1^2 + 2V_2^2 - \sqrt{2}V_1V_2 = 25$$

### 4.4 Case 4:

$$V_1 = 5\sin(2\pi 100t)V$$

$$V_2 = 5\sin(2\pi 200t)V$$

$$V_2 = 2V_1(\sqrt{1 - \frac{V_1^2}{25}})$$

### 4.5 Case 5:

$$V_1 = 5\sin(2\pi 100t)V$$

$$V_2 = 5\sin(2\pi 100t + \pi)V$$

$$V_1 = -V_2$$

#### 4.6 Case 6:

$$V_1 = 10\sin(2\pi 100t)V$$

$$V_2 = 5\sin(2\pi 100t + \frac{\pi}{2})V$$


$$\frac{V_1^2}{100} + \frac{V_2^2}{25} = 1$$

## 5 Capturing One time event Using CRO

#### 5.1 Procedure

- 1. Connect probe to signal generator and then turn it off.
- 2. Press Mode/Coupling and change sweep mode from Auto to Normal.
- 3. In the Trigger menu, press Mode until "Edge" is selected.
- 4. Now press Single mode. After that wait mode will initiate.
- 5. Next, Turn on the signal and get a captured one-time event.

### 5.2 Plots

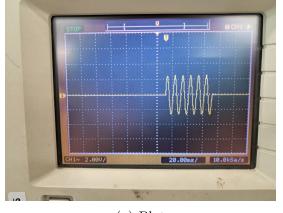

(a) Plot



Figure 7: Plot for One time event