DOS extraction

Generated by Doxygen 1.8.6

Fri Oct 3 2014 00:22:54

Contents

1	Inde	×														1
	1.1	Introduc	tion				 	 	 	 	 		 		 	1
	1.2	Depend	ancies .				 	 	 	 	 		 		 	1
	1.3	Compile					 	 	 	 	 		 		 	1
	1.4	Set up t	he config	uration	ns		 	 	 	 	 		 		 	2
	1.5	Run! .					 	 	 	 	 		 		 	2
2	Nam	nespace I	ndex													3
	2.1	Namesp	ace List				 	 	 	 	 		 		 	3
3	Hier	archical	Index													5
	3.1	Class H	ierarchy				 	 	 	 	 		 		 	5
4	Clas	s Index														7
	4.1	Class Li	st				 	 	 	 	 		 		 	7
5	File	Index														9
	5.1	File List					 	 ٠.	 	 	 		 		 	9
6	Nam	nespace l	Documer	ntation	1											11
	6.1	constan	ts Names	space I	Refere	nce	 	 	 	 	 		 		 	11
		6.1.1	Detailed	Descri	ption		 	 	 	 	 		 		 	11
	6.2	numerio	s Names	pace F	Referer	nce	 	 	 	 	 		 		 	11
		6.2.1	Detailed	Descri	ption		 	 	 	 	 		 		 	12
		6.2.2	Function	Docun	nentat	ion	 	 	 	 	 		 		 	12
			6.2.2.1	sort .			 	 	 	 	 		 		 	12
			6.2.2.2	sort_	pair .		 	 	 	 	 		 		 	12
			6.2.2.3	trapz			 	 	 	 	 		 		 	13
			6.2.2.4	trapz			 	 	 	 	 		 		 	13
			6.2.2.5	deriv			 	 	 	 	 		 		 	13
			6.2.2.6	interp	o1		 	 	 	 	 		 		 	13
			6.2.2.7	interp	o1		 	 	 	 	 		 		 	14
			6.2.2.8	error	_L2 .		 	 	 	 	 		 		 	14

iv CONTENTS

	6.3	utility N	Namespace	e Reference	14
		6.3.1	Detailed	Description	15
		6.3.2	Function	Documentation	15
			6.3.2.1	full_path	15
			6.3.2.2	print_block	15
			6.3.2.3	print_done	15
7	Clas	s Docu	mentation		17
	7.1	Bim1D	Class Ref	ference	17
		7.1.1	Detailed	Description	18
		7.1.2	Construc	tor & Destructor Documentation	18
			7.1.2.1	Bim1D	18
		7.1.3	Member	Function Documentation	18
			7.1.3.1	log_mean	18
			7.1.3.2	bernoulli	18
			7.1.3.3	assembleAdvDiff	19
			7.1.3.4	assembleStiff	19
			7.1.3.5	assembleMass	19
	7.2	Charge	e Class Re	ference	19
		7.2.1	Detailed	Description	20
		7.2.2	Construc	tor & Destructor Documentation	20
			7.2.2.1	Charge	20
		7.2.3	Member	Function Documentation	20
			7.2.3.1	charge	20
			7.2.3.2	dcharge	21
	7.3	Charge	eFactory C	lass Reference	21
		7.3.1	Detailed	Description	21
		7.3.2	Member	Function Documentation	22
			7.3.2.1	BuildCharge	22
	7.4	CsvPa	rser Class	Reference	22
		7.4.1	Detailed	Description	23
		7.4.2	Construc	tor & Destructor Documentation	23
			7.4.2.1	CsvParser	23
		7.4.3	Member	Function Documentation	23
			7.4.3.1	importRow	23
			7.4.3.2	importRows	24
			7.4.3.3	importFirstRows	25
			7.4.3.4	importCol	25
			7.4.3.5	importCols	25
			7.4.3.6	importFirstCols	25

CONTENTS

		7.4.3.7	importCell	26
		7.4.3.8	importAll	26
7.5	DosMo	del Class F	Reference	26
	7.5.1	Detailed D	Description	27
	7.5.2	Construct	or & Destructor Documentation	27
		7.5.2.1	DosModel	27
	7.5.3	Member F	Function Documentation	27
		7.5.3.1	simulate	27
		7.5.3.2	post_process	28
		7.5.3.3	gnuplot_commands	29
		7.5.3.4	save_plot	29
7.6	Expone	entialCharg	ge Class Reference	29
	7.6.1	Detailed D	Description	30
	7.6.2	Construct	or & Destructor Documentation	30
		7.6.2.1	ExponentialCharge	30
	7.6.3	Member F	Function Documentation	31
		7.6.3.1	charge	31
		7.6.3.2	dcharge	32
		7.6.3.3	n_approx	32
		7.6.3.4	dn_approx	32
7.7	Expone	entialCharg	geFactory Class Reference	33
	7.7.1	Detailed D	Description	33
	7.7.2	Member F	Function Documentation	33
		7.7.2.1	BuildCharge	33
7.8	Gaussh	HermiteRul	le Class Reference	34
	7.8.1	Detailed D	Description	34
	7.8.2	Construct	or & Destructor Documentation	34
		7.8.2.1	GaussHermiteRule	34
	7.8.3	Member F	Function Documentation	35
		7.8.3.1	apply	35
7.9	Gaussh	HermiteRul	leFactory Class Reference	35
	7.9.1	Detailed D	Description	35
	7.9.2	Member F	Function Documentation	36
		7.9.2.1	BuildRule	36
7.10	Gaussia	anCharge (Class Reference	37
	7.10.1	Detailed D	Description	38
	7.10.2	Construct	or & Destructor Documentation	38
		7.10.2.1	GaussianCharge	38
	7.10.3	Member F	Function Documentation	38
		7.10.3.1	charge	38

vi CONTENTS

		7.10.3.2 dcharge	38
		7.10.3.3 n_approx	39
		7.10.3.4 dn_approx	40
7.11	Gaussi	anChargeFactory Class Reference	40
	7.11.1	Detailed Description	41
	7.11.2	Member Function Documentation	41
		7.11.2.1 BuildCharge	41
7.12	Gaussl	_aguerreRule Class Reference	41
	7.12.1	Detailed Description	42
	7.12.2	Constructor & Destructor Documentation	42
		7.12.2.1 GaussLaguerreRule	42
	7.12.3	Member Function Documentation	42
		7.12.3.1 apply	42
		7.12.3.2 log_gamma	42
7.13	Gaussl	_aguerreRuleFactory Class Reference	43
	7.13.1	Detailed Description	43
	7.13.2	Member Function Documentation	43
		7.13.2.1 BuildRule	43
7.14	NonLin	earPoisson1D Class Reference	44
	7.14.1	Detailed Description	45
	7.14.2	Constructor & Destructor Documentation	45
		7.14.2.1 NonLinearPoisson1D	45
	7.14.3	Member Function Documentation	45
		7.14.3.1 apply	45
		7.14.3.2 computeJac	45
7.15	Paraml	List Class Reference	46
	7.15.1	Detailed Description	48
	7.15.2	Constructor & Destructor Documentation	48
		7.15.2.1 ParamList	48
7.16	PdeSol	ver1D Class Reference	48
	7.16.1	Detailed Description	49
	7.16.2	Constructor & Destructor Documentation	49
		7.16.2.1 PdeSolver1D	49
	7.16.3	Member Function Documentation	50
		7.16.3.1 assembleAdvDiff	50
		7.16.3.2 assembleStiff	51
		7.16.3.3 assembleMass	51
7.17	Quadra	atureRule Class Reference	51
	7.17.1	Detailed Description	52
	7.17.2	Constructor & Destructor Documentation	52

CONTENTS vii

		7.17.2.1 QuadratureRule	52
		7.17.3 Member Function Documentation	53
		7.17.3.1 apply	53
	7.18	QuadratureRuleFactory Class Reference	53
		7.18.1 Detailed Description	53
		7.18.2 Member Function Documentation	53
		7.18.2.1 BuildRule	54
8	File I	Documentation	57
	8.1	/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/charge.cc File Reference	57
		8.1.1 Detailed Description	57
	8.2	/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/charge.h File Reference	57
		8.2.1 Detailed Description	58
	8.3	/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/csvParser.cc File Reference	58
		8.3.1 Detailed Description	58
	8.4	/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/csvParser.h File Reference	58
		8.4.1 Detailed Description	58
	8.5	/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/dosModel.cc File Reference	59
		8.5.1 Detailed Description	59
	8.6	/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/dosModel.h File Reference	59
		8.6.1 Detailed Description	59
	8.7	/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/factory.cc File Reference	60
		8.7.1 Detailed Description	60
	8.8	/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/factory.h File Reference	60
		8.8.1 Detailed Description	61
	8.9	/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/numerics.cc File Reference	61
		8.9.1 Detailed Description	61
	8.10	/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/numerics.h File Reference	61
		8.10.1 Detailed Description	62
	8.11	/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/paramList.cc File Reference	62
		8.11.1 Detailed Description	62
	8.12	/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/paramList.h File Reference	62
		8.12.1 Detailed Description	63
	8.13	$/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/physicalConstants.h\ File\ Reference\ .\ .\ .$	63
		8.13.1 Detailed Description	64
	8.14	/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/quadratureRule.cc File Reference	64
		8.14.1 Detailed Description	64
	8.15	/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/quadratureRule.h File Reference	64
		8.15.1 Detailed Description	65
	8.16	/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/solvers.cc File Reference	65

viii CONTENTS

	8.16.1 Detailed Description	65
8.17	/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/solvers.h File Reference	65
	8.17.1 Detailed Description	66
8.18	/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/typedefs.cc File Reference	66
	8.18.1 Detailed Description	66
8.19	/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/typedefs.h File Reference	66
	8.19.1 Detailed Description	68
	8.19.2 Typedef Documentation	68
	8.19.2.1 VectorX	68
	8.19.2.2 VectorXpair	68
8.20	/home/elauksap/Dropbox/Progetto-PACS/C++/Source/test/simulate_dos.cc File Reference	68
	8.20.1 Detailed Description	68
Index		70

Index

1.1 Introduction

This program allows to extract the Density of States, assessed by mean capacitance-voltage measurements, in an organic semiconductor device. Simulated values are fitted to experimental data.

Source and header files are written in C++11 language.

The software is intended to be used on a Unix-like operating system.

1.2 Dependancies

The program requires the following libraries to be installed on your system:

- CMake, a cross-platform configuration tool (version 2.8 or above);
- Eigen, to handle with matrices, vectors and linear algebra;
- Gnuplot, a graphical utility to generate plots;
- Boost, a C++ library used by the Gnuplot interface to C++;
- OpenMP, for parallel computing (recommended but not compulsory);
- Doxygen, a documentation generator (not compulsory).

It also uses the following packages, provided in the include/folder:

- GetPot, to parse command-line and configuration files;
- gnuplot-iostream, the C++ interface for Gnuplot.

1.3 Compile

In order to generate a test executable, simply execute one of these commands in a terminal pointing to the root directory of this package:

```
$ mkdir build
$ cd build
$ cmake ..
$ make
```

or, if you want the compiler to produce also debugging informations:

2 Index

```
$ mkdir build
$ cd build
$ cmake .. -DDEBUG_MODE=ON
$ make
```

You can specify the name of the test source to be compiled (without extension, for example: *simulate_dos*) by editing the variable **EXEC**, defined in the *CMakeLists.txt* file.

Repeat these instructions for each test you want to compile.

The following command will generate this documentation under the *doc*/folder (or the one specified in *CMakeLists.-txt*):

```
$ make doc
```

1.4 Set up the configurations

Note

The default configuration directory is config/.

Before you can run an executable, you have to set up the configuration file (default: *config.pot*). Within it you can find a list of parameters, each of which is commented out to explain what modifying it will entail.

Particularly, the variables *input_params* and *input_experim* can be set, i.e. the filenames where to find input fitting parameters and experimental data respectively. It's recommended (but not compulsory) to put these files in the same directory as the configuration file (otherwise you can specify a relative or absolute path to them).

You can create multiple configuration files, each with different parameter values: the one you aim to use can be specified in the command-line before running.

1.5 Run!

Executables are placed under the bin/directory (or the one specified in CMakeLists.txt).

To run by using the default configuration filename (config.pot) simply move to the bin/directory and execute:

```
$ ./test_filename
```

To specify a different configuration file previously saved in the configuration directory:

```
$ ./test_filename -f configuration_filename

Or:
$ ./test_filename --file configuration_filename
```

The variable *configuration_filename* should **not** contain the path.

Warning

Furthermore, if you run the program from a different folder than *bin*/ or if you chose a different configuration directory, you have to manually specify the **full** path to the configuration directory (either absolute or relative to the current directory) by using:

```
$ ./test_filename -d configuration_directory

Or:
$ ./test_filename --directory configuration_directory
```

Once complete, you can find the results of the simulation(s) in the output directory specified in the configuration file (default: *output*/) under *bin*/.

Namespace Index

2.1 Namespace List

Here is a list of all documented namespaces with brief descriptions:

constant	
	Numerical constants
numerics	;
	Namespace for generic numeric algorithms
utility	
	Namespace for utilities and auxiliary functions

Namespace Index

Hierarchical Index

3.1 Class Hierarchy

This inheritance list is sorted roughly, but not completely, alphabetically:

Charge	19
ExponentialCharge	29
GaussianCharge	37
ChargeFactory	21
ExponentialChargeFactory	33
GaussianChargeFactory	40
CsvParser	22
DosModel	26
NonLinearPoisson1D	44
ParamList	46
PdeSolver1D	48
Bim1D	17
QuadratureRule	51
GaussHermiteRule	34
GaussLaguerreRule	41
QuadratureRuleFactory	53
GaussHermiteRuleFactory	35
GaussLaguerreRuleFactory	43

6 **Hierarchical Index**

Class Index

4.1 Class List

Here are the classes, structs, unions and interfaces with brief descriptions:

Bim1D		
	Class derived from PdeSolver1D, providing a finite volume Box Integration Method (BIM) solver	17
Charge		
	Abstract class providing methods to calculate total electric charge (the rhs in the Poisson equation)	19
ChargeF	Factory	
	Abstract factory to handle at runtime a constitutive relation for the Density of States	21
CsvPars		
	Class providing methods to read numeric content from a .csv file and to store it in Eigen matrices or vectors	22
DosMod		
	Class providing methods to process a simulation to extract the Density of States starting from a parameter list	26
Exponen	ntialCharge	
	Class derived from Charge, under the hypothesis that Density of States is a single exponential	29
Exponen	ntialChargeFactory	
	Concrete factory to handle a single gaussian constitutive relation	33
GaussHe	ermiteRule	
	Class derived from QuadratureRule providing the Gauss-Hermite quadrature rule	34
GaussHe	ermiteRuleFactory	
	Concrete factory to handle a Gauss-Hermite quadrature rule	35
Gaussia		
	Class derived from Charge, under the hypothesis that Density of States is a combination of gaussians	37
Gaussia	nChargeFactory	
	Concrete factory to handle a multiple gaussians constitutive relation	40
GaussLa	aguerreRule aguerre Rule	
	Class derived from QuadratureRule providing the Gauss-Laguerre quadrature rule	41
GaussLa	aguerreRuleFactory	
	Concrete factory to handle a Gauss-Laguerre quadrature rule	43
NonLine	arPoisson1D	
D	Provide a solver for a non-linear Poisson equation	44
ParamLi		
PdeSolve		46
	Abstract class providing methods to assemble matrices to solve one-dimensional PDEs	48
Quadrati		
	Abstract class providing a quadrature rule	51

8 Class Index

QuadratureRuleFactory	
Abstract factory to handle at runtime a quadrature rule	 53

File Index

5.1 File List

Here is a list of all documented files with brief descriptions:

/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/charge.cc	57
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/charge.h	
Classes for computing total electric charge	57
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/csvParser.cc	58
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/csvParser.h	
Tools to store content from a .csv file in matrices or vectors	58
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/dosModel.cc	59
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/dosModel.h	
Mathematical model for Density of States extraction	59
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/factory.cc	60
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/factory.h	
Abstract factories for the DOS constitutive relation and for the quadrature rule	60
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/numerics.cc	61
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/numerics.h	
Generic numeric algorithms	61
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/paramList.cc	62
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/paramList.h	
List of simulation parameters	62
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/physicalConstants.h	
Physical constants	63
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/quadratureRule.cc	64
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/quadratureRule.h	
Quadrature rules	64
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/solvers.cc	65
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/solvers.h	
Generic solvers for PDEs	65
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/typedefs.cc	66
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/typedefs.h	
Typedefs and utility functions	66
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/test/simulate_dos.cc	
A test file	68

10 File Index

Namespace Documentation

6.1 constants Namespace Reference

Numerical constants.

Variables

```
    const Real Q = 1.60217653000000e-19

     Electron charge [C].
• const Real Q2 = Q * Q
     Electron charge squared [C^2].

    const Real K B = 1.38065050000000e-23

     Boltzmann's constant [J \cdot K^{-1}].
• const Real EPS0 = 8.854187817e-12
      Vacuum electrical permittivity [C \cdot V^{-1} \cdot m^{-1}].
• const Real T = 300
     Reference temperature [K].
• const Real V_TH = K_B * T / Q
      Treshold voltage [V].
• const Index PARAMS_NO = 24
     Number of parameters required in input file.
• const Real PI = M_PI

    const Real SQRT_PI = std::sqrt(PI)

const Real PI_M4 = 0.7511255444649425
const Real SQRT_2 = std::sqrt(2)
     \sqrt{2}.
```

6.1.1 Detailed Description

Numerical constants.

6.2 numerics Namespace Reference

Namespace for generic numeric algorithms.

Functions

template<typename ScalarType >

VectorX< ScalarType > sort (const VectorX< ScalarType > &vector)

Function to sort Eigen vectors.

template<typename ScalarType >

VectorXpair< ScalarType > sort_pair (const VectorX< ScalarType > &vector)

Function to sort Eigen vectors, keeping track of indexes.

• Real trapz (const VectorXr &x, const VectorXr &y)

Function to compute approximate integral of y with spacing increment specified by x, using trapezoidal rule.

Real trapz (const VectorXr &y)

Compute the approximate integral of y with unit spacing, using trapezoidal rule.

VectorXr deriv (const VectorXr &, const VectorXr &)

Compute the numeric derivative: $\frac{dy}{dx}$.

• Real interp1 (const VectorXr &, const VectorXr &, const Real &)

Linear 1D interpolation. Interpolate y, defined at points x, at the point xNew.

VectorXr interp1 (const VectorXr &, const VectorXr &, const VectorXr &)

Linear 1D interpolation. Interpolate y, defined at points x, at the points xNew.

• Real error_L2 (const VectorXr &, const VectorXr &, const VectorXr &, const Real &)

Compute the L^2 -norm error between simulated and interpolated values, using trapz.

6.2.1 Detailed Description

Namespace for generic numeric algorithms.

6.2.2 Function Documentation

6.2.2.1 VectorX < ScalarType > sort (const VectorX < ScalarType > & vector)

Function to sort Eigen vectors.

Template Parameters

ScalarType	: the scalar type.
------------	--------------------

Parameters

in	vector	: the vector to be sorted.
----	--------	----------------------------

Returns

the sorted vector.

Definition at line 98 of file numerics.h.

6.2.2.2 VectorXpair < ScalarType > sort_pair (const VectorX < ScalarType > & vector)

Function to sort Eigen vectors, keeping track of indexes.

Template Parameters

	ScalarType	: the scalar type.
Parameters		
raiailleteis		
in	vecto	r: the vector to be sorted.

Returns

an Eigen vector of pairs: (sorted value, corresponding index in the unsorted vector).

Definition at line 107 of file numerics.h.

6.2.2.3 Real trapz (const VectorXr & x, const VectorXr & y)

Function to compute approximate integral of y with spacing increment specified by x, using trapezoidal rule.

Parameters

in	X	: the vector of the discrete domain;
in	у	: the vector of values to integrate.

Returns

the approximate integral value.

Definition at line 12 of file numerics.cc.

6.2.2.4 Real trapz (const VectorXr & y)

Compute the approximate integral of *y* with unit spacing, using trapezoidal rule.

Parameters

in	У	: the vector of values to integrate.

Returns

the approximate integral value.

Definition at line 28 of file numerics.cc.

6.2.2.5 VectorXr deriv (const VectorXr & y, const VectorXr & x)

Compute the numeric derivative: $\frac{dy}{dx}$.

Parameters

in	у	: the vector of values to differentiate;
in	X	: the vector of the discrete domain.

Returns

a vector of the same length as y containing the approximate derivative.

Definition at line 33 of file numerics.cc.

6.2.2.6 Real interp1 (const VectorXr & x, const VectorXr & y, const Real & xNew)

Linear 1D interpolation. Interpolate *y*, defined at points *x*, at the point *xNew*.

Parameters

in	у	: the vector of values to interpolate;
in	X	: the vector of the discrete domain;
in	xNew	: the point to interpolate at.

Returns

a scalar containing the interpolated value.

Definition at line 53 of file numerics.cc.

6.2.2.7 VectorXr interp1 (const VectorXr & x, const VectorXr & y, const VectorXr & xNew)

Linear 1D interpolation. Interpolate y, defined at points x, at the points xNew.

Parameters

in	у	: the vector of values to interpolate;
in	X	: the vector of the discrete domain;
in	xNew	: the vector of points to interpolate at.

Returns

a vector of the same length as *xNew* containing the interpolated values.

Definition at line 74 of file numerics.cc.

6.2.2.8 Real error_L2 (const VectorXr & interp, const VectorXr & simulated, const VectorXr & V, const Real & V_shift)

Compute the L^2 -norm error between simulated and interpolated values, using *trapz*.

Parameters

in	interp	: the interpolated values;
in	simulated	: the simulated values;
in	V	: the vector of the electric potential;
in	V_shift	: shift to the electric potential.

Returns

the value of the L^2 -norm error.

Definition at line 89 of file numerics.cc.

6.3 utility Namespace Reference

Namespace for utilities and auxiliary functions.

Functions

std::string full_path (const std::string &, const std::string &)

Auxiliary function to return the full path to a file.

void print_block (const char *, std::ostream &=std::cout)

Auxiliary function to print a string inside a block.

void print_done (std::ostream &=std::cout)

Auxiliary function to print a "DONE!" string.

6.3.1 Detailed Description

Namespace for utilities and auxiliary functions.

6.3.2 Function Documentation

6.3.2.1 std::string full_path (const std::string & filename, const std::string & relative_directory)

Auxiliary function to return the full path to a file.

Parameters

in	filename	: the filename;
in	relative	: the directory for a relative path.
	directory	

Returns

the variable *filename*, if it contains an absolute path; otherwise returns the concatenation of *relative_directory* and *filename* (i.e. the relative path to *filename*).

Definition at line 12 of file typedefs.cc.

6.3.2.2 void print_block (const char * string, std::ostream & os = std::cout)

Auxiliary function to print a string inside a block.

Parameters

in	string	: the string to print;
out	os	: output stream.

Definition at line 17 of file typedefs.cc.

6.3.2.3 void print_done (std::ostream & os = std::cout)

Auxiliary function to print a "DONE!" string.

Parameters

out	OS	: output stream.

Definition at line 42 of file typedefs.cc.

Namespace Doc	umenta	ation
---------------	--------	-------


Class Documentation

7.1 Bim1D Class Reference

Class derived from PdeSolver1D, providing a finite volume Box Integration Method (BIM) solver.

#include <solvers.h>

Inheritance diagram for Bim1D:

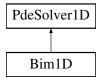

Public Member Functions

• Bim1D ()=delete

Default constructor (deleted since it is required to specify the mesh).

• Bim1D (VectorXr &)

Constructor.

virtual ∼Bim1D ()=default

Destructor (defaulted).

- virtual void assembleAdvDiff (const VectorXr &, const VectorXr &, const VectorXr &, const VectorXr &, const VectorXr &) override

 Assemble the matrix for an advection-diffusion term.
- virtual void assembleStiff (const VectorXr &, const VectorXr &) override

Assemble the matrix for a diffusion term.

• virtual void assembleMass (const VectorXr &, const VectorXr &) override

Assemble the matrix for a reaction term.

Static Public Member Functions

static VectorXr log_mean (const VectorXr &, const VectorXr &)

Compute the element-wise logarithmic mean of two vectors.

• static std::pair< VectorXr,

VectorXr > bernoulli (const VectorXr &)

Compute the values of the Bernoulli function.

18 Class Documentation

Additional Inherited Members

7.1.1 Detailed Description

Class derived from PdeSolver1D, providing a finite volume Box Integration Method (BIM) solver.

Matrices are held in a sparse format.

Definition at line 112 of file solvers.h.

7.1.2 Constructor & Destructor Documentation

7.1.2.1 Bim1D (VectorXr & mesh)

Constructor.

Parameters

in	mesh	: the mesh coordinates.

Definition at line 15 of file solvers.cc.

7.1.3 Member Function Documentation

7.1.3.1 VectorXr log_mean (const VectorXr & x1, const VectorXr & x2) [static]

Compute the element-wise logarithmic mean of two vectors.

$$M_{log}(x_1, x_2) = \frac{x_2 - x_1}{\log x_2 - \log x_1} = \frac{x_2 - x_1}{\log \left(\frac{x_2}{x_1}\right)}.$$

Parameters

in	x1	: the first vector;
in	x2	: the second vector.

Returns

the vector of the logarithmic means.

Definition at line 18 of file solvers.cc.

7.1.3.2 std::pair < VectorXr, VectorXr > bernoulli(const VectorXr & x) [static]

Compute the values of the Bernoulli function.

$$\mathfrak{B}(x) = \frac{x}{e^x - 1} \ .$$

Parameters

in	X	: the vector of the values to compute the Bernoulli function at.

Returns

the pair
$$(\mathfrak{B}(x),\mathfrak{B}(-x))$$
.

Definition at line 49 of file solvers.cc.

7.1.3.3 void assembleAdvDiff (const VectorXr & alpha, const VectorXr & gamma, const VectorXr & eta, const VectorXr & beta) [override], [virtual]

Assemble the matrix for an advection-diffusion term.

Build the Scharfetter-Gummel stabilized stiffness matrix for: $-\nabla \cdot (\alpha \cdot \gamma(\eta \nabla u - \beta u)) = f$.

Parameters

in	alpha	: $lpha$, an element-wise constant function;
in	gamma	: γ , an element-wise linear function;
in	eta	: η , an element-wise linear function;
in	beta	: eta , an element-wise constant function.

Implements PdeSolver1D.

Definition at line 108 of file solvers.cc.

7.1.3.4 void assembleStiff(const VectorXr & eps, const VectorXr & kappa) [override], [virtual]

Assemble the matrix for a diffusion term.

Build the standard finite element stiffness matrix for the diffusion problem: $-\nabla \cdot (\varepsilon \cdot \kappa \nabla u) = f$.

Parameters

in	eps	$: \mathcal{E},$ an element-wise constant function;
in	kappa	: κ , an element-wise linear function.

Implements PdeSolver1D.

Definition at line 168 of file solvers.cc.

7.1.3.5 void assembleMass (const VectorXr & delta, const VectorXr & zeta) [override], [virtual]

Assemble the matrix for a reaction term.

Build the lumped finite element mass matrix for the reaction problem: $\delta \cdot \zeta u = f$.

Parameters

in	delta	: δ , an element-wise constant function;
in	zeta	: ζ , an element-wise linear function.

Implements PdeSolver1D.

Definition at line 177 of file solvers.cc.

The documentation for this class was generated from the following files:

- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/solvers.h
- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/solvers.cc


7.2 Charge Class Reference

Abstract class providing methods to calculate total electric charge (the rhs in the Poisson equation).

#include <charge.h>

Inheritance diagram for Charge:

20 Class Documentation



Public Member Functions

• Charge ()=delete

Default constructor (deleted since it is required to specify a ParamList and a QuadratureRule).

• Charge (const ParamList &, const QuadratureRule &)

Constructor.

virtual ∼Charge ()=default

Destructor (defaulted).

virtual VectorXr charge (const VectorXr &phi)=0

Compute the total charge.

• virtual VectorXr dcharge (const VectorXr &phi)=0

Compute the derivative of the total charge with respect to the electric potential.

Protected Attributes

• const ParamList & params_

Parameter list handler.

const QuadratureRule & rule

Quadrature rule handler.

7.2.1 Detailed Description

Abstract class providing methods to calculate total electric charge (the rhs in the Poisson equation).

Definition at line 25 of file charge.h.

7.2.2 Constructor & Destructor Documentation

7.2.2.1 Charge (const ParamList & params, const QuadratureRule & rule)

Constructor.

Parameters

in	params	: the list of simulation parameters;
in	rule	: a quadrature rule.

Definition at line 14 of file charge.cc.

7.2.3 Member Function Documentation

7.2.3.1 virtual VectorXr charge (const VectorXr & phi) [pure virtual]

Compute the total charge.

Parameters

in	phi	: the electric potential ϕ .

Returns

the total charge q[C].

Implemented in ExponentialCharge, and GaussianCharge.

7.2.3.2 virtual VectorXr dcharge (const VectorXr & phi) [pure virtual]

Compute the derivative of the total charge with respect to the electric potential.

Parameters

in	phi	: the electric potential ϕ .

Returns

the derivative: $\frac{\mathrm{d}q}{\mathrm{d}\varphi}\left[C\cdot V^{-1}\right]$.

Implemented in ExponentialCharge, and GaussianCharge.

The documentation for this class was generated from the following files:


- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/charge.h
- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/charge.cc

7.3 ChargeFactory Class Reference

Abstract factory to handle at runtime a constitutive relation for the Density of States.

#include <factory.h>

Inheritance diagram for ChargeFactory:



Public Member Functions

• ChargeFactory ()=default

Default constructor (defaulted).

virtual ∼ChargeFactory ()=default

Destructor (defaulted).

virtual Charge * BuildCharge (const ParamList ¶ms, const QuadratureRule &rule)=0
 Method to build an abstract Charge object.

7.3.1 Detailed Description

Abstract factory to handle at runtime a constitutive relation for the Density of States.

Definition at line 25 of file factory.h.

22 Class Documentation

7.3.2 Member Function Documentation

7.3.2.1 virtual Charge * BuildCharge (const ParamList & params, const QuadratureRule & rule) [pure virtual]

Method to build an abstract Charge object.

Parameters

in	params	: the list of simulation parameters;
in	rule	: a quadrature rule.

Returns

a pointer to Charge.

Implemented in ExponentialChargeFactory, and GaussianChargeFactory.

The documentation for this class was generated from the following file:

• /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/factory.h

7.4 CsvParser Class Reference

Class providing methods to read numeric content from a .csv file and to store it in Eigen matrices or vectors.

#include <csvParser.h>

Public Member Functions

• CsvParser ()=delete

Default constructor (deleted since it is required to specify at least a filename).

CsvParser (const std::string &, const bool &=true)

Constructor: load the input file and check its compatibility with the code.

virtual ∼CsvParser ()

Destructor: close the input file.

RowVectorXr importRow (const Index &)

Method to import a row from the input file.

MatrixXr importRows (const std::initializer_list< Index > &)

Method to import multiple rows from the input file.

MatrixXr importFirstRows (const Index &)

Method to import the first nRows rows from the input file.

VectorXr importCol (const Index &)

Method to import a column from the input file.

MatrixXr importCols (const std::initializer_list< Index > &)

Method to import multiple columns from the input file.

MatrixXr importFirstCols (const Index &)

Method to import the first nCols columns from the input file.

Real importCell (const Index &, const Index &)

Method to import a single cell from the input file.

MatrixXr importAll ()

Method to import the whole input file.

Getter methods

- const Index & nRows () const
- const Index & nCols () const

Private Member Functions

· void reset ()

Reset all the flags for input_ and go back to the beginning of file (possibly by ignoring headers).

Private Attributes

bool hasHeaders

bool to determine if first row contains headers or not.

Index nRows_

Number of rows in the input file.

Index nCols_

Number of columns in the input file.

· std::ifstream input_

Input stream to input filename.

• std::string line_

Auxiliary variable to store currently processed line.

· char separator_

The separator character detected.

7.4.1 Detailed Description

Class providing methods to read **numeric** content from a .csv file and to store it in Eigen matrices or vectors.

Definition at line 29 of file csvParser.h.

7.4.2 Constructor & Destructor Documentation

7.4.2.1 CsvParser (const std::string & input_filename, const bool & hasHeaders = true)

Constructor: load the input file and check its compatibility with the code.

Parameters

in	input_filename	: the name of the input file;
in	hasHeaders	: bool to specify if first row contains headers or not; if true , first row is always
		ignored.

Definition at line 19 of file csvParser.cc.

7.4.3 Member Function Documentation

7.4.3.1 RowVectorXr importRow (const Index & index)

Method to import a row from the input file.

Parameters

in	index	: the row index.

Returns

a row vector containing the content read.

Definition at line 90 of file csvParser.cc.

24 Class Documentation

7.4.3.2 MatrixXr importRows (const std::initializer_list < Index > & indexes)

Method to import multiple rows from the input file.

Parameters

in	indexes	: initializer list containing the row indexes (e.g. something like {1, 3, 4}).
----	---------	--

Returns

a matrix containing the content read (row by row).

Definition at line 121 of file csvParser.cc.

7.4.3.3 MatrixXr importFirstRows (const Index & nRows)

Method to import the first *nRows* rows from the input file.

Parameters

in	nRows	: the number of rows to import.
----	-------	---------------------------------

Returns

a matrix containing the content read (row by row).

Definition at line 138 of file csvParser.cc.

7.4.3.4 VectorXr importCol (const Index & index)

Method to import a column from the input file.

Parameters

in	index	: the column index.
----	-------	---------------------

Returns

a column vector containing the content read.

Definition at line 152 of file csvParser.cc.

7.4.3.5 MatrixXr importCols (const std::initializer_list< Index > & indexes)

Method to import multiple columns from the input file.

Parameters

in	indexes	: initializer list containing the column indexes (e.g. something like {1, 3, 4}).
----	---------	---

Returns

a matrix containing the content read (column by column).

Definition at line 179 of file csvParser.cc.

7.4.3.6 MatrixXr importFirstCols (const Index & nCols)

Method to import the first *nCols* columns from the input file.

26 Class Documentation

Parameters

in	nCols	: the number of columns to import.

Returns

a matrix containing the content read (column by column).

Definition at line 196 of file csvParser.cc.

7.4.3.7 Real importCell (const Index & rowlndex, const Index & collndex)

Method to import a single cell from the input file.

Parameters

in	rowIndex	: the cell row index.
in	colIndex	: the cell column index.

Returns

a scalar containing the value read.

Definition at line 210 of file csvParser.cc.

7.4.3.8 MatrixXr importAll ()

Method to import the whole input file.

Returns

a matrix containing the content read (cell by cell).

Definition at line 218 of file csvParser.cc.

The documentation for this class was generated from the following files:

- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/csvParser.h
- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/csvParser.cc

7.5 DosModel Class Reference

Class providing methods to process a simulation to extract the Density of States starting from a parameter list.

```
#include <dosModel.h>
```

Public Member Functions

· DosModel ()

Default constructor.

DosModel (const ParamList &)

Explicit conversion constructor.

virtual ~DosModel ()=default

Destructor (defaulted).

· const ParamList & params () const

Getter method.

void simulate (const GetPot &, const std::string &, const std::string &, const std::string &)
const

Perform the simulation.

• void post_process (const GetPot &, const std::string &, std::ostream &, std::ostream &, const VectorXr &, const VectorXr &, const VectorXr &, const VectorXr &)

Perform post-processing.

• void gnuplot commands (const std::string &, std::ostream &) const

Defines commands to generate Gnuplot output files.

• void save_plot (const std::string &, const std::string &, const std::string &, const std::string &) const Save the Gnuplot output files.

Private Attributes

bool initialized

bool to determine if DosModel param_ has been properly initialized.

· ParamList params_

The parameter list.

7.5.1 Detailed Description

Class providing methods to process a simulation to extract the Density of States starting from a parameter list. Definition at line 36 of file dosModel.h.

7.5.2 Constructor & Destructor Documentation

7.5.2.1 DosModel (const ParamList & params) [explicit]

Explicit conversion constructor.

Parameters

in	ns :ap	parameter list.
----	--------	-----------------

Definition at line 19 of file dosModel.cc.

7.5.3 Member Function Documentation

7.5.3.1 void simulate (const GetPot & config, const std::string & input_experim, const std::string & output_plot_subdir, const std::string & output_filename) const

Perform the simulation.

Parameters

in	config : the GetPot configuration object;	
in	input_experim	: the file containing experimental data;
in	output_directory	: directory where to store output files;
in	<pre>output_plot</pre>	
	subdir	

28 Class Documentation

in	output_filename	: prefix for the output filename.

Definition at line 22 of file dosModel.cc.

7.5.3.2 void post_process (const GetPot & config, const std::string & input_experim, std::ostream & output_fitting, std::ostream & output_CV, const VectorXr & x_semic, const VectorXr & dens, const VectorXr & V_simulated, const VectorXr & C_simulated) const

Perform post-processing.

Parameters

in	config	: the GetPot configuration object;
in	input_experim	: the file containing experimental data;
out	output_fitting : output file containing infos about fitting experimental data;	
out	output_CV	: output file containing infos about capacitance-voltage data;
in	x_semic	: the mesh corresponding to the semiconductor domain;
in	dens	: charge density;
in	V_simulated	: simulated voltage values;
in	C_simulated	: simulated capacitance values.

Definition at line 256 of file dosModel.cc.

7.5.3.3 void gnuplot_commands (const std::string & output_CV_filename, std::ostream & os) const

Defines commands to generate Gnuplot output files.

Parameters

in	output_CV filename	: output CV filename;
out	os	: output stream.

Definition at line 349 of file dosModel.cc.

7.5.3.4 void save_plot (const std::string & output_directory, const std::string & output_plot_subdir, const std::string & output_CV_filename, const std::string & output_filename) const

Save the **Gnuplot** output files.

Parameters

in	output_directory	: directory where to store output files;
in	output_plot	: sub-directory where to store Gnuplot files;
	subdir	
in	output_CV	: output CV filename;
	filename	
in	output_filename	: prefix for the output filename.

Definition at line 378 of file dosModel.cc.

The documentation for this class was generated from the following files:


- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/dosModel.h
- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/dosModel.cc

7.6 ExponentialCharge Class Reference

Class derived from Charge, under the hypothesis that Density of States is a single exponential.

#include <charge.h>

Inheritance diagram for ExponentialCharge:



Public Member Functions

ExponentialCharge ()=delete

Default constructor (deleted since it is required to specify a ParamList and a QuadratureRule).

• ExponentialCharge (const ParamList &, const QuadratureRule &)

Constructor.

virtual ∼ExponentialCharge ()=default

Destructor (defaulted).

• virtual VectorXr charge (const VectorXr &) override

Compute the total charge.

virtual VectorXr dcharge (const VectorXr &) override

Compute the derivative of the total charge with respect to the electric potential.

Private Member Functions

• Real n_approx (const Real &, const Real &, const Real &) const

Compute electrons density (per unit volume).

• Real dn_approx (const Real &, const Real &, const Real &) const

Compute the approximate derivative of electrons density (per unit volume) with respect to the electric potential.

Private Attributes

Real N0_

Parameter of the exponential density.

Additional Inherited Members

7.6.1 Detailed Description

Class derived from Charge, under the hypothesis that Density of States is a single exponential.

Provide methods to compute total electric charge and its derivative under the hypothesis that Density of States is a single exponential, whose parameter is got by the constructor, of the form:

$$\frac{N_0}{\lambda} \exp\left(-\frac{(\cdot)}{\lambda}\right)$$
.

Definition at line 122 of file charge.h.

- 7.6.2 Constructor & Destructor Documentation
- 7.6.2.1 ExponentialCharge (const ParamList & params, const QuadratureRule & rule)

Constructor.

Parameters

in	params	: the list of simulation parameters;
in	rule	: a quadrature rule.

Definition at line 107 of file charge.cc.

7.6.3 Member Function Documentation

7.6.3.1 VectorXr charge (const VectorXr & phi) [override], [virtual]

Compute the total charge.

Parameters

i	n	phi	: the electric potential ϕ .

Returns

the total charge q[C].

Implements Charge.

Definition at line 138 of file charge.cc.

7.6.3.2 VectorXr dcharge (const VectorXr & phi) [override], [virtual]

Compute the derivative of the total charge with respect to the electric potential.

Parameters

in	phi	: the electric potential ϕ .

Returns

the derivative: $\frac{\mathrm{d}q}{\mathrm{d}\varphi}\left[C\cdot V^{-1}\right]$.

Implements Charge.

Definition at line 150 of file charge.cc.

7.6.3.3 Real n_approx (const Real & phi, const Real & NO, const Real & lambda) const [private]

Compute electrons density (per unit volume).

Parameters

in	phi	: the electric potential $oldsymbol{arphi}$;
in	N0	: the exponential N_0 ;
in	lambda	: the exponential λ .

Returns

the electrons density $n(\varphi) \left[m^{-3} \right]$.

Definition at line 110 of file charge.cc.

7.6.3.4 Real dn_approx (const Real & phi, const Real & NO, const Real & lambda) const [private]

Compute the approximate derivative of electrons density (per unit volume) with respect to the electric potential.

Parameters

in	phi	: the electric potential ϕ ;
in	N0	: the exponential N_0 ;
in	lambda	: the exponential λ .

Returns

the derivative: $\frac{\mathrm{d}n}{\mathrm{d}\varphi}\left[m^{-3}\cdot V^{-1}\right]$.

Definition at line 124 of file charge.cc.

The documentation for this class was generated from the following files:


- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/charge.h
- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/charge.cc

7.7 ExponentialChargeFactory Class Reference

Concrete factory to handle a single gaussian constitutive relation.

#include <factory.h>

Inheritance diagram for ExponentialChargeFactory:

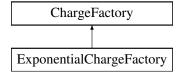

Public Member Functions

· ExponentialChargeFactory ()=default

Default constructor (defaulted).

- virtual \sim ExponentialChargeFactory ()=default

Destructor (defaulted).

• virtual Charge * BuildCharge (const ParamList &, const QuadratureRule &) override

Method to build a concrete Charge object.

7.7.1 Detailed Description

Concrete factory to handle a single gaussian constitutive relation.

Definition at line 79 of file factory.h.

7.7.2 Member Function Documentation

7.7.2.1 Charge * BuildCharge (const ParamList & params, const QuadratureRule & rule) [override], [virtual]

Method to build a concrete Charge object.

Parameters

in	params	: the list of simulation parameters;
in	rule	: a quadrature rule.

Returns

a pointer to ExponentialCharge.

Implements ChargeFactory.

Definition at line 17 of file factory.cc.

The documentation for this class was generated from the following files:


- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/factory.h
- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/factory.cc

7.8 GaussHermiteRule Class Reference

Class derived from QuadratureRule providing the Gauss-Hermite quadrature rule.

#include <quadratureRule.h>

Inheritance diagram for GaussHermiteRule:



Public Member Functions

• GaussHermiteRule ()=delete

Default constructor (deleted since it is required to specify the number of nodes).

• GaussHermiteRule (const Index &)

Constructor.

virtual ∼GaussHermiteRule ()=default

Destructor (defaulted).

· virtual void apply () override

Apply the quadrature rule in order to compute the nodes and weights.

virtual void apply (const GetPot &) override

Apply the quadrature rule reading parameters from a configuration file.

void apply iterative algorithm (const Index &=1000, const Real &=1.0e-14)

Compute nodes and weights using an adapted version of the algorithm presented in: William H. Press, Saul A. Teukolsky, William T. Vetterling, and Brian P. Flannery. 2007. Numerical Recipes: The Art of Scientific Computing (3rd edition). Cambridge University Press, New York, NY, USA.

• void apply_using_eigendecomposition ()

Compute nodes and weights using an eigendecomposition-based algorithm.

Additional Inherited Members

7.8.1 Detailed Description

Class derived from QuadratureRule providing the Gauss-Hermite quadrature rule.

Compute nodes and weights for the *nNodes_*-points approximation of:

$$\int_{-\infty}^{+\infty} w(x) f(x) \, \mathrm{d}x$$

where $w(x) = e^{-x^2}$.

Definition at line 89 of file quadratureRule.h.

7.8.2 Constructor & Destructor Documentation

7.8.2.1 GaussHermiteRule (const Index & nNodes)

Constructor.

Parameters

in	nNodes	: the number of nodes to be used for the quadrature rule.
----	--------	---

Definition at line 23 of file quadratureRule.cc.

7.8.3 Member Function Documentation

7.8.3.1 void apply (const GetPot & config) [override], [virtual]

Apply the quadrature rule reading parameters from a configuration file.

Parameters

in	config	: the GetPot configuration object.
----	--------	------------------------------------

Implements QuadratureRule.

Definition at line 31 of file quadratureRule.cc.

The documentation for this class was generated from the following files:

- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/quadratureRule.h
- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/quadratureRule.cc

7.9 GaussHermiteRuleFactory Class Reference

Concrete factory to handle a Gauss-Hermite quadrature rule.

#include <factory.h>

Inheritance diagram for GaussHermiteRuleFactory:

QuadratureRuleFactory
GaussHermiteRuleFactory

Public Member Functions

· GaussHermiteRuleFactory ()=default

Default constructor (defaulted).

• virtual ~GaussHermiteRuleFactory ()=default

Destructor (defaulted).

• virtual QuadratureRule * BuildRule (const Index &) override

Method to build a concrete QuadratureRule object.

7.9.1 Detailed Description

Concrete factory to handle a Gauss-Hermite quadrature rule.

Definition at line 132 of file factory.h.

7.9.2 Member Function Documentation

7.9.2.1 QuadratureRule * BuildRule (const Index & nNodes) [override], [virtual]

Method to build a concrete QuadratureRule object.

Parameters

in	nNodes	: the number of nodes to be used for the quadrature rule.
----	--------	---

Returns

a pointer to GaussHermiteRule.

Implements QuadratureRuleFactory.

Definition at line 22 of file factory.cc.

The documentation for this class was generated from the following files:


- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/factory.h
- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/factory.cc

7.10 GaussianCharge Class Reference

Class derived from Charge, under the hypothesis that Density of States is a combination of gaussians.

```
#include <charge.h>
```

Inheritance diagram for GaussianCharge:

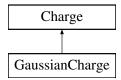

Public Member Functions

GaussianCharge ()=delete

Default constructor (deleted since it is required to specify a ParamList and a QuadratureRule).

GaussianCharge (const ParamList &, const QuadratureRule &)

Constructor.

virtual ∼GaussianCharge ()=default

Destructor (defaulted).

• virtual VectorXr charge (const VectorXr &) override

Compute the total charge.

virtual VectorXr dcharge (const VectorXr &) override

Compute the derivative of the total charge with respect to the electric potential.

Private Member Functions

• Real n_approx (const Real &, const Real &, const Real &) const

Compute electrons density (per unit volume).

• Real dn_approx (const Real &, const Real &, const Real &) const

Compute the approximate derivative of electrons density (per unit volume) with respect to the electric potential.

Additional Inherited Members

7.10.1 Detailed Description

Class derived from Charge, under the hypothesis that Density of States is a combination of gaussians.

Provide methods to compute total electric charge and its derivative under the hypothesis that Density of States is a linear combination of multiple gaussians, whose parameters are read from a ParamList object, of the form:

$$\frac{N_0}{\sqrt{2\pi\sigma^2}}\exp\left(-\frac{\left(\cdot\right)^2}{2\sigma^2}\right) \ .$$

Definition at line 71 of file charge.h.

7.10.2 Constructor & Destructor Documentation

7.10.2.1 GaussianCharge (const ParamList & params, const QuadratureRule & rule)

Constructor.

Parameters

in	params	: the list of simulation parameters;
in	rule	: a quadrature rule.

Definition at line 17 of file charge.cc.

7.10.3 Member Function Documentation

7.10.3.1 VectorXr charge (const VectorXr & phi) [override], [virtual]

Compute the total charge.

Parameters

in	phi	: the electric potential ϕ .
----	-----	-----------------------------------

Returns

the total charge q[C].

Implements Charge.

Definition at line 48 of file charge.cc.

7.10.3.2 VectorXr dcharge (const VectorXr & phi) [override], [virtual]

Compute the derivative of the total charge with respect to the electric potential.

Parameters

in	phi	: the electric potential $oldsymbol{arphi}$.

Returns

the derivative: $\frac{\mathrm{d}q}{\mathrm{d}\phi}\left[C\cdot V^{-1}\right]$.

Implements Charge.

Definition at line 75 of file charge.cc.

7.10.3.3 Real n_approx (const Real & phi, const Real & NO, const Real & sigma) const [private]

Compute electrons density (per unit volume).

Parameters

in	phi	: the electric potential $oldsymbol{arphi}$;
in	N0	: the gaussian mean N_0 ;
in	sigma	: the gaussian standard deviation σ .

Returns

the electrons density $n(\varphi) \lceil m^{-3} \rceil$.

Definition at line 20 of file charge.cc.

7.10.3.4 Real dn_approx (const Real & phi, const Real & NO, const Real & sigma) const [private]

Compute the approximate derivative of electrons density (per unit volume) with respect to the electric potential.

Parameters

in	phi	: the electric potential $oldsymbol{arphi}$;
in	N0	: the gaussian mean N_0 ;
in	sigma	: the gaussian standard deviation $\sigma.$

Returns

the derivative: $\frac{\mathrm{d}n}{\mathrm{d}\varphi}\left[m^{-3}\cdot V^{-1}\right]$.

Definition at line 34 of file charge.cc.

The documentation for this class was generated from the following files:


- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/charge.h
- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/charge.cc

7.11 GaussianChargeFactory Class Reference

Concrete factory to handle a multiple gaussians constitutive relation.

```
#include <factory.h>
```

Inheritance diagram for GaussianChargeFactory:

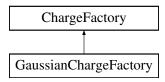

Public Member Functions

· GaussianChargeFactory ()=default

Default constructor (defaulted).

virtual ∼GaussianChargeFactory ()=default

Destructor (defaulted).

virtual Charge * BuildCharge (const ParamList &, const QuadratureRule &) override
 Method to build a concrete Charge object.

7.11.1 Detailed Description

Concrete factory to handle a multiple gaussians constitutive relation.

Definition at line 52 of file factory.h.

7.11.2 Member Function Documentation

7.11.2.1 Charge * BuildCharge (const ParamList & params, const QuadratureRule & rule) [override], [virtual]

Method to build a concrete Charge object.

Parameters

in	params	: the list of simulation parameters;
in	rule	: a quadrature rule.

Returns

a pointer to GaussianCharge.

Implements ChargeFactory.

Definition at line 12 of file factory.cc.

The documentation for this class was generated from the following files:


- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/factory.h
- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/factory.cc

7.12 GaussLaguerreRule Class Reference

Class derived from QuadratureRule providing the Gauss-Laguerre quadrature rule.

#include <quadratureRule.h>

Inheritance diagram for GaussLaguerreRule:



Public Member Functions

GaussLaguerreRule ()=delete

Default constructor (deleted since it is required to specify the number of nodes).

GaussLaguerreRule (const Index &)

Constructor.

virtual ∼GaussLaguerreRule ()=default

Destructor (defaulted).

· virtual void apply () override

Apply the quadrature rule in order to compute the nodes and weights.

· virtual void apply (const GetPot &) override

Apply the quadrature rule reading parameters from a configuration file.

• void apply_iterative_algorithm (const Index &=1000, const Real &=1.0e-14)

Compute nodes and weights using an adapted version of the algorithm presented in: William H. Press, Saul A. Teukolsky, William T. Vetterling, and Brian P. Flannery. 2007. Numerical Recipes: The Art of Scientific Computing (3rd edition). Cambridge University Press, New York, NY, USA.

void apply_using_eigendecomposition ()

Compute nodes and weights using an eigendecomposition-based algorithm.

Static Private Member Functions

static Real log_gamma (const Real &)

Auxiliary function to compute $\log \Gamma(x)$.

Additional Inherited Members

7.12.1 Detailed Description

Class derived from QuadratureRule providing the Gauss-Laguerre quadrature rule.

Compute nodes and weights for the *nNodes_*-points approximation of:

$$\int_0^{+\infty} w(x)f(x) \, \mathrm{d}x$$

where $w(x) = e^{-x}$.

Definition at line 132 of file quadratureRule.h.

7 1 2 2	Constructor 8	Destructor	Documentation
1.12.2	CONSTRUCTOR	v Desiriicior	Documentation

7.12.2.1 GaussLaguerreRule (const Index & nNodes)

Constructor.

Parameters

in	nNodes	: the number of nodes to be used for the quadrature rule.
----	--------	---

Definition at line 143 of file quadratureRule.cc.

7.12.3 Member Function Documentation

```
7.12.3.1 void apply (const GetPot & config ) [override], [virtual]
```

Apply the quadrature rule reading parameters from a configuration file.

Parameters

	T	
in	confia	: the GetPot configuration object.
7.11	comig	inc detrot comparation object.

Implements QuadratureRule.

Definition at line 151 of file quadratureRule.cc.

7.12.3.2 Real log_gamma (const Real & x) [static], [private]

Auxiliary function to compute $\log \Gamma(x)$.

Parameters

in	X	: the point to compute the function at.
----	---	---

Returns

the natural logarithm of the gamma function evaluated at x.

Definition at line 258 of file quadratureRule.cc.

The documentation for this class was generated from the following files:


- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/quadratureRule.h
- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/quadratureRule.cc

7.13 GaussLaguerreRuleFactory Class Reference

Concrete factory to handle a Gauss-Laguerre quadrature rule.

```
#include <factory.h>
```

Inheritance diagram for GaussLaguerreRuleFactory:



Public Member Functions

• GaussLaguerreRuleFactory ()=default

Default constructor (defaulted).

virtual ~GaussLaguerreRuleFactory ()=default

Destructor (defaulted).

• virtual QuadratureRule * BuildRule (const Index &) override

Method to build a concrete QuadratureRule object.

7.13.1 Detailed Description

Concrete factory to handle a Gauss-Laguerre quadrature rule.

Definition at line 158 of file factory.h.

7.13.2 Member Function Documentation

7.13.2.1 QuadratureRule * BuildRule (const Index & nNodes) [override], [virtual]

Method to build a concrete QuadratureRule object.

Parameters

in	nNodes	: the number of nodes to be used for the quadrature rule.
----	--------	---

Returns

a pointer to GaussLaguerreRule.

Implements QuadratureRuleFactory.

Definition at line 27 of file factory.cc.

The documentation for this class was generated from the following files:

- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/factory.h
- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/factory.cc

7.14 NonLinearPoisson1D Class Reference

Provide a solver for a non-linear Poisson equation.

```
#include <solvers.h>
```

Public Member Functions

NonLinearPoisson1D ()=delete

Default constructor (deleted since it is required to specify the solver to be used).

NonLinearPoisson1D (const PdeSolver1D &, const Index &=100, const Real &=1.0e-6)

Constructor.

virtual ∼NonLinearPoisson1D ()=default

Destructor (defaulted).

void apply (const VectorXr &, const VectorXr &, Charge &)

Apply a Newton method to the equation and then discretize it using the solver specified.

Getter methods

- const VectorXr & phi () const
- const VectorXr & norm () const
- const Real & qTot () const
- · const Real & cTot () const

Private Member Functions

SparseXr computeJac (const VectorXr &) const

Compute the Jacobi matrix.

Private Attributes

const PdeSolver1D & solver_

Solver handler.

Index maxIterationsNo_

Maximum number of iterations.

Real tolerance_

Tolerance.

VectorXr phi_

The electric potential.

VectorXr norm_

Vector holding L^{∞} -norm errors for each iteration.

Real qTot

Total charge.

Real cTot_

Total capacitance.

7.14.1 Detailed Description

Provide a solver for a non-linear Poisson equation.

A Newton method is applied in order to solve:

$$-\frac{\mathrm{d}}{\mathrm{d}z}\left(\varepsilon(z)\cdot\frac{\mathrm{d}\varphi}{\mathrm{d}z}(z)\right) = -q\cdot\frac{N_0}{\sqrt{\pi}}\int_{-\infty}^{+\infty}\exp\left(-\alpha^2\right)\left(1+\exp\left(\frac{\sqrt{2}\sigma\alpha-q\varphi(z)}{K_B\cdot T}\right)\right)^{-1}\mathrm{d}\alpha\;.$$

Definition at line 189 of file solvers.h.

7.14.2 Constructor & Destructor Documentation

7.14.2.1 NonLinearPoisson1D (const PdeSolver1D & solver, const Index & maxIterationsNo = 100, const Real & tolerance = 1.0e-6)

Constructor.

Parameters

in	solver	: the solver to be used;
in	maxIterationsNo	: maximum number of iterations desired;
in	tolerance	: tolerance desired.

Definition at line 199 of file solvers.cc.

7.14.3 Member Function Documentation

7.14.3.1 void apply (const VectorXr & mesh, const VectorXr & init_guess, Charge & charge_fun)

Apply a Newton method to the equation and then discretize it using the solver specified.

Parameters

in	mesh	: the mesh;
in	init_guess	: initial guess for the Newton algorithm;
in	charge_fun	: an object of class Charge specifying how to compute total electric charge.

Definition at line 206 of file solvers.cc.

7.14.3.2 SparseXr computeJac (const VectorXr & x) const [private]

Compute the Jacobi matrix.

Parameters

in	X	: the vector where to start from.

Returns

the Jacobi matrix in a sparse format.

Definition at line 327 of file solvers.cc.

The documentation for this class was generated from the following files:

- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/solvers.h
- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/solvers.cc

7.15 ParamList Class Reference

Class providing methods to handle a list of parameters.

#include <paramList.h>

Public Member Functions

• ParamList ()=default

Default constructor (defaulted).

ParamList (const RowVectorXr &)

Explicit conversion constructor.

• virtual \sim ParamList ()=default

Destructor (defaulted).

Getter methods

- const Index & simulationNo () const
- const Real & t_semic () const
- const Real & t_ins () const
- const Real & eps_semic () const
- const Real & eps_ins () const
- · const Real & Wf () const
- const Real & Ea () const
- const Real & N0 () const
- const Real & sigma () const
- const Real & N0_2 () const
- const Real & sigma_2 () const
- const Real & shift_2 () const
- const Real & N0_3 () const
- const Real & sigma_3 () const

```
• const Real & shift_3 () const
       • const Real & N0_4 () const

    const Real & sigma_4 () const

       • const Real & shift_4 () const
       • const Real & N0_exp () const
       • const Real & lambda_exp () const
       • const Index & nNodes () const
       • const Index & nSteps () const
        • const Real & V_min () const
       • const Real & V_max () const
Private Attributes
    · Index simulationNo_
          Simulation number index.

    Real t_semic_

          Semiconductor layer thickness [m].

    Real t ins

          Insulator layer thickness [m].
    · Real eps_semic_
          Semiconductor layer relative electrical permittivity [].
    · Real eps_ins_
          Insulator layer relative electrical permittivity [].

    Real Wf_

          Work-function [V].
    · Real Ea_
          Electron affinity [V].
    • Real N0_
           1st gaussian N_0 [m^{-3}].
    · Real sigma_
           1st gaussian standard deviation (normalized by K_B \cdot T) [].

    Real N0_2_

          2nd gaussian N_0.

    Real sigma_2_

          2nd gaussian standard deviation.
    • Real shift 2
          2nd gaussian shift with respect to the 1st gaussian electric potential.

    Real N0_3_

          3rd gaussian N_0.
    · Real sigma_3_
          3rd gaussian standard deviation.
    · Real shift_3_
          3rd gaussian shift with respect to the 1st gaussian electric potential.

    Real N0_4_

          4th gaussian N_0.
    · Real sigma_4_
          4th gaussian standard deviation.

    Real shift_4_

          4th gaussian shift with respect to the 1st gaussian electric potential.
    · Real N0_exp_
          Exponential N_0.

    Real lambda_exp_
```

Exponential λ .

· Index nNodes_

Number of nodes that form the mesh.

Index nSteps_

Number of steps to simulate.

Real V_min_

Minimum voltage [V].

Real V_max_

Maximum voltage [V].

Friends

- · class GaussianCharge
- · class ExponentialCharge
- · class DosModel

7.15.1 Detailed Description

Class providing methods to handle a list of parameters.

It can include up to 4 gaussians (later combined to compute total charge) and an exponential.

Definition at line 25 of file paramList.h.

7.15.2 Constructor & Destructor Documentation

7.15.2.1 ParamList (const RowVectorXr & list) [explicit]

Explicit conversion constructor.

Parameters

in	list	: a row vector containing a list of parameters (for example got by a CsvParser
		object). Parameters should be sorted in the same order as specified above.

Definition at line 14 of file paramList.cc.

The documentation for this class was generated from the following files:


- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/paramList.h
- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/paramList.cc

7.16 PdeSolver1D Class Reference

Abstract class providing methods to assemble matrices to solve one-dimensional PDEs.

#include <solvers.h>

Inheritance diagram for PdeSolver1D:

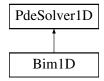

Public Member Functions

PdeSolver1D ()=delete

Default constructor (deleted since it is required to specify the mesh).

PdeSolver1D (VectorXr &)

Constructor.

virtual ~PdeSolver1D ()=default

Destructor (defaulted).

 virtual void assembleAdvDiff (const VectorXr &alpha, const VectorXr &gamma, const VectorXr &eta, const VectorXr &beta)=0

Assemble the matrix for an advection-diffusion term.

virtual void assembleStiff (const VectorXr &eps, const VectorXr &kappa)=0

Assemble the matrix for a diffusion term.

virtual void assembleMass (const VectorXr &delta, const VectorXr &zeta)=0

Assemble the matrix for a reaction term.

Getter methods

- const SparseXr & AdvDiff () const
- const SparseXr & Stiff () const
- const SparseXr & Mass () const

Protected Attributes

VectorXr mesh

The mesh.

Index nNodes

Number of nodes that form the mesh.

SparseXr AdvDiff_

Matrix for an advection-diffusion term.

SparseXr Stiff

Stiffness matrix.

SparseXr Mass_

Mass matrix.

Friends

• class NonLinearPoisson1D

7.16.1 Detailed Description

Abstract class providing methods to assemble matrices to solve one-dimensional PDEs.

Matrices are held in a sparse format.

Definition at line 31 of file solvers.h.

7.16.2 Constructor & Destructor Documentation

7.16.2.1 PdeSolver1D (VectorXr & mesh)

Constructor.

Parameters

in	mesh	: the mesh.

Definition at line 12 of file solvers.cc.

7.16.3 Member Function Documentation

7.16.3.1 virtual void assembleAdvDiff (const VectorXr & alpha, const VectorXr & gamma, const VectorXr & eta, const VectorXr & beta) [pure virtual]

Assemble the matrix for an advection-diffusion term.

Build the matrix for the advection-diffusion problem: $-\nabla \cdot (\alpha \cdot \gamma(\eta \nabla u - \beta u)) = f$.

Parameters

in	alpha	: $lpha$, an element-wise constant function;
in	gamma	: γ , an element-wise linear function;
in	eta	$:\eta$, an element-wise linear function;
in	beta	:eta , an element-wise constant function.

Implemented in Bim1D.

7.16.3.2 virtual void assembleStiff (const VectorXr & eps, const VectorXr & kappa) [pure virtual]

Assemble the matrix for a diffusion term.

Build the matrix for the diffusion problem: $-\nabla \cdot (\varepsilon \cdot \kappa \nabla u) = f$.

Parameters

in	eps	: $arepsilon$, an element-wise constant function;
in	kappa	: κ , an element-wise linear function.

Implemented in Bim1D.

7.16.3.3 virtual void assembleMass (const VectorXr & delta, const VectorXr & zeta) [pure virtual]

Assemble the matrix for a reaction term.

Build the mass matrix for the reaction problem: $\delta \cdot \zeta u = f$.

Parameters

in	delta	: δ , an element-wise constant function;
in	zeta	: ζ , an element-wise linear function.

Implemented in Bim1D.

The documentation for this class was generated from the following files:


- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/solvers.h
- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/solvers.cc

7.17 QuadratureRule Class Reference

Abstract class providing a quadrature rule.

#include <quadratureRule.h>

Inheritance diagram for QuadratureRule:



Public Member Functions

• QuadratureRule ()=delete

Default constructor (deleted since it is required to specify the number of nodes).

QuadratureRule (const Index &)

Constructor.

• virtual \sim QuadratureRule ()=default

Destructor (defaulted).

virtual void apply ()=0

Apply the quadrature rule in order to compute the nodes and weights.

virtual void apply (const GetPot &config)=0

Apply the quadrature rule reading parameters from a configuration file.

Getter methods

- const Index & nNodes () const
- const VectorXr & nodes () const
- const VectorXr & weights () const

Protected Attributes

Index nNodes_

Number of nodes of quadrature.

VectorXr nodes_

Vector containing the computed nodes coordinates.

VectorXr weights_

Vector containing the computed weights.

Friends

- · class GaussianCharge
- · class ExponentialCharge

7.17.1 Detailed Description

Abstract class providing a quadrature rule.

Approximate the integral:

$$\int_{a}^{b} f(x) \, \mathrm{d}x$$

with the finite sum:

$$\sum_{i=1}^{nNodes} w_i \cdot f(x_i)$$

where $\{x_i\}_{i=1}^{nNodes}$ and $\{w_i\}_{i=1}^{nNodes}$ are called respectively nodes and weights.

Definition at line 29 of file quadratureRule.h.

7.17.2 Constructor & Destructor Documentation

7.17.2.1 QuadratureRule (const Index & nNodes)

Constructor.

Parameters

i n	nNodoc	the number of nodes to be used for the quadrature rule.
T11	IIIVUUES	. the number of nodes to be used for the quadrature rule.

Definition at line 14 of file quadratureRule.cc.

7.17.3 Member Function Documentation

7.17.3.1 virtual void apply (const GetPot & config) [pure virtual]

Apply the quadrature rule reading parameters from a configuration file.

Parameters

in	config	: the GetPot configuration object.
----	--------	------------------------------------

Implemented in GaussLaguerreRule, and GaussHermiteRule.

The documentation for this class was generated from the following files:


- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/quadratureRule.h
- /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/quadratureRule.cc

7.18 QuadratureRuleFactory Class Reference

Abstract factory to handle at runtime a quadrature rule.

```
#include <factory.h>
```

Inheritance diagram for QuadratureRuleFactory:

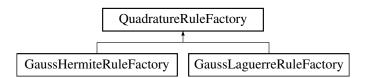

Public Member Functions

· QuadratureRuleFactory ()=default

Default constructor (defaulted).

virtual ~QuadratureRuleFactory ()=default

Destructor (defaulted).

• virtual QuadratureRule * BuildRule (const Index &nNodes)=0

Method to build an abstract QuadratureRule object.

7.18.1 Detailed Description

Abstract factory to handle at runtime a quadrature rule.

Definition at line 106 of file factory.h.

7.18.2 Member Function Documentation

7.18.2.1 virtual QuadratureRule* BuildRule (const Index & nNodes) [pure virtual]

Method to build an abstract QuadratureRule object.

Parameters

in	nNodes	: the number of nodes to be used for the quadrature rule.
----	--------	---

Returns

a pointer to QuadratureRule.

Implemented in GaussLaguerreRuleFactory, and GaussHermiteRuleFactory.

The documentation for this class was generated from the following file:

• /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/factory.h

Chapter 8

File Documentation

8.1 /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/charge.cc File Reference

```
#include "charge.h"
```

8.1.1 Detailed Description

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file charge.cc.

8.2 /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/charge.h File Reference

Classes for computing total electric charge.

```
#include "paramList.h"
#include "quadratureRule.h"
#include "typedefs.h"
```

Classes

· class Charge

Abstract class providing methods to calculate total electric charge (the rhs in the Poisson equation).

· class GaussianCharge

Class derived from Charge, under the hypothesis that Density of States is a combination of gaussians.

• class ExponentialCharge

Class derived from Charge, under the hypothesis that Density of States is a single exponential.

54 File Documentation

8.2.1 Detailed Description

Classes for computing total electric charge.

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file charge.h.

8.3 /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/csvParser.cc File Reference

```
#include "csvParser.h"
```

8.3.1 Detailed Description

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file csvParser.cc.

8.4 /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/csvParser.h File Reference

Tools to store content from a .csv file in matrices or vectors.

```
#include "typedefs.h"
#include <string>
#include <fstream>
#include <sstream>
#include <utility>
```

Classes

class CsvParser

Class providing methods to read numeric content from a .csv file and to store it in Eigen matrices or vectors.

8.4.1 Detailed Description

Tools to store content from a .csv file in matrices or vectors.

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file csvParser.h.

8.5 /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/dosModel.cc File Reference

```
#include "dosModel.h"
```

8.5.1 Detailed Description

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file dosModel.cc.

8.6 /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/dosModel.h File Reference

Mathematical model for Density of States extraction.

```
#include "charge.h"
#include "csvParser.h"
#include "factory.h"
#include "numerics.h"
#include "paramList.h"
#include "quadratureRule.h"
#include "solvers.h"
#include "typedefs.h"
#include "gnuplot-iostream.h"
#include <chrono>
#include <limits>
```

Classes

class DosModel

Class providing methods to process a simulation to extract the Density of States starting from a parameter list.

8.6.1 Detailed Description

Mathematical model for Density of States extraction.

56 File Documentation

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file dosModel.h.

8.7 /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/factory.cc File Reference

```
#include "factory.h"
```

8.7.1 Detailed Description

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file factory.cc.

8.8 /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/factory.h File Reference

Abstract factories for the DOS constitutive relation and for the quadrature rule.

```
#include "charge.h"
#include "paramList.h"
#include "quadratureRule.h"
```

Classes

class ChargeFactory

Abstract factory to handle at runtime a constitutive relation for the Density of States.

class GaussianChargeFactory

Concrete factory to handle a multiple gaussians constitutive relation.

· class ExponentialChargeFactory

Concrete factory to handle a single gaussian constitutive relation.

· class QuadratureRuleFactory

Abstract factory to handle at runtime a quadrature rule.

· class GaussHermiteRuleFactory

Concrete factory to handle a Gauss-Hermite quadrature rule.

· class GaussLaguerreRuleFactory

Concrete factory to handle a Gauss-Laguerre quadrature rule.

8.8.1 Detailed Description

Abstract factories for the DOS constitutive relation and for the quadrature rule.

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file factory.h.

8.9 /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/numerics.cc File Reference

```
#include "numerics.h"
```

8.9.1 Detailed Description

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file numerics.cc.

8.10 /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/numerics.h File Reference

Generic numeric algorithms.

```
#include "typedefs.h"
#include <limits>
```

Namespaces

numerics

Namespace for generic numeric algorithms.

Functions

```
    template<typename ScalarType >
        VectorX< ScalarType > sort (const VectorX< ScalarType > &vector)
        Function to sort Eigen vectors.
```

```
    template<typename ScalarType >
        VectorXpair< ScalarType > sort_pair (const VectorX< ScalarType > &vector)
        Function to sort Eigen vectors, keeping track of indexes.
```

58 File Documentation

Real trapz (const VectorXr &x, const VectorXr &y)

Function to compute approximate integral of y with spacing increment specified by x, using trapezoidal rule.

Real trapz (const VectorXr &y)

Compute the approximate integral of y with unit spacing, using trapezoidal rule.

VectorXr deriv (const VectorXr &, const VectorXr &)

Compute the numeric derivative: $\frac{dy}{dx}$.

Real interp1 (const VectorXr &, const VectorXr &, const Real &)

Linear 1D interpolation. Interpolate y, defined at points x, at the point xNew.

VectorXr interp1 (const VectorXr &, const VectorXr &, const VectorXr &)

Linear 1D interpolation. Interpolate y, defined at points x, at the points xNew.

• Real error_L2 (const VectorXr &, const VectorXr &, const VectorXr &, const Real &)

Compute the L^2 -norm error between simulated and interpolated values, using trapz.

8.10.1 Detailed Description

Generic numeric algorithms.

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file numerics.h.

8.11 /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/paramList.cc File Reference

```
#include "paramList.h"
```

8.11.1 Detailed Description

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file paramList.cc.

8.12 /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/paramList.h File Reference

List of simulation parameters.

```
#include "typedefs.h"
```

Classes

· class ParamList

Class providing methods to handle a list of parameters.

8.12.1 Detailed Description

List of simulation parameters.

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file paramList.h.

8.13 /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/physicalConstants.h File Reference

```
Physical constants.
```

```
#include "typedefs.h"
```

Namespaces

· constants

Numerical constants.

Variables

Treshold voltage [V].

60 File Documentation

8.13.1 Detailed Description

Physical constants.

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file physicalConstants.h.

8.14 /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/quadratureRule.cc File Reference

```
#include "quadratureRule.h"
```

8.14.1 Detailed Description

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file quadratureRule.cc.

8.15 /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/quadratureRule.h File Reference

```
Quadrature rules.
```

```
#include "typedefs.h"
```

Classes

· class QuadratureRule

Abstract class providing a quadrature rule.

· class GaussHermiteRule

Class derived from QuadratureRule providing the Gauss-Hermite quadrature rule.

• class GaussLaguerreRule

Class derived from QuadratureRule providing the Gauss-Laguerre quadrature rule.

8.15.1 Detailed Description

Quadrature rules.

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file quadratureRule.h.

8.16 /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/solvers.cc File Reference

```
#include "solvers.h"
```

8.16.1 Detailed Description

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file solvers.cc.

8.17 /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/solvers.h File Reference

Generic solvers for PDEs.

```
#include "charge.h"
#include "typedefs.h"
#include <utility>
#include <limits>
```

Classes

class PdeSolver1D

Abstract class providing methods to assemble matrices to solve one-dimensional PDEs.

class Bim1D

Class derived from PdeSolver1D, providing a finite volume Box Integration Method (BIM) solver.

• class NonLinearPoisson1D

Provide a solver for a non-linear Poisson equation.

62 File Documentation

8.17.1 Detailed Description

Generic solvers for PDEs.

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file solvers.h.

8.18 /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/typedefs.cc File Reference

```
#include "typedefs.h"
```

8.18.1 Detailed Description

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file typedefs.cc.

8.19 /home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/typedefs.h File Reference

Typedefs and utility functions.

```
#include <Eigen/Dense>
#include <Eigen/Sparse>
#include "GetPot"
#include <iostream>
#include <fstream>
#include "physicalConstants.h"
```

Namespaces

· constants

Numerical constants.

· utility

Namespace for utilities and auxiliary functions.

Macros

• #define Real double

Pre-processor macro for real numbers.

#define Index ptrdiff_t

Pre-processor macro for indexing variables.

Typedefs

```
    typedef Matrix < Real, Dynamic,
Dynamic > MatrixXr
```

Typedef for dense real-valued dynamic-sized matrices.

• typedef Matrix< Real, Dynamic, 1 > VectorXr

Typedef for dense real-valued dynamic-sized column vectors.

typedef Matrix < Real, 1, Dynamic > RowVectorXr

Typedef for dense real-valued dynamic-sized row vectors.

typedef SparseMatrix< Real > SparseXr

Typedef for sparse real-valued dynamic-sized matrices.

```
    template < typename ScalarType >
        using VectorX = Matrix < ScalarType, Dynamic, 1 >
```

Template alias for Eigen vectors.
• template<typename T >

```
using VectorXpair = VectorX < std::pair < T, Index > >
```

Template alias for an Eigen vector of pairs: (ScalarType, Index).

Functions

• std::string full_path (const std::string &, const std::string &)

Auxiliary function to return the full path to a file.

void print_block (const char *, std::ostream &=std::cout)

Auxiliary function to print a string inside a block.

void print_done (std::ostream &=std::cout)

Auxiliary function to print a "DONE!" string.

Variables

```
const Index PARAMS_NO = 24
```

Number of parameters required in input file.

```
• const Real PI = M_PI
```

 π

const Real SQRT_PI = std::sqrt(PI)

$$\sqrt{\pi}$$
.

• const Real PI_M4 = 0.7511255444649425

$$\pi^{-\frac{1}{4}}$$

const Real SQRT_2 = std::sqrt(2)

```
\sqrt{2}.
```

64 File Documentation

8.19.1 Detailed Description

Typedefs and utility functions.

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file typedefs.h.

8.19.2 Typedef Documentation

8.19.2.1 using VectorX = Matrix<ScalarType, Dynamic, 1>

Template alias for Eigen vectors.

Template Parameters

ScalarType : the scalar type.

Definition at line 41 of file typedefs.h.

8.19.2.2 using VectorXpair = VectorX < std::pair < T, Index > >

Template alias for an Eigen vector of pairs: (ScalarType, Index).

Template Parameters

ScalarType : the scalar type.

Definition at line 48 of file typedefs.h.

8.20 /home/elauksap/Dropbox/Progetto-PACS/C++/Source/test/simulate_dos.cc File Reference

A test file.

```
#include "src/dosModel.h"
```

Functions

• int main (const int argc, const char *const *argv, const char *const *envp)

The main function.

8.20.1 Detailed Description

A test file.

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file simulate_dos.cc.

Index

```
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/chargeim1D, 19
                                                            PdeSolver1D, 51
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/alsaegebleStiff
         h, 57
                                                            Bim1D, 19
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/csv- PdeSolver1D, 51
         Parser.cc, 58
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/ee/moulli
         Parser.h, 58
                                                            Bim1D, 18
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/ charge 17
         Model.cc, 59
                                                            assembleAdvDiff, 18
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/dos-
                                                           assembleMass, 19
         Model.h, 59
                                                           assembleStiff, 19
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/factor \textit{y}_{\bar{e}rnoulli,\ 18}
                                                            Bim1D, 18
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/factorgim1D, 18
         h. 60
                                                            log_mean, 18
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/numerics
                                                            ChargeFactory, 22
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/numericsponentialChargeFactory, 33
         h, 61
                                                            GaussianChargeFactory, 41
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/param-
         List.cc, 62
                                                           GaussHermiteRuleFactory, 36
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/param-GaussLaguerreRuleFactory, 43
         List.h, 62
                                                           QuadratureRuleFactory, 53
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/physical
         Constants.h, 63
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/quadrature-Charge, 20
         Rule.cc, 64
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/quadrature-
                                                            icharge, 21
         Rule.h, 64
Huie.ri, 64
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/solvers.-
Charge, 20
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/solvers. ExponentialCharge, 31
                                                            GaussianCharge, 38
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/typedeis-
                                                            BuildCharge, 22
         cc, 66
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/src/fypedels.-ac
                                                            NonLinearPoisson1D, 45
/home/elauksap/Dropbox/Progetto-PACS/C++/Source/test/simstiants, 11
                                                       CsvParser, 22
          _dos.cc, 68
                                                           CsvParser, 23
                                                            CsvParser, 23
apply
                                                           importAll, 26
     GaussHermiteRule, 35
     GaussLaguerreRule, 42
                                                           importCell, 26
                                                           importCol, 25
    NonLinearPoisson1D, 45
                                                           importCols, 25
    QuadratureRule, 53
                                                           importFirstCols, 25
assembleAdvDiff
     Bim1D, 18
                                                           importFirstRows, 25
     PdeSolver1D, 50
                                                           importRow, 23
assembleMass
                                                           importRows, 23
```

INDEX 67

dcharge	importCell
Charge, 21	CsvParser, 26
ExponentialCharge, 32	importCol
GaussianCharge, 38	CsvParser, 25
deriv	importCols
numerics, 13	CsvParser, 25
dn_approx	importFirstCols
	CsvParser, 25
ExponentialCharge, 32	
GaussianCharge, 40	importFirstRows
DosModel, 26	CsvParser, 25
DosModel, 27	importRow
DosModel, 27	CsvParser, 23
gnuplot_commands, 29	importRows
post_process, 27	CsvParser, 23
save_plot, 29	interp1
simulate, 27	numerics, 13, 14
error_L2	log_gamma
numerics, 14	GaussLaguerreRule, 42
ExponentialCharge, 29	log_mean
charge, 31	Bim1D, 18
dcharge, 32	,
dn_approx, 32	n_approx
ExponentialCharge, 30	ExponentialCharge, 32
	GaussianCharge, 38
ExponentialCharge, 30	NonLinearPoisson1D, 44
n_approx, 32	
ExponentialChargeFactory, 33	apply, 45
BuildCharge, 33	computeJac, 45
4.11	NonLinearPoisson1D, 45
full_path	NonLinearPoisson1D, 45
utility, 15	numerics, 11
	deriv, 13
GaussHermiteRule, 34	error_L2, 14
apply, 35	interp1, 13, 14
GaussHermiteRule, 34	sort, 12
GaussHermiteRule, 34	sort_pair, 12
GaussHermiteRuleFactory, 35	trapz, 13
BuildRule, 36	·
GaussLaguerreRule, 41	ParamList, 46
apply, 42	ParamList, 48
GaussLaguerreRule, 42	ParamList, 48
GaussLaguerreRule, 42	PdeSolver1D, 48
log_gamma, 42	assembleAdvDiff, 50
GaussLaguerreRuleFactory, 43	assembleMass, 51
BuildRule, 43	assembleStiff, 51
GaussianCharge, 37	
<u> </u>	PdeSolver1D, 49
charge, 38	PdeSolver1D, 49
dcharge, 38	post_process
dn_approx, 40	DosModel, 27
GaussianCharge, 38	print_block
GaussianCharge, 38	utility, 15
n_approx, 38	print_done
GaussianChargeFactory, 40	utility, 15
BuildCharge, 41	
gnuplot_commands	QuadratureRule, 51
DosModel, 29	apply, 53
	QuadratureRule, 52
importAll	QuadratureRule, 52
CsvParser, 26	QuadratureRuleFactory, 53
•	,

68 INDEX

BuildRule, 53 save_plot DosModel, 29 simulate DosModel, 27 sort numerics, 12 sort_pair numerics, 12 trapz numerics, 13 typedefs.h VectorX, 68 VectorXpair, 68 utility, 14 full_path, 15 print_block, 15 print_done, 15 VectorX typedefs.h, 68 VectorXpair typedefs.h, 68