DOS extraction

Generated by Doxygen 1.8.6

Tue Sep 16 2014 14:25:31

Contents

1	Inde	×														1
	1.1	Introduc	tion				 	 	 	 	 		 		 	1
	1.2	Depend	ancies .				 	 	 	 	 		 		 	1
	1.3	Compile					 	 	 	 	 		 		 	1
	1.4	Set up t	he config	uration	ns		 	 	 	 	 		 		 	2
	1.5	Run! .					 	 	 	 	 		 		 	2
2	Nam	nespace I	ndex													3
	2.1	Namesp	ace List				 	 	 	 	 		 		 	3
3	Hier	archical	Index													5
	3.1	Class H	ierarchy				 	 	 	 	 		 		 	5
4	Clas	s Index														7
	4.1	Class Li	st				 	 	 	 	 		 		 	7
5	File	Index														9
	5.1	File List					 	 ٠.	 	 	 		 		 	9
6	Nam	nespace l	Documer	ntation	1											11
	6.1	constan	ts Names	space I	Refere	nce	 	 	 	 	 		 		 	11
		6.1.1	Detailed	Descri	ption		 	 	 	 	 		 		 	11
	6.2	numerio	s Names	pace F	Referer	nce	 	 	 	 	 		 		 	11
		6.2.1	Detailed	Descri	ption		 	 	 	 	 		 		 	12
		6.2.2	Function	Docun	nentat	ion	 	 	 	 	 		 		 	12
			6.2.2.1	sort .			 	 	 	 	 		 		 	12
			6.2.2.2	sort_	pair .		 	 	 	 	 		 		 	12
			6.2.2.3	trapz			 	 	 	 	 		 		 	13
			6.2.2.4	trapz			 	 	 	 	 		 		 	13
			6.2.2.5	deriv			 	 	 	 	 		 		 	13
			6.2.2.6	interp	o1		 	 	 	 	 		 		 	13
			6.2.2.7	interp	o1		 	 	 	 	 		 		 	14
			6.2.2.8	error	_L2 .		 	 	 	 	 		 		 	14

iv CONTENTS

	6.3	utility N	amespace Reference	14
		6.3.1	Detailed Description	15
		6.3.2	Function Documentation	15
			6.3.2.1 full_path	15
			6.3.2.2 print_block	15
			6.3.2.3 print_done	15
7	Clas	e Docu	nentation 1	17
•	7.1			 17
		7.1.1		18
		7.1.2	·	18
				18
		7.1.3		18
				18
				18
				19
			7.1.3.4 assembleStiff	19
			7.1.3.5 assembleMass	19
	7.2	Charge	Class Reference	19
		7.2.1	Detailed Description	20
		7.2.2	Constructor & Destructor Documentation	20
			7.2.2.1 Charge	20
		7.2.3	Member Function Documentation	20
			7.2.3.1 charge	20
			7.2.3.2 dcharge	21
	7.3	CsvPa	ser Class Reference	21
		7.3.1	Detailed Description	22
		7.3.2	Constructor & Destructor Documentation	22
			7.3.2.1 CsvParser	22
		7.3.3	Member Function Documentation	23
			7.3.3.1 importRow	23
			7.3.3.2 importRows	24
			7.3.3.3 importFirstRows	24
			7.3.3.4 importCol	24
			7.3.3.5 importCols	24
			7.3.3.6 importFirstCols	25
			7.3.3.7 importCell	25
			7.3.3.8 importAll	25
	7.4	DosMo	del Class Reference	25
		7.4.1	Detailed Description	26

CONTENTS

	7.4.2	Construc	ctor & Destructor Documentation	26
		7.4.2.1	DosModel	26
	7.4.3	Member	Function Documentation	26
		7.4.3.1	simulate	26
		7.4.3.2	post_process	27
		7.4.3.3	gnuplot_commands	27
		7.4.3.4	save_plot	27
7.5	Gauss	HermiteRu	ule Class Reference	28
	7.5.1	Detailed	Description	28
	7.5.2	Construc	ctor & Destructor Documentation	29
		7.5.2.1	GaussHermiteRule	29
	7.5.3	Member	Function Documentation	30
		7.5.3.1	apply	30
7.6	Gauss	ianCharge	Class Reference	30
	7.6.1	Detailed	Description	31
	7.6.2	Construc	ctor & Destructor Documentation	31
		7.6.2.1	GaussianCharge	31
	7.6.3	Member	Function Documentation	31
		7.6.3.1	charge	31
		7.6.3.2	dcharge	31
		7.6.3.3	n_approx	31
		7.6.3.4	dn_approx	32
7.7	NonLin	nearPoisso	on1D Class Reference	32
	7.7.1	Detailed	Description	33
	7.7.2	Construc	ctor & Destructor Documentation	33
		7.7.2.1	NonLinearPoisson1D	33
	7.7.3	Member	Function Documentation	33
		7.7.3.1	apply	33
		7.7.3.2	computeJac	34
7.8	Param	List Class	Reference	34
	7.8.1	Detailed	Description	36
	7.8.2	Construc	ctor & Destructor Documentation	36
		7.8.2.1	ParamList	36
7.9	PdeSo	lver1D Cla	ass Reference	36
	7.9.1	Detailed	Description	37
	7.9.2	Construc	ctor & Destructor Documentation	37
		7.9.2.1	PdeSolver1D	37
	7.9.3	Member	Function Documentation	37
		7.9.3.1	assembleAdvDiff	37
		7.9.3.2	assembleStiff	38

vi CONTENTS

			7.9.3.3 assembleMass	38
	7.10	Quadra	atureRule Class Reference	38
		7.10.1	Detailed Description	39
		7.10.2	Constructor & Destructor Documentation	39
			7.10.2.1 QuadratureRule	39
8	File I	Docume	entation	41
	8.1	/home/	/Data/Dropbox/Progetto-PACS/C++/Source/src/charge.h File Reference	41
		8.1.1	Detailed Description	41
	8.2	/home/	/Data/Dropbox/Progetto-PACS/C++/Source/src/csvParser.h File Reference	41
		8.2.1	Detailed Description	42
	8.3	/home/	/Data/Dropbox/Progetto-PACS/C++/Source/src/dosModel.h File Reference	42
		8.3.1	Detailed Description	42
	8.4	/home/	/Data/Dropbox/Progetto-PACS/C++/Source/src/numerics.h File Reference	43
		8.4.1	Detailed Description	43
	8.5	/home/	/Data/Dropbox/Progetto-PACS/C++/Source/src/paramList.h File Reference	43
		8.5.1	Detailed Description	44
	8.6	/home/	/Data/Dropbox/Progetto-PACS/C++/Source/src/physicalConstants.h File Reference	44
		8.6.1	Detailed Description	45
	8.7	/home/	/Data/Dropbox/Progetto-PACS/C++/Source/src/quadratureRule.h File Reference	45
		8.7.1	Detailed Description	45
	8.8	/home/	/Data/Dropbox/Progetto-PACS/C++/Source/src/solvers.h File Reference	45
		8.8.1	Detailed Description	46
	8.9	/home/	/Data/Dropbox/Progetto-PACS/C++/Source/src/typedefs.h File Reference	46
		8.9.1	Detailed Description	47
		8.9.2	Typedef Documentation	47
			8.9.2.1 VectorX	47
			8.9.2.2 VectorXpair	47
	8.10	/home/	/Data/Dropbox/Progetto-PACS/C++/Source/test/simulate_dos.c++ File Reference	48
		8.10.1	Detailed Description	48

Index

49

Index

1.1 Introduction

This program allows to extract the Density of States, assessed by mean capacitance-voltage measurements, in an organic semiconductor device. Simulated values are fitted to experimental data.

Source and header files are written in C++11 language.

The software is intended to be used on a Unix-like operating system.

1.2 Dependancies

The program requires the following libraries to be installed on your system:

- Eigen, to handle with matrices, vectors and linear algebra;
- Gnuplot, a graphical utility to generate plots;
- Boost, a C++ library used by the Gnuplot interface to C++;
- OpenMP, for parallel computing (recommended but not compulsory).

It also uses the following packages, provided in the include/folder:

- GetPot, to parse command-line and configuration files;
- gnuplot-iostream, the C++ interface for Gnuplot.

1.3 Compile

In order to compile a test executable, simply execute one of these commands in a terminal pointing to the root directory of this package:

```
$ make
```

or, if you want the compiler to produce also debugging informations:

```
$ make debug
```

You can specify the name of the test to be compiled (without extension, for example: *simulate_dos*) by passing the variable **NAME** through command-line:

2 Index

```
$ make NAME=test_filename
```

The compiler will generate the test filename executable under the bin/directory.

Repeat these instructions for each test you want to compile.

1.4 Set up the configurations

Note

The default configuration directory is config/.

Before you can run an executable, you have to set up the configuration file (default: *config.pot*). Within it you can find a list of parameters, each of which is commented out to explain what modifying it will entail.

Particularly, the variables *input_params* and *input_experim* can be set, i.e. the filenames where to find input fitting parameters and experimental data respectively. It's recommended (but not compulsory) to put these files in the same directory as the configuration file (otherwise you can specify a relative or absolute path to them).

You can create multiple configuration files, each with different parameter values: the one you aim to use can be specified in the command-line before running.

1.5 Run!

Executables are placed under the bin/directory.

To run by using the default configuration filename (config.pot) simply move to the bin/directory and execute:

```
$ ./test_filename
```

To specify a different configuration file previously saved in the configuration directory:

```
$ ./test_filename -f configuration_filename

Or:
$ ./test_filename --file configuration_filename
```

The variable *configuration_filename* should **not** contain the path.

Warning

Furthermore, if you run the program from a different folder than *bin*/ or if you chose a different configuration directory, you have to manually specify the **full** path to the configuration directory (either absolute or relative to the current directory) by using:

```
$ ./test_filename -d configuration_directory

Or:
$ ./test_filename --directory configuration_directory
```

Once complete, you can find the results of the simulation(s) in the output directory specified in the configuration file (default: *output*/) under *bin*/.

Namespace Index

2.1 Namespace List

Here is a list of all documented namespaces with brief descriptions:

constant	
	Numerical constants
numerics	;
	Namespace for generic numeric algorithms
utility	
	Namespace for utilities and auxiliary functions

Namespace Index

Hierarchical Index

3.1 Class Hierarchy

This inheritance list is sorted roughly, but not completely, alphabetically:

Charge	19
GaussianCharge	30
SsvParser	
OosModel	25
IonLinearPoisson1D	
aramList	34
deSolver1D	36
Bim1D	17
QuadratureRule	38
GaussHermiteRule	28

6 **Hierarchical Index**

Class Index

4.1 Class List

Here are the classes, structs, unions and interfaces with brief descriptions:

Class derived from PdeSolver1D, providing a finite volume Box Integration Method (BIM) solver	17
Abstract class providing methods to calculate total electric charge (the rhs in the Poisson equa-	
tion)	19
ser	
Class providing methods to read content from a .csv file and store it in matrices or vectors	21
del	
Class providing methods to process a simulation to extract the Density of States starting from a	
parameter list	25
lermiteRule	
Class derived from QuadratureRule providing the Gauss-Hermite quadrature rule	28
anCharge	
Class derived from Charge, under the hypothesis that Density of States is a combination of	
gaussians	30
earPoisson1D	
Provide a solver for a non-linear Poisson equation	32
ist	
Class providing methods to handle a list of parameters	34
ver1D	
Abstract class providing methods to assemble matrices to solve one-dimensional PDEs	36
tureRule	
Abstract class providing a quadrature rule	38
	Abstract class providing methods to calculate total electric charge (the rhs in the Poisson equation) Ser Class providing methods to read content from a .csv file and store it in matrices or vectors Class providing methods to process a simulation to extract the Density of States starting from a parameter list ermiteRule Class derived from QuadratureRule providing the Gauss-Hermite quadrature rule InCharge Class derived from Charge, under the hypothesis that Density of States is a combination of gaussians ParPoisson1D Provide a solver for a non-linear Poisson equation ist Class providing methods to handle a list of parameters Per1D Abstract class providing methods to assemble matrices to solve one-dimensional PDEs

8 Class Index

File Index

5.1 File List

Here is a list of all documented files with brief descriptions:

/home/Data/Dropbox/Progetto-PACS/C++/Source/src/charge.c++	??
/home/Data/Dropbox/Progetto-PACS/C++/Source/src/charge.h	
Classes for computing total electric charge	41
/home/Data/Dropbox/Progetto-PACS/C++/Source/src/csvParser.c++	??
/home/Data/Dropbox/Progetto-PACS/C++/Source/src/csvParser.h	
Tools to store content from a .csv file in matrices or vectors	41
/home/Data/Dropbox/Progetto-PACS/C++/Source/src/dosModel.c++	??
/home/Data/Dropbox/Progetto-PACS/C++/Source/src/dosModel.h	
Mathematical model for Density of States extraction	42
/home/Data/Dropbox/Progetto-PACS/C++/Source/src/numerics.c++	??
/home/Data/Dropbox/Progetto-PACS/C++/Source/src/numerics.h	
Generic numeric algorithms	43
/home/Data/Dropbox/Progetto-PACS/C++/Source/src/paramList.c++	??
/home/Data/Dropbox/Progetto-PACS/C++/Source/src/paramList.h	
List of simulation parameters	43
/home/Data/Dropbox/Progetto-PACS/C++/Source/src/physicalConstants.h	
Physical constants	44
/home/Data/Dropbox/Progetto-PACS/C++/Source/src/quadratureRule.c++	??
/home/Data/Dropbox/Progetto-PACS/C++/Source/src/quadratureRule.h	
Quadrature rules	45
/home/Data/Dropbox/Progetto-PACS/C++/Source/src/solvers.c++	??
/home/Data/Dropbox/Progetto-PACS/C++/Source/src/solvers.h	
Generic solvers for PDEs	45
/home/Data/Dropbox/Progetto-PACS/C++/Source/src/typedefs.c++	??
/home/Data/Dropbox/Progetto-PACS/C++/Source/src/typedefs.h	• •
Typedefs and utility functions	46
	40
/home/Data/Dropbox/Progetto-PACS/C++/Source/test/simulate_dos.c++	
A test file	48

10 File Index

Namespace Documentation

6.1 constants Namespace Reference

Numerical constants.

Variables

```
    const double Q = 1.60217653000000e-19

     Electron charge [C].
const double Q2 = Q * Q
     Electron charge squared [C^2].

    const double K B = 1.38065050000000e-23

     Boltzmann's constant [J \cdot K^{-1}].
• const double EPS0 = 8.854187817e-12
      Vacuum electrical permittivity [C \cdot V^{-1} \cdot m^{-1}].
• const double T = 300
     Reference temperature [K].
• const double V_TH = K_B * T / Q
      Treshold voltage [V].
• const unsigned PARAMS_NO = 22
     Number of parameters required in input file.
• const double PI = M_PI
• const double SQRT_PI = std::sqrt(PI)
• const double PI_M4 = 0.7511255444649425
• const double SQRT_2 = std::sqrt(2)
     \sqrt{2}.
```

6.1.1 Detailed Description

Numerical constants.

6.2 numerics Namespace Reference

Namespace for generic numeric algorithms.

Functions

template<typename ScalarType >

VectorX< ScalarType > sort (const VectorX< ScalarType > &vector)

Function to sort Eigen vectors.

template<typename ScalarType >

VectorXpair< ScalarType > sort_pair (const VectorX< ScalarType > &vector)

Function to sort Eigen vectors, keeping track of indexes.

double trapz (const VectorXd &x, const VectorXd &y)

Function to compute approximate integral of y with spacing increment specified by x, using trapezoidal rule.

double trapz (const VectorXd &y)

Compute the approximate integral of y with unit spacing, using trapezoidal rule.

VectorXd deriv (const VectorXd &, const VectorXd &)

Compute the numeric derivative: $\frac{dy}{dx}$.

double interp1 (const VectorXd &, const VectorXd &, const double &)

Linear 1D interpolation. Interpolate y, defined at points x, at the point xNew.

VectorXd interp1 (const VectorXd &, const VectorXd &, const VectorXd &)

Linear 1D interpolation. Interpolate y, defined at points x, at the points xNew.

double error_L2 (const VectorXd &, const VectorXd &, const VectorXd &, const double &)

Compute the L^2 -norm error between simulated and interpolated values, using trapz.

6.2.1 Detailed Description

Namespace for generic numeric algorithms.

6.2.2 Function Documentation

6.2.2.1 VectorX < ScalarType > sort (const VectorX < ScalarType > & vector)

Function to sort Eigen vectors.

Template Parameters

ScalarType	: the scalar type.
------------	--------------------

Parameters

in	vector	: the vector to be sorted.
----	--------	----------------------------

Returns

the sorted vector.

Definition at line 98 of file numerics.h.

6.2.2.2 VectorXpair < ScalarType > sort_pair (const VectorX < ScalarType > & vector)

Function to sort Eigen vectors, keeping track of indexes.

Template Parameters

ScalarType	: the scalar type.
Parameters	

Returns

in

an Eigen vector of pairs: (sorted value, corresponding index in the unsorted vector).

: the vector to be sorted.

Definition at line 107 of file numerics.h.

6.2.2.3 double trapz (const VectorXd & x, const VectorXd & y)

vector

Function to compute approximate integral of y with spacing increment specified by x, using trapezoidal rule.

Parameters

in	X	: the vector of the discrete domain;
in	у	: the vector of values to integrate.

Returns

the approximate integral value.

Definition at line 3 of file numerics.c++.

6.2.2.4 double trapz (const VectorXd & y)

Compute the approximate integral of *y* with unit spacing, using trapezoidal rule.

Parameters

in	У	: the vector of values to integrate.

Returns

the approximate integral value.

Definition at line 18 of file numerics.c++.

6.2.2.5 VectorXd deriv (const VectorXd & y, const VectorXd & x)

Compute the numeric derivative: $\frac{dy}{dx}$.

Parameters

in	у	: the vector of values to differentiate;
in	X	: the vector of the discrete domain.

Returns

a vector of the same length as y containing the approximate derivative.

Definition at line 23 of file numerics.c++.

6.2.2.6 double interp1 (const VectorXd & x, const VectorXd & y, const double & xNew)

Linear 1D interpolation. Interpolate *y*, defined at points *x*, at the point *xNew*.

Parameters

in	у	: the vector of values to interpolate;
in	X	: the vector of the discrete domain;
in	xNew	: the point to interpolate at.

Returns

a scalar containing the interpolated value.

Definition at line 42 of file numerics.c++.

6.2.2.7 VectorXd interp1 (const VectorXd & x, const VectorXd & y, const VectorXd & xNew)

Linear 1D interpolation. Interpolate y, defined at points x, at the points xNew.

Parameters

in	у	: the vector of values to interpolate;
in	X	: the vector of the discrete domain;
in	xNew	: the vector of points to interpolate at.

Returns

a vector of the same length as *xNew* containing the interpolated values.

Definition at line 61 of file numerics.c++.

6.2.2.8 double error_L2 (const VectorXd & interp, const VectorXd & simulated, const VectorXd & V, const double & V_shift)

Compute the L^2 -norm error between simulated and interpolated values, using *trapz*.

Parameters

in	interp	: the interpolated values;
in	simulated	: the simulated values;
in	V	: the vector of the electric potential;
in	V_shift	: shift to the electric potential.

Returns

the value of the L^2 -norm error.

Definition at line 75 of file numerics.c++.

6.3 utility Namespace Reference

Namespace for utilities and auxiliary functions.

Functions

• std::string full_path (const std::string &, const std::string &)

Auxiliary function to return the full path to a file.

void print_block (const char *, std::ostream &=std::cout)

Auxiliary function to print a string inside a block.

void print_done (std::ostream &=std::cout)

Auxiliary function to print a "DONE!" string.

6.3.1 Detailed Description

Namespace for utilities and auxiliary functions.

6.3.2 Function Documentation

6.3.2.1 std::string full_path (const std::string & filename, const std::string & relative_directory)

Auxiliary function to return the full path to a file.

Parameters

in	filename	: the filename;
in	relative	: the directory for a relative path.
	directory	

Returns

the variable *filename*, if it contains an absolute path; otherwise returns the concatenation of *relative_directory* and *filename* (i.e. the relative path to *filename*).

Definition at line 3 of file typedefs.c++.

6.3.2.2 void print_block (const char * string, std::ostream & os = std::cout)

Auxiliary function to print a string inside a block.

Parameters

in	string	: the string to print;
out	os	: output stream.

Definition at line 8 of file typedefs.c++.

6.3.2.3 void print_done (std::ostream & os = std::cout)

Auxiliary function to print a "DONE!" string.

Parameters

out	os	: output stream.
-----	----	------------------

Definition at line 31 of file typedefs.c++.

Names	pace	Docur	ment	ation


Class Documentation

7.1 Bim1D Class Reference

Class derived from PdeSolver1D, providing a finite volume Box Integration Method (BIM) solver.

#include <solvers.h>

Inheritance diagram for Bim1D:

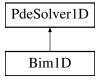

Public Member Functions

• Bim1D ()=delete

Default constructor (deleted since it is required to specify the mesh).

• Bim1D (VectorXd &)

Constructor.

virtual ~Bim1D ()=default

Destructor (defaulted).

virtual void assembleAdvDiff (const VectorXd &, const VectorXd &, const VectorXd &, const VectorXd &) override

Assemble the matrix for an advection-diffusion term.

• virtual void assembleStiff (const VectorXd &, const VectorXd &) override

Assemble the matrix for a diffusion term.

• virtual void assembleMass (const VectorXd &, const VectorXd &) override

Assemble the matrix for a reaction term.

Static Public Member Functions

static VectorXd log_mean (const VectorXd &, const VectorXd &)

Compute the element-wise logarithmic mean of two vectors.

• static std::pair< VectorXd,

VectorXd > bernoulli (const VectorXd &)

Compute the values of the Bernoulli function.

Additional Inherited Members

7.1.1 Detailed Description

Class derived from PdeSolver1D, providing a finite volume Box Integration Method (BIM) solver.

Matrices are held in a sparse format.

Definition at line 111 of file solvers.h.

7.1.2 Constructor & Destructor Documentation

7.1.2.1 Bim1D (VectorXd & mesh)

Constructor.

Parameters

in	mesh	: the mesh coordinates.

Definition at line 6 of file solvers.c++.

7.1.3 Member Function Documentation

7.1.3.1 VectorXd log_mean (const VectorXd & x1, const VectorXd & x2) [static]

Compute the element-wise logarithmic mean of two vectors.

$$M_{log}(x_1, x_2) = \frac{x_2 - x_1}{\log x_2 - \log x_1} = \frac{x_2 - x_1}{\log \left(\frac{x_2}{x_1}\right)}.$$

Parameters

in	x1	: the first vector;
in	x2	: the second vector.

Returns

the vector of the logarithmic means.

Definition at line 9 of file solvers.c++.

7.1.3.2 std::pair < VectorXd, VectorXd > bernoulli (const VectorXd & x) [static]

Compute the values of the Bernoulli function.

$$\mathfrak{B}(x) = \frac{x}{e^x - 1} \ .$$

Parameters

in	X	: the vector of the values to compute the Bernoulli function at.

Returns

the pair
$$(\mathfrak{B}(x),\mathfrak{B}(-x))$$
.

Definition at line 32 of file solvers.c++.

7.1.3.3 void assembleAdvDiff (const VectorXd & alpha, const VectorXd & gamma, const VectorXd & eta, const VectorXd & beta) [override], [virtual]

Assemble the matrix for an advection-diffusion term.

Build the Scharfetter-Gummel stabilized stiffness matrix for: $-\nabla \cdot (\alpha \cdot \gamma(\eta \nabla u - \beta u)) = f$.

Parameters

in	alpha	: $lpha$, an element-wise constant function;
in	gamma	: γ , an element-wise linear function;
in	eta	: η , an element-wise linear function;
in	beta	: eta , an element-wise constant function.

Implements PdeSolver1D.

Definition at line 79 of file solvers.c++.

7.1.3.4 void assembleStiff(const VectorXd & eps, const VectorXd & kappa) [override], [virtual]

Assemble the matrix for a diffusion term.

Build the standard finite element stiffness matrix for the diffusion problem: $-\nabla \cdot (\varepsilon \cdot \kappa \nabla u) = f$.

Parameters

in	eps	$: \mathcal{E},$ an element-wise constant function;
in	kappa	: κ , an element-wise linear function.

Implements PdeSolver1D.

Definition at line 132 of file solvers.c++.

7.1.3.5 void assembleMass (const VectorXd & delta, const VectorXd & zeta) [override], [virtual]

Assemble the matrix for a reaction term.

Build the lumped finite element mass matrix for the reaction problem: $\delta \cdot \zeta u = f$.

Parameters

in	delta	: δ , an element-wise constant function;
in	zeta	: ζ , an element-wise linear function.

Implements PdeSolver1D.

Definition at line 141 of file solvers.c++.

The documentation for this class was generated from the following files:


- /home/Data/Dropbox/Progetto-PACS/C++/Source/src/solvers.h
- /home/Data/Dropbox/Progetto-PACS/C++/Source/src/solvers.c++

7.2 Charge Class Reference

Abstract class providing methods to calculate total electric charge (the rhs in the Poisson equation).

#include <charge.h>

Inheritance diagram for Charge:



Public Member Functions

• Charge ()=delete

Default constructor (deleted since it is required to specify a ParamList and a QuadratureRule).

Charge (const ParamList &, const QuadratureRule &)

Constructor.

virtual ∼Charge ()=default

Destructor (defaulted).

virtual VectorXd charge (const VectorXd &phi)=0

Compute the total charge.

• virtual VectorXd dcharge (const VectorXd &phi)=0

Compute the derivative of the total charge with respect to the electric potential.

Protected Attributes

• const ParamList & params_

Parameter list handler.

const QuadratureRule & rule

Quadrature rule handler.

7.2.1 Detailed Description

Abstract class providing methods to calculate total electric charge (the rhs in the Poisson equation).

Definition at line 25 of file charge.h.

7.2.2 Constructor & Destructor Documentation

7.2.2.1 Charge (const ParamList & params, const QuadratureRule & rule)

Constructor.

Parameters

in	params	: the list of simulation parameters;
in	rule	: a quadrature rule.

Definition at line 5 of file charge.c++.

7.2.3 Member Function Documentation

7.2.3.1 virtual VectorXd charge (const VectorXd & phi) [pure virtual]

Compute the total charge.

Parameters

in	phi	: the electric potential ϕ .
----	-----	-----------------------------------

Returns

the total charge q[C].

Implemented in GaussianCharge.

7.2.3.2 virtual VectorXd dcharge (const VectorXd & phi) [pure virtual]

Compute the derivative of the total charge with respect to the electric potential.

Parameters

in	phi	: the electric potential ϕ .

Returns

the derivative: $\frac{\mathrm{d}q}{\mathrm{d}\varphi}\left[C\cdot V^{-1}\right]$.

Implemented in GaussianCharge.

The documentation for this class was generated from the following files:

- /home/Data/Dropbox/Progetto-PACS/C++/Source/src/charge.h
- /home/Data/Dropbox/Progetto-PACS/C++/Source/src/charge.c++

7.3 CsvParser Class Reference

Class providing methods to read content from a .csv file and store it in matrices or vectors.

```
#include <csvParser.h>
```

Public Member Functions

CsvParser ()=delete

Default constructor (deleted since it is required to specify at least a filename).

CsvParser (const std::string &, const bool &=true)

Constructor: load the input file and check its compatibility with the code.

virtual ∼CsvParser ()

Destructor: close the input file.

RowVectorXd importRow (const unsigned &)

Method to import a row from the input file.

MatrixXd importRows (const std::initializer_list< unsigned > &)

Method to import multiple rows from the input file.

MatrixXd importFirstRows (const unsigned &)

Method to import the first nRows rows from the input file.

VectorXd importCol (const unsigned &)

Method to import a column from the input file.

MatrixXd importCols (const std::initializer_list< unsigned > &)

Method to import multiple columns from the input file.

MatrixXd importFirstCols (const unsigned &)

Method to import the first nCols columns from the input file.

• double importCell (const unsigned &, const unsigned &)

Method to import a single cell from the input file.

MatrixXd importAll ()

Method to import the whole input file.

Getter methods

- · const unsigned & nRows () const
- · const unsigned & nCols () const

Private Member Functions

• void reset ()

Reset all the flags for input_ and go back to the beginning of file (possibly by ignoring headers).

Private Attributes

bool hasHeaders

bool to determine if first row contains header information or not.

unsigned nRows

No. of rows in the input file.

unsigned nCols_

No. of columns in the input file.

• std::ifstream input_

Input stream to input_filename.

• std::string line_

Auxiliary variable to store currently processed line.

· char separator_

The separator character detected.

7.3.1 Detailed Description

Class providing methods to read content from a .csv file and store it in matrices or vectors.

Definition at line 28 of file csvParser.h.

7.3.2 Constructor & Destructor Documentation

7.3.2.1 CsvParser (const std::string & input_filename, const bool & hasHeaders = true)

Constructor: load the input file and check its compatibility with the code.

Parameters

in	input_filename	: the input filename;
in	hasHeaders	: bool to determine if first row contains header information or not; if true , first
		row is always ignored.

Definition at line 10 of file csvParser.c++.

- 7.3.3 Member Function Documentation
- 7.3.3.1 RowVectorXd importRow (const unsigned & index)

Method to import a row from the input file.

Parameters

in	index	: the row index.
----	-------	------------------

Returns

a row vector containing the content read.

Definition at line 58 of file csvParser.c++.

7.3.3.2 MatrixXd importRows (const std::initializer_list< unsigned > & indexes)

Method to import multiple rows from the input file.

Parameters

in	indexes	: initializer list containing the row indexes (e.g. something like {1, 3, 4}).
----	---------	--

Returns

a matrix containing the content read (row by row).

Definition at line 87 of file csvParser.c++.

7.3.3.3 MatrixXd importFirstRows (const unsigned & nRows)

Method to import the first *nRows* rows from the input file.

Parameters

in	nRows	: the number of rows to import.
----	-------	---------------------------------

Returns

a matrix containing the content read (row by row).

Definition at line 103 of file csvParser.c++.

7.3.3.4 VectorXd importCol (const unsigned & index)

Method to import a column from the input file.

Parameters

in

Returns

a column vector containing the content read.

Definition at line 116 of file csvParser.c++.

7.3.3.5 MatrixXd importCols (const std::initializer_list< unsigned > & indexes)

Method to import multiple columns from the input file.

Parameters

in	indexes	: initializer list containing the column indexes (e.g. something like {1, 3, 4}).

Returns

a matrix containing the content read (column by column).

Definition at line 141 of file csvParser.c++.

7.3.3.6 MatrixXd importFirstCols (const unsigned & nCols)

Method to import the first *nCols* columns from the input file.

Parameters

in	nCols	: the number of columns to import.
----	-------	------------------------------------

Returns

a matrix containing the content read (column by column).

Definition at line 157 of file csvParser.c++.

7.3.3.7 double importCell (const unsigned & rowIndex, const unsigned & colIndex)

Method to import a single cell from the input file.

Parameters

in	rowIndex	: the cell row index.
in	collndex	: the cell column index.

Returns

a scalar containing the value read.

Definition at line 170 of file csvParser.c++.

7.3.3.8 MatrixXd importAll ()

Method to import the whole input file.

Returns

a matrix containing the content read (cell by cell).

Definition at line 178 of file csvParser.c++.

The documentation for this class was generated from the following files:

- /home/Data/Dropbox/Progetto-PACS/C++/Source/src/csvParser.h
- /home/Data/Dropbox/Progetto-PACS/C++/Source/src/csvParser.c++

7.4 DosModel Class Reference

Class providing methods to process a simulation to extract the Density of States starting from a parameter list.

#include <dosModel.h>

Public Member Functions

· DosModel ()

Default constructor.

DosModel (const ParamList &)

Explicit conversion constructor.

virtual ~DosModel ()=default

Destructor (defaulted).

· const ParamList & params () const

Getter method.

void simulate (const GetPot &, const std::string &, const std::string &, const std::string &)
const

Perform the simulation.

 void post_process (const GetPot &, const std::string &, std::ostream &, std::ostream &, const VectorXd &, const VectorXd &, const VectorXd &, const VectorXd &) const

Perform post-processing.

• void gnuplot commands (const std::string &, std::ostream &) const

Defines commands to generate Gnuplot output files.

• void save_plot (const std::string &, const std::string &, const std::string &, const std::string &) const Save the Gnuplot output files.

Private Attributes

bool initialized

bool to determine if DosModel param_ has been properly initialized.

· ParamList params_

The parameter list.

7.4.1 Detailed Description

Class providing methods to process a simulation to extract the Density of States starting from a parameter list. Definition at line 35 of file dosModel.h.

7.4.2 Constructor & Destructor Documentation

7.4.2.1 DosModel (const ParamList & params) [explicit]

Explicit conversion constructor.

Parameters

in	params	: a parameter list.
----	--------	---------------------

Definition at line 10 of file dosModel.c++.

7.4.3 Member Function Documentation

7.4.3.1 void simulate (const GetPot & config, const std::string & input_experim, const std::string & output_plot_subdir, const std::string & output_filename) const

Perform the simulation.

Parameters

in	config	: the GetPot configuration object;
in	input_experim	: the file containing experimental data;
in	output_directory	: directory where to store output files;
in	output_plot	: sub-directory where to store Gnuplot files;
	subdir	
in	output_filename	: prefix for the output filename.

Definition at line 13 of file dosModel.c++.

7.4.3.2 void post_process (const GetPot & config, const std::string & input_experim, std::ostream & output_fitting, std::ostream & output_CV, const VectorXd & x_semic, const VectorXd & dens, const VectorXd & V_simulated, const VectorXd & C_simulated) const

Perform post-processing.

Parameters

in	config	: the GetPot configuration object;
in	input_experim	: the file containing experimental data;
out	output_fitting	: output file containing infos about fitting experimental data;
out	output_CV	: output file containing infos about capacitance-voltage data;
in	x_semic	: the mesh corresponding to the semiconductor domain;
in	dens	: charge density;
in	V_simulated	: simulated voltage values;
in	C_simulated	: simulated capacitance values.

Definition at line 172 of file dosModel.c++.

7.4.3.3 void gnuplot_commands (const std::string & output_CV_filename, std::ostream & os) const

Defines commands to generate Gnuplot output files.

Parameters

in	output_CV filename	: output CV filename;
out	os	: output stream.

Definition at line 257 of file dosModel.c++.

7.4.3.4 void save_plot (const std::string & output_directory, const std::string & output_plot_subdir, const std::string & output_CV_filename, const std::string & output_filename) const

Save the Gnuplot output files.

Parameters

in	output_directory	: directory where to store output files;
in	output_plot	: sub-directory where to store Gnuplot files;
	subdir	
in	output_CV	: output CV filename;
	filename	

in	output filename	: prefix for the output filename.
	outputoc	i promition and datpart mortalinor

Definition at line 286 of file dosModel.c++.

The documentation for this class was generated from the following files:


- /home/Data/Dropbox/Progetto-PACS/C++/Source/src/dosModel.h
- /home/Data/Dropbox/Progetto-PACS/C++/Source/src/dosModel.c++

7.5 GaussHermiteRule Class Reference

Class derived from QuadratureRule providing the Gauss-Hermite quadrature rule.

#include <quadratureRule.h>

Inheritance diagram for GaussHermiteRule:

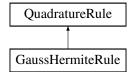

Public Member Functions

• GaussHermiteRule ()=delete

Default constructor (deleted since it is required to specify the no. of nodes).

GaussHermiteRule (const unsigned &)

Constructor.

virtual ∼GaussHermiteRule ()=default

Destructor (defaulted).

• virtual void apply () override

Apply the quadrature rule in order to compute the nodes and weights.

void apply (const GetPot &)

Apply the quadrature rule reading parameters from a configuration file.

void apply_iterative_algorithm (const unsigned &=1000, const double &=1.0e-14)

Compute nodes and weights using an adapted version of the algorithm presented in: William H. Press, Saul A. Teukolsky, William T. Vetterling, and Brian P. Flannery. 2007. Numerical Recipes: The Art of Scientific Computing (3rd edition). Cambridge University Press, New York, NY, USA.

• void apply_using_eigendecomposition ()

Compute nodes and weights using an eigendecomposition-based algorithm.

Additional Inherited Members

7.5.1 Detailed Description

Class derived from QuadratureRule providing the Gauss-Hermite quadrature rule.

Compute nodes and weights for the nNodes -points approximation of

$$\int_{-\infty}^{+\infty} w(x) f(x) \, \mathrm{d}x$$

where $w(x) = e^{-x^2}$.

Definition at line 82 of file quadratureRule.h.

7.5.2 Constructor & Destructor Documentation

7.5.2.1 GaussHermiteRule (const unsigned & nNodes)

Constructor.

Parameters

l in	nNodes	: the no. of nodes to be used for the quadrature rule.
		The state of the s

Definition at line 14 of file quadratureRule.c++.

7.5.3 Member Function Documentation

7.5.3.1 void apply (const GetPot & config)

Apply the quadrature rule reading parameters from a configuration file.

Parameters

in	config	: the GetPot configuration object.
----	--------	------------------------------------

Definition at line 22 of file quadratureRule.c++.

The documentation for this class was generated from the following files:


- /home/Data/Dropbox/Progetto-PACS/C++/Source/src/quadratureRule.h
- /home/Data/Dropbox/Progetto-PACS/C++/Source/src/quadratureRule.c++

7.6 GaussianCharge Class Reference

Class derived from Charge, under the hypothesis that Density of States is a combination of gaussians.

#include <charge.h>

Inheritance diagram for GaussianCharge:



Public Member Functions

• GaussianCharge ()=delete

Default constructor (deleted since it is required to specify a ParamList and a QuadratureRule).

• GaussianCharge (const ParamList &, const QuadratureRule &)

Constructor.

 $\bullet \ \ \text{virtual} \sim \\ \text{GaussianCharge ()=} \\ \text{default}$

Destructor (defaulted).

• virtual VectorXd charge (const VectorXd &) override

Compute the total charge.

• virtual VectorXd dcharge (const VectorXd &) override

Compute the derivative of the total charge with respect to the electric potential.

Private Member Functions

- double n_approx (const double &, const double &, const double &) const
 Compute electrons density (per unit volume).
- double dn_approx (const double &, const double &) const
 Compute the approximate derivative of electrons density (per unit volume) with respect to the electric potential.

Additional Inherited Members

7.6.1 Detailed Description

Class derived from Charge, under the hypothesis that Density of States is a combination of gaussians.

Provide methods to compute total electric charge and its derivative under the hypothesis that Density of States is a linear combination of multiple gaussians, whose parameters are read from a ParamList object.

Definition at line 70 of file charge.h.

7.6.2 Constructor & Destructor Documentation

7.6.2.1 GaussianCharge (const ParamList & params, const QuadratureRule & rule)

Constructor.

Parameters

in	params	: the list of simulation parameters;
in	rule	: a quadrature rule.

Definition at line 8 of file charge.c++.

7.6.3 Member Function Documentation

7.6.3.1 VectorXd charge (const VectorXd & phi) [override], [virtual]

Compute the total charge.

Parameters

in phi : the electric potential φ .	ıın
---	-----

Returns

the total charge q[C].

Implements Charge.

Definition at line 37 of file charge.c++.

7.6.3.2 VectorXd dcharge (const VectorXd & phi) [override], [virtual]

Compute the derivative of the total charge with respect to the electric potential.

Parameters

ı			
	in	phi	: the electric potential ϕ .

Returns

the derivative: $\frac{\mathrm{d}q}{\mathrm{d}\varphi}\left[C\cdot V^{-1}\right]$.

Implements Charge.

Definition at line 60 of file charge.c++.

7.6.3.3 double n_approx (const double & phi, const double & NO, const double & sigma) const [private]

Compute electrons density (per unit volume).

Parameters

in	phi	: the electric potential ϕ ;
in	N0	: the gaussian mean N_0 ;
in	sigma	: the gaussian standard deviation σ .

Returns

the electrons density $n(\varphi) \left\lceil m^{-3} \right\rceil$.

Definition at line 11 of file charge.c++.

7.6.3.4 double dn_approx (const double & phi, const double & NO, const double & sigma) const [private]

Compute the approximate derivative of electrons density (per unit volume) with respect to the electric potential.

Parameters

in	phi	: the electric potential $oldsymbol{arphi}$;
in	N0	: the gaussian mean N_0 ;
in	sigma	: the gaussian standard deviation $\sigma.$

Returns

the derivative: $\frac{\mathrm{d}n}{\mathrm{d}\varphi}\left[m^{-3}\cdot V^{-1}\right]$.

Definition at line 24 of file charge.c++.

The documentation for this class was generated from the following files:

- /home/Data/Dropbox/Progetto-PACS/C++/Source/src/charge.h
- /home/Data/Dropbox/Progetto-PACS/C++/Source/src/charge.c++

7.7 NonLinearPoisson1D Class Reference

Provide a solver for a non-linear Poisson equation.

#include <solvers.h>

Public Member Functions

• NonLinearPoisson1D ()=delete

Default constructor (deleted since it is required to specify the solver to be used).

NonLinearPoisson1D (const PdeSolver1D &, const unsigned &=100, const double &=1.0e-6)

Constructor.

virtual ~NonLinearPoisson1D ()=default

Destructor (defaulted).

void apply (const VectorXd &, Charge &)

Apply a Newton method to the equation and then discretize it using the solver specified.

Getter methods

- const VectorXd & phi () const
- const VectorXd & norm () const
- · const double & qTot () const
- · const double & cTot () const

Private Member Functions

SparseXd computeJac (const VectorXd &) const

Compute the Jacobi matrix.

Private Attributes

const PdeSolver1D & solver_

Solver handler.

unsigned maxIterationsNo

Maximum no. of iterations.

· double tolerance_

Tolerance.

VectorXd phi_

The electric potential.

VectorXd norm_

Vector holding L^{∞} -norm errors for each iteration.

double qTot_

Total charge.

double cTot_

Total capacitance.

7.7.1 Detailed Description

Provide a solver for a non-linear Poisson equation.

A Newton method is applied in order to solve:

$$-\frac{\mathrm{d}}{\mathrm{d}z}\left(\varepsilon(z)\cdot\frac{\mathrm{d}\varphi}{\mathrm{d}z}(z)\right) = -q\cdot\frac{N_0}{\sqrt{\pi}}\int_{-\infty}^{+\infty}\exp\left(-\alpha^2\right)\left(1+\exp\left(\frac{\sqrt{2}\sigma\alpha-q\varphi(z)}{K_B\cdot T}\right)\right)^{-1}\mathrm{d}\alpha\;.$$

Definition at line 190 of file solvers.h.

- 7.7.2 Constructor & Destructor Documentation
- 7.7.2.1 NonLinearPoisson1D (const PdeSolver1D & solver, const unsigned & maxIterationsNo = 100, const double & tolerance = 1.0e-6)

Constructor.

Parameters

	in	solver	: the solver to be used;
ĺ	in	maxIterationsNo	: maximum no. of iterations desired;
ĺ	in	tolerance	: tolerance desired.

Definition at line 162 of file solvers.c++.

7.7.3 Member Function Documentation

7.7.3.1 void apply (const VectorXd & mesh, const VectorXd & init_guess, Charge & charge_fun)

Apply a Newton method to the equation and then discretize it using the solver specified.

Parameters

in	mesh	: the mesh;
in	init_guess	: initial guess for the Newton algorithm;
in	charge_fun	: an object of class Charge specifying how to compute total electric charge.

Definition at line 165 of file solvers.c++.

7.7.3.2 SparseXd computeJac (const VectorXd & x) const [private]

Compute the Jacobi matrix.

Parameters

in	X	: the vector where to start from.
----	---	-----------------------------------

Returns

the Jacobi matrix in a sparse format.

Definition at line 265 of file solvers.c++.

The documentation for this class was generated from the following files:

- /home/Data/Dropbox/Progetto-PACS/C++/Source/src/solvers.h
- /home/Data/Dropbox/Progetto-PACS/C++/Source/src/solvers.c++

7.8 ParamList Class Reference

Class providing methods to handle a list of parameters.

#include <paramList.h>

Public Member Functions

• ParamList ()=default

Default constructor (defaulted).

ParamList (const RowVectorXd &)

Explicit conversion constructor.

• virtual \sim ParamList ()=default

Destructor (defaulted).

Getter methods

7.8 ParamList Class Reference · const unsigned & simulationNo () const • const double & t_semic () const • const double & t_ins () const · const double & eps_semic () const · const double & eps ins () const · const double & Wf () const · const double & Ea () const const double & N0 () const • const double & sigma () const • const double & N0_2 () const • const double & sigma_2 () const • const double & shift_2 () const • const double & N0_3 () const • const double & sigma_3 () const · const double & shift 3 () const • const double & N0_4 () const • const double & sigma_4 () const · const double & shift_4 () const · const unsigned & nNodes () const · const unsigned & nSteps () const const double & V_min () const · const double & V max () const Index of the simulation.

Private Attributes

```
    unsigned simulationNo_

• double t_semic_
      Semiconductor layer thickness [m].
• double t_ins_
      Insulator layer thickness [m].

    double eps_semic

      Semiconductor layer relative electrical permittivity [].
· double eps_ins_
      Insulator layer relative electrical permittivity [].

    double Wf

      Work-function [V].
• double Ea_
      Electron affinity [V].

    double N0

      1st gaussian mean \lceil m^{-3} \rceil.
· double sigma_
      1st gaussian standard deviation (normalized by K_B \cdot T) [].
• double N0_2_
      2nd gaussian mean.
• double sigma_2_
      2nd gaussian standard deviation.

    double shift 2

      2nd gaussian shift with respect to the 1st gaussian electric potential.

 double N0 3

      3rd gaussian mean.

    double sigma 3

      3rd gaussian standard deviation.

    double shift 3

      3rd gaussian shift with respect to the 1st gaussian electric potential.
```

```
 double N0_4_
```

4th gaussian mean.

• double sigma_4_

4th gaussian standard deviation.

double shift 4

4th gaussian shift with respect to the 1st gaussian electric potential.

unsigned nNodes_

No. of nodes that form the mesh.

· unsigned nSteps_

No. of steps to simulate.

double V min

Minimum voltage [V].

double V_max_

Maximum voltage [V].

Friends

- · class GaussianCharge
- · class DosModel

7.8.1 Detailed Description

Class providing methods to handle a list of parameters.

It can include up to 4 gaussians, later combined to compute total charge.

Definition at line 25 of file paramList.h.

7.8.2 Constructor & Destructor Documentation

7.8.2.1 ParamList (const RowVectorXd & list) [explicit]

Explicit conversion constructor.

Parameters

in	list	: a row vector containing a parameters list (for example got by a CsvParser
		object). Parameters should be sorted in the same order as specified above.

Definition at line 5 of file paramList.c++.

The documentation for this class was generated from the following files:


- /home/Data/Dropbox/Progetto-PACS/C++/Source/src/paramList.h
- /home/Data/Dropbox/Progetto-PACS/C++/Source/src/paramList.c++

7.9 PdeSolver1D Class Reference

Abstract class providing methods to assemble matrices to solve one-dimensional PDEs.

#include <solvers.h>

Inheritance diagram for PdeSolver1D:



Public Member Functions

• PdeSolver1D ()=delete

Default constructor (deleted since it is required to specify the mesh).

PdeSolver1D (VectorXd &)

Constructor.

virtual ∼PdeSolver1D ()=default

Destructor (defaulted).

 virtual void assembleAdvDiff (const VectorXd &alpha, const VectorXd &gamma, const VectorXd &eta, const VectorXd &beta)=0

Assemble the matrix for an advection-diffusion term.

virtual void assembleStiff (const VectorXd &eps, const VectorXd &kappa)=0

Assemble the matrix for a diffusion term.

• virtual void assembleMass (const VectorXd &delta, const VectorXd &zeta)=0

Assemble the matrix for a reaction term.

Getter methods

- const SparseXd & AdvDiff () const
- const SparseXd & Stiff () const
- · const SparseXd & Mass () const

Protected Attributes

VectorXd mesh

The mesh.

unsigned nNodes

No. of nodes that form the mesh.

SparseXd AdvDiff

Matrix for an advection-diffusion term.

SparseXd Stiff

Stiffness matrix.

SparseXd Mass_

Mass matrix.

Friends

· class NonLinearPoisson1D

7.9.1 Detailed Description

Abstract class providing methods to assemble matrices to solve one-dimensional PDEs.

Matrices are held in a sparse format.

Definition at line 31 of file solvers.h.

7.9.2 Constructor & Destructor Documentation

7.9.2.1 PdeSolver1D (VectorXd & mesh)

Constructor.

Parameters

in	mesh	: the mesh.

Definition at line 3 of file solvers.c++.

7.9.3 Member Function Documentation

7.9.3.1 virtual void assembleAdvDiff (const VectorXd & alpha, const VectorXd & gamma, const VectorXd & eta, const VectorXd & beta) [pure virtual]

Assemble the matrix for an advection-diffusion term.

Build the matrix for the advection-diffusion problem: $-\nabla \cdot (\alpha \cdot \gamma(\eta \nabla u - \beta u)) = f$.

Parameters

in	alpha	: $lpha$, an element-wise constant function;
in	gamma	: γ , an element-wise linear function;
in	eta	: η , an element-wise linear function;
in	beta	:eta , an element-wise constant function.

Implemented in Bim1D.

7.9.3.2 virtual void assembleStiff (const VectorXd & eps, const VectorXd & kappa) [pure virtual]

Assemble the matrix for a diffusion term.

Build the matrix for the diffusion problem: $-\nabla \cdot (\varepsilon \cdot \kappa \nabla u) = f$.

Parameters

in	eps	: \mathcal{E} , an element-wise constant function;
in	kappa	: κ , an element-wise linear function.

Implemented in Bim1D.

7.9.3.3 virtual void assembleMass (const VectorXd & delta, const VectorXd & zeta) [pure virtual]

Assemble the matrix for a reaction term.

Build the mass matrix for the reaction problem: $\delta \cdot \zeta u = f$.

Parameters

in	delta	: δ , an element-wise constant function;
in	zeta	: ζ , an element-wise linear function.

Implemented in Bim1D.

The documentation for this class was generated from the following files:


- /home/Data/Dropbox/Progetto-PACS/C++/Source/src/solvers.h
- /home/Data/Dropbox/Progetto-PACS/C++/Source/src/solvers.c++

7.10 **QuadratureRule Class Reference**

Abstract class providing a quadrature rule.

#include <quadratureRule.h>

Inheritance diagram for QuadratureRule:



Public Member Functions

• QuadratureRule ()=delete

Default constructor (deleted since it is required to specify the no. of nodes).

• QuadratureRule (const unsigned &)

Constructor.

virtual ∼QuadratureRule ()=default

Destructor (defaulted).

virtual void apply ()=0

Apply the quadrature rule in order to compute the nodes and weights.

Getter methods

- const unsigned & nNodes () const
- const VectorXd & nodes () const
- const VectorXd & weights () const

Protected Attributes

unsigned nNodes

The no. of nodes to be used for the quadrature rule.

VectorXd nodes_

Vector containing the computed nodes coordinates.

VectorXd weights_

Vector containing the computed weights.

Friends

· class GaussianCharge

7.10.1 **Detailed Description**

Abstract class providing a quadrature rule.

Approximate the integral:

$$\int_{a}^{b} f(x) \, \mathrm{d}x$$

with the finite sum:

$$\int_{a}^{b} f(x) dx$$

$$\sum_{i=1}^{nNodes} w_{i} \cdot f(x_{i})$$

where $\{x_i\}_{i=1}^{nNodes}$ and $\{w_i\}_{i=1}^{nNodes}$ are called respectively nodes and weights.

Definition at line 29 of file quadratureRule.h.

7.10.2 Constructor & Destructor Documentation

7.10.2.1 QuadratureRule (const unsigned & nNodes)

Constructor.

Parameters

in	nNodes	: the no. of nodes to be used for the quadrature rule.

Definition at line 5 of file quadratureRule.c++.

The documentation for this class was generated from the following files:

- /home/Data/Dropbox/Progetto-PACS/C++/Source/src/quadratureRule.h
- /home/Data/Dropbox/Progetto-PACS/C++/Source/src/quadratureRule.c++

Chapter 8

File Documentation

8.1 /home/Data/Dropbox/Progetto-PACS/C++/Source/src/charge.h File Reference

Classes for computing total electric charge.

```
#include "paramList.h"
#include "quadratureRule.h"
#include "typedefs.h"
```

Classes

· class Charge

Abstract class providing methods to calculate total electric charge (the rhs in the Poisson equation).

class GaussianCharge

Class derived from Charge, under the hypothesis that Density of States is a combination of gaussians.

8.1.1 Detailed Description

Classes for computing total electric charge.

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file charge.h.

8.2 /home/Data/Dropbox/Progetto-PACS/C++/Source/src/csvParser.h File Reference

Tools to store content from a .csv file in matrices or vectors.

```
#include "typedefs.h"
#include <string>
#include <fstream>
#include <sstream>
#include <utility>
```

Classes

class CsvParser

Class providing methods to read content from a .csv file and store it in matrices or vectors.

8.2.1 Detailed Description

Tools to store content from a .csv file in matrices or vectors.

Author

```
Pasquale Claudio Africa pasquale.africa@gmail.com
```

Date

2014

Definition in file csvParser.h.

8.3 /home/Data/Dropbox/Progetto-PACS/C++/Source/src/dosModel.h File Reference

Mathematical model for Density of States extraction.

```
#include "charge.h"
#include "csvParser.h"
#include "numerics.h"
#include "paramList.h"
#include "quadratureRule.h"
#include "solvers.h"
#include "typedefs.h"
#include "gnuplot-iostream.h"
#include <chrono>
#include <limits>
```

Classes

· class DosModel

Class providing methods to process a simulation to extract the Density of States starting from a parameter list.

8.3.1 Detailed Description

Mathematical model for Density of States extraction.

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file dosModel.h.

8.4 /home/Data/Dropbox/Progetto-PACS/C++/Source/src/numerics.h File Reference

Generic numeric algorithms.

```
#include "typedefs.h"
#include <limits>
```

Namespaces

numerics

Namespace for generic numeric algorithms.

Functions

 template<typename ScalarType >
 VectorX< ScalarType > sort (const VectorX< ScalarType > &vector)

Function to sort Eigen vectors.

 template<typename ScalarType >
 VectorXpair< ScalarType > sort_pair (const VectorX< ScalarType > &vector)

Function to sort Eigen vectors, keeping track of indexes.

double trapz (const VectorXd &x, const VectorXd &y)

Function to compute approximate integral of y with spacing increment specified by x, using trapezoidal rule.

double trapz (const VectorXd &y)

Compute the approximate integral of y with unit spacing, using trapezoidal rule.

VectorXd deriv (const VectorXd &, const VectorXd &)

Compute the numeric derivative: $\frac{dy}{dx}$.

double interp1 (const VectorXd &, const VectorXd &, const double &)

Linear 1D interpolation. Interpolate y, defined at points x, at the point xNew.

VectorXd interp1 (const VectorXd &, const VectorXd &, const VectorXd &)

Linear 1D interpolation. Interpolate y, defined at points x, at the points xNew.

• double error_L2 (const VectorXd &, const VectorXd &, const VectorXd &, const double &)

Compute the L^2 -norm error between simulated and interpolated values, using trapz.

8.4.1 Detailed Description

Generic numeric algorithms.

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file numerics.h.

8.5 /home/Data/Dropbox/Progetto-PACS/C++/Source/src/paramList.h File Reference

List of simulation parameters.

```
#include "typedefs.h"
```

Classes

· class ParamList

Class providing methods to handle a list of parameters.

8.5.1 Detailed Description

List of simulation parameters.

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file paramList.h.

8.6 /home/Data/Dropbox/Progetto-PACS/C++/Source/src/physicalConstants.h File Reference

```
Physical constants.
```

```
#include "typedefs.h"
```

Namespaces

· constants

Numerical constants.

Variables

```
    const double Q = 1.60217653000000e-19
```

 $\textit{Electron charge} \ [C].$

• const double Q2 = Q * Q

Electron charge squared $[C^2]$.

• const double K_B = 1.38065050000000e-23

Boltzmann's constant $[J \cdot K^{-1}]$.

• const double EPS0 = 8.854187817e-12

Vacuum electrical permittivity $[C \cdot V^{-1} \cdot m^{-1}]$.

• const double T = 300

Reference temperature [K].

• const double $V_TH = K_B * T / Q$

Treshold voltage [V].

8.6.1 Detailed Description

Physical constants.

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file physicalConstants.h.

8.7 /home/Data/Dropbox/Progetto-PACS/C++/Source/src/quadratureRule.h File Reference

```
Quadrature rules.
```

```
#include "typedefs.h"
```

Classes

• class QuadratureRule

Abstract class providing a quadrature rule.

• class GaussHermiteRule

Class derived from QuadratureRule providing the Gauss-Hermite quadrature rule.

8.7.1 Detailed Description

Quadrature rules.

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file quadratureRule.h.

8.8 /home/Data/Dropbox/Progetto-PACS/C++/Source/src/solvers.h File Reference

Generic solvers for PDEs.

```
#include "charge.h"
#include "typedefs.h"
#include <utility>
#include <limits>
```

Classes

class PdeSolver1D

Abstract class providing methods to assemble matrices to solve one-dimensional PDEs.

· class Bim1D

Class derived from PdeSolver1D, providing a finite volume Box Integration Method (BIM) solver.

class NonLinearPoisson1D

Provide a solver for a non-linear Poisson equation.

8.8.1 Detailed Description

Generic solvers for PDEs.

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file solvers.h.

8.9 /home/Data/Dropbox/Progetto-PACS/C++/Source/src/typedefs.h File Reference

Typedefs and utility functions.

```
#include "physicalConstants.h"
#include <Eigen/Dense>
#include <Eigen/Sparse>
#include "GetPot"
#include <iostream>
#include <fstream>
```

Namespaces

· constants

Numerical constants.

· utility

Namespace for utilities and auxiliary functions.

Typedefs

```
    typedef SparseMatrix< double > SparseXd
```

Typedef for sparse dynamic-sized matrices.

```
    template < typename ScalarType >
        using VectorX = Matrix < ScalarType, Dynamic, 1 >

Template alias for Eigen vectors.
```

template<typename T >

```
using VectorXpair = VectorX < std::pair < T, unsigned > >
```

Template alias for an Eigen vector of pairs: (ScalarType, unsigned int).

Functions

std::string full_path (const std::string &, const std::string &)

Auxiliary function to return the full path to a file.

void print block (const char *, std::ostream &=std::cout)

Auxiliary function to print a string inside a block.

void print_done (std::ostream &=std::cout)

Auxiliary function to print a "DONE!" string.

Variables

• const unsigned PARAMS_NO = 22

Number of parameters required in input file.

const double PI = M_PI

 π

• const double SQRT_PI = std::sqrt(PI)

 $\sqrt{\pi}$.

• const double PI M4 = 0.7511255444649425

 $\pi^{-\frac{1}{4}}$.

• const double SQRT_2 = std::sqrt(2)

 $\sqrt{2}$.

8.9.1 Detailed Description

Typedefs and utility functions.

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file typedefs.h.

8.9.2 Typedef Documentation

8.9.2.1 using VectorX = Matrix < ScalarType, Dynamic, 1>

Template alias for Eigen vectors.

Template Parameters

```
ScalarType : the scalar type.
```

Definition at line 34 of file typedefs.h.

```
8.9.2.2 using VectorXpair = VectorX<std::pair<T, unsigned>>
```

Template alias for an Eigen vector of pairs: (ScalarType, unsigned int).

Template Parameters

ScalarType	: the scalar type.

Definition at line 41 of file typedefs.h.

8.10 /home/Data/Dropbox/Progetto-PACS/C++/Source/test/simulate_dos.c++ File Reference

A test file.

```
#include "src/dosModel.h"
```

Functions

• int main (const int argc, const char *const *argv, const char *const *envp)

The main function.

8.10.1 Detailed Description

A test file.

Author

Pasquale Claudio Africa pasquale.africa@gmail.com

Date

2014

Definition in file simulate_dos.c++.

Index

/home/Data/Dropbox/Progetto-PACS/C++/Source/src/char h. 41	rge Charge, 20 GaussianCharge, 31
/home/Data/Dropbox/Progetto-PACS/C++/Source/src/csv-	
Parser.h, 41	NonLinearPoisson1D, 34
/home/Data/Dropbox/Progetto-PACS/C++/Source/src/dos	
Model.h, 42	CsvParser, 21
/home/Data/Dropbox/Progetto-PACS/C++/Source/src/num	, , , , , , , , , , , , , , , , , , ,
h, 43	CsvParser, 22
/home/Data/Dropbox/Progetto-PACS/C++/Source/src/para	
List.h, 43	importCell, 25
/home/Data/Dropbox/Progetto-PACS/C++/Source/src/phys	
Constants.h, 44	importCols, 24
/home/Data/Dropbox/Progetto-PACS/C++/Source/src/qua	-
Rule.h, 45	importFirstRows, 24
/home/Data/Dropbox/Progetto-PACS/C++/Source/src/solv	
h, 45	importRows, 24
/home/Data/Dropbox/Progetto-PACS/C++/Source/src/type	•
h, 46	dcharge
/home/Data/Dropbox/Progetto-PACS/C++/Source/test/sim	•
	GaussianCharge, 31
_dos.c++, 48	deriv
apply	
apply GaussHermiteRule, 30	numerics, 13
NonLinearPoisson1D, 33	dn_approx
assembleAdvDiff	GaussianCharge, 32
	DosModel, 25
Bim1D, 18	DosModel, 26
PdeSolver1D, 37	DosModel, 26
assembleMass	gnuplot_commands, 27
Bim1D, 19	post_process, 27
PdeSolver1D, 38	save_plot, 27
assembleStiff	simulate, 26
Bim1D, 19	1.0
PdeSolver1D, 38	error_L2
haveauli:	numerics, 14
bernoulli Rim1D 10	full noth
Bim1D, 18	full_path
Bim1D, 17	utility, 15
assembleAdvDiff, 18	Causa Harmita Bula 28
assembleMass, 19	GaussHermiteRule, 28
assembleStiff, 19	apply, 30
bernoulli, 18	GaussHermiteRule, 29
Bim1D, 18	GaussHermiteRule, 29
Bim1D, 18	GaussianCharge, 30
log_mean, 18	charge, 31
	dcharge, 31
Charge, 19	dn_approx, 32
Charge, 20	GaussianCharge, 31
charge, 20	GaussianCharge, 31
dcharge, 21	n_approx, 31
charge	anuplot commands

50 INDEX

DosModel, 27	DosModel, 27 simulate
importAll	DosModel, 26
CsvParser, 25	sort
importCell	numerics, 12
CsvParser, 25	sort_pair
importCol	numerics, 12
CsvParser, 24 importCols	trapz
CsvParser, 24	numerics, 13
importFirstCols	typedefs.h
CsvParser, 25	VectorX, 47
importFirstRows	VectorXpair, 47
CsvParser, 24	
importRow	utility, 14
CsvParser, 23	full_path, 15
importRows	print_block, 15 print_done, 15
CsvParser, 24	print_done, 15
interp1 numerics, 13, 14	VectorX
numerics, 13, 14	typedefs.h, 47
log_mean	VectorXpair
Bim1D, 18	typedefs.h, 47
n_approx	
GaussianCharge, 31 NonLinearPoisson1D, 32	
apply, 33	
computeJac, 34	
NonLinearPoisson1D, 33	
NonLinearPoisson1D, 33	
numerics, 11	
deriv, 13	
error_L2, 14	
interp1, 13, 14	
sort, 12	
sort_pair, 12	
trapz, 13	
ParamList, 34	
ParamList, 36	
ParamList, 36	
PdeSolver1D, 36	
assembleAdvDiff, 37	
assembleMass, 38	
assembleStiff, 38	
PdeSolver1D, 37	
PdeSolver1D, 37	
post_process DosModel, 27	
print_block	
utility, 15	
print_done	
utility, 15	
·	
Quadrature Rule, 38	
QuadratureRule, 39	
QuadratureRule, 39	
save_plot	