

# ARM Processors - ARCHITECTURES, CORES AND FAMILIES

ELECTGON www.electgon.com ma\_ext@gmx.net

09.04.2018



## **Contents**

1	Introduction	 											1
2	Architecture, Core, Family	 											3
3	ARM Development Boards	 											6

#### **Abstract**

Many processors are now available on the market provided by leaders of chip foundries like Analog Devices, Intel, ARM, power PC and Atmel. Choosing which processor to work with will not be based on difference in structure, otherwise it will be based mainly on best experience and available development kit with reasonable pricing. Due to that ARM processor is commonly used in broad applications in embedded systems domain as well as its development environment is available with good pricing. This document is providing first step to know about ARM processors history and difference between its major architectures and families.

Contents 1. Introduction

#### 1 Introduction

Advanced RISC Machine (ARM) is a processor architecture that is used in modern CPUs. The company itself was founded in 1990 as spin out of collaboration between Acron and Apple computers that were using this architecture in their computers.

ARM architecture first saw light in 1985 after a project in Berkeley university called VLSI Project came up with the RISC architecture between 1980 and 1984. VLSI design group in Acron started design of ARM1 based on this RISC philosophy. Between 1985 and 1990, many versions of ARM architecture were developed. When the company was founded in 1990 it released ARMv6, now according to ARM website in 2015 latest architecture is ARMv8.

If you are familiar with processor architectures, you would recognize that an architecture means Instruction Set & hardware model. What is meant by hardware model is the different techniques that are used to implement the processor, for example Von-Neumann or Harvard. 8 or 16 or 32 bits as well as register set and operation modes. So we have different techniques for the hardware implementation as well as Instruction set that is developed by time, in addition to dependency of instructions set on data size.. all these factors lead to production of different versions and models of ARM processors. Not only but also the application for which this processor is used may affect in the design of the processor. ARM is organizing this versioning of processor by indicating an ARM architecture which is evolved mainly according to instructions set. With new instruction set, you can make configuration to hardware, this means you have different cores within this architecture. So you can say that some ARM cores are based on specific architecture version or ARM architecture is built on specific core.

To clarify it, ARM has mainly 2 instruction set, they are called ARM, Thumb. Each has its own instructions as shown in table 1. Referring to this table you can notice that Thumb as some additional instructions. Such a change make difference between processor performance.

Contents 1. Introduction

ARM							
Mnemonic	Instruction						
ADC	Add with carry						
ADD	Add						
AND	And						
В	Branch						
BIC	Bit clear						
BL	Branch with link						
BX	Branch and exchange						
CDP	Coprocesor Data Processing						
CMN	Compare Negative						
CMP	Compare						
EOR	Exclusive OR						
LDC	Load coprocessor from Memory						
LDM	Load multiple registers						
LDR	Load register from memory						
MCR	Move CPU register to coprocessor register						
MLA	Multiply Accumulate						
MOV	Move register or constant						
MRC	Move from coprocessor register to CPU register						
MRS	Move PSR status/flags to Register						
MSR	Move register to PSR status/flags						
MUL	Multiply						
MVN	Move negative register						
ORR	Or						
RSB	Reverse Subtract						
RSC	Reverse Subtract with Carry						
SBC	Subtract with Carry						
STC	Store coprocessor register to memory						
STM	Store Multiple						
STR	Store register to memory						
SUB	Subtract						
SWI	Software Interrupt						
SWP	Swap register with memory						
TEQ	Test bitwise equality						
TST	Test bits						

Thumb							
Mnemonic	Instruction						
ADC	Add with carry						
ADD	Add						
AND	And						
ASR	Arithmetic Shift Right						
В	Unconditional branch						
Bxx	Conditional branch						
BIC	Bit clear						
BL	Branch with link						
BX	Branch and exchange						
CMN	Compare Negative						
СМР	Compare						
EOR	Exclusive OR						
LDMIA	Load multiple						
LDR	Load word						
LDRB	Load byte						
LDRH	Load halfword						
LSL	Logical Shift Left						
LDSB	Load sign-extended Byte						
LDSH	Load sign-extended Halfword						
LSR	Logical Shift Right						
MOV	Move register or constant						
MUL	Multiply						
MVN	Move negative register						
NEG	Negate						
ORR	Or						
POP	Pop registers						
PUSH	Push registers						
POR	Rotate Right						
SBC	Subtract with Carry						
STMIA	Store Multiple						
STR	Store word						
STRB	Store byte						
STRH	Store halfword						
SUB	Subtract						
SWI	Software Interrupt						
TST	Test bits						
	l .						

Table 1: ARM and Thumb Instruction Set

This table is only as an example of how instruction set may differ from version to another, but Architecture versions is not changing according to change of these instructions only. There are other considerations also like Operation modes 16 or 32 or 64 addressing, ...and other technical specification that I don't like to discuss here. A good reference to understand the difference between each architecture can be checked in this link:

http://www.davespace.co.uk/arm/introduction-to-arm/

### 2 Architecture, Core, Family

ARM and Thumb instruction sets are the oldest. You can find out what are instructions set supported in each architecture in ARM website which is depicted in figure 1

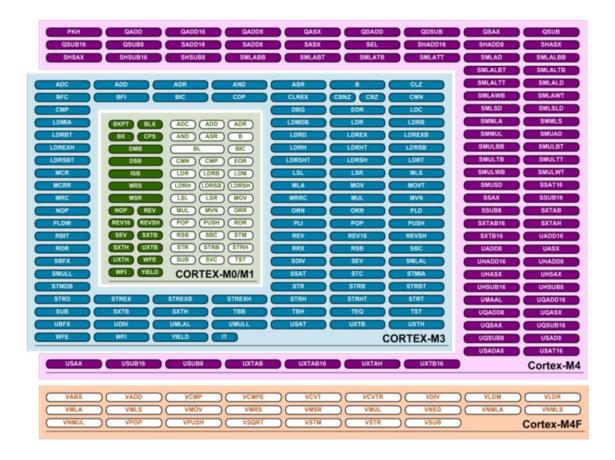


Figure 1: ARM Instructions in Different Architectures


I hope it is clear now why we have different ARM architectures, remaining to mention only that any instructions added are serving specific application, for example there are instructions that are added to support floating point operations, other are added to enhance Java applications operations, others for signal processing,... for example ARMv6 is supporting new multiprocessing instructions LDREX, STREX and more than 60 SIMD instructions. Some cores has been produced based on ARMv6 architecture like what is shown in table 2.


	1136EJ(F)-S	1156T2(F)-S	1176JZ(F)-S	MPCore11			
Architecture	Harvard	Harvard	Harvard	Harvard			
Cache	4-64K Instr	0-64K Instr	4-64K Instr	16-64K Instr			
	4-64K Data	0-64K Data	4-64K Data	16-64K Data			
	8 words/line	8 words/line	8 words/line	8 words/line			
Associativity	4-way	4-way	4-way	4-way			
TCM	0-64K Instr	0-256K Instr	0-64K Instr	None			
	0-64K Data	0-256K Data	0-64K Data				
Replacement	Random Round	Random Round	Random Round	Random Round			
	Robin	Robin	Robin	Robin			
Write Startegy	Write Through	Write Through	Write Through	Write Through			
	Write Back	Write Back	Write Back	Write Back			
MMU/MPU	MMU	MPU	MMU	MMU			
Hi Vectors	Yes	Yes	Yes	Yes			
Streaming	Yes	Yes	N/A	Yes			
Standby mode	Yes	Yes	Yes	Yes			
Bus	AHB/APB	AXI	AXI	AXI			
VFP Support	Yes	Yes	Yes	Yes			

Table 2: ARMv6 Cores

So we have different cores 1136, 1156, 1176, .... that are built based on ARMv6 architecture. All these core are grouped in ARM11 family. So we have ARM11 family doesn't mean that it is using ARMv11. It is using ARMv6 but name comes from cores forming this family.

The difference between these cores that is discussed in previous table can be reflected in core layout as shown in the following figures

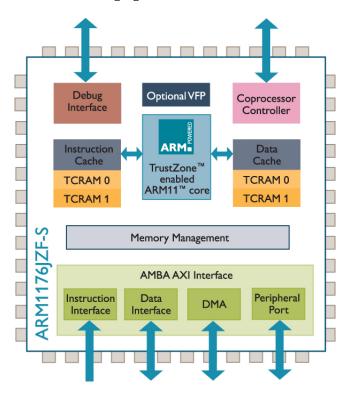

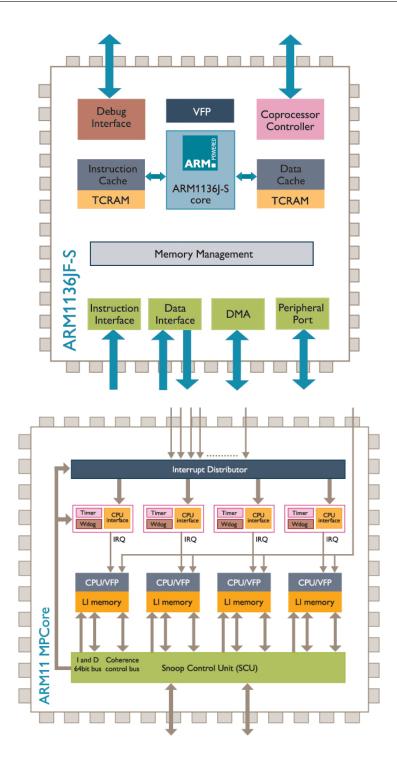

We have different cores then, these cores are grouped into families. Usually these families are serving specific application. For instance, according to ARM website in 2015, there are currently 4 families of ARM processors CORTEX A, CORTEX R, CORTEX M and Specialist processors. Old families like Classic Family (ARM7, ARM9, ARM11) are going to be not supported.

In order to know your processor belongs to which family, you can check ARM website: http://www.arm.com/products/processors/index.php

Also figure 2 summarizes all available cores and which architecture it is based on

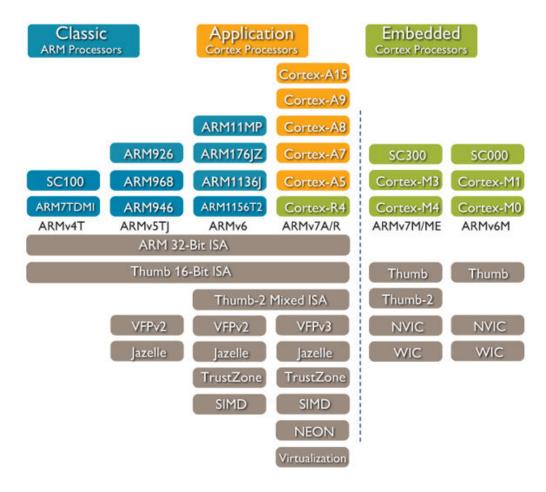


Figure 2: ARM Families

## 3 ARM Development Boards

ARM processors are used nowadays in 75% of embedded systems applications. Not only but also big chip manufacturers like Broadcom, Texas Instruments, Atmel, Xilinx... are using ARM processors in their chips. Individuals can also work with ARM processors, they can purchase ARM processors as a chip or they can work with an ARM-based development board. These development boards are normally provided with necessary interfaces and peripherals like USB, PS2 ,Ethernet, HDMI... so that it can work as a PC if connected with monitor, keyboard and mouse.

Many many development boards are available now, as an example Versatile and Integrator are development boards support ARM processors. All what we need to operate it as a computer is to build an operating system that can work in this board. This idea already has been implemented, you can find many hardware platform that can already host Linux operating system. It is listed in the following link:

http://elinux.org/Main\_Page

# **Bibliography**

- [1] http://www.davespace.co.uk/arm/introduction-to-arm/
- [2] http://www.arm.com/products/processors/index.php
- [3] http://elinux.org/Main\_Page