POLITECNICO DI MILANO



FACOLTÀ DI INGEGNERIA DIPARTIMENTO DI ELETTRONICA E INFORMAZIONE

RF Systems

Notes on Exercises 2017-2018

 $\begin{array}{c} {\bf Professore:} \\ {\bf \it Giuseppe \ Macchiarella} \end{array}$

Studente: Edoardo Contini

Contents

1	Ant	ennas		1
	1.1	Anteni	nas Parameters	1
		1.1.1	Directive Gain	1
		1.1.2	Radiated Power Density	1
		1.1.3	Received Power	1
		1.1.4	Effective Area	2
		1.1.5	Equivalent length	2
	1.2	Radio		2
		1.2.1		2
		1.2.2		3
		1.2.3		3
		1.2.4		4
		1.2.5	Noise figue and equivalent temperature relationship	4
		1.2.6		4
2 Receivers			5	
	2.1	Image		5
	2.2	Cascao	led Noise Figure	5

Chapter 1

Antennas

1.1 Antennas Parameters

1.1.1 Directive Gain

The power radiated by an antenna depends on the direction. The *directive gain* toward a given direction is expressed as:

$$D(\theta, \phi) = \frac{Radiation \ Intensity}{Isotropic \ Intensity} = \frac{U(\theta, \phi)}{P_{rad}/4\pi}$$
 (1.1)

1.1.2 Radiated Power Density

It is usefull to evaluate the radiated power density as it can be used for an analysis of propagation of power towards the threedimensional space.

$$S_R = \frac{dP_{rad}}{ds} = \frac{1}{2}Re(E \times H^*) = \frac{1}{R^2}U(\theta, \phi)$$
 (1.2)

1.1.3 Received Power

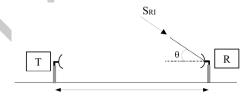


Figure 1.1: Simplified scheme of a Radio Link with an additiona power density from an non optimal direction

Given the power density $(S_R)^1$ and the direction of arrival (θ) of an incident radiation the received power can be calculated as:

$$A_e S_R f(\theta) \tag{1.3}$$

¹magnitude of the Poynting vector

where:

- A_e is the **effective Area** of the anttenna
- $f(\theta)$ is the directivity function

1.1.4 Effective Area

$$\frac{G}{A_e} = \frac{4\pi}{\lambda^2} \tag{1.4}$$

1.1.5 Equivalent length

The equivalent length can be related to the effective area using the following formula:

1.2 Radio Link

1.2.1 Link Budget



Figure 1.2: Simplified scheme of a Radio Link

Supposing to have a Radio Link as in Figure 1.2 between 2 Antennas at a certain relative distance R the link budget may be evaluated by means of the **Friis equation** which at the end leds to a simple analitical expression for the receiving power²:

$$P_{r|_{dB}} = P_{t|_{dB}} - 10\log frac\lambda 4\pi R + G_{t|_{dB}} + G_{r|_{dB}}$$
(1.5)

in which:

- $P_{r|_{dB}}$ is the effective power received by the antenna.
- $P_{t|_{dB}}$ is the overall transmitted power of the TX side.
- $G_{r|_{dB}}$ is the gain of the receiving antenna.
- $G_{t|_{dB}}$ is the gain of the transmitting antenna.

while the term $20 \log \frac{\lambda}{4\pi R}$ stands for the free space losses. Note from a practical point of view there as at least a couple of DoF in the design flow to obtain a certain receiving power.

We may also report the linear form of the **Friis equation**:

$$P_r = P_t \left(\frac{\lambda}{4\pi L}^2\right) G_T G_R \tag{1.6}$$

 $^{^2{\}rm which}$ is the logaritmic form of the Friis equation

1.2.2 Attenuators' Noise

In any RF receiver we are going to have at least some losses between the antenna and the LNA. Sometimes also in other sections of the receiver path attenuation couldn't be avoided. We may evaluate the additional noise introduced my an attenuator A_{f1} for example the one in Figure 1.3 as:

$$T_{f1} = T_0 \left(10^{\frac{A_{f1}}{10}} - 1\right) \tag{1.7}$$

1.2.3 Equivalent Temperature

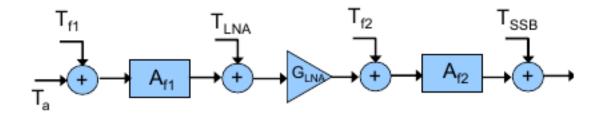


Figure 1.3: General structure of a noisy receiving chain

Supposing to have a receiving chain as in Figure³ 1.3 we may want to rappresent the system with noiseless components and an input referred noise considering all contribution. This could be very usefull beacuse using this model the Signal-to-Noise Ratio evalutation turns out to be extremly simple, while we can just compare the receiving power with the overall noise directly at the input port.

To get an $T_{equivalent}$ we have to refer at the input any additional noise by dividing it by the Gain from to input to the point where the noise is injected.

At the end for the example in figure we get:

$$T_{sys} = T_{eq} = T_a + T_{f1} + T_{LNA}A_{f1} + T_{f2}\frac{A_{f1}}{G_{LNA}} + T_{SSB}\frac{A_{f1}A_{f2}}{G_{LNA}}$$
(1.8)

where:

- T_{f1} is the noise introduced by the first attenuator
- T_{LNA} is the noise introduced by the LNA
- T_{f2} is the noise introduced by the second attenuator
- \bullet T_{SSB} is the noise introduced by the mizer

With the same concept we may find the Output Referred Noise T_out by simply applying the relative transfer function at each noise to the ouput:

$$T_o ut = T_a \frac{G_{LNA}}{A_{f1} A_{f2}} + T_{f1} \frac{G_{LNA}}{A_{f1} A_{f2}} + T_{LNA} \frac{G_{LNA}}{A_{f2}} + T_{f2} \frac{1}{A_{f2}} + T_{SSB}$$

$$\tag{1.9}$$

³note that here A_x stands for an attenuation = $\frac{1}{Gain}$ and G stands for a Gain

and to get T_{eq} we may divide T_{out} by the noiseless gain $\frac{G_{LNA}}{A_{f1}A_{f2}}$

$$T_{eq} = \frac{T_o ut}{\frac{G_{LNA}}{A_{f1}A_{f2}}} \tag{1.10}$$

after some algebra it's clear that the two different approaches are absolutely equivalent.

1.2.4 Noise Figure

The Noise Figure is very usefull as it gives an immediate evaluation of the overall degration that a system gives to the SNR.

Noise Figure is usually calculate diving the overall noise of the system by the noise given by the source; this operation is usually done at the output but can be done in every point of the system.

1.2.5 Noise figue and equivalent temperature relationship

$$T_{eq} = T_0 (10^{\frac{NF_{eq}}{10}} - 1) \tag{1.11}$$

where T_0 it's usually the room temperature considered 290° C.

1.2.6 Datarate Limitation

Given the modulation and demodulation scheme⁴, the bandwidth (B) and the minimum SNR required the maximum possible datarate (R) is limited by noise.

Known the equivalent noise temperature $(T_{eq} = T_{sys})$ e can write:

$$SNR = \frac{P_r}{KT_{sys}B} = \left(\frac{E_b}{N_0}\right) \left(\frac{R}{B}\right) \tag{1.12}$$

⁴Given the mod/demod scheme the energy transmitter per bit is fixed

Chapter 2

Receivers

2.1 Image

The problem of the image rises during the domodulation process when the RF signal is downconverted to an Intermediate Frequency (IF) because of the mixer by means of the LO downconverts to IF both the RF signal and the Image which any signal at the same opposite distance¹ from the LO with respect to RF signal.

Example

Let's report an example for clarification²:

- $f_{RF} = 12Ghz$
- $f_{IF} = 140Mhz$

we know that the local oscillator frequency (fLO) is above the signal band. Find the frequency of the image is quite simple:

$$f_{IF} = |f_{RF} - f_{LO}| (2.1)$$

from this we are able to find f_{LO} and then:

$$f_{IM} = f_{LO} - f_{IF} = f_{RF} - 2f_{IF} (2.2)$$

2.2 Cascaded Noise Figure

The evalutation of the Noise figure of cascaded stage could be performed with this formula:

$$NF_{eq} = NF_1 + \frac{NF_2 - 1}{G_1} + \frac{NF_3 - 1}{G_1G_2}$$
 (2.3)

 $^{^{1}\}mathrm{Note}$ that this deistance is by definition IF

 $^{^21^{}st}$ February 2017 exercise 1 question a)