(wafer2,0,7,-1,-1,1,3) Plots and Summary

- Cell Size = 10um
- Number of Times Accessed = 13
- Last Stimulated = 2022/March/28 at 04:34:10PM

Stimulated at 04:29:06PM on 2022/March/28

Activity = form

Start Voltage = 0V

End Voltage = 5V

Ramp Rate = 1V/s

Compliance Current = 35.0uA


Platinum Voltage =


Copper Voltage =

Run Folder Name = <2 probe, so invalid>

Comments = Set quickly, not actual form for this cell

Probe A plots

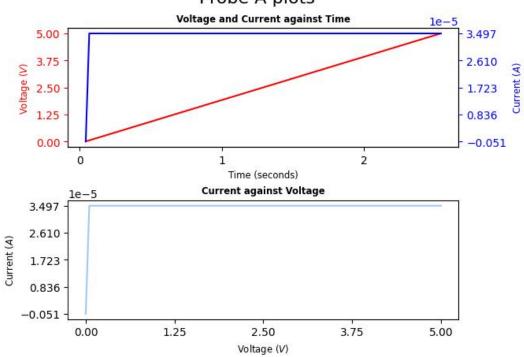

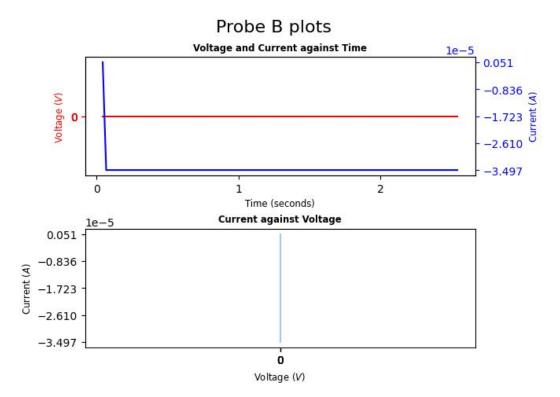

Stimulated at 04:29:26PM on 2022/March/28

Activity = reset

Start Voltage = 0V

End Voltage = -5V


Ramp Rate = 1V/s

Compliance Current = 10.0mA

Platinum Voltage =

Copper Voltage =

Run Folder Name = <2 probe, so invalid>

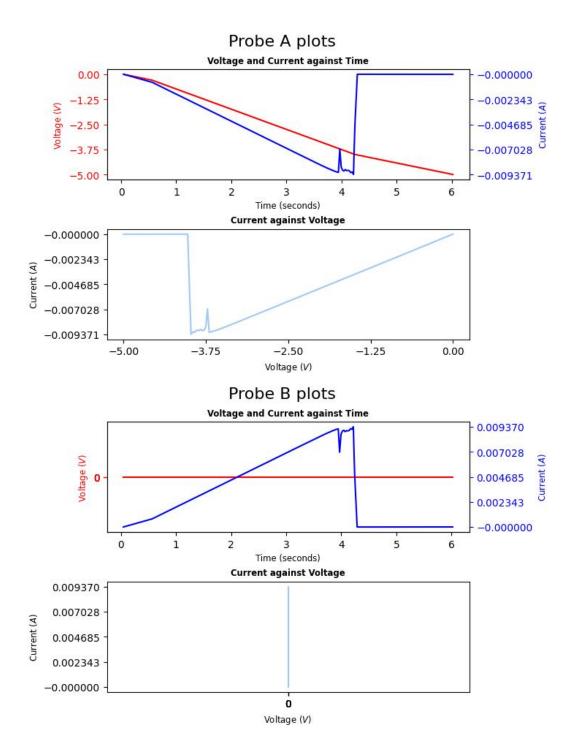

Stimulated at 04:29:58PM on 2022/March/28

Activity = form

Start Voltage = 0V


Compliance Current = 35.0uA


Platinum Voltage =

Copper Voltage =

Run Folder Name = <2 probe, so invalid>

Comments = Formed at 4.85V

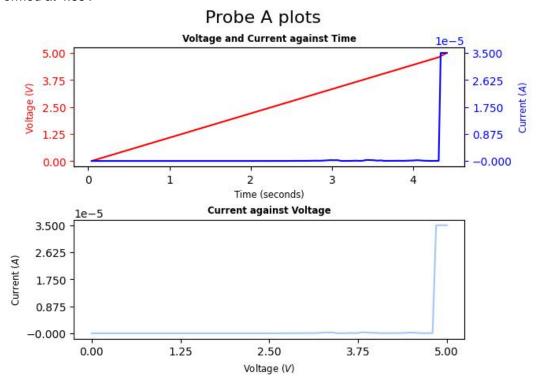

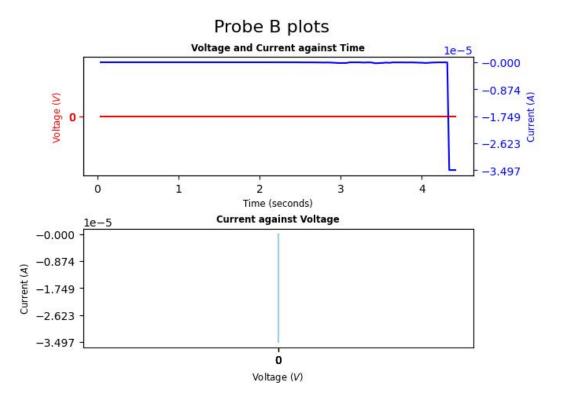

Stimulated at 04:30:36PM on 2022/March/28

Activity = reset

Start Voltage = 0V

End Voltage = -4V


Ramp Rate = 1V/s

Compliance Current = 8.0mA

Platinum Voltage =

Copper Voltage =

Run Folder Name = <2 probe, so invalid>

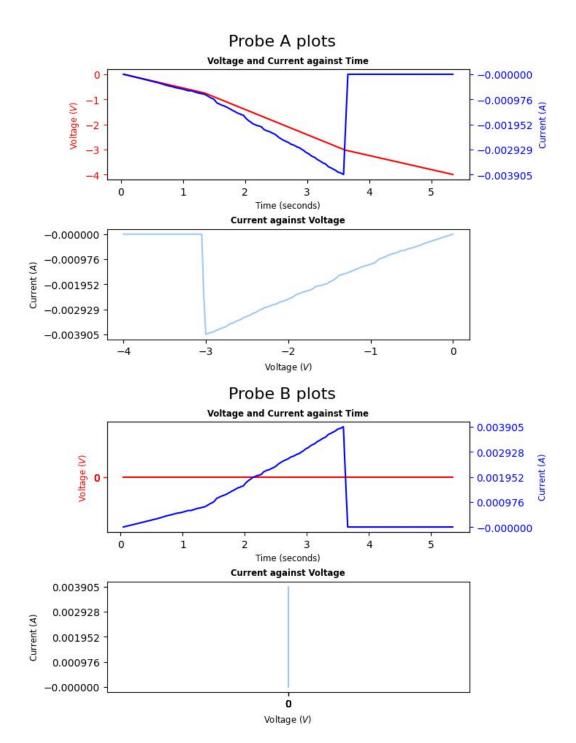

Stimulated at 04:31:06PM on 2022/March/28

Activity = set

Start Voltage = 0V

Compliance Current = 35.0uA


Platinum Voltage =


Copper Voltage =

Run Folder Name = <2 probe, so invalid>

Comments = Set at 4.75V, high voltage but lower than form



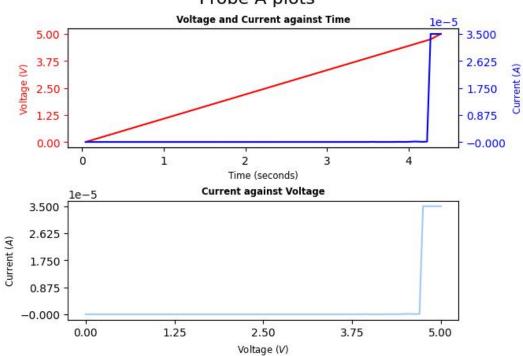

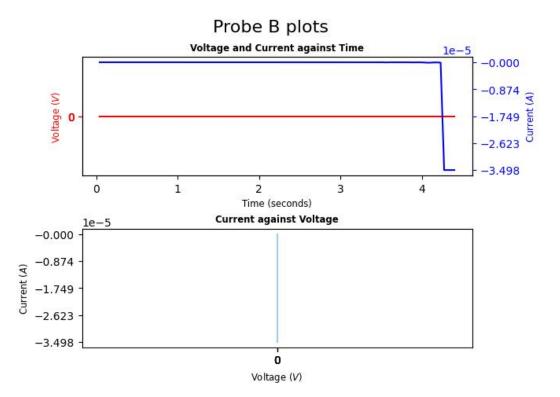

Stimulated at 04:31:29PM on 2022/March/28

Activity = reset

Start Voltage = 0V

End Voltage = -4V


Ramp Rate = 1V/s

Compliance Current = 8.0mA

Platinum Voltage =

Copper Voltage =

Run Folder Name = <2 probe, so invalid>

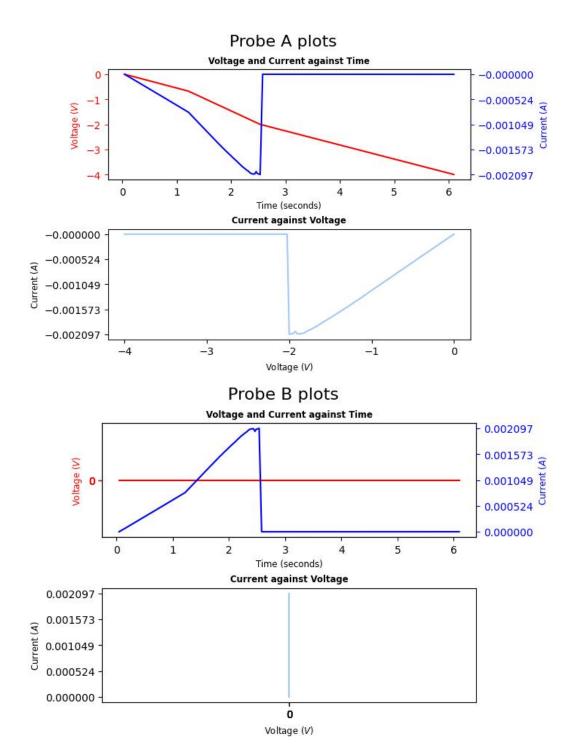

Stimulated at 04:31:50PM on 2022/March/28

Activity = set

Start Voltage = 0V


Compliance Current = 35.0uA


Platinum Voltage =

Copper Voltage =

Run Folder Name = <2 probe, so invalid>

Comments = Set at 2.4V

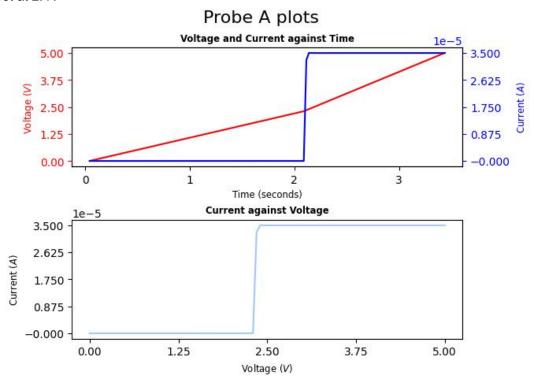

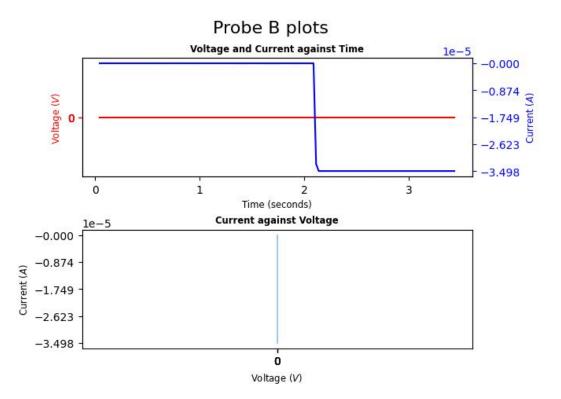

Stimulated at 04:32:15PM on 2022/March/28

Activity = reset

Start Voltage = 0V

End Voltage = -4V


Ramp Rate = 1V/s

Compliance Current = 8.0mA

Platinum Voltage =

Copper Voltage =

Run Folder Name = <2 probe, so invalid>

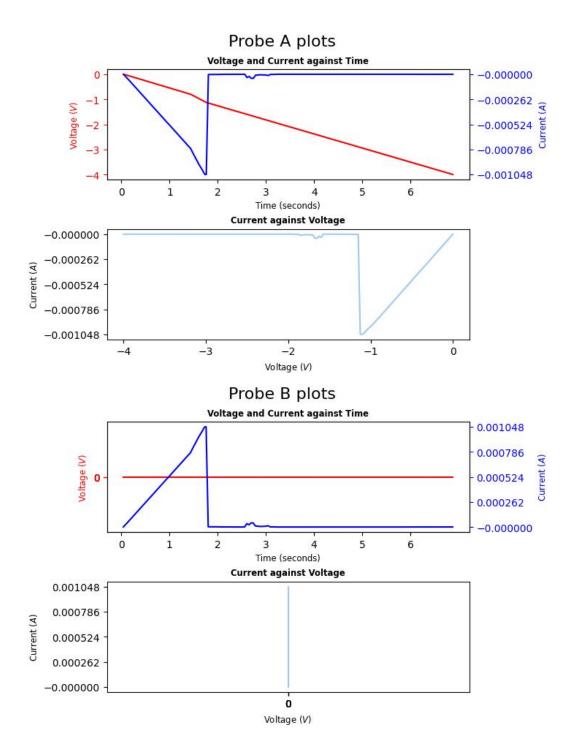

Stimulated at 04:32:38PM on 2022/March/28

Activity = set

Start Voltage = 0V


Compliance Current = 35.0uA


Platinum Voltage =

Copper Voltage =

Run Folder Name = <2 probe, so invalid>

Comments = Set at 1.6V

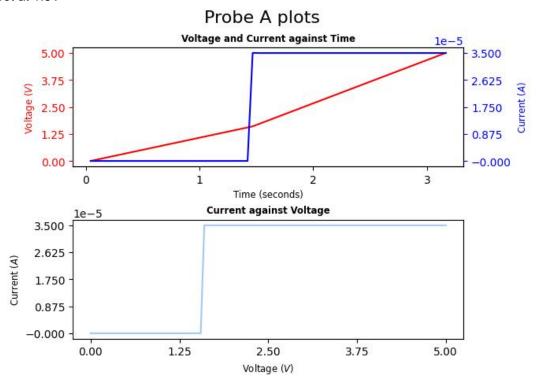

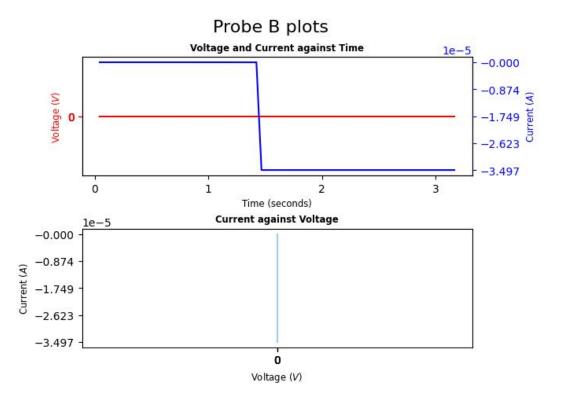

Stimulated at 04:32:58PM on 2022/March/28

Activity = reset

Start Voltage = 0V

End Voltage = -4V

Ramp Rate = 1V/s


Compliance Current = 8.0mA

Platinum Voltage =

Copper Voltage =

Run Folder Name = <2 probe, so invalid>

Comments = Did Reset, very low voltage

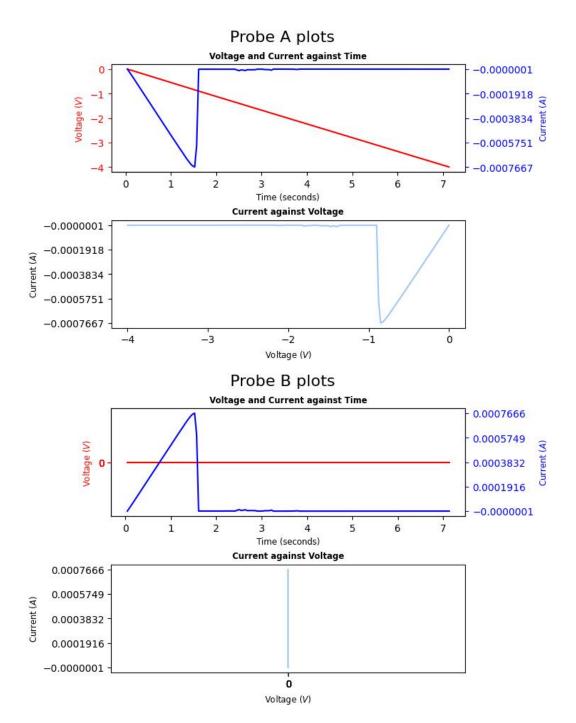

Stimulated at 04:33:33PM on 2022/March/28

Activity = set

Start Voltage = 0V

End Voltage = 5V

Ramp Rate = 1V/s


Compliance Current = 35.0uA


Platinum Voltage =

Copper Voltage =

Run Folder Name = <2 probe, so invalid>

Comments = Set at 4.05V

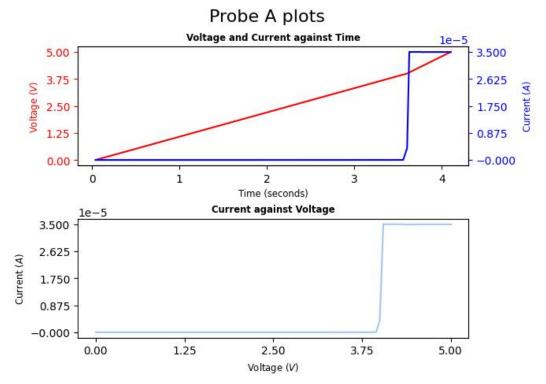

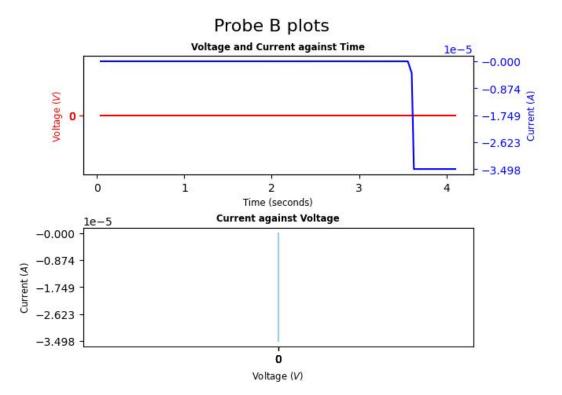

Stimulated at 04:33:57PM on 2022/March/28

Activity = reset

Start Voltage = 0V

End Voltage = -4V

Ramp Rate = 1V/s


Compliance Current = 8.0mA

Platinum Voltage =

Copper Voltage =

Run Folder Name = <2 probe, so invalid>

Comments = Did Reset, good voltage

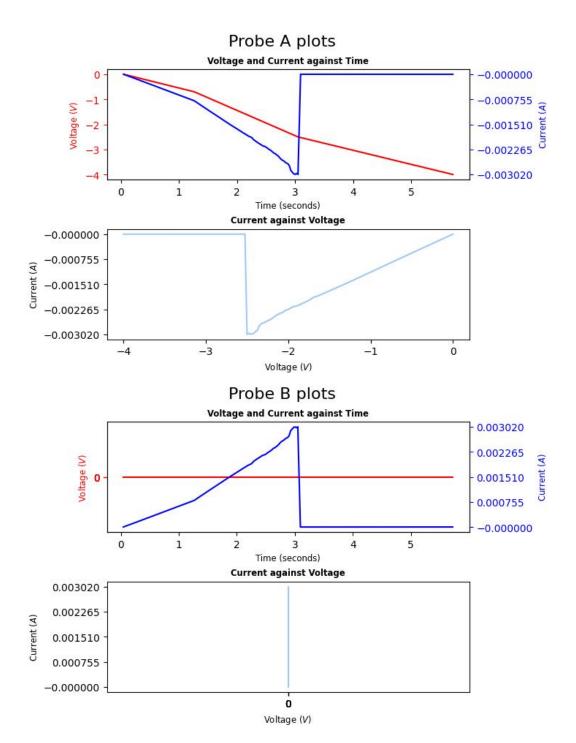

Stimulated at 04:34:10PM on 2022/March/28

Activity = set

Start Voltage = 0V

Compliance Current = 35.0uA

Platinum Voltage =

Copper Voltage =

Run Folder Name = <2 probe, so invalid>

Comments = Set at 3.15V

