

Contents

L	Bio]	FluidMechanics
	1.1	section one
2	Soft	Tissue Engineering
	2.1	Stress & strain in large deformations
		2.1.1 Kinematics
		2.1.2 Strain
		2.1.3 Stress
	2.2	Constitutive modeling
	2.3	Mechanical testing & parameter fitting
		2.3.1 Uniaxial tensile testing
		2.3.2 Biaxial tensile testing
		2.3.3 Extenson-inflation testing
		2.3.4 Strain mapping
	2.4	In vivi wall stress estimation
		2.4.1 Laplace's law for thin-walled tubes
		2.4.2 Analytical analysis for thick-walled cylinders
		2.4.3 The Finite Element Method
	2.5	Other biomechanical applications

Chapter 1

BioFluidMechanics

1.1 section one

first block of the lectures

Chapter 2

Soft Tissue Engineering

2.1 Stress & strain in large deformations

2.1.1 Kinematics

• Mapping function

$$\vec{x} = \varphi(\vec{X}, t) \tag{2.1}$$

• Displacement function

$$\vec{x} = \vec{X} + \underline{U}(\vec{X}, t) \tag{2.2}$$

• The deformation gradient tensor

$$d\vec{x} = \mathbf{F}(X, t)d\vec{X} \Rightarrow \mathbf{F} = \frac{\partial \vec{x}}{\partial \vec{X}} = \frac{\partial \underline{\varphi}}{\partial \vec{X}}$$
 (2.3)

• Volume transformation

$$dv = \det(\mathbf{F})dV = JdV \tag{2.4}$$

• Surface transformation: Nanson's Formula

$$\vec{n}ds = J\mathbf{F}^{-\top}\vec{N}dS \tag{2.5}$$

• Polar decomposition

$$\mathbf{F} = \mathbf{R}\mathbf{U} = \mathbf{V}\mathbf{R} \tag{2.6}$$

$$\Rightarrow \mathbf{U}^2 = \mathbf{F}^{\mathsf{T}} \mathbf{F} = \mathbf{C} \tag{2.7}$$

$$\Rightarrow \mathbf{V}^2 = \mathbf{F}\mathbf{F}^{\top} = \mathbf{B} \tag{2.8}$$

2.1.2 Strain

• Nominal strain, Biot strain or Engineering strain

$$\mathbf{e} = \mathbf{U} - \mathbf{I} \tag{2.9}$$

• Green-Lagrange strain

$$\mathbf{E} = \frac{1}{2} (\mathbf{F}^{\mathsf{T}} \mathbf{F} - \mathbf{I}) = \frac{1}{2} (\mathbf{U}^2 - \mathbf{I})$$
 (2.10)

• Euler-Almansi strain

$$\mathbf{A} = \frac{1}{2}(\mathbf{I} - \mathbf{V}^{-2}) \tag{2.11}$$

• True strain or logarithmic strain

$$\varepsilon = \ln(\mathbf{U}) \tag{2.12}$$

2.1.3 Stress

• True stress or Cauchy stress

$$\boldsymbol{\sigma}^{\top} = \frac{d\vec{f}}{\vec{n}dS} \tag{2.13}$$

• 1PK: first Piola Kirchoff stress (Nominal stress or Engineering stress)

$$\mathbf{P} = \frac{d\vec{f}}{\vec{N}dS_0} \tag{2.14}$$

• 2PK: second Piola Kirchoff stress

$$\mathbf{S}^{\top} = \frac{\mathbf{F}^{-1} d\vec{f}}{\vec{N} dS_0} \tag{2.15}$$

• Swithcing between stresses: $\begin{bmatrix} \boldsymbol{\sigma} & \boldsymbol{\sigma} & J^- \\ \mathbf{P} & J \boldsymbol{\sigma} \mathbf{F}^\top \end{bmatrix}$

$$egin{array}{c|cccc} \mathbf{P} & J oldsymbol{\sigma} \mathbf{F}^ op & \mathbf{F} \mathbf{S} \ \mathbf{S} & J \mathbf{F}^{-1} oldsymbol{\sigma} \mathbf{F}^{- op} & \mathbf{F}^{-1} \mathbf{P} & \mathbf{S} \end{array}$$


2.2 Constitutive modeling

2.3 Mechanical testing & parameter fitting

- 2.3.1 Uniaxial tensile testing
- 2.3.2 Biaxial tensile testing
- 2.3.3 Extenson-inflation testing
- 2.3.4 Strain mapping

2.4 In vivi wall stress estimation

2.4.1 Laplace's law for thin-walled tubes

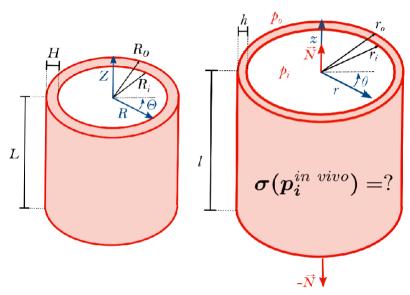

The deformation gradient tensor is givan as


$$\mathbf{F} = \begin{bmatrix} 1/(\lambda_{\theta}\lambda_{z}) & 0 & 0\\ 0 & \lambda_{\theta} & 0\\ 0 & 0 & \lambda_{z} \end{bmatrix}$$
 (2.16)

with corresponding stresses

$$\langle \sigma_{rr} \rangle = -\frac{P}{2} \tag{2.17}$$

$$\langle \sigma_{\theta\theta} \rangle = \frac{P}{h/r_i} \tag{2.18}$$

$$\langle \sigma_{zz} \rangle = \frac{||\vec{N}||}{\pi (r_0^2 - r_i^2)} \tag{2.19}$$

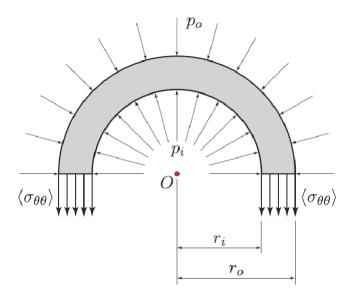

- 2.4.2 Analytical analysis fot thick-walled cylinders
- 2.4.3 The Finite Element Method
- 2.5 Other biomechanical applications