SOC Design Lab #6 – lab-wlos_baseline Report

Group no: 5

Members:

M11207415 陳謝鎧

M11207002 陳泊佑

M11107426 廖千慧

M11207328 吳奕帆

1. How do you verify your answer from notebook

1.1. Simulation on Matrix Multiplication, Quick Sort, FIR and

UART separately

Matrix Multiplication

$$\begin{bmatrix} 0 & 1 & 2 & 3 \\ 0 & 1 & 2 & 3 \\ 0 & 1 & 2 & 3 \\ 0 & 1 & 2 & 3 \end{bmatrix} \begin{bmatrix} 1 & 2 & 3 & 4 \\ 5 & 6 & 7 & 8 \\ 9 & 10 & 11 & 12 \\ 13 & 14 & 15 & 16 \end{bmatrix} = \begin{bmatrix} 62 & 68 & 74 & 80 \\ 62 & 68 & 74 & 80 \\ 62 & 68 & 74 & 80 \end{bmatrix}$$

```
ubuntu@ubuntu2004:-/Desktop/lab-wlos_baseline/testbench/counter_la_mm$ source run_clean
ubuntu@ubuntu2004:-/Desktop/lab-wlos_baseline/testbench/counter_la_mm$ source run_sim
Reading counter_la_mm.hex
counter_la_mm.hex loaded into memory
Memory 5 bytes = 0x6f 0x00 0x00 0x0b 0x13
VCD info: dumpfile counter_la_mm.vcd opened for output.
LA Test 1 started
Call function matmul() in User Project BRAM (mprjram, 0x38000000) return value passed, 0x003e
Call function matmul() in User Project BRAM (mprjram, 0x38000000) return value passed, 0x0044
Call function matmul() in User Project BRAM (mprjram, 0x38000000) return value passed, 0x004a
Call function matmul() in User Project BRAM (mprjram, 0x38000000) return value passed, 0x004a
Call function matmul() in User Project BRAM (mprjram, 0x38000000) return value passed, 0x0050
LA Test 2 passed
```




Quick Sort

[40, 893, 2541, 2669, 3233, 4267, 4622, 5681, 6023, 9073]

```
ubuntu@ubuntu2004:~/Desktop/lab-wlos_baseline/testbench/counter_la_qs$ source run_clean
ubuntu@ubuntu2004:~/Desktop/lab-wlos_baseline/testbench/counter_la_qs$ source run_sim
Reading counter_la_qs.hex
counter_la_qs.hex loaded into memory
Memory 5 bytes = 0x6f 0x00 0x00 0x0b 0x13
VCD info: dumpfile counter_la_qs.vcd opened for output.

LA Test 1 started
Call function matmul() in User Project BRAM (mprjram, 0x38000000) return value passed, 0x0028
Call function matmul() in User Project BRAM (mprjram, 0x38000000) return value passed, 0x037d
Call function matmul() in User Project BRAM (mprjram, 0x38000000) return value passed, 0x09ed
Call function matmul() in User Project BRAM (mprjram, 0x38000000) return value passed, 0x09ed
Call function matmul() in User Project BRAM (mprjram, 0x38000000) return value passed, 0x006d
LA Test 2 passed
ubuntu@ubuntu2004:~/Desktop/lab-wlos_baseline/testbench/counter_la_qs$
```

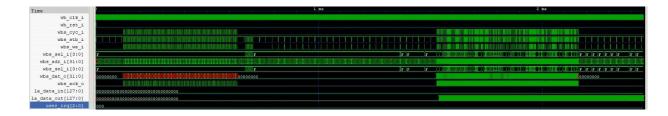

FIR

[0, -10, -29, -25, 35, 158, 337, 539, 732, 915, 1098]

```
ubuntu@ubuntu2004:~/Desktop/lab-wlos_baseline/testbench/counter_la_fir$ source run_clean
ubuntu@ubuntu2004:~/Desktop/lab-wlos_baseline/testbench/counter_la_fir$ source run_sim
Reading counter_la_fir.hex
counter_la_fir.hex loaded into memory
Memory 5 bytes = 0x6f 0x00 0x00 0x0b 0x13
VCD info: dumpfile counter_la_fir.vcd opened for output.

LA Test 1 started
Call function fir() in User Project BRAM (mprjram, 0x38000000) return value passed, 0x021b
Call function fir() in User Project BRAM (mprjram, 0x38000000) return value passed, 0x02dc
Call function fir() in User Project BRAM (mprjram, 0x38000000) return value passed, 0x0393
Call function fir() in User Project BRAM (mprjram, 0x38000000) return value passed, 0x044a
LA Test 2 passed

**Description**

**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Description**
**Descri
```

UART

```
ubuntu@ubuntu2004:~/Desktop/lab-wlos_baseline/testbench/uart$ source run_clean
ubuntu@ubuntu2004:-/Desktop/lab-wlos_baseline/testbench/uart$ source run sim
Reading uart.hex
uart.hex loaded into memory
Memory 5 bytes = 0x6f 0x00 0x00 0x0b 0x13
VCD info: dumpfile uart.vcd opened for output.
LA Test 1 started
tx data bit index 0: 1
tx data bit index 1: 0
tx data bit index 2: 1
tx data bit index 3: 1
tx data bit index 4: 1
tx data bit index 5: 1
tx data bit index 6: 0
tx data bit index 7: 0
tx complete 2
rx data bit index 0: 1
rx data bit index 1: 0
rx data bit index 2: 1
rx data bit index 3:
rx data bit index 4:
rx data bit index 5:
rx data bit index 6: 0
rx data bit index 7: 0
recevied word 61
```





2. Simulation on integrating Matrix Multiplication,

Quick Sort, FIR and UART



3. Block design

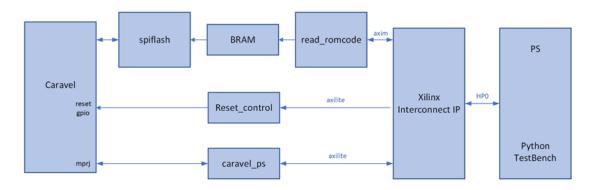

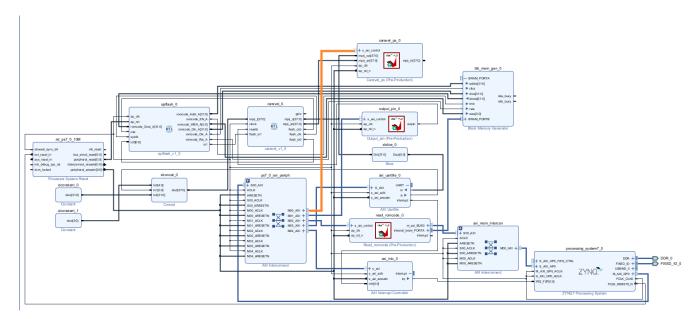

這次會多 axi-uartlite 跟 Interrupt Control 這兩個 ip,

4. Timing report/resource report after synthesis

• Timing report

resource report

		+	+		 	+
Site Type	Used	Fixe	d	Prohibited	Available	Util%
+ Slice LUTs	+ 5381	+ I	0	i 0	 53200	+ 10.11
LUT as Logic	5193		0	0	53200	5
LUT as Memory	188	ĵ	0	0	17400	1.08
LUT as Distributed RAM	18	1	0			Ī
LUT as Shift Register	170	1	0			
Slice Registers	6162	1	0	0	106400	5.79
Register as Flip Flop	6162	1	0	0	106400	5.79
Register as Latch	0	T	0	0	106400	0.00
F7 Muxes	170	I	0	0	26600	0.64
F8 Muxes	47	1	0	0	13300	0.35

5. Latency for a character loop back

5-1. Use UART

```
In [22]: import time
          async def uart_rxtx():
             # Reset FIFOs, enable interrupts
             ipUart.write(CTRL_REG, 1<<RST_TX | 1<<RST_RX | 1<<INTR_EN)
             print("Waitting for interrupt")
             tx_str = "hello\n"
             ipUart.write(TX_FIFO, ord(tx_str[0]))
             start = time.time()
             1 = 1
             while(True):
                 await intUart.wait()
                 buf = ""
                 # Read FIFO until valid bit is clear
                 while ((ipuart.read(STAT_REG) & (1<<RX_VALID))):
                     buf += chr(ipUart.read(RX_FIFO))
                     end = time.time()
                      print("latency time:",(end-start))
                      if i<len(tx str):
                          ipUart.write(TX_FIFO, ord(tx_str[i]))
                          i=i+1
                 print(buf, end="")
          asymc def caravel_start():
             ipOUTPIN.write(0x10, 0)
             print("Start Caravel Soc")
             ipOUTPIN.write(0x10, 1)
```

```
In [23]: asyncio.run(async_main())

Start Caravel Soc
Waitting for interrupt
latency time: 0.00743412971496582
hlatency time: 0.013600349426269531
elatency time: 0.019428491592407227
llatency time: 0.024479389190673828
llatency time: 0.02961897850036621
olatency time: 0.03439927101135254

main(): uart_rx is cancelled now
```

• Latency

- 1. start tx to h: 7.4 0 = 7.4ms
- 2. receive h to receive e : 13.6 7.4 = 6.2ms
- 3. receive e to receive 1: 19.4 13.6 = 5.8s
- 4. receive 1 to receive 1 : 24.4 19.4 = 5ms
- 5. receive 1 to receive 0:29.6-24.4=5.2ms

5-2. Use integrate

```
import time
async def uart_rxtx():
   # Reset FIFOs, enable interrupts
   ipuart.write(CTRL_REG, 1<<RST_TX | 1<<RST_RX | 1<<INTR_EN)
   print("Waitting for interrupt")
   tx str = "hello\n"
   ipUart.write(TX_FIFO, ord(tx_str[0]))
   start = time.time()
   i = 1
   while(True):
       await intUart.wait()
        buf = ""
        # Read FIFO until valid bit is clear
       while ((ipUart.read(STAT_REG) & (1<<RX_VALID))):
            buf += chr(ipUart.read(RX_FIFO))
            end = time.time()
           print("latency:",(end - start))
           if i<len(tx_str):
                ipUart.write(TX_FIFO, ord(tx_str[i]))
                i=i+1
       print(buf, end="")
async def caravel_start():
    ipOUTPIN.write(0x10, 0)
    print("Start Caravel Soc")
   ipOUTPIN.write(0x10, 1)
```

asyncio.run(async_main())

```
Start Caravel Soc

Waitting for interrupt

latency: 0.006279945373535156

hlatency: 0.011871099472045898

elatency: 0.016742229461669922

llatency: 0.021452665328979492

llatency: 0.02624654769897461

olatency: 0.0335080623626709

main(): uart_rx is cancelled now
```

Latency

```
1. start tx to h : 6.2 - 0 = 6.2 ms
```

2. receive h to receive e : 11.8 - 6.2 = 5.8ms

3. receive e to receive 1:16.7-11.8=4.9ms

- 4. receive 1 to receive 1 : 21.4 16.7 = 4.7ms
- 5. receive 1 to receive 0:26.2-21.4=4.8ms

6. Screenshot of Execution result on workload

6.1 Execute "uart.hex"

```
In [1]: from __future__ import print_function
          import sys
          import numpy as np
          from time import time
          import matplotlib.pyplot as plt
          sys.path.append('/home/xilinx')
          from pynq import Overlay
          from pynq import allocate
          from uartlite import *
          import multiprocessing
          # For sharing string variable
          from multiprocessing import Process, Manager, Value
          from ctypes import c char p
          import asyncio
          ROM SIZE = 0x2000 #8K
 In [2]: ol = Overlay("/home/xilinx/jupyter_notebooks/caravel_fpga.bit")
          #ol.ip_dict
In [3]: ipOUTPIN = ol.output_pin_0
         ipPS = ol.caravel_ps_0
         ipReadROMCODE = ol.read_romcode_0
         ipUart = ol.axi_uartlite_0
In [4]: ol.interrupt_pins
Out[4]: {'axi_intc_0/intr': {'controller': 'axi_intc_0',
          'index': 0,
         'fullpath': 'axi_intc_0/intr'},
         'axi_uartlite_0/interrupt': {'controller': 'axi_intc_0',
          'index': 0,
          'fullpath': 'axi_uartlite_0/interrupt'}}
```

```
In [5]: # See what interrupts are in the system
#ol.interrupt_pins

# Each IP instances has a _interrupts dictionary which lists the names of the interrupts
#ipUart._interrupts

# The interrupts object can then be accessed by its name
# The Interrupt class provides a single function wait
# which is an asyncio coroutine that returns when the interrupt is signalled.
intUart = ipUart.interrupt
```

```
In [6]: # Create np with 8K/4 (4 bytes per index) size and be initiled to \theta
        rom_size_final = 0
        npROM = np.zeros(ROM_SIZE >> 2, dtype=np.uint32)
        npROM_index = 0
        npROM_offset = 0
        fiROM = open("uart.hex", "r+")
#fiROM = open("counter_wb.hex", "r+")
        for line in fiROM:
             # offset header
             if line.startswith('@'):
                 # Ignore first char @
                 npROM_offset = int(line[1:].strip(b'\x00'.decode()), base = 16)
                 npROM_offset = npROM_offset >> 2 # 4byte per offset
                 #print (npROM_offset)
                 npROM_index = 0
                 continue
             #print (line)
             # We suppose the data must be 32bit alignment
             buffer = 0
             bytecount = 0
             for line_byte in line.strip(b'\x00'.decode()).split():
                 buffer += int(line_byte, base = 16) << (8 * bytecount)
                 bytecount += 1
                 # Collect 4 bytes, write to npROM
                 if(bytecount == 4):
                     npROM[npROM_offset + npROM_index] = buffer
                    # Clear buffer and bytecount
buffer = 0
                     bytecount = 0
                    npROM_index += 1
                     #print (npROM_index)
                    continue
             # Fill rest data if not alignment 4 bytes
             if (bytecount != 0):
                 npROM[npROM_offset + npROM_index] = buffer
                 npROM_index += 1
        fiROM.close()
        rom_size_final = npROM_offset + npROM_index
        #print (rom_size_final)
        #for data in npROM:
        # print (hex(data))
```

```
In [7]: # Allocate dram buffer will assign physical address to ip ipReadROMCODE
         #rom_buffer = allocate(shape=(ROM_SIZE >> 2,), dtype=np.uint32)
         rom_buffer = allocate(shape=(rom_size_final,), dtype=np.uint32)
         # Initial it by npROM
         #for index in range (ROM_SIZE >> 2):
         for index in range (rom_size_final):
             rom_buffer[index] = npROM[index]
         #for index in range (ROM_SIZE >> 2):
# print ("0x{0:08x}".format(rom_buffer[index]))
         # Program physical address for the romcode base address
         # 0x00 : Control signals
                 bit 0 - ap_start (Read/Write/COH)
bit 1 - ap_done (Read/COR)
bit 2 - ap_idle (Read)
         #
         #
                 bit 3 - ap_ready (Read)
bit 7 - auto_restart (Read/Write)
         #
         #
                  others - reserved
         # 0x10 : Data signal of romcode
                  bit 31~0 - romcode[31:0] (Read/Write)
         # 0x14 : Data signal of romcode
                  bit 31~0 - romcode[63:32] (Read/Write)
         # 0x1c : Data signal of Length_r
                  bit 31~0 - length_r[31:0] (Read/Write)
         ipReadROMCODE.write(0x10, rom_buffer.device_address)
         ipReadROMCODE.write(0x1C, rom_size_final)
         ipReadROMCODE.write(0x14, 0)
         # ipReadROMCODE start to move the data from rom_buffer to bram
         ipReadROMCODE.write(0x00, 1) # IP Start
         while (ipReadROMCODE.read(0x00) & 0x04) == 0x00: # wait for done
            continue
         print("Write to bram done")
```

Write to bram done

```
In [8]: # Initialize AXI UART
          uart = UartAXI(ipUart.mmio.base_addr)
          # Setup AXI UART register
          uart.setupCtrlReg()
          # Get current UART status
          uart.currentStatus()
Out[8]: {'RX_VALID': 0,
'RX_FULL': 0,
'TX_EMPTY': 1,
            'TX_FULL': 0,
            'IS_INTR': 0,
'OVERRUN_ERR': 0,
            'FRAME_ERR': 0,
           'PARITY_ERR': 0}
```

```
In [19]: async def uart_rxtx():
                   # Reset FIFOs, enable interrupts
ipUart.write(CTRL_REG, 1<<RST_TX | 1<<RST_RX | 1<<INTR_EN)
print("Waitting for interrupt")</pre>
                   tx str = "hello\n"
                   ipUart.write(TX_FIFO, ord(tx_str[0]))
                   while(True):
                        await intuart.wait()
                         # Read FIFO until valid bit is clear
                        while ((ipUart.read(STAT_REG) & (1<<RX_VALID))):
    buf += chr(ipUart.read(RX_FIFO))</pre>
                              if i<len(tx_str):
                                  ipUart.write(TX_FIFO, ord(tx_str[i]))
i=i+1
                        print(buf, end="")
              async def caravel_start():
                   ipoutPIN.write(0x10, 0)
                   print("Start Caravel Soc")
                   ipoUTPIN.write(0x10, 1)
             # Python 3.5+
#tasks = [ # Create a task List
             # asyncio.ensure_future(example1()),
# asyncio.ensure_future(example2()),
             # To test this we need to use the asyncio Library to schedule our new coroutine.
# asyncio uses event loops to execute coroutines.
             # When python starts it will create a default event loop
             # which is what the PYNQ interrupt subsystem uses to handle interrupts
              #Loop = asyncio.get_event_loop()
              #Loop.run_until_complete(asyncio.wait(tasks))
              async def async_main():
                   task2 = asyncio.create_task(caravel_start())
task1 = asyncio.create_task(uart_rxtx())
                   # Wait for 5 second
                   await asyncio.sleep(10)
task1.cancel()
                   try:
                       await task1
                   except asyncio.CancelledError:
                        print('main(): uart_rx is cancelled now')
In [20]: asyncio.run(async_main())
             Start Caravel Soc
             Waitting for interrupt
             main(): uart_rx is cancelled now
In [21]: print ("0xi0 = ", hex(ipPS.read(0x10)))
    print ("0x14 = ", hex(ipPS.read(0x14)))
    print ("0x1c = ", hex(ipPS.read(0x1c)))
    print ("0x20 = ", hex(ipPS.read(0x20)))
    print ("0x34 = ", hex(ipPS.read(0x34)))
    print ("0x38 = ", hex(ipPS.read(0x38)))
             0x10 = 0x0
             0x14 = 0x8
             0x1c = 0xab510040
             0x20 = 0x0
             0x34 = 0x20
             0x38 = 0x3f
```

由執行結果得知,在OXIC的位置上值為OXAB51。

6.2 Execute "integrate.hex"

```
In [1]: from __future__ import print_function
           import sys
           import numpy as np
           from time import time
           import matplotlib.pyplot as plt
           sys.path.append('/home/xilinx')
           from pynq import Overlay
           from pynq import allocate
           from uartlite import *
           import multiprocessing
           # For sharing string variable from multiprocessing import Process, Manager, Value
           from ctypes import c_char_p
           import asyncio
           ROM_SIZE = 0x2000 #8K
In [2]: ol = Overlay("/home/xilinx/jupyter_notebooks/caravel_fpga.bit")
         #ol.ip_dict
In [3]: ipOUTPIN = ol.output_pin_0
         ipPS = ol.caravel_ps_0
         ipReadROMCODE = ol.read romcode 0
         ipUart = ol.axi_uartlite_0
In [4]: ol.interrupt_pins
Out[4]: {'axi_intc_0/intr': {'controller': 'axi_intc_0',
           'index': 0,
'fullpath': 'axi_intc_0/intr'},
          'axi_uartlite_0/interrupt': {'controller': 'axi_intc_0',
           'index': 0,
           'fullpath': 'axi_uartlite_0/interrupt'}}
In [5]: # See what interrupts are in the system
         #oL.interrupt_pins
         # Each IP instances has a _interrupts dictionary which Lists the names of the interrupts
        #ipUart._interrupts
        # The interrupts object can then be accessed by its name
         # The Interrupt class provides a single function wait
         # which is an asyncio coroutine that returns when the interrupt is signalled.
        intUart = ipUart.interrupt
```

```
In [6]: # Create np with 8K/4 (4 bytes per index) size and be initiled to 0
        rom_size_final = 0
        npROM = np.zeros(ROM_SIZE >> 2, dtype=np.uint32)
        npROM_index = 0
        npROM_offset = 0
        fiROM = open("all.hex", "r+")
#fiROM = open("counter_wb.hex", "r+")
        for line in fiROM:
             # offset header
            if line.startswith('@'):
                # Ignore first char @
                npROM_offset = int(line[1:].strip(b'\x00'.decode()), base = 16)
                npROM_offset = npROM_offset >> 2 # 4byte per offset
                #print (npROM_offset)
                npROM index = 0
                continue
            #print (Line)
            # We suppose the data must be 32bit alignment
            buffer = 0
            bytecount = 0
            for line_byte in line.strip(b'\x00'.decode()).split():
                buffer += int(line_byte, base = 16) << (8 * bytecount)
                bytecount += 1
                # Collect 4 bytes, write to npROM
                if(bytecount == 4):
                    npROM[npROM_offset + npROM_index] = buffer
                    # CLear buffer and bytecount
                    buffer = 0
                    bytecount = 0
                    npROM_index += 1
                    #print (npROM_index)
                    continue
            # Fill rest data if not alignment 4 bytes
            if (bytecount != 0):
                npROM[npROM_offset + npROM_index] = buffer
                npROM_index += 1
        fiROM.close()
        rom_size_final = npROM_offset + npROM_index
        #print (rom_size_final)
        #for data in npROM:
        # print (hex(data))
```

```
In [7]: # Allocate dram buffer will assign physical address to ip ipReadROMCODE
        #rom_buffer = allocate(shape=(ROM_SIZE >> 2,), dtype=np.uint32)
        rom_buffer = allocate(shape=(rom_size_final,), dtype=np.uint32)
        # Initial it by npROM
        #for index in range (ROM_SIZE >> 2):
        for index in range (rom_size_final):
           rom_buffer[index] = npROM[index]
        #for index in range (ROM_SIZE >> 2):
        # print ("0x{0:08x}".format(rom_buffer[index]))
        # Program physical address for the romcode base address
        # 0x00 : Control signals
                 bit 0 - ap_start (Read/Write/COH)
                bit 1 - ap_done (Read/COR)
                bit 2 - ap_idLe (Read)
                bit 3 - ap_ready (Read)
bit 7 - auto_restart (Read/Write)
                others - reserved
        # 0x10 : Data signal of romcode
                 bit 31~0 - romcode[31:0] (Read/Write)
        # 0x14 : Data signal of romcode
                bit 31~0 - romcode[63:32] (Read/Write)
        # 0x1c : Data signal of Length_r
                bit 31~0 - Length_r[31:0] (Read/Write)
        ipReadROMCODE.write(0x10, rom_buffer.device_address)
        ipReadROMCODE.write(@x1C, rom_size_final)
        ipReadROMCODE.write(0x14, 0)
        # ipReadROMCODE start to move the data from rom_buffer to bram
        ipReadROMCODE.write(0x00, 1) # IP Start
        while (ipReadROMCODE.read(0x00) & 0x04) == 0x00: # wait for done
           continue
        print("Write to bram done")
```

Write to bram done

```
In [8]: # Initialize AXI UART
    uart = UartAXI(ipUart.mmio.base_addr)

# Setup AXI UART register
    uart.setupCtrlReg()

# Get current UART status
    uart.currentStatus()

Out[8]: {'RX_VALID': 0,
    'RX_FULL': 0,
    'TX_EMPTY': 1,
    'TX_FULL': 0,
    'IS_INTR': 0,
    'OVERRUN_ERR': 0,
    'FRAME_ERR': 0,
    'PARITY_ERR': 0}
```

```
In [9]: async def uart_rxtx():
              # Reset FIFOs, enable interrupts
              ipUart.write(CTRL_REG, 1<<RST_TX | 1<<RST_RX | 1<<INTR_EN)
              print("Waitting for interrupt")
              tx_str = "hello\n"
              ipUart.write(TX_FIFO, ord(tx_str[0]))
              i = 1
              while(True):
                   await intUart.wait()
                   buf = ""
                   # Read FIFO until valid bit is clear
                   while ((ipUart.read(STAT_REG) & (1<<RX_VALID))):
                       buf += chr(ipUart.read(RX_FIFO))
                       if i<len(tx_str):
                            ipUart.write(TX_FIFO, ord(tx_str[i]))
                            i=i+1
                   print(buf, end='')
          async def caravel_start():
              ipOUTPIN.write(0x10, 0)
              print("Start Caravel Soc")
              ipOUTPIN.write(0x10, 1)
          # Python 3.5+
          #tasks = [ # Create a task List
             asyncio.ensure_future(example1()),
               asyncio.ensure_future(example2()),
          #7
          # To test this we need to use the asyncio Library to schedule our new coroutine.
          # asyncio uses event Loops to execute coroutines.
          # When python starts it will create a default event loop
          # which is what the PYNQ interrupt subsystem uses to handle interrupts
          #Loop = asyncio.get_event_loop()
          #Loop.run_until_complete(asyncio.wait(tasks))
          # Python 3.7+
          async def async_main():
              task2 = asyncio.create_task(caravel_start())
              task1 = asyncio.create_task(uart_rxtx())
              # Wait for 5 second
              await asyncio.sleep(10)
              task1.cancel()
              try:
                  await task1
              except asyncio.CancelledError:
                  print('main(): uart_rx is cancelled now')
In [10]: asyncio.run(async_main())
           Start Caravel Soc
           Waitting for interrupt
           hello
           main(): uart_rx is cancelled now
In [11]: print ("0x10 = ", hex(ipPS.read(0x10)))
    print ("0x14 = ", hex(ipPS.read(0x14)))
    print ("0x1c = ", hex(ipPS.read(0x1c)))
    print ("0x20 = ", hex(ipPS.read(0x20)))
    print ("0x34 = ", hex(ipPS.read(0x34)))
    print ("0x38 = ", hex(ipPS.read(0x38)))
           0x10 = 0x0
           0x14 = 0x0
           0x1c = 0xab510040
           0x20 = 0x0
           0x34 = 0x20
           0x38 = 0x3f
```

由執行結果得知,在OXIC的位置上值為OXAB51。

7. Suggestion for improving latency for UART loop back

1. 使用 FIFO (First In, First Out)。

在 UART 通信中,FIFO 可以用來緩存接收到的數據,而不 是立即將每個字節的數據進行處理。


這樣的做法可以減少中斷的頻率,因為不需要每收到一個字節就觸發一次中斷。相反,當 FIFO 中的數據達到一定數量,或者某些特定的事件發生時,再一次性地處理 FIFO 中的數據。這樣可以提高效率,減少中斷處理的開銷。

實現:若要增加 FIFO 到 UART,需要定義 confiquration registers 用於 uart 和 fifo 的 handshake 以及處理跟 firmware 之間的 hankshake。

- 2. 可以提高 baudrate 來增加數據傳輸。
- 3. 使用 DMA 進行接收。

8. What else do you observe

這次 lab 主要分為 2 個部分,主要是驗證 firmware 端的 4 個功能正確性,以及把它們整合在一起,最後在放到 FPGA 來上來進行驗證,相較於 LAB5 此次多了兩個 IP,分別是 axi-uartlite 和 interrupt-Control,當收到資料時,需要產生中斷訊號的 ip 以及收資料的 ip,運作原理如下

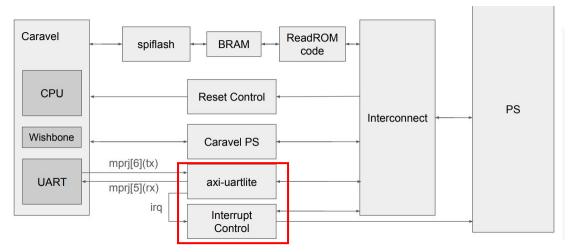

當 ps 端寫一筆 data 給 caravel,它會透過 axi-interconnect 送到 axi-uartlite,然後 caravel 會去接這筆資料,data 會經過 axi-uartlite-rx 傳給 caravel_uart-tx,而從 caravel 端要傳 data 給 ps 端,data 會經由 caravel_uart-rx 傳給 axi-uartlite-tx,然後當 axi-uartlite 接收到資料時,它會去 trigger interrupt,而資料會經由 interrupt-ctrl 傳給 ps 端。(ps 端的 irq 會讓 ps 端知道已經有資料從 caravel 送過來了)

而其他的 ip 功能跟 lab5 相同,執行 pythin code 來進行驗

證,透過ip 來完成資料的傳遞。

透過 read_romcode ip 來將.hex 傳遞。將資料從 DDR 內傳遞 至硬體 BRAM 內。

透過 RsetControl ip 來溝通 PS 與 Caravel 內的 MPRJ_IO。 用此 ip 設定 reset 信號控制,1 或 0 分別控制 Caravel 的 reset pin 是 assert 還是 de-assert。

透過 MPRJ_IO 經由 caravel_ps 這個 ip 在執行完後溝通。提供 AXI Lite 接口供 PS CPU 讀取 MPRJ_IO/OUT/EN bit,用 HLS 實現並導出 IP 以供 Vivado 使用。

在此次實驗過程中,因為忘了在 include.rtl.list 放入修改的檔案路徑,導致一直跑出 error,以及一開始在 run firmware 時會一直出現 time_out,所幸最後都有在 github 上找到解答。