# AN10687 IEC 60601-1-8 audible alert generator using the LPC2000 Rev. 01 — 8 January 2008 Application

**Application note** 

## **Document information**

Info	Content		
Keywords	IEC60601-1-8, LPC2000, Goertzel, Medical Alerts		
Abstract	This application note describes an algorithmic method of generating audible medical alarms that comply with IEC60601-1-8. An overview of medical alarms is presented and the derivation of the algorithm used is provided. The algorithm code implementation is then detailed and discussed including a detailed performance analysis.		



## IEC 60601-1-8 audible alert generator using the LPC2000

## **Revision history**

Rev	Date	Description
01	20080108	Initial version.

# **Contact information**

For additional information, please visit: <a href="http://www.nxp.com">http://www.nxp.com</a>

For sales office addresses, please send an email to: <a href="mailto:salesaddresses@nxp.com">salesaddresses@nxp.com</a>

IEC 60601-1-8 audible alert generator using the LPC2000

## 1. Introduction

## 1.1 Background on Audible Medical Alarms

The ACCE Healthcare Technology Foundation recently did a study and survey to determine the impact of clinical alarms on patient healthcare. Task force chairman Toby Clark reported a number of limitations of clinical alarms and the impact they have on patient health. The study searched a database on fatality incidents where the word "alarm" was included in the product problem description. The search results showed an average of about 80 deaths a year during the period of 2002 to 2004 may be attributed to issues with medical alarms. Some of the alarm limitations the study identified by surveys are outlined below:

- Difficulty in Learning more than 6 alarm signals ICU and Surgery have >> 6
   Alarms
- Difficulty in discerning between high and low priority alarms
- Perceived urgency of alarms may not be consistent with criticality of situation
- False Alarms

## 1.2 Alarms and human behavior

A report on this subject appeared in the British Journal of Anaesthesia titled, "Alarms and Human Behaviour: Implications for Medical Alarms"

One of the subjects of the report was identifying the characteristics of an ideal alarm sound and the suggested knowledge on how those characteristics can be achieved. The following table lists some of their findings.

Characteristics of an Ideal Alarm	Relevant Finding	
Easy to localize	The ear uses two mechanisms for localizing sound, one at high frequencies and one at low frequencies. Neither functions well in the midto-high normal band of frequencies of normal hearing	
Resistant to masking by other sounds	Sounds that are acoustically 'rich', that is contain a number of harmonics, are more resistant to masking	
Allow communication	Continuous sounds are more likely to be irritating and interfere with communication	
Easy to learn and retain	People are poor at retaining the absolute pitch of a tone and find it difficult to distinguish that vary only in pitch unless they are heard in close temporal proximity. In addition, abstract sounds are harder to learn and retain than environmental sounds or auditory icons.	

## 1.3 IEC60601-1-8 Audible and Visual Alarm Standard

To address some of the limitations of medical alarms and to utilize modern research available on ideal alarm characteristics, the IEC (International Electrotechnical Commission) has provided the first focused standard on audible and visual alarms for

AN10687 1 © NXP B.V. 2008. All rights reserved

## IEC 60601-1-8 audible alert generator using the LPC2000

medical equipment, the IEC60601-1-8. Focusing on the audible alert portion of the document, the IEC60601-1-8 standard requires a specific melody correspond with a specific physiological function. This ensures that the number of alarms is contained, instead of varying across different manufacturers. It also limits the number of alarms to eight and uses a cautionary and an emergency version of each. The emergency (high Priority) version uses a five note melody that is repeated. The cautionary (Medium Priority) alarm uses the first three notes of the high priority version and does not repeat. Some of the principles of designing perceived urgency into sound have been applied to these signals such as a slower rise and fall times on medium priority tones compared to high priority tones and a faster tempo for the high priority alarms. An optional low priority alarm tone is also provided in the standard that sounds only two notes. The high Priority Melody corresponding to the physiological function it represents is given in the table below. (Note: High Priority melodies repeat once)

<u>Alarm</u>	High Priority Melody	Mnemonic notes
General	C4-C4-C4-C4	Fixed pitch
Cardiac	C4-E4-G4-G4-C5	Trumpet call; Call to arms; Major chord
Artificial Perfusion	C4-F#4-C4-C4-F#4	Artificial sound; Tri-tone
Ventilation	C4-A4-F4-A4-F4	Inverted major chord; Rise and fall of the lungs
Oxygen	C5-B4-A4-G4-F4	Slowly falling pitches; Top of a major scale; Falling pitch of an oximeter
Temperature	C4-E4-D4-F4-G4	Slowly rising pitches; Bottom of a major scale; Related to slow increase in energy or (usually) temperature
Drug delivery	C5-D4-G4-C5-D4	Jazz chord (inverted 9th); Drops of an infusion falling and "splashing"
Power failure	C5-C4-C4-C5-C4	Falling or dropping down

The melody note C4 in the above table refers to middle C, and, C5 is one octave above middle C. The IEC states that you do not have to use those specific notes. As long as the fundamental note is within the specified frequency range, the alarm melody could be transposed to different keys and still be compliant with the specification. The IEC does state that the note must consist of the fundamental tone and at least 4 harmonics. The the fundamental and 4 harmonics must not differ by more than 15db in amplitude.

The IEC60601-1-8 Audible alarm standard provides tones that are rich in harmonics to make them easy to localize and resistant to masking. There are a limited amount of categories and corresponding melodies to make the different alarm sequences easier to learn. And, the priority of an alarm determines the number of notes in the alarm and the dynamic characteristics of the note sequence. This makes it easy to determine the criticality of the alarm. Thus, the IEC60601-1-8 standard addresses many of the limitations of previous alarms and will hopefully contribute to improved patient safety.

# 2. Generating the IEC60601-1-8 Alarms Algorithmically

Many of the present IEC60601-1-8 implementations playback a recorded version of the alarm that is stored in memory. The drawback to this is it takes up a lot of memory space to store the files as well as the program space to control the playback. Generating the

AN10687 1 © NXP B.V. 2008. All rights reserved

## IEC 60601-1-8 audible alert generator using the LPC2000

alarms algorithmically is a much more efficient method in terms of memory usage and allows a lot of flexibility in being able to customize the tones while still meeting IEC60601-1-8 specifications.

## 2.1 Functional resources required on chip

To synthesize the alarm tones on chip requires the following functions to be implemented in firmware:

Timing Generator – This provides the timing reference to digitally construct the alarm tones effectively setting the internal sample rate and the DAC output rate. This also provides the time reference for the note sequencer and envelope generator.

Envelope Generator – This controls the rise time, fall time, and amplitude of the note pulses. The rise and fall time of a note is also a function of the alarm priority.

Note Sequencer – This sequences through the correct notes at the correct tempo based on the type of alarm and the priority level.

Note generator – This generates multiple sine wave tones that are combined to form the fundamental and harmonics that make up the alert note.

For the demonstration code, a menu driven user interface is provided via UART1 and a terminal program. This includes the different menus, a serial port driver, and, a simple command handler.

## 2.1.1 Timing Generator

This utilizes the on chip timer to set the sample rate / DAC output rate for the algorithmic tone generator. The timer is set up to generate an interrupt every 40 us for a 25ksps DAC output rate. This was chosen to be above the audible range and much higher than the Nyquist frequency to allow low cost filters on the DAC. A software timer in the interrupt service routine also provides a 1 ms timeout that is used by the envelope control functions and note sequencer as described below.

## 2.1.2 Envelope Generator

The Envelope Generator controls the dynamic volume of the tones being generated. Since the IEC specification includes rise and fall times for the tones, a variable is generated that is time dependent. When a note is turned on, the value of the envelope variable increases from 0 to the maximum set level at a controlled rate. The same happens when the note is turned off, the level will decrease at a controlled rate until it reaches 0. The rise and fall times are programmable and the medium and low priority tones have a slower rise/fall time than the high priority tones. The envelope generator uses the 1 ms timeout as its timing reference.

## 2.1.3 Note sequencer

The IEC 60601-1-8 standard specifies the relative note sequences and temporal characteristics for the tones as a function of the classification and priority of the alarm. The note sequencer outputs the tones with the right duration and spacing to meet the temporal characteristics for a given priority of alarm. For High priority alarms, the sequence is specified to be a 5 note sequence that is repeated once for a total of 10 notes. The medium priority alarm is a 3 note sequence and is not repeated. The three note sequence for a given alarm type is the same as the first three notes of the high priority sequence to make learning the alarms easier. The tempo of the high priority alarm is faster than the medium priority alarms. The different number of notes and tempo differences make it easy to discern the priority of the alarm.

## IEC 60601-1-8 audible alert generator using the LPC2000

## 2.1.4 Note generator

In order to make it easy to comply with the standard, the fundamental and 4 harmonics will be generated as separate sine waves and combined digitally. There are many ways to generate sine waves on chip including sine table look up, math library algorithms, Taylor series expansions, and recursive oscillators. The recursive oscillator is an IIR filter structure with the proper coefficients to oscillate given the proper initialization. Since this is one of the more efficient methods, and, is also has very low distortion, the recursive oscillator will be used to generate the fundamental and 4 harmonics that are required for each note.

## 2.1.4.1 The Goertzel Algorithm


One of the most useful recursive methods is the Goertzel Algorithm, a simple two tap IIR filter shown in figure 1. This is a very useful algorithm as it can also be used as a narrow band tone detector in addition to a sine wave generator. Analyzing the algorithm as an oscillator we want to be able to calculate the sine of an angle as we increment the angle in fixed steps. Assuming we can calculate the sine of an angle from the two previous incremental values in the sine series, equation (1) can be written for figure 1:

$$\sin(a + n * b) = x * \sin(a + (n - 2) * b) + y * \sin(a + (n - 1) * b)$$
 (1)

In equation (1), x and y are the coefficients of the IIR filter, 'a' is the starting angle, and 'b' is the incremental angle. To find the values of the two coefficients, we will first re-arrange and simplify equation 1 as shown below in equation 2.

$$\sin(a + n * b) = x * \sin(a + n * b - 2 * b) + y * \sin(a + n * b - 1 * b)$$
 (2)

Fig 1. IIR Filter

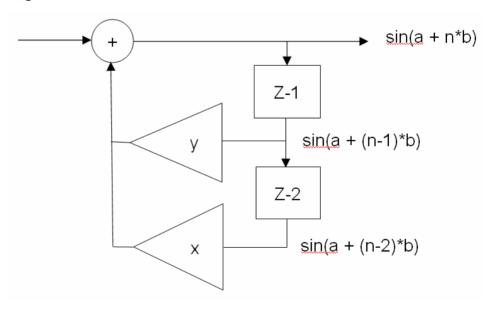

Continuing to expand equation 2 by substituting the following trigonometric identity:

$$\sin(a + b) = \sin(a) * \cos(b) + \cos(a) * \sin(b)$$
 (3)

We get:

AN10687 1 © NXP B.V. 2008. All rights reserved

## IEC 60601-1-8 audible alert generator using the LPC2000

$$\sin(a + n * b) = x * [\sin(a + n * b) * \cos(2 * b) - \cos(a + n * b) * \sin(2 * b)] + y * [\sin(a + n * b) * \cos(b) - \cos(a + n * b) * \sin(b)]$$
(4)

Re-arranging:

$$\sin(a + n * b) = [x * \cos(2 * b) + y * \cos(b)] * \sin(a + n * b) - [x * \sin(2 * b) + y * \sin(b)] * \cos(a + n * b)$$
(5)

For this to be true for all n, we must have the two expressions in brackets satisfy:

$$[x * \cos(2 * b) + y * \cos(b)] = 1$$

$$[x * \sin(2 * b) + y * \sin(b)] = 0$$
(6)

That, when solved, yields the coefficients for the recursive IIR filter:

$$x = -1$$

$$y = 2 * cos(b)$$
 (where b is the step angle  $2\pi \frac{f}{f_{sample}}$ ) (7)

Substituting this back into the original equation yields:

$$\sin(a + n * b) = -\sin(a + (n - 2) * b) + 2 * \cos(b) * \sin(a + (n - 1) * b)$$
 (8)

Re-arranging:

$$\sin(a + n * b) = 2 * \cos(b) * \sin(a + (n-1)*b) - \sin(a + (n-2)*b)$$
(9)

Substituting our sample value  $Y[n] = \sin(a+nb)$  yields:

$$v[n] = 2 * cos b * v[n - 1] - v[n - 2]$$
 (10)

So, as a result of one of the coefficients being equal to -1, the calculations at each step angle increment requires only one multiplication and one subtraction involving the results of the two previous calculations. (This assumes the coefficient is calculated ahead of time.) After executing the equation above, the y[-1] value is moved into the y[-2] variable and the calculated y[n] value is moved into the y[-1] variable to prepare for the calculations at the next step angle. This makes for very efficient operation for the ARM7 as we will see later in the code implementation.

## 2.1.4.2 Analysis of the Goertzel Algorithm

If we want to analyze the Goertzel algorithm, we can assume it has an input x(n) and write the transfer function as follows:

$$y[n] = 2 \cos b * y[n1] - y[n2] + x[n]$$
 (11)

If we take the Z transform of this we first write the equation as follows:

$$Y[Z](1 - (2 \cos b * Z1) + Z2) = X[Z]$$
 (12)

The transfer function can then be written as:

AN10687\_1 © NXP B.V. 2008. All rights reserved

## IEC 60601-1-8 audible alert generator using the LPC2000

$$H(Z) = \frac{Y[Z]}{X[Z]} = \frac{1}{1 - (2\cos b)Z^{-1} - Z^{-2}}$$
 (13)

Factoring out the roots:

$$H(Z) = \frac{Y[Z]}{X[Z]} = \frac{1}{(1 - e^{+bi}Z^{-1})(1 - e^{-bi}Z^{-1})}$$
 (14)

Thus, the Goertzel alogorithm's transfer function has poles where:

$$(1-e^{+bi}Z^{-1})=0$$
  
 $(1-e^{-bi}Z^{-1})=0$ 
(15)

Since the magnitude of Z is '1', the magnitude of the transfer functions poles is 1, placing them on the unit circle of the Argand diagram. The location of the two poles is then:

$$e^{+bi} = \cos b + i \sin b$$

$$e^{-bi} = \cos b - i \sin b$$
(16)

We know that the impulse response of a feedback system such as an IIR filter has the following characteristics as a function of the pole locations relative to the unit circle in the Z domain:

- if the poles are inside the unit circle, the transient terms will die away
- if the poles are on the unit circle, oscillations will be in a steady state
- if the poles are outside the unit circle, the transient terms will increase

So, with the poles on the unit circle, this meets the criteria for steady state oscillation.

#### 2.1.4.3 Goertzel Initialization

In order for the Goertzel to function as an oscillator, the y[-1] and y[-2] values must be initialized. If we set y[-1] = 0, then y[-2] would have the value of one incremental sine value before the zero crossing, or:

$$y[-1] = 0$$

$$y[-2] = A * \sin 2\pi \frac{F_{output}}{F_{sample}}$$
(17)

The coefficient must also be calculated as follows in equation 18.

$$coef = 2 * \cos 2\pi \frac{F_{output}}{F_{sample}}$$
 (18)

To use the Goertzel Algorithm as a tone detector, both y[-1] and y[-2] would be initialized to '0'. The input would then be summed into the calculation. After a certain number of samples, the input's amplitude at the detect frequency can be calculated from the following:

AN10687\_1 © NXP B.V. 2008. All rights reserved.

## IEC 60601-1-8 audible alert generator using the LPC2000

$$real = y[-1] - y[-2] * \cos 2\pi \frac{F_{\text{det }ect}}{F_{sample}}$$

$$imaginary = y[-2] * \sin 2\pi \frac{F_{\text{det }ect}}{F_{sample}}$$

$$magnitude^{2} = real^{2} + imagingary^{2}$$
(17)

There are optimized versions of this to simplify the math, but this explains the principle. To use this as a continuous tone detector, after making this calculation, y[-1] and y[-2] would again be set to zero and the next acquisition and detection sequence would proceed.

# 3. Code Implementation - Audible Alarm Synthesis

## 3.1 Timing Generator Code

The timing generator code consists of the initialization for Timer 0 and the interrupt service routine to handle Timer 0 interrupts. This provides the 40 us (25 Khz) time base for generating the alarm tones as well as a software counter to generate a 1 ms time base that is used by the envelope generator and the note sequencer.

## 3.1.1 Timer 0 Initialization

Timer 0 is initialized to generate a match interrupt every 40 microseconds to provide the 25khz sample rate. The initialization code is shown below.

```
1
     void init timer (void)
2
3
       TOMR0 = 479;
                                      // 40 uSec = 480-1 counts (25ksps @ 12 mhz PCLK)
                                      // Interrupt and Reset on MRO
4
     TOMCR = 3;
5
       TOTCR = 1;
                                      // Timer0 Enable
6
      timeval=0;
                                      // variable initializations
7
       mscount=0;
8
       sequence = 0;
9
```

## 3.1.2 Timer 0 Interrupt Service Routine

The Timer 0 interrupt service routine is the heart of this application since it provides all the timing for tone generation as well as tone sequencing. The code tests to see if the envelope is on, and if so, will output tones. In addition to clearing the interrupt, a software counter is incremented until a 1 millisecond timeout is reached. Every time the 1 ms timeout occurs, the state of the sequencer is incremented and any required actions will be taken by the envelope generator (to be discussed later). The code listing for the Timer 0 Interrupt service routine is shown below.

AN10687 1 © NXP B.V. 2008. All rights reserved

## IEC 60601-1-8 audible alert generator using the LPC2000

```
17
           VICVectAddr = 0;
                                                    // Acknowledge Interrupt
18
           timeval++:
19
           if (timeval == 25)
                                       // 1 millisecond interval @ 25 khz sample rate
20
21
                if (sequence)
22
                 {
23
                       switch (priority)
24
25
                             case 1:
                                   HighPriSequence(alarm);
26
27
                                   break;
28
                             case 2:
29
                                   MedPriSequence(alarm);
30
                                   break;
31
                             case 3:
32
                                   LowPriSequence(alarm);
33
                                   break;
34
35
                                   TestSequence(alarm);
36
                                  break;
37
                       }
38
39
                                              // increment ms counter
                 mscount++;
40
                 timeval = 0;
                                              // clear interval counter
41
                 EnvelopeControl();
                                              // envelope actions required?
42
43
44
```

## 3.2 Envelope Control Function

The envelope generator controls the dynamic level of the tones as the IEC60601-1-8 requires rise times and fall times to be within a specified range. Also, the first note in an alarm sequence is supposed to be lower in amplitude than the others. The envelope generator output is the variable 'envelope'. When a tone is off, envelope = 0. When a note is turned on in a sequence, the envelope variable will increase at a set rate every millisecond until it reaches the maximum level set. When a note is turned off, the tone continues, but the envelope variable begins to decrease at it's set rate until it reaches '0'. The envelope variable will be used as the volume control for the dynamic characteristics of the note. The listing for the envelope control function is given below:

```
45
      void EnvelopeControl(void)
46
      {
47
         if (note on)
48
49
             if (envelope >= note level)
50
51
                 envelope = note level;
52
53
             else
54
55
                 if (priority == 1)
```

## IEC 60601-1-8 audible alert generator using the LPC2000

```
56
57
                     envelope += HP RISE; // high priority risetime control
58
59
                 else
60
                 {
61
                     envelope += MP RISE;
                                             // Medium priority risetime control
62
63
           }
64
        }
65
       else
66
67
           if (envelope >0)
68
69
             if (priority == 1)
70
71
                       envelope -= HP FALL; // high priority falltime control
72
73
                 else
74
                 {
7.5
                       envelope -= MP FALL;
                                             // Medium priority falltime control
76
                 }
77
           }
78
79
       if ((envelope <= 0) && (note on == 0) && (envelope on == 1) )
80
81
             envelope = 0;
82
             envelope off = 1;  // synchronize with zero cross
83
84
8.5
```

## 3.3 Note Sequencer Functions

The note sequencer provides the timing and note sequencing for the for the different alarm melodies specified in IEC60601-1-8. The high priority alarms consist of a 5 note sequence that is repeated. The medium priority version of the same alarm category uses the first three notes of the high priority alarm and is not repeated. The note spacing and duration is shorter for the high priority alarms as this gives a higher sense of urgency. The code to implement these is shown below for the high priority example. The 1 ms time base discussed in section 3.1.2, increments the sequence counter. As a result, the numbers associated with each case statement are in milliseconds to facilitate making adjustments in the timing. The medium and low priority versions use the same basic switch statement format and similar function calls, but, different timing states are used in the associated case statements since the tempo is different.

```
86  void HighPriSequence (unsigned char alarm_type)
87  {
88   switch (mscount)
89   {
90     case 1:
91         active_note = tune_sequence [alarm_type][0]; // 1rst note of sequence
92         note_level = 200;
```

AN10687\_1 © NXP B.V. 2008. All rights reserved.

## IEC 60601-1-8 audible alert generator using the LPC2000

```
93
               TurnOnNote();
              break:
                                          //145 ms (trise +tduration)
95
            case 145:
96
                                         // begin decay as note turns "off"
              note on = 0;
97
               break;
98
            case 224:
99
               active note = tune sequence [alarm type][1]; // 2nd note of sequence
100
               note level = 255;
               TurnOnNote();
101
102
               break;
103
            case 368:
104
                                   // begin decay as note turns "off"
               note on = 0;
105
              break;
106
            case 447:
107
              active note = tune sequence [alarm type][2]; // 3rd note of sequence
               note level = 255;
108
109
               TurnOnNote();
110
              break;
           case 591:
111
112
            note on = 0;
                                   // begin decay as note turns "off"
113
              break;
            case 835:
114
115
              active note = tune sequence [alarm type][3]; // 4th note of sequence
116
               note level = 255;
117
               TurnOnNote();
118
               break;
119
            case 929:
                                         // begin decay as note turns "off"
120
              note on = 0;
121
              break;
122
            case 1008:
123
              active note = tune sequence [alarm type][4]; // 5th note of sequence
124
               note level = 255;
125
              TurnOnNote();
126
              break;
127
            case 1152:
128
              note on = 0;
                                          // begin decay as note turns "off"
              break;
129
130
131
            case 1200:
                                          // allows for fall time of envelope
132
              if (sequence == 2)
133
134
                   sequence = 0;
135
                    mscount = 0;
136
137
               break;
138
            case 1671:
139
               if (sequence == 1) // If this is the first time through, repeat
140
141
                    sequence++;
142
143
               mscount = 0;
```

## IEC 60601-1-8 audible alert generator using the LPC2000

## 3.4 Note Generator Functions

For the note generator, there is a lot of data to be processed dealing with multiple frequencies and multiple sine wave generators. If we organize the data variables and constants that are associated with each frequency in arrays that have the same dimensions, we can then just use a simple recursive function to "walk" through the array data.

#### 3.4.1 Note Generator Definitions

In the definitions we define several fixed and floating point constants, as well as defining a structure tag and two arrays with one of these being an array of structures.

```
#define Amp 200
                                        // Output Amplitude
153
154
    #define PI 3.1415926
155
     #define Fsample 25000
                                        // Timer Reload Frequency
156
157 struct wave {
                                        // structure tag for Sine Generator
                                        // IIR filter coefficient
158
      short coef;
159
      long y1;
                                        // y[-1] value
160
       long y2;
                                        // y[-2] value
161
     };
162
163
     struct wave Waves[9][5]; // 'Waves' is an array of structures whose values are
                                 // calculated during initialization
164
165
     long output;
166
     long output old;
167
     enum {C4,D4,E4,F4,Fsharp4,G4,A4,B4,C5}; // Can address array rows with notes
168
169
170
     float const FreqArray[][5]= {{261.626,523.252,784.878,1046.50,1308.13}, // C4
171
                                  {293.67,587.34,881.01,1174.7,1468.3},
                                                                              // D4
172
                                  {329.63,659.26,988.89,1318.52,1648.15},
                                                                              // E4
                                                                              // F4
173
                                  (349.23,698.46,1047.69,1396.9,1746.15),
174
                                  {369.99,739.98,1109.97,1479.96,1849.95}, // FSharp4
175
                                  {392.00,784.00,1176.0,1568.0,1960.0},
                                                                              // G4
176
                                  {440.000,880.00,1320.0,1760.00,2200.00},
                                                                              // A4
177
                                  {493.88,987.76,1481.64,1975.5,2469.4},
                                                                             // B4
178
                                  {523.251,1046.50,1569.756,2093.00,2616.25}}; // C5
179
180
     unsigned char ToneWeights[] = \{255, 255, 255, 255, 255\}; // used for test and
181
                                                         // adjusting harmonic levels
```

## IEC 60601-1-8 audible alert generator using the LPC2000

The advantage of using a structure of the variables and coefficients used in the algorithm is that it allows us to have a similar array organization in the structure array and the frequency constant array. The one for one relationship between the constant frequency array and the algorithm structure array makes it easy to use similar indexes for both arrays when initializing each frequency.

#### 3.4.2 Note Generator initialization

As mentioned in section 2.1.4.3, for the Goertzel algorithm to oscillate, the y[-1] and y[-2] values must be initialized in addition to the coefficient. This must be done for the structure variables that correspond to each frequency. The code for the initializations is shown below. Each of the 5 structures in a row is initialized then each additional row is initialized until the entire array of structures is initialized. In this demo application, these calculations are done during reset initialization. However, if you were optimizing this, code could be save by making these calculations ahead of time and storing the results as constants in flash memory. This is because if the floating point and sine/cosine algorithms that are needed from the math library that would not be required with precomputed initialization value. These library routines use about half of the code space used by this application. The coefficient and initialization values are scaled by 32768 (signed short). Also, the coefficient calculation does not include the 2X factor shown in the equation (18). This is to keep the size of the coefficient to a signed short to minimize storage requirements. The 2X is included in the final Goertzel calculation where the output is scaled by >>14 instead of >>15, effectively multiplying by 2.

```
182 void InitToneCoefArray(void)
                                      // initialize the structure for each frequency
183 {
184
       unsigned char n;
185
       unsigned char j;
       for (j=0; j<9; j++)
                                      // Initialize all nine scale tones (C4-C5)
186
187
188
           for (n=0; n<5; n++)
                                      // fundamental and 4 harmonics for IEC60601-1-8
189
190
           Waves[j][n].coef = ((cos (2*PI*(float)(FreqArray[j][n]/Fsample)))* 32768);
191
                Waves[j][n].y1 = 0;
192
                Waves[j][n].y2 = ((sin (2*PI*(float)((FreqArray[j][n]/Fsample)))) *
                                      Amp * 32768));
193
194
195
```

## 3.4.3 Mulitple Sine Wave Generation, Summing, and DAC Output

Once the algorithm variables and coefficients have been initialized it is easy to then make the Goertzel calculations to generate the fundamental and 4 harmonics by simply incrementing through a row in the array of structures and summing the five values. As mentioned in the previous section, line 204 includes scaling by >>14 instead of >>15 to factor in the 2X that was left out of the coefficient initialization.

AN10687\_1 © NXP B.V. 2008. All rights reserved.

## IEC 60601-1-8 audible alert generator using the LPC2000

```
203
204
           y = ((t-)\cos * (long long)(t-)y1)>>14)) - t-)y2; // Goertzel Calculation
205
           t - > v2 = t - > v1;
                                                              // store for next time
206
           t \rightarrow y1 = y;
                                                               // store for next time
207
           env weights = envelope * ToneWeights[i]>>8;
208
           output += ((t->y1* env weights)>>8); // sum fundamental and harmonics
209
           t.++;
                                                  // increment structure pointer
210
211
       DACR = ((output >> 10) & 0xFFC0) + 0x8000; // make unsigned & output to DAC
       if ((output >= 0)&& (output old <= 0)) // zero crossing detect
212
213
214
          if (envelope off && (note on==0))
215
216
                 envelope on = 0;
                                         // synchronizes turn off with zero cross
217
                 envelope off = 0;
                                         // reset envelope flag
218
219
       }
220
       output old = output;
221
222
223
    void OutputTones(unsigned char note, unsigned char level)
224
225
       note level = level;
226
       GenerateMultiTone (&Waves[note][0]);
227 }
```

Once the function has done the calculations for all 5 structures in the array row, the summed value is scaled, formatted, and converted from a signed to unsigned value and before being sent to the DAC. Since these calculations are performed at each 25Khz timer interrupt (when a note is active), the DAC output rate is 25khz. This allows inexpensive output filters as this is approximately a 9X over-sampling relative to the highest sine wave frequency being generated.

#### 3.5 User / Command Interface

For the demonstration firmware that was written for this application, the Keil MCB2300 was targeted and UART1 is used to provide a menu driven terminal interface to activate the different alarms. To keep the application note brief, the UART code is not shown. A code example of one of the command functions is shown as an illustration of how the alarm sequences are initiated using this firmware.

15 of 27

```
228
     void cmd test(void)
229
      {
230
           if (proc cmd)
231
232
              switch (priority)
233
              {
234
                  case 1:
235
                       HPCommnds();
236
                       break;
237
                  case 2:
238
                       MPCommnds();
239
                       break;
```

AN10687\_1 © NXP B.V. 2008. All rights reserved

## IEC 60601-1-8 audible alert generator using the LPC2000

```
240
                 case 3:
                     LPCommnds();
241
242
                      break;
243
                 case 4:
244
                     TestCommnds();
245
                      break;
246
247
248
249 void HPCommnds (void)
250
251
           switch (rcv buf)
252
           {
              case '1':
253
254
                putstr ("High Priority General Alarm\n\n");
255
                 alarm = GENERAL;
256
                 sequence = 1;
257
                 break;
258
             case '2':
259
                putstr ("High Priority Cardiac Alarm\n\n");
260
                alarm = CARDIOVASCULAR;
261
                 sequence = 1;
262
                 break;
             case '3':
263
264
                 putstr ("High Priority Artificial Perfusion Alarm\n\n");
265
                 alarm = PERFUSION;
266
                sequence = 1;
267
                 break:
268
             case '4':
269
                 putstr ("High Priority Ventilation Alarm\n\n");
270
                 alarm = VENTILATION;
271
                sequence = 1;
272
                 break;
             case '5':
273
                 putstr ("High Priority Temperature Alarm\n\n");
274
275
                 alarm = TEMPERATURE;
                 sequence = 1;
276
277
                 break;
278
             case '6':
279
                 putstr ("High Priority Oxygen Alarm\n\n");
280
                 alarm = OXYGEN;
281
                 sequence = 1;
282
                 break;
283
              case '7':
284
                 putstr ("High Priority Drug Delivery Alarm\n\n");
285
                 alarm = DRUG DELIVERY;
286
                 sequence = 1;
287
                 break;
             case '8':
288
289
                 putstr ("High Priority Equipment/Supply Failure Alarm\n\n");
290
                 alarm = POWER FAIL;
```

## IEC 60601-1-8 audible alert generator using the LPC2000

```
291
                  sequence = 1;
292
                  break:
293
294
                  putstr ("Command not supported\n\n");
295
                  break;
296
297
                 proc cmd=0;
                                  // reset command status
298
                 mscount = 0;
299
```

As you can see, all that is needed to start the alarm sequence is to set the alarm type using the 'alarm' variable and enable the sequencer by setting the 'sequence' variable to a non-zero value. The menu structure will be shown later in the demo operation section.


The entire code package for this application is available from NXP.

# 4. IEC60601-1-8 Audible Alarm Demo Operation

#### 4.1 Reset Menu

When the MCB2300 is loaded with the IEC Audible Alarm firmware, The users is prompted with the following menu after reset when the COM1 interface on the MCB2300 is connected to a PC running HyperTerminal, TeraTerm, or similar terminal program. The settings are 9600, one start bit, one stop bit and no parity or flow control.


Fig 2. Reset Menu

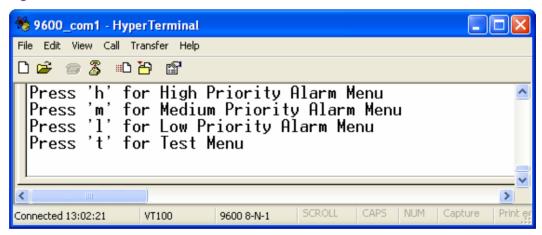

If we press 'h', we get the menu shown in Figure 3.


## IEC 60601-1-8 audible alert generator using the LPC2000

Fig 3. High Priority Alarm Menu

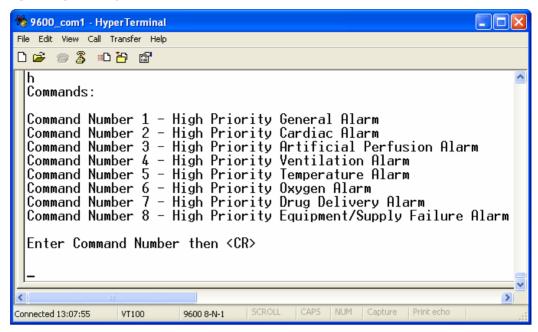

Pressing any number between 1 and 8, and, pressing enter, will start the high priority alarm sequence for that corresponding alarm type. Similar menu actions are taken for the Medium Priority, low Priority, and Test menus as shown in Figures 4, 5, and 6.

Fig 4. Medium Priority Menu

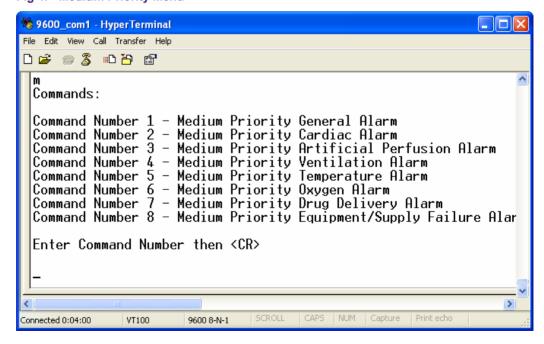

AN10687\_1 © NXP B.V. 2008. All rights reserved.

## IEC 60601-1-8 audible alert generator using the LPC2000

Fig 5. Low Priority Menu


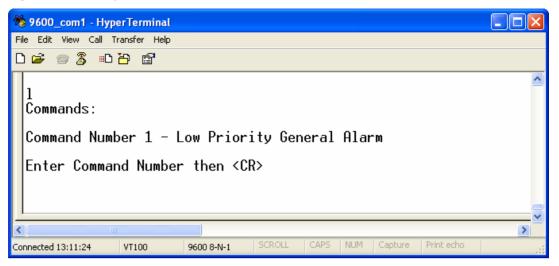


Fig 6. Test Menu

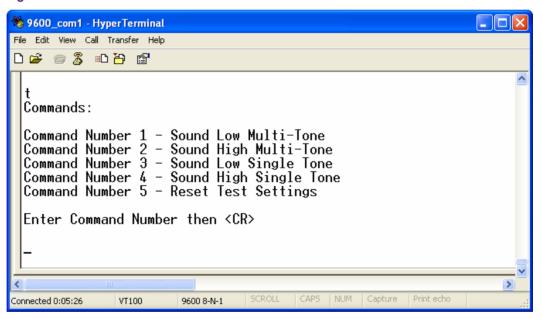

The commands in the test menu provide short 1 second bursts of the highest and lowest frequency tones with harmonics as well as the highest and lowest single frequency tones needed for this application. This is to facilitate making the performance tests. The single tones are generated by making all the values in the 'ToneWeights' array = 0, except the isolated tone being generated. Command 5 resets all the ToneWeights array values to their initial values.


IEC 60601-1-8 audible alert generator using the LPC2000

# 5. External hardware requirements

## 5.1 External DAC Filter

A simple 3 pole RC filter was added to filter the 25khz sample rate component from the signal for the tests done in this applications note. The filter used is shown in Figure 7 and provides a cutoff frequency in the range of 9-10 Khz. Since the sample rate is above the normal audio hearing range, cost sensitive applications may be able to get by without a filter. Also, a coupling capacitor is generally required after this network, as the DC level of the DAC is nominally 1.65V.

Fig 7. Three pole RC DAC Filter

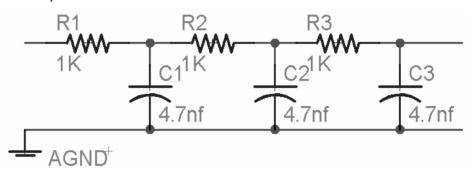

If this is not going to a high impedance input, or, if this signal is fed externally, a buffer is recommended.

# 6. Performance analysis

Using the output filter described in the previous section, spectrum analysis tests were performed to verify the spectral content of the signal and estimate signal to noise ratios. In addition Oscilloscope captures were made to show the rise fall and other temporal characteristics of the alert tones generated The output of the MCB2300 DAC was fed to a Mackie CR1604-VLZ Audio Mixer (EQ set for flat frequency response) to provide the correct levels to the internal Sigmatel Codec in a Dell laptop. The laptop was running True Audio's TrueRTA Spectrum Analyzer Software package. The Test Menu, detailed earlier, was used to provide the test tone bursts used in the analysis.

# 6.1 Spectral Analysis of multiple tone Generation with DAC filter

The following Spectrum Analyzer captures are made with the board output taken after a three pole, 10Khz RC filter detailed in section 5.1.

The spectrum of the lowest frequency tone in the application (C4) with harmonics is shown below in figure 8. As you can see, the harmonics are very close in amplitude to each other. This will easily meet the IEC 60601-1-8 specifications as they only require the harmonics to be within 15dB of each other. The signal to noise ratio looks to be in excess of 55dB providing very good noise performance also. The lack of other harmonics showing up in the spectral analysis also demonstrates the low distortion of the sine waves generated by the Goertzel algorithm.

AN10687\_1 © NXP B.V. 2008. All rights reserved

## IEC 60601-1-8 audible alert generator using the LPC2000

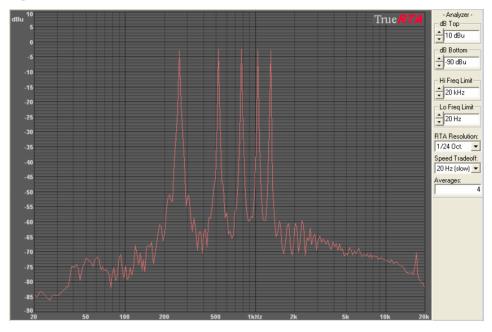


Fig 8. C4 with Harmonics

Figure 9 shows the spectral analysis of the highest frequency tone in the application (C5) with harmonics

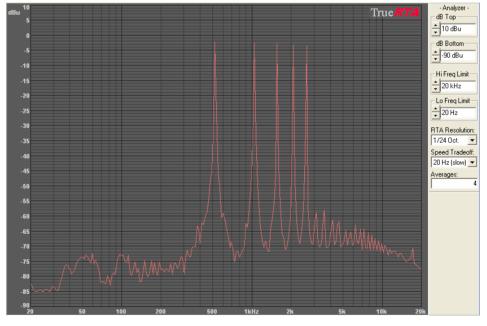


Fig 9. C5 with harmonics

As you can see, the spectrum of the C5 tone with harmonics also has good signal to noise ratios and low distortion while keeping the amplitude of the fundamental and harmonics within a couple of dB.


21 of 27

IEC 60601-1-8 audible alert generator using the LPC2000

## 6.2 Envelope Timing

The IEC specifications state the rise time and fall time requirements of the notes generated is a function of the duration of the note (rise time = 10% to 20% of Td). Since the duration of a medium priority note is longer than a high priority note, the rise time should be faster on the high priority notes that are generated. The spec allows more flexibility for fall times, so, the fall time for this demo application is chosen to be the same as the rise time. Figure 10 shows a oscilloscope capture of the rising edge of a high priority note. The falling edge is shown in figure 11. The rise and fall time for the high priority notes in this example is around 20 milliseconds. A capture of the medium priority rise time is shown in figure 12 and the fall time is shown in Figure 13. The rise and fall time of the medium priority notes is around 30 ms. These can be easily adjusted by changing a code constant if needed.

Fig 10.

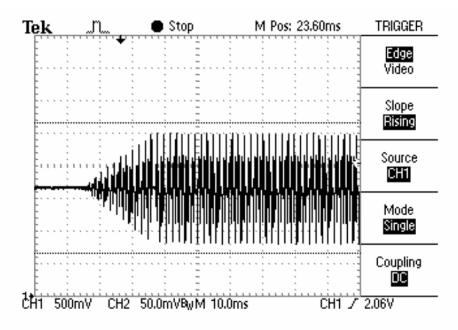

High Priority Rise Time



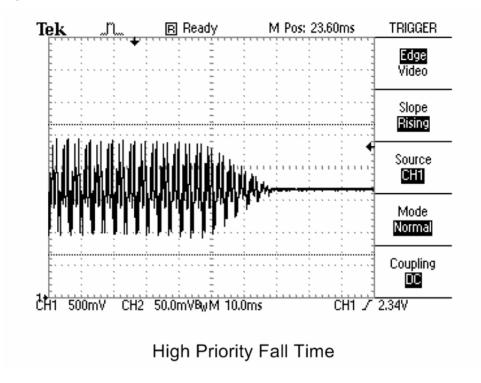


Fig 12.


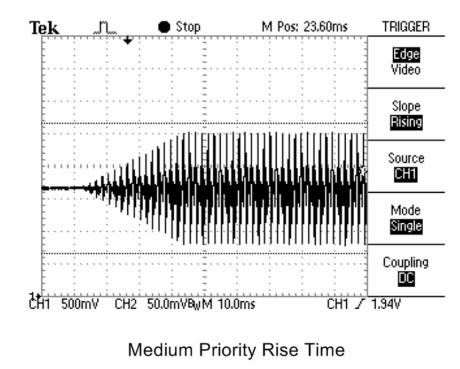



Fig 13.

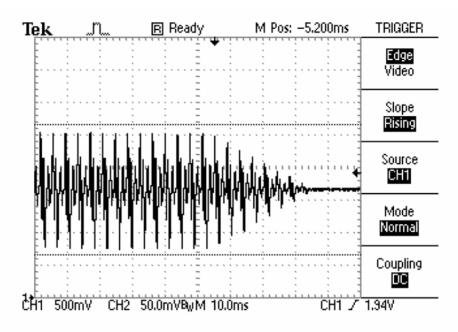

# Medium Priority Fall Time

# 6.3 Sequence Timing

Figure 14 shown the timing of a High Priority Sequence. Fig 14.

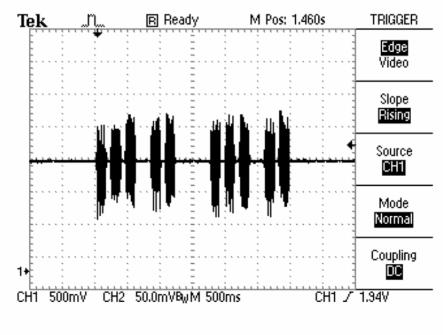


High Priority Sequence Timing

## IEC 60601-1-8 audible alert generator using the LPC2000

We can see that the high priority sequence has a little more delay between the 3<sup>rd</sup> and 4<sup>th</sup> notes of the sequence, and, an even longer delay between the repeating 5 note sequence. This is per the IEC60601-1-8 temporal specifications. Figure 15 shows the medium priority sequence timing.

Fig 15.

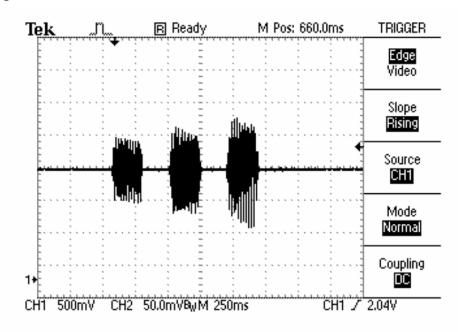

# Medium Priority Sequence Timing

We can see that the medium priority sequence only has three notes and the spacing between the notes is greater than the spacing of the first three notes in the high priority sequence. This is also in compliance with the IEC60601-1-8 specification.

## 7. Conclusions

The method of generating the medical alarms presented in this application note provides an efficient, low cost, high performance method of generating audible medical alerts that comply with the IEC60601-1-8 standard. The specification also states that subtle degrees of equipment differentiation in terms of alarm sounds can be advantageous to the operator. In addition to meeting the requirements of the standard, the firmware implementation provided here allows easy customization of the tones while still staying within the specification parameters. The NXP LPC2000 family of ARM7 microcontrollers provides very high speed performance and deterministic timing that is ideal for implementing algorithms like the one used in this example. As a result, it is now very easy to add support for the IEC60601-1-8 standard to any medical electronic application.

AN10687\_1 © NXP B.V. 2008. All rights reserved

## IEC 60601-1-8 audible alert generator using the LPC2000

# 8. Legal information

## 8.1 Definitions

**Draft** — The document is a draft version only. The content is still under internal review and subject to formal approval, which may result in modifications or additions. NXP Semiconductors does not give any representations or warranties as to the accuracy or completeness of information included herein and shall have no liability for the consequences of use of such information.

## 8.2 Disclaimers

**General** — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information.

Right to make changes — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in medical, military, aircraft, space or life support equipment, nor in applications where failure or malfunction of a NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental damage. NXP Semiconductors accepts no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is for the customer's own risk.

**Applications** — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

#### 8.3 Trademarks

Notice: All referenced brands, product names, service names and trademarks are property of their respective owners.

# IEC 60601-1-8 audible alert generator using the LPC2000

# 9. Contents

1.	Introduction	3
1.1	Background on Audible Medical Alarms	3
1.2	Alarms and human behavior	3
1.3	IEC60601-1-8 Audible and Visual Alarm	
	Standard	3
2.	Generating the IEC60601-1-8 Alarms	
	Algorithmically	4
2.1	Functional resources required on chip	
2.1.1	Timing Generator	
2.1.2	Envelope Generator	
2.1.3	Note sequencer	
2.1.4	Note generator	
2.1.4.1	The Goertzel Algorithm	
2.1.4.2	Analysis of the Goertzel Algorithm	7
2.1.4.3	Goertzel Initialization	
3.	Code Implementation - Audible Alarm	
	Synthesis	9
3.1	Timing Generator Code	
3.1.1	Timer 0 Initialization	
3.1.2	Timer 0 Interrupt Service Routine	
3.2	Envelope Control Function	
3.3	Note Sequencer Functions	
3.4	Note Generator Functions	
3.4.1	Note Generator Definitions	
3.4.2	Note Generator initialization	. 14
3.4.3	Mulitple Sine Wave Generation, Summing, and	d
	DAC Output	. 14
3.5	User / Command Interface	. 15
4.	IEC60601-1-8 Audible Alarm Demo Operation	17
4.1	Reset Menu	. 17
5.	External hardware requirements	
5.1	External DAC Filter	
6.	Performance analysis	
		. 20
6.1	Spectral Analysis of multiple tone Generation with DAC filter	20
6.2	Envelope Timing	
6.3	Sequence Timing	
-		
7.	Conclusions	
8.	Legal information	
8.1	Definitions	
8.2	Disclaimers	
8.3	Trademarks	.26
9	Contents	27

Please be aware that important notices concerning this document and the product(s) described herein, have been included in the section 'Legal information'.



For more information, please visit: http://www.nxp.com For sales office addresses, email to: salesaddresses@nxp.com

