

ASUS > Support > FAQ

FAQ

[Windows 11/10] How to Enter the BIOS Configuration Screen

Last Update: 2024/05/30 14:03



Related Topics

How to Restore BIOS Settings

How to Update BIOS with ASUS Firmware Update/EZ Flash

How to Boot from a USB Flash Drive/CD-ROM (Changing Boot Options)

[Motherboard/Desktop] ASUS EZ Flash 3 - Introduction

[Motherboard/Desktop] How to restore BIOS setting?

[Notebook/AIO] Troubleshooting - Computer occurs black screen when the BIOS update process is interrupted

How to update BIOS in Windows

[Windows 11/10] How to Enter the BIOS Configuration Screen

Applicable Products: Notebook, Desktop, All-in-One PC, Gaming Handheld, MiniPC

This article elucidates two distinct approaches for accessing the BIOS configuration interface, allowing you to opt for the most appropriate procedure tailored to your requirements:

▼ Method 1: Entering BIOS Configuration within the Windows Desktop Environment


Note: Should your device be incapable of initiating the Windows operating system, please consult Method 2: Accessing BIOS Configuration Before Booting the Operating System.

Note: For those utilizing a 2-in-1 laptop (convertible, such as the Transformer Book), ensure the keyboard is connected prior to executing the following steps.


Please go to the corresponding instruction based on the current Windows operating system on your device:

▼ Windows 11 operating system


How to Enter BIOS Configuration in Windows 11? ASUS SUPPORT
To provide you more detailed instruction, you can also click ASUS YouTube video link below to know more about How to enter the BIOS configuration:
Https://www.youtube.com/watch?v=11wlU-p0jmk
 Type and search [Change advanced startup options] in the Windows search bar 1, then click [Open] 2.

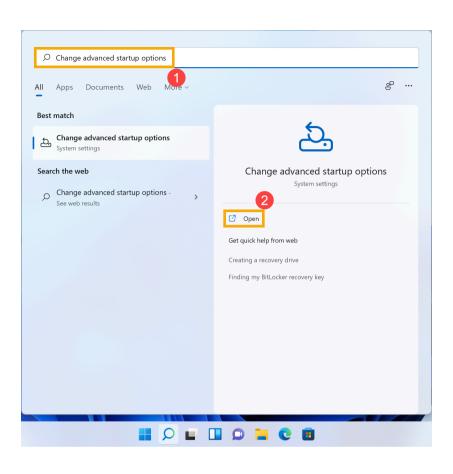


2. In the Advanced startup filed, click [Restart now]3.

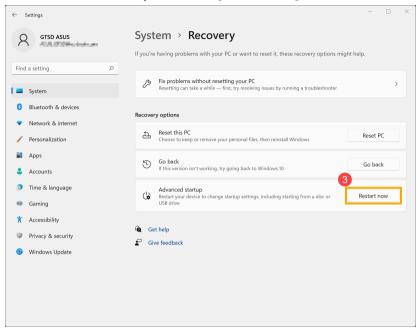


3. Windows will restart your device, please be sure to save your work, and then select [Restart now]4.

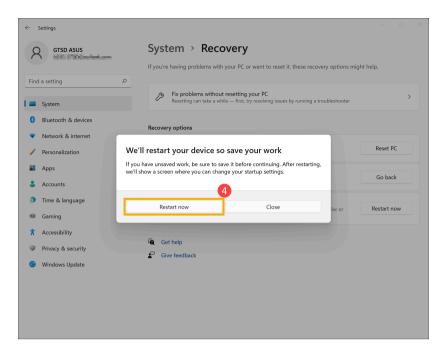


4. Upon reboot, when the following screen appears, select [Troubleshoot] ⑤.

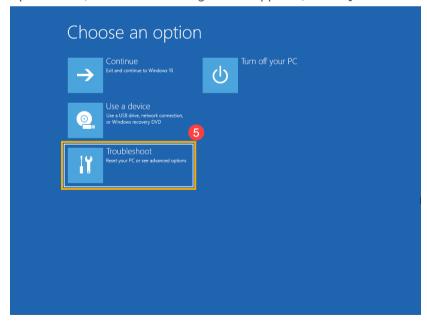


5. Select [Advanced options] 6.

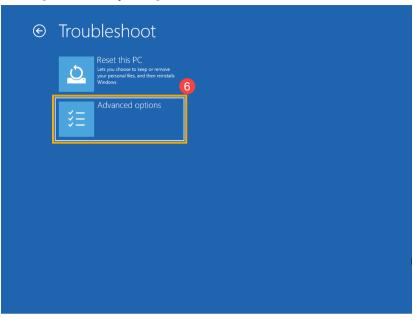

6. Select [UEFI Firmware Settings] 7.

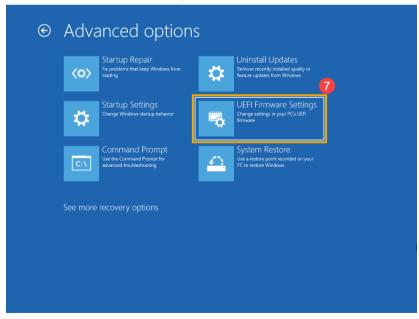


7. Click [Restart] 8, your device will enter the BIOS configuration after the restart.

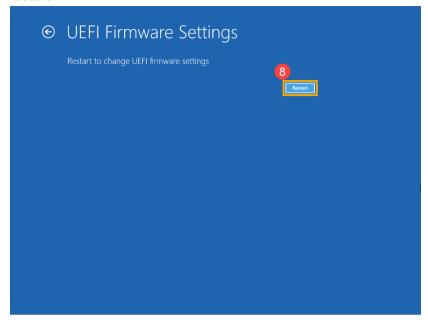

Upon entering the BIOS configuration screen, you will encounter three types
of interfaces: UEFI interface, Legacy interface, and MyASUS in UEFI.
 Note: The BIOS configuration interface may vary slightly depending on the
model.


▼ UEFI interface

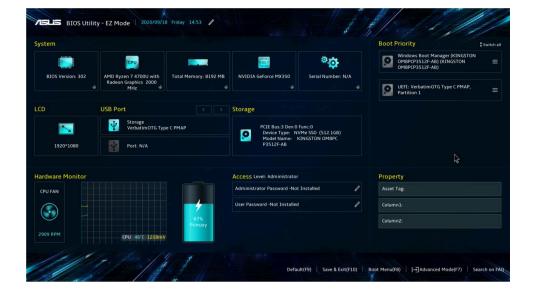


▼ Legacy interface




▼ MyASUS in UEFI

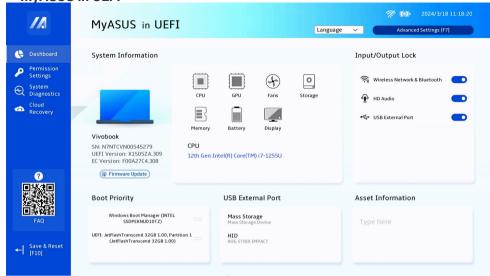


▼ Windows 10 operating system

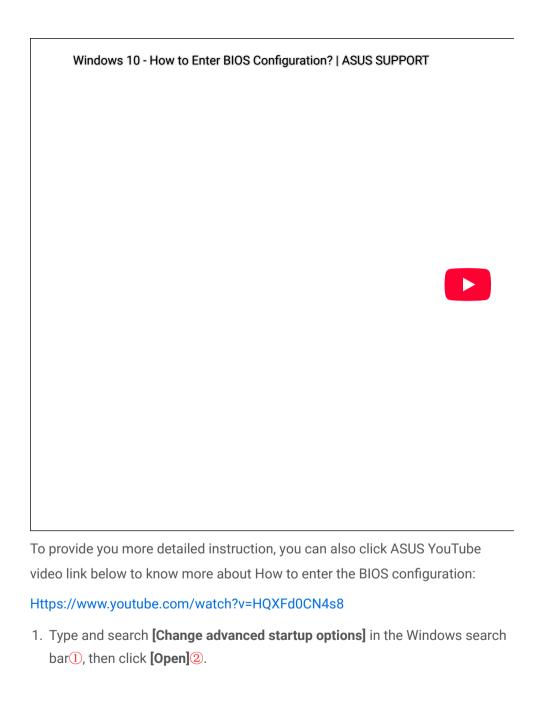


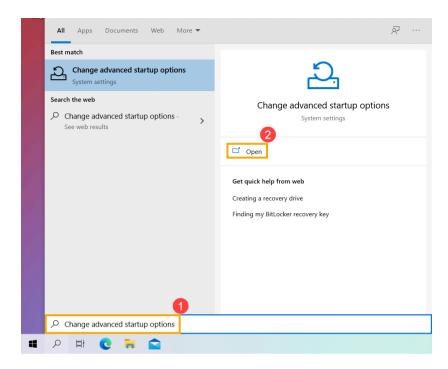


In the Advanced startup filed, click [Restart now]3. Windows will restart
your device, if you have unsaved work, please be sure to save it before
continuing.

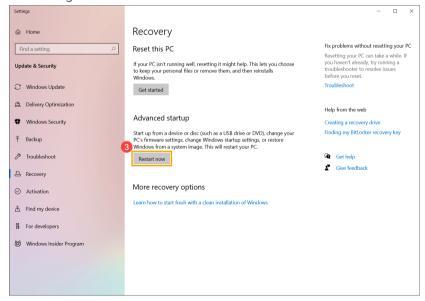


3. Upon reboot, when the following screen appears, select [Troubleshoot]4.

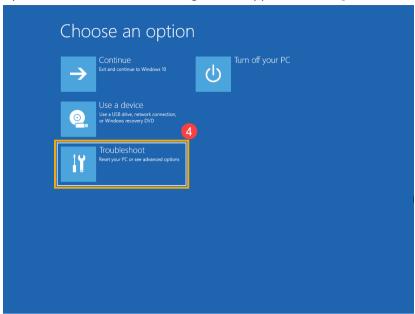


4. Select [Advanced options] 5.

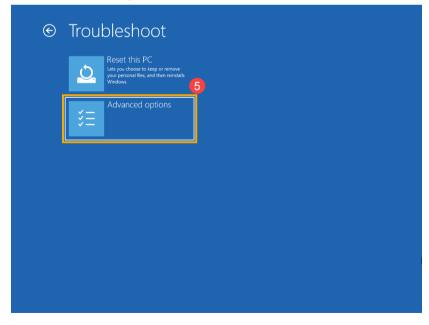

5. Select [UEFI Firmware Settings] 6.

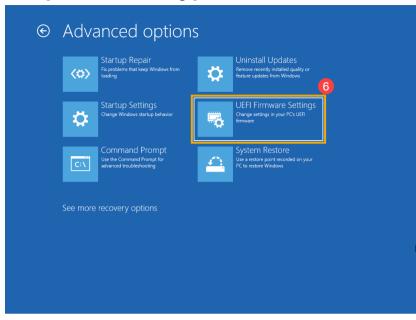


6. Click [Restart] 7, your device will enter the BIOS configuration after the restart.

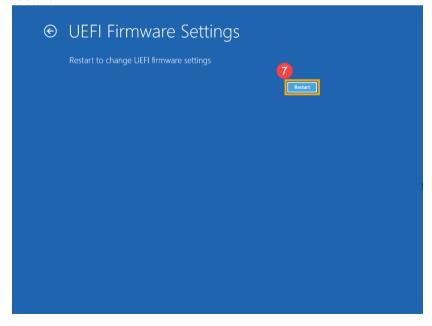


Upon entering the BIOS configuration screen, you will encounter three types
of interfaces: UEFI interface, Legacy interface, and MyASUS in UEFI.
 Note: The BIOS configuration interface may vary slightly depending on the
model.

▼ UEFI interface

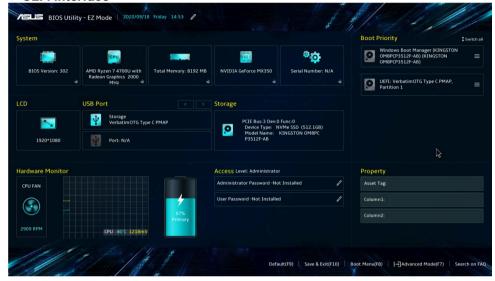

▼ Legacy interface

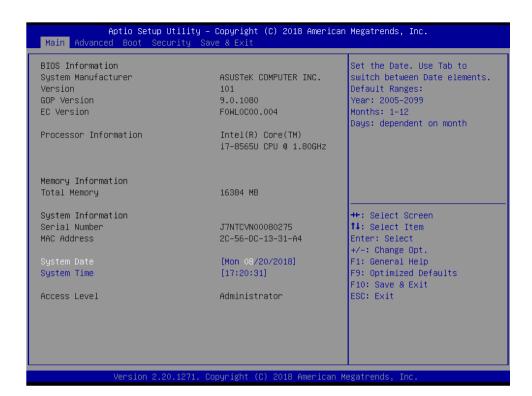

▼ MyASUS in UEFI



▼ Method 2: Accessing BIOS Configuration Before Booting the Operating **System** Windows 7 - How to enter BIOS configuration? To provide you more detailed instruction, you can also click ASUS YouTube

video link below to know more about How to enter the BIOS configuration:

Https://www.youtube.com/watch?v=NbnPWhI4xis

1. When the device is completely shut down, persistently hold the [F2] key on the keyboard and simultaneously press the [Power button] 🖰


up. Once the BIOS configuration screen appears, you may release the [F2] key. You may consult this video for a visual guide on How to enter the BIOS configuration.

Note: For some older desktop models, you may need to press and hold the [Del] key during startup to access the BIOS configuration screen.


Note: For gaming handhelds, press and hold the **[Volume Down] button** and then press the power button.

Upon entering the BIOS configuration screen, you will encounter three types
of interfaces: UEFI interface, Legacy interface, and MyASUS in UEFI.
 Note: The BIOS configuration interface may vary slightly depending on the
model.

▼ UEFI interface

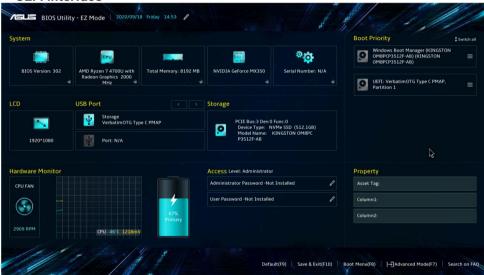

▼ Legacy interface

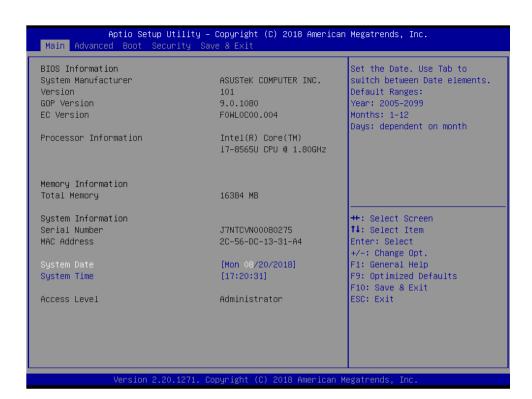

▼ MyASUS in UEFI





Contact Support

Please contact with us if the above information cannot resolve your problem



- Above information might be partly or entirely quoted from exterior websites or sources. please refer to the information based on the source that we noted. Please directly contact or inquire the sources if there is any further question and note that ASUS is neither relevant nor responsible for its content/service
- This information may not suitable for all the products from the same category/series. Some of the screen shots and operations could be different from the software versions.
- ASUS provides the above information for reference only. If you have any questions about the content, please contact the above product vendor directly. Please note that ASUS is not responsible for the content or service provided by the above product vendor.
- · Brand and product names mentioned are trademarks of their respective companies.











©ASUSTeK Computer Inc. All rights reserved. Terms of Use Notice | Privacy Policy | Global / English

Export Control and Sanctions Compliance Cookie Settings