INTRODUCTION TO HIGHSPEED PCB DESIGN Signal Integrity and Electromagnetic Interference Considerations


The information in this work has been obtained from sources believed to be reliable. The author does not guarantee the accuracy or completeness of any information presented herein, and shall not be responsible for any errors, omissions or damages as a result of the use of this information.

PART 1 – Introduction to Multi-Layers Printed Circuit Board Structures


Characteristics of Printed Circuit Board (PCB) Assembly

An Example of PCB Assembly

A snapshot of a modern PCB assembly (Digital circuit).

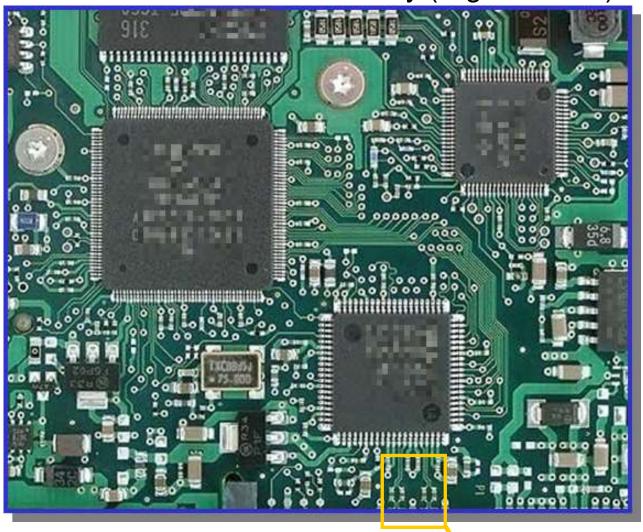


Close-up View of Another PCB Assembly

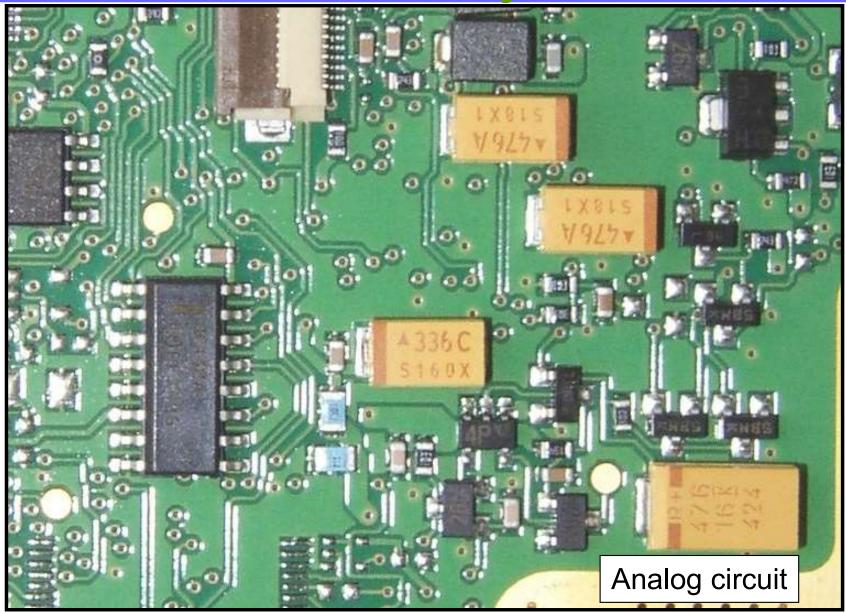




Structures on PCB Assembly (1)

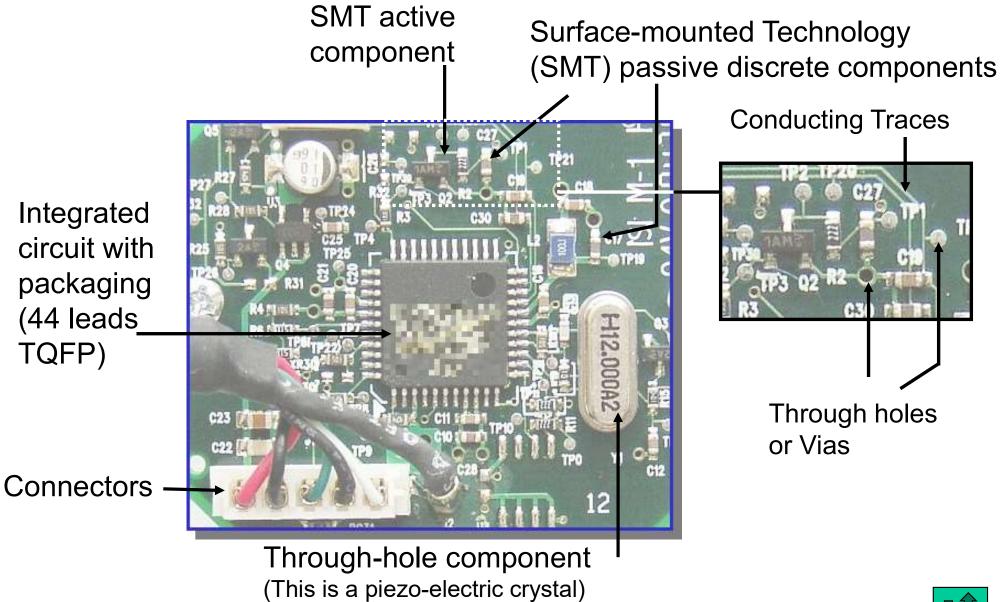

Structures on PCB Assembly (2)

• If we were to examine the conducting traces closely:

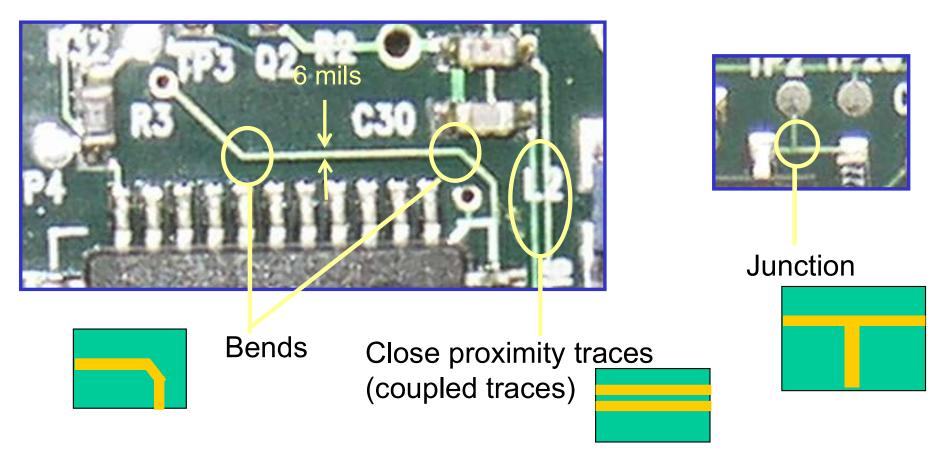


The conducting traces are typically very fine, with trace width of 3 - 8 mils (≅ 0.08 - 0.21mm).

Structures on PCB Assembly (3)

• If we were to examine the components closely:

1. Close proximity of package pins, < 10 mils for some cases, for example in TSSOP and BGA packages.


2. Transition between trace and pins.

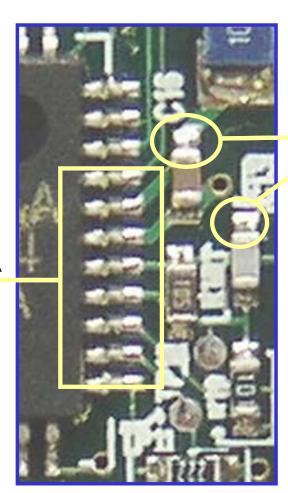

Component pads

Structures on PCB Assembly (4)

There are many more structures to be found:

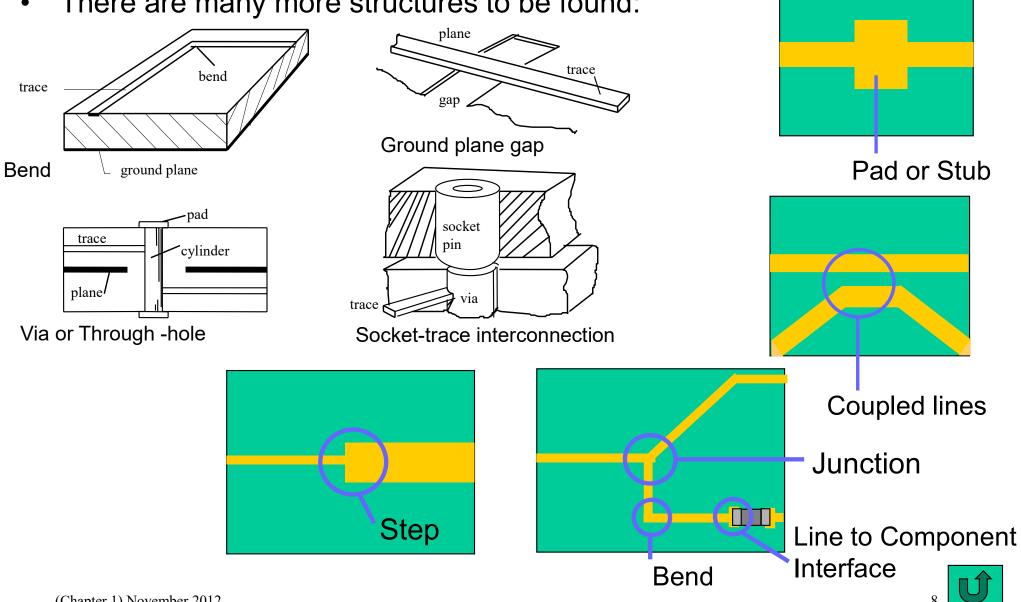

(Chapter 1) November 2012

Structures on PCB Assembly (5)

Common component packages:

256 1/0 Ball Grid Array (BGA)

BGA – Ball Grid Array

CSP - Chip Scale

Packaging

Example of cross-section View of CSP package (also known as flip-chip)

The Intel® Stacked-CSP capsulation (Mold) Proven BT Laminate Substrate Technology

> QFN – Quad Flat No Pins

TQFP – Thin Quad Flat Pack




TSSOP – Tiny-Scale Small Outline Package

Visit JEDEC Solid State Technology Association (formerly known as Joint Electron Device Engineering Council) homepage for more Information: www.jedec.org

Structures on PCB Assembly (6)


Common component packages:

Inductors Thick/thin film Resistors

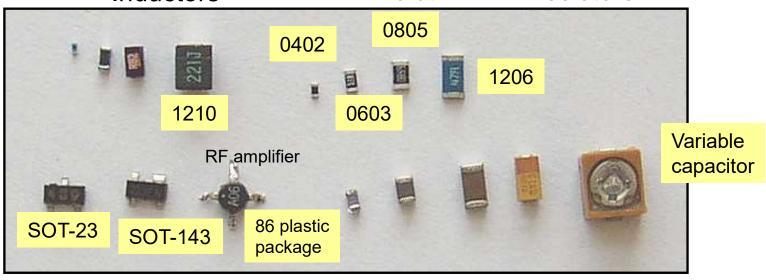

Transistors and MMIC (monolithic microwave integrated circuit)

Various types of capacitors

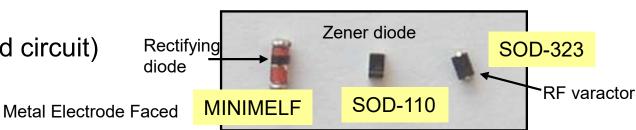


Various types of diodes




Structures on PCB Assembly (7)

Moreover if we examine the layers within the PCB:




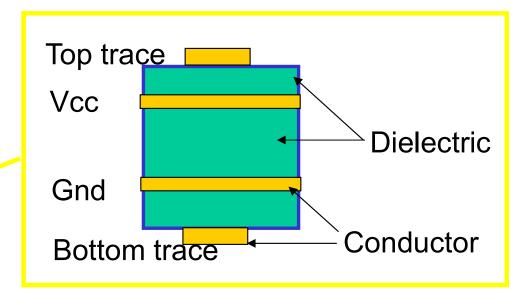

• 6 - 12 layers board being the norm nowadays for compact devices (here layers refer to the number of conducting layers).

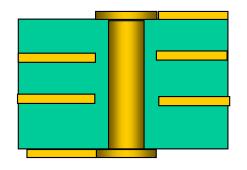

Cross section of a normal Via

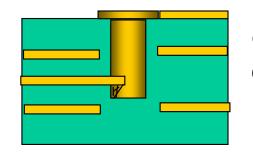


Cross section of a buried Via



Structures on PCB Assembly (8)

Photomicrograph of a 4 layer PCB cross section at 60X magnification.

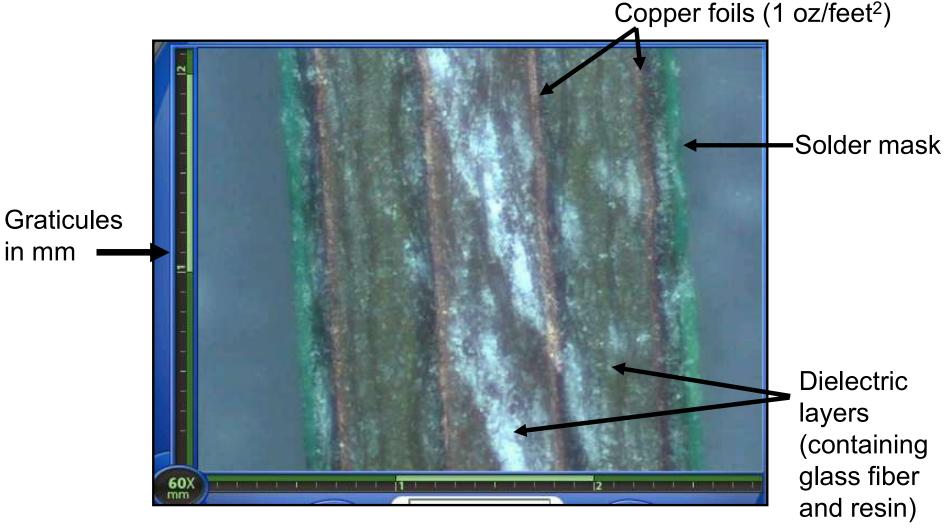

Structures on PCB Assembly (9)

Examples of PCB material:

Material Tradename	Composition	Dielectric constant (ε _r) @ 1.0GHz	Dielectric constant (ε _r) @ 10.0GHz	Loss tangent @ 1.0GHz	Loss tangent @ 10.0GHz	Glass Transition temperature T _g (°C)
FR4	Epoxy resin/glass fiber	4.2-4.6	4.2-4.6	0.02	0.04	140 (180 for high T _g variant)
GETEK	Epoxy resin/glass	3.6-4.1		0.0130		180
N7000-2 (Park/Nelco)	Polyimide	3.8	3.5	0.015	0.015	260
RO4000 (Rogers)	Hydrocarbon/C eramic/glass	3.38-3.48	3.38-3.48	0.002-0.003	0.0027- 0.0037	>280
Diclad 870 (Arlon)	Glass/PTFE	2.33	2.33	0.0009	0.0013	NA

Note: the above values are only rough approximation and dependent on processes.

Example of Modern PCB Manufacturing Rules

An example of a typical PCB manufacturer 'Standard' capability:

Feature	Max	Min	Unit
Board thickness	200	8	mils about 0.2 to 5m
Panel dimension	21x24	0.2x0.4	inches
Internal trace width (0.5oz copper)		4	mils
External trace width (0.5oz copper)		4 0.1mm	mils
Copper thickness	4	0.25	oz/feet ²
Through drill hole diameter		8	Mils
Micro-via drilling diameter		4	mils
Internal annular ring (circular copper pad to drill difference)		10	mils
External annular ring		1	mils
Trace to trace spacing (internal & external)		4	mils
Surface finishing:		4	micron
Hot-air leveling solder thickness	5	1	
Immersion gold thickness	0.1	0.05	
Immersion silver thickness	0.2	0.2	



(Chapter 1) November 2012

Summary of the Characteristics of Modern Digital PCB (1)

Mechanical:

Usually multi-layer by design.

Required for compact system

- Good quality dielectric is used (tight electrical and mechanical specs).
- Very narrow conducting trace width.
- High density, components and traces are packed closely.
- High quality component packaging is used (small foot-print and form factor, robust construction, good isolation from external environment, good electrical connection from die to package pin).

Electrical:

- Typically low voltage (1.8V or less), uses digital logic family with low logic swing voltage and large sink/source current ability.
- Rapid transition rate for logic signal, e.g. small rise/fall time of digital pulse waveforms (<1.0nsec).
- Differential signaling for improve

These factors enable high frequency or high data rate in pulses.



Summary of the Characteristics of Modern Digital PCB (2)

Other Attributes:

- Because of the density of conducting structures and components on a modern PCB assembly, electrical interference between components and circuits occurs easily if the system is not properly designed – Low isolation.
- Interference here is defined as the unintentional transfer of electrical energy between circuits due to interaction of electromagnetic (EM) fields in the system.
- Interference is aggravated by the presence of high-frequency (HF) and high-speed (HS) signals on the system.
- There is a subtle difference between high-frequency and high-speed signal, we will clarify this later.
- We will loosely use the term HS-PCB for high-speed/high frequency PCB. More precise definition will be given later at the end of this part.