

## COMPUTER ARCHITEKTUR

Sommersemester 2025

# Projektzielsetzung

Version 1.0

Falian Bech

## Teammitglieder:

Fabian Becker

Jendrik Jürgens

Nicolas Koch

Franz Krempl

Daniel Sowada

Michael Specht

**Professor:** 

Dr. Daniel Münch

Abgabedatum:

30.04.2025 11:30 Uhr

# Inhaltsverzeichnis

A	bbild	lungsverzeichnis	3
Ta	abelle	enverzeichnis	4
1	Pro	jektzielsetzung	5
<b>2</b>	Pm	odCLP	8
	2.1	Ansatz Custom IP	9
	2.2	Registermapping	9
		2.2.1 I/Os	9
		2.2.2 Registerbereich	10
3	Pm		15
	3.1	Ansatz Custom IP	15
	3.2	Registermapping	16
		3.2.1 I/Os	16
		3.2.2 Registerbereich	16

# Abbildungsverzeichnis

1.1	Systemblockbild	 6
2.1	Startup Sequence	 ę

# Tabellenverzeichnis

2.1	PmodCLP Uberblick I/O	10
2.2	PmodCLP Controller Register Space Overview	10
2.3	General/Global Control and Status Register (GCSR)	11
2.4	Global Interrupt Enable Register (GIER)	11
2.5	IP Interrupt Enable Register (IPIER)	11
2.6	IP Interrupt Status Register (IPISR)	12
2.7		12
2.8	Version Register (VERR)	12
2.9	Special Control and Status Register (SCSR0)	12
2.10	Character Control Register (CCR)	13
2.11	Character Data Register (CDR)	13
2.12	Display Control Register (DCR)	14
3.1	PmodMAXSONAR I/O	16
3.2		17
3.3		- · 17
3.4		18
3.5		18
3.6	- , , ,	18
3.7		18
3.8		18
3.9		19
3.10		19
		20
		20

# 1. Projektzielsetzung

#### Projekttitel:

Integriertes Demosystem für Sensor- und Displayansteuerung auf FPGA-Basis

#### Teammitglieder:

Fabian Becker, Jendrik Jürgens, Nicolas Koch, Franz Krempl, Daniel Sowada, Michael Specht **Projektbeschreibung:** 

Ziel des Projekts ist die Entwicklung und Integration eines funktionsfähigen Demosystems, das zwei getrennte Komponenten – den Sonarsensor (PMOD MAXSONAR) und das LCD-Display (PMOD CLP) – auf einer gemeinsamen FPGA-Plattform (Digilent Arty A7-100) vereint. Die Messwerte des Sensors sollen in Echtzeit auf dem Display ausgegeben werden. Dazu werden eigene IP-Cores für beide Komponenten entworfen, implementiert, getestet und in die Hardwareplattform integriert.

#### Geplante Arbeitspakete und Zuständigkeiten:

- 1. Systemintegration bestehender Demosysteme
  - Integration der Software- und Hardware-Demoprojekte zu einem Gesamtsystem (HW & SW)

Zuständig: Alle Teammitglieder

- 2. Entwicklung Custom IP für Sensor (UART / MAXSONAR)
  - Konzept (Blockdiagramm, Registermapping) auf Basis der tut\_int Vorlage
  - Reduzierte Funktionalität orientiert an Xilinx UART Lite IP

Zuständig: Fabian Becker, Nicolas Koch

- 3. Entwicklung Custom IP für Display (PMOD CLP, Nibble-Mode)
  - Umsetzung von Timinganforderungen in Hardware
  - $\bullet\,$  Anzeige von Daten auf LCD über FSM und spezifizierte Steuerregister

Zuständig: Jendrik Jürgens, Michael Specht

- 4. Erstellung und Test der IP-Testbenches (Core und AXI)
  - Entwicklung mit Fokus auf Polling (Interrupt optional bei Zeitreserve)
  - Simulation und Validierung des Verhaltens

Zuständig: Alle Teammitglieder

- 5. Treibersoftware
  - Schreiben von Treibern für die beiden IPs unter Verwendung der SW-Templates von tut\_int
  - SW-basierte Initialisierung und Datentransfer

Zuständig: Franz Krempl, Daniel Sowada

- 6. Integration in vollständiges Demosystem
  - Zusammenführung aller Komponenten zu einem lauffähigen System
  - Validierung auf der realen Hardwareplattform

Zuständig: Alle Teammitglieder

#### Systemblockbild:

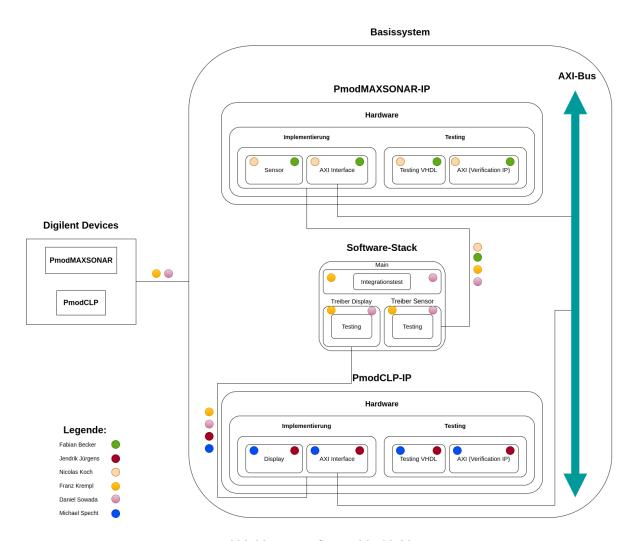


Abbildung 1.1: Systemblockbild

## • Exakte Timings für das Display (PmodCLP) in VHDL:

Die Ansteuerung im Nibble-Mode erfordert die präzise Umsetzung aller Timingbedingungen in einer FSM, da keine automatische Verzögerung durch die CPU gegeben ist.

### • Entwicklung AXI4-Lite-kompatibler IP-Cores:

Für Sensor und Display werden eigenständige IPs mit klar strukturiertem Registermapping und AXI-Anbindung erstellt, basierend auf einer gemeinsamen IP-Vorlage.

#### • Zuverlässiger Datenfluss zwischen Sensor, CPU und Display:

Die Software muss synchronisiert mit den IPs arbeiten, um Sensordaten korrekt auszulesen und anzuzeigen – inklusive Fehlerbehandlung und Statusabfrage.

#### • Simulation und Verifikation:

Funktion und Schnittstellen werden über VHDL-Testbenches (Core + AXI) geprüft, um Designfehler frühzeitig zu erkennen.

### Ziel:

Ein lauffähiges Demosystem mit eigenentwickelten, erweiterbaren IP-Cores, das Messwerte des Sonar Sensors auf einem LCD-Display ausgibt – mit Tests und einer funktionalen Ergebnisvorführung.

# 2. PmodCLP

Der PmodCLP besteht aus einem Samsung KS0066 LCD Controller und einem Sunlike LCD Panel, worüber Informationen dargestellt werden können. Es ist möglich 32 Positionen auf dem 16x2 LCD Panel zu nutzen. Pro Position werden die Zeichen dabei mit einer Auflösung von 5x8 angezeigt.

Das System besteht im Wesentlichen aus drei Komponenten. Der character-generator ROM (CGROM) hält 192 vordefinierte Zeichen, darunter 93 ASCII Charaktere. Anschaulich gesehen können die Zeichen über eine matrixartige Struktur indiziert werden, welche im Datenblatt festgelegt ist. Neben den nicht-volatilen Daten im CGROM ist es möglich bis zu 8 eigene Zeichen volatil im character-generator RAM (CGRAM) zu halten. Um nun Zeichen aus diesen beiden Repositories auf dem Panel anzeigen zu können, gibt es den data RAM (DDRAM). Hier können bis zu 80 Zeichencodes gespeichert werden. Er fungiert als Indexspeicher für Daten innerhalb des CGROM oder CGRAM. Wird ein Index aus der matrixartigen Struktur in den DDRAM geladen, erscheint das entsprechende Zeichen auf dem Display.

Das Display selbst verfügt über 2 Zeilen á 16 Positionen. Insgesamt stehen jedoch nicht 32 Speicherplätze zur Verfügung, sondern 39, um beispielsweise Scrolling zu verwenden.

Wichtige Schnittstellen des Samsung KS0066 LCD Controller sind

- DB4-DB7: Datenbits im Nibble-Mode zur Codierung von Befehlen/Zeichen
- RS (Register Select): High für Daten, Low für Instruktionen
- RW (Read/Write): High = Read, Low = Write
- E (Enable): High für Read, Falling Edge für Write

Um diese nutzen zu können wird folgendes Mapping auf dem FPGA hinterlegt:

```
set_property -dict {PACKAGE_PIN D13 IOSTANDARD LVCMOS33}[get_ports{clp_db_tri_io[4]}];
    #db04
set_property -dict {PACKAGE_PIN B18 IOSTANDARD LVCMOS33}[get_ports{clp_db_tri_io[5]}];
    #db05
set_property -dict {PACKAGE_PIN A18 IOSTANDARD LVCMOS33}[get_ports{clp_db_tri_io[6]}];
    #db06
set_property -dict {PACKAGE_PIN K16 IOSTANDARD LVCMOS33}[get_ports{clp_db_tri_io[7]}];
    #db07
set_property -dict {PACKAGE_PIN E2 IOSTANDARD LVCMOS33}[get_ports{clp_cb_tri_o[0]}];
    #lcd_rs
set_property -dict {PACKAGE_PIN D2 IOSTANDARD LVCMOS33}[get_ports{clp_cb_tri_o[1]}];
    #lcd_rw
set_property -dict {PACKAGE_PIN B2 IOSTANDARD LVCMOS33}[get_ports{clp_cb_tri_o[1]}];
    #lcd_rw
```

Listing 2.1: Pin-Zuordnung im Constraints-File

Die Zuordung in Aufzählung 2.1 greift auf zwei Header des PmodCLP-Boards zurück. Die Daten-Bits db04-db07 sind an die untere Hälfte des Headers J1 gebunden. Die Steuersignale Register Select, Read/Write und Enable hingegen an Header J2.

### 2.1. Ansatz Custom IP

Im ersten Schritt soll die IP funktional fertiggestellt werden. Sie soll dabei mittels Polling eingesetzt werden. Sobald die Funktionalität des Gesamtsystems vollumfänglich gegeben ist, wird anstatt Polling über Interrupts kommuniziert.

Das Projektteam hat sich auf folgenden Entwurf geeinigt:

Submodul 1: Timing Controller
 Um das Display ordnungsgemäß betreiben zu können, müssen diverse Timing-Constraints beachtet werden. Dies kann bspw. mit einem Zähler, der als Timer in Abhängigkeit vom Systemtakt fungiert, umgesetzt werden.



Abbildung 2.1: Startup Sequence

Graphik 2.1 zeigt beispielhaft die Initialisierung des Displays und die damit verbundenen Timing-Anforderungen.

- Submodul 2: LCD Controller

  Hier werden Befehle interpretiert und die Daten in die entsprechenden Register geschrieben, um die Werte anschließend auf dem Display darzustellen.
- Submodul 3: AXI Slave Interface
   Nachdem die Zuverlässigkeit der IP mittels Tests sichergestellt wurde, soll die IP an den internen Systembus (AXI) angebunden werden.

Das Registermapping ist an at\_doc.pdf aus 02b\_tut\_vhdl\_v03 angelehnt.

# 2.2. Registermapping

### 2.2.1. I/Os

Signal Name	I/O	Initial	Description
		State	
ap_clk(s00_axi_aclk)	I	NA	AXI Clock
ap_rst_n	I	NA	AXI Reset, active-Low
(s00_axi_aresetn)			
s_axi_control*	NA	NA	AXI4-Lite Slave Interface signals
(s00_axi*)			
interrupt	I	0x0	Indicates that the condition for an interrupt
			has occurred. (new sensor value available)
			0 = No interrupt has occurred
			1 = Interrupt has occurred
db4_7	О	0xFF	4 data bits, necessary in nibble mode.
register_select	О	0x1	Register Select: High for Data Transfer,
			Low for Instruction Transfer
read_write	О	0x1	Read/Write signal: High for Read mode,
			Low for Write mode
read_write_enable	О	0x1	Read/Write Enable: High for Read, falling
			edge writes data

Tabelle 2.1: PmodCLP Überblick I/O

# 2.2.2. Registerbereich

Address Offset	Register Name	Description
0x00	GCSR	General/Global Control and Status Register
0x04	GIER	Global Interrupt Enable Register
0x08	IPIER	IP Interrupt Enable Register
0x0C	IPISR	IP Interrupt Status Register
0x10	IDR	ID Register
0x14	VERR	Version Register
0x18	SCSR0	Special Control and Status Register
0x1C	CCR	Character Control Register
0x20	CDR	Character Data Register
0x24	DCR	Display Control Register

Tabelle 2.2: PmodCLP Controller Register Space Overview

Bit	Name	Access Ty-	Reset	Description			
		pe	Value				
	0x00 GCSR - General/Global Control and Status Register						
0	ap_start	R/W	0	Asserted when the kernel can start pro-			
				cessing data or format display. Cleared on			
				handshake with ap_done being asserted.			
	Continued on next page						

Bit	Name	Access Ty-	Reset	Description
		pe	Value	
1	ap_done	R	0	Asserted when the kernel has completed
				processing data (with or without error).
				Cleared on read.
2	ap_idle	R	0	Asserted when the kernel is idle.
3	reserved	R	0	Asserted by the kernel when it is rea-
	$(ap\_ready)$			dy to accept new data (used only by
				AP_CTRL_CHAIN)
4	reserved	R/W	0	Asserted by the XRT to allow ker-
	$(ap\_continue)$			nel keep running (used only by
				AP_CTRL_CHAIN)
5:6	reserved			
7	auto_restart (op-	R/W	0	Used to enable automatic kernel restart.
	tional)			This bit determines whether the display
				reloads the last sensor value and conti-
				nues running or clears the display.
31:8	reserved			

Tabelle 2.3: General/Global Control and Status Register (GCSR)

Bit	Name	Access Ty-	Reset	Description
		pe	Value	
0x04 GIER - Global I			Interrup	t Enable Register
0	gie	R/W	0	When asserted, along with the IP Inter-
				rupt Enable bit, the interrupt is enabled.
31:1	reserved			

Tabelle 2.4: Global Interrupt Enable Register (GIER)

Bit	Name	Access Ty-	Reset	Description		
		pe	Value			
	0x08 IPIER - IP Interrupt Enable Register					
0	ipie	R/W	0	When asserted, along with Global Inter-		
				rupt Enable bit, the interrupt is enabled.		
				(default: uses the internal ap_done signal		
				to trigger an interrupt)		
31:1	reserved					

Tabelle 2.5: IP Interrupt Enable Register (IPIER)

Bit	Name	Access Ty-	Reset	Description			
		pe	Value				
0x0C IPISR - IP Interrupt Status Register							
0	ipis	R/W	0	Toggle on write. (write 1 to clear(W1C))			
31:1	reserved						

Tabelle 2.6: IP Interrupt Status Register (IPISR)

Bit	Name	Access Ty-	Reset Value	Description			
		pe					
0x10 IDR - ID Register							
31:0	ID	R	0x80010744	Distinct ID for PmodCLP Con-			
				troller			

Tabelle 2.7: ID Register (IDR)

Bit	Name	Access Ty-	Reset Value	Description		
		pe				
0x14 VERR - Version Register						
31:0	VER	R	0x80001000	Version		

Tabelle 2.8: Version Register (VERR)

Bit	Name	Access Ty-	Reset	Description
		pe	Value	
	0x18 SCS	R0 - Special	Control	and Status Register
0	lcd_initialized	R	0	1 indicates the LCD has been properly
				initialized and is ready for commands.
8:1	lcd_state (for de-	R	0x00	Current state of LCD controller. (in-
	bugging)			it: 0x01, ready: 0x02, write: 0x04, read:
				0x08, clear display: 0x10, return home:
				0x14, display control: 0x18, display line
				switch: 0x1C)
9	lcd_error_flag	R	0	Indicates an error occurred during last
				operation. In combination with 'wri-
				te_char' and 'read_char' two errors can
				occur: invalid symbol (write) or invalid
				ddram pos (read).
31:10	reserved			

Tabelle 2.9: Special Control and Status Register (SCSR0)  $\,$ 

Bit	Name	Access	Reset	Description
		Type	Value	
	0x1C CCI	R - Char	acter Co	ontrol Register
7:0	ddram_pos_last_written	R	0xFF	Last updated DDRAM address/position
				for character (00H-27H for line 1, 40H-
				67H for line 2)
15:8	ddram_pos_to_read	R/W	0xFF	DDRAM address/position for character
	(optional)			(00H-27H for line 1, 40H-67H for line 2)
				for software testing purpose (e.g. read
				symbol which was written before).
16	write_char	R/W	0	Write 1 to initiate character write eit-
				her to specified DDRAM position (if
				ddram_pos is in valid range) or default
				last_ddram_pos.
17	read_char (optional)	R/W	0	Write 1 to read character either
				from specified DDRAM position (if
				ddram_pos is in valid range) or default
				last_ddram_pos.
31:18	reserved			

Tabelle 2.10: Character Control Register (CCR)

Bit	Name	Access Ty-	Reset	Description
		pe	Value	
0x20 CDR - Cl			aracter I	Data Register
7:0	symbol_to_write	R/W	0xFF	Character symbol to write to LCD.
15:8	symbol_read (op-	R	0x3F	Character symbol which was read ('?' is
	tional)			default value if no read operation was
				triggered before). For software testing
				purpose.
31:16	reserved			

Tabelle 2.11: Character Data Register (CDR)

Bit	Name	Access Ty-	Reset	Description		
		pe	Value			
	0x2	24 DCR - Disj	play Cor	ntrol Register		
0	clear_display	R/W	0	Write 1 to clear the display		
1	return_home	R/W	0	Write 1 to return cursor to home position		
2	cursor_on	R/W	0	Enable cursor visibility $(0 = off, 1 = on)$		
3	cursor_blink	R/W	0	Enable cursor blinking ( $0 = \text{no blink}, 1$		
				$= \mathrm{blink})$		
4	display_line (op-	R/W	0	Indicates selected line on display $(0 = \text{line})$		
	tional)			$1,1=\mathrm{line}\;2)$		
	Continued on next page					

Bit	Name	Access Ty-	Reset	Description
		pe	Value	
31:5	reserved			

Tabelle 2.12: Display Control Register (DCR)

# 3. PmodMaxsonar

Der Pmod MAXSONAR besitzt einen MaxBotix® LV-MaxSonar®-EZ1™ Ultraschall Sensor, welcher Entfernungen von 15cm - 648cm mit einer Genauigkeit von 2.54cm messen kann. Nach einer Power-On-Phase von 250 ms und einer weiteren Wartezeit von ca. 100 ms für die Kalibrierung und erste Messung, kann der Sensor in alle 49 ms eine Distanzmessung durchführen.

Der Sensor sendet ein Ultraschall-Signal aus, welches von einem Objekt reflektiert wird. Der Sensor misst die Zeit, die das Signal benötigt, um zum Sensor zurückzukehren und berechnet daraus die Entfernung zum Objekt. Dieser Wert wird auf drei Arten an den Ausgängen dargestellt, zum einen als Spannungssignal, als Pulsweite oder als digitale Zahl per UART. In diesem Projekt wird die Entfernung per UART abgegriffen.

Die wichtigen Schnittstellen sind daher:

- TX (Transmit Data): Pin zur Initialisierung der Sensorkalibrierung und Distanzmessungen
- RX (Receive Data): Empfang des Distanzwertes als 5 ASCII-Zeichen mit dem Format "Rxxx\r"; xxx entspricht dem Distanzwert in zoll

Um den Sensor nutzen zu können, müssen die Pins TX und RX mit dem FPGA verbunden werden.

```
set_property -dict {PACKAGE_PIN U16 IOSTANDARD LVCMOS33} [get_ports {tx_out}];
    #pmodmaxsonar rx
set_property -dict {PACKAGE_PIN V15 IOSTANDARD LVCMOS33} [get_ports {rx_in}];
    #pmodmaxsonar tx
```

Listing 3.1: Pin-Zuordnung im Constraints-File

#### 3.1. Ansatz Custom IP

Im ersten Schritt soll die IP funktional fertiggestellt werden. Sie soll dabei mittels Polling eingesetzt werden. Sobald die Funktionalität des Gesamtsystems vollumfänglich gegeben ist, wird anstatt Polling über Interrupts kommuniziert.

Das Projektteam hat sich auf folgenden Entwurf geeinigt:

- Submodul 1: Startup & Calibration Timer
   Während der Startup und Kalibrierungsphase können keine Messungen durchgeführt werden.
   Daher wird ein Timer implementiert, der die Zeit bis zur ersten Messung überwacht.
- Submodul 2: UART Receiver (FSM)
   Mittels einer FSM wird der UART Empfang realisiert, dieser empfängt jeweils 1 Byte und meldet den Empfang an den ASCII-Decoder.

Die Baudrate mit Oversampling wird durch einen Clockdivider aus dem Systemtakt generiert. Bei einem Fehler im Empfangsprozess wird ein Fehler-Flag gesetzt, und die IP beendet den Vorgang mittels des  $ap\_done$  Signals.

#### • Submodul 3: ASCII Decoder (FSM) optional

Der ASCII Decoder empfängt stückweise die 5 ASCII-Zeichen im Format "R $x_0x_1x_2$ \r"  $x_0 \in \{0,...,2\}, x_{1,2} \in \{0,...,9\}.$ 

Wird dieses Format verletzt, wird ein Fehler-Flag gesetzt, und die IP beendet den Vorgang mittles des ap done Signals.

Nach erfolgreicher Konvertierung steht die Distanz als 8-Bit Zahl in der Einheit zoll (inch) zur Verfügung.

#### • Submodul 4: AXI Slave Interface

Nachdem die Zuverlässigkeit der IP mittels Tests sichergestellt wurde, soll die IP an den internen Systembus (AXI) angebunden werden.

Das Registermapping ist an  $at\_doc.pdf$  aus  $02b\_tut\_vhdl\_v03$  angelehnt.

# 3.2. Registermapping

### 3.2.1. I/Os

Signal Name	I/O	Initial	Description
		State	
ap_clk(s00_axi_aclk)	I	NA	AXI Clock
ap_rst_n	I	NA	AXI Reset, active-Low
(s00_axi_aresetn)			
s_axi_control*	NA	NA	AXI4-Lite Slave Interface signals
(s00_axi*)			
interrupt	I	0x0	Indicates that the condition for an interrupt
			has occurred. (new sensor reading)
			0 = No interrupt has occurred
			1 = Interrupt has occurred
rx_in	I	NA	UART receive from sensor
tx_out	О	1	UART transmit to sensor

Tabelle 3.1: PmodMAXSONAR I/O

## 3.2.2. Registerbereich

Address Offset	Register Name	Description
0x00	GCSR	General/Global Control and Status Register
0x04	GIER	Global Interrupt Enable Register
0x08	IPIER	IP Interrupt Enable Register
0x0C	IPISR	IP Interrupt Status Register
		Continued on next page

Address Offset	Register Name	Description
0x10	IDR	ID Register
0x14	VERR	Version Register
0x18	SCSR0	Special Control and Status Register
0x1C	DIST0	Distance Value Register
0x20	UCSR	UART Control and Status Register
0x24	ADSR	ASCII Decoder Status Register (optional)

Tabelle 3.2: PmodMAXSONAR Register Space Overview

Bit	Name	Access Ty-	Reset	Description
		pe	Value	
	0x00  GCSR -	General/Glo	bal Cont	rol and Status Register
0	ap_start	R/W	0	Asserted when the kernel is able to pro-
				cess data. Cleared on handshake with
				ap_done being asserted.
1	ap_done	R	0	Asserted when the kernel has completed
				a sensor reading (with or without error).
				Cleared on read.
2	ap_idle	R	0	Asserted when the kernel is idle.
3	reserved	R	0	Asserted by the kernel when it is rea-
	$(ap\_ready)$			dy to accept new data (used only by
				AP_CTRL_CHAIN)
4	reserved	R/W	0	Asserted by the XRT to allow ker-
	$(ap\_continue)$			nel keep running (used only by
				AP_CTRL_CHAIN)
5:6	reserved			
7	auto_restart	R/W	0	Used to enable automatic kernel restart.
				This bit determines whether only one
				sensor reading is processed or the sensor
				reading is continuously updated.
				0 = single reading
				1 = free running mode
31:8	reserved			

Tabelle 3.3: General/Global Control and Status Register (GCSR)

Bit	Name	Access Ty-	Reset	Description	
		pe	Value		
0x04 GIER - Global Interrupt Enable Register					
0	gie	R/W	0	When asserted, along with the IP Inter-	
				rupt Enable bit, the interrupt is enabled.	
31:1	reserved				
Continued on next page					

Bit	Name	Access Ty-	Reset	Description
		pe	Value	

Tabelle 3.4: Global Interrupt Enable Register (GIER)

Bit	Name	Access Ty-	Reset	Description	
		pe	Value		
	0x08 IPIER - IP Interrupt Enable Register				
0	ipie	R/W	0	When asserted, along with Global Inter-	
				rupt Enable bit, the interrupt is enabled.	
				(default: uses the internal ap_done signal	
				to trigger an interrupt)	
31:1	reserved				

Tabelle 3.5: IP Interrupt Enable Register (IPIER)

Bit	Name	Access Ty-	Reset	Description		
		pe	Value			
0x0C IPISR - IP Interrupt Status Register						
0	0 ipis R/W 0 Toggle on write. (write 1 to clear(W)					
31:1	reserved					

Tabelle 3.6: IP Interrupt Status Register (IPISR)

Bit	Name	Access Ty-	Reset Value	Description				
		pe						
	0x10 IDR - ID Register							
31:0	ID	Distinct ID for PmodMAXSO-						
				NAR (ASCII for SONR)				

Tabelle 3.7: ID Register (IDR)

Bit	Name	Access Ty-	Reset Value	Description				
		pe						
	0x14 VERR - Version Register							
31:0	VER	R	0x80001000	Version				

Tabelle 3.8: Version Register (VERR)

Bit	Name		Access Ty-	Reset	Description	
			$\mathbf{pe}$	Value		
0x18 SCSR0 - Special Control and Status Register						
	Continued on next page					

Bit	Name	Access Ty-	Reset	Description
		pe	Value	
0	powerup_done	R	0	Asserted when the powerup time of the
				sonar sensor has passed
1	config_done	R	0	Asserted when the configuration of the
				sonar sensor is done
2	read_valid	R	0	Signals if the current values in the DIST0
				Register are valid.
				In single reading mode the flag is asserted
				when completed a sensor read without an
				error. When a new reading starts the flag
				is cleared.
				In free running mode the flag is set when
				the first error free sensor reading was con-
				ducted. If there are errors while reading
				sensor, the flag should be cleared.
5:3	reserved			
6	reset_ip	R	0	Stops the whole IP and resets all values
7	freeze_ip	R	0	Stops the whole IP but does not reset the
				values (useful for debugging)
31:8	reserved			

Tabelle 3.9: Special Control and Status Register (SCSR0)

Bit	Name	Access Ty-	Reset	Description			
		pe	Value				
	0x1C DIST0 - Distance Value Register						
7:0	dist_in	R	0x00	Distance in inches			
				• $0x00 = \text{no valid reading yet}$			
				• 0x06 - 0xFF			
				• 6in - 255in			
15:8	dist_char_1 (optional)	R	0x00	First Digit of Distance value $(x_1 * 10^2)$			
23:16	dist_char_2 (optional)	R	0x00	Second Digit of Distance value $(x_2 * 10^1)$			
31:24	dist_char_3 (optional)	R	0x00	Third Digit of Distance value $(x_3 * 10^0)$			

Tabelle 3.10: Distance Value Register (DIST0)

Bit	Name	Access Ty-	Reset	Description			
		pe	Value				
	0x20 UCSR - UART Control and Status Register						
0	ur_error	R	0	Set to one, if the UART Receiver moves			
				into the error state. Cleared on reset.			
1	ur_bd_rate	R/W	0	Baudrate of the UART Receiver			
	(optional)			$0=4800~\mathrm{Baud}$			
				1 = 9600 Baud			
2	ur_os_rate	R/W	0	Oversampling Rate of UART Receiver			
	(optional)			0 = 8x Oversampling			
				1 = 16x Oversampling			
6:3	ur_data_bits	R/W	0x1	Number of Databits			
	(optional)			0x1 = 5  Bits			
				0x $2 = 6$ Bits			
				0x4 = 7 Bits			
				$0x8 = 8  ext{ Bits}$			
7	reserved						
15:8	ur_data	R	0x00	Current status of the UART Receive Buf-			
				fer (for Debug Purposes)			
31:16	reserved						

Tabelle 3.11: UART Receiver Status Register (URSR)

Bit	Name	Access Ty-	Reset	Description		
		pe	Value			
	0x24 ADSR - ASCII Decoder Status Register					
0	ad_error	R	0	Set, if the ASCII Decoder moves into er-		
	(optional)			ror state (the packet structure "Rxxx\r"		
				violated). Cleared on reset.		
5:1	ad_err_pos	R	0x00	One-hot bitmask of the ASCII character		
	(optional)			which caused the error		
				0x $0$ 1 = R		
				0x02 = first number		
				0x04 = second number		
				0x08 = third number		
				0x10 = cariage return		
7:6	reserved					
15:8	ad_err_char	R	0x00	ASCII character which caused the error		
	(optional)					
31:16	reserved					

Tabelle 3.12: ASCII Decoder Status Register (ADSR)