## **Electronic Devices**

Mid Term Lecture - 02

Faculty Name: Dr. Md. Kabiruzzaman Email: kabiruzzaman@aiub.edu

Reference book:

**Electronic Devices and Circuit Theory (Chapter-1)** 

Robert L. Boylestad and L. Nashelsky, (11th Edition)

## **Objectives**

- Develop a clear understanding of the basic operation and characteristics of a diode in the no-bias, forward-bias, and reverse-bias regions.
- ➤ Be able to calculate the dc, ac, and average ac resistance of a diode from the characteristics.
- Understand the impact of an equivalent circuit whether it is ideal or practical.
- Become familiar with the operation and characteristics of a Zener diode and light- emitting diode.

#### Semiconductor Diode: No Applied Bias (V=0 V)

- **❖** Now that both n − and p -type materials are available, we can construct our first solid-state electronic device: The semiconductor diode , with applications too numerous to mention, is created by simply joining an n -type and a p -type material together.
- **❖** In the absence of an applied bias across a semiconductor diode, the net flow of charge in one direction is zero.

## No Applied Bias (VD=0 V)

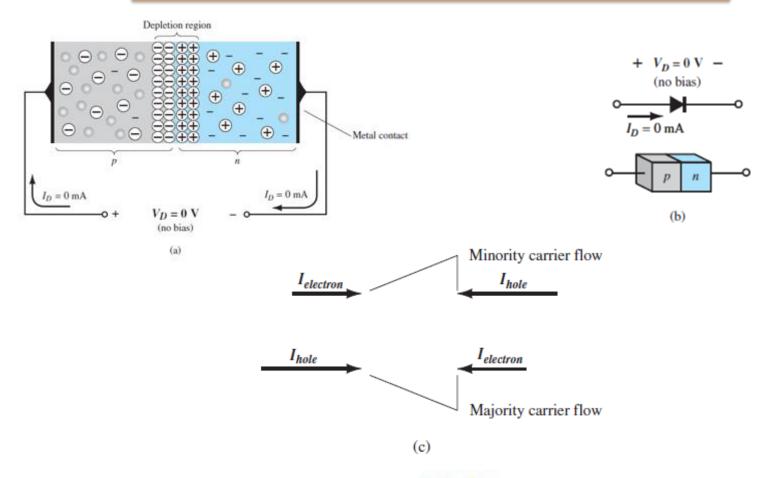


FIG. 1.12

A p-n junction with no external bias: (a) an internal distribution of charge; (b) a diode symbol, with the defined polarity and the current direction; (c) demonstration that the net carrier flow is zero at the external terminal of the device when  $V_D = 0 V$ .

#### **Reverse-Bias Condition (VD<0 V)**

The current that exists under reverse-bias conditions is called the reverse saturation current and is represented by  $\mathbf{I}_{s}$  .

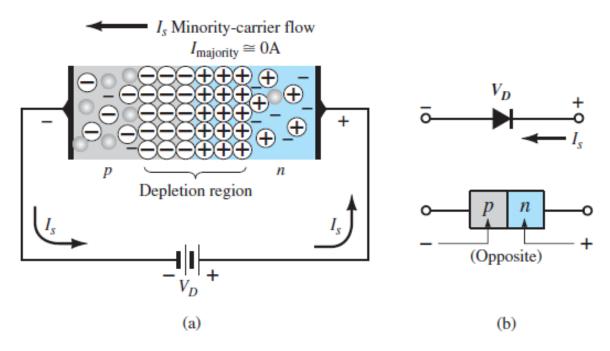


FIG. 1.13

Reverse-biased p—n junction: (a) internal distribution of charge under reverse-bias conditions; (b) reverse-bias polarity and direction of reverse saturation current.

## Forward-Bias Condition (VD>0 V)

A *forward-bias* or "on" condition is established by applying the positive potential to the p -type material and the negative potential to the n -type material as shown in Fig. 1.14 .

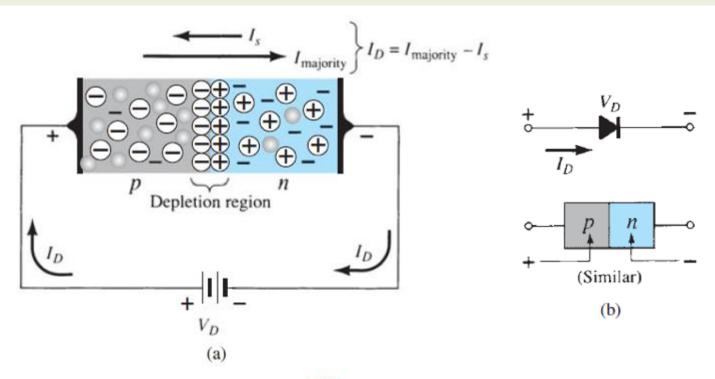


FIG. 1.14

Forward-biased p—n junction: (a) internal distribution of charge under forward-bias conditions; (b) forward-bias polarity and direction of resulting current.

#### Forward-Bias Condition (VD>0 V) Contd.

❖ It can be demonstrated through the use of solid-state physics that the general characteristics of a semiconductor diode can be defined by the following equation, referred to as Shockley's equation, for the forward- and reverse-bias regions:

$$I_D = I_s(e^{V_D/nV_T} - 1)$$
 (A)

Where, I<sub>s</sub> is the reverse saturation current

 $V_D$  is the applied forward-bias voltage across the diode n is an ideality factor, which is a function of the <u>operating</u> <u>conditions and physical construction</u>; it has a range between 1 and 2 depending on a wide variety of factors (n = 1 will be assumed throughout this text unless otherwise noted).

## Forward-Bias Condition (VD>0 V) Contd.

• The voltage  $V_T$  in Eq. (1.1) is called the thermal voltage and is determined by:

$$V_T = \frac{kT_K}{q} \quad (V)$$

where

k is Boltzmann's constant =  $1.38 * 10^{-23} \text{ J/K}$ 

 $T_K$  is the absolute temperature in kelvins = 273 + the temperature in °C q is the magnitude of electronic charge = 1.6 \*  $10^{-19}$  C

**EXAMPLE 1.1** At a temperature of 27°C (common temperature for components in an enclosed operating system), determine the thermal voltage  $V_T$ .

**Solution:** Substituting into Eq. (1.3), we obtain

$$T = 273 + ^{\circ}\text{C} = 273 + 27 = 300 \text{ K}$$

$$V_T = \frac{kT_K}{q} = \frac{(1.38 \times 10^{-23} \text{ J/K})(30 \text{ K})}{1.6 \times 10^{-19} \text{ C}}$$

$$= 25.875 \text{ mV} \cong 26 \text{ mV}$$

The thermal voltage will become an important parameter in the analysis to follow in this chapter and a number of those to follow.

#### **Semiconductor Diode Characteristics**

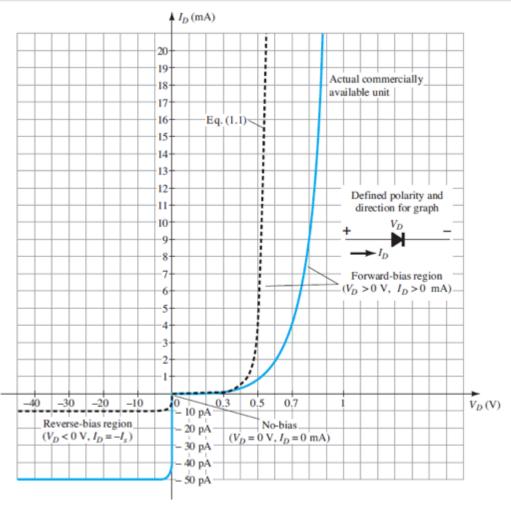


FIG. 1.15
Silicon semiconductor diode characteristics.

## **Breakdown Region**

- The maximum reverse-bias potential that can be applied before entering the breakdown region is called the <u>peak</u> <u>inverse voltage</u> (referred to simply as the PIV rating) or the peak reverse voltage (denoted the PRV rating).
- If an application requires a PIV rating greater than that of a single unit, a number of diodes of the same characteristics can be connected in series. Diodes are also connected in parallel to increase the current-carrying capacity.
- In general, the breakdown voltage of GaAs diodes is about 10% higher those for silicon diodes but after 200% higher than levels for Ge diodes.

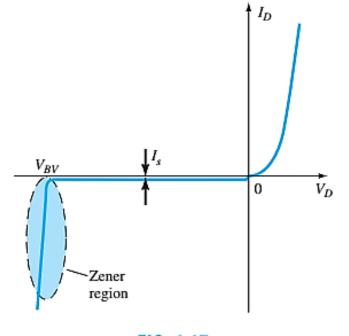


FIG. 1.17
Breakdown region.


#### **Breakdown Region Contd.**

- As the voltage across the diode increases in the reverse-bias region, the velocity of the minority carriers responsible for the reverse saturation current Is will also increase.
- Eventually, their velocity and associated kinetic energy ( $W_K = 1/2$   $mv^2$ ) will be sufficient to release additional carriers through collisions with otherwise stable atomic structures.
- An ionization process will result whereby valence electrons absorb sufficient energy to leave the parent atom.
- These additional carriers can then aid the ionization process to the point where a high avalanche current is established and the <u>avalanche</u> <u>breakdown</u> region determined.

#### **Breakdown Region Contd.**

- The avalanche region  $(V_{BV})$  can be brought closer to the vertical axis by increasing the doping levels in the p- and n-type materials.
- However, as  $V_{BV}$  decreases to very low levels, such as -5 V, another mechanism, called <u>Zener breakdown</u>, will contribute to the sharp change in the characteristic.
- It occurs because there is a strong electric field in the region of the junction that can disrupt the bonding forces within the atom and "generate" carriers.
- Although the Zener breakdown mechanism is a significant contributor only at lower levels of  $V_{\rm BV}$ , this sharp change in the characteristic at any level is called the <u>Zener region</u>, and diodes employing this unique portion of the characteristic of a p-n junction are called Zener diodes.

#### Ge, Si & GaAs

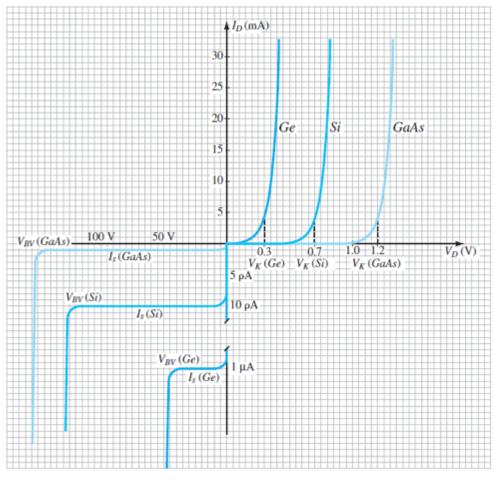

**TABLE 1.3** *Knee Voltages*  $V_K$ 

Semiconductor	$V_K(\mathbf{V})$
Ge	0.3
Si	0.7
GaAs	1.2

FIG. 1.18
Comparison of Ge, Si, and GaAs commercial diodes.

#### **Temperature Effects**

- In the forward-bias region the characteristics of a silicon diode shift to the left at a rate of 2.5 mV per centigrade degree increase in temperature.
- In the reverse-bias region the reverse current of a silicon diode doubles for every 10°C rise in temperature.
- The reverse breakdown voltage of a semiconductor diode will increase or decrease with temperature.
- As temperature increases it adds energy to the diode:
  - It reduces the required forward bias voltage for forward bias conduction.
  - It increases the amount of reverse current in the reverse bias condition.
  - It increases maximum reverse bias avalanche voltage.
- Germanium diodes are more sensitive to temperature variations than silicon or gallium arsenide diodes.

#### **Temperature Effect Contd.**

In the forward-bias region the characteristics of a silicon diode shift to the left at a rate of 2.5 mV per centigrade degree increase in temperature.

In the reverse-bias region the reverse current of a silicon diode doubles for every 10° C rise in temperature.

Finally, The reverse breakdown voltage of a semiconductor diode will increase or decrease with temperature.

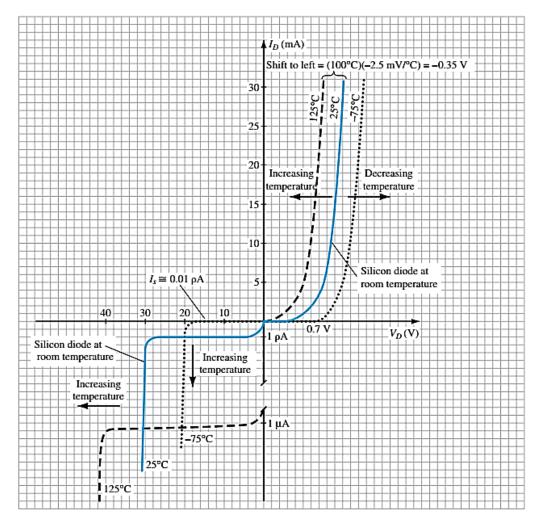


FIG. 1.19
Variation in Si diode characteristics with temperature change.

#### **Ideal vs Practical**

- The semiconductor diode behaves in a manner similar to a mechanical switch in that it can control whether current will flow between its two terminals.
- The semiconductor diode is different from a mechanical switch in the sense that when the switch is closed it will only permit current to flow in one direction.

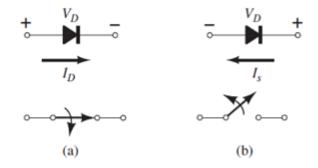


FIG. 1.21

Ideal semiconductor diode: (a) forward-biased; (b) reverse-biased.

#### Ideal vs Practical Contd.

- Ideally, if the semiconductor diode is to behave like a closed switch in the forward-bias region, the resistance of the diode should be 0  $\Omega$ .
- In the reverse-bias region its resistance should be ∞ Ω to represent the open-circuit equivalent.

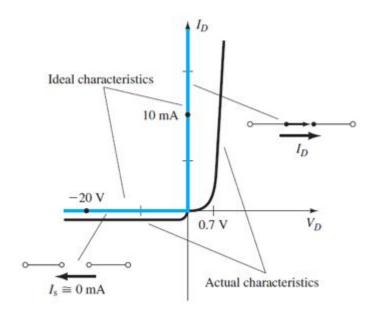


FIG. 1.22

Ideal versus actual semiconductor characteristics.

#### **Resistance Levels**

- Semiconductors react differently to DC and AC currents.
- There are three types of resistance:
  - » DC (static) resistance
  - » AC (dynamic) resistance
  - » Average AC resistance

#### DC or Static Resistance

• For a specific applied DC voltage  $V_{D_i}$  the diode has a specific current  $I_{D_i}$  and a specific resistance  $R_{D_i}$ .

$$R_D = \frac{V_D}{I_D}$$

• In general, therefore, the <u>higher</u> <u>the current through a diode</u>, the <u>lower is the dc resistance level.</u>

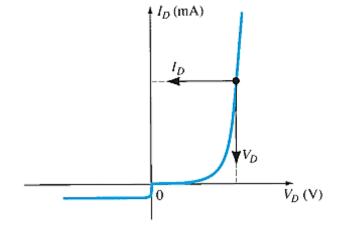


FIG. 1.23

Determining the dc resistance of a diode at a particular operating point.

**EXAMPLE 1.3** Determine the dc resistance levels for the diode of Fig. 1.24 at

a. 
$$I_D = 2 \text{ mA (low level)}$$

b. 
$$I_D = 20 \text{ mA (high level)}$$

c. 
$$V_D = -10 \text{ V}$$
 (reverse-biased)

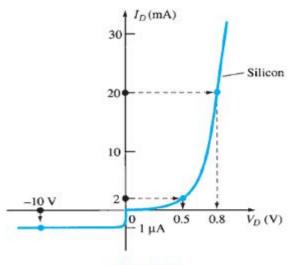


FIG. 1.24

Example 1.3.

Solution:

a. At 
$$I_D = 2$$
 mA,  $V_D = 0.5$  V (from the curve) and

$$R_D = \frac{V_D}{I_D} = \frac{0.5 \text{ V}}{2 \text{ mA}} = 250 \Omega$$

b. At  $I_D = 20$  mA,  $V_D = 0.8$  V (from the curve) and

$$R_D = \frac{V_D}{I_D} = \frac{0.8 \text{ V}}{20 \text{ mA}} = 40 \Omega$$

c. At 
$$V_D = -10$$
 V,  $I_D = -I_s = -1$   $\mu$ A (from the curve) and

$$R_D = \frac{V_D}{I_D} = \frac{10 \text{ V}}{1 \,\mu\text{A}} = 10 \text{ M}\Omega$$

clearly supporting some of the earlier comments regarding the dc resistance levels of a diode.

#### **Faculty of Engineering**

#### **AC or Dynamic Resistance**

- The dc resistance of a diode is independent of the shape of the characteristic in the region surrounding the point of interest.
- The designation Q-point is derived from the word quiescent, which means "still or unvarying."
- In general, therefore, the lower the Q-point of operation (smaller current or lower voltage), the higher is the ac resistance.
- See Example 1.4.

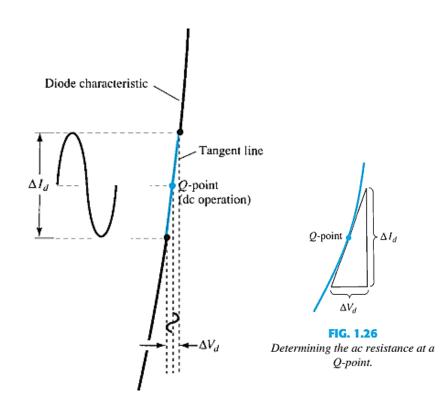


FIG. 1.25
Defining the dynamic or ac resistance.

## **AC or Dynamic Resistance Contd.**

In the forward bias region:

$$r'_d = \frac{26 \,\mathrm{mV}}{I_D} + r_B \quad \mathrm{ohms}$$

- The resistance depends on the amount of current  $(I_D)$  in the diode.
- The voltage across the diode is fairly constant (26 mV for 25°C).
- $r_B$  ranges from a typical 0.1  $\Omega$  for high power devices to 2  $\Omega$  for low power, general purpose diodes. In some cases  $r_B$  can be ignored.
- In the reverse bias region:  $r'_d = \infty$

The resistance is effectively infinite. The diode acts like an open.

#### **Average AC or Resistance**

 The average ac resistance is, by definition, the resistance determined by a straight line drawn between the two intersections established by the maximum and minimum values of input voltage.

$$r_{\mathrm{av}} = \left. \frac{\Delta V_d}{\Delta I_d} \right|_{\mathrm{pt.\ to\ pt.}}$$

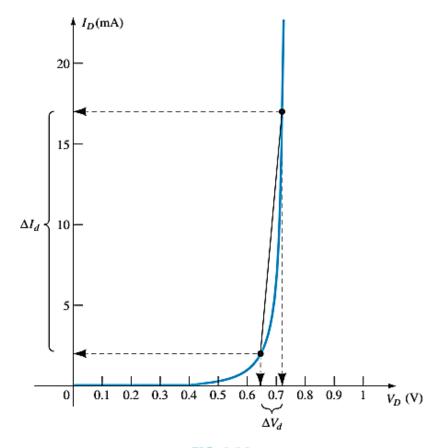


FIG. 1.28

Determining the average ac resistance between indicated limits.

## **Summary table**


TABLE 1.6 Resistance Levels

Type	Equation	Special Characteristics	Graphical Determination
DC or static	$R_D = \frac{V_D}{I_D}$	Defined as a point on the characteristics	$Q_{\mathrm{pt.}}$ $V_D$
AC or dynamic	$r_d = \frac{\Delta V_d}{\Delta I_d} = \frac{26 \text{ mV}}{I_D}$	Defined by a tangent line at the $Q$ -point	$\left\{\begin{array}{c}I_D\\Q_{\mathrm{pt.}}\end{array}\right\}\Delta I_d$
Average ac	$r_{ m av} = rac{\Delta V_d}{\Delta I_d}igg _{ m pt.\ to\ pt.}$	Defined by a straight line between limits of operation	$\Delta I_d$

#### **Diode Equivalent Circuits**

An equivalent circuit is a <u>combination of elements properly chosen</u> <u>to best represent the actual terminal characteristics of a device or <u>system</u> in a particular operating region.</u>

TABLE 1.7
Diode Equivalent Circuits (Models)

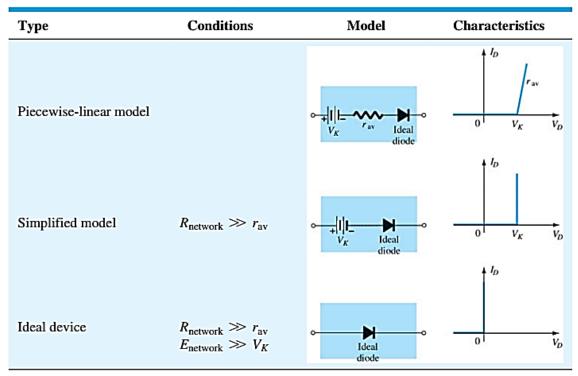

# Thank You