TahakomAVRLibDoc

1.0

Generated by Doxygen 1.8.17

1 Introduction	1
1.1 Library structure	1
1.2 Software setup	1
1.2.1 Linux	2
1.2.2 Windows	2
1.3 Compile and Flash programs	2
1.3.1 Linux	2
1.3.2 Windows	3
1.4 Hardware setup	3
1.5 Applications	3
1.6 Projects	3
1.7 Author	3
1.8 License	3
O Applications	-
2 Applications 2.1 Blink a Led	5
	5
2.1.1 Hardware	6
2.1.2 Circuit	6 7
2.1.4 Author	•
	7
2.1.5 License	8
2.2 AVR Square-Wave Organ	8
2.2.1 Hardware	9
2.2.3 Code	9
2.2.4 Author	10
2.2.5 License	10
	_
2.3 AVR Music Box	10 11
2.3.2 Circuit	11
2.3.3 Code	12
2.3.4 Author	13
2.3.5 License	13
2.4 Light Meter	13
2.4.1 Hardware	14
	14
2.4.2 Circuit	
2.4.3 Code	15
2.4.4 Author	16
2.4.5 License	16
3 README	17
4 Namespace Index	19

	4.1 Namespace List	19
5	Hierarchical Index	21
	5.1 Class Hierarchy	21
6	Class Index	23
	6.1 Class List	23
7	File Index	25
•	7.1 File List	25
8	Namespace Documentation	27
	8.1 component Namespace Reference	27
	8.1.1 Detailed Description	27
	8.1.2 Enumeration Type Documentation	27
	8.1.2.1 mode	27
	•	28
	8.2.1 Detailed Description	29
	8.2.2 Enumeration Type Documentation	29
	8.2.2.1 autoTriggerSource	29
	8.2.2.2 BODMode	30
	8.2.2.3 channel	30
	8.2.2.4 clockPrescaler	31
	8.2.2.5 clockSource	31
	8.2.2.6 compareOutputMode	32
	8.2.2.7 operationMode [1/2]	32
	8.2.2.8 operationMode [2/2]	33
	8.2.2.9 pinChangePort	34
	8.2.2.10 referenceVoltage	
	8.2.2.11 resolution	35
	8.2.2.12 senseControl	36
	8.2.2.13 sleepMode	36
	8.2.2.14 timeOut	36
	8.3 io Namespace Reference	37
	8.3.1 Detailed Description	38
	8.3.2 Enumeration Type Documentation	38
	8.3.2.1 clockPrescaler	38
	8.3.2.2 communicationMode	39
	8.3.2.3 dataMode	39
	8.3.2.4 dataOrder	40
	8.3.2.5 frameSize	40
	8.3.2.6 operationMode	41
	8.3.2.7 parityMode	41
	8.3.2.8 stopBit	42

8.3.2.9 transmissionMode	42
8.3.3 Variable Documentation	43
8.3.3.1 PortB	43
8.3.3.2 PortC	43
8.3.3.3 PortD	43
8.4 utils Namespace Reference	43
8.4.1 Function Documentation	43
8.4.1.1 map()	43
9 Class Documentation	45
9.1 core::ADConverter Class Reference	
9.1.1 Detailed Description	
9.1.2 Constructor & Destructor Documentation	
9.1.2.1 ADConverter() [1/2]	
9.1.2.2 ~ADConverter()	
9.1.2.3 ADConverter() [2/2]	
9.1.3 Member Function Documentation	
9.1.3.1 conversionCompleteServiceRoutine()	
9.1.3.2 enableAutoTrigger()	
9.1.3.3 enableConversionCompleteInterrupt()	
9.1.3.4 getConversionResult()	
9.1.3.5 getInstance()	
9.1.3.6 operator=()	
9.1.3.7 selectAnalogInput()	
9.1.3.8 selectAutoTriggerSource()	
9.1.3.9 selectClockPrescaler()	
9.1.3.10 selectReferenceVoltage()	
9.1.3.12 stop()	
9.1.4 Member Data Documentation	
9.1.4.1externally_visible	
9.1.4.2used	
9.1.4.3 m_conversionResult	
9.1.4.4 m resolution	
9.2 core::AnalogComparator Class Reference	
9.2.1 Detailed Description	
9.3 component::Buzzer Class Reference	
9.3.1 Detailed Description	
9.3.2 Constructor & Destructor Documentation	
9.3.2 Constructor & Destructor Documentation	
9.3.2.2 ~Buzzer()	
9.3.3 Member Function Documentation	
	٠,

9.3.3.1 buzz() [1/2]	57
<b>9.3.3.2 buzz()</b> [2/2]	57
9.3.3.3 pause()	58
9.3.4 Member Data Documentation	58
9.3.4.1 m_pin	59
9.4 component::DCMotor Class Reference	59
9.4.1 Detailed Description	60
9.4.2 Constructor & Destructor Documentation	60
9.4.2.1 DCMotor()	60
9.4.2.2 ~DCMotor()	60
9.4.3 Member Function Documentation	60
9.4.3.1 connect()	60
9.4.3.2 disconnect()	61
9.4.3.3 off()	61
9.4.3.4 on()	61
9.4.3.5 spin()	61
9.4.3.6 stop()	
9.4.3.7 toggle()	62
9.4.4 Member Data Documentation	62
9.4.4.1 m_pin	62
9.5 core::ExternInterrupt Class Reference	62
9.5.1 Detailed Description	63
9.5.2 Constructor & Destructor Documentation	63
<b>9.5.2.1 ExternInterrupt()</b> [1/2]	63
9.5.2.2 ~ExternInterrupt()	64
9.5.2.3 ExternInterrupt() [2/2]	64
9.5.3 Member Function Documentation	64
9.5.3.1 enableInt0()	64
9.5.3.2 enableInt1()	64
9.5.3.3 enablePinChange()	65
9.5.3.4 enablePinChangeMaskPortB()	65
9.5.3.5 enablePinChangeMaskPortC()	65
9.5.3.6 enablePinChangeMaskPortD()	66
9.5.3.7 getInstance()	66
9.5.3.8 Int0ServiceRoutine()	66
9.5.3.9 Int1ServiceRoutine()	66
9.5.3.10 operator=()	66
9.5.3.11 pinChangePortBServiceRoutine()	67
9.5.3.12 pinChangePortCServiceRoutine()	67
9.5.3.13 pinChangePortDServiceRoutine()	67
9.5.3.14 setInt0SenseControl()	67
9.5.3.15 setInt1SenseControl()	67

9.5.4 Member Data Documentation	67
9.5.4.1externally_visible	68
9.5.4.2used	68
9.6 component::LDR Class Reference	68
9.6.1 Detailed Description	69
9.6.2 Constructor & Destructor Documentation	69
9.6.2.1 LDR()	69
9.6.2.2 ~LDR()	70
9.6.3 Member Function Documentation	70
9.6.3.1 getLux()	70
9.6.3.2 getResistance()	70
9.6.4 Member Data Documentation	71
9.6.4.1 m_pin	71
9.6.4.2 mr_ADC	71
9.7 component::Led Class Reference	71
9.7.1 Detailed Description	72
9.7.2 Constructor & Destructor Documentation	73
9.7.2.1 Led()	73
9.7.2.2 ~Led()	73
9.7.3 Member Function Documentation	73
9.7.3.1 isOff()	74
9.7.3.2 isOn()	74
9.7.3.3 off()	74
9.7.3.4 on()	75
9.7.3.5 toggle()	75
9.7.4 Member Data Documentation	75
9.7.4.1 m_pin	75
9.8 core::MCU Class Reference	75
9.8.1 Detailed Description	76
9.8.2 Member Function Documentation	76
9.8.2.1 disableBOD()	76
9.8.2.2 enableADC()	76
9.8.2.3 enableSPI()	77
9.8.2.4 enableTimerCounter0()	77
9.8.2.5 enableTimerCounter1()	77
9.8.2.6 enableTimerCounter2()	78
9.8.2.7 enableTWI()	78
9.8.2.8 enableUSART0()	78
9.8.2.9 goToSleep()	79
9.8.2.10 init()	79
9.8.2.11 selectSleepMode()	79
9.8.2.12 sleepEnable()	80

9.9 io::Pin Class Reference	80
9.9.1 Detailed Description	81
9.9.2 Constructor & Destructor Documentation	81
9.9.2.1 Pin()	81
9.9.2.2 ~Pin()	82
9.9.3 Member Function Documentation	82
9.9.3.1 getPinNumber()	82
9.9.3.2 isHigh()	83
9.9.3.3 isLow()	83
9.9.3.4 setHigh()	83
9.9.3.5 setLow()	84
9.9.3.6 toggle()	84
9.9.3.7 toInput()	84
9.9.3.8 toOutput()	85
9.9.4 Member Data Documentation	85
9.9.4.1 m_pinNumber	85
9.9.4.2 mr_portName	85
9.10 io::Port Struct Reference	85
9.10.1 Detailed Description	86
9.10.2 Member Data Documentation	86
9.10.2.1 mp_ddrReg	86
9.10.2.2 mp_pinReg	86
9.10.2.3 mp_portReg	86
9.11 component::PushButton Class Reference	87
9.11.1 Detailed Description	87
9.11.2 Constructor & Destructor Documentation	88
9.11.2.1 PushButton()	88
9.11.2.2 ~PushButton()	88
9.11.3 Member Function Documentation	89
9.11.3.1 getPressedCount()	89
9.11.3.2 isPressed()	89
9.11.3.3 resetPressedCount()	90
9.11.4 Member Data Documentation	90
9.11.4.1 m_buttonPressed	90
9.11.4.2 m_pin	90
9.11.4.3 mr_isActiveLow	90
9.11.4.4 mr_useInternalPullUp	91
9.12 component::ServoMotor Class Reference	91
9.12.1 Detailed Description	92
9.12.2 Constructor & Destructor Documentation	92
9.12.2.1 ServoMotor()	92
9.12.2.2 ~ServoMotor()	92

9.12.3 Member Function Documentation	. 92
9.12.3.1 computePulseCycleCount()	. 93
9.12.3.2 computePulseWidthMaxCount()	. 93
9.12.3.3 computePulseWidthMidCount()	. 93
9.12.3.4 computePulseWidthMinCount()	. 93
9.12.3.5 computeRotationAngleCount()	. 94
9.12.3.6 connect()	. 94
9.12.3.7 disconnect()	. 94
9.12.3.8 off()	. 95
9.12.3.9 on()	. 95
9.12.3.10 rotate()	. 95
9.12.3.11 toggle()	. 95
9.12.4 Member Data Documentation	. 96
9.12.4.1 m_pin	. 96
9.12.4.2 m_pulseCycle	. 96
9.12.4.3 m_pulseWidthMax	. 96
9.12.4.4 m_pulseWidthMid	. 96
9.12.4.5 m_pulseWidthMin	. 97
9.13 io::SPI Class Reference	. 97
9.13.1 Detailed Description	. 98
9.13.2 Constructor & Destructor Documentation	. 98
9.13.2.1 SPI() [1/2]	. 99
9.13.2.2 ~SPI()	. 99
9.13.2.3 SPI() [2/2]	. 99
9.13.3 Member Function Documentation	. 99
9.13.3.1 enableTransferCompleteInterrupt()	. 100
9.13.3.2 getInstance()	. 100
9.13.3.3 masterReceiveByte()	. 100
9.13.3.4 masterSendByte()	. 101
9.13.3.5 operator=()	. 101
9.13.3.6 selectClockPrescaler()	. 101
9.13.3.7 selectDataMode()	. 101
9.13.3.8 selectDataOrder()	. 102
9.13.3.9 selectOperationMode()	. 102
9.13.3.10 selectSlave()	. 103
9.13.3.11 slaveReceiveByte()	. 103
9.13.3.12 transferComplete()	. 103
9.13.3.13 transferCompleteServiceRoutine()	. 103
9.13.3.14 writeCollision()	. 104
9.13.4 Member Data Documentation	. 104
9.13.4.1externally_visible	. 104
9.13.4.2used	. 104

9.13.4.3 m_data	. 104
9.13.4.4 m_pinMISO	. 104
9.13.4.5 m_pinMOSI	. 105
9.13.4.6 m_pinSCK	. 105
9.13.4.7 m_pinSS	. 105
9.14 component::StepperMotor Class Reference	. 105
9.14.1 Detailed Description	. 106
9.14.2 Constructor & Destructor Documentation	. 106
9.14.2.1 StepperMotor()	. 107
9.14.2.2 ~StepperMotor()	. 107
9.14.3 Member Function Documentation	. 107
9.14.3.1 computeStepDelay()	. 107
9.14.3.2 currentPos()	. 108
9.14.3.3 goalReached()	. 109
9.14.3.4 setCurrentPos()	. 109
9.14.3.5 step() [1/3]	. 109
<b>9.14.3.6 step()</b> [2/3]	. 110
<b>9.14.3.7 step()</b> [3/3]	. 111
9.14.3.8 stepDelay()	. 112
9.14.3.9 stepPulse()	. 112
9.14.4 Member Data Documentation	. 113
9.14.4.1 m_accelTime	. 113
9.14.4.2 m_constSpeedTime	. 113
9.14.4.3 m_currentPos	. 114
9.14.4.4 m_decelTime	. 114
9.14.4.5 m_goalReached	. 114
9.14.4.6 m_pinCoil1	. 114
9.14.4.7 m_pinCoil2	. 114
9.14.4.8 m_pinCoil3	. 115
9.14.4.9 m_pinCoil4	. 115
9.14.4.10 stepMode	. 115
9.15 core::TimerCounter Class Reference	. 115
9.15.1 Detailed Description	. 116
9.15.2 Member Function Documentation	. 116
9.15.2.1 enableOutputCompareMatchInterrupt()	. 116
9.15.2.2 enableOverflowInterrupt()	. 116
9.15.2.3 getClockPrescaler()	. 116
9.15.2.4 getCounter()	. 117
9.15.2.5 getOutputCompareRegister()	. 117
9.15.2.6 selectClockSource()	. 117
9.15.2.7 selectCompareOutputMode()	. 117
9.15.2.8 selectOperationMode()	. 117

9.15.2.9 setCounter()	. 117
9.15.2.10 setOutputCompareRegister()	. 118
9.15.2.11 start()	. 118
9.15.2.12 stop()	. 118
9.16 core::TimerCounter0 Class Reference	. 118
9.16.1 Detailed Description	. 120
9.16.2 Constructor & Destructor Documentation	. 120
9.16.2.1 TimerCounter0() [1/2]	. 120
9.16.2.2 ~TimerCounter0()	. 120
9.16.2.3 TimerCounter0() [2/2]	. 121
9.16.3 Member Function Documentation	. 121
9.16.3.1 enableOutputCompareMatchInterrupt()	. 121
9.16.3.2 enableOverflowInterrupt()	. 122
9.16.3.3 getClockPrescaler()	. 122
9.16.3.4 getCounter()	. 122
9.16.3.5 getInstance()	. 123
9.16.3.6 getOutputCompareRegister()	. 123
9.16.3.7 operator=()	. 123
9.16.3.8 outputCompareMatchAServiceRoutine()	. 123
9.16.3.9 outputCompareMatchBServiceRoutine()	. 124
9.16.3.10 overflowServiceRoutine()	. 124
9.16.3.11 selectClockSource()	. 124
9.16.3.12 selectCompareOutputMode()	. 125
9.16.3.13 selectOperationMode()	. 125
9.16.3.14 setCounter()	. 126
9.16.3.15 setOutputCompareRegister()	. 126
9.16.3.16 start()	. 127
9.16.3.17 stop()	. 127
9.16.4 Member Data Documentation	. 127
9.16.4.1externally_visible	. 127
9.16.4.2 <u>used</u>	. 127
9.16.4.3 m_clockPrescaler	. 128
9.16.4.4 m_clockSource	. 128
9.17 core::TimerCounter1 Class Reference	. 128
9.17.1 Detailed Description	. 130
9.17.2 Constructor & Destructor Documentation	. 130
9.17.2.1 TimerCounter1() [1/2]	. 130
9.17.2.2 ~TimerCounter1()	. 130
9.17.2.3 TimerCounter1() [2/2]	. 130
9.17.3 Member Function Documentation	. 130
9.17.3.1 enableInputCaptureInterrupt()	. 131
9.17.3.2 enableOutputCompareMatchInterrupt()	. 131

9.17.3.3 enableOverflowInterrupt()	132
9.17.3.4 getClockPrescaler()	132
9.17.3.5 getCounter()	132
9.17.3.6 getInputCaptureRegister()	132
9.17.3.7 getInstance()	133
9.17.3.8 getOutputCompareRegister()	133
9.17.3.9 inputCaptureServiceRoutine()	133
9.17.3.10 operator=()	133
9.17.3.11 outputCompareMatchAServiceRoutine()	134
9.17.3.12 outputCompareMatchBServiceRoutine()	134
9.17.3.13 overflowServiceRoutine()	134
9.17.3.14 selectClockSource()	134
9.17.3.15 selectCompareOutputMode()	135
9.17.3.16 selectOperationMode()	135
9.17.3.17 setCounter()	137
9.17.3.18 setInputCaptureRegister()	137
9.17.3.19 setOutputCompareRegister()	137
9.17.3.20 start()	138
9.17.3.21 stop()	138
9.17.4 Member Data Documentation	138
9.17.4.1externally_visible	138
9.17.4.2used	138
9.17.4.3 m_clockPrescaler	139
9.17.4.4 m_clockSource	139
9.18 core::TimerCounter2 Class Reference	139
9.18.1 Detailed Description	140
9.18.2 Constructor & Destructor Documentation	141
9.18.2.1 TimerCounter2() [1/2]	141
9.18.2.2 ~TimerCounter2()	141
9.18.2.3 TimerCounter2() [2/2]	141
9.18.3 Member Function Documentation	141
9.18.3.1 enableOutputCompareMatchInterrupt()	142
9.18.3.2 enableOverflowInterrupt()	142
9.18.3.3 getClockPrescaler()	143
9.18.3.4 getCounter()	143
9.18.3.5 getInstance()	143
9.18.3.6 getOutputCompareRegister()	144
9.18.3.7 operator=()	144
9.18.3.8 outputCompareMatchAServiceRoutine()	144
9.18.3.9 outputCompareMatchBServiceRoutine()	144
9.18.3.10 overflowServiceRoutine()	144
9.18.3.11 selectClockSource()	145

9.18.3.12 selectCompareOutputMode()	 145
9.18.3.13 selectOperationMode()	 146
9.18.3.14 setCounter()	 147
9.18.3.15 setOutputCompareRegister()	 147
9.18.3.16 start()	 147
9.18.3.17 stop()	 148
9.18.4 Member Data Documentation	 148
9.18.4.1externally_visible	 148
9.18.4.2 <u>used</u>	 148
9.18.4.3 m_clockPrescaler	 148
9.18.4.4 m_clockSource	 148
9.19 io::USART0 Class Reference	 149
9.19.1 Detailed Description	 150
9.19.2 Constructor & Destructor Documentation	 150
9.19.2.1 USART0() [1/2]	 150
9.19.2.2 ~USART0()	 151
9.19.2.3 USART0() [2/2]	 151
9.19.3 Member Function Documentation	 151
9.19.3.1 dataOverrun()	 152
9.19.3.2 dataRegisterEmptyServiceRoutine()	 152
9.19.3.3 enableDataRegisterEmptyInterrupt()	 152
9.19.3.4 enableReceiveCompleteInterrupt()	 153
9.19.3.5 enableTransmitCompleteInterrupt()	 153
9.19.3.6 frameError()	 154
9.19.3.7 getInstance()	 154
9.19.3.8 getNumberBytesReceived()	 155
9.19.3.9 getNumberBytesSent()	 155
9.19.3.10 operator=()	 155
9.19.3.11 parityError()	 155
9.19.3.12 ready2Send()	 156
9.19.3.13 receiveChar()	 156
9.19.3.14 receiveCompleteServiceRoutine()	 156
9.19.3.15 receiveFrame()	 157
9.19.3.16 receiveString()	 157
9.19.3.17 resetNumberBytesReceived()	 158
9.19.3.18 sendByte()	 158
9.19.3.19 sendChar()	 158
9.19.3.20 sendFrame()	 159
9.19.3.21 sendLong()	 159
9.19.3.22 sendString()	 160
9.19.3.23 sendWord()	 160
9.19.3.24 setBaudRate()	 160

9.19.3.25 setCommunicationMode()	161
9.19.3.26 setFrameSize()	161
9.19.3.27 setParityMode()	162
9.19.3.28 setStopBit()	163
9.19.3.29 setTransmissionMode()	163
9.19.3.30 transmitCompleteServiceRoutine()	164
9.19.4 Member Data Documentation	164
9.19.4.1externally_visible	164
9.19.4.2 <u>used</u>	164
9.19.4.3 m_numberBytesReceived	164
9.19.4.4 m_numberBytesSent	165
9.19.4.5 m_ready2Send	165
9.19.4.6 m_sizeData2Receive	165
9.19.4.7 m_sizeData2Send	165
9.19.4.8 m_status	165
9.19.4.9 mp_data2Receive	166
9.19.4.10 mp_data2Send	166
9.20 core::WatchdogTimer Class Reference	166
9.20.1 Detailed Description	167
9.20.2 Constructor & Destructor Documentation	167
<b>9.20.2.1 WatchdogTimer()</b> [1/2]	167
$9.20.2.2 \sim WatchdogTimer()$	167
<b>9.20.2.3 WatchdogTimer()</b> [2/2]	167
9.20.3 Member Function Documentation	167
9.20.3.1 getInstance()	168
9.20.3.2 operator=()	168
9.20.3.3 reset()	168
9.20.3.4 selectTimeOut()	168
9.20.3.5 start() [1/2]	169
9.20.3.6 start() [2/2]	169
9.20.3.7 stop()	169
9.20.3.8 timeOutServiceRoutine()	170
9.20.4 Member Data Documentation	170
9.20.4.1externally_visible	170
9.20.4.2used	170
9.20.4.3 m_operationMode	170
9.20.4.4 m_timeOut	170
10 File Documentation	171
10.1 ADC.cpp File Reference	
10.2 ADC.cpp	
10.2 ADC.cpp	
10.0 ABO.II File Helefelice	173

10.4 ADC.h
10.5 AnalogComparator.cpp File Reference
10.6 AnalogComparator.cpp
10.7 AnalogComparator.h File Reference
10.7.1 Macro Definition Documentation
10.7.1.1 ANALOG_COMARATOR_H
10.8 AnalogComparator.h
10.9 Buzzer.cpp File Reference
10.10 Buzzer.cpp
10.11 Buzzer.h File Reference
10.12 Buzzer.h
10.13 buzzer_pitches_16bit.h File Reference
10.13.1 Macro Definition Documentation
10.13.1.1 A0
10.13.1.2 A1
10.13.1.3 A2
10.13.1.4 A3
10.13.1.5 A4
10.13.1.6 A5
10.13.1.7 A6
10.13.1.8 A7
10.13.1.9 Ax0
10.13.1.10 Ax1
10.13.1.11 Ax2
10.13.1.12 Ax3
10.13.1.13 Ax4
10.13.1.14 Ax5
10.13.1.15 Ax6
10.13.1.16 Ax7
10.13.1.17 B0
10.13.1.18 B1
10.13.1.19 B2
10.13.1.20 B3
10.13.1.21 B4
10.13.1.22 B5
10.13.1.23 B6
10.13.1.24 B7
10.13.1.25 C0
10.13.1.26 C1
10.13.1.27 C2
10.13.1.28 C3
10.13.1.29 C4

10.13.1.30 C5
10.13.1.31 C6
10.13.1.32 C7
10.13.1.33 Cx0
10.13.1.34 Cx1
10.13.1.35 Cx2
10.13.1.36 Cx3
10.13.1.37 Cx4
10.13.1.38 Cx5
10.13.1.39 Cx6
10.13.1.40 Cx7
10.13.1.41 D0
10.13.1.42 D1
10.13.1.43 D2
10.13.1.44 D3
10.13.1.45 D4
10.13.1.46 D5
10.13.1.47 D6
10.13.1.48 D7
10.13.1.49 Dx0
10.13.1.50 Dx1
10.13.1.51 Dx2
10.13.1.52 Dx3
10.13.1.53 Dx4
10.13.1.54 Dx5
10.13.1.55 Dx6
10.13.1.56 Dx7
10.13.1.57 E0
10.13.1.58 E1
10.13.1.59 E2
10.13.1.60 E3
10.13.1.61 E4
10.13.1.62 E5
10.13.1.63 E6
10.13.1.64 E7
10.13.1.65 F0
10.13.1.66 F1
10.13.1.67 F2
10.13.1.68 F3
10.13.1.69 F4
10.13.1.70 F5
10.13.1.71 F6

10.13.1.72 F7	 . 198
10.13.1.73 Fx0	 . 198
10.13.1.74 Fx1	 . 198
10.13.1.75 Fx2	 . 198
10.13.1.76 Fx3	 . 198
10.13.1.77 Fx4	 . 199
10.13.1.78 Fx5	 . 199
10.13.1.79 Fx6	 . 199
10.13.1.80 Fx7	 . 199
10.13.1.81 G0	 . 199
10.13.1.82 G1	 . 199
10.13.1.83 G2	 . 200
10.13.1.84 G3	 . 200
10.13.1.85 G4	 . 200
10.13.1.86 G5	 . 200
10.13.1.87 G6	 . 200
10.13.1.88 G7	 . 200
10.13.1.89 Gx0	 . 201
10.13.1.90 Gx1	 . 201
10.13.1.91 Gx2	 . 201
10.13.1.92 Gx3	 . 201
10.13.1.93 Gx4	 . 201
10.13.1.94 Gx5	 . 201
10.13.1.95 Gx6	 . 202
10.13.1.96 Gx7	
10.14 buzzer_pitches_16bit.h	 . 202
10.15 buzzer_pitches_8bit.h File Reference	 . 203
10.15.1 Macro Definition Documentation	 . 204
10.15.1.1 A0	 . 204
10.15.1.2 A1	 . 204
10.15.1.3 A2	 . 204
10.15.1.4 Ax0	 . 205
10.15.1.5 Ax1	 . 205
10.15.1.6 Ax2	 . 205
10.15.1.7 B0	 . 205
10.15.1.8 B1	 . 205
10.15.1.9 B2	 . 205
10.15.1.10 C1	 . 206
10.15.1.11 C2	 . 206
10.15.1.12 C3	 . 206
10.15.1.13 Cx0	 . 206
10.15.1.14 Cx2	 . 206

10.15.1.15 Cx3	06
10.15.1.16 D1	07
10.15.1.17 D2	07
10.15.1.18 D3	07
10.15.1.19 Dx0	07
10.15.1.20 Dx2	07
10.15.1.21 Dx3	07
10.15.1.22 E1	80
10.15.1.23 E2	80
10.15.1.24 E3	80
10.15.1.25 F1	80
10.15.1.26 F2	80
10.15.1.27 F3	80
10.15.1.28 Fx1	09
10.15.1.29 Fx2	09
10.15.1.30 Fx3	09
10.15.1.31 G1	09
10.15.1.32 G2	09
10.15.1.33 G3	09
10.15.1.34 Gx0	10
10.15.1.35 Gx1	10
10.15.1.36 Gx2	10
10.16 buzzer_pitches_8bit.h	
10.17 DCMotor.cpp File Reference	11
10.18 DCMotor.cpp	11
10.19 DCMotor.h File Reference	11
10.19.1 Detailed Description	12
10.20 DCMotor.h	14
10.21 ExternInterrupt.cpp File Reference	14
10.22 ExternInterrupt.cpp	15
10.23 ExternInterrupt.h File Reference	16
10.23.1 Detailed Description	17
10.24 ExternInterrupt.h	19
10.25 ha_base.h File Reference	20
10.25.1 Detailed Description	20
10.25.2 Macro Definition Documentation	21
10.25.2.1 STR	21
10.25.2.2 STRx	21
10.26 ha_base.h	21
10.27 ha_m328p.h File Reference	
10.27.1 Detailed Description	25
10.27.2 Macro Definition Documentation	26

10.27.2.1 ADC_ADJUST_RESULT_LEFT	. 22	26
10.27.2.2 ADC_ADJUST_RESULT_RIGHT	. 22	26
10.27.2.3 ADC_CONVERSION_COMPLETE_INTERRUPT	. 22	26
10.27.2.4 ADC_DISABLE	. 22	26
10.27.2.5 ADC_DISABLE_AUTOTRIGGER	. 22	27
10.27.2.6 ADC_DISABLE_CONVERSION_COMPLETE_INTERRUPT	. 22	27
10.27.2.7 ADC_DISABLE_DIGITAL_INPUT_REGISTER	. 22	27
10.27.2.8 ADC_ENABLE		
10.27.2.9 ADC_ENABLE_AUTOTRIGGER	. 22	27
10.27.2.10 ADC_ENABLE_CONVERSION_COMPLETE_INTERRUPT	. 22	27
10.27.2.11 ADC_SELECT_ANALOG_INPUT	. 22	28
10.27.2.12 ADC_SELECT_AUTO_TRIGGER_SOURCE	. 22	28
10.27.2.13 ADC_SELECT_CLOCK_PRESCALER	. 22	28
10.27.2.14 ADC_SELECT_REF_VOLTAGE	. 22	28
10.27.2.15 ADC_START_CONVERSION	. 22	28
10.27.2.16 ADC_STOP_CONVERSION	. 22	28
10.27.2.17 EXT_INT_DISABLE_INT0	. 22	29
10.27.2.18 EXT_INT_DISABLE_INT1	. 22	29
10.27.2.19 EXT_INT_DISABLE_PIN_CHANGE_INTERRUPT	. 22	29
10.27.2.20 EXT_INT_DISABLE_PIN_CHANGE_MASK_PORTB	. 22	29
10.27.2.21 EXT_INT_DISABLE_PIN_CHANGE_MASK_PORTC	. 22	29
10.27.2.22 EXT_INT_DISABLE_PIN_CHANGE_MASK_PORTD	. 22	29
10.27.2.23 EXT_INT_ENABLE_INT0	. 23	0
10.27.2.24 EXT_INT_ENABLE_INT1	. 23	0
10.27.2.25 EXT_INT_ENABLE_PIN_CHANGE_INTERRUPT	. 23	0
10.27.2.26 EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTB	. 23	0
10.27.2.27 EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTC	. 23	0
10.27.2.28 EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD	. 23	0
10.27.2.29 EXT_INT_INT0_INTERRUPT	. 23	31
10.27.2.30 EXT_INT_INT1_INTERRUPT	. 23	11
10.27.2.31 EXT_INT_PIN_CHANGE_PORTB_INTERRUPT	. 23	1
10.27.2.32 EXT_INT_PIN_CHANGE_PORTC_INTERRUPT	. 23	1
10.27.2.33 EXT_INT_PIN_CHANGE_PORTD_INTERRUPT	. 23	31
10.27.2.34 EXT_INT_SET_INT0_SENSE_CONTROL	. 23	1
10.27.2.35 EXT_INT_SET_INT1_SENSE_CONTROL	. 23	2
10.27.2.36 MCU_ADC_DISABLE	. 23	2
10.27.2.37 MCU_ADC_ENABLE	. 23	2
10.27.2.38 MCU_BOD_DISABLE	. 23	12
10.27.2.39 MCU_SELECT_SLEEP_MODE	. 23	2
10.27.2.40 MCU_SLEEP_DISABLE	. 23	2
10.27.2.41 MCU_SLEEP_ENABLE	. 23	3
10.27.2.42 MCU SPI DISABLE	. 23	3

10.27.2.43 MCU_SPI_ENABLE
10.27.2.44 MCU_TIMER0_DISABLE
10.27.2.45 MCU_TIMER0_ENABLE
10.27.2.46 MCU_TIMER1_DISABLE
10.27.2.47 MCU_TIMER1_ENABLE
10.27.2.48 MCU_TIMER2_DISABLE
10.27.2.49 MCU_TIMER2_ENABLE
10.27.2.50 MCU_TWI_DISABLE
10.27.2.51 MCU_TWI_ENABLE
10.27.2.52 MCU_USART0_DISABLE
10.27.2.53 MCU_USART0_ENABLE
10.27.2.54 PUSHBUTTON_DEBOUNCE_TIME_US
10.27.2.55 PUSHBUTTON_SAMPLING
10.27.2.56 SERVOMOTOR_TIMER_ANGLE_COUNT
10.27.2.57 SERVOMOTOR_TIMER_PULSE_WIDTH_COUNT
10.27.2.58 SPI_CONTROL_REGISTER
10.27.2.59 SPI_DATA_REGISTER
10.27.2.60 SPI_DISABLE
10.27.2.61 SPI_DISABLE_TRANSFER_COMPLETE_INTERRUPT
10.27.2.62 SPI_ENABLE
10.27.2.63 SPI_ENABLE_TRANSFER_COMPLETE_INTERRUPT
10.27.2.64 SPI_MASTER_MODE
10.27.2.65 SPI_SELECT_CLOCK_PRESCALER
10.27.2.66 SPI_SELECT_DATA_MODE
10.27.2.67 SPI_SELECT_DATA_ORDER
10.27.2.68 SPI_SELECT_MASTER_MODE
10.27.2.69 SPI_SELECT_SLAVE_MODE
10.27.2.70 SPI_STATUS_REGISTER
10.27.2.71 SPI_TRANSFER_COMPLETE
10.27.2.72 SPI_TRANSFER_COMPLETE_INTERRUPT
10.27.2.73 SPI_WRITE_COLLISION
10.27.2.74 TIMERO_COM_CHANNEL_A_INTERRUPT
10.27.2.75 TIMERO_COM_CHANNEL_B_INTERRUPT
10.27.2.76 TIMERO_DISABLE_COM_CHANNEL_A_INTERRUPT 239
10.27.2.77 TIMERO_DISABLE_COM_CHANNEL_B_INTERRUPT 239
10.27.2.78 TIMERO_DISABLE_OVERFLOW_INTERRUPT
10.27.2.79 TIMERO_ENABLE_COM_CHANNEL_A_INTERRUPT
10.27.2.80 TIMERO_ENABLE_COM_CHANNEL_B_INTERRUPT
10.27.2.81 TIMERO_ENABLE_OVERFLOW_INTERRUPT
10.27.2.82 TIMERO_OVERFLOW_INTERRUPT
10.27.2.83 TIMER0_SELECT_CLOCK_SOURCE
10.27.2.84 TIMER0_SELECT_COM_CHANNEL_A

10.27.2.85 TIMER0_SELECT_COM_CHANNEL_B	240
10.27.2.86 TIMER0_SELECT_OPERATION_MODE	240
10.27.2.87 TIMER0_STOP	240
10.27.2.88 TIMER1_COM_CHANNEL_A_INTERRUPT	241
10.27.2.89 TIMER1_COM_CHANNEL_B_INTERRUPT	241
10.27.2.90 TIMER1_DISABLE_COM_CHANNEL_A_INTERRUPT	241
10.27.2.91 TIMER1_DISABLE_COM_CHANNEL_B_INTERRUPT	241
10.27.2.92 TIMER1_DISABLE_INPUT_CAPTURE_INTERRUPT	241
10.27.2.93 TIMER1_DISABLE_OVERFLOW_INTERRUPT	241
10.27.2.94 TIMER1_ENABLE_COM_CHANNEL_A_INTERRUPT	242
10.27.2.95 TIMER1_ENABLE_COM_CHANNEL_B_INTERRUPT	242
10.27.2.96 TIMER1_ENABLE_INPUT_CAPTURE_INTERRUPT	242
10.27.2.97 TIMER1_ENABLE_OVERFLOW_INTERRUPT	242
10.27.2.98 TIMER1_INPUT_CAPTURE_INTERRUPT	242
10.27.2.99 TIMER1_OVERFLOW_INTERRUPT	242
10.27.2.100 TIMER1_SELECT_CLOCK_SOURCE	243
10.27.2.101 TIMER1_SELECT_COM_CHANNEL_A	243
10.27.2.102 TIMER1_SELECT_COM_CHANNEL_B	243
10.27.2.103 TIMER1_SELECT_OPERATION_MODE	243
10.27.2.104 TIMER1_STOP	243
10.27.2.105 TIMER2_COM_CHANNEL_A_INTERRUPT	243
10.27.2.106 TIMER2_COM_CHANNEL_B_INTERRUPT	244
10.27.2.107 TIMER2_DISABLE_COM_CHANNEL_A_INTERRUPT	244
10.27.2.108 TIMER2_DISABLE_COM_CHANNEL_B_INTERRUPT	244
10.27.2.109 TIMER2_DISABLE_OVERFLOW_INTERRUPT	244
10.27.2.110 TIMER2_ENABLE_COM_CHANNEL_A_INTERRUPT	244
10.27.2.111 TIMER2_ENABLE_COM_CHANNEL_B_INTERRUPT	244
10.27.2.112 TIMER2_ENABLE_OVERFLOW_INTERRUPT	245
10.27.2.113 TIMER2_OVERFLOW_INTERRUPT	245
10.27.2.114 TIMER2_SELECT_CLOCK_SOURCE	245
10.27.2.115 TIMER2_SELECT_COM_CHANNEL_A	245
10.27.2.116 TIMER2_SELECT_COM_CHANNEL_B	245
10.27.2.117 TIMER2_SELECT_OPERATION_MODE	245
10.27.2.118 TIMER2_STOP	246
10.27.2.119 USARTO_CONTROL_STATUS_REGISTER	246
10.27.2.120 USARTO_DATA_OVERRUN	246
10.27.2.121 USARTO_DATA_REGISTER	246
10.27.2.122 USARTO_DATA_REGISTER_EMPTY_INTERRUPT	246
10.27.2.123 USARTO_DISABLE_DATA_REGISTER_EMPTY_INTERRUPT	246
10.27.2.124 USARTO_DISABLE_DOUBLE_SPEED_MODE [1/2]	247
10.27.2.125 USARTO_DISABLE_DOUBLE_SPEED_MODE [2/2]	247
10.27.2.126 USARTO DISABLE PARITY MODE	247

10.27.2.127 USARTO_DISABLE_RECEIVE_COMPLETE_INTERRUPT 247
10.27.2.128 USART0_DISABLE_RECEIVER
10.27.2.129 USARTO_DISABLE_TRANSMIT_COMPLETE_INTERRUPT
10.27.2.130 USARTO_DISABLE_TRANSMITTER
10.27.2.131 USARTO_ENABLE_ASYNC_TRANSMISSION_MODE
10.27.2.132 USARTO_ENABLE_DATA_REGISTER_EMPTY_INTERRUPT 248
10.27.2.133 USART0_ENABLE_DOUBLE_SPEED_MODE
10.27.2.134 USART0_ENABLE_EVEN_PARITY_MODE
10.27.2.135 USART0_ENABLE_MASTER_SPI_MODE
10.27.2.136 USART0_ENABLE_ODD_PARITY_MODE
10.27.2.137 USARTO_ENABLE_RECEIVE_COMPLETE_INTERRUPT 249
10.27.2.138 USART0_ENABLE_RECEIVER
10.27.2.139 USARTO_ENABLE_SYNC_TRANSMISSION_MODE
10.27.2.140 USARTO_ENABLE_TRANSMIT_COMPLETE_INTERRUPT 249
10.27.2.141 USARTO_ENABLE_TRANSMITTER
10.27.2.142 USART0_FRAME_ERROR
10.27.2.143 USART0_PARITY_ERROR
10.27.2.144 USART0_RECEIVE_COMPLETE_INTERRUPT
10.27.2.145 USART0_SET_5BIT_FRAME_SIZE
10.27.2.146 USART0_SET_6BIT_FRAME_SIZE
10.27.2.147 USART0_SET_7BIT_FRAME_SIZE
10.27.2.148 USART0_SET_8BIT_FRAME_SIZE
10.27.2.149 USART0_SET_9BIT_FRAME_SIZE
10.27.2.150 USART0_SET_BAUDRATE_HIGH_REGISTER
10.27.2.151 USART0_SET_BAUDRATE_LOW_REGISTER
10.27.2.152 USART0_SET_ONE_STOP_BIT
10.27.2.153 USART0_SET_TWO_STOP_BITS
10.27.2.154 USART0_TRANSMIT_COMPLETE_INTERRUPT
10.27.2.155 WATCHDOG_SELECT_TIMEOUT
10.27.2.156 WATCHDOG_START
10.27.2.157 WATCHDOG_STOP
10.27.2.158 WATCHDOG_TIMEOUT_INTERRUPT
10.28 ha_m328p.h
10.29 LCD.cpp File Reference
10.30 LCD.cpp
10.31 LCD.h File Reference
10.32 LCD.h
10.33 LDR.cpp File Reference
10.34 LDR.cpp
10.35 LDR.h File Reference
10.36 LDR.h
10.37 Led.cpp File Reference

10.38 Led.cpp
10.39 Led.h File Reference
10.40 Led.h
10.41 main.cpp File Reference
10.41.1 Detailed Description
10.41.2 Macro Definition Documentation
10.41.2.1 LED
10.41.2.2 TIMEDELAY
10.41.3 Function Documentation
10.41.3.1 main()
10.42 BlinkLed/main.cpp
10.43 main.cpp File Reference
10.43.1 Detailed Description
10.43.2 Macro Definition Documentation
10.43.2.1 LDRVD
10.43.2.2 LED0
10.43.2.3 LED1
10.43.2.4 LED2
10.43.2.5 LED3
10.43.2.6 LED4
10.43.2.7 LED5
10.43.2.8 LED6
10.43.2.9 LED7
10.43.3 Function Documentation
10.43.3.1 main()
10.44 main.cpp
10.45 main.cpp File Reference
10.45.1 Detailed Description
10.45.2 Macro Definition Documentation
10.45.2.1 BUZZER
10.45.2.2 PUSHBUTTON
10.45.2.3 SONG_LENGTH
10.45.3 Function Documentation
10.45.3.1 main()
10.46 MusicBox/main.cpp
10.47 main.cpp File Reference
10.47.1 Detailed Description
10.47.2 Macro Definition Documentation
10.47.2.1 BUZZER
10.47.2.2 NOTE_DURATION
10.47.3 Function Documentation
10.47.3.1 main()

10.48 Organ/main.cpp
10.49 MCU.cpp File Reference
10.50 MCU.cpp
10.51 MCU.h File Reference
10.51.1 Detailed Description
10.52 MCU.h
10.53 Pin.cpp File Reference
10.54 Pin.cpp
10.55 Pin.h File Reference
10.56 Pin.h
10.57 PushButton.cpp File Reference
10.58 PushButton.cpp
10.59 PushButton.h File Reference
10.60 PushButton.h
10.61 README.md File Reference
10.62 README.md File Reference
10.63 README.md File Reference
10.64 README.md File Reference
10.65 README.md File Reference
10.66 README.md File Reference
10.67 README.md File Reference
10.68 ServoMotor.cpp File Reference
10.69 ServoMotor.cpp
10.70 ServoMotor.h File Reference
10.70.1 Detailed Description
10.71 ServoMotor.h
10.72 SPI.cpp File Reference
10.73 SPI.cpp
10.74 SPI.h File Reference
10.74.1 Detailed Description
10.75 SPI.h
10.76 StepperMotor.cpp File Reference
10.77 StepperMotor.cpp
10.78 StepperMotor.h File Reference
10.79 StepperMotor.h
10.80 TimerCounter.h File Reference
10.80.1 Detailed Description
10.81 TimerCounter.h
10.82 TimerCounter0.cpp File Reference
10.83 TimerCounter0.cpp
10.84 TimerCounter0.h File Reference
10.85 TimerCounter0.h

Ind	lex	351
	10.105 WatchdogTimer.h	349
	10.104.1 Detailed Description	348
	10.104 WatchdogTimer.h File Reference	346
	10.103 WatchdogTimer.cpp	345
	10.102 WatchdogTimer.cpp File Reference	345
	10.101 utils_m328p.h	345
	10.100 utils_m328p.h File Reference	344
	10.99 utils_m328p.cpp	344
	10.98 utils_m328p.cpp File Reference	344
	10.97 USARTO.h	342
	10.96 USART0.h File Reference	
	10.95 USART0.cpp	
	10.94 USART0.cpp File Reference	336
	10.93 TimerCounter2.h	335
	10.92 TimerCounter2.h File Reference	
	10.91 TimerCounter2.cpp	330
	10.90 TimerCounter2.cpp File Reference	330
	10.89 TimerCounter1.h	329
	10.88 TimerCounter1.h File Reference	328
	10.87 TimerCounter1.cpp	
	10.86 TimerCounter1.cpp File Reference	

# **Chapter 1**

## Introduction

**TahakomAVRLib** is a C++ library to program Atmel AVR microcontrollers. The library make use of the AVR standard C library and is written for easy usage.

Currently, the classes compile on the ATmega48P/88P/168P/328P AVR microcontrollers family.

## 1.1 Library structure

The library is composed of several classes that abstract the internal elements of a microcontroller and some external components that when hooked up to the chip can perform some actions.

These classes implement all functionalities and are organized into the namespaces:

- core
- io (input/output)
- or components

 ${\bf Several \ Applications \ and \ Projects \ are \ implemented \ in \ order \ to \ demonstrate \ the \ library \ usage.}$ 

A more detailed description of the code listings can be found in the library documentation (generated by Doxygen)

## 1.2 Software setup

Before using the library and start programming and interfacing external peripherals, some software packages need to be installed in your system:

- binutils-avr: for getting tools like assembler, linker,  $\dots$
- gcc-avr : AVR GNU C cross-compiler
- avr-libc: AVR C library
- avrdude : driver program for downloading/uploading code and data from/to Atmel AVR microcontrollers

2 Introduction

### 1.2.1 Linux

In Linux (Ubuntu in my case), the software packages can be installed as follows:

```
sudo apt-get update
sudo apt-get install gcc build-essential
sudo apt-get install gcc-avr binutils-avr avr-libc gdb-avr
sudo apt-get install avrdude
```

#### 1.2.2 Windows

In Windows, the software packages can be downloaded and installed as follows:

- AVR toolchain for windows: can be downloaded from the Atmel's website download
- avrdude: can be downloaded from download
- make: can be downloaded from download
- cmake: binary distribution can be downloaded from download

An alternative, would be to download the precompiled AVR-GCC toolchain from download that also include avrdude and make utilities but not cmake.

Before using these software tools, you need to update the **PATH** environement variable with the file paths to their executables and restart the system.

## 1.3 Compile and Flash programs

To compile and flash a program code to the AVR chip via USB port, you need to:

- · Install the USB driver for the programmer used
- Adapt the CMakeLists.txt parameters to your system configuration:
  - MCU: AVR chip used
  - F\_CPU: AVR CPU frequency
  - BAUD: Baude rate for serial communication
  - PROG\_TYPE: Programmer type
  - AVRFLASH\_PORT: Flash port name
- Change compiler flags if necessary
   and execute the following steps (shown for the Blink a Led application):

### 1.3.1 Linux

```
../BlinkLed$ mkdir build
../BlinkLed$ cd build
../BlinkLed/build$ cmake ..
../BlinkLed/build$ make flash
```

1.4 Hardware setup 3

### 1.3.2 Windows

```
../BlinkLed$ mkdir build
../BlinkLed$ cd build
../BlinkLed/build$ cmake .. -G "Unix Makefiles"
../BlinkLed/build$ make flash
```

## 1.4 Hardware setup

- · AVR chip either barebone or on a development board like an Arduino UNO
- · A bunch of Leds, resistors, drivers, sensors and actuators
- · A breadboard
- · Jumper wires
- · An AVR ISPProgrammer (optional)

## 1.5 Applications

These applications demonstrate the usage of **TahakomAVRLib** in simple examples:

- Blink a Led
- AVR Square-Wave Organ
- AVR Music Box

## 1.6 Projects

These are more complex projects implemented using TahakomAVRLib

## 1.7 Author

- · Farid Oubbati
- · Date: 12-May-2018
- · Copyright (c) 2018

### 1.8 License

This project is licensed under the MIT License - see the LICENSE.txt file for more details

4 Introduction

# **Chapter 2**

# **Applications**

These applications demonstrate the usage of **TahakomAVRLib** in simple examples. Some of the examples are directly inspired from the book Make: AVR Programming, Elliot Williams:

- Blink a Led
- AVR Square-Wave Organ
- AVR Music Box
- Light Meter

## 2.1 Blink a Led

This example demonstrates the library usage in a simple blink a Led example. It also shows how to use the Pin and Led abstraction objects.

The pinout of the ATmega48P/88P/168P/328P AVR microcontrollers family is illustrated bellow:

6 Applications

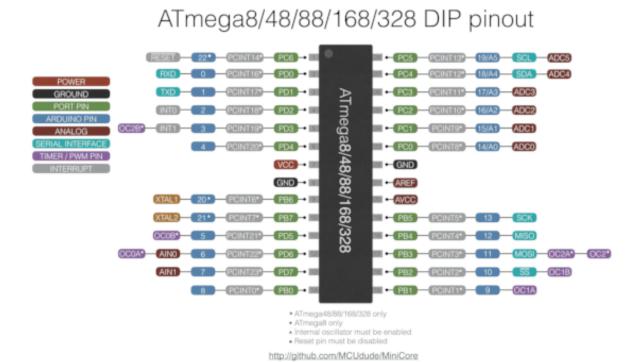


Figure 2.1 Pinout of ATmega48P/88P/168P/328P AVR microcontrollers family

### 2.1.1 Hardware


- · Arduino UNO
- · generic Led
- · 220 ohm current limiting resistor
- A breadboard

### 2.1.2 Circuit

The Led with the current limiting resistor are connected to pin PB0 (digital pin 8 in Arduino UNO).

The circuit connection is as follows:

2.1 Blink a Led 7

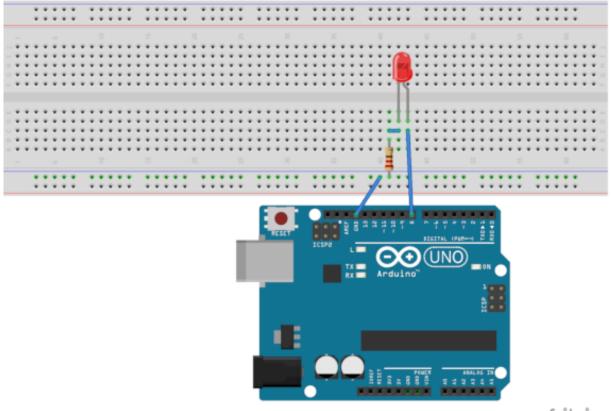

fritzing

Figure 2.2 Circuit diagram

### 2.1.3 Code

The following code blinks the Led with a delay of 500 ms:

```
#include "Led.h"
#define LED 0 /**< Led pin number */
#define LED 0 /**< Led pin number */
#define TIMEDELAY 500 /**< Time delay */
int main(void) {
    // Init
    // Instantiate a Led object
    component::Led Led(io::Pin(LED,io::PortB));
    // Mainloop
    while (1) {
        Led.on();
        _delay_ms(TIMEDELAY);
        Led.off();
        _delay_ms(TIMEDELAY);
}
return 0;</pre>
```

### **2.1.4** Author

· Farid Oubbati

• Date: 12-May-2018

• Copyright (c) 2018

8 Applications

### 2.1.5 License

This project is licensed under the MIT License - see the LICENSE.txt file for more details

## 2.2 AVR Square-Wave Organ

This example enables the user to enter a key note via a serial terminal and play the corresponding note in a Buzzer. It also shows how to use the Buzzer and USARTO abstraction objects.

The pinout of the ATmega48P/88P/168P/328P AVR microcontrollers family is illustrated bellow:

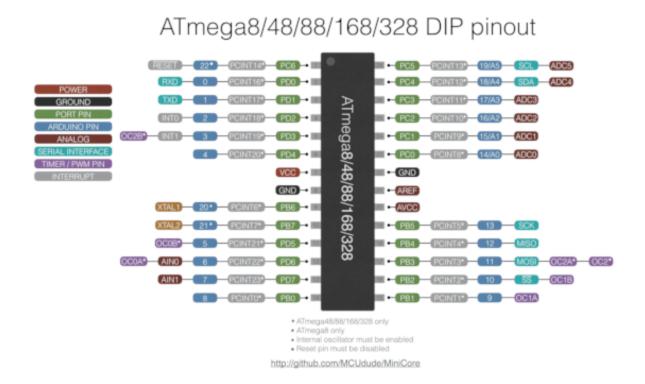


Figure 2.3 Pinout of ATmega48P/88P/168P/328P AVR microcontrollers family


### 2.2.1 Hardware

- · Arduino UNO
- · Piezo speaker/Buzzer
- · 100 ohm current limiting resistor
- · A breadboard

### 2.2.2 Circuit

The Buzzer with the current limiting resistor are connected to pin PB0 (digital pin 8 in Arduino UNO).

The circuit connection is as follows:

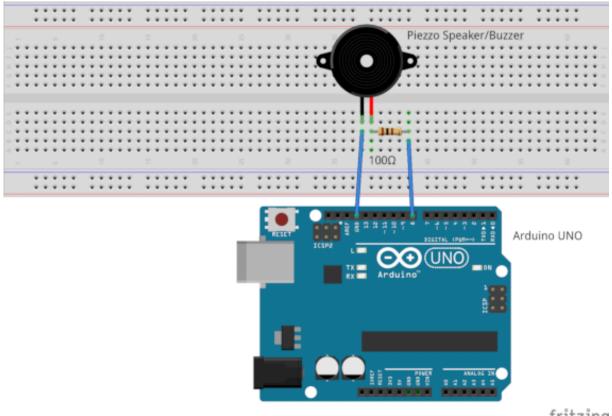

fritzing

Figure 2.4 Circuit diagram

### 2.2.3 Code

The following code permits to turn a Buzzer into an Organ that plays notes entered by a user via a serial terminal (GTKTerm serial port terminal is used):

```
#include "Buzzer.h"
#include "USARTO.h"
#include "buzzer_pitches_16bit.h"
#define BUZZER 0 /**< Buzzer pin number */
#define NOTE_DURATION 0xF000 /**< Note duration */
int main(void) {
 // Init
// Instantiate a Buzzer object
 component::Buzzer Buzzer(io::Pin(BUZZER,io::PortB));
 // Instantiate a USARTO object
 io::USART0 &myUSART0 = io::USART0::getInstance();
 const uint16_t l_notes[] = { G4, Gx4, A4, Ax4, B4, C5, Cx5,
    D5, Dx5, E5, F5, Fx5, G5, Gx5, A5, Ax5, B5, C6
 // Character key from computer serial terminal
```

10 Applications

```
unsigned char l_key;
// Current note length
uint16_t l_currentNoteLength = NOTE_DURATION;
// Check if note key
uint8 t l isNote;
myUSARTO.sendString("---- Serial Organ ----\r\n");
// Mainloop
while (1) {
    // Send N to signal that AVR chip is ready for next key note input
    myUSARTO.sendString("Enter key note\r^n);
    // Wait for key note input while (myUSARTO.getNumberBytesReceived()==0)
            myUSART0.receiveChar(1_key);
    myUSART0.resetNumberBytesReceived();
    /****** Play key notes *******/
    l_isNote = 0;
    // loop through keys table
    for (uint8_t i = 0; i < sizeof(l_keys); i++) {
         // found match in lookup table
        if (l_key == l_keys[i]) {
            Buzzer.buzz(l_notes[i], l_currentNoteLength);
            // record that we've found a note
            1_isNote = 1;
            break;
    // Handle non-note keys: tempo changes and rests
    if (!l_isNote) {
    if (l_key == '-') {
             // code for short note
            1_currentNoteLength = 1_currentNoteLength / 2;
        else if (l_key == '+') {
    // code for long note
            1_currentNoteLength = 1_currentNoteLength * 2;
        else {
             // unrecognized, just rest
            Buzzer.pause(l_currentNoteLength);
        }
    }
return 0;
```

### 2.2.4 Author

· Farid Oubbati

Date: 12-May-2018

· Copyright (c) 2018

### 2.2.5 License

This project is licensed under the MIT License - see the LICENSE.txt file for more details

### 2.3 AVR Music Box

This example allows the user to play a predefined song in a Buzzer and control its tempo via a PushButton It also demonstrates the use of the Buzzer and PushButton abstraction objects.

The pinout of the ATmega48P/88P/168P/328P AVR microcontrollers family is illustrated bellow:

2.3 AVR Music Box

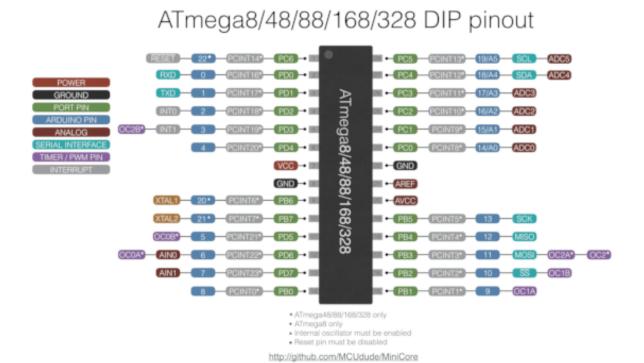


Figure 2.5 Pinout of ATmega48P/88P/168P/328P AVR microcontrollers family

#### 2.3.1 Hardware

- · Arduino UNO
- · Piezo speaker/Buzzer
- · 100 ohm current limiting resistor
- Switch/PushButton
- A breadboard

# 2.3.2 Circuit

The Buzzer with the current limiting resistor are connected to pin PB0 (digital pin 8 in Arduino UNO) and the Push 

Button is connected to PB1 (digital pin 9 in Arduino UNO).

The circuit connection is as follows:

12 Applications

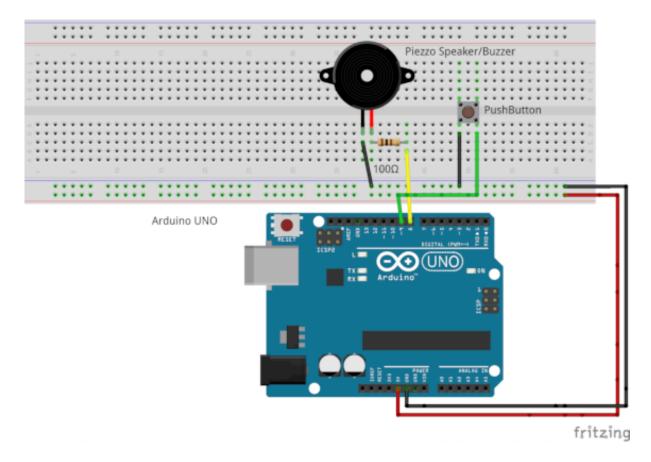


Figure 2.6 Circuit diagram

#### 2.3.3 Code

The following code permits to turn a Buzzer into a Music Box that plays a predefined song which tempo is controlled by a PushButton:

```
#include "Buzzer.h"
#include "PushButton.h"
#include "buzzer_pitches_16bit.h"
#define BUZZER 0 /**< Buzzer pin number */
#define PUSHBUTTON 1 /**< PushButton pin number */
#define SONG_LENGTH (sizeof(1_song) / sizeof(uint16_t)) /**< Song length */
int main(void) {
         // Init
// Instantiate a Buzzer object
         component::Buzzer Buzzer(io::Pin(BUZZER,io::PortB));
          // Instantiate a PushButton object
          component::PushButton PushButton(io::Pin(PUSHBUTTON,io::PortB));
           // Song notes
          const uint16_t l_song[] = {
        Const difficing to a state of the constraint of 
         };
// Start song at start

         uint8_t l_note = SONG_LENGTH - 1;
// Initialize PushButton state
         uint8_t l_statePushButton = 0;
           // Mainloop
         while (1) {
    // Check if PusgButton is pressed
                            if (PushButton.isPressed())
                                                 // Check if a new button press
                                               if (!l_statePushButton) {
```

2.4 Light Meter 13

# 2.3.4 Author

- · Farid Oubbati
- Date: 12-May-2018
- Copyright (c) 2018

### 2.3.5 License

This project is licensed under the MIT License - see the  $\ \ \$  LICENSE.txt file for more details

# 2.4 Light Meter

This example presents an AVR based Light Meter that displays its Lux measurements in a Led bank It also demonstrates the use of the LED, LDR and ADC abstraction objects.

The pinout of the ATmega48P/88P/168P/328P AVR microcontrollers family is illustrated bellow:

14 Applications

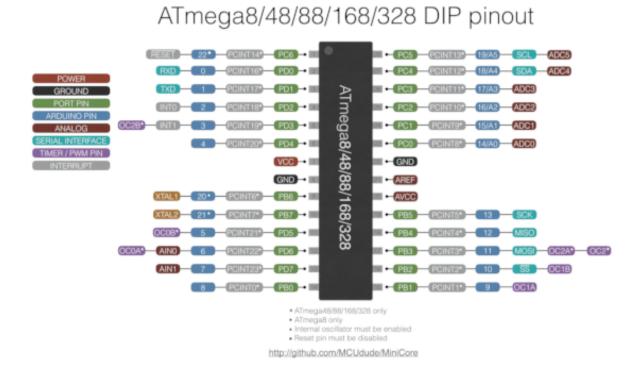


Figure 2.7 Pinout of ATmega48P/88P/168P/328P AVR microcontrollers family

### 2.4.1 Hardware

- · Arduino UNO
- Light Dependant Resistor (LDR)
- · 5 kOhm resistor or a Potentiometer
- · A breadboard

#### 2.4.2 Circuit

The LDR is a passive component. To measure its resistance change we have to send a current in the component between two potentials. We have to create a voltage divider bridge using the LDR and the 5 kOhm resistor. The voltage divider output is read by the AVR Analog-to-Digial-Converter via pin PC0 (A0 pin in Arduino UNO). The light Lux measurements are displayed in a Led bank.

The circuit connection is as follows:

2.4 Light Meter 15

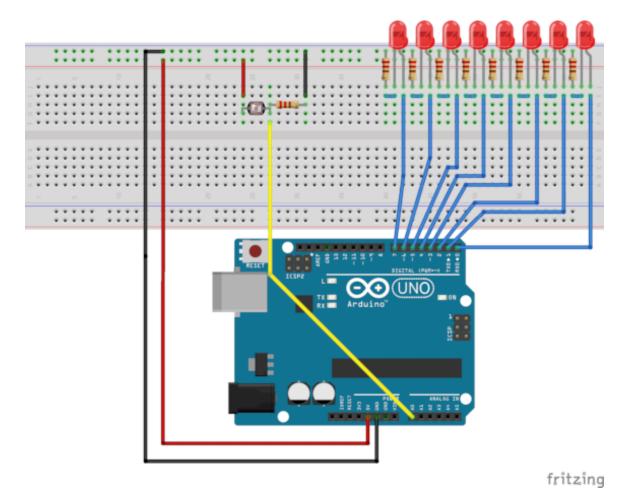


Figure 2.8 Circuit diagram

# 2.4.3 Code

The following code permits to run the AVR based Light Meter that displays its Lux measurements in a Led bank:

```
#include "Led.h"
#include "ADC.h"
#include "LDR.h"
#define LEDO 0 /**< Led 0 */
#define LED1 1 /**< Led 1 */
#define LED2 2 /**< Led 2 */
#define LED3 3 /**< Led 3 */
#define LED4 4 /**< Led 4 */
#define LED5 5 /**< Led 5 */
#define LED6 6 /**< Led 6 */
#define LED7 7 /**< Led 7 */
#define LDRVD 0 /**< LDR */
int main(void) {
  // Init
// Instantiate Led objects
component::Led Led[8]={
          {io::Pin(LEDO,io::PortD)},
          {io::Pin(LED1,io::PortD)},
          {io::Pin(LED2,io::PortD)},
           {io::Pin(LED3,io::PortD)},
          {io::Pin(LED4,io::PortD)},
          {io::Pin(LED5,io::PortD)},
          {io::Pin(LED6,io::PortD)},
{io::Pin(LED7,io::PortD)}};
  // Instantiate ADC object
  core::ADConverter &myADC = core::ADConverter::getInstance();
  // Start conversion
  myADC.start();
// Instantiate LDR object
  component::LDR LDR(io::Pin(LDRVD,io::PortC),myADC);
  // Mainloop
```

16 Applications

```
while (1) {
   for (uint8_t i=0;i<=(7-(LDR.getLux(5) & 7));i++)
   {
       Led[i].on();
   }
   for (uint8_t i=(7-(LDR.getLux(5) & 7))+1;i<8;i++)
   {
       Led[i].off();
   }
}
return 0;</pre>
```

# **2.4.4** Author

· Farid Oubbati

• Date: 12-May-2018

· Copyright (c) 2018

# 2.4.5 License

This project is licensed under the MIT License - see the LICENSE.txt file for more details

# **README**

18 README

# Namespace Index

# 4.1 Namespace List

Here is a list of all namespaces with brief descriptions:

comp	pnent	
	AVR chip external components	27
core		
	AVR chip internal core components	28
io	AVD 11 11 11/	
	AVR chip internal i/o components	37
utils		43

20 Namespace Index

# **Hierarchical Index**

# 5.1 Class Hierarchy

This inheritance list is sorted roughly, but not completely, alphabetically:

core::ADConverter	45
core::AnalogComparator	55
component::Buzzer	55
component::DCMotor	59
core::ExternInterrupt	62
component::LDR	68
component::Led	71
	75
io::Pin	80
io::Port	85
component::PushButton	87
component::ServoMotor	91
io::SPI	97
component::StepperMotor	05
core::TimerCounter	15
core::TimerCounter0	18
core::TimerCounter1	28
core::TimerCounter2	39
io::USART0	49
core::WatchdogTimer	66

22 Hierarchical Index

# **Class Index**

# 6.1 Class List

Here are the classes, structs, unions and interfaces with brief descriptions:

core::ADConverter
Class for handling ADC
core::AnalogComparator
component::Buzzer
Class for handling a Buzzer component
component::DCMotor
core::ExternInterrupt
component::LDR
Class for handling an LDR component
component::Led
Class for handling a Led component
core::MCU 75
io::Pin
Class for handling a Pin 80
io::Port
Contains defintions of pointers to the AVR port's registers
component::PushButton
Class for handling a PushButton component
component::ServoMotor
io::SPI
component::StepperMotor
core::TimerCounter
core::TimerCounter0
core::TimerCounter1
core::TimerCounter2
io::USART0
Class for handling USART0
core::WatchdogTimer

24 Class Index

# File Index

# 7.1 File List

Here is a list of all files with brief descriptions:

	171
	175
AnalogComparator.cpp	
	178
and the state of t	180
	181
<del></del>	184
buzzer_pitches_8bit.h	203
DCMotor.cpp	211
DCMotor.h	
Header file of the DCMotor class	211
ExternInterrupt.cpp	214
ExternInterrupt.h	
Header file of the ExternInterrupt class	216
ha base.h	
Base header file for the basic hardware abstraction macros	220
ha m328p.h	
Header file for the hardware abstraction macros of the Atmega328p	222
	257
	257
LDR.cpp	257
	258
	259
	260
	262
	264
	268
	272
	276
MCU.h	
	278
	281
Pin.h	
PushButton.cpp	_
PushButton.h	

26 File Index

ServoMotor.cpp
ServoMotor.h
Header file of the ServoMotor class
SPI.cpp
SPI.h
Header file of the SPI class
StepperMotor.cpp
StepperMotor.h
TimerCounter.h
Header file of the TimerCounter class
TimerCounter0.cpp
TimerCounter0.h
TimerCounter1.cpp
TimerCounter1.h
TimerCounter2.cpp
TimerCounter2.h
USART0.cpp
USARTO.h
utils_m328p.cpp
utils_m328p.h
WatchdogTimer.cpp
WatchdogTimer.h
Header file of the WatchdogTimer class

# **Namespace Documentation**

# 8.1 component Namespace Reference

AVR chip external components.

#### **Classes**

· class Buzzer

Class for handling a Buzzer component.

- · class DCMotor
- · class LDR

Class for handling an LDR component.

class Led

Class for handling a Led component.

class PushButton

Class for handling a PushButton component.

- class ServoMotor
- · class StepperMotor

#### **Enumerations**

enum mode : uint8\_t { mode::fullStep =0, mode::halfStep }

# 8.1.1 Detailed Description

AVR chip external components.

The namespace englobes all external components that, when hooked up, allows the AVR chip to interact with the external World

The namespace englobes all external components that, when hooked up, allows the AVR MCU to interact with the external World

# 8.1.2 Enumeration Type Documentation

#### 8.1.2.1 mode

```
enum component::mode : uint8_t [strong]
```

fullStep	
halfStep	

Definition at line 70 of file StepperMotor.h.

```
00070 : uint8_t {
00071    fullStep=0,
00072    halfStep,
00073 };
```

# 8.2 core Namespace Reference

AVR chip internal core components.

#### **Classes**

class ADConverter

Class for handling ADC.

- class AnalogComparator
- class ExternInterrupt
- class MCU
- · class TimerCounter
- class TimerCounter0
- class TimerCounter1
- · class TimerCounter2
- class WatchdogTimer

senseControl::risingEdge }

### **Enumerations**

```
• enum resolution : uint8 t {
  resolution::res_8bit =0, resolution::res_9bit, resolution::res_10bit, resolution::res_11bit,
  resolution::res_12bit, resolution::res_13bit, resolution::res_14bit, resolution::res_15bit,
  resolution::res_16bit }
     ADC resolution.

    enum referenceVoltage::uint8_t { referenceVoltage::AREF =0, referenceVoltage::AVCC, referenceVoltage::internal

     ADC referencev voltage.
• enum clockPrescaler : uint8 t {
  clockPrescaler::PS 2 = 1, clockPrescaler::PS 4, clockPrescaler::PS 8, clockPrescaler::PS 16,
  clockPrescaler::PS 32, clockPrescaler::PS 64, clockPrescaler::PS 128 }
     ADC clock prescaler.
• enum autoTriggerSource : uint8_t {
  autoTriggerSource::freeRunning, autoTriggerSource::analogComparator, autoTriggerSource::extInterrupt,
  autoTriggerSource::timer0CompareA,
  autoTriggerSource::timer0Overflow, autoTriggerSource::timer1CompareB, autoTriggerSource::timer1Overflow,
  autoTriggerSource::timer1Capture }
     ADC autoTrigger source.

    enum senseControl::lowLevel =0, senseControl::logicalChange, senseControl::fallingEdge,
```

```
enum pinChangePort:: uint8_t { pinChangePort::PCINTB =0, pinChangePort::PCINTC, pinChangePort::PCINTD

    enum BODMode : uint8_t { BODMode::enabled =0, BODMode::disabled }

enum sleepMode : uint8 t {
 sleepMode::Idle =0, sleepMode::ADC_NoiseReduction, sleepMode::powerDown, sleepMode::powerSave,
 sleepMode::standby =6, sleepMode::extendedStandby }
enum channel : uint8_t { channel::A =0, channel::B }

    enum compareOutputMode : uint8 t { compareOutputMode::normal =0, compareOutputMode::toggle,

 compareOutputMode::clear, compareOutputMode::set }
• enum operationMode : uint8 t {
 operationMode::normal =0, operationMode::PWM PC, operationMode::PWM PC 8bit, operationMode::PWM PC 9bit,
 operationMode::PWM_PC_10bit,
                                  operationMode::PWM_PFC_ICR,
                                                                   operationMode::PWM_PFC_OCR,
 operationMode::PWM_PC_ICR,
 operationMode::PWM PC OCR, operationMode::fast PWM, operationMode::fast PWM 8bit, operationMode::fast PWM 9bit
 operationMode::fast PWM 10bit,
                                   operationMode::fast PWM ICR,
                                                                     operationMode::fast PWM OCR,
 operationMode::CTC OCR,
 operationMode::CTC_ICR, operationMode::interrupt = 1, operationMode::reset, operationMode::interrupt_reset
 }
enum clockSource : uint16_t {
 clockSource::noClock =0, clockSource::PS_1, clockSource::PS_8, clockSource::PS_32,
 clockSource::PS_64, clockSource::PS_128, clockSource::PS_256, clockSource::PS_1024,
 clockSource::extern_Clock_T0_Falling_Edge, clockSource::extern_Clock_T0_Rising_Edge }
enum timeOut : uint8 t {
 timeOut::to 16ms =0, timeOut::to 32ms, timeOut::to 64ms, timeOut::to 125ms,
 timeOut::to_250ms, timeOut::to_500ms, timeOut::to_1s, timeOut::to_2s,
 timeOut::to_4s, timeOut::to_8s }
enum operationMode : uint8 t {
 operationMode::normal =0, operationMode::PWM_PC, operationMode::PWM_PC_8bit, operationMode::PWM_PC_9bit,
 operationMode::PWM_PC_10bit,
                                  operationMode::PWM_PFC_ICR,
                                                                   operationMode::PWM_PFC_OCR,
 operationMode::PWM_PC_ICR,
 operationMode::PWM PC OCR, operationMode::fast PWM, operationMode::fast PWM 8bit, operationMode::fast PWM 9bit
 operationMode::fast PWM 10bit,
                                   operationMode::fast PWM ICR,
                                                                     operationMode::fast PWM OCR,
 operationMode::CTC OCR,
 operationMode::CTC ICR, operationMode::interrupt =1, operationMode::reset, operationMode::interrupt reset
 }
```

# 8.2.1 Detailed Description

AVR chip internal core components.

The namespace englobes all internal core components that, when configured, allows the AVR MCU to internally process data

#### 8.2.2 Enumeration Type Documentation

#### 8.2.2.1 autoTriggerSource

```
enum core::autoTriggerSource : uint8_t [strong]
```

ADC autoTrigger source.

#### Author

```
Farid Oubbati (farid.oubbati@outlook.com)
```

Date

March 2018

#### Enumerator

freeRunning	free running trigger mode
analogComparator	analog comparator atrigger mode
extInterrupt	external interrupt trigger mode
timer0CompareA	timer0 compare A trigger mode
timer0Overflow	timer0 overflow trigger mode
timer1CompareB	timer0 compare B trigger mode
timer1Overflow	timer1 overflow trigger mode
timer1Capture	timer1 capture trigger mode

# Definition at line 76 of file ADC.h.

#### 8.2.2.2 BODMode

```
enum core::BODMode : uint8_t [strong]
```

#### Enumerator

enabled	
disabled	

#### Definition at line 77 of file MCU.h.

#### 8.2.2.3 channel

```
enum core::channel : uint8_t [strong]
```

Α	
В	

#### Definition at line 470 of file TimerCounter.h.

```
00470
                         : uint8_t {
00471
          A=0,
00472
          В,
00473 };
```

#### 8.2.2.4 clockPrescaler

```
enum core::clockPrescaler : uint8_t [strong]
```

ADC clock prescaler.

**Author** 

```
Farid Oubbati (farid.oubbati@outlook.com)
```

Date

March 2018

#### Enumerator

PS_2	prescaler /2
PS_4	prescaler /4
PS_8	prescaler /8
PS_16	prescaler /16
PS_32	prescaler /32
PS_64	prescaler /64
PS_128	prescaler /128

```
Definition at line 59 of file ADC.h.
00059
00060 PS_2 = 1,
                                                   : uint8_t {
                 PS_4,
PS_8,
PS_16,
00061
00062
00063
00064
                PS_32,
PS_64,
PS_128
00065
00066
00067 };
```

# 8.2.2.5 clockSource

```
enum core::clockSource : uint16_t [strong]
```

noClock	
PS_1	
PS_8	
PS_32	
PS_64	
PS_128	
PS_256	
PS_1024	
extern_Clock_T0_Falling_Edge	
extern_Clock_T0_Rising_Edge	

#### Definition at line 504 of file TimerCounter.h.

# 8.2.2.6 compareOutputMode

```
enum core::compareOutputMode : uint8_t [strong]
```

### Enumerator

normal	
toggle	
clear	
set	

# Definition at line 476 of file TimerCounter.h.

```
00476 : uint8_t {
00477    normal=0,
00478    toggle,
00479    clear,
00480    set,
00481 };
```

# 8.2.2.7 operationMode [1/2]

```
enum core::operationMode : uint8_t [strong]
```

#### Enumerator

normal

PWM_PC	
PWM_PC_8bit	
PWM_PC_9bit	
PWM_PC_10bit	
PWM_PFC_ICR	
PWM_PFC_OCR	
PWM_PC_ICR	
PWM_PC_OCR	
fast_PWM	
fast_PWM_8bit	
fast_PWM_9bit	
fast_PWM_10bit	
fast_PWM_ICR	
fast_PWM_OCR	
CTC_OCR	
CTC_ICR	
interrupt	
reset	
interrupt_reset	
	-

```
Definition at line 78 of file WatchdogTimer.h.

00078 : uint8_t {

00079 interrupt=1,

00080 reset,

00081 interrupt_reset,

00082 };
```

# 8.2.2.8 operationMode [2/2]

```
enum core::operationMode : uint8_t [strong]
```

### Enumerator

normal	
PWM_PC	
PWM_PC_8bit	
PWM_PC_9bit	
PWM_PC_10bit	
PWM_PFC_ICR	
PWM_PFC_OCR	
PWM_PC_ICR	
PWM_PC_OCR	
fast_PWM	
fast_PWM_8bit	
fast_PWM_9bit	
fast_PWM_10bit	
fast_PWM_ICR	
fast_PWM_OCR	

CTC_OCR	
CTC_ICR	
interrupt	
reset	
interrupt_reset	

```
Definition at line 485 of file TimerCounter.h.
```

```
: uint8_t {
00485
00486
                 normal=0,
                normal=0,
PWM_PC,
PWM_PC_8bit,
PWM_PC_9bit,
PWM_PC_10bit,
PWM_PFC_ICR,
PWM_PFC_OCR,
PWM_PC_ICR,
PWM_PC_OCR,
fast PWM
00487
00488
00489
00490
00491
00492
00493
00494
00495
                 fast_PWM,
                 fast_PWM_8bit,
00496
                fast_PWM_9bit,
fast_PWM_10bit,
fast_PWM_ICR,
00497
00498
00499
                 fast_PWM_OCR,
CTC_OCR,
00500
00501
00502
                 CTC_ICR,
00503 };
```

### 8.2.2.9 pinChangePort

```
enum core::pinChangePort : uint8_t [strong]
```

#### **Enumerator**

PCINTB	
PCINTC	
PCINTD	

### Definition at line 156 of file ExternInterrupt.h.

#### 8.2.2.10 referenceVoltage

```
enum core::referenceVoltage : uint8_t [strong]
```

ADC referencev voltage.

### Author

```
Farid Oubbati ( farid.oubbati@outlook.com)
```

Date

March 2018

AREF	external AREF pin voltage reference, internal 1.1V voltage reference turned off
AVCC	AVCC voltage reference with external capacitor at AREF pin
internal	internal 1.1V voltage reference with external capacitor at AREF pin

# Definition at line 44 of file ADC.h.

#### 8.2.2.11 resolution

```
enum core::resolution : uint8_t [strong]

ADC resolution.

Author

Farid Oubbati ( farid.oubbati@outlook.com)
```

Date

March 2018

# Enumerator

res_8bit	8 bits resolution
res_9bit	9 bits resolution
res_10bit	10 bits resolution
res_11bit	11 bits resolution
res_12bit	12 bits resolution
res_13bit	13 bits resolution
res_14bit	14 bits resolution
res_15bit	15 bits resolution
res_16bit	16 bits resolution

#### Definition at line 24 of file ADC.h.

```
00024 : uint8_t {
00025    res_8bit=0,
00026    res_9bit,
00027    res_10bit,
00028    res_11bit,
00029    res_12bit,
00030    res_13bit,
00031    res_14bit,
00032    res_15bit,
00033    res_16bit
00034 };
```

#### 8.2.2.12 senseControl

```
enum core::senseControl : uint8_t [strong]
```

#### Enumerator

lowLevel	
logicalChange	
fallingEdge	
risingEdge	

# Definition at line 149 of file ExternInterrupt.h.

### 8.2.2.13 sleepMode

```
enum core::sleepMode : uint8_t [strong]
```

#### Enumerator

Idle	
ADC_NoiseReduction	
powerDown	
powerSave	
standby	
extendedStandby	

#### Definition at line 82 of file MCU.h.

#### 8.2.2.14 timeOut

```
enum core::timeOut : uint8_t [strong]
```

### Enumerator

to_16ms	
to 32ms	

to_64ms	
to_125ms	
to_250ms	
to_500ms	
to_1s	
to_2s	
to_4s	
to_8s	

Definition at line 65 of file WatchdogTimer.h.

```
00065
                           : uint8_t {
00066
           to_16ms=0,
00067
          to_32ms,
          to_64ms,
00068
00069
          to_125ms,
          to_250ms,
00071
          to_500ms,
00072
          to_1s,
00073
00074
          to_2s,
          to_4s,
00075
          to 8s.
00076 };
```

# 8.3 io Namespace Reference

AVR chip internal i/o components.

#### **Classes**

· class Pin

Class for handling a Pin.

struct Port

Contains defintions of pointers to the AVR port's registers.

- class SPI
- class USART0

Class for handling USARTO.

# **Enumerations**

```
    enum operationMode::uint8_t { operationMode::master =0, operationMode::slave, operationMode::submaster, operationMode::disable }
    enum clockPrescaler::uint8_t { clockPrescaler::PS_4 = 0, clockPrescaler::PS_16, clockPrescaler::PS_64, clockPrescaler::PS_128, clockPrescaler::PS_2, clockPrescaler::PS_8, clockPrescaler::PS_32 }
    enum dataMode: uint8_t { dataMode::mode_0 = 0, dataMode::mode_1, dataMode::mode_2, dataMode::mode_3 }
    enum dataOrder: uint8_t { dataOrder::first_MSB = 0, dataOrder::first_LSB }
    enum transmissionMode: uint8_t { transmissionMode::async =0, transmissionMode::sync, transmissionMode::masterSPI }
    USARTO transmission mode.
```

```
    enum communicationMode:: uint8_t { communicationMode::duplex =0, communicationMode::transmit, communicationMode::receive }
        USART0 communication mode.
    enum parityMode: uint8_t { parityMode::noParity =0, parityMode::evenParity, parityMode::oddParity }
        USART0 parity mode.
    enum frameSize::uint8_t {
        frameSize::eightBits =0, frameSize::fiveBits, frameSize::sixBits, frameSize::sevenBits,
        frameSize::neineBits }
        USART0 frame size.
    enum stopBit: uint8_t { stopBit::oneStopBit =0, stopBit::twoStopBits}
```

#### **Variables**

```
    static io::Port PortB = { &DDRB, &PORTB, &PINB }
    static io::Port PortC = { &DDRC, &PORTC, &PINC }
    static io::Port PortD = { &DDRD, &PORTD, &PIND }
```

# 8.3.1 Detailed Description

USART0 stop bit.

AVR chip internal i/o components.

The namespace englobes all internal input/output components that, when configured, allows the AVR MCU to communicate with the external World

# 8.3.2 Enumeration Type Documentation

#### 8.3.2.1 clockPrescaler

```
enum io::clockPrescaler : uint8_t [strong]
```

#### Enumerator

PS_4	
PS_16	
PS_64	
PS_128	
PS_2	
PS_8	
PS_32	

00067

PS\_128,

```
00068
00069
00070
00071 };
```

#### 8.3.2.2 communicationMode

```
enum io::communicationMode : uint8_t [strong]
```

USART0 communication mode.

Author

```
Farid Oubbati (farid.oubbati@outlook.com)
```

Date

March 2018

#### Enumerator

duplex	full duplex mode
transmit	transmit mode
receive	receive mode

```
Definition at line 39 of file USARTO.h.

00039 : uint8_t {
    duplex=0,
U0040 duplex=0,
00041 transmit,
00042 receive,
00044 };
```

#### 8.3.2.3 dataMode

```
enum io::dataMode : uint8_t [strong]
```

# Enumerator

mode←	
_0	
mode←	
_1	
mode←	
_2	
mode←	
_3	

Definition at line 73 of file SPI.h.

#### 8.3.2.4 dataOrder

```
enum io::dataOrder : uint8_t [strong]
```

#### Enumerator

first_MSB	
first_LSB	

# Definition at line 80 of file SPI.h.

```
00080 : uint8_t {
00081    first_MSB = 0,
00082    first_LSB
00083 };
```

#### 8.3.2.5 frameSize

```
enum io::frameSize : uint8_t [strong]
```

USART0 frame size.

**Author** 

```
Farid Oubbati ( farid.oubbati@outlook.com)
```

Date

March 2018

#### Enumerator

eightBits	8 bits frame size
fiveBits	5 bits frame size
sixBits	6 bits frame size
sevenBits	7 bits frame size
neineBits	9 bits frame size

# Definition at line 68 of file USART0.h.

```
00068 : uint8_t {
00069    eightBits=0,
00070    fiveBits,
00071    sixBits,
00072    sevenBits,
```

```
00073 neineBits 00074 };
```

# 8.3.2.6 operationMode

```
enum io::operationMode : uint8_t [strong]
```

#### Enumerator

master	
slave	
submaster	
disable	

# Definition at line 56 of file SPI.h.

```
00056 : uint8_t {
00057    master=0,
00058    slave,
00059    submaster,
00060    disable,
00061 };
```

# 8.3.2.7 parityMode

```
enum io::parityMode : uint8_t [strong]
```

**USARTO** parity mode.

**Author** 

```
Farid Oubbati (farid.oubbati@outlook.com)
```

Date

March 2018

#### Enumerator

noParity	no parity check mode
evenParity	even parity check mode
oddParity	odd parity check mode

#### Definition at line 54 of file USART0.h.

```
00054 : uint8_t {
00055    noParity=0,
00056    evenParity,
00057    oddParity
00058 };
```

# 8.3.2.8 stopBit

```
enum io::stopBit : uint8_t [strong]
```

USART0 stop bit.

**Author** 

Farid Oubbati (farid.oubbati@outlook.com)

Date

March 2018

#### Enumerator

oneStopBit	1 stop bit
twoStopBits	2 stop bits

#### Definition at line 84 of file USARTO.h.

# 8.3.2.9 transmissionMode

```
enum io::transmissionMode : uint8_t [strong]
```

**USART0** transmission mode.

**Author** 

```
Farid Oubbati (farid.oubbati@outlook.com)
```

Date

March 2018

#### Enumerator

async	asynchronous mode
sync	synchronous mode
masterSPI	masterSPI mode

```
Definition at line 25 of file USART0.h.
```

#### 8.3.3 Variable Documentation

#### 8.3.3.1 PortB

```
io::Port io::PortB = { &DDRB, &PORTB, &PINB } [static]
global static Port B object
Definition at line 100 of file Pin.h.
```

#### 8.3.3.2 PortC

```
io::Port io::PortC = { &DDRC, &PORTC, &PINC } [static]
global static Port C object
Definition at line 101 of file Pin.h.
```

#### 8.3.3.3 PortD

```
io::Port io::PortD = { &DDRD, &PORTD, &PIND } [static]
global static Port D object
Definition at line 102 of file Pin.h.
Referenced by main().
```

# 8.4 utils Namespace Reference

# **Functions**

• long map (long x, long in\_min, long in\_max, long out\_min, long out\_max)

#### 8.4.1 Function Documentation

#### 8.4.1.1 map()

# **Class Documentation**

# 9.1 core::ADConverter Class Reference

Class for handling ADC.

#include <ADC.h>

#### **Public Member Functions**

- void start ()
- void stop ()
- void selectReferenceVoltage (const referenceVoltage &ar\_refVoltage)
- void selectAnalogInput (io::Pin a\_pin)
- void selectClockPrescaler (const clockPrescaler &ar\_clockPrescaler)
- void enableConversionCompleteInterrupt (const uint8\_t a\_enable)
- void enableAutoTrigger (const uint8\_t a\_enable)
- void selectAutoTriggerSource (const autoTriggerSource &ar\_autoTriggerSource)
- uint16\_t getConversionResult (const resolution &ar\_resolution=resolution::res\_10bit)

#### **Static Public Member Functions**

- static ADConverter & getInstance (const referenceVoltage &ar\_refVoltage=referenceVoltage::AVCC, const clockPrescaler &ar\_clockPrescaler=clockPrescaler::PS\_128, const autoTriggerSource &ar\_autoTrigger← Source=autoTriggerSource::freeRunning, const io::Pin &ar\_pin=io::Pin(0, io::PortC))
- static void conversionCompleteServiceRoutine () \_\_asm\_\_(STR(ADC\_CONVERSION\_COMPLETE\_INTERRUPT))
   \_\_attribute\_\_((\_\_signal\_\_\_

### **Public Attributes**

- static void used
- static void \_\_externally\_visible\_\_

46 Class Documentation

#### **Private Member Functions**

- ADConverter (const referenceVoltage &ar\_refVoltage, const clockPrescaler &ar\_clockPrescaler, const autoTriggerSource &ar\_autoTriggerSource, const io::Pin &ar\_pin)
- ∼ADConverter ()
- ADConverter (const ADConverter &)
- const ADConverter & operator= (const ADConverter &)

# **Static Private Attributes**

```
• static volatile uint16_t m_conversionResult = 0
```

```
• static uint8_t m_resolution = 10
```

# 9.1.1 Detailed Description

Class for handling ADC.

The class implements ADC operations

**Author** 

```
Farid Oubbati ( farid.oubbati@outlook.com)
```

Date

March 2018

Definition at line 94 of file ADC.h.

# 9.1.2 Constructor & Destructor Documentation

# 9.1.2.1 ADConverter() [1/2]

Constructor.

Initalizes the ADC object

# Parameters

ar_refVoltage	Defines reference voltage
ar_clockPrescaler	Defines clock prescaler
ar_autoTriggerSource	Defines auto trigger source
ar_pin	Defines a Pin object

### Definition at line 22 of file ADC.cpp.

```
00026 {
00027
           core::MCU::enableADC(1);
00028
           selectAnalogInput(ar_pin);
           selectReferenceVoltage(ar_refVoltage);
selectClockPrescaler(ar_clockPrescaler);
00029
00030
00031
           enableAutoTrigger(1);
00032
           selectAutoTriggerSource(ar_autoTriggerSource);
00033
00034
           enableConversionCompleteInterrupt(1);
00035
00036
00037 }
```

References core::MCU::enableADC().

### 9.1.2.2 ∼ADConverter()

```
core::ADConverter::~ADConverter ( ) [private]
```

#### Destructor

# Definition at line 40 of file ADC.cpp.

```
00041 {
00042
00043 }
```

#### 9.1.2.3 ADConverter() [2/2]

Overried Copy constructor

# 9.1.3 Member Function Documentation

#### 9.1.3.1 conversionCompleteServiceRoutine()

```
void core::ADConverter::conversionCompleteServiceRoutine ( ) [static]
```

# Conversion complete ISR

### Definition at line 108 of file ADC.cpp.

```
m_conversionResult = ADC >> 8;
00121
00122
              case 9:
00123
00124
00125
                  m_conversionResult = ADC >> 7;
00126
                   break;
00127
00128
              case 10:
00129
              {
                  m conversionResult = ADC:
00130
00131
                  break:
00132
              case 11:
00133
00134
00135
                  if (l_resultDataIndex < 4)</pre>
00136
00137
                  {
00138
                      l_resultData += ADC;
00139
                      l_resultDataIndex++;
00140
00141
                   }
                  else
00142
00143
                   {
00144
                      m_conversionResult = l_resultData » 1;
00145
                       l_resultData = 0;
00146
                       l_resultDataIndex = 0;
00147
                  }
00148
00149
                  break:
00150
00151
              case 12:
00152
00153
                   if (l_resultDataIndex < 16)</pre>
00154
                       l_resultData += ADC;
00155
00156
                       l_resultDataIndex++;
00157
00158
                   }
00159
                   else
00160
                       m_conversionResult = 1_resultData » 2;
00161
                       l_resultData = 0;
00162
                       1_resultDataIndex = 0;
00163
00164
00165
                  break;
00166
               case 13:
00167
00168
00169
                   if (l_resultDataIndex < 64)</pre>
00170
                  {
00171
                       l_resultData += ADC;
00172
                       l_resultDataIndex++;
00173
00174
00175
                  else
00176
00177
                      m_conversionResult = 1_resultData » 3;
00178
                       l_resultData = 0;
00179
                       l_resultDataIndex = 0;
00180
00181
                  break;
00182
00183
              case 14:
00184
00185
                   if (l_resultDataIndex < 256)</pre>
00186
                   {
                       l_resultData += ADC;
00187
00188
                       l_resultDataIndex++;
00189
00190
00191
                  else
00192
                       m_conversionResult = 1_resultData » 4;
00193
00194
                       l_resultData = 0;
00195
                      1_resultDataIndex = 0;
00196
00197
                  break;
00198
00199
              case 15:
00200
00201
                   if (l_resultDataIndex < 1024)</pre>
00202
00203
                      l_resultData += ADC;
00204
                       l_resultDataIndex++;
00205
00206
                   }
```

```
00207
                  else
00208
00209
                      m_conversionResult = 1_resultData » 5;
00210
                      l_resultData = 0;
                     l_resultDataIndex = 0;
00211
00212
00213
00214
00215
              case 16:
00216
00217
                  if (l_resultDataIndex < 4096)</pre>
00218
                  {
00219
00220
                     l_resultData += ADC;
00221
                      l_resultDataIndex++;
00222
00223
00224
                  else
00225
00226
                      m_conversionResult = 1_resultData » 6;
00227
                      l_resultData = 0;
00228
                     l_resultDataIndex = 0;
00229
00230
                  break;
00231
              }
00232
00233
         }
00234
00235
00236
00237
00238 }
```

### 9.1.3.2 enableAutoTrigger()

Enable autotrigger mode

### **Parameters**

a_enable	Defines enable flag
----------	---------------------

# Definition at line 72 of file ADC.cpp.

References ADC\_DISABLE\_AUTOTRIGGER, and ADC\_ENABLE\_AUTOTRIGGER.

# 9.1.3.3 enableConversionCompleteInterrupt()

Enable conversion complete interrupt

#### **Parameters**

a_enable	Defines enable flag
----------	---------------------

Definition at line 83 of file ADC.cpp.

References ADC DISABLE CONVERSION COMPLETE INTERRUPT, and ADC ENABLE CONVERSION COMPLETE INTERR

# 9.1.3.4 getConversionResult()

Get ADC conversion result

Returns

Conversion result

Definition at line 243 of file ADC.cpp.

```
00244 {
00246
00247
          switch (ar_resolution)
00248
00249
              case core::resolution::res_8bit:
00250
                  ADC_ADJUST_RESULT_LEFT;
00251
00252
                  m_resolution = 8;
00253
00254
00255
              case core::resolution::res_9bit:
00256
              {
00257
                  ADC_ADJUST_RESULT_LEFT;
00258
                  m_resolution = 9;
00259
00260
00261
              case core::resolution::res_10bit:
00262
                  ADC_ADJUST_RESULT_RIGHT;
00263
00264
                  m_resolution = 10;
00265
00266
00267
              case core::resolution::res_11bit:
00268
00269
00270
                  m_resolution = 11;
00271
00272
00273
              case core::resolution::res_12bit:
00274
00275
                  m_resolution = 12;
00276
                  break;
00277
00278
              case core::resolution::res_13bit:
00279
00280
                  m_resolution = 13;
00281
                  break:
00282
00283
              case core::resolution::res_14bit:
```

```
00284
              {
00285
                  m_resolution = 14;
00286
                  break;
00287
00288
              case core::resolution::res_15bit:
00289
00290
                  m_resolution = 15;
00291
00292
00293
              case core::resolution::res_16bit:
00294
00295
                  m_resolution = 16;
00296
                  break;
00297
00298
00299
00300
         return m_conversionResult;
00301
00302
00303 }
```

References ADC\_ADJUST\_RESULT\_LEFT, ADC\_ADJUST\_RESULT\_RIGHT, core::res\_10bit, core::res\_11bit, core::res\_12bit, core::res\_12bit, core::res\_15bit, core::res\_16bit, core::res\_8bit, and core::res\_9bit.

#### 9.1.3.5 getInstance()

Create a single instance of the ADC object

#### **Parameters**

ar_refVoltage	Defines reference voltage
ar_clockPrescaler	Defines clock prescaler
ar_autoTriggerSource	Defines auto trigger source
ar_pin	Defines a Pin object

#### Definition at line 8 of file ADC.cpp.

#### 9.1.3.6 operator=()

Override assign operator

#### 9.1.3.7 selectAnalogInput()

Select analog input

**Parameters** 

```
a_pin Defines Pin object
```

# Definition at line 52 of file ADC.cpp.

References ADC\_DISABLE\_DIGITAL\_INPUT\_REGISTER, ADC\_SELECT\_ANALOG\_INPUT, io::Pin::getPinNumber(), and io::Pin::toInput().

# 9.1.3.8 selectAutoTriggerSource()

Select autotrigger source

Parameters

ar_autoTriggerSource	Defines autotrigger source
----------------------	----------------------------

Definition at line 101 of file ADC.cpp.

References ADC\_SELECT\_AUTO\_TRIGGER\_SOURCE.

# 9.1.3.9 selectClockPrescaler()

Select clock prescaler

#### **Parameters**

ar_clockPrescaler	Defines clock prescaler	
-------------------	-------------------------	--

# Definition at line 94 of file ADC.cpp.

References ADC\_SELECT\_CLOCK\_PRESCALER.

# 9.1.3.10 selectReferenceVoltage()

# Select reference voltage

#### **Parameters**

ar_refVoltage	Defines reference voltage
---------------	---------------------------

# Definition at line 46 of file ADC.cpp.

```
00047 {
00048          ADC_SELECT_REF_VOLTAGE(static_cast<uint8_t>(ar_refVoltage));
00049
00050 }
```

References ADC\_SELECT\_REF\_VOLTAGE.

# 9.1.3.11 start()

```
void core::ADConverter::start ( )
```

### Start ADC conversion

# Definition at line 60 of file ADC.cpp.

References ADC\_ENABLE, and ADC\_START\_CONVERSION.

# 9.1.3.12 stop()

```
void core::ADConverter::stop ( )
```

Stop ADC conversion

Definition at line 66 of file ADC.cpp.

References ADC\_DISABLE, and ADC\_STOP\_CONVERSION.

#### 9.1.4 Member Data Documentation

```
9.1.4.1 __externally_visible__
```

void core::ADConverter::\_\_externally\_visible\_\_

Definition at line 153 of file ADC.h.

# 9.1.4.2 \_\_used\_\_

void core::ADConverter::\_\_used\_\_

Definition at line 153 of file ADC.h.

# 9.1.4.3 m\_conversionResult

```
volatile uint16_t core::ADConverter::m_conversionResult = 0 [static], [private]
```

Conversion result

Definition at line 187 of file ADC.h.

# 9.1.4.4 m\_resolution

```
uint8_t core::ADConverter::m_resolution = 10 [static], [private]
```

Conversion resolution

Definition at line 189 of file ADC.h.

# 9.2 core::AnalogComparator Class Reference

#include <AnalogComparator.h>

# 9.2.1 Detailed Description


Definition at line 24 of file AnalogComparator.h.

# 9.3 component::Buzzer Class Reference

Class for handling a Buzzer component.

#include <Buzzer.h>

Collaboration diagram for component::Buzzer:

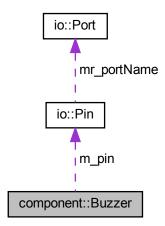

# **Public Member Functions**

- Buzzer (const io::Pin &ar\_pin)
- ∼Buzzer ()
- void buzz (const uint16\_t &ar\_period\_us, const uint16\_t &ar\_duration\_us)
- void pause (uint16\_t a\_duration\_us)
- template<typename TC >
   void buzz (TC &ar\_timerCounter, const uint16\_t &ar\_period\_us, uint16\_t &ar\_duration\_ms, const core::channel &ar\_channel=core::channel::A, const core::clockSource &ar\_clockSource=core::clockSource::PS\_64)

#### **Private Attributes**

• io::Pin m\_pin

# 9.3.1 Detailed Description

Class for handling a Buzzer component.

The class implements Buzzer operations

**Author** 

```
Farid Oubbati (farid.oubbati@outlook.com)
```

Date

March 2018

Definition at line 74 of file Buzzer.h.

# 9.3.2 Constructor & Destructor Documentation

# 9.3.2.1 Buzzer()

Constructor

Initalizes the Buzzer object

**Parameters** 

```
ar_pin Defines a Pin object
```

**Author** 

```
Farid Oubbati (farid.oubbati@outlook.com)
```

Date

March 2018

• See Buzzer.h for a description of this code

```
Definition at line 13 of file Buzzer.cpp. 00014 : m_pin(ar_pin) 00015 {
```

References m\_pin, and io::Pin::toOutput().

### 9.3.2.2 ∼Buzzer()

```
component::Buzzer::~Buzzer ( )
```

#### Destructor

Definition at line 20 of file Buzzer.cpp.

```
00021 {
00022
00023 }
```

# 9.3.3 Member Function Documentation

#### 9.3.3.1 buzz() [1/2]

# Generate a Buzzer signal

#### **Parameters**

ar_period_us	Defines period of Buzzer signal
ar_duration_us	Defines duration of Buzzer signal

#### Definition at line 25 of file Buzzer.cpp.

```
00027
           for (uint16_t i = 0; i < ar_duration_us; i += ar_period_us)</pre>
00028
00029
               // for loop with variable delay selects the pitch
00030
               for (uint16_t j = 0; j < ar_period_us; j++)</pre>
00031
00032
00033
                   _delay_us(1);
00034
00035
00036
               m_pin.toggle();
00037
          m_pin.setLow();
00038
00039 }
```

# 9.3.3.2 buzz() [2/2]

#### Generate a Buzzer signal

# **Template Parameters**

TC	Type Defines a TimerCounter object
----	------------------------------------

#### **Parameters**

ar_period_us	Defines period of Buzzer signal
ar_duration_ms	Defines duration of Buzzer signal
ar_channel	Defines TimerCounter channel
ar_clockSource	Defines TimerCounter clock source

#### Definition at line 114 of file Buzzer.h.

```
00120
00121
               \verb|ar_timerCounter.selectOperationMode(core::operationMode::CTC_OCR)|;
00122
               ar\_timerCounter.selectCompareOutputMode(ar\_channel, core::compareOutputMode::toggle);\\
00123
               ar_timerCounter.setCounter(0);
00124
               ar_timerCounter.setOutputCompareRegister(ar_channel, ar_period_us);
00125
               // start timer
00126
               ar_timerCounter.start();
00127
               \ensuremath{//} wait for the pitch duration
00128
               while (ar_duration_ms) {
                _delay_ms(1);
ar_duration_ms--;
00129
00130
00131
00132
00133
               ar\_timerCounter.selectCompareOutputMode(ar\_channel, \verb|core|::compareOutputMode::normal)|;
00134
               ar_timerCounter.stop();
          }
00135
```

References core::CTC\_OCR, core::normal, and core::toggle.

# 9.3.3.3 pause()

### Generate a time break

### **Parameters**

a_duration_us	Defines duration of time break
---------------	--------------------------------

# Definition at line 42 of file Buzzer.cpp.

# 9.3.4 Member Data Documentation

### 9.3.4.1 m\_pin

```
io::Pin component::Buzzer::m_pin [private]
```

Pin object


Definition at line 142 of file Buzzer.h.

Referenced by Buzzer().

# 9.4 component::DCMotor Class Reference

```
#include <DCMotor.h>
```

Collaboration diagram for component::DCMotor:

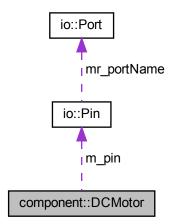

# **Public Member Functions**

- DCMotor (const io::Pin &ar\_pin)
- ∼DCMotor ()
- void on ()
- void off ()
- void toggle ()
- template<typename TC >
   void spin (TC &ar\_timerCounter, const uint16\_t &ar\_speed, const core::channel &ar\_channel=core::channel::A)
- template<typename TC >
   void stop (TC &ar\_timerCounter)
- template<typename TC >
   void connect (TC &ar\_timerCounter, const core::channel &ar\_channel=core::channel::A)
- template<typename TC >
   void disconnect (TC &ar\_timerCounter, const core::channel &ar\_channel=core::channel::A)

# **Private Attributes**

• io::Pin m\_pin

# 9.4.1 Detailed Description

Definition at line 126 of file DCMotor.h.

### 9.4.2 Constructor & Destructor Documentation

### 9.4.2.1 DCMotor()

References m\_pin, and io::Pin::toOutput().

### 9.4.2.2 ∼DCMotor()

```
component::DCMotor::~DCMotor ( )
Definition at line 11 of file DCMotor.cpp.
00012 {
00013
00014 }
```

### 9.4.3 Member Function Documentation

# 9.4.3.1 connect()

References core::clear, and core::fast\_PWM.

### 9.4.3.2 disconnect()

References core::normal.

# 9.4.3.3 off()

```
void component::DCMotor::off ( )
```

Turn servo motor Off.

Definition at line 21 of file DCMotor.cpp.

#### 9.4.3.4 on()

```
void component::DCMotor::on ( )
```

Turn servo motor On.

Definition at line 16 of file DCMotor.cpp.

### 9.4.3.5 spin()

```
Definition at line 144 of file DCMotor.h.
```

### 9.4.3.6 stop()

#### 9.4.3.7 toggle()

```
void component::DCMotor::toggle ( )
```

Toggle servo motor state.

Definition at line 26 of file DCMotor.cpp.

```
00028 m_pin.toggle();
00029
00030 }
```

# 9.4.4 Member Data Documentation

# 9.4.4.1 m\_pin

```
io::Pin component::DCMotor::m_pin [private]
pin object
Definition at line 185 of file DCMotor b
```

Definition at line 185 of file DCMotor.h.

Referenced by DCMotor().

# 9.5 core::ExternInterrupt Class Reference

```
#include <ExternInterrupt.h>
```

# **Public Member Functions**

- void setInt0SenseControl (const senseControl &ar\_senseControl)
- void setInt1SenseControl (const senseControl &ar\_senseControl)
- void enableInt0 (const uint8\_t a\_enable)
- · void enableInt1 (const uint8 t a enable)
- void enablePinChange (const pinChangePort &ar\_pinChangePort, const uint8\_t a\_enable)
- void enablePinChangeMaskPortB (const uint8\_t a\_pinNumber, const uint8\_t a\_enable)
- void enablePinChangeMaskPortC (const uint8\_t a\_pinNumber, const uint8\_t a\_enable)
- void enablePinChangeMaskPortD (const uint8\_t a\_pinNumber, const uint8\_t a\_enable)

#### Static Public Member Functions

```
• static ExternInterrupt & getInstance ()
```

- static void Int0ServiceRoutine () \_\_asm\_\_(STR(EXT\_INT\_INT0\_INTERRUPT)) \_\_attribute\_\_((\_\_signal\_\_
- static void Int1ServiceRoutine () \_\_asm\_\_(STR(EXT\_INT\_INT1\_INTERRUPT)) \_\_attribute\_\_((\_\_signal\_
- static void pinChangePortBServiceRoutine () \_\_asm\_\_(STR(EXT\_INT\_PIN\_CHANGE\_PORTB\_INTERRUPT))
   \_\_attribute\_\_((\_\_signal\_\_\_
- static void pinChangePortCServiceRoutine () \_\_asm\_\_(STR(EXT\_INT\_PIN\_CHANGE\_PORTC\_INTERRUPT)) \_\_attribute\_\_((\_\_signal\_\_
- static void pinChangePortDServiceRoutine () \_\_asm\_\_(STR(EXT\_INT\_PIN\_CHANGE\_PORTD\_INTERRUPT))
   \_\_attribute\_\_((\_\_signal\_\_

# **Public Attributes**

```
    static void used
```

static void \_\_externally\_visible\_\_

# **Private Member Functions**

- ExternInterrupt ()
- ∼ExternInterrupt ()
- ExternInterrupt (const ExternInterrupt &)
- const ExternInterrupt & operator= (const ExternInterrupt &)

# 9.5.1 Detailed Description

Definition at line 162 of file ExternInterrupt.h.

### 9.5.2 Constructor & Destructor Documentation

# 9.5.2.1 ExternInterrupt() [1/2]

```
core::ExternInterrupt::ExternInterrupt ( ) [private]
```

### Definition at line 11 of file ExternInterrupt.cpp.

```
00012 {
00013 sei();
00014
00015 }
```

### 9.5.2.2 ∼ExternInterrupt()

```
core::ExternInterrupt::~ExternInterrupt ( ) [private]
```

Destructor.

Definition at line 17 of file ExternInterrupt.cpp.

```
00018 {
00019
00020 }
```

# 9.5.2.3 ExternInterrupt() [2/2]

Overried Copy constructor.

### 9.5.3 Member Function Documentation

### 9.5.3.1 enableInt0()

Definition at line 34 of file ExternInterrupt.cpp.

References EXT\_INT\_DISABLE\_INT0, and EXT\_INT\_ENABLE\_INT0.

# 9.5.3.2 enableInt1()

Definition at line 45 of file ExternInterrupt.cpp.

References EXT\_INT\_DISABLE\_INT1, and EXT\_INT\_ENABLE\_INT1.

#### 9.5.3.3 enablePinChange()

```
void core::ExternInterrupt::enablePinChange (
              const pinChangePort & ar_pinChangePort,
              const uint8_t a_enable )
Definition at line 56 of file ExternInterrupt.cpp.
00057 {
00058
          if (a_enable) {
             EXT_INT_ENABLE_PIN_CHANGE_INTERRUPT(static_cast<uint8_t>(ar_pinChangePort));
00059
00060
00061
00062
             EXT_INT_DISABLE_PIN_CHANGE_INTERRUPT(static_cast<uint8_t>(ar_pinChangePort));
00063
00064
00065 }
```

References EXT\_INT\_DISABLE\_PIN\_CHANGE\_INTERRUPT, and EXT\_INT\_ENABLE\_PIN\_CHANGE\_INTERRUPT.

# 9.5.3.4 enablePinChangeMaskPortB()

Definition at line 67 of file ExternInterrupt.cpp.

References EXT\_INT\_ENABLE\_PIN\_CHANGE\_MASK\_PORTB.

# 9.5.3.5 enablePinChangeMaskPortC()

# Definition at line 79 of file ExternInterrupt.cpp.

References EXT\_INT\_ENABLE\_PIN\_CHANGE\_MASK\_PORTC.

# 9.5.3.6 enablePinChangeMaskPortD()

### Definition at line 90 of file ExternInterrupt.cpp.

References EXT\_INT\_ENABLE\_PIN\_CHANGE\_MASK\_PORTD.

# 9.5.3.7 getInstance()

```
core::ExternInterrupt & core::ExternInterrupt::getInstance ( ) [static]
```

### Definition at line 3 of file ExternInterrupt.cpp.

# 9.5.3.8 Int0ServiceRoutine()

```
static void core::ExternInterrupt::IntOServiceRoutine ( ) [static]
```

# 9.5.3.9 Int1ServiceRoutine()

```
static void core::ExternInterrupt::IntlServiceRoutine ( ) [static]
```

# 9.5.3.10 operator=()

Override assign operator.

### 9.5.3.11 pinChangePortBServiceRoutine()

```
static void core::ExternInterrupt::pinChangePortBServiceRoutine ( ) [static]
```

#### 9.5.3.12 pinChangePortCServiceRoutine()

```
static void core::ExternInterrupt::pinChangePortCServiceRoutine ( ) [static]
```

### 9.5.3.13 pinChangePortDServiceRoutine()

```
static void core::ExternInterrupt::pinChangePortDServiceRoutine ( ) [static]
```

#### 9.5.3.14 setInt0SenseControl()

# Definition at line 22 of file ExternInterrupt.cpp.

```
00023 {
00024    EXT_INT_SET_INTO_SENSE_CONTROL(static_cast<uint8_t>(ar_senseControl));
00025
00026 }
```

References EXT\_INT\_SET\_INT0\_SENSE\_CONTROL.

# 9.5.3.15 setInt1SenseControl()

### Definition at line 28 of file ExternInterrupt.cpp.

References EXT\_INT\_SET\_INT1\_SENSE\_CONTROL.

### 9.5.4 Member Data Documentation

# 9.5.4.1 \_\_externally\_visible\_\_

static void core::ExternInterrupt::\_\_externally\_visible\_\_

Definition at line 185 of file ExternInterrupt.h.

#### 9.5.4.2 used

static void core::ExternInterrupt::\_\_used\_\_


Definition at line 185 of file ExternInterrupt.h.

# 9.6 component::LDR Class Reference

Class for handling an LDR component.

#include <LDR.h>

Collaboration diagram for component::LDR:

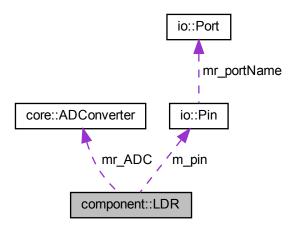

# **Public Member Functions**

- LDR (const io::Pin &ar\_pin, core::ADConverter &ar\_ADC)
- ∼LDR ()
- uint32\_t getResistance (const uint8\_t &ar\_VDResistor)
- uint16\_t getLux (const uint8\_t &ar\_VDResistor)

# **Private Attributes**

- io::Pin m\_pin
- core::ADConverter & mr\_ADC

# 9.6.1 Detailed Description

Class for handling an LDR component.

The class implements LDR operations

**Author** 

```
Farid Oubbati ( farid.oubbati@outlook.com)
```

Date

March 2018

Definition at line 27 of file LDR.h.

# 9.6.2 Constructor & Destructor Documentation

# 9.6.2.1 LDR()

```
component::LDR::LDR (
           const io::Pin & ar_pin,
            core::ADConverter & ar_ADC )
```

Constructor

Initalizes the LDR object

### **Parameters**

ar_pin	Defines a Pin object
ar_ADC	Defines the ADC object

```
Definition at line 4 of file LDR.cpp. 00005 : m_pin(ar_p
                           : m_pin(ar_pin), mr_ADC(ar_ADC)
00007 {
00008
            m_pin.toInput(0);
00009
00010 }
```

References m\_pin, and io::Pin::toInput().

# 9.6.2.2 ∼LDR()

```
component::LDR::\simLDR ( )
```

#### Destructor

```
Definition at line 12 of file LDR.cpp.
```

```
00013 {
00014
00015 }
```

# 9.6.3 Member Function Documentation

# 9.6.3.1 getLux()

# Compute amount of illuminance

#### **Parameters**

ar_VDResistor         Defines the voltage devider resistor in Kohm
--

### Returns

Amount of illuminance

# Definition at line 23 of file LDR.cpp.

References core::res\_10bit.

### 9.6.3.2 getResistance()

# Compute LDR resistance

### **Parameters**

Returns

**LDR** resistance

```
Definition at line 17 of file LDR.cpp.
```

References core::res\_10bit.

# 9.6.4 Member Data Documentation

# 9.6.4.1 m\_pin

```
io::Pin component::LDR::m_pin [private]
```

Pin object

Definition at line 62 of file LDR.h.

Referenced by LDR().

# 9.6.4.2 mr\_ADC

```
core::ADConverter& component::LDR::mr_ADC [private]
```

ADC object reference


Definition at line 63 of file LDR.h.

# 9.7 component::Led Class Reference

Class for handling a Led component.

```
#include <Led.h>
```

Collaboration diagram for component::Led:

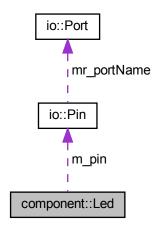

# **Public Member Functions**

- Led (const io::Pin &ar\_pin)
- ~Led ()
- void on ()
- void off ()
- void toggle ()
- uint8\_t isOn ()
- uint8\_t isOff ()

# **Private Attributes**

• io::Pin m\_pin

# 9.7.1 Detailed Description

Class for handling a Led component.

The class implements Led operations

Author

Farid Oubbati ( farid.oubbati@outlook.com)

Date

March 2018

Definition at line 26 of file Led.h.

# 9.7.2 Constructor & Destructor Documentation

# 9.7.2.1 Led()

#### Constructor

Initalizes the Led object

# **Parameters**

```
ar_pin Defines a Pin object
```

# Author

```
Farid Oubbati (farid.oubbati@outlook.com)
```

Date

March 2018

· See Led.h for a description of this code

```
Definition at line 12 of file Led.cpp.
```

References m\_pin, and io::Pin::toOutput().

# 9.7.2.2 $\sim$ Led()

```
component::Led::~Led ( )
```

#### Destructor

Definition at line 19 of file Led.cpp.

```
00020 {
00021
00022 }
```

# 9.7.3 Member Function Documentation

```
9.7.3.1 isOff()
```

```
uint8_t component::Led::isOff ( )
```

Is Led Off

Returns

**Led** status

Definition at line 51 of file Led.cpp.

# 9.7.3.2 isOn()

```
uint8_t component::Led::isOn ( )
```

# Is Led On

Returns

**Led** status

Definition at line 44 of file Led.cpp.

```
00045 {
00046     return m_pin.isHigh();
00047
00048 }
```

# 9.7.3.3 off()

```
void component::Led::off ( )
```

# Turn Led Off

# Definition at line 31 of file Led.cpp.

### 9.7.3.4 on()

```
void component::Led::on ( )
```

# Turn Led On

# Definition at line 25 of file Led.cpp.

```
00027 m_pin.setHigh();
00028
00029 }
```

# 9.7.3.5 toggle()

```
void component::Led::toggle ( )
```

# Toggle Led state

# Definition at line 38 of file Led.cpp.

# 9.7.4 Member Data Documentation

# 9.7.4.1 m\_pin

```
io::Pin component::Led::m_pin [private]
```

Pin object

Definition at line 68 of file Led.h.

Referenced by Led().

# 9.8 core::MCU Class Reference

```
#include <MCU.h>
```

# **Static Public Member Functions**

- static void init ()
- static void selectSleepMode (const sleepMode &a\_sleepMode)
- static void goToSleep (const BODMode &a\_BODMode)
- static void sleepEnable (const uint8 t ar enable)
- static void enableUSART0 (const uint8 t a enable)
- static void enableTimerCounter0 (const uint8\_t a\_enable)
- static void enableTimerCounter1 (const uint8\_t a\_enable)
- static void enableTimerCounter2 (const uint8\_t a\_enable)
- static void enableTWI (const uint8\_t a\_enable)
- static void enableSPI (const uint8\_t a\_enable)
- static void enableADC (const uint8\_t a\_enable)
- static void disableBOD ()

# 9.8.1 Detailed Description

Definition at line 91 of file MCU.h.

# 9.8.2 Member Function Documentation

#### 9.8.2.1 disableBOD()

References MCU\_BOD\_DISABLE.

# 9.8.2.2 enableADC()

# Definition at line 117 of file MCU.cpp.

References MCU\_ADC\_DISABLE, and MCU\_ADC\_ENABLE.

Referenced by core::ADConverter::ADConverter(), and init().

### 9.8.2.3 enableSPI()

References MCU\_SPI\_DISABLE, and MCU\_SPI\_ENABLE.

Referenced by init(), and io::SPI::SPI().

#### 9.8.2.4 enableTimerCounter0()

# Definition at line 67 of file MCU.cpp.

References MCU\_TIMER0\_DISABLE, and MCU\_TIMER0\_ENABLE.

Referenced by init(), and core::TimerCounter0::TimerCounter0().

# 9.8.2.5 enableTimerCounter1()

### Definition at line 77 of file MCU.cpp.

References MCU\_TIMER1\_DISABLE, and MCU\_TIMER1\_ENABLE.

Referenced by init(), and core::TimerCounter1::TimerCounter1().

### 9.8.2.6 enableTimerCounter2()

References MCU\_TIMER2\_DISABLE, and MCU\_TIMER2\_ENABLE.

Referenced by init(), and core::TimerCounter2::TimerCounter2().

#### 9.8.2.7 enableTWI()

00095 }

# Definition at line 97 of file MCU.cpp.

References MCU\_TWI\_DISABLE, and MCU\_TWI\_ENABLE.

Referenced by init().

# 9.8.2.8 enableUSART0()

### Definition at line 57 of file MCU.cpp.

References MCU\_USART0\_DISABLE, and MCU\_USART0\_ENABLE.

Referenced by init(), and io::USART0::USART0().

# 9.8.2.9 goToSleep()

```
void core::MCU::goToSleep (
               const BODMode & a_BODMode ) [static]
Definition at line 21 of file MCU.cpp.
00023
          cli();
00024
          switch (a_BODMode)
00025
00026
              case core::BODMode::enabled:
00028
                  sleepEnable(1);
00029
                  sei();
00030
                  sleep_cpu();
                  sleepEnable(0);
00031
00032
                  break;
00033
              }
00034
              case core::BODMode::disabled:
00035
              {
00036
                  sleepEnable(1);
00037
                  disableBOD();
00038
                  sei();
00039
                  sleep_cpu();
sleepEnable(0);
00040
00041
                  break;
00042
00043
          }
00044
00045 }
```

References core::disabled, and core::enabled.

#### 9.8.2.10 init()

```
void core::MCU::init ( ) [static]
```

### Definition at line 3 of file MCU.cpp.

```
00004 {
          enableUSART0(0);
00006
          enableTimerCounter0(0);
00007
          enableTimerCounter1(0);
80000
          enableTimerCounter2(0):
00009
          enableTWI(0);
00010
          enableSPI(0);
00011
          enableADC(0);
00012
00013 }
```

References enableADC(), enableSPI(), enableTimerCounter0(), enableTimerCounter1(), enableTimerCounter2(), enableTWI(), and enableUSART0().

### 9.8.2.11 selectSleepMode()

References MCU\_SELECT\_SLEEP\_MODE.

#### 9.8.2.12 sleepEnable()

References MCU\_SLEEP\_DISABLE, and MCU\_SLEEP\_ENABLE.


# 9.9 io::Pin Class Reference

Class for handling a Pin.

00055 }

```
#include <Pin.h>
```

Collaboration diagram for io::Pin:

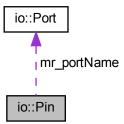

# **Public Member Functions**

- Pin (const uint8\_t a\_pinNumber, const Port &ar\_portName)
- ∼Pin ()
- void toOutput ()
- void toInput (const uint8\_t &ar\_useInternalPullUp)
- · void setLow ()
- void setHigh ()
- void toggle ()
- uint8\_t isHigh ()
- uint8\_t isLow ()
- uint8\_t getPinNumber ()

9.9 io::Pin Class Reference 81

# **Private Attributes**

- const Port & mr\_portName
- const uint8\_t m\_pinNumber

# 9.9.1 Detailed Description

Class for handling a Pin.

The class implements Pin operations

**Author** 

```
Farid Oubbati ( farid.oubbati@outlook.com)
```

Date

March 2018

Definition at line 35 of file Pin.h.

# 9.9.2 Constructor & Destructor Documentation

# 9.9.2.1 Pin()

Constructor

Initalizes the pin object

**Parameters** 

	Defines the Port name in the AVR chip
a_pinNumber	Defines the Pin number in the AVR chip

Author

```
Farid Oubbati (farid.oubbati@outlook.com)
```

Date

March 2018

· See Pin.h for a description of this code

```
9.9.2.2 ∼Pin()
```

```
io::Pin::~Pin ( )
```

Destructor

```
Definition at line 18 of file Pin.cpp. 00020 { 00021 00022 }
```

# 9.9.3 Member Function Documentation

# 9.9.3.1 getPinNumber()

```
uint8_t io::Pin::getPinNumber ( )
```

Get Pin number

Returns

Pin number

```
Definition at line 80 of file Pin.cpp.
```

Referenced by core::ADConverter::selectAnalogInput().

9.9 io::Pin Class Reference

# 9.9.3.2 isHigh()

```
uint8_t io::Pin::isHigh ( )
```

Check if Pin is logic high

Returns

Pin status

```
Definition at line 70 of file Pin.cpp.
```

# 9.9.3.3 isLow()

```
uint8_t io::Pin::isLow ( )
```

Check if Pin is logic low

Returns

Pin status

```
Definition at line 75 of file Pin.cpp.
```

# 9.9.3.4 setHigh()

```
void io::Pin::setHigh ( )
```

Set Pin to logic high

Definition at line 54 of file Pin.cpp.

## 9.9.3.5 setLow()

```
void io::Pin::setLow ( )
```

#### Set Pin to logic low

Definition at line 46 of file Pin.cpp.

#### 9.9.3.6 toggle()

```
void io::Pin::toggle ( )
```

#### Toggle Pin state

Definition at line 62 of file Pin.cpp.

# 9.9.3.7 toInput()

# Configures Pin to input

**Parameters** 

```
ar useInternalPullUp Indicates if internal pull up resistor is used
```

## Definition at line 29 of file Pin.cpp.

```
00030 {
00031
              if (ar_useInternalPullUp)
00032
                   *mr_portName.mp_portReg |= (1 « m_pinNumber);
*mr_portName.mp_ddrReg &= ~(1 « m_pinNumber);
00033
00034
00035
00036
00037
              }
00038
              else
00039
              {
                    *mr_portName.mp_portReg &= ~(1 « m_pinNumber);
*mr_portName.mp_ddrReg &= ~(1 « m_pinNumber);
00040
00041
00042
              }
00043
00044 }
```

Referenced by component::LDR::LDR(), component::PushButton(), and core::ADConverter::selectAnalogInput().

#### 9.9.3.8 toOutput()

```
void io::Pin::toOutput ( )
```

Configures Pin to output

Referenced by component::Buzzer::Buzzer(), component::DCMotor::DCMotor(), component::Led::Led(), component::ServoMotor::ServoM

## 9.9.4 Member Data Documentation

## 9.9.4.1 m\_pinNumber

```
const uint8_t io::Pin::m_pinNumber [private]
```

Pin number

Definition at line 93 of file Pin.h.

## 9.9.4.2 mr\_portName

```
const Port& io::Pin::mr_portName [private]
```

Port object reference

Definition at line 92 of file Pin.h.

# 9.10 io::Port Struct Reference

Contains defintions of pointers to the AVR port's registers.

```
#include <Pin.h>
```

# **Public Attributes**

- volatile uint8\_t \* mp\_ddrReg
- volatile uint8\_t \* mp\_portReg
- volatile uint8\_t \* mp\_pinReg

# 9.10.1 Detailed Description

Contains defintions of pointers to the AVR port's registers.

Definition at line 19 of file Pin.h.

# 9.10.2 Member Data Documentation

# 9.10.2.1 mp\_ddrReg

volatile uint8\_t\* io::Port::mp\_ddrReg

Pointer to the data direction register

Definition at line 21 of file Pin.h.

# 9.10.2.2 mp\_pinReg

volatile uint8\_t\* io::Port::mp\_pinReg

Pointer to the pin register

Definition at line 25 of file Pin.h.

## 9.10.2.3 mp\_portReg

volatile uint8\_t\* io::Port::mp\_portReg

Pointer to the port register


Definition at line 23 of file Pin.h.

# 9.11 component::PushButton Class Reference

Class for handling a PushButton component.

#include <PushButton.h>

Collaboration diagram for component::PushButton:

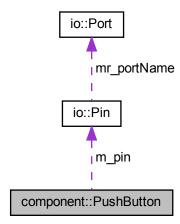

## **Public Member Functions**

- PushButton (const io::Pin &ar\_pin, const uint8\_t &ar\_useInternalPullUp=1, const uint8\_t &ar\_isActiveLow=1)
- ∼PushButton ()
- uint8\_t isPressed ()
- uint8\_t getPressedCount () const
- void resetPressedCount ()

## **Private Attributes**

- io::Pin m\_pin
- const uint8\_t & mr\_isActiveLow
- const uint8\_t & mr\_useInternalPullUp
- uint8\_t m\_buttonPressed

# 9.11.1 Detailed Description

Class for handling a PushButton component.

The class implements PushButton operations

**Author** 

Farid Oubbati ( farid.oubbati@outlook.com)

Date

March 2018

Definition at line 26 of file PushButton.h.

# 9.11.2 Constructor & Destructor Documentation

# 9.11.2.1 PushButton()

```
component::PushButton::PushButton (
    const io::Pin & ar_pin,
    const uint8_t & ar_useInternalPullUp = 1,
    const uint8_t & ar_isActiveLow = 1 )
```

Constructor.

Initializes The PushButton object

#### **Parameters**

ar_pin	Defines a Pin object
ar_useInternalPullUp	Defines if internal pull up resistor is used
ar_isActiveLow	Defines if input is active low or active high

#### **Author**

```
Farid Oubbati ( farid.oubbati@outlook.com)
```

Date

March 2018

· See PushButton.h for a description of this code

```
Definition at line 12 of file PushButton.cpp.
```

```
00013 : m_pin(ar_pin),
00014 : mr_isActiveLow(ar_isActiveLow),
00015 : mr_useInternalPullUp(ar_useInternalPullUp)
00016
00017
00018 {
00019 : m_pin.toInput(mr_useInternalPullUp);
00020 : m_buttonPressed = 0;
00021 }
```

References m\_buttonPressed, m\_pin, mr\_useInternalPullUp, and io::Pin::toInput().

#### 9.11.2.2 ~PushButton()

```
\verb|component::PushButton:: \sim PushButton ()|
```

#### Destructor

```
Definition at line 23 of file PushButton.cpp.
```

```
00024 {
00025
00026 }
```

# 9.11.3 Member Function Documentation

## 9.11.3.1 getPressedCount()

```
uint8_t component::PushButton::getPressedCount ( ) const
```

Get pushbutton pressed count

Returns

PushButton press count

Definition at line 55 of file PushButton.cpp.

#### 9.11.3.2 isPressed()

```
uint8_t component::PushButton::isPressed ( )
```

Is pushbutton pressed

Returns

PushButton status

Definition at line 29 of file PushButton.cpp.

```
00030 {
00031
             if (mr_isActiveLow || mr_useInternalPullUp) {
                 if (m_pin.isLow()) {
                      _delay_us(PUSHBUTTON_DEBOUNCE_TIME_US);
if (m_pin.isLow()) {
00033
00034
00035
                            ++m_buttonPressed;
00036
                            return 1;
00037
                      }
00038
          } else {
00039
00040
                 if (m_pin.isHigh()) {
    _delay_us(PUSHBUTTON_DEBOUNCE_TIME_US);
    if (m_pin.isHigh()) {
        ++m_buttonPressed;
}
00041
00042
00043
00044
00045
                            return 1;
00046
                 }
00047
00048
00049
00050
00051
             return 0;
00052
00053 }
```

References PUSHBUTTON\_DEBOUNCE\_TIME\_US.

## 9.11.3.3 resetPressedCount()

```
void component::PushButton::resetPressedCount ( )
```

Reset pushbutton pressed count

Definition at line 62 of file PushButton.cpp.

# 9.11.4 Member Data Documentation

## 9.11.4.1 m\_buttonPressed

```
uint8_t component::PushButton::m_buttonPressed [private]
```

PushButton pressed count

Definition at line 67 of file PushButton.h.

Referenced by PushButton().

# 9.11.4.2 m\_pin

```
io::Pin component::PushButton::m_pin [private]
```

Pin object

Definition at line 64 of file PushButton.h.

Referenced by PushButton().

## 9.11.4.3 mr\_isActiveLow

```
const uint8_t& component::PushButton::mr_isActiveLow [private]
```

Input active state

Definition at line 65 of file PushButton.h.

#### 9.11.4.4 mr\_useInternalPullUp

const uint8\_t& component::PushButton::mr\_useInternalPullUp [private]

Internal pullup resistor use


Definition at line 66 of file PushButton.h.

Referenced by PushButton().

# 9.12 component::ServoMotor Class Reference

#include <ServoMotor.h>

Collaboration diagram for component::ServoMotor:

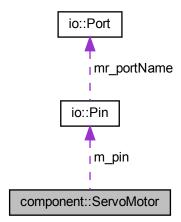

#### **Public Member Functions**

- ServoMotor (const io::Pin &ar\_pin, const uint16\_t &ar\_pulseCycle=0, const uint16\_t &ar\_pulseWidthMin=0, const uint16\_t &ar\_pulseWidthMid=0, const uint16\_t &ar\_pulseWidthMax=0)
- ∼ServoMotor ()
- void on ()
- void off ()
- void toggle ()
- uint16\_t computePulseCycleCount (const uint16\_t &ar\_clockPrescaler)
- uint16\_t computePulseWidthMinCount (const uint16\_t &ar\_clockPrescaler)
- uint16\_t computePulseWidthMidCount (const uint16\_t &ar\_clockPrescaler)
- uint16\_t computePulseWidthMaxCount (const uint16\_t &ar\_clockPrescaler)
- uint16\_t computeRotationAngleCount (const uint8\_t &ar\_angle\_deg, const uint16\_t &ar\_clockPrescaler)
- void rotate (core::TimerCounter1 &ar\_timerCounter1, const uint8\_t &ar\_angle\_deg, const core::channel &ar\_channel=core::channel::A)
- void connect (core::TimerCounter1 &ar\_timerCounter1, const core::channel &ar\_channel=core::channel::A)
- void disconnect (core::TimerCounter1 &ar\_timerCounter1, const core::channel &ar\_channel=core::channel::A)

## **Private Attributes**

- io::Pin m\_pin
- uint16\_t m\_pulseCycle
- uint16\_t m\_pulseWidthMin
- uint16\_t m\_pulseWidthMid
- uint16\_t m\_pulseWidthMax

# 9.12.1 Detailed Description

Definition at line 138 of file ServoMotor.h.

## 9.12.2 Constructor & Destructor Documentation

# 9.12.2.1 ServoMotor()

```
component::ServoMotor::ServoMotor (
              const io::Pin & ar_pin,
              const uint16_t & ar_pulseCycle = 0,
               const uint16_t & ar_pulseWidthMin = 0,
               const uint16_t & ar_pulseWidthMid = 0,
               const uint16_t & ar_pulseWidthMax = 0)
Definition at line 5 of file ServoMotor.cpp.
00010
                             : m_pin(ar_pin),
m_pulseCycle(ar_pulseCycle),
m_pulseWidthMin(ar_pulseWidthMin),
00011
00012
00013
                               m_pulseWidthMid(ar_pulseWidthMid),
00014
                               m_pulseWidthMax(ar_pulseWidthMax)
00015 {
00016
          m_pin.toOutput();
00017
00018 }
```

References m\_pin, and io::Pin::toOutput().

#### 9.12.2.2 ~ServoMotor()

```
component::ServoMotor::\simServoMotor ( )
```

Definition at line 20 of file ServoMotor.cpp.

```
00021 {
00022
00023 }
```

## 9.12.3 Member Function Documentation

#### 9.12.3.1 computePulseCycleCount()

References SERVOMOTOR\_TIMER\_PULSE\_WIDTH\_COUNT.

#### 9.12.3.2 computePulseWidthMaxCount()

 ${\bf References\ SERVOMOTOR\_TIMER\_PULSE\_WIDTH\_COUNT.}$ 

# 9.12.3.3 computePulseWidthMidCount()

References SERVOMOTOR\_TIMER\_PULSE\_WIDTH\_COUNT.

#### 9.12.3.4 computePulseWidthMinCount()

References SERVOMOTOR TIMER PULSE WIDTH COUNT.

## 9.12.3.5 computeRotationAngleCount()

#### Definition at line 64 of file ServoMotor.cpp.

References SERVOMOTOR\_TIMER\_ANGLE\_COUNT.

## 9.12.3.6 connect()

## Definition at line 85 of file ServoMotor.cpp.

References core::clear, core::fast\_PWM\_ICR, core::TimerCounter1::getClockPrescaler(), core::TimerCounter1::selectCompareOutpucore::TimerCounter1::selectOperationMode(), core::TimerCounter1::setCounter(), and core::TimerCounter1::setInputCaptureRegister())

## 9.12.3.7 disconnect()

## Definition at line 97 of file ServoMotor.cpp.

References core::normal, core::TimerCounter1::selectCompareOutputMode(), and core::TimerCounter1::stop().

#### 9.12.3.8 off()

```
void component::ServoMotor::off ( )
```

Turn servo motor Off.

Definition at line 33 of file ServoMotor.cpp.

#### 9.12.3.9 on()

```
void component::ServoMotor::on ( )
```

Turn servo motor On.

Definition at line 28 of file ServoMotor.cpp.

#### 9.12.3.10 rotate()

Definition at line 71 of file ServoMotor.cpp.

# 9.12.3.11 toggle()

```
void component::ServoMotor::toggle ( )
```

Toggle servo motor state.

Definition at line 38 of file ServoMotor.cpp.

# 9.12.4 Member Data Documentation

## 9.12.4.1 m\_pin

```
io::Pin component::ServoMotor::m_pin [private]
```

pin object

Definition at line 188 of file ServoMotor.h.

Referenced by ServoMotor().

## 9.12.4.2 m\_pulseCycle

```
uint16_t component::ServoMotor::m_pulseCycle [private]
```

pulse cycle [us]

Definition at line 190 of file ServoMotor.h.

# 9.12.4.3 m\_pulseWidthMax

```
uint16_t component::ServoMotor::m_pulseWidthMax [private]
```

pulse width max [us]

Definition at line 196 of file ServoMotor.h.

# 9.12.4.4 m\_pulseWidthMid

```
uint16_t component::ServoMotor::m_pulseWidthMid [private]
```

pulse width mid [us]

Definition at line 194 of file ServoMotor.h.

#### 9.12.4.5 m\_pulseWidthMin

```
uint16_t component::ServoMotor::m_pulseWidthMin [private]
```


pulse width min [us]

Definition at line 192 of file ServoMotor.h.

# 9.13 io::SPI Class Reference

```
#include <SPI.h>
```

Collaboration diagram for io::SPI:

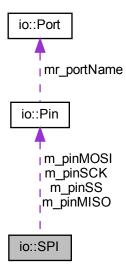

## **Public Member Functions**

- void selectDataMode (const dataMode &ar\_dataMode)
- void selectDataOrder (const dataOrder &ar\_dataOrder)
- void selectOperationMode (const operationMode &ar\_operationMode)
- void selectClockPrescaler (const clockPrescaler &ar\_clockPrescaler)
- void selectSlave (const uint8\_t a\_select)
- uint8\_t writeCollision ()
- uint8\_t transferComplete ()
- void masterSendByte (const uint8\_t &ar\_byte)
- void masterReceiveByte (uint8\_t &ar\_byte)
- void slaveReceiveByte (uint8\_t &ar\_byte)

## **Static Public Member Functions**

- static SPI & getInstance (const io::Pin &ar\_pinSCK, const io::Pin &ar\_pinMISO, const io::Pin &ar\_pinMOSI, const io::Pin &ar\_pinSS)
- static void enableTransferCompleteInterrupt (const uint8\_t a\_enable)
- static void transferCompleteServiceRoutine () \_\_asm\_\_(STR(SPI\_TRANSFER\_COMPLETE\_INTERRUPT)) \_\_attribute\_\_((\_\_signal\_\_

## **Public Attributes**

- static void <u>used</u>
- static void \_\_externally\_visible\_\_

#### **Private Member Functions**

- SPI (const io::Pin &ar\_pinSCK, const io::Pin &ar\_pinMISO, const io::Pin &ar\_pinMOSI, const io::Pin &ar\_
  pinSS)
- ∼SPI ()
- SPI (const SPI &)
- const SPI & operator= (const SPI &)

#### **Private Attributes**

- io::Pin m\_pinSCK
- io::Pin m\_pinMISO
- io::Pin m\_pinMOSI
- io::Pin m\_pinSS

## **Static Private Attributes**

• static volatile uint8\_t m\_data = 0

# 9.13.1 Detailed Description

Definition at line 86 of file SPI.h.

## 9.13.2 Constructor & Destructor Documentation

#### 9.13.2.1 SPI() [1/2]

#### Constructor. Initalizes the USARTO object

```
@param ar_transMode defines transmission mode
@param ar_comMode defines communication mode
@param ar_frameSize defines data frame size
@param ar_stopBit defines number of stop bits
@param ar_parityMode defines parity mode
```

## Definition at line 22 of file SPI.cpp.

References core::MCU::enableSPI(), and enableTransferCompleteInterrupt().

# 9.13.2.2 $\sim$ SPI()

```
io::SPI::~SPI ( ) [private]
```

Destructor.

# Definition at line 37 of file SPI.cpp.

```
00038 {
00039
00040 }
```

# 9.13.2.3 SPI() [2/2]

Overried Copy constructor.

#### 9.13.3 Member Function Documentation

#### 9.13.3.1 enableTransferCompleteInterrupt()

Definition at line 110 of file SPI.cpp.

```
00111 {
00112     if (a_enable) {
00113          SPI_ENABLE_TRANSFER_COMPLETE_INTERRUPT;
00114     } else {
00115          SPI_DISABLE_TRANSFER_COMPLETE_INTERRUPT;
00116     }
00117 }
```

References SPI\_DISABLE\_TRANSFER\_COMPLETE\_INTERRUPT, and SPI\_ENABLE\_TRANSFER\_COMPLETE\_INTERRUPT.

Referenced by SPI().

## 9.13.3.2 getInstance()

#### Definition at line 8 of file SPI.cpp.

## 9.13.3.3 masterReceiveByte()

#### Definition at line 147 of file SPI.cpp.

#### 9.13.3.4 masterSendByte()

References SPI\_DATA\_REGISTER.

#### 9.13.3.5 operator=()

Override assign operator.

#### 9.13.3.6 selectClockPrescaler()

References SPI\_SELECT\_CLOCK\_PRESCALER.

## 9.13.3.7 selectDataMode()

References SPI\_SELECT\_DATA\_MODE.

#### 9.13.3.8 selectDataOrder()

References SPI\_SELECT\_DATA\_ORDER.

#### 9.13.3.9 selectOperationMode()

#### Definition at line 59 of file SPI.cpp.

```
00061
           switch (ar_operationMode)
00062
00063
               case operationMode::master:
00064
00065
                   m_pinMOSI.toOutput();
                   m_pinSCK.toOutput();
00066
00067
                   m_pinMISO.toInput(1);
00068
                   m_pinSS.toOutput();
                   m_pinSS.setHigh();
SPI_SELECT_MASTER_MODE;
SPI_ENABLE;
00069
00070
00071
00072
                   break;
00073
00074
               case operationMode::slave:
00075
                   m_pinMISO.toOutput();
SPI_SELECT_SLAVE_MODE;
SPI_ENABLE;
00076
00077
00078
00079
                   break;
08000
00081
               case operationMode::submaster:
00082
00083
                   m_pinMOSI.toOutput();
00084
                   m_pinSCK.toOutput();
00085
                   m_pinMISO.toInput(1);
00086
                   m_pinSS.toInput(1);
00087
                    SPI_SELECT_MASTER_MODE;
00088
                   SPI_ENABLE;
00089
                   break;
00090
00091
               case operationMode::disable:
00092
00093
                    SPI_DISABLE;
00094
                   break;
00095
00096
           }
00097 }
```

References io::disable, io::master, io::slave, SPI\_DISABLE, SPI\_ENABLE, SPI\_SELECT\_MASTER\_MODE, SPI\_SELECT\_SLAVE\_MODE, and io::submaster.

#### 9.13.3.10 selectSlave()

#### 9.13.3.11 slaveReceiveByte()

## 9.13.3.12 transferComplete()

```
uint8_t io::SPI::transferComplete ( )
```

Is serial transfer complete.

```
Definition at line 48 of file SPI.cpp.

00049 {
00050     return (SPI_STATUS_REGISTER & (1 « SPI_TRANSFER_COMPLETE));
00051 }
```

References SPI\_STATUS\_REGISTER, and SPI\_TRANSFER\_COMPLETE.

## 9.13.3.13 transferCompleteServiceRoutine()

```
void io::SPI::transferCompleteServiceRoutine ( ) [static]
```

Serial transfer complete ISR.

References SPI\_DATA\_REGISTER.

## 9.13.3.14 writeCollision()

```
uint8_t io::SPI::writeCollision ( )
```

Is there write collision.

```
Definition at line 42 of file SPI.cpp.
```

```
00043 {
00044 return (SPI_STATUS_REGISTER & (1 « SPI_WRITE_COLLISION));
00045 }
```

References SPI\_STATUS\_REGISTER, and SPI\_WRITE\_COLLISION.

## 9.13.4 Member Data Documentation

## 9.13.4.1 \_\_externally\_visible\_\_

```
void io::SPI::__externally_visible__
```

Definition at line 124 of file SPI.h.

# 9.13.4.2 \_\_used\_\_

```
void io::SPI::__used__
```

Definition at line 124 of file SPI.h.

# 9.13.4.3 m\_data

```
volatile uint8_t io::SPI::m_data = 0 [static], [private]
```

Definition at line 154 of file SPI.h.

# 9.13.4.4 m\_pinMISO

```
io::Pin io::SPI::m_pinMISO [private]
```

pin object

Definition at line 157 of file SPI.h.

# 9.13.4.5 m\_pinMOSI

```
io::Pin io::SPI::m_pinMOSI [private]
pin object
Definition at line 158 of file SPI.h.
```

# 9.13.4.6 m\_pinSCK

```
io::Pin io::SPI::m_pinSCK [private]
pin object
Definition at line 156 of file SPI.h.
```


## 9.13.4.7 m\_pinSS

```
io::Pin io::SPI::m_pinSS [private]
pin object
Definition at line 159 of file SPI.h.
```

# 9.14 component::StepperMotor Class Reference

```
#include <StepperMotor.h>
```

Collaboration diagram for component::StepperMotor:

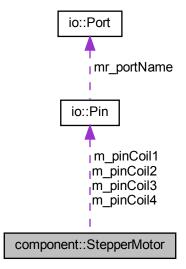

## **Public Member Functions**

- StepperMotor (const mode &ar\_mode, const io::Pin &ar\_pinCoil1, const io::Pin &ar\_pinCoil2, const io::Pin &ar\_pinCoil3, const io::Pin &ar\_pinCoil4)
- ∼StepperMotor ()
- void step (const int16\_t a\_step, const uint16\_t a\_speed)
- void step (const int16\_t a\_step, const uint16\_t a\_speed, const float a\_stepAngle)
- void step (const int16\_t a\_step, const uint16\_t a\_speed, const uint16\_t a\_accel, const uint16\_t a\_decel)
- void stepPulse (const uint8\_t a\_stepPulse)
- void stepDelay (uint8\_t a\_stepDelay)
- uint8 t goalReached ()
- void setCurrentPos (uint16\_t a\_currentPos)
- uint16\_t currentPos ()
- uint8\_t computeStepDelay (uint16\_t a\_step, const uint16\_t a\_speed, const uint16\_t a\_accel, const uint16\_t a\_decel)

#### **Public Attributes**

- uint16 t m accelTime
- uint16\_t m\_decelTime
- uint16\_t m\_constSpeedTime

# **Private Attributes**

- · io::Pin m pinCoil1
- io::Pin m\_pinCoil2
- io::Pin m\_pinCoil3
- io::Pin m\_pinCoil4
- mode stepMode
- uint8\_t m\_goalReached
- uint16\_t m\_currentPos

## 9.14.1 Detailed Description

Definition at line 75 of file StepperMotor.h.

# 9.14.2 Constructor & Destructor Documentation

#### 9.14.2.1 StepperMotor()

```
component::StepperMotor::StepperMotor (
              const mode & ar_mode,
               const io::Pin & ar_pinCoil1,
               const io::Pin & ar_pinCoil2,
               const io::Pin & ar_pinCoil3,
               const io::Pin & ar_pinCoil4 )
Definition at line 8 of file StepperMotor.cpp.
         : m_pinCoil1(ar_pinCoil1),
    m_pinCoil2(ar_pinCoil2),
00013
00014
            m_pinCoil3(ar_pinCoil3),
00015
00016
            m_pinCoil4(ar_pinCoil4),
00017
            stepMode(ar_mode)
00018 {
00019
          m_pinCoil1.toOutput();
00020
          m_pinCoil2.toOutput();
00021
          m_pinCoil3.toOutput();
00022
00023
          m_pinCoil4.toOutput();
00024
          m_goalReached = 0;
00025
          m_currentPos = 0;
00026
00027
00028 }
```

References m\_currentPos, m\_goalReached, m\_pinCoil1, m\_pinCoil2, m\_pinCoil3, m\_pinCoil4, and io::Pin::toOutput().

#### 9.14.2.2 ~StepperMotor()

```
component::StepperMotor::~StepperMotor ( )
Definition at line 30 of file StepperMotor.cpp.
00031 {
00032
00033 }
```

## 9.14.3 Member Function Documentation

# 9.14.3.1 computeStepDelay()

```
00140
         static uint64_t l_current_position=0;
00141
00142
00143
00144
00145
00146
00147
00148
         if (l_constSpeedTime<0)</pre>
00149
00150
              l_constSpeedTime=0;
00151
              1_accelTime = static_cast<uint32_t>(1000UL*sqrtf(a_step/a_accel));
              a_speed=l_accelTime*a_accel/1000UL;
00152
00153
              1_decelTime = 1000UL*a_speed/a_decel;
00154
00155
         }
00156
00157
00158
00159
00160
         if (l_time<=l_accelTime)</pre>
00161
00162
              l_speed=a_accel*l_time;
00163
00164
00165
         else if ((l_time>l_accelTime) && (l_time<=(l_accelTime+l_constSpeedTime)))</pre>
00166
00167
               l_speed=1000UL*a_speed;
00168
00169
00170
         else if
        ((1\_time>(1\_accelTime+1\_constSpeedTime)) \&\& (1\_time<=1\_accelTime+1\_constSpeedTime+1\_decelTime))\\
00171
00172
              {\tt l\_speed=\ (1000UL*a\_speed)-a\_decel*(l\_time-l\_accelTime-l\_constSpeedTime);}
00173
00174
00175
         }
00176
00177
00178
         1_time=1_time+1;
00179
00180
         1_speed_time_product = 1_speed_time_product+1_speed;
00181
00182
00183
          if (l_speed_time_product - l_current_position >= 1000000UL)
00184
00185
              1_current_position=1_current_position+1000000UL;
00186
             return 1;
00187
         }
00188
         else
00189
         {
00190
              stepDelay(1);
00191
              return 0;
00192
         }
00193
00194
00195
00196
00197
00198 }
```

## 9.14.3.2 currentPos()

```
uint16_t component::StepperMotor::currentPos ( )
```

#### Definition at line 40 of file StepperMotor.cpp.

#### 9.14.3.3 goalReached()

```
uint8_t component::StepperMotor::goalReached ( )
```

# Definition at line 403 of file StepperMotor.cpp.

```
00405 return m_goalReached;
00406
00407 }
```

## 9.14.3.4 setCurrentPos()

#### Definition at line 35 of file StepperMotor.cpp.

# 9.14.3.5 step() [1/3]

Turn servo motor On.

## Definition at line 201 of file StepperMotor.cpp.

```
00202 {
00203
          static int16_t l_stepNumber = 0;
00204
          static uint8_t l_stepDelay_ms = static_cast<uint8_t>(1000UL/a_speed);
00205
00206
          if (a_step<=0)</pre>
00207
              if (l_stepNumber== -a_step)
00208
00209
              {
00210
                  m_goalReached = 1;
00211
00212
              } else {
00213
                  l_stepNumber++;
00214
                  m_currentPos++;
00215
00216
00217
00218
         } else {
00219
00220
              if (l_stepNumber == -a_step)
00221
                  m_goalReached = 1;
00222
00223
00224
              } else {
00225
                  l_stepNumber--;
00226
                  m_currentPos--;
00227
00228
              }
00229
         }
00230
00231
00232
          if (m_goalReached == 0)
00233
00234
00235
              switch (stepMode)
00236
00237
                  case mode::fullStep:
```

```
00238
                   {
00239
                        // equivalent to l_stepNumber % 4
                        // 1 3 5 7 <->
00240
                        stepPulse(2*(l_stepNumber & 3)+1);
00241
00242
                        break;
00243
                   }
00245
                   case mode::halfStep:
00246
                        // equivalent to 1_stepNumber % 8 // 0 1 2 3 4 5 6 7 <->
00247
00248
                        stepPulse(l_stepNumber & 7);
00249
00250
                        break;
00251
00252
              }
00253
00254
               stepDelay(l_stepDelay_ms);
00255
00256
          }
00257 }
```

References component::fullStep, and component::halfStep.

# 9.14.3.6 step() [2/3]

#### Definition at line 259 of file StepperMotor.cpp.

```
00261
          static int16_t l_stepNumber = 0;
00262
          static uint8_t 1_stepDelay_ms = static_cast<uint8_t>(1000UL*a_stepAngle/a_speed);
00263
00264
          if (a_step<=0)
00265
00266
              if (l_stepNumber== -a_step)
00267
00268
                  m_goalReached = 1;
00269
00270
              } else {
00271
                  l_stepNumber++;
00272
                  m_currentPos++;
00273
00274
00275
00276
         } else {
00277
00278
              if (l_stepNumber == -a_step)
00279
00280
                  m_goalReached = 1;
00281
00282
              } else {
                  l_stepNumber--;
00283
00284
                  m_currentPos--;
00285
00286
00287
          }
00288
00289
00290
          if (m_goalReached == 0)
00291
00292
00293
              switch (stepMode)
00294
                  case mode::fullStep:
00295
00296
00297
                      // equivalent to l_stepNumber % 4
00298
                      // 1 3 5 7 <->
00299
                      stepPulse(2*(1_stepNumber & 3)+1);
00300
                      break;
00301
                  }
00302
00303
                  case mode::halfStep:
00304
                  {
```

```
00305
                         // equivalent to 1_stepNumber % 8 // 0 1 2 3 4 5 6 7 <->
00306
00307
                         stepPulse(l_stepNumber & 7);
00308
                         break;
00309
00310
               }
00311
00312
               stepDelay(l_stepDelay_ms);
00313
00314
           }
00315
00316
00317 }
```

References component::fullStep, and component::halfStep.

#### 9.14.3.7 step() [3/3]

#### Definition at line 47 of file StepperMotor.cpp.

```
00052
          static int16_t l_stepNumber = 0;
00053
          uint8_t l_stepDelay_ms = 0;
00054
          uint16_t l_step=0;
00055
00056
          if (a_step<=0)</pre>
00057
          {
00058
             1_step = -a_step;
00059
          } else
00060
00061
              l_step = a_step;
00062
         }
00063
00064
          l_stepDelay_ms = computeStepDelay(l_step,
00065
00066
                                             a_accel,
00067
                                             a_decel);
00068
00069 if (1_stepDelay_ms>0)
00070 {
00071
00072
          if (a_step<=0)</pre>
00073
00074
              if (l_stepNumber== -a_step)
00075
00076
                  m_goalReached = 1;
00077
00078
              } else {
                  l_stepNumber++;
00079
00080
                  m_currentPos++;
00081
00082
00083
00084
          } else {
00085
00086
              if (l_stepNumber == -a_step)
00087
              {
00088
                  m_goalReached = 1;
00089
00090
              } else {
                  l_stepNumber--;
00091
00092
                  m_currentPos--;
00093
00094
              }
00095
          }
00096
00097
00098
          if (m_goalReached == 0)
00099
00100
00101
              switch (stepMode)
```

```
{
00103
                    case mode::fullStep:
00104
                        // equivalent to l_stepNumber % 4 // 1 3 5 7 <->
00105
00106
                        stepPulse(2*(1_stepNumber & 3)+1);
00107
00108
                        break;
00109
00110
00111
                    case mode::halfStep:
00112
00113
                         // equivalent to 1_stepNumber \% 8 // 0 1 2 3 4 5 6 7 <->
00114
00115
                         stepPulse(l_stepNumber & 7);
00116
00117
               }
00118
00119
00120
               stepDelay(l_stepDelay_ms);
00121
00122
00123 }
00124
00125 }
```

References component::fullStep, and component::halfStep.

#### 9.14.3.8 stepDelay()

#### Definition at line 395 of file StepperMotor.cpp.

# 9.14.3.9 stepPulse()

## Definition at line 320 of file StepperMotor.cpp.

```
00321 {
00322
00323
          switch (a_stepPulse) {
00324
           case 0: // 1000
00325
              m_pinCoil1.setHigh();
m_pinCoil2.setLow();
m_pinCoil3.setLow();
00326
00327
00328
               m_pinCoil4.setLow();
00329
00330
               break;
00331
             case 1:
                       // 1100
00332
00333
00334
              m_pinCoil1.setHigh();
00335
              m_pinCoil2.setHigh();
00336
              m_pinCoil3.setLow();
00337
               m_pinCoil4.setLow();
00338
               break;
00339
00340
             case 2:
                        //0100
00341
00342
               m_pinCoil1.setLow();
```

```
00343
              m_pinCoil2.setHigh();
00344
              m_pinCoil3.setLow();
00345
              m_pinCoil4.setLow();
00346
              break;
00347
00348
            case 3:
                      //0110
00350
              m_pinCoil1.setLow();
00351
             m_pinCoil2.setHigh();
00352
              m_pinCoil3.setHigh();
              m_pinCoil4.setLow();
00353
00354
              break;
00355
00356
            case 4:
                      //0010
00357
            m_pinCoil1.setLow();
00358
             m_pinCoil2.setLow();
m_pinCoil3.setHigh();
00359
00360
00361
              m_pinCoil4.setLow();
00362
              break;
00363
00364
            case 5:
                      //0011
00365
              m_pinCoil1.setLow();
m_pinCoil2.setLow();
00366
00367
00368
              m_pinCoil3.setHigh();
00369
              m_pinCoil4.setHigh();
00370
              break;
00371
                       //0001
00372
            case 6:
00373
00374
              m_pinCoil1.setLow();
00375
             m_pinCoil2.setLow();
00376
              m_pinCoil3.setLow();
00377
              m_pinCoil4.setHigh();
00378
              break;
00379
00380
            case 7:
                       //1001
00381
00382
            m_pinCoil1.setHigh();
             m_pinCoil2.setLow();
m_pinCoil3.setLow();
00383
00384
              m_pinCoil4.setHigh();
00385
00386
              break;
00387
00388
00389
00390
00391 }
```

# 9.14.4 Member Data Documentation

# 9.14.4.1 m\_accelTime

```
uint16_t component::StepperMotor::m_accelTime
```

pulse delay in ms

Definition at line 118 of file StepperMotor.h.

#### 9.14.4.2 m\_constSpeedTime

```
uint16_t component::StepperMotor::m_constSpeedTime
```

pulse delay in ms

Definition at line 120 of file StepperMotor.h.

## 9.14.4.3 m\_currentPos

```
uint16_t component::StepperMotor::m_currentPos [private]
```

pulse delay in ms

Definition at line 139 of file StepperMotor.h.

Referenced by StepperMotor().

# 9.14.4.4 m\_decelTime

```
uint16_t component::StepperMotor::m_decelTime
```

pulse delay in ms

Definition at line 119 of file StepperMotor.h.

#### 9.14.4.5 m\_goalReached

```
uint8_t component::StepperMotor::m_goalReached [private]
```

Definition at line 138 of file StepperMotor.h.

Referenced by StepperMotor().

## 9.14.4.6 m\_pinCoil1

```
io::Pin component::StepperMotor::m_pinCoil1 [private]
```

pin object

Definition at line 132 of file StepperMotor.h.

Referenced by StepperMotor().

# 9.14.4.7 m\_pinCoil2

```
io::Pin component::StepperMotor::m_pinCoil2 [private]
```

pin object

Definition at line 133 of file StepperMotor.h.

Referenced by StepperMotor().

## 9.14.4.8 m\_pinCoil3

```
io::Pin component::StepperMotor::m_pinCoil3 [private]
```

pin object

Definition at line 134 of file StepperMotor.h.

Referenced by StepperMotor().

## 9.14.4.9 m\_pinCoil4

```
io::Pin component::StepperMotor::m_pinCoil4 [private]
```

pin object

Definition at line 135 of file StepperMotor.h.

Referenced by StepperMotor().

## 9.14.4.10 stepMode

```
mode component::StepperMotor::stepMode [private]
```


steps per revolution

Definition at line 137 of file StepperMotor.h.

# 9.15 core::TimerCounter Class Reference

#include <TimerCounter.h>

Inheritance diagram for core::TimerCounter:

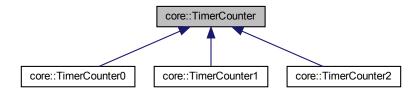

#### **Public Member Functions**

- virtual void selectOperationMode (const operationMode & ar operationMode)=0
- virtual void start ()=0
- virtual void stop ()=0
- virtual void selectClockSource (const clockSource &ar\_clockSource)=0
- virtual void selectCompareOutputMode (const channel &ar\_channel, const compareOutputMode &ar\_

   compareOutputMode)=0
- virtual void setCounter (const uint16\_t &ar\_dataBuffer)=0
- virtual uint16\_t getCounter () const =0
- virtual void setOutputCompareRegister (const channel &ar\_channel, const uint16\_t &ar\_dataBuffer)=0
- virtual uint16\_t getOutputCompareRegister (const channel &ar\_channel) const =0
- virtual void enableOutputCompareMatchInterrupt (const channel &ar channel, const uint8 t a enable)=0
- virtual void enableOverflowInterrupt (const uint8\_t a\_enable)=0
- virtual uint16\_t getClockPrescaler ()=0

# 9.15.1 Detailed Description

Definition at line 517 of file TimerCounter.h.

#### 9.15.2 Member Function Documentation

#### 9.15.2.1 enableOutputCompareMatchInterrupt()

Implemented in core::TimerCounter1, core::TimerCounter0, and core::TimerCounter2.

# 9.15.2.2 enableOverflowInterrupt()

 $Implemented\ in\ core:: Timer Counter 1,\ core:: Timer Counter 0,\ and\ core:: Timer Counter 2.$ 

## 9.15.2.3 getClockPrescaler()

```
virtual uint16_t core::TimerCounter::getClockPrescaler ( ) [pure virtual]
```

Implemented in core::TimerCounter1, core::TimerCounter0, and core::TimerCounter2.

#### 9.15.2.4 getCounter()

```
virtual uint16_t core::TimerCounter::getCounter ( ) const [pure virtual]
Implemented in core::TimerCounter1, core::TimerCounter0, and core::TimerCounter2.
```

#### 9.15.2.5 getOutputCompareRegister()

```
\label{lem:const} \begin{tabular}{ll} virtual uint16\_t core::TimerCounter::getOutputCompareRegister ( \\ const channel & ar\_channel ) const [pure virtual] \end{tabular}
```

Implemented in core::TimerCounter1, core::TimerCounter0, and core::TimerCounter2.

#### 9.15.2.6 selectClockSource()

Implemented in core::TimerCounter0, core::TimerCounter1, and core::TimerCounter2.

#### 9.15.2.7 selectCompareOutputMode()

Implemented in core::TimerCounter1, core::TimerCounter0, and core::TimerCounter2.

## 9.15.2.8 selectOperationMode()

Implemented in core::TimerCounter0, core::TimerCounter1, and core::TimerCounter2.

## 9.15.2.9 setCounter()

Implemented in core::TimerCounter1, core::TimerCounter0, and core::TimerCounter2.

## 9.15.2.10 setOutputCompareRegister()

 $Implemented \ in \ core:: Timer Counter 1, \ core:: Timer Counter 0, \ and \ core:: Timer Counter 2.$ 

#### 9.15.2.11 start()

```
virtual void core::TimerCounter::start ( ) [pure virtual]
```

Implemented in core::TimerCounter0, core::TimerCounter1, and core::TimerCounter2.

## 9.15.2.12 stop()


```
virtual void core::TimerCounter::stop ( ) [pure virtual]
```

Implemented in core::TimerCounter0, core::TimerCounter1, and core::TimerCounter2.


# 9.16 core::TimerCounter0 Class Reference

```
#include <TimerCounter0.h>
```

Inheritance diagram for core::TimerCounter0:

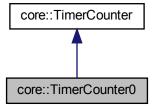

Collaboration diagram for core::TimerCounter0:

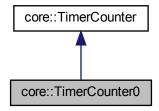

#### **Public Member Functions**

- void selectOperationMode (const operationMode & ar operationMode) override
- · void start () override
- · void stop () override
- void selectClockSource (const clockSource &ar\_clockSource) override
- void selectCompareOutputMode (const channel &ar\_channel, const compareOutputMode &ar\_compare ← OutputMode) override
- void setCounter (const uint16\_t &ar\_dataBuffer) override
- uint16\_t getCounter () const override
- void setOutputCompareRegister (const channel &ar\_channel, const uint16\_t &ar\_dataBuffer) override
- uint16\_t getOutputCompareRegister (const channel &ar\_channel) const override
- void enableOutputCompareMatchInterrupt (const channel &ar\_channel, const uint8\_t a\_enable) override
- void enableOverflowInterrupt (const uint8\_t a\_enable) override
- uint16\_t getClockPrescaler () override

#### **Static Public Member Functions**

- static TimerCounter0 & getInstance (const channel &ar\_channel=channel::A, const operationMode &ar←
   \_operationMode=operationMode::normal, const clockSource &ar\_clockSource=clockSource::noClock, const compareOutputMode &ar\_compareOutputMode::normal)
- static void outputCompareMatchAServiceRoutine () \_\_asm\_\_(STR(TIMER0\_COM\_CHANNEL\_A\_INTERRUPT)) \_\_attribute\_\_((\_\_signal\_\_
- static void outputCompareMatchBServiceRoutine () \_\_asm\_\_(STR(TIMER0\_COM\_CHANNEL\_B\_INTERRUPT)) \_\_attribute\_\_((\_\_signal\_\_
- static void overflowServiceRoutine () \_\_asm\_\_(STR(TIMER0\_OVERFLOW\_INTERRUPT)) \_\_attribute\_\_((←
   \_\_signal\_\_

#### **Public Attributes**

- static void <u>used</u>
- static void \_\_externally\_visible\_\_

## **Private Member Functions**

- TimerCounter0 (const channel &ar\_channel, const operationMode &ar\_operationMode, const clockSource &ar\_clockSource, const compareOutputMode &ar\_compareOutputMode)
- ∼TimerCounter0 ()
- TimerCounter0 (const TimerCounter0 &)
- const TimerCounter0 & operator= (const TimerCounter0 &)

## **Private Attributes**

- uint16\_t m\_clockPrescaler
- · uint8 t m clockSource

## 9.16.1 Detailed Description

Definition at line 279 of file TimerCounter0.h.

## 9.16.2 Constructor & Destructor Documentation

#### 9.16.2.1 TimerCounter0() [1/2]

## Definition at line 20 of file TimerCounter0.cpp.

```
00024 {
00025     core::MCU::enableTimerCounter0(1);
00026     stop();
00027     selectOperationMode(ar_operationMode);
00028     selectClockSource(ar_clockSource);
00029     selectCompareOutputMode(ar_channel,ar_compareOutputMode);
00030     00031
00032     00033 }
```

References core::MCU::enableTimerCounter0().

#### 9.16.2.2 ∼TimerCounter0()

```
core::TimerCounter0::~TimerCounter0 ( ) [private]

Definition at line 34 of file TimerCounter0.cpp.
00035 {
00036
00037 }
```

#### 9.16.2.3 TimerCounter0() [2/2]

Overried Copy constructor.

## 9.16.3 Member Function Documentation

## 9.16.3.1 enableOutputCompareMatchInterrupt()

Implements core::TimerCounter.

Definition at line 216 of file TimerCounter0.cpp.

```
00218
          switch (ar_channel)
00219
00220
              case core::channel::A:
00221
00222
                  if (a_enable) {
00223
00224
                      TIMERO_ENABLE_COM_CHANNEL_A_INTERRUPT;
00225
                  } else {
00226
00227
00228
                      TIMERO_DISABLE_COM_CHANNEL_A_INTERRUPT;
00230
                  break;
00231
              case core::channel::B:
{
00232
00233
00234
                  if (a_enable) {
00235
00236
                      TIMERO_ENABLE_COM_CHANNEL_B_INTERRUPT;
00237
00238
                  } else {
00239
00240
                      TIMERO_DISABLE_COM_CHANNEL_B_INTERRUPT;
00241
00242
00243
                  break;
00244
              }
00245
         }
00246
00247 }
```

References core::A, core::B, TIMERO\_DISABLE\_COM\_CHANNEL\_A\_INTERRUPT, TIMERO\_DISABLE\_COM\_CHANNEL\_B\_INTERTIMERO ENABLE COM CHANNEL A INTERRUPT, and TIMERO ENABLE COM CHANNEL B INTERRUPT.

## 9.16.3.2 enableOverflowInterrupt()

Implements core::TimerCounter.

Definition at line 251 of file TimerCounter0.cpp.

References TIMERO\_DISABLE\_OVERFLOW\_INTERRUPT, and TIMERO\_ENABLE\_OVERFLOW\_INTERRUPT.

#### 9.16.3.3 getClockPrescaler()

```
uint16_t core::TimerCounter0::getClockPrescaler ( ) [override], [virtual]
```

Implements core::TimerCounter.

```
Definition at line 141 of file TimerCounter0.cpp. {\tt 00142}\ \ \{
```

```
00142 (return m_clockPrescaler; 00144 }
```

# 9.16.3.4 getCounter()

```
uint16_t core::TimerCounter0::getCounter ( ) const [override], [virtual]
```

Implements core::TimerCounter.

```
Definition at line 176 of file TimerCounter0.cpp.
```

```
00177 {
00178 return TCNT0;
00179 }
```

#### 9.16.3.5 getInstance()

```
core::TimerCounter0 & core::TimerCounter0::getInstance (
             const channel & ar_channel = channel::A,
             const operationMode & ar_operationMode = operationMode::normal,
             const clockSource & ar_clockSource = clockSource::noClock,
             const compareOutputMode & ar_compareOutputMode = compareOutputMode::normal )
[static]
Definition at line 5 of file TimerCounter0.cpp.
00009 4
00010
         static TimerCounter0 l_instance(ar_channel,
00011
00012
                                       ar_clockSource,
00013
                                       ar_compareOutputMode);
00014
00015
         return l_instance;
00016
00018 }
```

## 9.16.3.6 getOutputCompareRegister()

Implements core::TimerCounter.

Definition at line 201 of file TimerCounter0.cpp.

```
00202 {
00203
          switch (ar_channel)
00204
00205
              case core::channel::A:
00206
             {
00207
                  return OCROA;
00208
00209
             case core::channel::B:
00210
             {
00211
                  return OCROB;
00212
00213
          }
00214 }
```

References core::A, and core::B.

# 9.16.3.7 operator=()

Override assign operator.

# 9.16.3.8 outputCompareMatchAServiceRoutine()

```
\verb|static| void core:: TimerCounter 0:: output Compare Match A Service Routine () [static]|
```

### 9.16.3.9 outputCompareMatchBServiceRoutine()

```
static void core::TimerCounter0::outputCompareMatchBServiceRoutine ( ) [static]
```

#### 9.16.3.10 overflowServiceRoutine()

```
static void core::TimerCounter0::overflowServiceRoutine ( ) [static]
```

#### 9.16.3.11 selectClockSource()

Implements core::TimerCounter.

#### Definition at line 39 of file TimerCounter0.cpp.

```
00040 {
00041
          switch (ar_clockSource)
00042
00043
              case core::clockSource::noClock:
00044
              {
                  m_clockPrescaler=0;
00045
                  m_clockSource=0;
00046
00047
00048
00049
              case core::clockSource::PS_1:
00050
              {
00051
                  m clockPrescaler=1:
00052
                  m_clockSource=1;
00053
                  break;
00054
00055
              case core::clockSource::PS_8:
00056
00057
                  m_clockPrescaler=8;
00058
                  m_clockSource=2;
00059
                  break;
00060
00061
              case core::clockSource::PS_64:
00062
00063
                  m clockPrescaler=64:
                  m_clockSource=3;
00064
00065
                  break;
00066
00067
              case core::clockSource::PS_256:
00068
                  m_clockPrescaler=256;
00069
00070
                  m clockSource=4;
00071
                  break:
00072
00073
              case core::clockSource::PS_1024:
00074
00075
                  m_clockPrescaler=1024;
00076
                  m_clockSource=5;
00077
                  break;
00078
00079
              case core::clockSource::extern_Clock_T0_Falling_Edge:
08000
                  m_clockPrescaler=0;
00081
                  m_clockSource=6;
00082
00083
                  break;
00084
00085
              case core::clockSource::extern_Clock_T0_Rising_Edge:
00086
00087
                  m_clockPrescaler=0;
00088
                  m_clockSource=7;
00089
                  break:
00090
              }
00091
          }
```

```
00092
00093
00094 }
```

References core::extern\_Clock\_T0\_Falling\_Edge, core::extern\_Clock\_T0\_Rising\_Edge, core::noClock, core::PS\_1, core::PS\_1024, core::PS\_256, core::PS\_64, and core::PS\_8.

#### 9.16.3.12 selectCompareOutputMode()

Implements core::TimerCounter.

Definition at line 152 of file TimerCounter0.cpp.

```
00153 {
00154
          switch (ar_channel)
00155
00156
              case core::channel::A:
00157
00158
                  TIMERO_SELECT_COM_CHANNEL_A(static_cast<uint8_t>(ar_compareOutputMode));
00159
                  break;
00160
00161
              case core::channel::B:
00162
             {
00163
                  TIMER0_SELECT_COM_CHANNEL_B(static_cast<uint8_t>(ar_compareOutputMode));
00164
00165
             }
00166
          }
00167 }
```

References core::A, core::B, TIMER0\_SELECT\_COM\_CHANNEL\_A, and TIMER0\_SELECT\_COM\_CHANNEL\_B.

## 9.16.3.13 selectOperationMode()

Implements core::TimerCounter.

#### Definition at line 96 of file TimerCounter0.cpp.

```
00097 {
00098
          switch (ar_operationMode)
00099
00100
              case core::operationMode::normal:
00101
00102
                  TIMERO_SELECT_OPERATION_MODE(0);
00103
                  break;
00104
00105
              case core::operationMode::PWM_PC:
00106
00107
                  TIMERO_SELECT_OPERATION_MODE(1);
00108
                  break;
00109
00110
              case core::operationMode::CTC_OCR:
00111
00112
                  TIMERO_SELECT_OPERATION_MODE(2);
00113
00114
00115
              case core::operationMode::fast_PWM:
00116
00117
                  TIMERO_SELECT_OPERATION_MODE(3);
00118
                  break;
```

```
00120
              case core::operationMode::PWM_PC_OCR:
00121
                  TIMERO_SELECT_OPERATION_MODE(5);
00122
00123
                  break;
00124
00125
              case core::operationMode::fast_PWM_OCR:
00126
00127
                  TIMERO_SELECT_OPERATION_MODE(7);
00128
                  break;
00129
00130
00131
          }
00132
00133 }
```

References core::CTC\_OCR, core::fast\_PWM\_ocR, core::normal, core::PWM\_PC, core::PWM\_PC\_ocR, and TIMER0 SELECT OPERATION MODE.

#### 9.16.3.14 setCounter()

Implements core::TimerCounter.

#### Definition at line 171 of file TimerCounter0.cpp.

### 9.16.3.15 setOutputCompareRegister()

Implements core::TimerCounter.

#### Definition at line 181 of file TimerCounter0.cpp.

```
00182 {
00183
          switch (ar_channel)
00184
00185
              case core::channel::A:
00186
00187
                  OCROA = static_cast<uint8_t>(ar_dataBuffer);
00188
                  break:
00189
00190
              case core::channel::B:
00191
00192
                  OCROB = static_cast<uint8_t>(ar_dataBuffer);
00193
                  break;
00194
00195
00196
          }
00197 }
```

References core::A, and core::B.

#### 9.16.3.16 start()

References TIMER0\_SELECT\_CLOCK\_SOURCE.

## 9.16.3.17 stop()

```
void core::TimerCounter0::stop ( ) [override], [virtual]
```

Implements core::TimerCounter.

Definition at line 146 of file TimerCounter0.cpp.

References TIMERO\_STOP.

## 9.16.4 Member Data Documentation

```
9.16.4.1 __externally_visible__
```

```
static void core::TimerCounter0::__externally_visible__
```

Definition at line 313 of file TimerCounter0.h.

```
9.16.4.2 __used__
```

```
static void core::TimerCounter0::__used__
```

Definition at line 313 of file TimerCounter0.h.

## 9.16.4.3 m\_clockPrescaler

uint16\_t core::TimerCounter0::m\_clockPrescaler [private]

Definition at line 340 of file TimerCounter0.h.

## 9.16.4.4 m\_clockSource


uint8\_t core::TimerCounter0::m\_clockSource [private]

Definition at line 342 of file TimerCounter0.h.


# 9.17 core::TimerCounter1 Class Reference

#include <TimerCounter1.h>

Inheritance diagram for core::TimerCounter1:

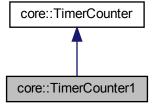

Collaboration diagram for core::TimerCounter1:

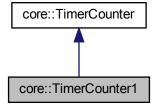

#### **Public Member Functions**

- void selectOperationMode (const operationMode &ar\_operationMode) override
- void start () override
- · void stop () override
- void selectClockSource (const clockSource &ar\_clockSource) override
- void selectCompareOutputMode (const channel &ar\_channel, const compareOutputMode &ar\_compare ← OutputMode) override
- void setCounter (const uint16\_t &ar\_dataBuffer) override
- uint16 t getCounter () const override
- · void setOutputCompareRegister (const channel &ar\_channel, const uint16\_t &ar\_dataBuffer) override
- uint16 t getOutputCompareRegister (const channel &ar channel) const override
- void setInputCaptureRegister (const uint16\_t &ar\_dataBuffer)
- uint16\_t getInputCaptureRegister () const
- void enableOutputCompareMatchInterrupt (const channel &ar\_channel, const uint8\_t a\_enable) override
- void enableOverflowInterrupt (const uint8 t a enable) override
- void enableInputCaptureInterrupt (const uint8\_t a\_enable)
- uint16\_t getClockPrescaler () override

#### Static Public Member Functions

- static TimerCounter1 & getInstance (const channel &ar\_channel=channel::A, const operationMode &ar
   \_operationMode=operationMode::normal, const clockSource &ar\_clockSource=clockSource::noClock, const compareOutputMode &ar\_compareOutputMode::normal)
- static void outputCompareMatchAServiceRoutine () \_\_asm\_\_(STR(TIMER1\_COM\_CHANNEL\_A\_INTERRUPT))
   \_\_attribute\_\_((\_\_signal\_\_\_
- static void outputCompareMatchBServiceRoutine () \_\_asm\_\_(STR(TIMER1\_COM\_CHANNEL\_B\_INTERRUPT))
   \_\_attribute\_\_((\_\_signal\_\_\_
- static void overflowServiceRoutine () \_\_asm\_\_(STR(TIMER1\_OVERFLOW\_INTERRUPT)) \_\_attribute\_\_((←
   \_\_signal\_\_
- static void inputCaptureServiceRoutine () \_\_asm\_\_(STR(TIMER1\_INPUT\_CAPTURE\_INTERRUPT)) \_\_ 
  attribute (( signal

## **Public Attributes**

- static void <u>used</u>
- static void \_\_externally\_visible\_\_

### **Private Member Functions**

- TimerCounter1 (const channel &ar\_channel, const operationMode &ar\_operationMode, const clockSource &ar\_clockSource, const compareOutputMode &ar\_compareOutputMode)
- ∼TimerCounter1 ()
- TimerCounter1 (const TimerCounter1 &)
- const TimerCounter1 & operator= (const TimerCounter1 &)

## **Private Attributes**

- uint16 t m clockPrescaler
- uint8 t m clockSource

## 9.17.1 Detailed Description

Definition at line 279 of file TimerCounter1.h.

## 9.17.2 Constructor & Destructor Documentation

#### 9.17.2.1 TimerCounter1() [1/2]

```
core::TimerCounter1::TimerCounter1 (
               const channel & ar_channel,
               const operationMode & ar_operationMode,
               const clockSource & ar_clockSource,
               const compareOutputMode & ar_compareOutputMode ) [private]
Definition at line 20 of file TimerCounter1.cpp.
00024 {
00025
          core::MCU::enableTimerCounter1(1);
00026
          stop();
00027
          selectOperationMode(ar_operationMode);
          selectClockSource(ar_clockSource);
selectCompareOutputMode(ar_channel,ar_compareOutputMode);
00028
00030
00031
00032 }
```

References core::MCU::enableTimerCounter1().

## 9.17.2.2 ~TimerCounter1()

```
core::TimerCounter1::~TimerCounter1 ( ) [private]

Definition at line 33 of file TimerCounter1.cpp.
00034 {
00035
00036 }
```

## 9.17.2.3 TimerCounter1() [2/2]

Overried Copy constructor.

## 9.17.3 Member Function Documentation

#### 9.17.3.1 enableInputCaptureInterrupt()

```
\verb"void core:: Timer Counter1:: enable Input Capture Interrupt \ (
               const uint8_t a_enable )
Definition at line 309 of file TimerCounter1.cpp.
00311
          if (a_enable) {
00312
00313
              TIMER1_ENABLE_INPUT_CAPTURE_INTERRUPT;
00314
00315
          } else {
00316
00317
              TIMER1_DISABLE_INPUT_CAPTURE_INTERRUPT;
00318
          }
```

References TIMER1\_DISABLE\_INPUT\_CAPTURE\_INTERRUPT, and TIMER1\_ENABLE\_INPUT\_CAPTURE\_INTERRUPT.

#### 9.17.3.2 enableOutputCompareMatchInterrupt()

Implements core::TimerCounter.

00319 }

Definition at line 260 of file TimerCounter1.cpp.

```
00261 {
00262
          switch (ar_channel)
00263
00264
              case core::channel::A:
00265
00266
                  if (a_enable) {
00267
00268
                      TIMER1_ENABLE_COM_CHANNEL_A_INTERRUPT;
00269
00270
                  } else {
00271
                       TIMER1_DISABLE_COM_CHANNEL_A_INTERRUPT;
00272
00273
00274
                  break;
00275
00276
              case core::channel::B:
00277
00278
                  if (a_enable) {
00279
00280
                      TIMER1_ENABLE_COM_CHANNEL_B_INTERRUPT;
00281
00282
                  } else {
00283
00284
                      TIMER1_DISABLE_COM_CHANNEL_B_INTERRUPT;
00285
00286
00287
                  break;
00288
00289
          }
00290
00291 }
```

References core::A, core::B, TIMER1\_DISABLE\_COM\_CHANNEL\_A\_INTERRUPT, TIMER1\_DISABLE\_COM\_CHANNEL\_B\_INTERTIMER1\_ENABLE\_ENA

#### 9.17.3.3 enableOverflowInterrupt()

Implements core::TimerCounter.

Definition at line 295 of file TimerCounter1.cpp.

References TIMER1 DISABLE OVERFLOW INTERRUPT, and TIMER1 ENABLE OVERFLOW INTERRUPT.

#### 9.17.3.4 getClockPrescaler()

```
uint16_t core::TimerCounter1::getClockPrescaler ( ) [override], [virtual]
```

Implements core::TimerCounter.

Definition at line 186 of file TimerCounter1.cpp.

Referenced by component::ServoMotor::connect(), and component::ServoMotor::rotate().

#### 9.17.3.5 getCounter()

```
uint16_t core::TimerCounter1::getCounter ( ) const [override], [virtual]
```

Implements core::TimerCounter.

Definition at line 221 of file TimerCounter1.cpp.

## 9.17.3.6 getInputCaptureRegister()

```
uint16_t core::TimerCounter1::getInputCaptureRegister ( ) const
```

```
Definition at line 327 of file TimerCounter1.cpp.
```

```
00328 {
00329     return ICR1;
00330 }
```

#### 9.17.3.7 getInstance()

```
core::TimerCounter1 & core::TimerCounter1::getInstance (
             const channel & ar_channel = channel::A,
             const operationMode & ar_operationMode = operationMode::normal,
             const clockSource & ar_clockSource = clockSource::noClock,
             const compareOutputMode & ar_compareOutputMode = compareOutputMode::normal )
[static]
Definition at line 5 of file TimerCounter1.cpp.
00009 4
00010
         static TimerCounter1 l_instance(ar_channel,
00011
00012
                                       ar_clockSource,
00013
                                       ar_compareOutputMode);
00014
00015
         return l_instance;
00016
00018 }
```

## 9.17.3.8 getOutputCompareRegister()

Implements core::TimerCounter.

Definition at line 245 of file TimerCounter1.cpp.

```
00246 {
00247
         switch (ar_channel)
00248
00249
             case core::channel::A:
00250
             {
00251
                 return OCR1A;
00252
00253
             case core::channel::B:
00254
             {
00255
                 return OCR1B;
00256
00257
         }
00258 }
```

References core::A, and core::B.

# 9.17.3.9 inputCaptureServiceRoutine()

```
static void core::TimerCounterl::inputCaptureServiceRoutine ( ) [static]
```

# 9.17.3.10 operator=()

Override assign operator.

### 9.17.3.11 outputCompareMatchAServiceRoutine()

```
static void core::TimerCounterl::outputCompareMatchAServiceRoutine () [static]
```

#### 9.17.3.12 outputCompareMatchBServiceRoutine()

```
static void core::TimerCounterl::outputCompareMatchBServiceRoutine ( ) [static]
```

#### 9.17.3.13 overflowServiceRoutine()

```
static void core::TimerCounter1::overflowServiceRoutine ( ) [static]
```

#### 9.17.3.14 selectClockSource()

Implements core::TimerCounter.

### Definition at line 38 of file TimerCounter1.cpp.

```
00039 {
          switch (ar_clockSource)
00041
00042
              case core::clockSource::noClock:
00043
00044
                  m_clockPrescaler=0;
00045
                  m_clockSource=0;
00046
                  break;
00047
00048
              case core::clockSource::PS_1:
00049
00050
                  m_clockPrescaler=1;
00051
                  m_clockSource=1;
00052
                  break;
00053
00054
              case core::clockSource::PS_8:
00055
                  m_clockPrescaler=8;
00056
00057
                  m clockSource=2;
00058
                  break:
00059
00060
              case core::clockSource::PS_64:
00061
00062
                  m_clockPrescaler=64;
00063
                  m_clockSource=3;
00064
                  break;
00065
00066
              case core::clockSource::PS_256:
00067
00068
                  m_clockPrescaler=256;
00069
                  m_clockSource=4;
00070
                  break;
00071
00072
              case core::clockSource::PS_1024:
00073
00074
                  m_clockPrescaler=1024;
00075
                  m_clockSource=5;
00076
                  break:
00077
00078
              case core::clockSource::extern_Clock_T0_Falling_Edge:
```

```
00079
              {
08000
                  m_clockPrescaler=0;
00081
                  m_clockSource=6;
00082
                  break;
00083
00084
              case core::clockSource::extern Clock TO Rising Edge:
00085
00086
                  m_clockPrescaler=0;
00087
                  m_clockSource=7;
00088
                 break;
00089
             }
        }
00090
00091
00092
00093 }
```

References core::extern\_Clock\_T0\_Falling\_Edge, core::extern\_Clock\_T0\_Rising\_Edge, core::noClock, core::PS\_1, core::PS\_1024, core::PS\_256, core::PS\_64, and core::PS\_8.

#### 9.17.3.15 selectCompareOutputMode()

Implements core::TimerCounter.

Definition at line 197 of file TimerCounter1.cpp.

```
00198 {
00199
          switch (ar_channel)
00200
00201
              case core::channel::A:
00202
              {
00203
                  TIMER1_SELECT_COM_CHANNEL_A(static_cast<uint8_t>(ar_compareOutputMode));
00204
                  break;
00205
00206
              case core::channel::B:
00207
             {
00208
                  TIMER1_SELECT_COM_CHANNEL_B(static_cast<uint8_t>(ar_compareOutputMode));
00209
00210
             }
00211
         }
00212
00213 }
```

References core::A, core::B, TIMER1\_SELECT\_COM\_CHANNEL\_A, and TIMER1\_SELECT\_COM\_CHANNEL\_B.

Referenced by component::ServoMotor::connect(), and component::ServoMotor::disconnect().

#### 9.17.3.16 selectOperationMode()

Implements core::TimerCounter.

Definition at line 95 of file TimerCounter1.cpp.

```
break;
00104
              case core::operationMode::PWM_PC_8bit:
00105
00106
                  TIMER1_SELECT_OPERATION_MODE(1);
00107
                  break:
00108
00109
              case core::operationMode::PWM_PC_9bit:
00110
00111
                  TIMER1_SELECT_OPERATION_MODE(2);
00112
                  break:
00113
00114
              case core::operationMode::PWM PC 10bit:
00115
00116
                  TIMER1_SELECT_OPERATION_MODE(3);
00117
00118
00119
              case core::operationMode::CTC_OCR:
00120
                  TIMER1_SELECT_OPERATION_MODE(4);
00122
00123
00124
              case core::operationMode::fast_PWM_8bit:
00125
              {
00126
                  TIMER1_SELECT_OPERATION_MODE(5);
                  break;
00128
00129
              case core::operationMode::fast_PWM_9bit:
00130
00131
                  TIMER1 SELECT OPERATION MODE (6):
00132
                  break:
00133
00134
              case core::operationMode::fast_PWM_10bit:
00135
00136
                  TIMER1_SELECT_OPERATION_MODE(7);
00137
                  break;
00138
00139
              case core::operationMode::PWM_PFC_ICR:
00140
00141
                  TIMER1_SELECT_OPERATION_MODE(8);
00142
                  break;
00143
00144
              case core::operationMode::PWM PFC OCR:
00145
                  TIMER1_SELECT_OPERATION_MODE(9);
00147
00148
00149
              case core::operationMode::PWM_PC_ICR:
00150
                  TIMER1_SELECT_OPERATION_MODE(10);
00151
00152
                  break;
00153
00154
              case core::operationMode::PWM_PC_OCR:
00155
                  TIMER1_SELECT_OPERATION_MODE(11);
00156
00157
                  break;
00159
              case core::operationMode::CTC_ICR:
00160
00161
                  TIMER1_SELECT_OPERATION_MODE(12);
00162
                  break;
00163
00164
              case core::operationMode::fast_PWM_ICR:
00165
00166
                  TIMER1_SELECT_OPERATION_MODE(14);
00167
00168
00169
              case core::operationMode::fast PWM OCR:
00170
              {
00171
                  TIMER1_SELECT_OPERATION_MODE(15);
00172
00173
              }
00174
00175
          }
00176
00177
```

References core::CTC\_ICR, core::CTC\_OCR, core::fast\_PWM\_10bit, core::fast\_PWM\_8bit, core::fast\_PWM\_9bit, core::fast\_PWM\_ICR, core::fast\_PWM\_OCR, core::normal, core::PWM\_PC\_10bit, core::PWM\_PC\_8bit, core::PWM\_PC\_9bit, core::PWM\_PC\_ICR, core::PWM\_PC\_OCR, core::PWM\_PC\_ICR, core::PWM\_PC\_OCR, and TIMER1\_SELECT\_OPERATION\_MODE.

Referenced by component::ServoMotor::connect().

## 9.17.3.17 setCounter()

Implements core::TimerCounter.

Definition at line 216 of file TimerCounter1.cpp.

Referenced by component::ServoMotor::connect().

## 9.17.3.18 setInputCaptureRegister()

Definition at line 321 of file TimerCounter1.cpp.

Referenced by component::ServoMotor::connect().

### 9.17.3.19 setOutputCompareRegister()

Implements core::TimerCounter.

Definition at line 226 of file TimerCounter1.cpp.

```
00228
          switch (ar_channel)
00229
00230
             case core::channel::A:
00231
             {
00232
                 OCR1A = ar_dataBuffer;
00233
                 break;
00234
00235
             case core::channel::B:
00236
00237
                 OCR1B = ar_dataBuffer;
00238
                 break;
00239
             }
00240
         }
00241 }
```

References core::A, and core::B.

Referenced by component::ServoMotor::rotate().

#### 9.17.3.20 start()

```
void core::TimerCounter1::start ( ) [override], [virtual]
```

Implements core::TimerCounter.

Definition at line 181 of file TimerCounter1.cpp.

```
00182 {
00183           TIMER1_SELECT_CLOCK_SOURCE(m_clockSource);
00184 }
```

References TIMER1\_SELECT\_CLOCK\_SOURCE.

Referenced by component::ServoMotor::rotate().

#### 9.17.3.21 stop()

```
void core::TimerCounter1::stop ( ) [override], [virtual]
```

Implements core::TimerCounter.

Definition at line 191 of file TimerCounter1.cpp.

References TIMER1\_STOP.

Referenced by component::ServoMotor::disconnect().

## 9.17.4 Member Data Documentation

```
9.17.4.1 __externally_visible__
```

```
static void core::TimerCounter1::__externally_visible__
```

Definition at line 320 of file TimerCounter1.h.

```
9.17.4.2 __used__
```

```
static void core::TimerCounter1::__used__
```

Definition at line 320 of file TimerCounter1.h.

## 9.17.4.3 m\_clockPrescaler

uint16\_t core::TimerCounter1::m\_clockPrescaler [private]

Definition at line 349 of file TimerCounter1.h.

## 9.17.4.4 m\_clockSource


uint8\_t core::TimerCounter1::m\_clockSource [private]

Definition at line 351 of file TimerCounter1.h.


# 9.18 core::TimerCounter2 Class Reference

#include <TimerCounter2.h>

Inheritance diagram for core::TimerCounter2:

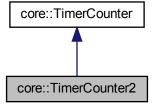

Collaboration diagram for core::TimerCounter2:

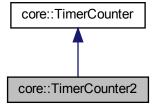

#### **Public Member Functions**

- void selectOperationMode (const operationMode &ar\_operationMode) override
- · void start () override
- void stop () override
- void selectClockSource (const clockSource &ar clockSource) override
- void selectCompareOutputMode (const channel &ar\_channel, const compareOutputMode &ar\_compare

   OutputMode) override
- void setCounter (const uint16 t &ar dataBuffer) override
- uint16\_t getCounter () const override
- void setOutputCompareRegister (const channel &ar\_channel, const uint16\_t &ar\_dataBuffer) override
- uint16\_t getOutputCompareRegister (const channel &ar\_channel) const override
- void enableOutputCompareMatchInterrupt (const channel &ar\_channel, const uint8\_t a\_enable) override
- void enableOverflowInterrupt (const uint8\_t a\_enable) override
- uint16\_t getClockPrescaler () override

#### Static Public Member Functions

- static TimerCounter2 & getInstance (const channel &ar\_channel=channel::A, const operationMode &ar←
   \_operationMode=operationMode::normal, const clockSource &ar\_clockSource=clockSource::noClock, const compareOutputMode &ar\_compareOutputMode::normal)
- static void outputCompareMatchAServiceRoutine () \_\_asm\_\_(STR(TIMER2\_COM\_CHANNEL\_A\_INTERRUPT))
   \_\_attribute\_\_((\_\_signal\_\_\_
- static void outputCompareMatchBServiceRoutine () \_\_asm\_\_(STR(TIMER2\_COM\_CHANNEL\_B\_INTERRUPT))
   \_\_attribute\_\_((\_\_signal\_\_\_
- static void overflowServiceRoutine () \_\_asm\_\_(STR(TIMER2\_OVERFLOW\_INTERRUPT)) \_\_attribute\_\_((← \_\_signal\_\_

#### **Public Attributes**

- static void <u>used</u>
- static void \_\_externally\_visible\_

#### **Private Member Functions**

- TimerCounter2 (const channel &ar\_channel, const operationMode &ar\_operationMode, const clockSource &ar\_clockSource, const compareOutputMode &ar\_compareOutputMode)
- ∼TimerCounter2 ()
- TimerCounter2 (const TimerCounter2 &)
- const TimerCounter2 & operator= (const TimerCounter2 &)

## **Private Attributes**

- uint16 t m clockPrescaler
- uint8\_t m\_clockSource

## 9.18.1 Detailed Description

Definition at line 279 of file TimerCounter2.h.

## 9.18.2 Constructor & Destructor Documentation

## 9.18.2.1 TimerCounter2() [1/2]

```
core::TimerCounter2::TimerCounter2 (
             const channel & ar_channel,
             const operationMode & ar_operationMode,
             const clockSource & ar_clockSource,
              const compareOutputMode & ar_compareOutputMode ) [private]
Definition at line 20 of file TimerCounter2.cpp.
00024 {
00025
         core::MCU::enableTimerCounter2(1);
00026
         stop();
selectOperationMode(ar_operationMode);
```

selectCompareOutputMode(ar\_channel, ar\_compareOutputMode);

References core::MCU::enableTimerCounter2().

selectClockSource(ar\_clockSource);

## 9.18.2.2 ∼TimerCounter2()

```
core::TimerCounter2::~TimerCounter2 ( ) [private]
```

## Definition at line 32 of file TimerCounter2.cpp.

```
00033 {
00034
00035 }
```

00027 00028

00029

00030 00031 }

## 9.18.2.3 TimerCounter2() [2/2]

```
core::TimerCounter2::TimerCounter2 (
            const TimerCounter2 & ) [private]
```

Overried Copy constructor.

## 9.18.3 Member Function Documentation

#### 9.18.3.1 enableOutputCompareMatchInterrupt()

Implements core::TimerCounter.

Definition at line 215 of file TimerCounter2.cpp.

```
00216 {
          switch (ar_channel)
00218
          {
00219
              case core::channel::A:
00220
00221
                  if (a_enable) {
00222
00223
                      TIMER2_ENABLE_COM_CHANNEL_A_INTERRUPT;
00224
00225
                  } else {
00226
                      TIMER2_DISABLE_COM_CHANNEL_A_INTERRUPT;
00227
00228
00229
                  break;
00230
00231
              case core::channel::B:
00232
00233
                  if (a_enable) {
00234
00235
                      TIMER2_ENABLE_COM_CHANNEL_B_INTERRUPT;
00236
00237
                  } else {
00238
                      TIMER2_DISABLE_COM_CHANNEL_B_INTERRUPT;
00239
00240
00241
00242
                  break;
00243
00244
          }
00245
00246 }
```

References core::A, core::B, TIMER2\_DISABLE\_COM\_CHANNEL\_A\_INTERRUPT, TIMER2\_DISABLE\_COM\_CHANNEL\_B\_INTERTUPT, and TIMER2\_ENABLE\_COM\_CHANNEL\_B\_INTERRUPT.

#### 9.18.3.2 enableOverflowInterrupt()

Implements core::TimerCounter.

Definition at line 250 of file TimerCounter2.cpp.

```
00251 {
00252
00253     if (a_enable) {
00254
00255          TIMER2_ENABLE_OVERFLOW_INTERRUPT;
00256
00257     } else {
00258
00259          TIMER2_DISABLE_OVERFLOW_INTERRUPT;
00260     }
00261
00262 }
```

References TIMER2 DISABLE OVERFLOW INTERRUPT, and TIMER2 ENABLE OVERFLOW INTERRUPT.

#### 9.18.3.3 getClockPrescaler()

```
uint16_t core::TimerCounter2::getClockPrescaler ( ) [override], [virtual]
```

Implements core::TimerCounter.

```
Definition at line 138 of file TimerCounter2.cpp.
```

## 9.18.3.4 getCounter()

```
uint16_t core::TimerCounter2::getCounter ( ) const [override], [virtual]
```

Implements core::TimerCounter.

## Definition at line 176 of file TimerCounter2.cpp.

```
00177 {
00178 return TCNT2;
00179 }
```

## 9.18.3.5 getInstance()

## Definition at line 5 of file TimerCounter2.cpp.

## 9.18.3.6 getOutputCompareRegister()

Implements core::TimerCounter.

Definition at line 199 of file TimerCounter2.cpp.

```
00200 {
          switch (ar_channel)
00202
00203
              case core::channel::A:
00204
00205
                  return OCR2A;
00206
00207
              case core::channel::B:
00208
             {
00209
                  return OCR2B;
00210
00211
00212
00213 }
```

References core::A, and core::B.

#### 9.18.3.7 operator=()

Override assign operator.

#### 9.18.3.8 outputCompareMatchAServiceRoutine()

## 9.18.3.9 outputCompareMatchBServiceRoutine()

```
static void core::TimerCounter2::outputCompareMatchBServiceRoutine ( ) [static]
```

### 9.18.3.10 overflowServiceRoutine()

```
static void core::TimerCounter2::overflowServiceRoutine ( ) [static]
```

### 9.18.3.11 selectClockSource()

Implements core::TimerCounter.

#### Definition at line 37 of file TimerCounter2.cpp.

```
00038
00039
          switch (ar_clockSource)
00040
00041
              case core::clockSource::noClock:
00042
              {
                  m_clockPrescaler=0;
00043
00044
                  m_clockSource=0;
00045
                  break;
00046
00047
              case core::clockSource::PS_1:
00048
00049
                  m_clockPrescaler=1;
00050
                  m_clockSource=1;
00051
                  break;
00052
00053
              case core::clockSource::PS_8:
00054
00055
                  m_clockPrescaler=8;
00056
                  m_clockSource=2;
00057
                  break;
00058
00059
              case core::clockSource::PS_32:
00060
00061
                  m_clockPrescaler=32;
00062
                  m_clockSource=3;
00063
                  break;
00064
00065
              case core::clockSource::PS_64:
00066
00067
                  m_clockPrescaler=64;
00068
                  m_clockSource=4;
00069
                  break;
00070
00071
              case core::clockSource::PS_128:
00072
              {
00073
                  m_clockPrescaler=128;
00074
                  m_clockSource=5;
00075
                  break;
00076
00077
              case core::clockSource::PS 256:
00078
00079
                  m_clockPrescaler=256;
08000
                  m_clockSource=6;
00081
                  break;
00082
00083
              case core::clockSource::PS_1024:
00084
              {
00085
                  m_clockPrescaler=1024;
00086
                  m_clockSource=7;
00087
                  break;
00088
              }
00089
          }
00090
00091 }
```

References core::noClock, core::PS\_1, core::PS\_1024, core::PS\_128, core::PS\_256, core::PS\_32, core::PS\_64, and core::PS\_8.

### 9.18.3.12 selectCompareOutputMode()

Implements core::TimerCounter.

Definition at line 150 of file TimerCounter2.cpp.

```
00151 {
00152
          switch (ar_channel)
00153
00154
              case core::channel::A:
00155
                  TIMER2_SELECT_COM_CHANNEL_A(static_cast<uint8_t>(ar_compareOutputMode));
00156
00157
                  break;
00158
              case core::channel::B:
00160
              {
00161
                  TIMER2_SELECT_COM_CHANNEL_B(static_cast<uint8_t>(ar_compareOutputMode));
00162
00163
00164
          }
00165
00166
00167 }
```

References core::A, core::B, TIMER2\_SELECT\_COM\_CHANNEL\_A, and TIMER2\_SELECT\_COM\_CHANNEL\_B.

## 9.18.3.13 selectOperationMode()

Implements core::TimerCounter.

Definition at line 93 of file TimerCounter2.cpp.

```
00094 {
00095
          switch (ar_operationMode)
00096
00097
              case core::operationMode::normal:
00098
              {
00099
                  TIMER2_SELECT_OPERATION_MODE(0);
00100
                  break;
00101
00102
              case core::operationMode::PWM_PC:
00103
00104
                  TIMER2_SELECT_OPERATION_MODE(1);
00105
00106
00107
              case core::operationMode::CTC_OCR:
00108
00109
                  TIMER2_SELECT_OPERATION_MODE(2);
00110
                  break;
00111
00112
              case core::operationMode::fast_PWM:
00113
              {
                  TIMER2_SELECT_OPERATION_MODE(3);
00114
00115
                  break;
00116
00117
              case core::operationMode::PWM_PC_OCR:
00118
                  TIMER2 SELECT OPERATION MODE (5):
00119
00120
                  break;
00121
00122
              case core::operationMode::fast_PWM_OCR:
00123
00124
                  TIMER2_SELECT_OPERATION_MODE(7);
00125
                  break;
00126
00127
00128
          }
00130 }
```

References core::CTC\_OCR, core::fast\_PWM\_ocR, core::normal, core::PWM\_PC, core::PWM\_PC\_ocR, and TIMER2\_SELECT\_OPERATION\_MODE.

#### 9.18.3.14 setCounter()

Implements core::TimerCounter.

Definition at line 171 of file TimerCounter2.cpp.

#### 9.18.3.15 setOutputCompareRegister()

Implements core::TimerCounter.

Definition at line 181 of file TimerCounter2.cpp.

```
00182 {
          switch (ar_channel)
00184
00185
              case core::channel::A:
00186
                  OCR2A = static_cast<uint8_t>(ar_dataBuffer);
00187
00188
                  break;
00189
00190
              case core::channel::B:
00191
             {
00192
                 OCR2B = static_cast<uint8_t>(ar_dataBuffer);
00193
                  break;
00194
             }
00195
          }
00196 }
```

References core::A, and core::B.

## 9.18.3.16 start()

```
void core::TimerCounter2::start ( ) [override], [virtual]
```

Implements core::TimerCounter.

Definition at line 133 of file TimerCounter2.cpp.

```
00134 {
00135           TIMER2_SELECT_CLOCK_SOURCE (m_clockSource);
00136 }
```

References TIMER2 SELECT CLOCK SOURCE.

## 9.18.3.17 stop()

00146

00147 }

```
void core::TimerCounter2::stop ( ) [override], [virtual]
Implements core::TimerCounter.

Definition at line 144 of file TimerCounter2.cpp.
00145 /
```

References TIMER2\_STOP.

TIMER2\_STOP;

## 9.18.4 Member Data Documentation

```
9.18.4.1 __externally_visible__
```

```
static void core::TimerCounter2::__externally_visible__
```

Definition at line 313 of file TimerCounter2.h.

```
9.18.4.2 __used__
```

```
static void core::TimerCounter2::__used__
```

Definition at line 313 of file TimerCounter2.h.

## 9.18.4.3 m\_clockPrescaler

```
uint16_t core::TimerCounter2::m_clockPrescaler [private]
```

Definition at line 338 of file TimerCounter2.h.

## 9.18.4.4 m\_clockSource

```
uint8_t core::TimerCounter2::m_clockSource [private]
```

Definition at line 340 of file TimerCounter2.h.

## 9.19 io::USART0 Class Reference

Class for handling USART0.

```
#include <USARTO.h>
```

## **Public Member Functions**

- void setBaudRate ()
- void setTransmissionMode (const transmissionMode &ar transMode)
- void setCommunicationMode (const communicationMode &ar comMode)
- void setParityMode (const parityMode &ar\_parityMode)
- void setFrameSize (const frameSize &ar\_frameSize)
- void setStopBit (const stopBit &ar\_stopBit)
- void sendFrame (const uint8 t \*ap dataBuffer, const uint8 t a size)
- void sendString (const char \*ap string)
- void receiveString (const char \*ap\_string)
- void sendChar (const uint8\_t &ar\_char)
- void sendByte (const uint8\_t &ar\_byte)
- void sendWord (const uint16\_t &ar\_word)
- void sendLong (const uint32\_t &ar\_long)
- void receiveChar (uint8 t &ar char)
- void receiveFrame (uint8\_t \*ap\_dataBuffer, const uint8\_t a\_size)
- void enableTransmitCompleteInterrupt (const uint8\_t a\_enable)
- void enableReceiveCompleteInterrupt (const uint8\_t a\_enable)
- uint8 t frameError ()
- uint8 t dataOverrun ()
- uint8\_t parityError ()
- uint16\_t getNumberBytesReceived ()
- uint16 t getNumberBytesSent ()
- uint8\_t ready2Send ()
- void resetNumberBytesReceived ()

### **Static Public Member Functions**

- static void enableDataRegisterEmptyInterrupt (const uint8\_t a\_enable)
- static void receiveCompleteServiceRoutine () \_\_asm\_\_(STR(USART0\_RECEIVE\_COMPLETE\_INTERRUPT))
   \_\_attribute\_\_((\_\_signal\_\_\_
- static void dataRegisterEmptyServiceRoutine () \_\_asm\_\_(STR(USART0\_DATA\_REGISTER\_EMPTY\_INTERRUPT))
   \_\_attribute\_\_((\_\_signal\_\_\_
- static void transmitCompleteServiceRoutine () \_\_asm\_\_(STR(USART0\_TRANSMIT\_COMPLETE\_INTERRUPT)) \_\_attribute\_\_((\_\_signal\_\_

## **Public Attributes**

- static void used
- static void \_\_externally\_visible\_\_

#### **Private Member Functions**

- USART0 (const transmissionMode &ar\_transMode, const communicationMode &ar\_comMode, const frameSize &ar\_frameSize, const stopBit &ar\_stopBit, const parityMode &ar\_parityMode)
- ~USART0 ()
- USART0 (const USART0 &)
- const USART0 & operator= (const USART0 &)

#### **Static Private Attributes**

```
• static volatile uint8 t m status = 0
```

- static const uint8\_t \* mp\_data2Send = nullptr
- static uint8 t \* mp data2Receive = nullptr
- static uint16\_t m\_sizeData2Send = 0
- static uint16 t m sizeData2Receive = 0
- static volatile uint16\_t m\_numberBytesReceived = 0
- static volatile uint16\_t m\_numberBytesSent = 0
- static volatile uint8\_t m\_ready2Send = 1

## 9.19.1 Detailed Description

Class for handling USARTO.

The class implements USART0 operations

Author

```
Farid Oubbati (farid.oubbati@outlook.com)
```

Date

March 2018

Definition at line 98 of file USARTO.h.

#### 9.19.2 Constructor & Destructor Documentation

## 9.19.2.1 USART0() [1/2]

Constructor.

Initalizes the USART0 object

## **Parameters**

ar_transMode	Defines transmission mode
ar_comMode	Defines communication mode
ar_frameSize	Defines data frame size
ar_stopBit	Defines number of stop bits
ar_parityMode	Defines parity mode

## Definition at line 43 of file USART0.cpp.

```
00049 {
          core::MCU::enableUSART0(1);
00050
          setBaudRate();
setTransmissionMode(ar_transMode);
00051
00052
00053
          setCommunicationMode(ar_comMode);
00054
          setParityMode(ar_parityMode);
00055
          setFrameSize(ar_frameSize);
          setStopBit(ar_stopBit);
00056
00057
          sei();
00058
          enableReceiveCompleteInterrupt(1);
00059 }
```

References core::MCU::enableUSART0().

## 9.19.2.2 ∼USART0()

```
io::USARTO::~USARTO ( ) [private]
```

#### Destructor.

## Definition at line 61 of file USART0.cpp.

```
00062 {
00063
00064 }
```

## 9.19.2.3 USART0() [2/2]

Overried Copy constructor.

## 9.19.3 Member Function Documentation

## 9.19.3.1 dataOverrun()

```
uint8_t io::USART0::dataOverrun ( )
```

Is there data overrun in received data

Returns

Status of received data

Definition at line 204 of file USART0.cpp.

References USARTO\_DATA\_OVERRUN.

#### 9.19.3.2 dataRegisterEmptyServiceRoutine()

```
void io::USART0::dataRegisterEmptyServiceRoutine ( ) [static]
```

Data register empty ISR

Definition at line 340 of file USART0.cpp.

```
00342
00343
          if (m_sizeData2Send)
00344
              m_ready2Send = 0;
USARTO_DATA_REGISTER = *mp_data2Send++;
00345
00346
00347
              m_sizeData2Send--;
00348
              m_numberBytesSent++;
00349
00350
00351
          else
00352
          {
00353
              enableDataRegisterEmptyInterrupt(0);
00354
              m_numberBytesSent = 0;
00355
              m_ready2Send = 1;
00356
00357
          }
00358
00359 }
```

References USARTO\_DATA\_REGISTER.

## 9.19.3.3 enableDataRegisterEmptyInterrupt()

Enable data register empty interrupt

**Parameters** 

ar_enable	Indicates if interrupt is enabled
-----------	-----------------------------------

Definition at line 383 of file USART0.cpp.

References USARTO\_DISABLE\_DATA\_REGISTER\_EMPTY\_INTERRUPT, and USARTO\_ENABLE\_DATA\_REGISTER\_EMPTY\_INTERRUPT.

#### 9.19.3.4 enableReceiveCompleteInterrupt()

Enable receive complete interrupt

#### **Parameters**

ar_enable Indicates if interrupt is enabled
---

#### Definition at line 372 of file USART0.cpp.

References USART0\_DISABLE\_RECEIVE\_COMPLETE\_INTERRUPT, and USART0\_ENABLE\_RECEIVE\_COMPLETE\_INTERRUFT

### 9.19.3.5 enableTransmitCompleteInterrupt()

Enable transmit complete interrupt

## **Parameters**

ar_enable	Indicates if interrupt is enabled
-----------	-----------------------------------

## Definition at line 362 of file USART0.cpp.

```
00370 }
```

References USART0\_DISABLE\_TRANSMIT\_COMPLETE\_INTERRUPT, and USART0\_ENABLE\_TRANSMIT\_COMPLETE\_INTERRUPT.

#### 9.19.3.6 frameError()

```
uint8_t io::USART0::frameError ( )
```

Is there frame error in received data

#### Returns

Status of received data

## Definition at line 198 of file USART0.cpp.

```
00199 {
00200         return (m_status & (1 « USARTO_FRAME_ERROR));
00201
00202 }
```

References USARTO\_FRAME\_ERROR.

### 9.19.3.7 getInstance()

Create a single instance of the USART0 object

## Parameters

ar_transMode	Defines transmission mode
ar_comMode	Defines communication mode
ar_frameSize	Defines data frame size
ar_stopBit	Defines number of stop bits
ar_parityMode	Defines parity mode

#### Definition at line 26 of file USART0.cpp.

#### 9.19.3.8 getNumberBytesReceived()

```
uint16_t io::USART0::getNumberBytesReceived ( )
```

Get number of bytes received

Returns

Number of received bytes

```
Definition at line 404 of file USART0.cpp.
```

```
00405 {
00406 return m_numberBytesReceived;
00407 }
```

#### 9.19.3.9 getNumberBytesSent()

```
uint16_t io::USART0::getNumberBytesSent ( )
```

Get number of bytes sent

Returns

Number of transmitted bytes

#### Definition at line 399 of file USART0.cpp.

### 9.19.3.10 operator=()

Override assign operator.

# 9.19.3.11 parityError()

```
uint8_t io::USART0::parityError ( )
```

Is there partity error in received data

Returns

Status of received data

#### Definition at line 210 of file USART0.cpp.

References USARTO\_PARITY\_ERROR.

#### 9.19.3.12 ready2Send()

```
uint8_t io::USART0::ready2Send ( )
```

Is ready to send

Returns

Sender status

Definition at line 414 of file USART0.cpp.

#### 9.19.3.13 receiveChar()

Receive character

**Parameters** 

```
ar_char Defines charcter to be received
```

Definition at line 293 of file USART0.cpp.

#### 9.19.3.14 receiveCompleteServiceRoutine()

```
void io::USART0::receiveCompleteServiceRoutine ( ) [static]
```

# Receive complete ISR

Definition at line 315 of file USART0.cpp.

```
00316 {
           static volatile uint8_t *1p_dataReceived = mp_data2Receive;
static uint16_t l_dataSize = m_sizeData2Receive;
00317
00318
00319
00320
           m_status = USARTO_CONTROL_STATUS_REGISTER;
00321
00322
00323
00324
                if (l_dataSize)
00325
00326
00327
                     *lp_dataReceived++ = USARTO_DATA_REGISTER;
00328
                     l_dataSize--;
00329
                     m_numberBytesReceived++;
00330
00331
                }
```

References USART0\_CONTROL\_STATUS\_REGISTER, and USART0\_DATA\_REGISTER.

#### 9.19.3.15 receiveFrame()

#### Receive data frame

#### **Parameters**

ap_dataBuffer	Defines pointer to receiver buffer
a_size	Defines size of receiver buffer
a_ready2Receive	Indicates if chip ready to receive data

#### Definition at line 300 of file USART0.cpp.

# 9.19.3.16 receiveString()

# Receive string

#### **Parameters**

ap_string	Defines pointer to string
-----------	---------------------------

#### Definition at line 309 of file USART0.cpp.

```
00310 {
00311 // TODO: to be implemented
00312 }
```

#### 9.19.3.17 resetNumberBytesReceived()

```
void io::USART0::resetNumberBytesReceived ( )
```

#### Reset number of bytes received

#### Definition at line 409 of file USART0.cpp.

#### 9.19.3.18 sendByte()

#### Transmit byte

#### **Parameters**

# Definition at line 235 of file USART0.cpp.

#### 9.19.3.19 sendChar()

#### Transmit character

#### **Parameters**

ar_char	Defines character to be sent
---------	------------------------------

#### Definition at line 284 of file USART0.cpp.

```
00291 }
```

#### 9.19.3.20 sendFrame()

#### Transmit data frame

#### **Parameters**

ap_dataBuffer	Defines pointer to transmitter buffer
a_size	Defines size of transmitter buffer

#### Definition at line 216 of file USART0.cpp.

```
00217 {
00218     while (!ready2Send()) {};
00219     m_sizeData2Send = a_size;
00220     mp_data2Send = ap_dataBuffer;
00221     enableDataRegisterEmptyInterrupt(1);
00222 }
```

#### 9.19.3.21 sendLong()

## Transmit long word

#### **Parameters**

ar_long Defines long word to	be sent
------------------------------	---------

### Definition at line 248 of file USART0.cpp.

```
00249 {
00250
                      static uint8_t l_word2Send[10];
l_word2Send[0] = '0' + (ar_long / 1000000000);
l_word2Send[1] = '0' + ((ar_long / 100000000) % 10);
l_word2Send[2] = '0' + ((ar_long / 10000000) % 10);
l_word2Send[3] = '0' + ((ar_long / 1000000) % 10);
l_word2Send[4] = '0' + ((ar_long / 100000) % 10);
l_word2Send[5] = '0' + ((ar_long / 100000) % 10);
l_word2Send[6] = '0' + ((ar_long / 10000) % 10);
l_word2Send[7] = '0' + ((ar_long / 1000) % 10);
00251
00252
00253
00254
00255
00256
00257
                       1_word2Send[7] = '0' + ((ar_long /
1_word2Send[8] = '0' + ((ar_long /
1_word2Send[9] = '0' + (ar_long % 10);
00258
                                                                                                                        100) % 10);
00259
                                                                                                                           10) % 10);
00260
00261
00262
                        while (!ready2Send()){};
00263
                        m_sizeData2Send = 10;
00264
                        mp_data2Send = 1_word2Send;
00265
                        enableDataRegisterEmptyInterrupt(1);
00266
00267 }
```

#### 9.19.3.22 sendString()

#### Transmit string

#### **Parameters**

```
ap_string Defines pointer to string
```

#### Definition at line 225 of file USART0.cpp.

```
00226 {
00227     while (!ready2Send()){};
00228     m_sizeData2Send = strlen(ap_string);
00229     mp_data2Send = reinterpret_cast<const uint8_t*>(ap_string);
00230     enableDataRegisterEmptyInterrupt(1);
00231
00232 }
```

#### 9.19.3.23 sendWord()

#### Transmit word

#### **Parameters**

```
ar_word Defines word to be sent
```

#### Definition at line 268 of file USART0.cpp.

```
00269 {
                 static uint8_t l_word2Send[5];
l_word2Send[0] = '0' + (ar_word / 10000);
l_word2Send[1] = '0' + ((ar_word / 1000) % 10);
l_word2Send[2] = '0' + ((ar_word / 100) % 10);
l_word2Send[3] = '0' + ((ar_word / 10) % 10);
l_word2Send[4] = '0' + (ar_word % 10);
00270
00271
00272
00273
00274
00275
00276
00277
                  while (!ready2Send()){};
00278
                  m_sizeData2Send = 5;
00279
                  mp_data2Send = l_word2Send;
00280
                  enableDataRegisterEmptyInterrupt(1);
00281
00282 }
```

# 9.19.3.24 setBaudRate()

```
void io::USARTO::setBaudRate ( )
```

#### Set baud rate.

#### Definition at line 66 of file USART0.cpp.

00067 {

```
00068 USARTO_SET_BAUDRATE_HIGH_REGISTER;
00069 USARTO_SET_BAUDRATE_LOW_REGISTER;
00070
00071 }
```

References USART0\_SET\_BAUDRATE\_HIGH\_REGISTER, and USART0\_SET\_BAUDRATE\_LOW\_REGISTER.

#### 9.19.3.25 setCommunicationMode()

Set communication mode

#### **Parameters**

ar_comMode Def	nes communication mode
----------------	------------------------

#### Definition at line 98 of file USART0.cpp.

```
00099 {
00100
          switch (ar_comMode)
00101
00102
              case communicationMode::duplex:
00103
              {
00104
                  USARTO_ENABLE_TRANSMITTER;
00105
                  USARTO_ENABLE_RECEIVER;
00106
                 break;
00107
00108
              case communicationMode::receive:
00109
00110
                  USARTO_ENABLE_RECEIVER;
00111
                  USARTO_DISABLE_TRANSMITTER;
00112
                  break;
00113
00114
              case communicationMode::transmit:
00115
00116
                  USARTO_ENABLE_TRANSMITTER;
00117
                  USARTO_DISABLE_RECEIVER;
00118
                  break;
00119
00120
          }
00121
00122 }
```

References io::duplex, io::receive, io::transmit, USART0\_DISABLE\_RECEIVER, USART0\_DISABLE\_TRANSMITTER, USART0\_ENABLE\_RECEIVER, and USART0\_ENABLE\_TRANSMITTER.

#### 9.19.3.26 setFrameSize()

Set data frame size

#### **Parameters**

Definition at line 147 of file USART0.cpp.

```
00149
          switch (ar_frameSize)
00150
00151
              case frameSize::eightBits:
00152
00153
                  USARTO_SET_8BIT_FRAME_SIZE;
00154
00155
00156
              case frameSize::sevenBits:
00157
                  USARTO_SET_7BIT_FRAME_SIZE;
00158
00159
                  break;
00160
              case frameSize::sixBits:
00161
00162
                  USARTO_SET_6BIT_FRAME_SIZE;
00163
00164
                  break;
00165
00166
              case frameSize::fiveBits:
00167
00168
                  USARTO_SET_5BIT_FRAME_SIZE;
00169
                  break;
00170
00171
              case frameSize::neineBits:
00172
00173
                  USARTO_SET_9BIT_FRAME_SIZE;
00174
00175
00176
          }
00177
00178 }
```

References io::eightBits, io::fiveBits, io::sevenBits, io::sevenBits, io::sixBits, USART0\_SET\_5BIT\_FRAME\_SIZE, USART0\_SET\_6BIT\_FRAME\_SIZE, USART0\_SET\_7BIT\_FRAME\_SIZE, USART0\_SET\_8BIT\_FRAME\_SIZE, and USART0\_SET\_9BIT\_FRAME\_SIZE.

#### 9.19.3.27 setParityMode()

Set parity mode in data frame

#### **Parameters**

ar_parityMode	Defines parity mode	
---------------	---------------------	--

# Definition at line 124 of file USART0.cpp.

```
00125 {
          switch (ar_parityMode)
00127
00128
              case parityMode::noParity:
00129
                  USARTO_DISABLE_PARITY_MODE;
00130
00131
                  break;
00132
00133
              case parityMode::evenParity:
00134
                  USARTO_ENABLE_EVEN_PARITY_MODE;
00135
00136
                  break;
00137
00138
              case parityMode::oddParity:
00139
00140
                  USARTO_ENABLE_ODD_PARITY_MODE;
00141
00142
00143
          }
00144
00145 }
```

References io::evenParity, io::noParity, io::oddParity, USART0\_DISABLE\_PARITY\_MODE, USART0\_ENABLE\_EVEN\_PARITY\_MODE and USART0\_ENABLE\_ODD\_PARITY\_MODE.

#### 9.19.3.28 setStopBit()

Set number of stop bits in data frame

#### **Parameters**

ar_stopBit	Defines number of stop bits
------------	-----------------------------

#### Definition at line 179 of file USART0.cpp.

```
00180 {
00181
          switch (ar_stopBit)
00182
00183
              case stopBit::oneStopBit:
00184
00185
                  USARTO_SET_ONE_STOP_BIT;
00186
                  break;
00187
00188
              case stopBit::twoStopBits:
00189
00190
                  USARTO_SET_TWO_STOP_BITS;
00191
                  break;
00192
00193
          }
00194
00195 }
```

References io::oneStopBit, io::twoStopBits, USART0\_SET\_ONE\_STOP\_BIT, and USART0\_SET\_TWO\_STOP\_BITS.

#### 9.19.3.29 setTransmissionMode()

Set transnmission mode

#### **Parameters**

ar_transMode	Defines transmission mode
--------------	---------------------------

#### Definition at line 73 of file USART0.cpp.

```
USARTO_DISABLE_DOUBLE_SPEED_MODE;
00085
                  USARTO_ENABLE_SYNC_TRANSMISSION_MODE;
00086
                  break;
00087
00088
          case transmissionMode::masterSPI:
00089
             {
00090
                  USARTO_ENABLE_MASTER_SPI_MODE;
00091
00092
00093
00094
00095
00096 }
```

References io::async, io::masterSPI, io::sync, USART0\_DISABLE\_DOUBLE\_SPEED\_MODE, USART0\_ENABLE\_ASYNC\_TRANSMUSART0\_ENABLE\_MASTER\_SPI\_MODE, and USART0\_ENABLE\_SYNC\_TRANSMISSION\_MODE.

#### 9.19.3.30 transmitCompleteServiceRoutine()

```
void io::USARTO::transmitCompleteServiceRoutine ( ) [static]
```

Transmit complete ISR

Definition at line 394 of file USART0.cpp. 00395 { 00396 00397 }

#### 9.19.4 Member Data Documentation

```
9.19.4.1 __externally_visible__
```

```
static void io::USARTO::__externally_visible__
```

Definition at line 283 of file USARTO.h.

```
9.19.4.2 __used__
```

```
static void io::USART0::__used__
```

Definition at line 283 of file USARTO.h.

#### 9.19.4.3 m\_numberBytesReceived

```
volatile uint16_t io::USART0::m_numberBytesReceived = 0 [static], [private]
```

Nnumber of received bytes

Definition at line 338 of file USARTO.h.

#### 9.19.4.4 m\_numberBytesSent

```
volatile uint16_t io::USART0::m_numberBytesSent = 0 [static], [private]
```

Number of trasnmitted bytes

Definition at line 340 of file USARTO.h.

#### 9.19.4.5 m\_ready2Send

```
volatile uint8_t io::USART0::m_ready2Send = 1 [static], [private]
```

Ready to send flag

Definition at line 342 of file USARTO.h.

#### 9.19.4.6 m\_sizeData2Receive

```
uint16_t io::USART0::m_sizeData2Receive = 0 [static], [private]
```

Size of data to be received

Definition at line 336 of file USARTO.h.

# 9.19.4.7 m\_sizeData2Send

```
uint16_t io::USART0::m_sizeData2Send = 0 [static], [private]
```

Size of data to be transmitted

Definition at line 334 of file USART0.h.

#### 9.19.4.8 m\_status

```
volatile uint8_t io::USART0::m_status = 0 [static], [private]
```

Status of received data

Author

```
Farid Oubbati (farid.oubbati@outlook.com)
```

Date

March 2018

See USART0.h for a description of this code

Definition at line 328 of file USARTO.h.

#### 9.19.4.9 mp\_data2Receive

```
uint8_t * io::USARTO::mp_data2Receive = nullptr [static], [private]
```

Pointer to receiver buffer

Definition at line 332 of file USARTO.h.

#### 9.19.4.10 mp\_data2Send

```
const uint8_t * io::USART0::mp_data2Send = nullptr [static], [private]
```

Pointer to transmitter buffer

Definition at line 330 of file USARTO.h.

# 9.20 core::WatchdogTimer Class Reference

```
#include <WatchdogTimer.h>
```

#### **Public Member Functions**

- void selectTimeOut (const timeOut &ar\_timeOut)
- void reset ()
- void start (const operationMode &ar\_operationMode)
- void start (const operationMode &ar\_operationMode, const timeOut &ar\_timeOut)
- void stop ()

#### Static Public Member Functions

- static WatchdogTimer & getInstance ()

#### **Public Attributes**

- static void <u>used</u>
- static void \_\_externally\_visible\_\_

#### **Private Member Functions**

- WatchdogTimer ()
- ∼WatchdogTimer ()
- WatchdogTimer (const WatchdogTimer &)
- const WatchdogTimer & operator= (const WatchdogTimer &)

# **Private Attributes**

- uint8\_t m\_timeOut
- uint8\_t m\_operationMode

# 9.20.1 Detailed Description

Definition at line 84 of file WatchdogTimer.h.

#### 9.20.2 Constructor & Destructor Documentation

#### 9.20.2.1 WatchdogTimer() [1/2]

```
core::WatchdogTimer::WatchdogTimer ( ) [private]
```

### Definition at line 11 of file WatchdogTimer.cpp.

# 9.20.2.2 $\sim$ WatchdogTimer()

```
core::WatchdogTimer::~WatchdogTimer ( ) [private]
```

Destructor.

#### Definition at line 17 of file WatchdogTimer.cpp.

```
00018 {
00019
00020 }
```

#### 9.20.2.3 WatchdogTimer() [2/2]

Overried Copy constructor.

#### 9.20.3 Member Function Documentation

#### 9.20.3.1 getInstance()

```
core::WatchdogTimer & core::WatchdogTimer::getInstance ( ) [static]

Definition at line 4 of file WatchdogTimer.cpp.

00005 {
00006     static WatchdogTimer l_instance;
00007     return l_instance;
```

# 9.20.3.2 operator=()

00008

Override assign operator.

#### 9.20.3.3 reset()

```
void core::WatchdogTimer::reset ( )
```

#### Definition at line 33 of file WatchdogTimer.cpp.

```
00034 {
00035 wdt_reset();
00036
00037 }
```

#### 9.20.3.4 selectTimeOut()

#### Definition at line 22 of file WatchdogTimer.cpp.

References WATCHDOG\_SELECT\_TIMEOUT.

#### 9.20.3.5 start() [1/2]

```
void core::WatchdogTimer::start (
              const operationMode & ar_operationMode )
Definition at line 39 of file WatchdogTimer.cpp.
00040 {
          m_operationMode = static_cast<uint8_t>(ar_operationMode);
00041
          m_operationMode = static_cast<uint8_t>(((m_operationMode & 1) « 6) | ((m_operationMode & 2) « 3
00042
       ));
00043
          cli();
         wdt_reset();
WATCHDOG_START(m_operationMode, m_timeOut);
00044
00045
00046
          sei();
00047
00048 }
```

References WATCHDOG\_START.

#### 9.20.3.6 start() [2/2]

#### Definition at line 50 of file WatchdogTimer.cpp.

```
00051 {
00052
           m_timeOut = static_cast<uint8_t>(ar_timeOut);
           m_timeOut = static_cast<uint8_t>(m_timeOut & 7) | ((m_timeOut & 8) « 2 ));
m_operationMode = static_cast<uint8_t>(ar_operationMode);
00053
00054
00055
           m_operationMode = static_cast<uint8_t>(((m_operationMode & 1) « 6) | ((m_operationMode & 2) « 3
       ));
00056
          cli();
00057
           wdt_reset();
00058
           WATCHDOG_START(m_operationMode,m_timeOut);
00059
           sei();
00060
00061 }
```

References WATCHDOG\_START.

#### 9.20.3.7 stop()

```
void core::WatchdogTimer::stop ( )
```

# Definition at line 63 of file WatchdogTimer.cpp.

References WATCHDOG\_STOP.

#### 9.20.3.8 timeOutServiceRoutine()

static void core::WatchdogTimer::timeOutServiceRoutine ( ) [static]

# 9.20.4 Member Data Documentation

```
9.20.4.1 __externally_visible__
```

void core::WatchdogTimer::\_\_externally\_visible\_\_

Definition at line 102 of file WatchdogTimer.h.

```
9.20.4.2 __used__
```

void core::WatchdogTimer::\_\_used\_\_

Definition at line 102 of file WatchdogTimer.h.

# 9.20.4.3 m\_operationMode

uint8\_t core::WatchdogTimer::m\_operationMode [private]

Definition at line 125 of file WatchdogTimer.h.

# 9.20.4.4 m\_timeOut

uint8\_t core::WatchdogTimer::m\_timeOut [private]

Definition at line 123 of file WatchdogTimer.h.


# **Chapter 10**

# **File Documentation**

# 10.1 ADC.cpp File Reference

```
#include "ADC.h"
#include "MCU.h"
```

Include dependency graph for ADC.cpp:

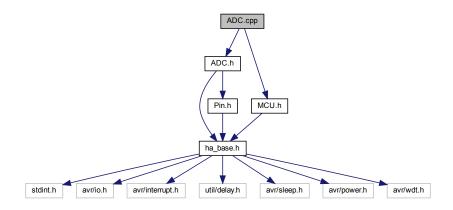

# 10.2 ADC.cpp

```
00001 #include "ADC.h"
00002 #include "MCU.h"
00003
00004 volatile uint16_t core::ADConverter::m_conversionResult = 0;
00005 uint8_t core::ADConverter::m_resolution = 10;
00006
00007
00008 core::ADConverter& core::ADConverter::getInstance(const referenceVoltage &ar_refVoltage,
00009
                                                                    const clockPrescaler& ar_clockPrescaler,
const autoTriggerSource& ar_autoTriggerSource,
00010
00011
                                                                    const io::Pin &ar_pin)
00012 {
00013
            static ADConverter l_instance(ar_refVoltage,
00014
00015
                                                ar_clockPrescaler,
00016
                                                ar_autoTriggerSource,
00017
                                                ar_pin);
00018
```

```
00019
          return l_instance;
00020 }
00021
{\tt 00022~core::ADConverter::ADConverter(const~referenceVoltage~\&ar\_refVoltage, const.)}
00023
                                      const clockPrescaler& ar_clockPrescaler,
                                      const autoTriggerSource& ar_autoTriggerSource,
00024
00025
                                      const io::Pin &ar_pin)
00026 {
00027
          core::MCU::enableADC(1);
00028
          selectAnalogInput(ar_pin);
          selectReferenceVoltage(ar_refVoltage);
00029
          selectClockPrescaler(ar_clockPrescaler);
00030
00031
          enableAutoTrigger(1);
00032
          selectAutoTriggerSource(ar_autoTriggerSource);
00033
          sei();
00034
          enableConversionCompleteInterrupt(1);
00035
00036
00037 }
00038
00039
00040 core::ADConverter::~ADConverter()
00041 {
00042
00043 }
00044
00045
00046 void core::ADConverter::selectReferenceVoltage(const referenceVoltage& ar_refVoltage)
00047 {
00048
          ADC SELECT_REF_VOLTAGE(static_cast<uint8_t>(ar_refVoltage));
00049
00050 }
00051
00052 void core::ADConverter::selectAnalogInput(io::Pin a_pin)
00053 {
           a_pin.toInput(0);
00054
00055
          ADC_SELECT_ANALOG_INPUT(a_pin.getPinNumber());
          ADC_DISABLE_DIGITAL_INPUT_REGISTER(a_pin.getPinNumber());
00056
00057
00058 }
00059
00060 void core::ADConverter::start()
00061 {
00062
          ADC_ENABLE;
          ADC_START_CONVERSION;
00063
00064 }
00065
00066 void core::ADConverter::stop()
00067 {
00068
          ADC_STOP_CONVERSION;
00069
          ADC_DISABLE;
00070 }
00071
00072 void core::ADConverter::enableAutoTrigger(const uint8_t a_enable)
00073 {
00074
          if (a enable) {
00075
              ADC_ENABLE_AUTOTRIGGER;
00076
00077
              ADC_DISABLE_AUTOTRIGGER;
00078
00079
          }
00080
00081 }
00082
00083 void core::ADConverter::enableConversionCompleteInterrupt(const uint8_t a_enable)
00084 {
00085
          if (a_enable) {
00086
              ADC_ENABLE_CONVERSION_COMPLETE_INTERRUPT;
00087
00088
          } else {
00089
              ADC_DISABLE_CONVERSION_COMPLETE_INTERRUPT;
00090
00091
00092 }
00093
00094 void core::ADConverter::selectClockPrescaler(const clockPrescaler& ar_clockPrescaler)
00095 {
00096
          ADC_SELECT_CLOCK_PRESCALER(static_cast<uint8_t>(ar_clockPrescaler));
00097
00098 }
00099
00100
00101 void core::ADConverter::selectAutoTriggerSource(const autoTriggerSource& ar_autoTriggerSource)
00102 {
00103
          ADC_SELECT_AUTO_TRIGGER_SOURCE(static_cast<uint8_t>(ar_autoTriggerSource));
00104
00105
```

10.2 ADC.cpp 173

```
00106 }
00108 void core::ADConverter::conversionCompleteServiceRoutine()
00109 {
00110
          static uint32_t l_resultData = 0;
static uint16_t l_resultDataIndex = 0;
00111
00112
00113
00114
00115
          switch (m_resolution)
00116
00117
00118
               case 8:
00119
00120
                   m_conversionResult = ADC >> 8;
00121
00122
               case 9:
00123
00125
                   m_conversionResult = ADC >> 7;
00126
00127
               case 10:
00128
00129
               {
00130
                   m_conversionResult = ADC;
00131
                   break;
00132
00133
               case 11:
00134
00135
00136
                   if (l_resultDataIndex < 4)</pre>
00137
                   {
00138
                       l_resultData += ADC;
00139
                       l_resultDataIndex++;
00140
00141
                   }
00142
                   else
                   {
00144
                       m_conversionResult = 1_resultData » 1;
00145
                       l_resultData = 0;
00146
                       l_resultDataIndex = 0;
00147
                   }
00148
00149
                   break;
00150
00151
               case 12:
00152
                   if (l_resultDataIndex < 16)</pre>
00153
00154
00155
                       l_resultData += ADC;
00156
                       l_resultDataIndex++;
00157
00158
00159
                   else
00160
00161
                       m_conversionResult = 1_resultData >> 2;
                       l_resultData = 0;
00163
                       l_resultDataIndex = 0;
00164
00165
                   break;
00166
               case 13:
00167
00168
00169
                   if (l_resultDataIndex < 64)</pre>
00170
00171
                       l_resultData += ADC;
00172
                       l_resultDataIndex++;
00173
00174
00175
                   else
00176
00177
                       m_conversionResult = l_resultData » 3;
00178
                       l_resultData = 0;
                       1_resultDataIndex = 0;
00179
00180
00181
00182
00183
               case 14:
00184
00185
                   if (1 resultDataIndex < 256)
00186
00187
                       l_resultData += ADC;
00188
                       l_resultDataIndex++;
00189
00190
00191
                   else
00192
```


```
m_conversionResult = 1_resultData » 4;
00194
                       l_resultData = 0;
00195
                       l_resultDataIndex = 0;
00196
00197
                  break;
00198
00199
              case 15:
00200
00201
                  if (l_resultDataIndex < 1024)</pre>
00202
                  {
                       l resultData += ADC;
00203
00204
                       l_resultDataIndex++;
00205
00206
                  }
00207
                  else
00208
                      m_conversionResult = l_resultData » 5;
00209
00210
                       l_resultData = 0;
00211
                      1_resultDataIndex = 0;
00212
00213
                  break;
00214
              case 16:
00215
00216
00217
                  if (l_resultDataIndex < 4096)</pre>
00218
                  {
00219
00220
                       l_resultData += ADC;
00221
                      l_resultDataIndex++;
00222
00223
                  }
00224
                  else
00225
00226
                       m_conversionResult = l_resultData » 6;
00227
                       l_resultData = 0;
                      1_resultDataIndex = 0;
00228
00229
00230
                  break;
00231
              }
00232
00233
          }
00234
00235
00236
00237
00238 }
00239
00240
00241
00242
00243 uint16_t core::ADConverter::getConversionResult( const resolution& ar_resolution)
00244 {
00245
00246
00247
          switch (ar_resolution)
00248
00249
              case core::resolution::res_8bit:
00250
              {
00251
                  ADC_ADJUST_RESULT_LEFT;
00252
                  m_resolution = 8;
00253
                  break;
00254
              }
00255
              case core::resolution::res_9bit:
00256
00257
                  ADC_ADJUST_RESULT_LEFT;
00258
                  m_resolution = 9;
00259
                  break;
00260
              }
00261
              case core::resolution::res_10bit:
00262
00263
                  ADC_ADJUST_RESULT_RIGHT;
00264
                  m_resolution = 10;
00265
                  break;
00266
00267
              case core::resolution::res_11bit:
00268
00269
00270
                  m_resolution = 11;
00271
                  break;
00272
00273
              case core::resolution::res_12bit:
00274
00275
                  m_resolution = 12;
00276
00277
00278
              case core::resolution::res_13bit:
00279
```

10.3 ADC.h File Reference 175


```
00280
                  m_resolution = 13;
00281
00282
00283
              case core::resolution::res_14bit:
00284
00285
                  m_resolution = 14;
00286
                  break;
00287
00288
              case core::resolution::res_15bit:
00289
              {
00290
                  m_resolution = 15;
00291
                  break;
00292
00293
              case core::resolution::res_16bit:
00294
00295
00296
                  m_resolution = 16;
                  break;
00297
00298
          }
00299
00300
          return m_conversionResult;
00301
00302
00303 }
```

# 10.3 ADC.h File Reference

```
#include "ha_base.h"
#include "Pin.h"
Include dependency graph for ADC.h:
```

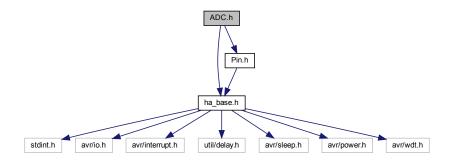

This graph shows which files directly or indirectly include this file:

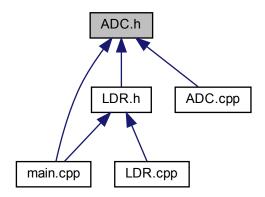

#### **Classes**

class core::ADConverter
 Class for handling ADC.

#### **Namespaces**

core

AVR chip internal core components.

### **Enumerations**

```
    enum core::resolution : uint8_t {
        core::resolution::res_8bit =0, core::resolution::res_9bit, core::resolution::res_10bit, core::resolution::res_11bit,
        core::resolution::res_12bit, core::resolution::res_13bit, core::resolution::res_14bit, core::resolution::res_15bit,
        core::resolution::res_16bit }
```

ADC resolution.

enum core::referenceVoltage:: uint8\_t { core::referenceVoltage::AREF =0, core::referenceVoltage::AVCC, core::referenceVoltage::internal }

ADC referencev voltage.

enum core::clockPrescaler : uint8\_t {
 core::clockPrescaler::PS\_2 = 1, core::clockPrescaler::PS\_4, core::clockPrescaler::PS\_8, core::clockPrescaler::PS\_16,
 core::clockPrescaler::PS\_32, core::clockPrescaler::PS\_64, core::clockPrescaler::PS\_128 }

ADC clock prescaler.

enum core::autoTriggerSource : uint8\_t {
 core::autoTriggerSource::freeRunning, core::autoTriggerSource::analogComparator, core::autoTriggerSource::extInterrupt,
 core::autoTriggerSource::timer0CompareA,
 core::autoTriggerSource::timer0Overflow, core::autoTriggerSource::timer1CompareB, core::autoTriggerSource::timer1Overflow
 core::autoTriggerSource::timer1Capture }

ADC autoTrigger source.

10.4 ADC.h


# 10.4 ADC.h

```
00001 #ifndef ADC H
00002 #define ADC_H
00003 #include "ha_base.h"
00004 #include "Pin.h"
00005
00014 namespace core
00015 {
00024 enum class resolution : uint8 t {
          res_8bit=0,
00025
00026
           res_9bit,
00027
           res_10bit,
00028
           res_11bit,
00029
          res_12bit,
00030
          res_13bit,
00031
          res 14bit,
00032
           res_15bit,
00033
          res_16bit
00034 };
00035
00044 enum class referenceVoltage : uint8_t {
00045
          AREF=0,
00046
           AVCC,
00047
           internal
00048 };
00049
00050
00059 enum class clockPrescaler : uint8 t {
00060
            PS_2 = 1,
00061
            PS_4,
00062
            PS_8,
00063
            PS_16,
00064
            PS_32,
00065
            PS 64.
00066
            PS 128
00067 };
00076 enum class autoTriggerSource : uint8_t {
          freeRunning,
00077
00078
           analogComparator,
00079
           extInterrupt,
08000
           timer0CompareA,
           timer00verflow,
00081
00082
           timer1CompareB,
           timer10verflow,
00083
00084
           timer1Capture
00085 };
00094 class ADConverter
00095 {
00096 public:
00105
          static ADConverter& getInstance(const referenceVoltage& ar_refVoltage = referenceVoltage::AVCC,
00106
                                               const clockPrescaler& ar_clockPrescaler = clockPrescaler::PS_128,
00107
                                               const autoTriggerSource& ar_autoTriggerSource =
       autoTriggerSource::freeRunning,
00108
                                              const io::Pin &ar_pin = io::Pin(0,io::PortC));
00111
           void start();
00114
           void stop();
00119
           void selectReferenceVoltage(const referenceVoltage& ar_refVoltage);
00124
           void selectAnalogInput(io::Pin a_pin);
void selectClockPrescaler(const clockPrescaler& ar_clockPrescaler);
00129
00134
           void enableConversionCompleteInterrupt(const uint8_t a_enable);
00139
           void enableAutoTrigger(const uint8_t a_enable);
00144
           void selectAutoTriggerSource(const autoTriggerSource& ar_autoTriggerSource);
         uint16_t getConversionResult(const resolution& ar_resolution = resolution::res_10bit);
static void conversionCompleteServiceRoutine() __asm__(STR(ADC_CONVERSION_COMPLETE_INTERRUPT))
_attribute__((_signal__, __used__, __externally_visible__));
00150
00153
00154
00155
00156 protected:
00157
00158
00159
00160 private:
00170
          ADConverter (const referenceVoltage& ar_refVoltage,
00171
                        const clockPrescaler& ar_clockPrescaler,
                        const autoTriggerSource &ar_autoTriggerSource,
00172
00173
                        const io::Pin &ar_pin);
00174
00177
           ~ADConverter();
00178
00181
           ADConverter(const ADConverter&);
00182
00185
           const ADConverter& operator=(const ADConverter&);
00186
           static volatile uint16 t m conversionResult;
00187
00189
           static uint8_t m_resolution;
00191 };
```

```
00192
00193 }
00194 #endif
```

# 10.5 AnalogComparator.cpp File Reference

#include "AnalogComparator.h"
Include dependency graph for AnalogComparator.cpp:

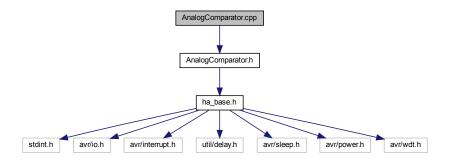


# 10.6 AnalogComparator.cpp


```
00001 #include "AnalogComparator.h" 00002 00003
```

# 10.7 AnalogComparator.h File Reference

#include "ha\_base.h"
Include dependency graph for AnalogComparator.h:

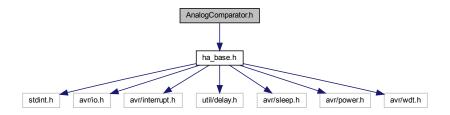

This graph shows which files directly or indirectly include this file:

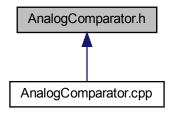

#### Classes

• class core::AnalogComparator

# **Namespaces**

core

AVR chip internal core components.

# **Macros**

• #define ANALOG\_COMARATOR\_H

# 10.7.1 Macro Definition Documentation

# 10.7.1.1 ANALOG\_COMARATOR\_H

#define ANALOG\_COMARATOR\_H


Definition at line 13 of file AnalogComparator.h.

# 10.8 AnalogComparator.h

```
00001
00012 #ifndef ANALOG_COMPARATOR_H
00013 #define ANALOG_COMARATOR_H
00014 #include "ha_base.h"
00016
00017
00018 namespace core
00019 {
00020
00022
00023
00024 class AnalogComparator 00025 {
00026
00027 public:
00028
00029
00030
00031
00032 protected:
00033
00034 private:
00035
00036
00037
00038 };
00039
00040 }
00041
00042
00043 #endif
```

# 10.9 Buzzer.cpp File Reference

```
#include "Buzzer.h"
Include dependency graph for Buzzer.cpp:
```

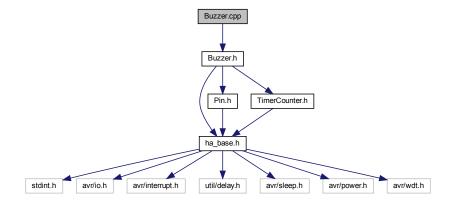


# 10.10 Buzzer.cpp


```
00016
          m_pin.toOutput();
00017
00018 }
00019
00020 component::Buzzer::~Buzzer()
00021 {
00023 }
00024
00025 void component::Buzzer::buzz(const uint16_t &ar_period_us , const uint16_t &ar_duration_us)
00026 {
00027
00028
           for (uint16_t i = 0; i < ar_duration_us; i += ar_period_us)</pre>
00029
00030
               \ensuremath{//} for loop with variable delay selects the pitch
00031
               for (uint16_t j = 0; j < ar_period_us; j++)</pre>
00032
00033
                   _delay_us(1);
00034
00035
              m_pin.toggle();
00036
00037
          m_pin.setLow();
00038
00039 }
00040
00041
00042 void component::Buzzer::pause(uint16_t a_duration_us)
00043 {
00044
          do {
          _delay_us(1);
} while (--a_duration_us);
00045
00046
00047 }
```

# 10.11 Buzzer.h File Reference

```
#include "ha_base.h"
#include "Pin.h"
#include "TimerCounter.h"
Include dependency graph for Buzzer.h:
```

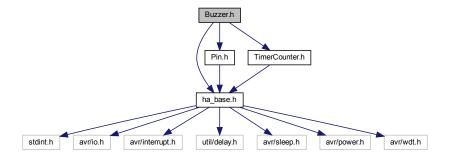

This graph shows which files directly or indirectly include this file:

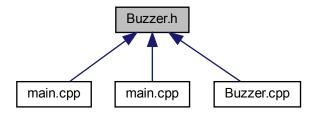

#### Classes

· class component::Buzzer

Class for handling a Buzzer component.

# **Namespaces**

· component

AVR chip external components.

# 10.12 Buzzer.h


```
00001
00002 // #include "Buzzer.h"
00003 // #include "TimerCounterO.h"
00004 // #include "buzzer_pitches_8bit.h"
00005
00006
00007 // #define BUZZER 6
80000
00009
00010 // int main(void) {
00011
00012 //
00013 //
             // instantiate the Buzzer object
             component::Buzzer Buzzer(io::Pin(BUZZER,io::PortD));
00014 //
00015
00016
00017 //
            // instantiate the TimerCounterO object
00018 //
            core::TimerCounter0 &myTimerCounter0 = core::TimerCounter0::getInstance();
00019
00020 //
             \ensuremath{//} notes in the melody:
00021 //
00022
             const uint16_t notes[] = {C2, E2, G2, C3};
00023
00024 //
             for (uint8_t i = 0; i < sizeof (notes)/sizeof (uint16_t); i++)</pre>
00025 //
00026
00027 //
                 Buzzer.buzz(notes[i],200);
00028
00029 //
00030
00031 //
             _delay_ms(1000);
00032 //
             _delay_ms(1000);
00033 //
00034
             _delay_ms(1000);
             for (uint8_t i = 0; i < sizeof (notes)/sizeof (uint16_t); i++)</pre>
00035 //
00036 //
00037 //
                 Buzzer.buzz(myTimerCounter0, notes[i], 200);
```

10.12 Buzzer.h 183

```
00038 //
00039
00040
            // ----- Event loop ----- //
00041 //
            while (1) {
00042 //
00043
00044
00045 //
00046 //
00047 // }
            return 0;
00048
00049 #ifndef BUZZER_H
00050 #define BUZZER_H
00051 #include "ha_base.h"
00052 #include "Pin.h"
00053 #include "TimerCounter.h"
00054
00063 namespace component
00064 {
00065
00074 class Buzzer
00075 {
00076
00077 public:
00085
          Buzzer(const io::Pin &ar_pin);
00089
          ~Buzzer();
00090
00096
          void buzz(const uint16_t &ar_period_us , const uint16_t &ar_duration_us);
00097
00102
          void pause(uint16_t a_duration_us);
00103
00113
          template<typename TC>
00114
          void buzz (TC &ar_timerCounter,
00115
                     const uint16_t &ar_period_us,
00116
                     uint16_t &ar_duration_ms,
                     const core::channel &ar_channel=core::channel::A,
00117
00118
                     const core::clockSource &ar_clockSource= core::clockSource::PS_64
00119
00120
          {
00121
              ar_timerCounter.selectOperationMode(core::operationMode::CTC_OCR);
00122
               ar_timerCounter.selectCompareOutputMode(ar_channel, core::compareOutputMode::toggle);
00123
               ar_timerCounter.setCounter(0);
00124
               ar_timerCounter.setOutputCompareRegister(ar_channel, ar_period_us);
00125
               // start timer
00126
               ar_timerCounter.start();
00127
               // wait for the pitch duration
00128
               while (ar_duration_ms) {
00129
                 _delay_ms(1);
00130
                 ar_duration_ms--;
00131
00132
               // no buzz
00133
               ar_timerCounter.selectCompareOutputMode(ar_channel, core::compareOutputMode::normal);
00134
               ar_timerCounter.stop();
00135
          }
00136
00137
00138 protected:
00139
00140 private:
00141
00142
          io::Pin m pin;
00145 };
00146 }
00147
00148
00149 #endif
```

# 10.13 buzzer\_pitches\_16bit.h File Reference

This graph shows which files directly or indirectly include this file:

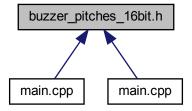

## **Macros**

- #define C0 25000
- #define Cx0 23597
- #define D0 22272
- #define Dx0 21022
- #define E0 19843
- #define F0 18729
- #define Fx0 17678
- #define G0 16685
- #define Gx0 15749
- # define 0.00 107 1.
- #define A0 14865#define Ax0 14031
- #define B0 13243
- #define B0 13243
   #define C1 12500
- #define Cx1 11798
- #define D1 11136
- #define Dx1 10511
- #define E1 9921
- #define F1 9364
- #define Fx1 8839
- #define G1 8343
- #define Gx1 7875
- #define A1 7433
- #define Ax1 7015
- #define B1 6622
- #define C2 6250
- #define Cx2 5899
- #define D2 5568
- #define Dx2 5256
- #define E2 4961
- #define F2 4682
- #define Fx2 4419
- #define G2 4171
- #define Gx2 3937

- #define A2 3716
- #define Ax2 3508
- #define B2 3311
- #define C3 3125
- #define Cx3 2950
- #define D3 2784
- #define Dx3 2628
- #define E3 2480
- #define F3 2341
- #define Fx3 2210
- #define G3 2086
- #define Gx3 1969
- #define A3 1858
- #define Ax3 1754
- #define B3 1655
- #define C4 1562
- #define Cx4 1474
- #define D4 1392
- #define Dx4 1313
- #define E4 1240
- #define F4 1170
- #define Fx4 1105
- #define G4 1043
- #define Gx4 984
- #define A4 929
- #define Ax4 877
- #define B4 827
- #define C5 781
- #define Cx5 737
- #define D5 696
- #define Dx5 657
- #define E5 620
- #define F5 585
- #define Fx5 552
- #define G5 521
- #define Gx5 492#define A5 464
- #define Ax5 438
- #define B5 414
- #define C6 390
- #define Cx6 368
- #define D6 347
- #define Dx6 328
- #define E6 310
- #define F6 292
- #define Fx6 276
- #define G6 260
- #define Gx6 246
- #define A6 232
- #define Ax6 219
- #define B6 207
- #define C7 195
- #define Cx7 184
- #define D7 174
- #define Dx7 164

- #define E7 155
- #define F7 146
- #define Fx7 138
- #define G7 130
- #define Gx7 123
- #define A7 116
- #define Ax7 109
- #define B7 103

# 10.13.1 Macro Definition Documentation

#### 10.13.1.1 A0

#define A0 14865

Definition at line 21 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.2 A1

#define A1 7433

Definition at line 33 of file buzzer\_pitches\_16bit.h.

# 10.13.1.3 A2

#define A2 3716

Definition at line 45 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.4 A3

#define A3 1858

Definition at line 57 of file buzzer\_pitches\_16bit.h.

# 10.13.1.5 A4

#define A4 929

Definition at line 69 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.6 A5

#define A5 464

Definition at line 81 of file buzzer\_pitches\_16bit.h.

# 10.13.1.7 A6

#define A6 232

Definition at line 93 of file buzzer\_pitches\_16bit.h.

# 10.13.1.8 A7

#define A7 116

Definition at line 105 of file buzzer\_pitches\_16bit.h.

### 10.13.1.9 Ax0

#define Ax0 14031

Definition at line 22 of file buzzer\_pitches\_16bit.h.

## 10.13.1.10 Ax1

#define Ax1 7015

Definition at line 34 of file buzzer\_pitches\_16bit.h.

# 10.13.1.11 Ax2

#define Ax2 3508

Definition at line 46 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.12 Ax3

#define Ax3 1754

Definition at line 58 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.13 Ax4

#define Ax4 877

Definition at line 70 of file buzzer\_pitches\_16bit.h.

# 10.13.1.14 Ax5

#define Ax5 438

Definition at line 82 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.15 Ax6

#define Ax6 219

Definition at line 94 of file buzzer\_pitches\_16bit.h.

# 10.13.1.16 Ax7

#define Ax7 109

Definition at line 106 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.17 B0

#define B0 13243

Definition at line 23 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.18 B1

#define B1 6622

Definition at line 35 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.19 B2

#define B2 3311

Definition at line 47 of file buzzer\_pitches\_16bit.h.

# 10.13.1.20 B3

#define B3 1655

Definition at line 59 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.21 B4

#define B4 827

Definition at line 71 of file buzzer\_pitches\_16bit.h.

# 10.13.1.22 B5

#define B5 414

Definition at line 83 of file buzzer\_pitches\_16bit.h.

# 10.13.1.23 B6

#define B6 207

Definition at line 95 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.24 B7

#define B7 103

Definition at line 107 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.25 C0

#define C0 25000

Definition at line 12 of file buzzer\_pitches\_16bit.h.

# 10.13.1.26 C1

#define C1 12500

Definition at line 24 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.27 C2

#define C2 6250

Definition at line 36 of file buzzer\_pitches\_16bit.h.

# 10.13.1.28 C3

#define C3 3125

Definition at line 48 of file buzzer\_pitches\_16bit.h.

## 10.13.1.29 C4

#define C4 1562

Definition at line 60 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.30 C5

#define C5 781

Definition at line 72 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.31 C6

#define C6 390

Definition at line 84 of file buzzer\_pitches\_16bit.h.

## 10.13.1.32 C7

#define C7 195

Definition at line 96 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.33 Cx0

#define Cx0 23597

Definition at line 13 of file buzzer\_pitches\_16bit.h.

### 10.13.1.34 Cx1

#define Cx1 11798

Definition at line 25 of file buzzer\_pitches\_16bit.h.

## 10.13.1.35 Cx2

#define Cx2 5899

Definition at line 37 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.36 Cx3

#define Cx3 2950

Definition at line 49 of file buzzer\_pitches\_16bit.h.

## 10.13.1.37 Cx4

#define Cx4 1474

Definition at line 61 of file buzzer\_pitches\_16bit.h.

## 10.13.1.38 Cx5

#define Cx5 737

Definition at line 73 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.39 Cx6

#define Cx6 368

Definition at line 85 of file buzzer\_pitches\_16bit.h.

## 10.13.1.40 Cx7

#define Cx7 184

Definition at line 97 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.41 D0

#define D0 22272

Definition at line 14 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.42 D1

#define D1 11136

Definition at line 26 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.43 D2

#define D2 5568

Definition at line 38 of file buzzer\_pitches\_16bit.h.

## 10.13.1.44 D3

#define D3 2784

Definition at line 50 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.45 D4

#define D4 1392

Definition at line 62 of file buzzer\_pitches\_16bit.h.

### 10.13.1.46 D5

#define D5 696

Definition at line 74 of file buzzer\_pitches\_16bit.h.

## 10.13.1.47 D6

#define D6 347

Definition at line 86 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.48 D7

#define D7 174

Definition at line 98 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.49 Dx0

#define Dx0 21022

Definition at line 15 of file buzzer\_pitches\_16bit.h.

## 10.13.1.50 Dx1

#define Dx1 10511

Definition at line 27 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.51 Dx2

#define Dx2 5256

Definition at line 39 of file buzzer\_pitches\_16bit.h.

## 10.13.1.52 Dx3

#define Dx3 2628

Definition at line 51 of file buzzer\_pitches\_16bit.h.

## 10.13.1.53 Dx4

#define Dx4 1313

Definition at line 63 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.54 Dx5

#define Dx5 657

Definition at line 75 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.55 Dx6

#define Dx6 328

Definition at line 87 of file buzzer\_pitches\_16bit.h.

## 10.13.1.56 Dx7

#define Dx7 164

Definition at line 99 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.57 E0

#define E0 19843

Definition at line 16 of file buzzer\_pitches\_16bit.h.

## 10.13.1.58 E1

#define E1 9921

Definition at line 28 of file buzzer\_pitches\_16bit.h.

## 10.13.1.59 E2

#define E2 4961

Definition at line 40 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.60 E3

#define E3 2480

Definition at line 52 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.61 E4

#define E4 1240

Definition at line 64 of file buzzer\_pitches\_16bit.h.

## 10.13.1.62 E5

#define E5 620

Definition at line 76 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.63 E6

#define E6 310

Definition at line 88 of file buzzer\_pitches\_16bit.h.

## 10.13.1.64 E7

#define E7 155

Definition at line 100 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.65 F0

#define F0 18729

Definition at line 17 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.66 F1

#define F1 9364

Definition at line 29 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.67 F2

#define F2 4682

Definition at line 41 of file buzzer\_pitches\_16bit.h.

## 10.13.1.68 F3

#define F3 2341

Definition at line 53 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.69 F4

#define F4 1170

Definition at line 65 of file buzzer\_pitches\_16bit.h.

## 10.13.1.70 F5

#define F5 585

Definition at line 77 of file buzzer\_pitches\_16bit.h.

## 10.13.1.71 F6

#define F6 292

Definition at line 89 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.72 F7

#define F7 146

Definition at line 101 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.73 Fx0

#define Fx0 17678

Definition at line 18 of file buzzer\_pitches\_16bit.h.

## 10.13.1.74 Fx1

#define Fx1 8839

Definition at line 30 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.75 Fx2

#define Fx2 4419

Definition at line 42 of file buzzer\_pitches\_16bit.h.

## 10.13.1.76 Fx3

#define Fx3 2210

Definition at line 54 of file buzzer\_pitches\_16bit.h.

## 10.13.1.77 Fx4

#define Fx4 1105

Definition at line 66 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.78 Fx5

#define Fx5 552

Definition at line 78 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.79 Fx6

#define Fx6 276

Definition at line 90 of file buzzer\_pitches\_16bit.h.

## 10.13.1.80 Fx7

#define Fx7 138

Definition at line 102 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.81 G0

#define G0 16685

Definition at line 19 of file buzzer\_pitches\_16bit.h.

## 10.13.1.82 G1

#define G1 8343

Definition at line 31 of file buzzer\_pitches\_16bit.h.

## 10.13.1.83 G2

#define G2 4171

Definition at line 43 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.84 G3

#define G3 2086

Definition at line 55 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.85 G4

#define G4 1043

Definition at line 67 of file buzzer\_pitches\_16bit.h.

## 10.13.1.86 G5

#define G5 521

Definition at line 79 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.87 G6

#define G6 260

Definition at line 91 of file buzzer\_pitches\_16bit.h.

## 10.13.1.88 G7

#define G7 130

Definition at line 103 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.89 Gx0

#define Gx0 15749

Definition at line 20 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.90 Gx1

#define Gx1 7875

Definition at line 32 of file buzzer\_pitches\_16bit.h.

## 10.13.1.91 Gx2

#define Gx2 3937

Definition at line 44 of file buzzer\_pitches\_16bit.h.

## 10.13.1.92 Gx3

#define Gx3 1969

Definition at line 56 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.93 Gx4

#define Gx4 984

Definition at line 68 of file buzzer\_pitches\_16bit.h.

### 10.13.1.94 Gx5

#define Gx5 492

Definition at line 80 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.95 Gx6

```
#define Gx6 246
```

Definition at line 92 of file buzzer\_pitches\_16bit.h.

#### 10.13.1.96 Gx7

```
#define Gx7 123
```

Definition at line 104 of file buzzer\_pitches\_16bit.h.

## 10.14 buzzer\_pitches\_16bit.h

```
00001 /* Scale in the key of 1/25000 */
00002 /*
00003
         These are 1/2 periods (us) -- if you delay this long,
         then toggle the speaker pin, you'll get approximate
00004
00005
00006
00007
         This is the 16-bit version. The pitches get less accurate
00008
         as they get higher.
00009
00010 */
00011
                     25000 // freq = 1000000/ (2*25000) = 20hz
00012 #define C0
00013 #define Cx0
                     23597
00014 #define
                     22272
00015 #define
00016 #define
                     19843
00017 #define
               F0
                     18729
00018 #define
                     17678
               Fx0
00019 #define
               G0
                     16685
00020 #define
00021 #define
                      14865
00022 #define
               Ax0
                     14031
00023 #define B0
                     13243
00024 #define
                     12500
               C1
00025 #define
                     11798
               Cx1
00026 #define
                      11136
00027 #define
00028 #define
                      9921
00029 #define
                      9364
00030 #define Fx1
                      8839
00031 #define
               G1
                      8343
00032 #define
               Gx1
00033 #define
                      7433
00034 #define
                      7015
00035 #define
               В1
                      6622
00036 #define
00037 #define
                      6250
               Cx2
                      5899
00038 #define D2
                      5568
00039 #define
00040 #define
                      4961
00041 #define
               F2
                      4682
00042 #define
               Fx2
                      4419
00043 #define
               G2
                      4171
00044 #define
                      3937
               Gx2
00045 #define
                       3716
               A2
00046 #define
00047 #define
                       3311
00048 #define
               C3
                      3125
00049 #define
               Cx3
                      2950
00050 #define
                      2784
               D3
00051 #define
00052 #define
                      2480
00053 #define
                       2341
00054 #define Fx3
                      2210
00055 #define
00056 #define Gx3
                      1969
00057 #define A3
                      1858
00058 #define Ax3
```

```
00059 #define
00060 #define
                      1562
00061 #define
                      1474
00062 #define D4
                      1392
00063 #define
               Dx4
00064 #define
                      1240
00065 #define
00066 #define
00067 #define G4
                      1043
00068 #define
              Gx4
                       984
00069 #define A4
                       929
00070 #define Ax4
                       877
00071 #define B4
                       827
00072 #define
00073 #define
               Cx5
                       737
00074 #define D5
00075 #define Dx5
                       696
               Dx5
                       657
00076 #define
                       620
00077 #define
00078 #define
00079 #define
00080 #define
               Gx5
                       492
00081 #define A5
                       464
00082 #define
                       438
               Ax5
00083 #define B5
                       414
00084 #define
00085 #define
00086 #define D6
                       347
00087 #define
               Dx6
                       328
00088 #define E6
                       310
00089 #define
                       292
00090 #define
00091 #define
00092 #define
               Gx6
                       246
00093 #define
00094 #define Ax6
                       219
00095 #define B6
                       207
00096 #define
00097 #define
00098 #define D7
00099 #define
               Dx7
00100 #define E7
00101 #define F7
                       146
00102 #define Fx7
00103 #define
00104 #define Gx7
00105 #define A7
                       116
00106 #define Ax7
                       103 // \text{freq} = 1000000 / (2*103) = 4.85 \text{ khz}
00107 #define B7
```

# 10.15 buzzer\_pitches\_8bit.h File Reference

## Macros

- #define Gx0 252
- #define A0 238
- #define Ax0 224
- #define B0 212
- #define C1 200
- #define Cx0 189
- #define D1 178
- #define Dx0 168
- #define E1 159
- #define F1 150
- #define Fx1 141
- #define G1 133
- #define Gx1 126
- #define A1 119
- #define Ax1 112
- #define B1 106

- #define C2 100
- #define Cx2 94
- #define D2 89
- #define Dx2 84
- #define E2 79
- #define F2 75
- #define Fx2 71
- #define G2 67
- #define Gx2 63
- #define A2 59
- #define Ax2 56
- #define B2 53
- #define C3 50
- #define Cx3 47
- #define D3 44
- #define Dx3 42
- #define E3 40
- #define F3 37
- #define Fx3 35
- #define G3 33

## 10.15.1 Macro Definition Documentation

## 10.15.1.1 A0

#define A0 238

Definition at line 14 of file buzzer\_pitches\_8bit.h.

#### 10.15.1.2 A1

#define Al 119

Definition at line 26 of file buzzer\_pitches\_8bit.h.

#### 10.15.1.3 A2

#define A2 59

Definition at line 38 of file buzzer\_pitches\_8bit.h.

#### 10.15.1.4 Ax0

#define Ax0 224

Definition at line 15 of file buzzer\_pitches\_8bit.h.

#### 10.15.1.5 Ax1

#define Ax1 112

Definition at line 27 of file buzzer\_pitches\_8bit.h.

#### 10.15.1.6 Ax2

#define Ax2 56

Definition at line 39 of file buzzer\_pitches\_8bit.h.

## 10.15.1.7 B0

#define B0 212

Definition at line 16 of file buzzer\_pitches\_8bit.h.

#### 10.15.1.8 B1

#define B1 106

Definition at line 28 of file buzzer\_pitches\_8bit.h.

## 10.15.1.9 B2

#define B2 53

Definition at line 40 of file buzzer\_pitches\_8bit.h.

## 10.15.1.10 C1

#define C1 200

Definition at line 17 of file buzzer\_pitches\_8bit.h.

#### 10.15.1.11 C2

#define C2 100

Definition at line 29 of file buzzer\_pitches\_8bit.h.

#### 10.15.1.12 C3

#define C3 50

Definition at line 41 of file buzzer\_pitches\_8bit.h.

## 10.15.1.13 Cx0

#define Cx0 189

Definition at line 18 of file buzzer\_pitches\_8bit.h.

#### 10.15.1.14 Cx2

#define Cx2 94

Definition at line 30 of file buzzer\_pitches\_8bit.h.

## 10.15.1.15 Cx3

#define Cx3 47

Definition at line 42 of file buzzer\_pitches\_8bit.h.

#### 10.15.1.16 D1

#define D1 178

Definition at line 19 of file buzzer\_pitches\_8bit.h.

#### 10.15.1.17 D2

#define D2 89

Definition at line 31 of file buzzer\_pitches\_8bit.h.

#### 10.15.1.18 D3

#define D3 44

Definition at line 43 of file buzzer\_pitches\_8bit.h.

## 10.15.1.19 Dx0

#define Dx0 168

Definition at line 20 of file buzzer\_pitches\_8bit.h.

#### 10.15.1.20 Dx2

#define Dx2 84

Definition at line 32 of file buzzer\_pitches\_8bit.h.

### 10.15.1.21 Dx3

#define Dx3 42

Definition at line 44 of file buzzer\_pitches\_8bit.h.

## 10.15.1.22 E1

#define E1 159

Definition at line 21 of file buzzer\_pitches\_8bit.h.

#### 10.15.1.23 E2

#define E2 79

Definition at line 33 of file buzzer\_pitches\_8bit.h.

#### 10.15.1.24 E3

#define E3 40

Definition at line 45 of file buzzer\_pitches\_8bit.h.

## 10.15.1.25 F1

#define F1 150

Definition at line 22 of file buzzer\_pitches\_8bit.h.

#### 10.15.1.26 F2

#define F2 75

Definition at line 34 of file buzzer\_pitches\_8bit.h.

## 10.15.1.27 F3

#define F3 37

Definition at line 46 of file buzzer\_pitches\_8bit.h.

## 10.15.1.28 Fx1

#define Fx1 141

Definition at line 23 of file buzzer\_pitches\_8bit.h.

#### 10.15.1.29 Fx2

#define Fx2 71

Definition at line 35 of file buzzer\_pitches\_8bit.h.

#### 10.15.1.30 Fx3

#define Fx3 35

Definition at line 47 of file buzzer\_pitches\_8bit.h.

## 10.15.1.31 G1

#define G1 133

Definition at line 24 of file buzzer\_pitches\_8bit.h.

#### 10.15.1.32 G2

#define G2 67

Definition at line 36 of file buzzer\_pitches\_8bit.h.

### 10.15.1.33 G3

#define G3 33

Definition at line 48 of file buzzer\_pitches\_8bit.h.

#### 10.15.1.34 Gx0

```
#define Gx0 252
```

Definition at line 13 of file buzzer\_pitches\_8bit.h.

#### 10.15.1.35 Gx1

```
#define Gx1 126
```

Definition at line 25 of file buzzer\_pitches\_8bit.h.

#### 10.15.1.36 Gx2

```
#define Gx2 63
```


Definition at line 37 of file buzzer\_pitches\_8bit.h.

# 10.16 buzzer\_pitches\_8bit.h

```
00001 /* Scale in the key of 1/200 */
00002
00003 /*
         These are 1/2 periods (us) -- if you delay this long,
00005
          then toggle the speaker pin, you'll get approximate
00006
00007
80000
         This is the 8-bit version. The pitches get less accurate
00009
         as they get higher.
00010
00011 */
00012
00013 #define Gx0 252 // freq = 1000000/ (2*252) = 1.98 khz 00014 #define A0 238
00015 #define Ax0 224
00016 #define B0 212
00017 #define C1 200
00018 #define Cx0 189
00019 #define D1 178
00020 #define Dx0 168
00021 #define E1 159
00022 #define F1 150
00023 #define Fx1 141
00024 #define G1
00025 #define Gx1 126
00026 #define A1 119
00027 #define Ax1 112
00028 #define B1 106
00029 #define C2
00030 #define Cx2 94
00031 #define D2 89
00032 #define Dx2 84
00033 #define E2 79
00034 #define F2 75
00035 #define Fx2 71
00036 #define G2 67
00037 #define Gx2 63
00038 #define A2 59
00039 #define Ax2 56
00040 #define B2 53
00041 #define C3 50
00042 #define Cx3 47
00043 #define D3 44
00044 #define Dx3 42
00045 #define E3 40
00046 #define F3
00047 #define Fx3 35
00048 #define G3 33 // freq = 1000000/ (2*33) = 15.15 khz
```

# 10.17 DCMotor.cpp File Reference

```
#include "DCMotor.h"
Include dependency graph for DCMotor.cpp:
```

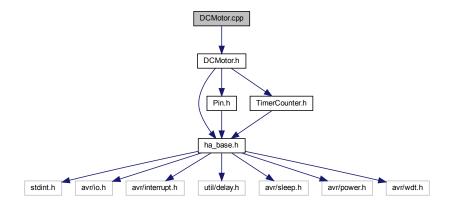

# 10.18 DCMotor.cpp


```
00001 #include "DCMotor.h"
00002
00003 component::DCMotor::DCMotor(const io::Pin &ar_pin)
00004
           : m_pin(ar_pin)
00005 {
00006
          m_pin.toOutput();
00007
00008 }
00009
00010
00011 component::DCMotor::~DCMotor()
00012 {
00013
00014 }
00015
00016 void component::DCMotor::on()
00017 {
00018
          m_pin.setHigh();
00019 }
00020
00021 void component::DCMotor::off()
00022 {
00023
          m_pin.setLow();
00024 }
00025
00026 void component::DCMotor::toggle()
00027 {
00028
          m_pin.toggle();
00029
00030 }
```

## 10.19 DCMotor.h File Reference


Header file of the DCMotor class.

```
#include "ha_base.h"
#include "Pin.h"
```

#include "TimerCounter.h"
Include dependency graph for DCMotor.h:

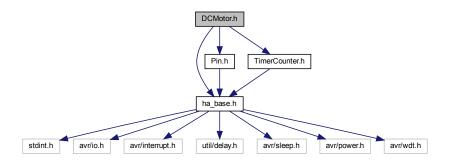

This graph shows which files directly or indirectly include this file:

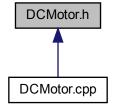

#### **Classes**

· class component::DCMotor

## **Namespaces**

component

AVR chip external components.

## 10.19.1 Detailed Description

Header file of the DCMotor class.

Usage example (test): #include "MCU.h" #include "TimerCounter0.h" #include "DCMotor.h"

#define DCMOTOR\_NUMBER 6

int main(void) {

```
Init initialize MCU core::MCU::init();
instantiate the TimerCounter0 object core::TimerCounter0 &myTimerCounter0 = core::TimerCounter0::getInstance();
myTimerCounter0.selectClockSource(core::clockSource::PS_1024);
instantiate a DCMotor object component::DCMotor myDCMotor(io::Pin(DCMOTOR NUMBER,io::PortD));
myDCMotor.connect(myTimerCounter0);
myDCMotor.spin(myTimerCounter0,0); delay ms(5000);
myDCMotor.spin(myTimerCounter0,75); _delay_ms(5000);
myDCMotor.spin(myTimerCounter0,190); _delay_ms(5000);
myDCMotor.spin(myTimerCounter0,200); delay ms(5000);
myDCMotor.disconnect(myTimerCounter0);
Mainloop while (1) {
} return 0; } Usage example (H Bridge):
#include "MCU.h" #include "TimerCounter0.h" #include "DCMotor.h"
#define DCMOTOR_NUMBER 6 #define DCMOTOR_BACKWARD 0 #define DCMOTOR_FORWARD 1
int main(void) {
Init initialize MCU core::MCU::init();
instantiate the TimerCounter0 object core::TimerCounter0 &myTimerCounter0 = core::TimerCounter0::getInstance();
myTimerCounter0.selectClockSource(core::clockSource::PS 256);
instantiate a DCMotor object component::DCMotor myDCMotor(io::Pin(DCMOTOR_NUMBER,io::PortD));
instantiate direction pins objects
io::Pin myPinForward = io::Pin(DCMOTOR_FORWARD,io::PortB); myPinForward.toOutput();
io::Pin myPinBackward = io::Pin(DCMOTOR BACKWARD,io::PortB); myPinBackward.toOutput();
myDCMotor.connect(myTimerCounter0);
myPinForward.setHigh(); myPinBackward.setLow(); myDCMotor.spin(myTimerCounter0,30); _delay_ms(5000);
myPinForward.setLow(); myPinBackward.setHigh(); myDCMotor.spin(myTimerCounter0,30); _delay_ms(5000);
myDCMotor.disconnect(myTimerCounter0);
Mainloop while (1) {
} return 0; }
Basic class for IO abstraction of Pin and Port
Author
     Farid Oubbati ( https://github.com/faroub)
Date
     March 2020
Definition in file DCMotor.h.
```

## 10.20 DCMotor.h

```
00001
00117 #ifndef DCMOTOR H
00118 #define DCMOTOR_H
00119 #include "ha_base.h"


00120 #include "Pin.h"

00121 #include "TimerCounter.h"
00122
00123 namespace component
00124 {
00125
00126 class DCMotor
00127 {
00128 public:
00129
          DCMotor(const io::Pin &ar_pin);
00130
          ~DCMotor();
00132
00135
          void on();
00138
          void off();
00141
          void toggle();
00142
00143
          template<typename TC>
00144
          void spin(TC &ar_timerCounter,
00145
                    //const uint8_t &ar_dir,
00146
                     const uint16_t &ar_speed,
00147
                     const core::channel &ar_channel=core::channel::A)
00148
          {
00149
00150
              ar_timerCounter.setOutputCompareRegister(ar_channel, ar_speed);
00151
              ar_timerCounter.start();
00152
00153
00154
00155
          template<typename TC>
          void stop(TC &ar_timerCounter)
00157
00158
               ar_timerCounter.stop();
00159
00160
00161
          }
00162
00163
          template<typename TC>
00164
          void connect(TC &ar_timerCounter,
00165
                        const core::channel &ar_channel=core::channel::A)
00166
              ar_timerCounter.selectOperationMode(core::operationMode::fast_PWM);
00167
00168
              ar_timerCounter.selectCompareOutputMode(ar_channel, core::compareOutputMode::clear);
00169
              ar_timerCounter.setCounter(0);
00170
00171
          }
00172
00173
          template<typename TC>
00174
          void disconnect (TC &ar_timerCounter,
00175
                           const core::channel &ar_channel=core::channel::A)
00176
00177
               ar\_timerCounter.selectCompareOutputMode(ar\_channel, \ core::compareOutputMode::normal);\\
00178
              ar_timerCounter.stop();
00179
00180
00182
00183 private:
00184
          io::Pin m_pin;
00185
00187 };
00188
00190 #endif // DCMOTOR_H
```

# 10.21 ExternInterrupt.cpp File Reference

#include "ExternInterrupt.h"

Include dependency graph for ExternInterrupt.cpp:

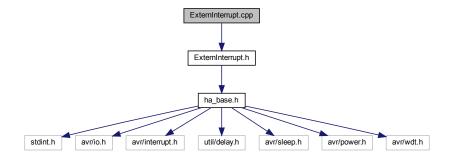

# 10.22 ExternInterrupt.cpp


```
00001 #include "ExternInterrupt.h"
00002
00003 core::ExternInterrupt& core::ExternInterrupt::getInstance()
00004 {
00005
          static ExternInterrupt l_instance;
00006
          return 1 instance;
00007
00008 }
00009
00010
00011 core::ExternInterrupt::ExternInterrupt()
00012 {
00013
          sei();
00014
00015 }
00016
00017 core::ExternInterrupt::~ExternInterrupt()
00018 {
00020 }
00021
00022 void core::ExternInterrupt::setInt0SenseControl(const senseControl& ar_senseControl) 00023 {
00024
          EXT_INT_SET_INTO_SENSE_CONTROL(static_cast<uint8_t>(ar_senseControl));
00025
00026 }
00027
00028 void core::ExternInterrupt::setInt1SenseControl(const senseControl& ar_senseControl)
00029 {
00030
          EXT INT SET INT1 SENSE CONTROL(static cast<uint8 t>(ar senseControl));
00031
00032 }
00033
00034 void core::ExternInterrupt::enableInt0(const uint8_t a_enable)
00035 {
00036
          if (a enable) {
00037
              EXT_INT_ENABLE_INTO;
00038
00039
          } else {
00040
              EXT_INT_DISABLE_INTO;
00041
00042
00043 }
00044
00045 void core::ExternInterrupt::enableInt1(const uint8_t a_enable)
00046 {
00047
          if (a_enable) {
              EXT_INT_ENABLE_INT1;
00048
00049
00050
          } else {
00051
              EXT_INT_DISABLE_INT1;
00052
00053 }
00054
00055
00056 void core::ExternInterrupt::enablePinChange(const pinChangePort& ar_pinChangePort, const uint8_t
       a_enable)
```

```
00057 {
00058
          if (a_enable) {
              EXT_INT_ENABLE_PIN_CHANGE_INTERRUPT(static_cast<uint8_t>(ar_pinChangePort));
00059
00060
00061
          } else {
00062
              EXT_INT_DISABLE_PIN_CHANGE_INTERRUPT(static_cast<uint8_t>(ar_pinChangePort));
00063
00064
00065 }
00066
00067 void core::ExternInterrupt::enablePinChangeMaskPortB(const uint8_t a_pinNumber, const uint8_t
       a_enable)
00068 {
00069
          if (a_enable) {
00070
              EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTB(a_pinNumber);
00071
00072
          } else {
00073
              EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTB(a_pinNumber);
00074
00075
00076 }
00077
00078
00079 void core::ExternInterrupt::enablePinChangeMaskPortC(const uint8_t a_pinNumber, const uint8_t
       a_enable)
00080 {
00081
          if (a_enable) {
00082
              EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTC(a_pinNumber);
00083
00084
          } else {
00085
              EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTC(a_pinNumber);
00086
00087
00088 }
00089
00090 void core::ExternInterrupt::enablePinChangeMaskPortD(const uint8_t a_pinNumber, const uint8_t
       a_enable)
00091 {
00092
          if (a_enable) {
00093
              EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD(a_pinNumber);
00094
00095
          } else {
             EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD(a_pinNumber);
00096
00097
00098 }
```


# 10.23 ExternInterrupt.h File Reference

Header file of the ExternInterrupt class.

```
#include "ha_base.h"
Include dependency graph for ExternInterrupt.h:
```

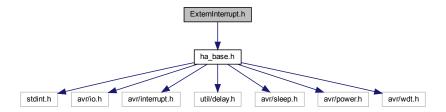

This graph shows which files directly or indirectly include this file:

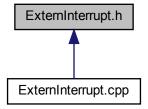

#### Classes

· class core::ExternInterrupt

#### **Namespaces**

core

AVR chip internal core components.

## **Enumerations**

- enum core::senseControl : uint8\_t { core::senseControl::lowLevel =0, core::senseControl::logicalChange, core::senseControl::fallingEdge, core::senseControl::risingEdge }
- enum core::pinChangePort : uint8\_t { core::pinChangePort::PCINTB =0, core::pinChangePort::PCINTC, core::pinChangePort::PCINTD }

## 10.23.1 Detailed Description

Header file of the ExternInterrupt class.

class to handle externally triggered interrupts.

Usage example (external interrupt):

#include "PushButton.h" #include "Led.h" #include "ExternInterrupt.h"

#define PUSHBUTTON\_NUMBER 2 #define MAIN\_LED\_NUMBER 0 #define INTERRUPT\_LED\_NUMBER 1 #define DELAYTIME 1000

instantiate a Led object declaration of global variables (shut up warning) extern component::Led MainLed; extern component::Led InterruptLed; component::Led MainLed(io::Pin(MAIN\_LED\_NUMBER,io::PortB)); component::Led InterruptLed(io::Pin(INTERRUPT\_LED\_NUMBER,io::PortB));

instantiate a Led object declaration of global variable (shut up warning) extern component::PushButton PushButton; component::PushButton PushButton(io::Pin(PUSHBUTTON\_NUMBER,io::PortD));

```
int main(void) {
Init
instantiate the external interrupt manager core::ExternInterrupt &myExternInterrupt = core::ExternInterrupt::getInstance();
myExternInterrupt.enableInt0(1); myExternInterrupt.setInt0SenseControl(core::senseControl::logicalChange);
Mainloop while (1) {
MainLed.toggle(); _delay_ms(DELAYTIME);
} return 0; }
void core::ExternInterrupt::Int0ServiceRoutine() { if (PushButton.isPressed()) { InterruptLed.on(); } else { Interrupt⊷
Led.off(); }
}
Usage example (pin change interrupt):
#include "PushButton.h" #include "Led.h" #include "ExternInterrupt.h"
#define PUSHBUTTON 1 NUMBER 2 #define PUSHBUTTON_2_NUMBER 3 #define MAIN_LED_NUMBER 0
#define INTERRUPT LED 1 NUMBER 1 #define INTERRUPT LED 2 NUMBER 2 #define DELAYTIME 1000
instantiate a Led objects declaration of global variables (shut up warning) extern component::Led MainLed; ex-
tern component::Led InterruptLed1; extern component::Led InterruptLed2; component::Led MainLed(io::Pin(M←
AIN LED NUMBER,io::PortB)); component::Led InterruptLed1(io::Pin(INTERRUPT LED 1 NUMBER,io::PortB));
component::Led InterruptLed2(io::Pin(INTERRUPT LED 2 NUMBER,io::PortB));
instantiate a PushButton objects declaration of global variable (shut up warning) extern component::PushButton
PushButton1; extern component::PushButton PushButton2; component::PushButton1(io::Pin(PUSH ←
BUTTON_1_NUMBER,io::PortD)); component::PushButton PushButton2(io::Pin(PUSHBUTTON_2_NUMBER,io ←
::PortB));
int main(void) {
Init
instantiate the external interrupt manager core::ExternInterrupt &myExternInterrupt = core::ExternInterrupt::getInstance();
myExternInterrupt.enablePinChange(core::pinChangePort::PCINTD,1); myExternInterrupt.enablePinChange(core ←
::pinChangePort::PCINTB,1);
                               myExternInterrupt.enablePinChangeMaskPortD(PUSHBUTTON 1 NUMBER,1);
myExternInterrupt.enablePinChangeMaskPortB(PUSHBUTTON 2 NUMBER,1);
Mainloop while (1) {
MainLed.toggle(); _delay_ms(DELAYTIME);
} return 0; }
void core::ExternInterrupt::pinChangePortDServiceRoutine() { if (PushButton1.isPressed()) { InterruptLed1.on();
} else { InterruptLed1.off();
} } void core::ExternInterrupt::pinChangePortBServiceRoutine() { if (PushButton2.isPressed()) { InterruptLed2.on();
} else { InterruptLed2.off(); }
}
Author
     Farid Oubbati ( https://github.com/faroub)
Date
     March 2020
```

Definition in file ExternInterrupt.h.

10.24 ExternInterrupt.h 219

## 10.24 ExternInterrupt.h


```
00001
00140 #ifndef EXTERN_INTERRUPTS_H
00141 #define EXTERN_INTERRUPTS_H
00142 #include "ha_base.h"
00143
00144
00145
00146 namespace core
00147 {
00148
00149 enum class senseControl : uint8 t {
          lowLevel=0,
00151
           logicalChange,
00152
          fallingEdge,
00153
          risingEdge
00154 };
00155
00156 enum class pinChangePort : uint8_t {
          PCINTB=0,
00157
00158
          PCINTC.
00159
          PCINTD,
00160 };
00161
00162 class ExternInterrupt
00163 {
00164
00165 public:
00166
00167
           static ExternInterrupt& getInstance();
00168
           void setIntOSenseControl(const senseControl& ar_senseControl);
00170
00171
           void setInt1SenseControl(const senseControl& ar_senseControl);
00172
00173
          void enableInt0(const uint8 t a enable);
00174
00175
           void enableInt1(const uint8_t a_enable);
00176
00177
           void enablePinChange(const pinChangePort& ar_pinChangePort, const uint8_t a_enable);
00178
00179
          void enablePinChangeMaskPortB(const uint8_t a_pinNumber, const uint8_t a_enable);
00180
00181
           void enablePinChangeMaskPortC(const uint8_t a_pinNumber, const uint8_t a_enable);
00182
00183
           void enablePinChangeMaskPortD(const uint8_t a_pinNumber, const uint8_t a_enable);
00184
           static void IntOServiceRoutine() _asm_ (STR(EXT_INT_INTO_INTERRUPT)) _attribute_ ((_signal__,
00185
         _used__, __externally_visible__));
00186
00187
           static void IntlServiceRoutine() __asm__(STR(EXT_INT_INT1_INTERRUPT)) __attribute__((__signal__,
       __used__, __externally_visible__));
00188
         static void pinChangePortBServiceRoutine() __asm__(STR(EXT_INT_PIN_CHANGE_PORTB_INTERRUPT))
_attribute__((__signal__, __used__, __externally_visible__));
00189
00190
00191
           static void pinChangePortCServiceRoutine() __asm__(STR(EXT_INT_PIN_CHANGE_PORTC_INTERRUPT))
       __attribute__((__signal__, __used__, __externally_visible__));
00192
        static void pinChangePortDServiceRoutine() __asm__(STR(EXT_
_attribute__((__signal__, __used__, __externally_visible__));
00193
                                                           _asm__ (STR(EXT_INT_PIN_CHANGE_PORTD_INTERRUPT))
00194
00195
00196 protected:
00197
00198 private:
00199
00200
          ExternInterrupt();
00201
00204
           ~ExternInterrupt();
00205
00208
          ExternInterrupt(const ExternInterrupt&);
00209
00212
           const ExternInterrupt& operator=(const ExternInterrupt&);
00213
00214 };
00215 }
00216
00217
00218
00219
00220 #endif
```

## 10.25 ha base.h File Reference

Base header file for the basic hardware abstraction macros.

```
#include <stdint.h>
#include <avr/io.h>
#include <avr/interrupt.h>
#include <util/delay.h>
#include <avr/sleep.h>
#include <avr/power.h>
#include <avr/wdt.h>
```

Include dependency graph for ha\_base.h:

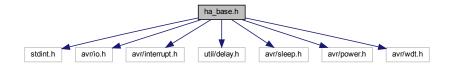

This graph shows which files directly or indirectly include this file:



## **Macros**

- #define STRx(s) #s
- #define STR(s) STRx(s)

## 10.25.1 Detailed Description

Base header file for the basic hardware abstraction macros.

Author

```
Farid Oubbati ( https://github.com/faroub)
```

Date

March 2020

Definition in file ha\_base.h.

10.26 ha\_base.h 221

## 10.25.2 Macro Definition Documentation

#### 10.25.2.1 STR

Definition at line 16 of file ha\_base.h.

#### 10.25.2.2 STRx

```
#define STRx(
     s ) #s
```

Definition at line 15 of file ha base.h.


# 10.26 ha\_base.h

```
00001
00009 #ifndef HABASE_H
00010 #define HABASE_H
00011
00012 /*
00013 ^{\star} Helper construct to get interrupt numbers from names 00014 ^{\star/}
00015 #define STRx(s) #s
00016 #define STR(s) STRx(s)
00017
00018 /*
00019 ^{\star} Any class needs these includes from avr-libc 00020 ^{\star/} 00021 #include <stdint.h>
00022 #include <avr/io.h>
00023 #include <avr/interrupt.h>
00024 #include <util/delay.h>
00025 #include <avr/sleep.h>
00026 #include <avr/power.h>
00027 #include <avr/wdt.h>
00029
00030 /* 00031 \star Include hardware abstraction the Atmega328p 00032 \star/
00033 #if
               defined(__AVR_ATmega328P__)
          #include "ha_m328p.h"
00035
            #include "utils_m328p.h"
00036
00037
00038 #endif
00039
00040
00041 #endif
```

## 10.27 ha m328p.h File Reference

Header file for the hardware abstraction macros of the Atmega328p.

#include <util/setbaud.h>
Include dependency graph for ha\_m328p.h:

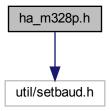

#### **Macros**

- #define PUSHBUTTON DEBOUNCE TIME US 1000
- #define PUSHBUTTON\_SAMPLING 12
- #define USART0\_SET\_BAUDRATE\_HIGH\_REGISTER UBRR0H = UBRRH\_VALUE
- #define USART0 SET BAUDRATE LOW REGISTER UBRR0L = UBRRL VALUE
- #define USART0\_ENABLE\_ASYNC\_TRANSMISSION\_MODE UCSR0C &=  $\sim$ ((1 << UMSEL01) | (1 << UMSEL00))
- #define USART0\_ENABLE\_SYNC\_TRANSMISSION\_MODE UCSR0C = (UCSR0C & ~(1 << UMSEL01)) | (1 << UMSEL00)
- #define USART0\_ENABLE\_MASTER\_SPI\_MODE UCSR0C |= (1 << UMSEL01) | (1 << UMSEL01)</li>
- #define USARTO ENABLE DOUBLE SPEED MODE
- #define USARTO DISABLE DOUBLE SPEED MODE
- #define USARTO DISABLE DOUBLE SPEED MODE UCSR0A &= ~(1 << U2X0)</li>
- #define USART0\_ENABLE\_EVEN\_PARITY\_MODE UCSR0C = (1 << UPM01) | (UCSR0C & ~(1 << U← PM00))
- #define USART0\_ENABLE\_ODD\_PARITY\_MODE UCSR0C |= ((1 << UPM01) | (1 << UPM00))
- #define USART0\_DISABLE\_PARITY\_MODE UCSR0C &= ~((1 << UPM01) | (1 << UPM00))
- #define USART0\_SET\_ONE\_STOP\_BIT UCSR0C &=  $\sim$ (1 << USBS0)
- #define USART0\_SET\_TWO\_STOP\_BITS UCSR0C |= (1 << USBS0)
- #define USARTO SET 9BIT FRAME SIZE
- #define USART0\_SET\_8BIT\_FRAME\_SIZE
- #define USART0 SET 7BIT FRAME SIZE
- #define USART0 SET 6BIT FRAME SIZE
- #define USART0\_SET\_5BIT\_FRAME\_SIZE
- #define USART0\_ENABLE\_TRANSMITTER UCSR0B |= 1 << TXEN0</li>
- #define USART0\_DISABLE\_TRANSMITTER UCSR0B &= ~(1 << TXEN0)</li>
- #define USART0\_ENABLE\_RECEIVER UCSR0B |= 1 << RXEN0
- #define USART0\_DISABLE\_RECEIVER UCSR0B &= ~(1 << RXEN0)</li>
- #define USART0\_CONTROL\_STATUS\_REGISTER UCSR0A
- #define USARTO DATA REGISTER UDRO
- #define USART0\_FRAME\_ERROR FE0

- #define USART0 DATA OVERRUN DOR0
- #define USART0\_PARITY\_ERROR UPE0
- #define USART0 ENABLE DATA REGISTER EMPTY INTERRUPT UCSR0B |= 1 << UDRIE0</li>
- #define USARTO DISABLE DATA REGISTER EMPTY INTERRUPT UCSR0B &= ~(1 << UDRIE0)</li>
- #define USART0 ENABLE RECEIVE COMPLETE INTERRUPT UCSR0B |= 1 << RXCIE0</li>
- #define USART0\_DISABLE\_RECEIVE\_COMPLETE\_INTERRUPT UCSR0B &= ~(1 << RXCIE0)</li>
- #define USART0\_ENABLE\_TRANSMIT\_COMPLETE\_INTERRUPT UCSR0B |= 1 << TXCIE0</li>
- #define USART0 DISABLE TRANSMIT COMPLETE INTERRUPT UCSR0B &= ~(1 << TXCIE0)</li>
- #define USARTO RECEIVE COMPLETE INTERRUPT USART RX vect
- #define USART0 TRANSMIT COMPLETE INTERRUPT USART TX vect
- #define USARTO DATA REGISTER EMPTY INTERRUPT USART UDRE vect
- #define ADC\_SELECT\_REF\_VOLTAGE(refVoltage) ADMUX &= 0x3F; ADMUX |= refVoltage << 6
- #define ADC\_ADJUST\_RESULT\_LEFT ADMUX |= 1 << ADLAR
- #define ADC ADJUST RESULT RIGHT ADMUX &= ~(1 << ADLAR)</li>
- #define ADC SELECT ANALOG INPUT(pinNumber) ADMUX &= 0xF0; ADMUX |= pinNumber
- #define ADC DISABLE DIGITAL INPUT REGISTER(pinNumber) DIDR0 &= 0xC0; DIDR0 |= pinNumber
- #define ADC\_ENABLE ADCSRA |= 1 << ADEN</li>
- #define ADC DISABLE ADCSRA &= ~(1 << ADEN)</li>
- #define ADC START CONVERSION ADCSRA |= 1 << ADSC</li>
- #define ADC\_STOP\_CONVERSION ADCSRA &= ~(1 << ADSC)</li>
- #define ADC ENABLE AUTOTRIGGER ADCSRA |= 1 << ADATE</li>
- #define ADC DISABLE AUTOTRIGGER ADCSRA &= ~(1 << ADATE)</li>
- #define ADC\_ENABLE\_CONVERSION\_COMPLETE\_INTERRUPT ADCSRA |= 1 << ADIE</li>
- #define ADC\_DISABLE\_CONVERSION\_COMPLETE\_INTERRUPT ADCSRA &= ~(1 << ADIE)</li>
- #define ADC\_SELECT\_CLOCK\_PRESCALER(clockPrescaler) ADCSRA &= 0xF8; ADCSRA |= clock← Prescaler
- #define ADC\_SELECT\_AUTO\_TRIGGER\_SOURCE(triggerSource) ADCSRB &= 0xF8; ADCSRB |= triggerSource
- #define ADC\_CONVERSION\_COMPLETE INTERRUPT ADC vect
- #define EXT\_INT\_SET\_INTO\_SENSE\_CONTROL(senseControl) EICRA &= 0xFC; EICRA |= senseControl
- #define EXT\_INT\_SET\_INT1\_SENSE\_CONTROL(senseControl) EICRA &= 0xF3; EICRA |= senseControl
- #define EXT\_INT\_ENABLE\_INT0 EIMSK |= 1 << INT0</li>
- #define EXT\_INT\_DISABLE\_INTO EIMSK &= ~(1 << INTO)</li>
- #define EXT\_INT\_ENABLE\_INT1 EIMSK |= 1 << INT1</li>
- #define EXT\_INT\_DISABLE\_INT1 EIMSK &= ~(1 << INT1)</li>
- #define EXT\_INT\_ENABLE\_PIN\_CHANGE\_INTERRUPT(pinChangePort) PCICR |= 1 << pinChangePort
- #define EXT\_INT\_DISABLE\_PIN\_CHANGE\_INTERRUPT(pinChangePort) PCICR &=  $\sim$ (1 << pinChange  $\leftarrow$  Port)
- #define EXT\_INT\_ENABLE\_PIN\_CHANGE\_MASK\_PORTB(pinChangePin) PCMSK0 |= 1 << pinChange ←</li>
   Pin
- #define EXT\_INT\_DISABLE\_PIN\_CHANGE\_MASK\_PORTB(pinChangePin) PCMSK0 &= ~(1 << pin← ChangePin)</li>
- #define EXT\_INT\_ENABLE\_PIN\_CHANGE\_MASK\_PORTC(pinChangePin) PCMSK1 |= 1 << pinChange ←</li>
   Pin
- #define EXT\_INT\_DISABLE\_PIN\_CHANGE\_MASK\_PORTC(pinChangePin) PCMSK1 &= ~(1 << pin← ChangePin)</li>
- #define EXT\_INT\_ENABLE\_PIN\_CHANGE\_MASK\_PORTD(pinChangePin) PCMSK2 |= 1 << pinChange ←</li>
   Pin
- #define EXT\_INT\_DISABLE\_PIN\_CHANGE\_MASK\_PORTD(pinChangePin) PCMSK2 &= ~(1 << pin← ChangePin)</li>
- #define EXT\_INT\_INT0\_INTERRUPT INT0\_vect
- #define EXT\_INT\_INT1\_INTERRUPT INT1\_vect
- #define EXT\_INT\_PIN\_CHANGE\_PORTB\_INTERRUPT PCINT0\_vect
- #define EXT\_INT\_PIN\_CHANGE\_PORTC\_INTERRUPT\_PCINT1\_vect
- #define EXT\_INT\_PIN\_CHANGE\_PORTD\_INTERRUPT PCINT2\_vect

- #define TIMER0 STOP TCCR0B &= 0xF8
- #define TIMER1\_STOP TCCR1B &= 0xF8
- #define TIMER2 STOP TCCR2B &= 0xF8
- #define TIMER0\_SELECT\_CLOCK\_SOURCE(clockSource) TCCR0B &= 0xF8; TCCR0B |= clockSource
- #define TIMER1 SELECT CLOCK SOURCE(clockSource) TCCR1B &= 0xF8; TCCR1B |= clockSource
- #define TIMER2\_SELECT\_CLOCK\_SOURCE(clockSource) TCCR2B &= 0xF8; TCCR2B |= clockSource
- #define TIMER0\_SELECT\_OPERATION\_MODE(operationMode) TCCR0A &= 0xFC; TCCR0A |= (operationMode & 3); TCCR0B &= 0xF7; TCCR0B |= (operationMode & 12) << 1</li>
- #define TIMER1\_SELECT\_OPERATION\_MODE(operationMode) TCCR1A &= 0xFC; TCCR1A |= (operationMode & 3); TCCR1B &= 0xE7; TCCR1B |= (operationMode & 12) << 1</li>
- #define TIMER2\_SELECT\_OPERATION\_MODE(operationMode) TCCR2A &= 0xFC; TCCR2A |= (operationMode & 3); TCCR2B &= 0xF7; TCCR2B |= (operationMode & 12) << 1</li>
- #define TIMER0\_SELECT\_COM\_CHANNEL\_A(compareOutputMode) TCCR0A &= 0x3F; TCCR0A |= compareOutputMode << 6</li>
- #define TIMER0\_SELECT\_COM\_CHANNEL\_B(compareOutputMode) TCCR0A &= 0xCF; TCCR0A |= compareOutputMode << 4</li>
- #define TIMER1\_SELECT\_COM\_CHANNEL\_A(compareOutputMode) TCCR1A &= 0x3F; TCCR1A |= compareOutputMode << 6</li>
- #define TIMER1\_SELECT\_COM\_CHANNEL\_B(compareOutputMode) TCCR1A &= 0xCF; TCCR1A |= compareOutputMode << 4</li>
- #define TIMER2\_SELECT\_COM\_CHANNEL\_A(compareOutputMode) TCCR2A &= 0x3F; TCCR2A |= compareOutputMode << 6</li>
- #define TIMER2\_SELECT\_COM\_CHANNEL\_B(compareOutputMode) TCCR2A &= 0xCF; TCCR2A |= compareOutputMode << 4</li>
- #define TIMER0\_ENABLE\_COM\_CHANNEL\_A\_INTERRUPT TIMSK0 |= 1 << OCIE0A</li>
- #define TIMERO\_DISABLE\_COM\_CHANNEL\_A\_INTERRUPT TIMSKO &= ~(1 << OCIE0A)</li>
- #define TIMER0\_ENABLE\_COM\_CHANNEL\_B\_INTERRUPT TIMSK0 |= 1 << OCIE0B
- #define TIMERO\_DISABLE\_COM\_CHANNEL\_B\_INTERRUPT TIMSK0 &= ~(1 << OCIE0B)</li>
- #define TIMER0\_ENABLE\_OVERFLOW\_INTERRUPT TIMSK0 |= 1 << TOIE0</li>
- #define TIMER0\_DISABLE\_OVERFLOW\_INTERRUPT TIMSK0 &= ~(1 << TOIE0)</li>
- #define TIMER1\_ENABLE\_COM\_CHANNEL\_A\_INTERRUPT TIMSK1 |= 1 << OCIE1A</li>
- #define TIMER1\_DISABLE\_COM\_CHANNEL\_A\_INTERRUPT TIMSK1 &= ~(1 << OCIE1A)</li>
- #define TIMER1\_ENABLE\_COM\_CHANNEL\_B\_INTERRUPT TIMSK1 |= 1 << OCIE1B
- #define TIMER1\_DISABLE\_COM\_CHANNEL\_B\_INTERRUPT TIMSK1 &= ~(1 << OCIE1B)</li>
- #define TIMER1 ENABLE OVERFLOW INTERRUPT TIMSK1 |= 1 << TOIE1</li>
- #define TIMER1 DISABLE OVERFLOW INTERRUPT TIMSK1 &= ~(1 << TOIE1)</li>
- #define TIMER1\_ENABLE\_INPUT\_CAPTURE\_INTERRUPT TIMSK1 |= 1 << ICIE1
- #define TIMER1 DISABLE INPUT CAPTURE INTERRUPT TIMSK1 &= ~(1 << ICIE1)</li>
- #define TIMER2 ENABLE COM CHANNEL A INTERRUPT TIMSK2 |= 1 << OCIE2A</li>
- #define TIMER2\_DISABLE\_COM\_CHANNEL\_A\_INTERRUPT TIMSK2 &= ~(1 << OCIE2A)</li>
- #define TIMER2\_ENABLE\_COM\_CHANNEL\_B\_INTERRUPT TIMSK2 |= 1 << OCIE2B
- #define TIMER2 DISABLE COM CHANNEL B INTERRUPT TIMSK2 &= ~(1 << OCIE2B)</li>
- #define TIMER2\_ENABLE\_OVERFLOW\_INTERRUPT TIMSK2 |= 1 << TOIE2</li>
- #define TIMER2\_DISABLE\_OVERFLOW\_INTERRUPT TIMSK2 &= ~(1 << TOIE2)</li>
- #define TIMERO COM CHANNEL A INTERRUPT TIMERO COMPA vect
- #define TIMER0\_COM\_CHANNEL\_B\_INTERRUPT TIMER0\_COMPB\_vect
- #define TIMERO OVERFLOW INTERRUPT TIMERO OVF vect
- #define TIMER1\_COM\_CHANNEL\_A\_INTERRUPT TIMER1\_COMPA\_vect
- #define TIMER1 COM CHANNEL B INTERRUPT TIMER1 COMPB vect
- #define TIMER1\_OVERFLOW\_INTERRUPT TIMER1\_OVF\_vect
- #define TIMER1 INPUT CAPTURE INTERRUPT TIMER1 CAPT vect
- #define TIMER2 COM CHANNEL A INTERRUPT TIMER2 COMPA vect
- #define TIMER2 COM CHANNEL B INTERRUPT TIMER2 COMPB vect
- #define TIMER2\_OVERFLOW\_INTERRUPT TIMER2\_OVF\_vect

- #define WATCHDOG\_SELECT\_TIMEOUT(timeOut) WDTCSR |= (1<<WDCE) | (1<<WDCE); WDTCSR = (0<<WDCE) | (0<<WDCE) | timeOut;</li>
- #define WATCHDOG\_START(operationMode, timeOut) MCUSR &= ~(1<<WDRF); WDTCSR |= (1<<W→DCE) | (1<<WDE); WDTCSR = operationMode | timeOut;</li>
- #define WATCHDOG\_STOP MCUSR &= ~(1<<WDRF); WDTCSR |= (1<<WDCE) | (1<<WDE); WDT

   CSR = 0x00;</li>
- #define WATCHDOG\_TIMEOUT\_INTERRUPT WDT\_vect
- #define MCU\_SELECT\_SLEEP\_MODE(sleepMode) SMCR &= 0xF1; SMCR |= sleepMode << 1</li>
- #define MCU\_SLEEP\_ENABLE SMCR |= 1 << SE
- #define MCU SLEEP DISABLE SMCR &= ~(1 << SE)</li>
- #define MCU TWI ENABLE PRR &= ~(1 << PRTWI)</li>
- #define MCU\_TWI\_DISABLE PRR |= 1 << PRTWI
- #define MCU\_TIMER2\_ENABLE PRR &= ~(1 << PRTIM2)</li>
- #define MCU\_TIMER2\_DISABLE PRR |= 1 << PRTIM2</li>
- #define MCU\_TIMER1\_ENABLE PRR &= ~(1 << PRTIM1)</li>
- #define MCU TIMER1 DISABLE PRR |= 1 << PRTIM1
- #define MCU\_TIMER0\_ENABLE PRR &= ~(1 << PRTIM0)</li>
- #define MCU\_TIMER0\_DISABLE PRR |= 1 << PRTIM0</li>
- #define MCU SPI ENABLE PRR &= ~(1 << PRSPI)</li>
- #define MCU SPI DISABLE PRR |= 1 << PRSPI
- #define MCU USART0 ENABLE PRR &= ~(1 << PRUSART0)</li>
- #define MCU\_USART0\_DISABLE PRR |= 1 << PRUSART0</li>
- #define MCU\_ADC\_ENABLE PRR &= ~(1 << PRADC)</li>
- #define MCU\_ADC\_DISABLE PRR |= 1 << PRADC
- #define MCU\_BOD\_DISABLE MCUCR |= (1<<BODSE) | (1<<BODS); MCUCR &= ~(1<<BODSE);
- #define SERVOMOTOR\_TIMER\_PULSE\_WIDTH\_COUNT(pulseWidth, clockPrescaler) ((F\_CPU/1000000 ← UL) \* (pulseWidth/ clockPrescaler))
- #define SERVOMOTOR\_TIMER\_ANGLE\_COUNT(angle, out\_min, out\_mid, out\_max) (((out\_min\*(angle 90L))\*(angle 180L))/16200L + (angle\*out\_max\*(angle 90L))/16200L (angle\*out\_mid\*(angle 180L))/8100L))
- #define SPI ENABLE SPCR |= 1 << SPE
- #define SPI\_DISABLE SPCR &=  $\sim$ (1 << SPE)
- #define SPI\_SELECT\_MASTER\_MODE SPCR |= 1 << MSTR</li>
- #define SPI\_SELECT\_SLAVE\_MODE SPCR &= ~(1 << MSTR)</li>
- #define SPI\_SELECT\_DATA\_MODE(dataMode) SPCR &= 0xF3; SPCR |= dataMode << 2</li>
- #define SPI\_SELECT\_CLOCK\_PRESCALER(clockPrescaler) SPCR &= 0xFC; SPCR |= (clockPrescaler & 3); SPSR &= 0xFE; SPSR |= (clockPrescaler & 4) >> 2
- #define SPI\_SELECT\_DATA\_ORDER(dataOrder) SPCR &= 0xDF; SPCR |= dataOrder << 5
- #define SPI\_WRITE\_COLLISION WCOL
- #define SPI TRANSFER COMPLETE SPIF
- #define SPI MASTER MODE MSTR
- #define SPI CONTROL REGISTER SPCR
- #define SPI\_DATA\_REGISTER SPDR
- #define SPI STATUS REGISTER SPSR
- #define SPI ENABLE TRANSFER COMPLETE INTERRUPT SPCR |= 1 << SPIE
- #define SPI\_DISABLE\_TRANSFER\_COMPLETE\_INTERRUPT SPCR &= ~(1 << SPIE)</li>
- #define SPI\_TRANSFER\_COMPLETE\_INTERRUPT SPI\_STC\_vect

#### 10.27.1 Detailed Description

Header file for the hardware abstraction macros of the Atmega328p.

Author

Farid Oubbati ( https://github.com/faroub)

Date

March 2020

Definition in file ha\_m328p.h.

## 10.27.2 Macro Definition Documentation

## 10.27.2.1 ADC\_ADJUST\_RESULT\_LEFT

#define ADC\_ADJUST\_RESULT\_LEFT ADMUX |= 1 << ADLAR

Definition at line 126 of file ha\_m328p.h.

## 10.27.2.2 ADC\_ADJUST\_RESULT\_RIGHT

#define ADC\_ADJUST\_RESULT\_RIGHT ADMUX &=  $\sim$  (1 << ADLAR)

Definition at line 127 of file ha\_m328p.h.

## 10.27.2.3 ADC\_CONVERSION\_COMPLETE\_INTERRUPT

#define ADC\_CONVERSION\_COMPLETE\_INTERRUPT ADC\_vect

Definition at line 151 of file ha\_m328p.h.

## 10.27.2.4 ADC\_DISABLE

#define ADC\_DISABLE ADCSRA &=  $\sim$  (1 << ADEN)

Definition at line 134 of file ha\_m328p.h.

#### 10.27.2.5 ADC\_DISABLE\_AUTOTRIGGER

#define ADC\_DISABLE\_AUTOTRIGGER ADCSRA &=  $\sim$  (1 << ADATE)

Definition at line 140 of file ha\_m328p.h.

#### 10.27.2.6 ADC\_DISABLE\_CONVERSION\_COMPLETE\_INTERRUPT

#define ADC\_DISABLE\_CONVERSION\_COMPLETE\_INTERRUPT ADCSRA &=  $\sim$  (1 << ADIE)

Definition at line 143 of file ha\_m328p.h.

#### 10.27.2.7 ADC\_DISABLE\_DIGITAL\_INPUT\_REGISTER

Definition at line 130 of file ha\_m328p.h.

#### 10.27.2.8 ADC ENABLE

#define ADC\_ENABLE ADCSRA |= 1 << ADEN

Definition at line 133 of file ha\_m328p.h.

## 10.27.2.9 ADC\_ENABLE\_AUTOTRIGGER

#define ADC\_ENABLE\_AUTOTRIGGER ADCSRA  $\mid$ = 1 << ADATE

Definition at line 139 of file ha\_m328p.h.

#### 10.27.2.10 ADC ENABLE CONVERSION COMPLETE INTERRUPT

#define ADC\_ENABLE\_CONVERSION\_COMPLETE\_INTERRUPT ADCSRA |= 1 << ADIE

Definition at line 142 of file ha\_m328p.h.

#### 10.27.2.11 ADC\_SELECT\_ANALOG\_INPUT

Definition at line 129 of file ha\_m328p.h.

## 10.27.2.12 ADC\_SELECT\_AUTO\_TRIGGER\_SOURCE

Definition at line 148 of file ha\_m328p.h.

#### 10.27.2.13 ADC\_SELECT\_CLOCK\_PRESCALER

Definition at line 145 of file ha m328p.h.

## 10.27.2.14 ADC\_SELECT\_REF\_VOLTAGE

```
#define ADC_SELECT_REF_VOLTAGE( refVoltage \ ) \ \mbox{ADMUX \&= 0x3F; ADMUX |= refVoltage} << 6
```

Definition at line 124 of file ha\_m328p.h.

## 10.27.2.15 ADC\_START\_CONVERSION

```
#define ADC_START_CONVERSION ADCSRA |= 1 << ADSC
```

Definition at line 136 of file ha\_m328p.h.

### 10.27.2.16 ADC\_STOP\_CONVERSION

```
#define ADC_STOP_CONVERSION ADCSRA &= \sim (1 << ADSC)
```

Definition at line 137 of file ha\_m328p.h.

#### 10.27.2.17 EXT\_INT\_DISABLE\_INTO

```
#define EXT_INT_DISABLE_INTO EIMSK &= \sim (1 << INTO)
```

Definition at line 159 of file ha\_m328p.h.

#### 10.27.2.18 EXT\_INT\_DISABLE\_INT1

```
#define EXT_INT_DISABLE_INT1 EIMSK &= \sim (1 << INT1)
```

Definition at line 162 of file ha\_m328p.h.

## 10.27.2.19 EXT\_INT\_DISABLE\_PIN\_CHANGE\_INTERRUPT

```
#define EXT_INT_DISABLE_PIN_CHANGE_INTERRUPT( 
 pinChangePort) PCICR &= \sim (1 << pinChangePort)
```

Definition at line 166 of file ha\_m328p.h.

### 10.27.2.20 EXT\_INT\_DISABLE\_PIN\_CHANGE\_MASK\_PORTB

```
#define EXT_INT_DISABLE_PIN_CHANGE_MASK_PORTB( pinChangePin \ ) \ \ \text{PCMSKO} \ \&= \ \sim (1 \ << \ pinChangePin)
```

Definition at line 170 of file ha\_m328p.h.

#### 10.27.2.21 EXT\_INT\_DISABLE\_PIN\_CHANGE\_MASK\_PORTC

```
#define EXT_INT_DISABLE_PIN_CHANGE_MASK_PORTC( pinChangePin \ ) \ \ PCMSK1 \ \&= \ \sim (1 \ << \ pinChangePin)
```

Definition at line 173 of file ha m328p.h.

#### 10.27.2.22 EXT\_INT\_DISABLE\_PIN\_CHANGE\_MASK\_PORTD

```
#define EXT_INT_DISABLE_PIN_CHANGE_MASK_PORTD( pinChangePin \ ) \ \ PCMSK2 \ \&= \ \sim (1 \ << \ pinChangePin)
```

Definition at line 176 of file ha\_m328p.h.

## 10.27.2.23 EXT\_INT\_ENABLE\_INTO

```
#define EXT_INT_ENABLE_INTO EIMSK |= 1 << INTO
```

Definition at line 158 of file ha\_m328p.h.

#### 10.27.2.24 EXT\_INT\_ENABLE\_INT1

```
#define EXT_INT_ENABLE_INT1 EIMSK |= 1 << INT1</pre>
```

Definition at line 161 of file ha\_m328p.h.

## 10.27.2.25 EXT\_INT\_ENABLE\_PIN\_CHANGE\_INTERRUPT

Definition at line 165 of file ha\_m328p.h.

### 10.27.2.26 EXT\_INT\_ENABLE\_PIN\_CHANGE\_MASK\_PORTB

```
#define EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTB ( pinChangePin \ ) \ \ PCMSK0 \ | = 1 << pinChangePin
```

Definition at line 169 of file ha\_m328p.h.

#### 10.27.2.27 EXT\_INT\_ENABLE\_PIN\_CHANGE\_MASK\_PORTC

```
#define EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTC( pinChangePin \ ) \ \ PCMSK1 \ | = 1 << pinChangePin
```

Definition at line 172 of file ha\_m328p.h.

## 10.27.2.28 EXT\_INT\_ENABLE\_PIN\_CHANGE\_MASK\_PORTD

```
#define EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD( pinChangePin \ ) \ \ PCMSK2 \ | = 1 << pinChangePin
```

Definition at line 175 of file ha\_m328p.h.

#### 10.27.2.29 EXT\_INT\_INTO\_INTERRUPT

#define EXT\_INT\_INTO\_INTERRUPT INTO\_vect

Definition at line 179 of file ha\_m328p.h.

#### 10.27.2.30 EXT\_INT\_INT1\_INTERRUPT

#define EXT\_INT\_INT1\_INTERRUPT INT1\_vect

Definition at line 180 of file ha\_m328p.h.

#### 10.27.2.31 EXT\_INT\_PIN\_CHANGE\_PORTB\_INTERRUPT

#define EXT\_INT\_PIN\_CHANGE\_PORTB\_INTERRUPT PCINTO\_vect

Definition at line 182 of file ha\_m328p.h.

#### 10.27.2.32 EXT\_INT\_PIN\_CHANGE\_PORTC\_INTERRUPT

#define EXT\_INT\_PIN\_CHANGE\_PORTC\_INTERRUPT PCINT1\_vect

Definition at line 183 of file ha\_m328p.h.

#### 10.27.2.33 EXT\_INT\_PIN\_CHANGE\_PORTD\_INTERRUPT

#define EXT\_INT\_PIN\_CHANGE\_PORTD\_INTERRUPT PCINT2\_vect

Definition at line 184 of file ha\_m328p.h.

## 10.27.2.34 EXT\_INT\_SET\_INT0\_SENSE\_CONTROL

Definition at line 155 of file ha\_m328p.h.

## 10.27.2.35 EXT\_INT\_SET\_INT1\_SENSE\_CONTROL

Definition at line 156 of file ha\_m328p.h.

#### 10.27.2.36 MCU ADC DISABLE

```
#define MCU_ADC_DISABLE PRR |= 1 << PRADC
```

Definition at line 286 of file ha\_m328p.h.

#### 10.27.2.37 MCU ADC ENABLE

```
#define MCU_ADC_ENABLE PRR &= \sim (1 << PRADC)
```

Definition at line 285 of file ha\_m328p.h.

## 10.27.2.38 MCU\_BOD\_DISABLE

```
#define MCU_BOD_DISABLE MCUCR \mid= (1<<BODSE) | (1<<BODS); MCUCR &= \sim(1<<BODSE);
```

Definition at line 288 of file ha\_m328p.h.

## 10.27.2.39 MCU\_SELECT\_SLEEP\_MODE

```
#define MCU_SELECT_SLEEP_MODE( sleepMode \ ) \ \ SMCR \ \&= \ 0xF1; \ SMCR \ |= \ sleepMode << \ 1
```

Definition at line 262 of file ha\_m328p.h.

## 10.27.2.40 MCU\_SLEEP\_DISABLE

```
#define MCU_SLEEP_DISABLE SMCR &= \sim (1 << SE)
```

Definition at line 265 of file ha\_m328p.h.

#### 10.27.2.41 MCU\_SLEEP\_ENABLE

```
#define MCU_SLEEP_ENABLE SMCR \mid= 1 << SE
```

Definition at line 264 of file ha\_m328p.h.

#### 10.27.2.42 MCU\_SPI\_DISABLE

```
\#define MCU_SPI_DISABLE PRR \mid= 1 << PRSPI
```

Definition at line 280 of file ha\_m328p.h.

## 10.27.2.43 MCU\_SPI\_ENABLE

```
#define MCU_SPI_ENABLE PRR &= \sim (1 << PRSPI)
```

Definition at line 279 of file ha\_m328p.h.

## 10.27.2.44 MCU\_TIMER0\_DISABLE

```
#define MCU_TIMERO_DISABLE PRR |= 1 << PRTIMO
```

Definition at line 277 of file ha\_m328p.h.

## 10.27.2.45 MCU\_TIMER0\_ENABLE

```
#define MCU_TIMERO_ENABLE PRR &= \sim(1 << PRTIMO)
```

Definition at line 276 of file ha\_m328p.h.

## 10.27.2.46 MCU\_TIMER1\_DISABLE

```
#define MCU_TIMER1_DISABLE PRR \mid= 1 << PRTIM1
```

Definition at line 274 of file ha\_m328p.h.

## 10.27.2.47 MCU\_TIMER1\_ENABLE

```
#define MCU_TIMER1_ENABLE PRR &= \sim (1 << PRTIM1)
```

Definition at line 273 of file ha\_m328p.h.

## 10.27.2.48 MCU\_TIMER2\_DISABLE

```
#define MCU_TIMER2_DISABLE PRR |= 1 << PRTIM2</pre>
```

Definition at line 271 of file ha\_m328p.h.

## 10.27.2.49 MCU\_TIMER2\_ENABLE

```
#define MCU_TIMER2_ENABLE PRR &= \sim (1 << PRTIM2)
```

Definition at line 270 of file ha\_m328p.h.

## 10.27.2.50 MCU\_TWI\_DISABLE

```
#define MCU_TWI_DISABLE PRR |= 1 << PRTWI
```

Definition at line 268 of file ha\_m328p.h.

## 10.27.2.51 MCU\_TWI\_ENABLE

```
#define MCU_TWI_ENABLE PRR &= \sim (1 << PRTWI)
```

Definition at line 267 of file ha\_m328p.h.

## 10.27.2.52 MCU\_USART0\_DISABLE

```
#define MCU_USARTO_DISABLE PRR |= 1 << PRUSARTO</pre>
```

Definition at line 283 of file ha\_m328p.h.

#### 10.27.2.53 MCU\_USART0\_ENABLE

```
#define MCU_USARTO_ENABLE PRR &= \sim(1 << PRUSARTO)
```

Definition at line 282 of file ha\_m328p.h.

#### 10.27.2.54 PUSHBUTTON\_DEBOUNCE\_TIME\_US

```
#define PUSHBUTTON_DEBOUNCE_TIME_US 1000
```

Definition at line 16 of file ha\_m328p.h.

## 10.27.2.55 PUSHBUTTON\_SAMPLING

```
#define PUSHBUTTON_SAMPLING 12
```

Definition at line 17 of file ha\_m328p.h.

#### 10.27.2.56 SERVOMOTOR\_TIMER\_ANGLE\_COUNT

Definition at line 295 of file ha\_m328p.h.

#### 10.27.2.57 SERVOMOTOR\_TIMER\_PULSE\_WIDTH\_COUNT

```
#define SERVOMOTOR_TIMER_PULSE_WIDTH_COUNT( pulseWidth, \\ clockPrescaler ) \ ((F_CPU/1000000UL) * (pulseWidth/ clockPrescaler))
```

Definition at line 293 of file ha\_m328p.h.

#### 10.27.2.58 SPI\_CONTROL\_REGISTER

#define SPI\_CONTROL\_REGISTER SPCR

Definition at line 313 of file ha\_m328p.h.

#### 10.27.2.59 SPI\_DATA\_REGISTER

#define SPI\_DATA\_REGISTER SPDR

Definition at line 314 of file ha\_m328p.h.

#### 10.27.2.60 SPI\_DISABLE

#define SPI\_DISABLE SPCR &=  $\sim$  (1 << SPE)

Definition at line 300 of file ha\_m328p.h.

## 10.27.2.61 SPI\_DISABLE\_TRANSFER\_COMPLETE\_INTERRUPT

#define SPI\_DISABLE\_TRANSFER\_COMPLETE\_INTERRUPT SPCR &=  $\sim$  (1 << SPIE)

Definition at line 318 of file ha\_m328p.h.

## 10.27.2.62 SPI\_ENABLE

#define SPI\_ENABLE SPCR |= 1 << SPE

Definition at line 299 of file ha\_m328p.h.

## 10.27.2.63 SPI\_ENABLE\_TRANSFER\_COMPLETE\_INTERRUPT

#define SPI\_ENABLE\_TRANSFER\_COMPLETE\_INTERRUPT SPCR |= 1 << SPIE

Definition at line 317 of file ha\_m328p.h.

#### 10.27.2.64 SPI\_MASTER\_MODE

```
#define SPI_MASTER_MODE MSTR
```

Definition at line 312 of file ha\_m328p.h.

## 10.27.2.65 SPI\_SELECT\_CLOCK\_PRESCALER

Definition at line 306 of file ha\_m328p.h.

#### 10.27.2.66 SPI\_SELECT\_DATA\_MODE

Definition at line 305 of file ha m328p.h.

#### 10.27.2.67 SPI\_SELECT\_DATA\_ORDER

```
#define SPI_SELECT_DATA_ORDER(  dataOrder \ ) \ \ SPCR \ \&= \ 0xDF; \ \ SPCR \ |= \ dataOrder << \ 5
```

Definition at line 307 of file ha\_m328p.h.

#### 10.27.2.68 SPI\_SELECT\_MASTER\_MODE

```
#define SPI_SELECT_MASTER_MODE SPCR |= 1 << MSTR</pre>
```

Definition at line 301 of file ha\_m328p.h.

### 10.27.2.69 SPI\_SELECT\_SLAVE\_MODE

```
#define SPI_SELECT_SLAVE_MODE SPCR &= \sim (1 << MSTR)
```

Definition at line 302 of file ha\_m328p.h.

#### 10.27.2.70 SPI\_STATUS\_REGISTER

#define SPI\_STATUS\_REGISTER SPSR

Definition at line 315 of file ha\_m328p.h.

#### 10.27.2.71 SPI\_TRANSFER\_COMPLETE

#define SPI\_TRANSFER\_COMPLETE SPIF

Definition at line 310 of file ha\_m328p.h.

## 10.27.2.72 SPI\_TRANSFER\_COMPLETE\_INTERRUPT

#define SPI\_TRANSFER\_COMPLETE\_INTERRUPT SPI\_STC\_vect

Definition at line 321 of file ha\_m328p.h.

## 10.27.2.73 SPI\_WRITE\_COLLISION

#define SPI\_WRITE\_COLLISION WCOL

Definition at line 309 of file ha\_m328p.h.

## 10.27.2.74 TIMERO\_COM\_CHANNEL\_A\_INTERRUPT

#define TIMERO\_COM\_CHANNEL\_A\_INTERRUPT TIMERO\_COMPA\_vect

Definition at line 239 of file ha\_m328p.h.

## 10.27.2.75 TIMERO\_COM\_CHANNEL\_B\_INTERRUPT

#define TIMERO\_COM\_CHANNEL\_B\_INTERRUPT TIMERO\_COMPB\_vect

Definition at line 240 of file ha\_m328p.h.

#### 10.27.2.76 TIMERO\_DISABLE\_COM\_CHANNEL\_A\_INTERRUPT

#define TIMERO\_DISABLE\_COM\_CHANNEL\_A\_INTERRUPT TIMSKO &=  $\sim$  (1 << OCIEOA)

Definition at line 210 of file ha\_m328p.h.

#### 10.27.2.77 TIMERO\_DISABLE\_COM\_CHANNEL\_B\_INTERRUPT

#define TIMERO\_DISABLE\_COM\_CHANNEL\_B\_INTERRUPT TIMSKO &=  $\sim$ (1 << OCIEOB)

Definition at line 213 of file ha\_m328p.h.

#### 10.27.2.78 TIMERO\_DISABLE\_OVERFLOW\_INTERRUPT

#define TIMERO\_DISABLE\_OVERFLOW\_INTERRUPT TIMSKO &=  $\sim$  (1 << TOIE0)

Definition at line 216 of file ha\_m328p.h.

## 10.27.2.79 TIMERO\_ENABLE\_COM\_CHANNEL\_A\_INTERRUPT

#define TIMERO\_ENABLE\_COM\_CHANNEL\_A\_INTERRUPT TIMSKO |= 1 << OCIEOA

Definition at line 209 of file ha\_m328p.h.

## 10.27.2.80 TIMERO\_ENABLE\_COM\_CHANNEL\_B\_INTERRUPT

#define TIMERO\_ENABLE\_COM\_CHANNEL\_B\_INTERRUPT TIMSKO |= 1 << OCIEOB

Definition at line 212 of file ha\_m328p.h.

## 10.27.2.81 TIMERO\_ENABLE\_OVERFLOW\_INTERRUPT

#define TIMERO\_ENABLE\_OVERFLOW\_INTERRUPT TIMSKO |= 1 << TOIE0

Definition at line 215 of file ha m328p.h.

#### 10.27.2.82 TIMERO\_OVERFLOW\_INTERRUPT

```
#define TIMERO_OVERFLOW_INTERRUPT TIMERO_OVF_vect
```

Definition at line 241 of file ha m328p.h.

#### 10.27.2.83 TIMERO\_SELECT\_CLOCK\_SOURCE

Definition at line 192 of file ha\_m328p.h.

## 10.27.2.84 TIMERO\_SELECT\_COM\_CHANNEL\_A

Definition at line 200 of file ha m328p.h.

#### 10.27.2.85 TIMERO\_SELECT\_COM\_CHANNEL\_B

Definition at line 201 of file ha\_m328p.h.

#### 10.27.2.86 TIMERO\_SELECT\_OPERATION\_MODE

Definition at line 196 of file ha\_m328p.h.

## 10.27.2.87 TIMER0\_STOP

```
#define TIMERO_STOP TCCR0B &= 0xF8
```

Definition at line 188 of file ha\_m328p.h.

#### 10.27.2.88 TIMER1\_COM\_CHANNEL\_A\_INTERRUPT

#define TIMER1\_COM\_CHANNEL\_A\_INTERRUPT TIMER1\_COMPA\_vect

Definition at line 243 of file ha\_m328p.h.

#### 10.27.2.89 TIMER1\_COM\_CHANNEL\_B\_INTERRUPT

#define TIMER1\_COM\_CHANNEL\_B\_INTERRUPT TIMER1\_COMPB\_vect

Definition at line 244 of file ha\_m328p.h.

## 10.27.2.90 TIMER1\_DISABLE\_COM\_CHANNEL\_A\_INTERRUPT

#define TIMER1\_DISABLE\_COM\_CHANNEL\_A\_INTERRUPT TIMSK1 &=  $\sim$  (1 << OCIE1A)

Definition at line 219 of file ha\_m328p.h.

## 10.27.2.91 TIMER1\_DISABLE\_COM\_CHANNEL\_B\_INTERRUPT

#define TIMER1\_DISABLE\_COM\_CHANNEL\_B\_INTERRUPT TIMSK1 &=  $\sim$  (1 << OCIE1B)

Definition at line 222 of file ha\_m328p.h.

## 10.27.2.92 TIMER1\_DISABLE\_INPUT\_CAPTURE\_INTERRUPT

#define TIMER1\_DISABLE\_INPUT\_CAPTURE\_INTERRUPT TIMSK1 &=  $\sim$  (1 << ICIE1)

Definition at line 228 of file ha\_m328p.h.

## 10.27.2.93 TIMER1\_DISABLE\_OVERFLOW\_INTERRUPT

#define TIMER1\_DISABLE\_OVERFLOW\_INTERRUPT TIMSK1 &=  $\sim$ (1 << TOIE1)

Definition at line 225 of file ha\_m328p.h.

#### 10.27.2.94 TIMER1\_ENABLE\_COM\_CHANNEL\_A\_INTERRUPT

#define TIMER1\_ENABLE\_COM\_CHANNEL\_A\_INTERRUPT TIMSK1 |= 1 << OCIE1A

Definition at line 218 of file ha\_m328p.h.

#### 10.27.2.95 TIMER1\_ENABLE\_COM\_CHANNEL\_B\_INTERRUPT

#define TIMER1\_ENABLE\_COM\_CHANNEL\_B\_INTERRUPT TIMSK1 |= 1 << OCIE1B

Definition at line 221 of file ha\_m328p.h.

#### 10.27.2.96 TIMER1\_ENABLE\_INPUT\_CAPTURE\_INTERRUPT

#define TIMER1\_ENABLE\_INPUT\_CAPTURE\_INTERRUPT TIMSK1 |= 1 << ICIE1

Definition at line 227 of file ha\_m328p.h.

## 10.27.2.97 TIMER1\_ENABLE\_OVERFLOW\_INTERRUPT

#define TIMER1\_ENABLE\_OVERFLOW\_INTERRUPT TIMSK1  $\mid$ = 1 << TOIE1

Definition at line 224 of file ha\_m328p.h.

## 10.27.2.98 TIMER1\_INPUT\_CAPTURE\_INTERRUPT

#define TIMER1\_INPUT\_CAPTURE\_INTERRUPT TIMER1\_CAPT\_vect

Definition at line 246 of file ha\_m328p.h.

## 10.27.2.99 TIMER1\_OVERFLOW\_INTERRUPT

#define TIMER1\_OVERFLOW\_INTERRUPT TIMER1\_OVF\_vect

Definition at line 245 of file ha\_m328p.h.

#### 10.27.2.100 TIMER1\_SELECT\_CLOCK\_SOURCE

Definition at line 193 of file ha\_m328p.h.

## 10.27.2.101 TIMER1\_SELECT\_COM\_CHANNEL\_A

Definition at line 203 of file ha\_m328p.h.

## 10.27.2.102 TIMER1\_SELECT\_COM\_CHANNEL\_B

```
\label{eq:compareOutputMode} $$ $$ $$ define TIMER1_SELECT_COM_CHANNEL_B($$ $$ $$ compareOutputMode ) TCCR1A \&= 0xCF; TCCR1A |= compareOutputMode << 4$
```

Definition at line 204 of file ha\_m328p.h.

#### 10.27.2.103 TIMER1\_SELECT\_OPERATION\_MODE

Definition at line 197 of file ha\_m328p.h.

#### 10.27.2.104 TIMER1\_STOP

```
#define TIMER1_STOP TCCR1B &= 0xF8
```

Definition at line 189 of file ha\_m328p.h.

## 10.27.2.105 TIMER2\_COM\_CHANNEL\_A\_INTERRUPT

```
#define TIMER2_COM_CHANNEL_A_INTERRUPT TIMER2_COMPA_vect
```

Definition at line 248 of file ha\_m328p.h.

#### 10.27.2.106 TIMER2\_COM\_CHANNEL\_B\_INTERRUPT

#define TIMER2\_COM\_CHANNEL\_B\_INTERRUPT TIMER2\_COMPB\_vect

Definition at line 249 of file ha\_m328p.h.

#### 10.27.2.107 TIMER2\_DISABLE\_COM\_CHANNEL\_A\_INTERRUPT

#define TIMER2\_DISABLE\_COM\_CHANNEL\_A\_INTERRUPT TIMSK2 &=  $\sim$ (1 << OCIE2A)

Definition at line 231 of file ha\_m328p.h.

#### 10.27.2.108 TIMER2\_DISABLE\_COM\_CHANNEL\_B\_INTERRUPT

#define TIMER2\_DISABLE\_COM\_CHANNEL\_B\_INTERRUPT TIMSK2 &=  $\sim$ (1 << OCIE2B)

Definition at line 234 of file ha\_m328p.h.

## 10.27.2.109 TIMER2\_DISABLE\_OVERFLOW\_INTERRUPT

#define TIMER2\_DISABLE\_OVERFLOW\_INTERRUPT TIMSK2 &=  $\sim$  (1 << TOIE2)

Definition at line 237 of file ha\_m328p.h.

## 10.27.2.110 TIMER2\_ENABLE\_COM\_CHANNEL\_A\_INTERRUPT

#define TIMER2\_ENABLE\_COM\_CHANNEL\_A\_INTERRUPT TIMSK2 |=~1~<<~OCIE2A

Definition at line 230 of file ha\_m328p.h.

## 10.27.2.111 TIMER2\_ENABLE\_COM\_CHANNEL\_B\_INTERRUPT

#define TIMER2\_ENABLE\_COM\_CHANNEL\_B\_INTERRUPT TIMSK2  $\mid$ = 1 << OCIE2B

Definition at line 233 of file ha m328p.h.

#### 10.27.2.112 TIMER2\_ENABLE\_OVERFLOW\_INTERRUPT

```
#define TIMER2_ENABLE_OVERFLOW_INTERRUPT TIMSK2 |= 1 << TOIE2
```

Definition at line 236 of file ha\_m328p.h.

#### 10.27.2.113 TIMER2\_OVERFLOW\_INTERRUPT

```
#define TIMER2_OVERFLOW_INTERRUPT TIMER2_OVF_vect
```

Definition at line 250 of file ha\_m328p.h.

#### 10.27.2.114 TIMER2\_SELECT\_CLOCK\_SOURCE

Definition at line 194 of file ha\_m328p.h.

## 10.27.2.115 TIMER2\_SELECT\_COM\_CHANNEL\_A

Definition at line 206 of file ha\_m328p.h.

## 10.27.2.116 TIMER2\_SELECT\_COM\_CHANNEL\_B

Definition at line 207 of file ha\_m328p.h.

#### 10.27.2.117 TIMER2\_SELECT\_OPERATION\_MODE

Definition at line 198 of file ha\_m328p.h.

## 10.27.2.118 TIMER2\_STOP

#define TIMER2\_STOP TCCR2B &= 0xF8

Definition at line 190 of file ha\_m328p.h.

#### 10.27.2.119 USARTO\_CONTROL\_STATUS\_REGISTER

#define USARTO\_CONTROL\_STATUS\_REGISTER UCSROA

Definition at line 91 of file ha\_m328p.h.

## 10.27.2.120 USARTO\_DATA\_OVERRUN

#define USARTO\_DATA\_OVERRUN DORO

Definition at line 99 of file ha\_m328p.h.

## 10.27.2.121 USARTO\_DATA\_REGISTER

#define USARTO\_DATA\_REGISTER UDRO

Definition at line 92 of file ha\_m328p.h.

## 10.27.2.122 USARTO\_DATA\_REGISTER\_EMPTY\_INTERRUPT

#define USARTO\_DATA\_REGISTER\_EMPTY\_INTERRUPT USART\_UDRE\_vect

Definition at line 119 of file ha\_m328p.h.

## 10.27.2.123 USARTO\_DISABLE\_DATA\_REGISTER\_EMPTY\_INTERRUPT

#define USARTO\_DISABLE\_DATA\_REGISTER\_EMPTY\_INTERRUPT UCSROB &=  $\sim$  (1 << UDRIEO)

Definition at line 105 of file ha\_m328p.h.

#### 10.27.2.124 USARTO\_DISABLE\_DOUBLE\_SPEED\_MODE [1/2]

#define USARTO\_DISABLE\_DOUBLE\_SPEED\_MODE

Definition at line 40 of file ha\_m328p.h.

#### 10.27.2.125 USARTO\_DISABLE\_DOUBLE\_SPEED\_MODE [2/2]

#define USARTO\_DISABLE\_DOUBLE\_SPEED\_MODE UCSROA &=  $\sim$  (1 << U2X0)

Definition at line 40 of file ha\_m328p.h.

#### 10.27.2.126 USARTO\_DISABLE\_PARITY\_MODE

#define USARTO\_DISABLE\_PARITY\_MODE UCSROC &=  $\sim$ ((1 << UPM01) | (1 << UPM00))

Definition at line 45 of file ha\_m328p.h.

## 10.27.2.127 USARTO\_DISABLE\_RECEIVE\_COMPLETE\_INTERRUPT

#define USARTO\_DISABLE\_RECEIVE\_COMPLETE\_INTERRUPT UCSROB &=  $\sim$  (1 << RXCIEO)

Definition at line 108 of file ha\_m328p.h.

## 10.27.2.128 USARTO\_DISABLE\_RECEIVER

#define USARTO\_DISABLE\_RECEIVER UCSROB &=  $\sim$  (1 << RXENO)

Definition at line 87 of file ha\_m328p.h.

## 10.27.2.129 USARTO\_DISABLE\_TRANSMIT\_COMPLETE\_INTERRUPT

#define USARTO\_DISABLE\_TRANSMIT\_COMPLETE\_INTERRUPT UCSR0B &=  $\sim$  (1 << TXCIE0)

Definition at line 111 of file ha m328p.h.

#### 10.27.2.130 USARTO\_DISABLE\_TRANSMITTER

#define USARTO\_DISABLE\_TRANSMITTER UCSROB &=  $\sim$  (1 << TXENO)

Definition at line 82 of file ha\_m328p.h.

#### 10.27.2.131 USARTO\_ENABLE\_ASYNC\_TRANSMISSION\_MODE

#define USARTO\_ENABLE\_ASYNC\_TRANSMISSION\_MODE UCSROC &=  $\sim$ ((1 << UMSEL01) | (1 << UMSEL00))

Definition at line 26 of file ha\_m328p.h.

#### 10.27.2.132 USARTO\_ENABLE\_DATA\_REGISTER\_EMPTY\_INTERRUPT

#define USARTO\_ENABLE\_DATA\_REGISTER\_EMPTY\_INTERRUPT UCSROB |= 1 << UDRIE0

Definition at line 104 of file ha\_m328p.h.

## 10.27.2.133 USARTO\_ENABLE\_DOUBLE\_SPEED\_MODE

#define USARTO\_ENABLE\_DOUBLE\_SPEED\_MODE

Definition at line 31 of file ha\_m328p.h.

## 10.27.2.134 USARTO\_ENABLE\_EVEN\_PARITY\_MODE

#define USARTO\_ENABLE\_EVEN\_PARITY\_MODE UCSROC = (1 << UPM01) | (UCSROC &  $\sim$ (1 << UPM00))

Definition at line 43 of file ha\_m328p.h.

## 10.27.2.135 USARTO\_ENABLE\_MASTER\_SPI\_MODE

#define USARTO\_ENABLE\_MASTER\_SPI\_MODE UCSROC |= (1 << UMSELO1) | (1 << UMSELO0)

Definition at line 28 of file ha\_m328p.h.

#### 10.27.2.136 USARTO\_ENABLE\_ODD\_PARITY\_MODE

#define USARTO\_ENABLE\_ODD\_PARITY\_MODE UCSROC |= ((1 << UPM01) | (1 << UPM00))

Definition at line 44 of file ha\_m328p.h.

#### 10.27.2.137 USARTO\_ENABLE\_RECEIVE\_COMPLETE\_INTERRUPT

#define USARTO\_ENABLE\_RECEIVE\_COMPLETE\_INTERRUPT UCSR0B |= 1 << RXCIE0

Definition at line 107 of file ha\_m328p.h.

#### 10.27.2.138 USARTO\_ENABLE\_RECEIVER

#define USARTO\_ENABLE\_RECEIVER UCSROB |= 1 << RXENO

Definition at line 86 of file ha m328p.h.

#### 10.27.2.139 USARTO\_ENABLE\_SYNC\_TRANSMISSION\_MODE

#define USARTO\_ENABLE\_SYNC\_TRANSMISSION\_MODE UCSROC = (UCSROC &  $\sim$ (1 << UMSEL01)) | (1 << UM  $\leftrightarrow$  SEL00)

Definition at line 27 of file ha\_m328p.h.

## 10.27.2.140 USARTO\_ENABLE\_TRANSMIT\_COMPLETE\_INTERRUPT

#define USARTO\_ENABLE\_TRANSMIT\_COMPLETE\_INTERRUPT UCSROB |= 1 << TXCIE0

Definition at line 110 of file ha\_m328p.h.

#### 10.27.2.141 USARTO ENABLE TRANSMITTER

#define USARTO\_ENABLE\_TRANSMITTER UCSROB |= 1 << TXENO

Definition at line 81 of file ha\_m328p.h.

## 10.27.2.142 USARTO\_FRAME\_ERROR

```
#define USARTO_FRAME_ERROR FE0
```

Definition at line 97 of file ha\_m328p.h.

#### 10.27.2.143 USARTO\_PARITY\_ERROR

```
#define USARTO_PARITY_ERROR UPE0
```

Definition at line 101 of file ha\_m328p.h.

## 10.27.2.144 USARTO\_RECEIVE\_COMPLETE\_INTERRUPT

```
#define USARTO_RECEIVE_COMPLETE_INTERRUPT USART_RX_vect
```

Definition at line 115 of file ha\_m328p.h.

## 10.27.2.145 USARTO\_SET\_5BIT\_FRAME\_SIZE

```
#define USARTO_SET_5BIT_FRAME_SIZE
```

### Value:

```
do {
    UCSROC &= ~((1 « UCSZ01) | (1 « UCSZ00)); \
    UCSROB &= ~(1 « UCSZ02); \
} while (0)
```

Definition at line 74 of file ha\_m328p.h.

#### 10.27.2.146 USARTO\_SET\_6BIT\_FRAME\_SIZE

```
#define USART0_SET_6BIT_FRAME_SIZE
```

#### Value:

```
do { \
    UCSROC = (UCSROC & ~(1 « UCSZO1)) | (1 « UCSZO0); \
    UCSROB &= ~(1 « UCSZO2); \
} while (0)
```

Definition at line 69 of file ha\_m328p.h.

#### 10.27.2.147 USARTO\_SET\_7BIT\_FRAME\_SIZE

```
#define USART0_SET_7BIT_FRAME_SIZE
```

#### Value:

```
do { \
    UCSROC = (1 « UCSZO1) | (UCSROC & ~(1 « UCSZO0)); \
    UCSROB &= ~(1 « UCSZO2); \
} while (0)
```

Definition at line 64 of file ha m328p.h.

## 10.27.2.148 USARTO\_SET\_8BIT\_FRAME\_SIZE

```
#define USARTO_SET_8BIT_FRAME_SIZE
```

#### Value:

```
do {
    UCSROC |= ((1 « UCSZ01) | (1 « UCSZ00)); \
    UCSROB &= ~(1 « UCSZ02); \
} while (0)
```

Definition at line 58 of file ha\_m328p.h.

#### 10.27.2.149 USARTO\_SET\_9BIT\_FRAME\_SIZE

```
#define USARTO_SET_9BIT_FRAME_SIZE
```

#### Value:

```
do { \
    UCSROC |= ((1 « UCSZ01) | (1 « UCSZ00)); \
    UCSROB |= (1 « UCSZ02); \
} while (0)
```

Definition at line 52 of file ha\_m328p.h.

#### 10.27.2.150 USARTO\_SET\_BAUDRATE\_HIGH\_REGISTER

```
#define USARTO_SET_BAUDRATE_HIGH_REGISTER UBRROH = UBRRH_VALUE
```

Definition at line 23 of file ha\_m328p.h.

### 10.27.2.151 USARTO\_SET\_BAUDRATE\_LOW\_REGISTER

```
#define USARTO_SET_BAUDRATE_LOW_REGISTER UBRROL = UBRRL_VALUE
```

Definition at line 24 of file ha\_m328p.h.

#### 10.27.2.152 USARTO\_SET\_ONE\_STOP\_BIT

```
#define USARTO_SET_ONE_STOP_BIT UCSROC &= \sim (1 << USBSO)
```

Definition at line 48 of file ha m328p.h.

## 10.27.2.153 USARTO\_SET\_TWO\_STOP\_BITS

```
#define USARTO_SET_TWO_STOP_BITS UCSROC |= (1 << USBSO)</pre>
```

Definition at line 49 of file ha\_m328p.h.

#### 10.27.2.154 USARTO\_TRANSMIT\_COMPLETE\_INTERRUPT

```
#define USARTO_TRANSMIT_COMPLETE_INTERRUPT USART_TX_vect
```

Definition at line 117 of file ha\_m328p.h.

## 10.27.2.155 WATCHDOG\_SELECT\_TIMEOUT

```
#define WATCHDOG_SELECT_TIMEOUT( timeOut \ ) \ \ \mbox{WDTCSR} \ \ | = \ (1 << \mbox{WDCE}) \ \ | \ (1 << \mbox{WDE}); \ \mbox{WDTCSR} = \ (0 << \mbox{WDIE}) \ \ | \ (0 << \mbox{WDE}) \ \ | \ \mbox{time} \leftrightarrow \mbox{Out}; Out;
```

Definition at line 254 of file ha\_m328p.h.

## 10.27.2.156 WATCHDOG\_START

Definition at line 255 of file ha\_m328p.h.

## 10.27.2.157 WATCHDOG\_STOP

```
#define WATCHDOG_STOP MCUSR &= \sim (1<<WDRF); WDTCSR |= (1<<WDCE) | (1<<WDE); WDTCSR = 0x00;
```

Definition at line 256 of file ha\_m328p.h.

10.28 ha\_m328p.h 253

#### 10.27.2.158 WATCHDOG\_TIMEOUT\_INTERRUPT

```
#define WATCHDOG_TIMEOUT_INTERRUPT WDT_vect
```

Definition at line 257 of file ha m328p.h.

## 10.28 ha\_m328p.h

```
00001
00008 #ifndef HAM329P_H
00009 #define HAM329P_H
00010
00011 #ifndef HABASE_H
00012
          #error "don't use this file directly! Please include only ha_base.h!"
00013 #endif
00014
00015 // PushButton defines
00016 #define PUSHBUTTON_DEBOUNCE_TIME_US 1000 // microseconds to wait for next check
00017 #define PUSHBUTTON_SAMPLING
                                                          // number of times a push button must be pressed
00018
00019
00020 // USART defines
00021 #include <util/setbaud.h>
00023 #define
                 USARTO_SET_BAUDRATE_HIGH_REGISTER
                                                              UBRROH = UBRRH_VALUE
00024 #define
                USARTO_SET_BAUDRATE_LOW_REGISTER
                                                              UBRROL = UBRRL VALUE
00025
00026 #define
                 USARTO_ENABLE_ASYNC_TRANSMISSION_MODE
                                                                   UCSROC &= \sim ((1 \ll UMSEL01) | (1 \ll UMSEL00))
                 USARTO_ENABLE_SYNC_TRANSMISSION_MODE
                                                                   UCSROC = (UCSROC & \sim (1 « UMSELO1)) | (1 « UMSELO0)
00027 #define
00028 #define
                 USARTO_ENABLE_MASTER_SPI_MODE
                                                                   UCSROC |= (1 « UMSELO1) | (1 « UMSELO0)
00029
00030
00031 #define USARTO_ENABLE_DOUBLE_SPEED_MODE 00032 #define USARTO DISABLE DOUBLE SPEED MODE
00033
        #undef USARTO_ENABLE_DOUBLE_SPEED_MODE
00035
00036
           #define USARTO_ENABLE_DOUBLE_SPEED_MODE UCSROA |= (1 « U2X0)
00037
           #warning "double speed operation activated"
00038 #else
00039 #undef USARTO_DISABLE_DOUBLE_SPEED_MODE
00040 #define USARTO_DISABLE_DOUBLE_SPEED_MODE UCSROA &= ~(1 « U2X0)
00041 #endif
00042
                 USARTO_ENABLE_EVEN_PARITY_MODE
USARTO_ENABLE_ODD_PARITY_MODE
                                                         UCSROC = (1 « UPM01) | (UCSROC & ~(1 « UPM00))

UCSROC |= ((1 « UPM01) | (1 « UPM00))

UCSROC &= ~((1 « UPM01) | (1 « UPM00))
00043 #define
00044 #define
00045 #define USARTO_DISABLE_PARITY_MODE
00046
00047
00048 #define USARTO_SET_ONE_STOP_BIT UCSROC &= ~(1 « USBS0) 00049 #define USARTO_SET_TWO_STOP_BITS UCSROC |= (1 « USBS0)
00050
00051
00052 #define
                  USARTO_SET_9BIT_FRAME_SIZE
      do { \
00053
              UCSROC |= ((1 « UCSZO1) | (1 « UCSZOO)); \
UCSROB |= (1 « UCSZO2); \
00054
00055
00056
         } while (0)
00057
00058 #define
                 USARTO_SET_8BIT_FRAME_SIZE
        do { \
            UCSROC |= ((1 « UCSZO1) | (1 « UCSZO0)); \
UCSROB &= ~(1 « UCSZO2); \
00060
00061
00062
         } while (0)
00063
00064 #define
                 USARTO_SET_7BIT_FRAME_SIZE \
         do { \
00065
            UCSROC = (1 « UCSZ01) | (UCSROC & ~(1 « UCSZ00)); \
00066
00067
               UCSR0B &= ~(1 « UCSZ02); \
00068
          } while (0)
00069 #define USARTO_SET_6BIT_FRAME_SIZE \ 00070 do { \
            UCSROC = (UCSROC & ~(1 « UCSZO1)) | (1 « UCSZO0); \
UCSROB &= ~(1 « UCSZO2); \
00072
00073
          } while (0)
00074 #define USARTO_SET_5BIT_FRAME_SIZE \
00075 do { \
               UCSROC &= ~((1 « UCSZ01) | (1 « UCSZ00)); \
00076
00077
              UCSR0B &= ~(1 « UCSZ02); \
          } while (0)
```

```
00079
00080
                                            UCSROB |= 1 « TXENO
00081 #define
               USARTO_ENABLE_TRANSMITTER
                                            UCSROB &= ~(1 « TXENO)
00082 #define
              USARTO_DISABLE_TRANSMITTER
00083
00084
00085
00086 #define
              USARTO_ENABLE_RECEIVER
                                            UCSROB |= 1 « RXENO
                                            UCSROB &= ~(1 « RXENO)
00087 #define
              USARTO_DISABLE_RECEIVER
00088
00089
00090
00091 #define
               USARTO_CONTROL_STATUS_REGISTER UCSROA
00092 #define
               USARTO_DATA_REGISTER
00093
00094
00095
00096
00097 #define
              USARTO FRAME ERROR
                                            FE0
00098
00099 #define
                                            DOR 0
              USARTO DATA OVERRUN
00100
00101 #define
              USARTO PARITY ERROR
                                            UPEO
00102
00103
              00104 #define
00105 #define
00106
               USARTO_ENABLE_RECEIVE_COMPLETE_INTERRUPT
00107 #define
                                                      UCSROB I= 1 « RXCIEO
00108 #define
              USARTO DISABLE RECEIVE COMPLETE INTERRUPT UCSROB &= ~(1 « RXCIEO)
00109
00110 #define
               USARTO_ENABLE_TRANSMIT_COMPLETE_INTERRUPT
                                                        UCSROB |=
                                                                   1 « TXCIE0
00111 #define
               00112
00113
00114
00115 #define
              USARTO RECEIVE COMPLETE INTERRUPT
                                                 USART RX vect
00116
00117 #define
              USARTO_TRANSMIT_COMPLETE_INTERRUPT
                                                  USART TX vect
00118
00119 #define
              00120
00121
00122 // ADC defines
00123
00124 #define
              ADC_SELECT_REF_VOLTAGE(refVoltage)
                                                     ADMUX &= 0x3F; ADMUX |= refVoltage « 6
00125
              ADC_ADJUST_RESULT_LEFT
                                              ADMUX |= 1 « ADLAR
00126 #define
00127 #define
                                              ADMUX &= \sim (1 \ll ADLAR)
             ADC ADJUST RESULT RIGHT
00128
              ADC_SELECT_ANALOG_INPUT(pinNumber) ADMUX &= 0xF0; ADMUX |= pinNumber
00129 #define
00130 #define
              ADC_DISABLE_DIGITAL_INPUT_REGISTER(pinNumber)
                                                               DIDRO &= 0xC0; DIDRO |= pinNumber
00131
00132
00133 #define
              ADC ENABLE
                                  ADCSRA |= 1 « ADEN
                                   ADCSRA &= ~(1 « ADEN)
00134 #define
              ADC DISABLE
00135
                                            ADCSRA |= 1 « ADSC
00136 #define
              ADC_START_CONVERSION
00137 #define
              ADC_STOP_CONVERSION
                                          ADCSRA &= ~(1 « ADSC)
00138
00139 #define
              ADC ENABLE AUTOTRIGGER
                                            ADCSRA I= 1 « ADATE
00140 #define
              ADC DISABLE AUTOTRIGGER
                                           ADCSRA &= ~(1 « ADATE)
00141
              ADC_ENABLE_CONVERSION_COMPLETE_INTERRUPT ADCSRA |= 1 « ADIE ADC_DISABLE_CONVERSION_COMPLETE_INTERRUPT ADCSRA &= ~(1 « ADIE)
00142 #define
00143 #define
00144
00145 #define
              ADC SELECT CLOCK PRESCALER(clockPrescaler)
                                                             ADCSRA &= 0xF8; ADCSRA |= clockPrescaler
00146
00147
00148 #define
              ADC_SELECT_AUTO_TRIGGER_SOURCE(triggerSource)
                                                               ADCSRB &= 0xF8; ADCSRB |=
      triggerSource
00149
00150
00151 #define ADC CONVERSION COMPLETE INTERRUPT ADC vect
00152
00153 // Externally Triggered Interrupts defines
00154
00155 #define EXT_INT_SET_INTO_SENSE_CONTROL(senseControl) EICRA &= 0xFC; EICRA |= senseControl 00156 #define EXT_INT_SET_INT1_SENSE_CONTROL(senseControl) EICRA &= 0xF3; EICRA |= senseControl
00157
00158 #define EXT INT ENABLE INTO
                                EIMSK |= 1 « INTO
00159 #define EXT_INT_DISABLE_INTO
                                  EIMSK &= \sim (1 \ll INT0)
00160
00163
00164
```

10.28 ha\_m328p.h 255

```
PCICR |= 1 « pinChangePort
00165 #define EXT_INT_ENABLE_PIN_CHANGE_INTERRUPT(pinChangePort)
                                                                     PCICR &= ~(1 « pinChangePort)
00166 #define EXT INT DISABLE PIN CHANGE INTERRUPT(pinChangePort)
00167
00168
00169 #define EXT_INT_ENABLE_PIN_CHANGE_MASK PORTB(pinChangePin)
                                                                      PCMSK0 |= 1 « pinChangePin
00170 #define EXT_INT_DISABLE_PIN_CHANGE_MASK_PORTB(pinChangePin)
                                                                      PCMSKO &= ~(1 « pinChangePin)
00172 #define EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTC(pinChangePin)
                                                                      PCMSK1 |= 1 « pinChangePin
00173 #define EXT_INT_DISABLE_PIN_CHANGE_MASK_PORTC(pinChangePin)
                                                                      PCMSK1 &= ~(1 « pinChangePin)
00174
00175 #define EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD(pinChangePin)
                                                                      PCMSK2 |= 1 « pinChangePin
                                                                      PCMSK2 &= ~(1 « pinChangePin)
00176 #define EXT_INT_DISABLE_PIN_CHANGE_MASK_PORTD(pinChangePin)
00177
00178
00179 #define EXT_INT_INTO_INTERRUPT
                                         INTO_vect
00180 #define EXT_INT_INT1_INTERRUPT INT1_vect
00181
00182 #define EXT INT PIN CHANGE PORTB INTERRUPT
                                                     PCINTO vect
00183 #define EXT_INT_PIN_CHANGE_PORTC_INTERRUPT
                                                     PCINT1_vect
00184 #define EXT_INT_PIN_CHANGE_PORTD_INTERRUPT
                                                     PCINT2 vect
00185
00186 // Timers/Counters defines
00187
00188 #define TIMERO_STOP TCCR0B &= 0xF8
00189 #define TIMER1_STOP TCCR1B &= 0xF8
00190 #define TIMER2 STOP TCCR2B &= 0xF8
00191
00192 #define TIMERO_SELECT_CLOCK_SOURCE(clockSource) TCCR0B &= 0xF8; TCCR0B |= clockSource
00193 #define TIMER1_SELECT_CLOCK_SOURCE(clockSource) TCCR1B &= 0xF8; TCCR1B |= clockSource
00194 #define TIMER2 SELECT CLOCK SOURCE(clockSource) TCCR2B &= 0xF8: TCCR2B |= clockSource
00195
00196 #define TIMERO_SELECT_OPERATION_MODE(operationMode) TCCROA &= 0xFC; TCCROA |= (operationMode & 3);
       TCCR0B &= 0xF7; TCCR0B |= (operationMode & 12) «
00197 #define TIMER1_SELECT_OPERATION_MODE(operationMode) TCCR1A &= 0xFC; TCCR1A |= (operationMode & 3);
       TCCR1B &= 0xE7; TCCR1B |= (operationMode & 12) « 1
00198 #define TIMER2 SELECT_OPERATION_MODE(operationMode) TCCR2A &= 0xFC; TCCR2A |= (operationMode & 3);
       TCCR2B &= 0xF7; TCCR2B |= (operationMode & 12) « 1
00200 #define TIMERO_SELECT_COM_CHANNEL_A(compareOutputMode) TCCR0A &= 0x3F; TCCR0A |= compareOutputMode « 6
00201 #define TIMERO_SELECT_COM_CHANNEL_B(compareOutputMode) TCCR0A &= 0xCF; TCCR0A |= compareOutputMode « 4
00202
00203 #define TIMER1_SELECT_COM_CHANNEL_A(compareOutputMode) TCCR1A &= 0x3F; TCCR1A |= compareOutputMode « 6
00204 #define TIMER1_SELECT_COM_CHANNEL_B(compareOutputMode) TCCR1A &= 0xCF; TCCR1A |= compareOutputMode « 4
00205
00206 #define TIMER2_SELECT_COM_CHANNEL_A(compareOutputMode) TCCR2A &= 0x3F; TCCR2A |= compareOutputMode « 6
00207 #define TIMER2_SELECT_COM_CHANNEL_B(compareOutputMode) TCCR2A &= 0xCF; TCCR2A |= compareOutputMode « 4
00208
00209 #define TIMERO_ENABLE_COM_CHANNEL_A_INTERRUPT TIMSKO |= 1 « OCIEOA
00210 #define TIMERO DISABLE COM CHANNEL A INTERRUPT TIMSKO &= ~(1 « OCIEOA)
00211
00212 #define TIMERO_ENABLE_COM_CHANNEL_B_INTERRUPT TIMSKO |= 1 « OCIEOB
00213 #define TIMERO_DISABLE_COM_CHANNEL_B_INTERRUPT TIMSKO &= ~(1 « OCIEOB)
00214
00215 #define TIMERO ENABLE OVERFLOW INTERRUPT TIMSKO |= 1 « TOIEO
00216 #define TIMERO_DISABLE_OVERFLOW_INTERRUPT TIMSKO &= ~(1 « TOIE0)
00217
00218 #define TIMER1_ENABLE_COM_CHANNEL_A_INTERRUPT TIMSK1 |= 1 « OCIE1A
00219 #define TIMER1_DISABLE_COM_CHANNEL_A_INTERRUPT TIMSK1 &= ~(1 « OCIE1A)
00220
00221 #define TIMER1_ENABLE_COM_CHANNEL_B_INTERRUPT TIMSK1 |= 1 « OCIE1B
00222 #define TIMER1_DISABLE_COM_CHANNEL_B_INTERRUPT TIMSK1 &= ~(1 « OCIE1B)
00223
00224 #define TIMER1_ENABLE_OVERFLOW_INTERRUPT TIMSK1 |= 1 « TOIE1
00225 #define TIMER1_DISABLE_OVERFLOW_INTERRUPT TIMSK1 &= ~(1 « TOIE1)
00226
00227 #define TIMER1_ENABLE_INPUT_CAPTURE_INTERRUPT TIMSK1 |= 1 « ICIE1
00228 #define TIMER1 DISABLE INPUT CAPTURE INTERRUPT TIMSK1 &= ~(1 « ICIE1)
00229
00230 #define TIMER2_ENABLE_COM_CHANNEL_A_INTERRUPT TIMSK2 |= 1 « OCIE2A
00231 #define TIMER2 DISABLE COM CHANNEL A INTERRUPT TIMSK2 &= ~(1 « OCIE2A)
00232
00233 #define TIMER2_ENABLE_COM_CHANNEL_B_INTERRUPT TIMSK2 |= 1 « OCIE2B
00234 #define TIMER2_DISABLE_COM_CHANNEL_B_INTERRUPT TIMSK2 &= ~(1 « OCIE2B)
00235
00236 #define TIMER2_ENABLE_OVERFLOW_INTERRUPT TIMSK2 |= 1 « TOIE2
00237 #define TIMER2_DISABLE_OVERFLOW_INTERRUPT TIMSK2 &= ~(1 « TOIE2)
00238
                TIMERO_COM_CHANNEL_A_INTERRUPT TIMERO_COMPA_vect
TIMERO_COM_CHANNEL_B_INTERRUPT TIMERO_COMPB_vect
00239 #define
00240 #define
               TIMERO OVERFLOW INTERRUPT TIMERO OVE vect
00241 #define
00242
                TIMER1_COM_CHANNEL_A_INTERRUPT TIMER1_COMPA_vect
TIMER1_COM_CHANNEL_B_INTERRUPT TIMER1_COMPB_vect
00243 #define
00244 #define
00245 #define
                TIMER1_OVERFLOW_INTERRUPT TIMER1_OVF_vect
00246 #define
               TIMER1_INPUT_CAPTURE_INTERRUPT TIMER1_CAPT_vect
00247
00248 #define
                TIMER2 COM CHANNEL A INTERRUPT TIMER2 COMPA vect
```

```
00249 #define TIMER2_COM_CHANNEL_B_INTERRUPT TIMER2_COMPB_vect
00250 #define TIMER2_OVERFLOW_INTERRUPT TIMER2_OVF_vect
00251
00252 // Watchdog Timer defines
00253
00254 #define WATCHDOG_SELECT_TIMEOUT(timeOut) WDTCSR |= (1«WDCE) | (1«WDE); WDTCSR = (0«WDIE) | (0«WDE) |
       timeOut;
00255 #define WATCHDOG_START(operationMode,timeOut) MCUSR &= ~(1~WDRF); WDTCSR |= (1~WDCE) | (1~WDCE); WDTCSR
        = operationMode | timeOut;
 00256 \text{ \#define WATCHDOG\_STOP MCUSR } 6= \sim (1 < \text{WDRF}); \text{ WDTCSR } |= (1 < \text{WDCE}) \text{ } | \text{ } (1 < \text{WDE}); \text{ WDTCSR } = 0 \times 00; 
00257 #define WATCHDOG_TIMEOUT_INTERRUPT WDT_vect
00258
00259 // MCU defines
00260
00261
00262 #define MCU_SELECT_SLEEP_MODE(sleepMode) SMCR &= 0xF1; SMCR |= sleepMode « 1
00263
00264 #define MCU_SLEEP_ENABLE SMCR |= 1 « SE 00265 #define MCU_SLEEP_DISABLE SMCR &= ~(1 « SE)
00267 #define MCU_TWI_ENABLE PRR &= ~(1 « PRTWI)
00268 #define MCU_TWI_DISABLE PRR |= 1 « PRTWI
00269
00270 #define MCU_TIMER2_ENABLE PRR &= ~(1 « PRTIM2)
00271 #define MCU_TIMER2_DISABLE PRR |= 1 « PRTIM2
00272
00273 #define MCU_TIMER1_ENABLE PRR &= ~(1 « PRTIM1)
00274 #define MCU_TIMER1_DISABLE PRR |= 1 « PRTIM1
00275
00276 #define MCU TIMERO ENABLE PRR &= ~(1 « PRTIMO)
00277 #define MCU_TIMERO_DISABLE PRR |= 1 « PRTIMO
00278
00279 #define MCU_SPI_ENABLE PRR &= ~(1 « PRSPI)
00280 #define MCU_SPI_DISABLE PRR |= 1 « PRSPI
00281
00282 #define MCU_USARTO_ENABLE PRR &= ~(1 « PRUSARTO)
00283 #define MCU_USARTO_DISABLE PRR |= 1 « PRUSARTO
00285 #define MCU_ADC_ENABLE PRR &= ~(1 « PRADC)
00286 #define MCU_ADC_DISABLE PRR |= 1 « PRADC
00287
00288 #define MCU BOD DISABLE MCUCR |= (1«BODSE) | (1«BODS); MCUCR &= ~(1«BODSE);
00289
00290
00291 // ServoMotor defines
00292
00293 #define SERVOMOTOR_TIMER_PULSE_WIDTH_COUNT(pulseWidth,clockPrescaler) ((F_CPU/1000000UL) *
        (pulseWidth/ clockPrescaler))
00294
00295 #define SERVOMOTOR_TIMER_ANGLE_COUNT(angle,out_min,out_mid,out_max) (((out_min*(angle - 90L))*(angle - 180L))/16200L + (angle*out_max*(angle - 90L))/16200L - (angle*out_mid*(angle - 180L))/8100L))
00296
00297 // SPI defines
00298
00299 #define
                 SPI_ENABLE
                                           SPCR |= 1 « SPE
                SPI_DISABLE SPCR &= ~(1 « SPE)
SPI_SELECT_MASTER_MODE SPCR |= 1 « MSTR
00300 #define
00301 #define
00302 #define
                 SPI_SELECT_SLAVE_MODE SPCR &= ~(1 « MSTR)
00303
00304
                 SPI_SELECT_DATA_MODE(dataMode) SPCR &= 0xF3; SPCR |= dataMode « 2
00305 #define
                 SPI_SELECT_CLOCK_PRESCALER(clockPrescaler) SPCR &= 0xFC; SPCR |= (clockPrescaler & 3); SPSR
00306 #define
        &= 0xFE; SPSR |= (clockPrescaler & 4) » 2
00307 #define SPI_SELECT_DATA_ORDER(dataOrder) SPCR &= 0xDF; SPCR |= dataOrder « 5
00308
00309 #define
                 SPI_WRITE_COLLISION WCOL
00310 #define
                 SPI_TRANSFER_COMPLETE SPIF
00311
00312 #define
                 SPI_MASTER_MODE MSTR
00313 #define
                 SPI_CONTROL_REGISTER SPCR
00314 #define
                 SPI_DATA_REGISTER SPDR
00315 #define
                 SPI_STATUS_REGISTER SPSR
00316
                 SPI ENABLE TRANSFER COMPLETE INTERRUPT SPCR |= 1 « SPIE
00317 #define
00318 #define
                 SPI_DISABLE_TRANSFER_COMPLETE_INTERRUPT SPCR &= ~(1 « SPIE)
00319
00320
00321 #define SPI_TRANSFER_COMPLETE_INTERRUPT SPI_STC_vect
00322
00323 // StepperMotor defines
00324
00325
00326
00327
00328
00329
00330 #endif
```

00331

## 10.29 LCD.cpp File Reference


## 10.30 LCD.cpp

## 10.31 LCD.h File Reference

## 10.32 LCD.h

## 10.33 LDR.cpp File Reference

```
#include "LDR.h"
#include <math.h>
Include dependency graph for LDR.cpp:
```

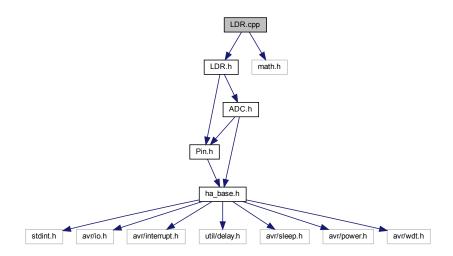


## 10.34 LDR.cpp

```
00001 #include "LDR.h"
00002 #include <math.h>
00003
00004 component::LDR::LDR(const io::Pin &ar_pin, core::ADConverter &ar_ADC)
00005
                    : m_pin(ar_pin), mr_ADC(ar_ADC)
00006
00007 {
00008
          m_pin.toInput(0);
00009
00010 }
00011
00012 component::LDR::~LDR()
00013 {
00014
00015 }
00016
```


## 10.35 LDR.h File Reference

```
#include "Pin.h"
#include "ADC.h"
```

Include dependency graph for LDR.h:

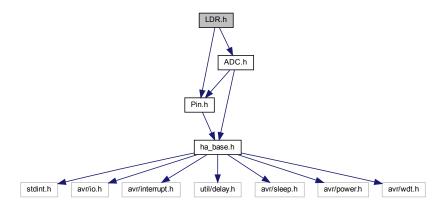

This graph shows which files directly or indirectly include this file:

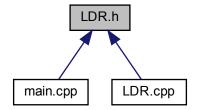

#### **Classes**

· class component::LDR

Class for handling an LDR component.

10.36 LDR.h 259

## **Namespaces**

component


AVR chip external components.

## 10.36 LDR.h

```
00001 #ifndef LDR_H
00002 #define LDR_H
00003 #include "Pin.h"
00004 #include "ADC.h"
00005
00015 namespace component
00016 {
00017
00027 class LDR
00028 {
00029
00030 public:
00039
           LDR(const io::Pin &ar_pin,core::ADConverter &ar_ADC);
00043
00049
           uint32_t getResistance(const uint8_t &ar_VDResistor);
00050
00056
           uint16_t getLux(const uint8_t &ar_VDResistor);
00057
00058 protected:
00060 private:
00061
           io::Pin m_pin;
core::ADConverter &mr_ADC;
00062
00063
00067 };
00068
00069 }
00070
00071 #endif // LDR_H
```

# 10.37 Led.cpp File Reference

#include "Led.h"
Include dependency graph for Led.cpp:

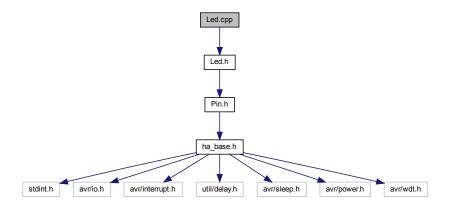


## 10.38 Led.cpp

```
00001
00010 #include "Led.h"
00011
00012 component::Led::Led(const io::Pin &ar_pin)
00013
              : m_pin(ar_pin)
00014 {
00015
          m_pin.toOutput();
00016 }
00017
00018
00019 component::Led::~Led()
00020 {
00021
00022 }
00023
00024
00025 void component::Led::on()
00026 {
00027
          m_pin.setHigh();
00028
00029 }
00030
00031 void component::Led::off()
00032 {
00033
          m_pin.setLow();
00034
00035 }
00036
00037
00038 void component::Led::toggle()
00039 {
          m_pin.toggle();
00041
00042 }
00043
00044 uint8_t component::Led::isOn()
00045 {
00046
          return m_pin.isHigh();
00047
00048 }
00049
00050
00051 uint8_t component::Led::isOff()
00053
          return m_pin.isLow();
00054
00055 }
00056
```


## 10.39 Led.h File Reference

#include "Pin.h"
Include dependency graph for Led.h:

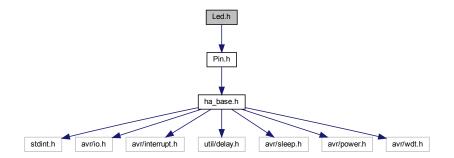

10.40 Led.h 261

This graph shows which files directly or indirectly include this file:

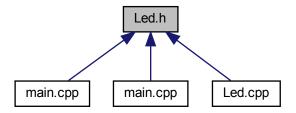

#### **Classes**

· class component::Led

Class for handling a Led component.

#### **Namespaces**

· component

AVR chip external components.


## 10.40 Led.h

```
00001 #ifndef LED_H
00002 #define LED_H
00003 #include "Pin.h"
00004
00014 namespace component
00015 {
00016
00026 class Led
00027 {
00028
00029 public:
00037
          Led(const io::Pin &ar_pin);
00041
             ~Led();
            void on();
void off();
void toggle();
uint8_t isOn();
uint8_t isOff();
00044
00047
00050
00056
00062
00063
00064 protected:
00065
00066 private:
00067
00068
             io::Pin m_pin;
00072 };
00073
00075
00076
00077 #endif
```

## 10.41 main.cpp File Reference

#include "Led.h"

Include dependency graph for BlinkLed/main.cpp:

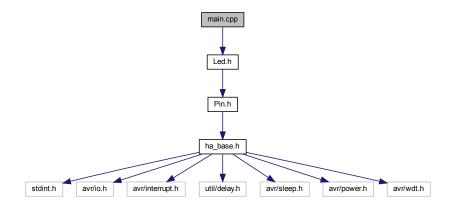

#### **Macros**

- #define LED 0
- #define TIMEDELAY 500

#### **Functions**

• int main (void)

## 10.41.1 Detailed Description

Demo example: Blink a Led

Usage demonstration of the TahakomAVRLib in a simple blink a Led example. This example demonstrates the use of the component::Led() and io::Pin() abstraction objects.

- Compiler: avr-gcc (GCC) 5.4.0
- Supported devices: The example compiles on the ATmega48P/88P/168P/328P AVR family

**Author** 

Farid Oubbati (farid.oubbati@outlook.com)

Date

March 2018

Definition in file BlinkLed/main.cpp.

## 10.41.2 Macro Definition Documentation

#### 10.41.2.1 LED

```
#define LED 0
```

Led pin number

Definition at line 19 of file BlinkLed/main.cpp.

#### 10.41.2.2 TIMEDELAY

```
#define TIMEDELAY 500
```

Time delay

Definition at line 21 of file BlinkLed/main.cpp.

#### 10.41.3 Function Documentation

#### 10.41.3.1 main()

```
int main (
     void )
```

## Definition at line 23 of file BlinkLed/main.cpp.

```
00023
00024
00025
         // Init
00026
00027 // Instantiate a Led object
00028 component::Led Led(io::Pin(LED,io::PortB));
00029
00029
00030 // Mainloop
00031 while (1) {
00032
             Led.on();
00033
00034
             _delay_ms(TIMEDELAY);
00035
00036
00037
              Led.off();
_delay_ms(TIMEDELAY);
        }
00038
00039
          return 0;
00040 }
```


# 10.42 BlinkLed/main.cpp

```
00001
00017 #include "Led.h"
00018
00019 #define LED 0
00021 #define TIMEDELAY 500
00023 int main(void) {
00024
00025
00026
         // Init
         // Instantiate a Led object
component::Led Led(io::Pin(LED,io::PortB));
00027
00028
00029
00030
         // Mainloop
00031
         while (1) {
00032
             Led.on();
_delay_ms(TIMEDELAY);
00033
00034
00035
00036
              Led.off();
             _delay_ms(TIMEDELAY);
00037
00038
00039
        return 0;
00040 }
```

# 10.43 main.cpp File Reference

```
#include "Led.h"
#include "ADC.h"
#include "LDR.h"
```

Include dependency graph for LightMeter/main.cpp:

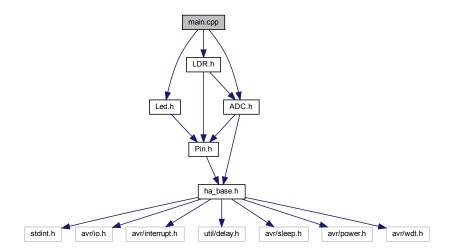

#### **Macros**

- #define LED0 0
- #define LED1 1
- #define LED2 2
- #define LED3 3
- #define LED4 4
- #define LED5 5
- #define LED6 6
- #define LED7 7
- #define LDRVD 0

# **Functions**

· int main (void)

## 10.43.1 Detailed Description

Demo example: Light Meter

Usage demonstration of the TahakomAVRLib in an AVR based Light Meter. The example presents an AVR based Light Meter that displays its Lux measurements in a Led bank. This example demonstrates the use of the component::LED(), component::LDR() and core::ADC() abstraction objects.

- Compiler: avr-gcc (GCC) 5.4.0
- Supported devices: The example compiles on the ATmega48P/88P/168P/328P AVR family

**Author** 

```
Farid Oubbati ( farid.oubbati@outlook.com)
```

Date

March 2018

Definition in file LightMeter/main.cpp.

#### 10.43.2 Macro Definition Documentation

#### 10.43.2.1 LDRVD

#define LDRVD 0

LDR

Definition at line 31 of file LightMeter/main.cpp.

## 10.43.2.2 LED0

#define LED0 0

Led<sub>0</sub>

Definition at line 22 of file LightMeter/main.cpp.

## 10.43.2.3 LED1

#define LED1 1

Led 1

Definition at line 23 of file LightMeter/main.cpp.

## 10.43.2.4 LED2

#define LED2 2

Led 2

Definition at line 24 of file LightMeter/main.cpp.

## 10.43.2.5 LED3

#define LED3 3

Led 3

Definition at line 25 of file LightMeter/main.cpp.

## 10.43.2.6 LED4

#define LED4 4

Led 4

Definition at line 26 of file LightMeter/main.cpp.

## 10.43.2.7 LED5

#define LED5 5

Led 5

Definition at line 27 of file LightMeter/main.cpp.

#### 10.43.2.8 LED6

```
#define LED6 6
```

Led 6

Definition at line 28 of file LightMeter/main.cpp.

#### 10.43.2.9 LED7

```
#define LED7 7
```

Led 7

Definition at line 29 of file LightMeter/main.cpp.

#### 10.43.3 Function Documentation

#### 10.43.3.1 main()

```
int main (
     void )
```

```
Definition at line 34 of file LightMeter/main.cpp.
```

```
00035
00036
        // Init
00037
        // Instantiate Led objects
00038
        component::Led Led[8]={
00039
00040
              {io::Pin(LEDO,io::PortD)},
00041
               {io::Pin(LED1,io::PortD)},
00042
               {io::Pin(LED2,io::PortD)},
00043
               {io::Pin(LED3,io::PortD)},
               {io::Pin(LED4,io::PortD)},
{io::Pin(LED5,io::PortD)},
{io::Pin(LED6,io::PortD)},
00044
00045
00046
00047
               {io::Pin(LED7,io::PortD)}};
00048
00049
00050
        // Instantiate ADC object
00051
        core::ADConverter &myADC = core::ADConverter::getInstance();
00052
00053
        // Start conversion
00054
        myADC.start();
00055
        // Instantiate LDR object
component::LDR LDR(io::Pin(LDRVD,io::PortC),myADC);
00056
00057
00058
00059
00060
        // Mainloop
00061
        while (1) {
00062
00063
00064
          for (uint8_t i=0;i<=(7-(LDR.getLux(5) & 7));i++)</pre>
00065
          {
00066
               Led[i].on();
00067
          }
00068
00069
          for (uint8_t i=(7-(LDR.getLux(5) & 7))+1;i<8;i++)</pre>
00070
          {
00071
               Led[i].off();
00072
00073
00074
00075
         return 0;
00076 }
```

References LED0, LED1, LED2, LED3, LED4, LED5, LED6, LED7, and io::PortD.


# 10.44 main.cpp

```
00001
00018 #include "Led.h"
00019 #include "ADC.h"
00020 #include "LDR.h"
00021
00022 #define LED0 0
00023 #define LED1 1
00024 #define LED2 2
00025 #define LED3 3
00026 #define LED4 4
00027 #define LED5 5
00028 #define LED6 6
00029 #define LED7 7
00031 #define LDRVD 0
00034 int main(void) {
00035
00036
        // Init
00037
       // Instantiate Led objects
00038
00039
        component::Led Led[8]={
              {io::Pin(LEDO,io::PortD)},
00040
00041
              {io::Pin(LED1,io::PortD)},
00042
              {io::Pin(LED2,io::PortD)},
00043
              {io::Pin(LED3,io::PortD)},
              {io::Pin(LED4,io::PortD)},
00044
              {io::Pin(LED5,io::PortD)},
00045
              {io::Pin(LED6,io::PortD)},
{io::Pin(LED7,io::PortD)}};
00046
00047
00048
00049
00050
        // Instantiate ADC object
        core::ADConverter &myADC = core::ADConverter::getInstance();
00051
00052
00053
        // Start conversion
00054
        myADC.start();
00055
00056
        // Instantiate LDR object
00057
        component::LDR LDR(io::Pin(LDRVD,io::PortC),myADC);
00058
00059
00060
        // Mainloop
00061
        while (1) {
00062
00063
00064
          for (uint8_t i=0;i<=(7-(LDR.getLux(5) & 7));i++)</pre>
00065
00066
              Led[i].on();
00067
          }
00068
          for (uint8_t i=(7-(LDR.getLux(5) & 7))+1;i<8;i++)</pre>
00069
00070
00071
              Led[i].off();
00072
          }
00073
00074
00075
        return 0;
00076 }
```

# 10.45 main.cpp File Reference

```
#include "Buzzer.h"
#include "PushButton.h"
#include "buzzer_pitches_16bit.h"
```

Include dependency graph for MusicBox/main.cpp:

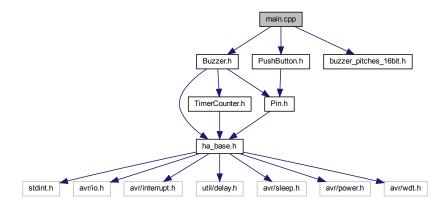

#### **Macros**

- #define BUZZER 0
- #define PUSHBUTTON 1
- #define SONG\_LENGTH (sizeof(l\_song) / sizeof(uint16\_t))

#### **Functions**

• int main (void)

# 10.45.1 Detailed Description

Demo example: AVR Music Box

Usage demonstration of the TahakomAVRLib in an AVR based Music Box. The example allows the user to play a predefined song in a Buzzer and control its tempo via a PushButton This example demonstrates the use of the component::Buzzer() and component::PushButton() abstraction objects.

- Compiler: avr-gcc (GCC) 5.4.0
- Supported devices: The example compiles on the ATmega48P/88P/168P/328P AVR family

**Author** 

Farid Oubbati (farid.oubbati@outlook.com)

Date

March 2018

Definition in file MusicBox/main.cpp.

## 10.45.2 Macro Definition Documentation

## 10.45.2.1 BUZZER

#define BUZZER 0

Buzzer pin number

Definition at line 24 of file MusicBox/main.cpp.

#### 10.45.2.2 PUSHBUTTON

#define PUSHBUTTON 1

PushButton pin number

Definition at line 26 of file MusicBox/main.cpp.

# 10.45.2.3 SONG\_LENGTH

#define SONG\_LENGTH (sizeof(l\_song) / sizeof(uint16\_t))

Song length

Definition at line 28 of file MusicBox/main.cpp.

# 10.45.3 Function Documentation

#### 10.45.3.1 main()

```
int main (
                void )
Definition at line 30 of file MusicBox/main.cpp.
00031
        // Init
00032
00033
00034
        // Instantiate a Buzzer object
00035
        component::Buzzer Buzzer(io::Pin(BUZZER,io::PortB));
00036
00037
        // Instantiate a PushButton object
        component::PushButton PushButton(io::Pin(PUSHBUTTON,io::PortB));
00038
00039
00040
        // Song notes
00041
        const uint16_t l_song[] = {
        E6, E6, E6, C6, E6, G6, G5, C6, G5, E5, A5, B5, Ax5, A5,
00042
00043
00044
        G5, E6, G6, A6, F6, G6, E6, C6, D6, B5,
00045
        C6, G5, E5, A5, B5, Ax5, A5,
G5, E6, G6, A6, F6, G6, E6, C6, D6, B5,
00046
00047
00048
00049
         // Start song at start
00050
        uint8_t l_note = SONG_LENGTH - 1;
00051
00052
        // Initialize PushButton state
00053
        uint8_t l_statePushButton = 0;
00054
00055
00056
        // Mainloop
00057
        while (1) {
    // Check if PusgButton is pressed
00058
00059
             if (PushButton.isPressed())
00060
00061
                  // Check if a new button press
00062
                 if (!1_statePushButton) {
                     // play next note
l_note++;
// start from start
00063
00064
00065
00066
                      if (l_note == SONG_LENGTH) {
00067
00068
                          l_note = 0;
00069
00070
                      }
00071
                      1_statePushButton = 1;
00073
00074
00075
                  // Play note
00076
                 Buzzer.buzz(l_song[l_note], 1600);
00077
00078
             } else {
00079
08000
                 1_statePushButton=0;
00081
00082
             }
00083
00084
        }
00085
        return 0;
00086 }
```

# 10.46 MusicBox/main.cpp


```
00001
00018 #include "Buzzer.h"
00019 #include "PushButton.h"
00020 // Note pitch data
00021 #include "buzzer_pitches_16bit.h"
00022
00023
00024 #define BUZZER 0
00026 #define PUSHBUTTON 1
00028 #define SONG_LENGTH (sizeof(l_song) / sizeof(uint16_t))
00030 int main(void) {
00031
00032  // Init
00033
```

```
// Instantiate a Buzzer object
00035
        component::Buzzer Buzzer(io::Pin(BUZZER,io::PortB));
00036
00037
        // Instantiate a PushButton object
        component::PushButton PushButton(io::Pin(PUSHBUTTON,io::PortB));
00038
00039
00040
        // Song notes
00041
        const uint16_t l_song[] = {
       00042
00043
00044
00045
00046
00047
00048
       // Start song at start
uint8_t l_note = SONG_LENGTH - 1;
00049
00050
00051
00052
       // Initialize PushButton state
00053
       uint8_t l_statePushButton = 0;
00054
00055
00056
       // Mainloop
00057
       while (1) {
    // Check if PusgButton is pressed
00058
00059
            if (PushButton.isPressed())
00060
00061
                // Check if a new button press
00062
                if (!l_statePushButton) {
00063
                    // play next note
l_note++;
// start from start
00064
00065
00066
                    if (l_note == SONG_LENGTH) {
00067
00068
                         l_note = 0;
00069
00070
                    }
00071
00072
                    1_statePushButton = 1;
00073
00074
00075
                // Play note
00076
                Buzzer.buzz(l_song[l_note], 1600);
00077
00078
            } else {
00079
08000
                1_statePushButton=0;
00081
00082
            }
00083
00084
00085
       return 0;
00086 }
```

# 10.47 main.cpp File Reference

```
#include "Buzzer.h"
#include "USARTO.h"
#include "buzzer_pitches_16bit.h"
```

Include dependency graph for Organ/main.cpp:

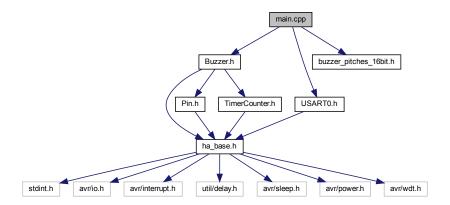

#### **Macros**

- #define BUZZER 0
- #define NOTE\_DURATION 0xF000

## **Functions**

• int main (void)

# 10.47.1 Detailed Description

Demo example: AVR Square-Wave Organ

Usage demonstration of the TahakomAVRLib in a Buzzer based and serial driven Square-Wave Organ. The example enables the user to enter a key note via serial terminal from the keyboard and play the corresponding note in a Buzzer This example demonstrates the use of the component::Buzzer() and io::USART0() abstraction objects.

- Compiler: avr-gcc (GCC) 5.4.0
- Supported devices: The example compiles on the ATmega48P/88P/168P/328P AVR family

**Author** 

Farid Oubbati ( farid.oubbati@outlook.com)

Date

March 2018

Definition in file Organ/main.cpp.

#### 10.47.2 Macro Definition Documentation

#### 10.47.2.1 BUZZER

```
#define BUZZER 0
```

Buzzer pin number

Definition at line 24 of file Organ/main.cpp.

#### 10.47.2.2 NOTE DURATION

```
#define NOTE_DURATION 0xF000
```

Note duration

Definition at line 26 of file Organ/main.cpp.

#### 10.47.3 Function Documentation

#### 10.47.3.1 main()

```
int main (
     void )
```

## Definition at line 28 of file Organ/main.cpp.

```
00028
00029
00030
        // Init
00031
        // Instantiate a Buzzer object
00032
        component::Buzzer Buzzer(io::Pin(BUZZER,io::PortB));
00033
00034
00035
        // Instantiate a USARTO object
00036
        io::USART0 &myUSART0 = io::USART0::getInstance();
00037
00038
        // List of possible keypresses
        00039
00040
00041
00042
00043
        // List of the keypresses corresponding pitches
const uint16_t 1_notes[] = { G4, Gx4, A4, Ax4, B4, C5, Cx5,
    D5, Dx5, E5, F5, Fx5, G5, Gx5,
    A5, Ax5, B5, C6
00044
00045
00046
00047
00048
00049
00050
        // Character key from computer serial terminal
00051
00052
       unsigned char l_key;
00053
        // Current note length
00054
       uint16_t l_currentNoteLength = NOTE_DURATION;
00055
```

10.48 Organ/main.cpp 275

```
// Check if note key
00057
        uint8_t l_isNote;
00058
        myUSARTO.sendString("---- Serial Organ ----\r\n");
00059
00060
00061
        // Mainloop
00062
        while (1) {
00063
00064
             \ensuremath{//} Send N to signal that AVR chip is ready for next key note input
00065
             myUSARTO.sendString("Enter key note\r^n");
00066
00067
             // Wait for key note input
00068
             while (myUSARTO.getNumberBytesReceived() == 0)
00069
00070
                      myUSART0.receiveChar(l_key);
00071
00072
00073
             myUSARTO.resetNumberBytesReceived();
00075
             /****** Play key notes *******/
00076
00077
             l_isNote = 0;
             // Loop through keys table
for (uint8_t i = 0; i < sizeof(1_keys); i++) {
    // Found match in lookup table</pre>
00078
00079
08000
                  if (l_key == l_keys[i]) {
00081
00082
                      Buzzer.buzz(l_notes[i], l_currentNoteLength);
00083
                      // Record that we've found a note
00084
                      l_isNote = 1;
00085
                      break;
00086
                 }
00087
             }
00088
00089
             // Handle non-note keys: tempo changes and rests
             if (!1_isNote) {
    if (1_key == '-') {
        // Code for short note
00090
00091
00092
                      1_currentNoteLength = 1_currentNoteLength / 2;
00094
00095
                 else if (1_key == '+') {
00096
                      // Code for long note
00097
                      1_currentNoteLength = 1_currentNoteLength * 2;
00098
00099
                 else {
00100
                      // Unrecognized, just rest
00101
                      Buzzer.pause(l_currentNoteLength);
00102
00103
00104
00105
00106
        return 0;
00107 }
```

# 10.48 Organ/main.cpp


```
00001
00018 #include "Buzzer.h"
00019 #include "USARTO.h"
00020 // Note pitch data
00021 #include "buzzer_pitches_16bit.h"
00022
00023
00024 #define BUZZER 0
00026 #define NOTE_DURATION 0xF000
00028 int main(void) {
00029
00030
        // Init
00031
00032
        // Instantiate a Buzzer object
00033
        component::Buzzer Buzzer(io::Pin(BUZZER,io::PortB));
00034
00035
        // Instantiate a USARTO object
        io::USART0 &myUSART0 = io::USART0::getInstance();
00036
00037
        // List of possible keypresses
00038
        const uint8_t l_keys[] = { 'a', 'w', 's', 'e', 'd', 'f', 't', 'g', 'y', 'h', 'j', 'i', 'k', 'o', 'l', 'p', ';', '\"
00039
00040
00041
00042
00043
00044
        // List of the keypresses corresponding pitches
00045
        const uint16_t l_notes[] = { G4, Gx4, A4, Ax4, B4, C5, Cx5,
            D5, Dx5, E5, F5, Fx5, G5, Gx5,
```

```
00047
                            A5, Ax5, B5, C6
00048
00049
00050
                    \begin{tabular}{ll} \end{tabular} \beg
00051
                    unsigned char l_key;
00052
00053
                    // Current note length
00054
                    uint16_t l_currentNoteLength = NOTE_DURATION;
00055
00056
                    // Check if note key
00057
                   uint8_t l_isNote;
00058
00059
                   myUSARTO.sendString("---- Serial Organ ----\r\n");
00060
00061
                    // Mainloop
00062
                    while (1) {
00063
00064
                              // Send N to signal that AVR chip is ready for next key note input
00065
                              myUSARTO.sendString("Enter key note\r\n");
00066
00067
                              // Wait for key note input
00068
                              while (myUSART0.getNumberBytesReceived() == 0)
00069
00070
                                                  myUSARTO.receiveChar(1 key);
00071
00072
00073
                              myUSART0.resetNumberBytesReceived();
00074
                              /****** Play key notes *******/
00075
00076
00077
                              l_isNote = 0;
00078
                              // Loop through keys table
00079
                              for (uint8_t i = 0; i < sizeof(l_keys); i++) {</pre>
08000
                                        // Found match in lookup table
                                        if (l_key == l_keys[i]) {
   Buzzer.buzz(l_notes[i], l_currentNoteLength);
   // Record that we've found a note
00081
00082
00083
00084
                                                  l_isNote = 1;
00085
                                                  break;
00086
00087
                              }
00088
00089
                              // Handle non-note keys: tempo changes and rests
                              if (!1_isNote) {
    if (l_key == '-') {
00090
00091
00092
                                                   // Code for short note
00093
                                                  1_currentNoteLength = 1_currentNoteLength / 2;
00094
00095
                                        else if (1_key == '+') {
                                                // Code for long note
00096
00097
                                                  1_currentNoteLength = 1_currentNoteLength * 2;
00098
                                        else {
00099
00100
                                                  // Unrecognized, just rest
00101
                                                  Buzzer.pause(l_currentNoteLength);
00102
                                       }
00104
00105
00106
                   return 0;
00107 }
```

# 10.49 MCU.cpp File Reference

10.50 MCU.cpp 277

Include dependency graph for MCU.cpp:

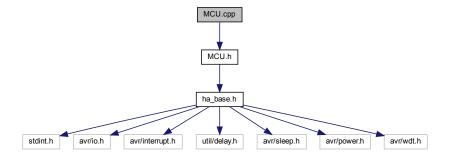

# 10.50 MCU.cpp

```
00001 #include "MCU.h"
00002
00003 void core::MCU::init()
00004 {
00005
          enableUSART0(0);
00006
          enableTimerCounter0(0);
00007
          enableTimerCounter1(0);
80000
          enableTimerCounter2(0);
00009
          enableTWI(0);
00010
          enableSPI(0);
00011
          enableADC(0);
00012
00013 }
00014
00015 void core::MCU::selectSleepMode(const sleepMode &a_sleepMode)
00016 {
00017
          MCU_SELECT_SLEEP_MODE(static_cast<uint8_t>(a_sleepMode));
00018
00019 }
00020
00021 void core::MCU::goToSleep(const BODMode &a_BODMode)
00022 {
00023
          cli();
00024
          switch (a_BODMode)
00025
00026
              case core::BODMode::enabled:
00027
00028
                  sleepEnable(1);
00029
                  sei();
00030
                  sleep_cpu();
00031
                  sleepEnable(0);
00032
                  break;
00033
00034
              case core::BODMode::disabled:
00035
00036
                  sleepEnable(1);
00037
                  disableBOD();
00038
                  sei();
00039
                  sleep_cpu();
00040
                  sleepEnable(0);
00041
                  break;
00042
00043
          }
00044
00045 }
00046
00047 void core::MCU::sleepEnable(const uint8_t a_enable)
00048 {
00049
          if (a enable) {
00050
              MCU_SLEEP_ENABLE;
00051
          } else {
00052
              MCU_SLEEP_DISABLE;
          }
00053
00054
00055 }
00056
00057 void core::MCU::enableUSART0(const uint8_t a_enable)
```


```
00058 {
00059
         if (a_enable) {
00060
             MCU_USARTO_ENABLE;
         } else {
    MCU_USARTO_DISABLE;
}
00061
00062
00063
00064
00065 }
00066
00067 void core::MCU::enableTimerCounterO(const uint8_t a_enable)
00068 {
00069
          if (a enable) {
00070
             MCU_TIMERO_ENABLE;
00071
         } else {
00072
            MCU_TIMERO_DISABLE;
00073
00074
00075 }
00077 void core::MCU::enableTimerCounter1(const uint8_t a_enable)
00078 {
00079
          if (a_enable) {
08000
            MCU_TIMER1_ENABLE;
00081
         } else {
            MCU_TIMER1_DISABLE;
00082
00083
00084
00085 }
00086
00087 void core::MCU::enableTimerCounter2(const uint8 t a enable)
00088 {
00089
         if (a_enable) {
00090
             MCU_TIMER2_ENABLE;
         MCU_TIMER2_DISABLE;
00091
00092
00093
00094
00096
00097 void core::MCU::enableTWI(const uint8_t a_enable)
00098 {
00099
         if (a_enable) {
         MCU_TWI_ENABLE;
} else {
00100
00101
           MCU_TWI_DISABLE;
00102
         }
00103
00104
00105 }
00106
00107 void core::MCU::enableSPI(const uint8_t a_enable)
00108 {
00109
          if (a_enable) {
00110
             MCU_SPI_ENABLE;
         } else {
   MCU_SPI_DISABLE;
00111
00112
00113
         }
00114
00115 }
00116
00117 void core::MCU::enableADC(const uint8_t a_enable)
00118 {
00119
          if (a enable) {
00120
             MCU_ADC_ENABLE;
00121
00122
            MCU_ADC_DISABLE;
         }
00123
00124 }
00125
00126 void core::MCU::disableBOD()
00127 {
00128
         MCU_BOD_DISABLE;
00129 }
```

## 10.51 MCU.h File Reference


Header file of the MCU class.

10.51 MCU.h File Reference 279

#include "ha\_base.h"
Include dependency graph for MCU.h:

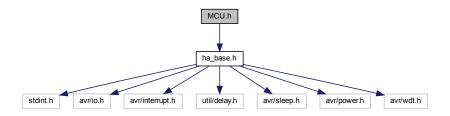

This graph shows which files directly or indirectly include this file:

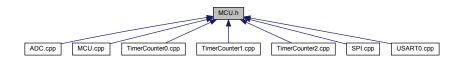

#### **Classes**

• class core::MCU

## **Namespaces**

• core

AVR chip internal core components.

## **Enumerations**

- enum core::BODMode : uint8\_t { core::BODMode::enabled =0, core::BODMode::disabled }
- enum core::sleepMode : uint8\_t {
   core::sleepMode::Idle =0, core::sleepMode::ADC\_NoiseReduction, core::sleepMode::powerDown, core::sleepMode::powerSav
   core::sleepMode::standby =6, core::sleepMode::extendedStandby }

## 10.51.1 Detailed Description

Header file of the MCU class.

Basic class abstraction of the MCU.

Usage example (test):

#include "PushButton.h" #include "Led.h" #include "ExternInterrupt.h" #include "MCU.h"

```
#define PUSHBUTTON_NUMBER 2 #define LED_NUMBER 0
int main(void) {
Init initialize MCU core::MCU::init();
instantiate a Led object component::Led Led(io::Pin(LED_NUMBER,io::PortB));
instantiate a Led object component::PushButton PushButton(io::Pin(PUSHBUTTON NUMBER,io::PortD));
instantiate the external interrupt manager core::ExternInterrupt &myExternInterrupt = core::ExternInterrupt::getInstance();
myExternInterrupt.enableInt0(1); myExternInterrupt.setInt0SenseControl(core::senseControl::logicalChange);
set sleep mode core::MCU::selectSleepMode(core::sleepMode::powerDown);
Mainloop while (1) {
flash the LED for (uint8_t i=0;i<10;i++) { Led.on(); _delay_ms(100); Led.off(); _delay_ms(100); } _delay_ms(5000);
Led.on(); _delay_ms(100); Led.off(); core::MCU::goToSleep(core::BODMode::enabled);
} return 0; }
void core::ExternInterrupt::Int0ServiceRoutine() {
}
Author
     Farid Oubbati ( https://github.com/faroub)
Date
     March 2020
```

Definition in file MCU.h.


#### 10.52 MCU.h

```
00069 #ifndef MCU_H
00070 #define MCU_H
00071 #include "ha_base.h"
00072
00073
00074 namespace core
00076
00077 enum class BODMode : uint8_t {
00078
          enabled=0,
00079
          disabled.
00080 };
00081
00082 enum class sleepMode : uint8_t {
00083
        Idle=0,
00084
          ADC NoiseReduction.
00085
          powerDown,
00086
          powerSave,
00087
          standby=6,
00088
          extendedStandby,
00089 };
00090
00091 class MCU
00092 {
00093 public:
00094
```

```
00095
          static void init();
00096
00097
          static void selectSleepMode(const sleepMode &a_sleepMode);
00098
00099
          static void goToSleep(const BODMode &a_BODMode);
00100
00101
          static void sleepEnable(const uint8_t ar_enable);
00102
00103
          static void enableUSARTO(const uint8_t a_enable);
00104
00105
          static void enableTimerCounterO(const uint8_t a_enable);
00106
00107
          static void enableTimerCounter1(const uint8_t a_enable);
00108
00109
          static void enableTimerCounter2(const uint8_t a_enable);
00110
00111
          static void enableTWI(const uint8_t a_enable);
00112
00113
          static void enableSPI(const uint8_t a_enable);
00114
00115
          static void enableADC(const uint8_t a_enable);
00116
          static void disableBOD();
00117
00118
00119
00120
00121
00122
00123 protected:
00124
00125
00126
00127 private:
00128
00129
00130
00131
00132
00133
00134
00135 };
00136
00137
00138
00139
00140
00141
00142 #endif
```

# 10.53 Pin.cpp File Reference

#include "Pin.h"
Include dependency graph for Pin.cpp:

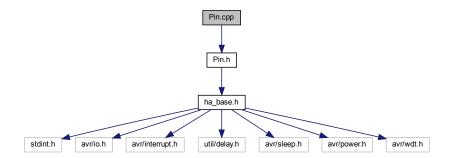

# 10.54 Pin.cpp


```
00009 #include "Pin.h"
00011
00012 io::Pin::Pin(const uint8_t a_pinNumber, const Port &ar_portName)
00013
               : mr_portName(ar_portName), m_pinNumber(a_pinNumber)
00014 {
00015
00016 }
00017
00018 io::Pin::~Pin()
00019
00020 {
00021
00022 }
00023
00024 void io::Pin::toOutput()
00025 {
00026
          *mr_portName.mp_ddrReg |= (1 « m_pinNumber);
00029 void io::Pin::toInput(const uint8_t &ar_useInternalPullUp)
00030 {
00031
          if (ar_useInternalPullUp)
00032
00033
              *mr_portName.mp_portReg |= (1 « m_pinNumber);
              *mr_portName.mp_ddrReg &= ~(1 « m_pinNumber);
00035
00036
00037
          }
00038
          else
00039
          {
              *mr_portName.mp_portReg &= ~(1 « m_pinNumber);
*mr_portName.mp_ddrReg &= ~(1 « m_pinNumber);
00040
00041
00042
00043
00044 }
00045
00046 void io::Pin::setLow()
00047 {
00048
          if (*mr_portName.mp_ddrReg & (1 « m_pinNumber))
00049
00050
              *mr_portName.mp_portReg &= ~(1 « m_pinNumber);
00051
00052 }
00054 void io::Pin::setHigh()
00055 {
00056
          if (*mr_portName.mp_ddrReg & (1 « m_pinNumber))
00057
              *mr_portName.mp_portReg |= (1 « m_pinNumber);
00058
00059
00060 }
00061
00062 void io::Pin::toggle()
00063 {
00064
          if (*mr_portName.mp_ddrReg & (1 « m_pinNumber))
00066
              *mr_portName.mp_portReg ^= 1 « m_pinNumber;
00067
00068 }
00069
00070 uint8_t io::Pin::isHigh()
00071 {
00072
          return *mr_portName.mp_pinReg & (1 « m_pinNumber);
00073 }
00074
00075 uint8_t io::Pin::isLow()
00076 {
00077
          return !(*mr_portName.mp_pinReg & (1 « m_pinNumber));
00079
00080 uint8_t io::Pin::getPinNumber()
00081 {
00082
          return m_pinNumber;
00083 }
```

# 10.55 Pin.h File Reference


#include "ha\_base.h"

10.55 Pin.h File Reference 283

Include dependency graph for Pin.h:

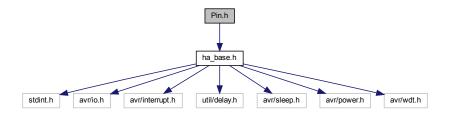

This graph shows which files directly or indirectly include this file:

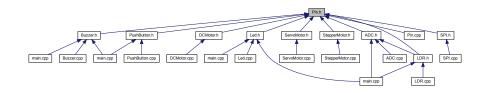

## **Classes**

struct io::Port

Contains defintions of pointers to the AVR port's registers.

· class io::Pin

Class for handling a Pin.

# **Namespaces**

io

AVR chip internal i/o components.

# **Variables**


- static io::Port io::PortB = { &DDRB, &PORTB, &PINB }
- static io::Port io::PortC = { &DDRC, &PORTC, &PINC }
- static io::Port io::PortD = { &DDRD, &PORTD, &PIND }

## 10.56 Pin.h

```
00001 #ifndef PIN_H
00002 #define PIN_H
00003 #include "ha_base.h"
00012 namespace io
00013 {
00014
00019 struct Port
00020 {
00021
        volatile uint8_t* mp_ddrReg;
       volatile uint8_t* mp_portReg;
00023
00025
        volatile uint8_t* mp_pinReg;
00026 };
00035 class Pin
00036 {
00037
00038 public:
00046
          Pin(const uint8_t a_pinNumber, const Port &ar_portName);
          ~Pin();
void toOutput();
00049
00052
00057
           void toInput(const uint8_t &ar_useInternalPullUp);
00060
           void setLow();
00063
          void setHigh();
00064
00067
          void toggle();
00073
          uint8_t isHigh();
uint8_t isLow();
00079
00085
          uint8_t getPinNumber();
00086
00087 protected:
00088
00089
00090 private:
00091
00092
            const Port &mr_portName;
00093
            const uint8_t m_pinNumber;
00098 };
00099
00100 static io::Port PortB = { &DDRB, &PORTB, &PINB };
00101 static io::Port PortC = { &DDRC, &PORTC, &PINC };
00102 static io::Port PortD = { &DDRD, &PORTD, &PIND };
00104 }
00105
00106
00107 #endif
```

# 10.57 PushButton.cpp File Reference

#include "PushButton.h"
Include dependency graph for PushButton.cpp:

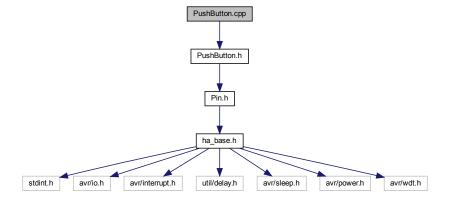

10.58 PushButton.cpp 285


# 10.58 PushButton.cpp

```
00001
00010 #include "PushButton.h"
00011
00012 component::PushButton::PushButton(const io::Pin& ar_pin, const uint8_t &ar_useInternalPullUp, const
       uint8_t &ar_isActiveLow)
00013
                                            : m_pin(ar_pin),
00014
                                              mr_isActiveLow(ar_isActiveLow),
00015
                                             \verb|mr_useInternalPullUp| (ar_useInternalPullUp)|
00016
00017
00018 {
00019
          m_pin.toInput(mr_useInternalPullUp);
00020
          m_buttonPressed = 0;
00021 }
00022
00023 component::PushButton::~PushButton()
00024 {
00025
00026 }
00027
00028
00029 uint8_t component::PushButton::isPressed()
00030 {
00031
           if (mr_isActiveLow || mr_useInternalPullUp) {
00032
              if (m_pin.isLow()) {
                   _delay_us(PUSHBUTTON_DEBOUNCE_TIME_US);
00033
00034
                   if (m_pin.isLow()) {
    ++m_buttonPressed;
00035
00036
                        return 1;
00037
00038
          } else {
00039
00040
              if (m_pin.isHigh()) {
    _delay_us(PUSHBUTTON_DEBOUNCE_TIME_US);
    if (m_pin.isHigh()) {
00041
00043
00044
                        ++m_buttonPressed;
00045
                        return 1;
00046
                   }
00047
               }
00048
00049
          }
00050
00051
          return 0;
00052
00053 }
00054
00055 uint8_t component::PushButton::getPressedCount() const
00056 {
00057
00058
          return m_buttonPressed;
00059
00060 }
00062 void component::PushButton::resetPressedCount()
00063 {
00064
          m_buttonPressed = 0;
00065
00066 }
```


# 10.59 PushButton.h File Reference

#include "Pin.h"

Include dependency graph for PushButton.h:

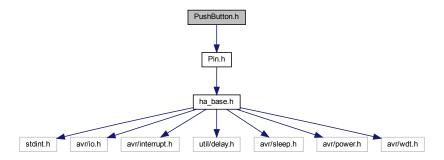

This graph shows which files directly or indirectly include this file:

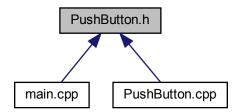

#### **Classes**

· class component::PushButton

Class for handling a PushButton component.

## **Namespaces**

component

AVR chip external components.

## 10.60 PushButton.h

```
00001 #ifndef PUSHBUTTON_H
00002 #define PUSHBUTTON_H
00003 #include "Pin.h"
00004
00014 namespace component
00015 {
00016
00026 class PushButton
00027 {
00028 public:
```

```
00037
             PushButton(const io::Pin &ar_pin, const uint8_t &ar_useInternalPullUp=1, const uint8_t
&ar_isActiveLow=1);
           uint8_t isPressed();
uint8_t getPressedCount() const;
void resetPressedCount();
00047
00053
00058
00060
00061 protected:
00062
00063 private:
00064 io::Pin m_pin;

00065 const uint8_t &mr_isActiveLow;


00066 const uint8_t &mr_useInternalPullUp;

00067 uint8_t m_buttonPressed;
00071 };
00072 }
00073
00075
00076
00077 #endif
```

- 10.61 README.md File Reference
- 10.62 README.md File Reference
- 10.63 README.md File Reference
- 10.64 README.md File Reference
- 10.65 README.md File Reference
- 10.66 README.md File Reference
- 10.67 README.md File Reference
- 10.68 ServoMotor.cpp File Reference

#include "ServoMotor.h"

Include dependency graph for ServoMotor.cpp:

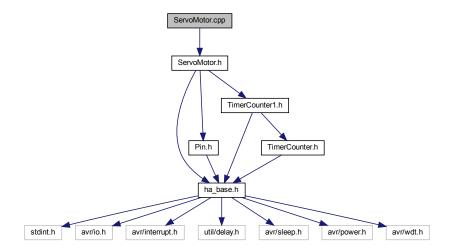

# 10.69 ServoMotor.cpp

```
00001 #include "ServoMotor.h" 00002
00003
00004
00005 component::ServoMotor::ServoMotor(const io::Pin &ar_pin,
00006
                                          const uint16_t &ar_pulseCycle,
00007
                                          const uint16_t &ar_pulseWidthMin,
00008
                                          const uint16_t &ar_pulseWidthMid,
00009
                                          const uint16_t &ar_pulseWidthMax)
00010
                             : m pin(ar pin).
00011
                               m_pulseCycle(ar_pulseCycle),
00012
                               m_pulseWidthMin(ar_pulseWidthMin),
00013
                               \verb|m_pulseWidthMid(ar_pulseWidthMid)|,
00014
                               {\tt m\_pulseWidthMax(ar\_pulseWidthMax)}
00015 {
00016
          m pin.toOutput();
00017
00018 }
00019
00020 component::ServoMotor::~ServoMotor()
00021 {
00022
00023 }
00024
00025
00026
00027
00028 void component::ServoMotor::on()
00029 {
          m_pin.setHigh();
00031 }
00032
00033 void component::ServoMotor::off()
00034 {
00035
          m pin.setLow();
00036 }
00037
00038 void component::ServoMotor::toggle()
00039 {
00040
          m_pin.toggle();
00041
00042 }
00044 uint16_t component::ServoMotor::computePulseCycleCount(const uint16_t &ar_clockPrescaler)
00045 {
00046
          return SERVOMOTOR_TIMER_PULSE_WIDTH_COUNT(m_pulseCycle,ar_clockPrescaler);
00047 }
00049 uint16_t component::ServoMotor::computePulseWidthMinCount(const uint16_t &ar_clockPrescaler)
```


```
00050 {
00051
          return SERVOMOTOR_TIMER_PULSE_WIDTH_COUNT(m_pulseWidthMin,ar_clockPrescaler);
00052 }
00053
00054 uint16_t component::ServoMotor::computePulseWidthMaxCount(const uint16_t &ar_clockPrescaler)
00055 {
00056
          return SERVOMOTOR_TIMER_PULSE_WIDTH_COUNT(m_pulseWidthMax,ar_clockPrescaler);
00057 }
00058
00059 uint16_t component::ServoMotor::computePulseWidthMidCount(const uint16_t &ar_clockPrescaler)
00060 {
          return SERVOMOTOR_TIMER_PULSE_WIDTH_COUNT(m_pulseWidthMid,ar_clockPrescaler);
00061
00062 }
00063
00064 uint16_t component::ServoMotor::computeRotationAngleCount(const uint8_t &ar_angle_deg,const uint16_t
       &ar_clockPrescaler)
00065 {
00066
       static_cast<uint16_t>(SERVOMOTOR_TIMER_ANGLE_COUNT(ar_angle_deg, static_cast<long>(computePulseWidthMinCount(ar_clockProperty))
00067 }
00068
00069
00070
00071 void component::ServoMotor::rotate(core::TimerCounter1 &ar_timerCounter1,
00072
                                          const uint8_t &ar_angle_deg,
00073
                                          const core::channel &ar_channel)
00074 {
00075
00076
          ar_timerCounter1.setOutputCompareRegister(ar_channel,
       \verb|computeRotationAngleCount(ar\_angle\_deg, ar\_timerCounter1.getClockPrescaler())|| |
00077
00078
          // start timer
00079
          ar_timerCounter1.start();
08000
00081
00082 }
00083
00084
00085 void component::ServoMotor::connect(core::TimerCounter1 &ar_timerCounter1,
00086
                   const core::channel &ar_channel)
00087 {
00088
00089
00090
       ar_timerCounter1.setInputCaptureRegister(computePulseCycleCount(ar_timerCounter1.getClockPrescaler()));
00091
          ar_timerCounter1.selectOperationMode(core::operationMode::fast_PWM_ICR);
00092
          ar_timerCounter1.selectCompareOutputMode(ar_channel, core::compareOutputMode::clear);
00093
          ar_timerCounter1.setCounter(0);
00094
00095 }
00096
00097 void component::ServoMotor::disconnect(core::TimerCounter1 &ar_timerCounter1,
00098
                      const core::channel &ar_channel)
00099 {
00100
          ar_timerCounter1.selectCompareOutputMode(ar_channel, core::compareOutputMode::normal);
00101
          // stop timer
00102
          ar_timerCounter1.stop();
00103 }
```

#### 10.70 ServoMotor.h File Reference


Header file of the ServoMotor class.

```
#include "ha_base.h"
#include "Pin.h"
#include "TimerCounter1.h"
```

Include dependency graph for ServoMotor.h:

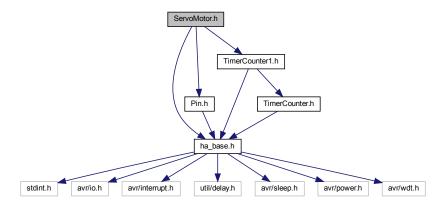

This graph shows which files directly or indirectly include this file:

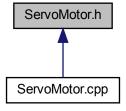

# Classes

• class component::ServoMotor

## **Namespaces**

• component

AVR chip external components.

# 10.70.1 Detailed Description

Header file of the ServoMotor class.

Header file of the StepperMotor class.

Usage example (separate): #include "MCU.h" #include "ServoMotor.h" #include "TimerCounter1.h"

#define SERVOMOTOR\_NUMBER 1 #define SERVOMOTOR\_PULSE\_CYCLE 30000 // pulse cycle [us] #define SERVOMOTOR\_PULSE\_WIDTH\_MIN 500// pulse width min [us] #define SERVOMOTOR\_PULSE\_WIDTH\_MID 1520 // pulse width mid [us] #define SERVOMOTOR PULSE WIDTH MAX 3000 // pulse width max [us]

```
int main(void) {
```

Init initialize MCU core::MCU::init();

instantiate the TimerCounter0 object core::TimerCounter1 &myTimerCounter1 = core::TimerCounter1::getInstance(); myTimerCounter1.selectClockSource(core::clockSource::PS\_8); myTimerCounter1.selectOperationMode(core::clockSource::PS\_8); myTimerCounter1.selectOperationMode(core::channel::A, core ← ::compareOutputMode::clear);

instantiate the Buzzer object component::ServoMotor myServoMotor(io::Pin(SERVOMOTOR\_NUMBER,io::PortB), SERVOMOTOR\_PULSE\_CYCLE, SERVOMOTOR\_PULSE\_WIDTH\_MIN, SERVOMOTOR\_PULSE\_WIDTH\_M← ID, SERVOMOTOR\_PULSE\_WIDTH\_MAX);

myTimerCounter1.setInputCaptureRegister(myServoMotor.computePulseCycleCount(myTimerCounter1.get← ClockPrescaler())); myTimerCounter1.setOutputCompareRegister(core::channel::A, myServoMotor.compute← RotationAngleCount(0,myTimerCounter1.getClockPrescaler())); myTimerCounter1.start(); \_delay\_ms(2000); my← TimerCounter1.setOutputCompareRegister(core::channel::A, myServoMotor.computeRotationAngleCount(45,my← TimerCounter1.getClockPrescaler())); myTimerCounter1.start(); \_delay\_ms(2000); myTimerCounter1.set← OutputCompareRegister(core::channel::A, myServoMotor.computeRotationAngleCount(90,myTimerCounter1.← getClockPrescaler())); myTimerCounter1.start(); \_delay\_ms(2000); myTimerCounter1.setOutputCompare← Register(core::channel::A, myServoMotor.computeRotationAngleCount(135,myTimerCounter1.getClockPrescaler())); myTimerCounter1.start(); \_delay\_ms(2000); myTimerCounter1.setOutputCompareRegister(core::channel::A, my← ServoMotor.computeRotationAngleCount(180,myTimerCounter1.getClockPrescaler())); myTimerCounter1.start(); \_delay\_ms(2000); myTimerCounter1.setOutputCompareRegister(core::channel::A, myServoMotor.compute← RotationAngleCount(0,myTimerCounter1.getClockPrescaler())); myTimerCounter1.start(); \_delay\_ms(2000);

Mainloop while (1) {

} return 0; } Usage example (TimerCounter1): #include "MCU.h" #include "ServoMotor.h" #include "Timer  $\leftarrow$  Counter1.h"

#define SERVOMOTOR\_NUMBER 1 #define SERVOMOTOR\_PULSE\_CYCLE 30000 // pulse cycle [us] #define SERVOMOTOR\_PULSE\_WIDTH\_MIN 500// pulse width min [us] #define SERVOMOTOR\_PULSE\_WIDTH\_MID 1520 // pulse width mid [us] #define SERVOMOTOR\_PULSE\_WIDTH\_MAX 3000 // pulse width max [us]

int main(void) {

Init initialize MCU core::MCU::init();

instantiate the TimerCounter1 object core::TimerCounter1 &myTimerCounter1 = core::TimerCounter1::getInstance(); myTimerCounter1.selectClockSource(core::clockSource::PS 8);

instantiate the Buzzer object component::ServoMotor myServoMotor(io::Pin(SERVOMOTOR\_NUMBER,io::PortB), SERVOMOTOR\_PULSE\_CYCLE, SERVOMOTOR\_PULSE\_WIDTH\_MIN, SERVOMOTOR\_PULSE\_WIDTH\_M← ID, SERVOMOTOR\_PULSE\_WIDTH\_MAX);

myServoMotor.connect(myTimerCounter1);

 $myServoMotor.rotate(myTimerCounter1,0); \ \_delay\_ms(2000); \ myServoMotor.rotate(myTimerCounter1,45); \ \_delay\_ms(2000); \ myServoMotor.rotate(myTimerCounter1,90); \ \_delay\_ms(2000); \ myServoMotor.rotate(myTimerCounter1,180); \ \_delay\_ms(2000); \ myServodor.rotate(myTimerCounter1,180); \ \_delay\_ms(2000); \ myServodor.rotate(myTimerCounter1,0); \ delay\ ms(2000); \\$ 

myServoMotor.disconnect(myTimerCounter1);

```
Mainloop while (1) {
}
return 0;
}
```

Generated by Doxygen

class to control a servo motor

```
Author
     Farid Oubbati ( https://github.com/faroub)
Date
     March 2020
The StepperMotor class is implemented and tested for the 28BYJ-48 Stepper Motor Usage example (basic):
#include "StepperMotor.h"
#define StepperMotor Pin 1 0 #define StepperMotor Pin 2 1 #define StepperMotor Pin 3 2 #define Stepper €
Motor_Pin_4 3
#define STEP_ANGLE_FULL_STEP 0.176 #define STEP_ANGLE_HALF_STEP 0.0879
int main(void) {
instantiate the StepperMotor object component::StepperMotor myStepperMotor(component::mode::halfStep,
io::Pin(StepperMotor_Pin_1,io::PortB), io::Pin(StepperMotor_Pin_2,io::PortB), io::Pin(StepperMotor_Pin_3,io::PortB),
io::Pin(StepperMotor_Pin_4,io::PortB));
int16 t I angle = -180; int16 t I step = static cast<int16 t > (I angle / STEP ANGLE HALF STEP);
set speed [steps/s] full step: max speed: 500p/s half step: max speed: 1000p/s
set speed [%] full step: max speed: 40% half step: max speed: 80%
Mainloop while (1) {
 while (!myStepperMotor.goalReached())
set motor steps myStepperMotor.step(l_step,1000); myStepperMotor.step(l_step,80,STEP_ANGLE_HALF_STEP);
    }
} return 0; }
class to control a servo motor
Author
     Farid Oubbati ( https://github.com/faroub)
Date
     March 2020
Definition in file ServoMotor.h.
```

10.71 ServoMotor.h


## 10.71 ServoMotor.h

```
00001
00126 #ifndef SERVOMOTOR_H
00127 #define SERVOMOTOR_H
00127 #derine Shrvomotok_h
00128 #include "ha_base.h"
00129 #include "Pin.h"
00130 #include "TimerCounter1.h"
00132
00133
00134 namespace component
00135 {
00136
00137
00138 class ServoMotor
00139 {
00140 public:
00141
          ServoMotor(const io::Pin &ar_pin,
00142
                      const uint16_t &ar_pulseCycle=0,
00144
                      const uint16_t &ar_pulseWidthMin=0,
00145
                      const uint16_t &ar_pulseWidthMid=0,
00146
                      const uint16_t &ar_pulseWidthMax=0);
00147
00148
          ~ServoMotor();
00149
          void on();
00155
          void off();
00158
          void toggle();
00159
00160
          uint16_t computePulseCycleCount(const uint16_t &ar_clockPrescaler);
00161
00162
          uint16_t computePulseWidthMinCount(const uint16_t &ar_clockPrescaler);
00163
00164
          uint16_t computePulseWidthMidCount(const uint16_t &ar_clockPrescaler);
00165
00166
          uint16_t computePulseWidthMaxCount(const uint16_t &ar_clockPrescaler);
00167
00168
          uint16_t computeRotationAngleCount(const uint8_t &ar_angle_deg, const uint16_t
       &ar_clockPrescaler);
00169
00170
00171
          void rotate(core::TimerCounter1 &ar_timerCounter1,
00172
                       const uint8_t &ar_angle_deg,
                        const core::channel &ar_channel=core::channel::A);
00174
00175
          void connect(core::TimerCounter1 &ar_timerCounter1,
00176
                         const core::channel &ar_channel=core::channel::A);
00177
00178
          void disconnect (core::TimerCounter1 &ar timerCounter1,
00179
                            const core::channel &ar_channel=core::channel::A);
00180
00181
00182
00183 protected:
00184
00185 private:
00187
00188
          io::Pin m_pin;
          uint16_t m_pulseCycle;
uint16_t m_pulseWidthMin;
00190
00192
          uint16_t m_pulseWidthMid;
uint16_t m_pulseWidthMax;
00194
00196
00205 };
00206
00207
00208 }
00209
00210
00212 #endif
```

# 10.72 SPI.cpp File Reference

```
#include "SPI.h"
#include "MCU.h"
```

Include dependency graph for SPI.cpp:

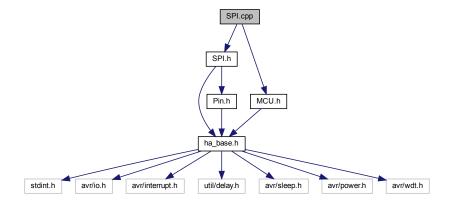

# 10.73 SPI.cpp

```
00001 #include "SPI.h"
00002 #include "MCU.h"
00003
00004 volatile uint8_t io::SPI::m_data = 0;
00005
00006
00007
00008 io::SPI& io::SPI::getInstance(const Pin &ar_pinSCK,
00009
                                      const Pin &ar_pinMISO,
00010
                                      const Pin &ar_pinMOSI,
00011
                                      const Pin &ar_pinSS)
00012 {
00013
          static SPI l_instance(ar_pinSCK,
00014
                                 ar_pinMISO,
00015
                                  ar_pinMOSI,
00016
                                  ar_pinSS);
00017
00018
          return l_instance;
00019
00020 }
00021
00022 io::SPI::SPI(const Pin &ar_pinSCK,
00023
                   const Pin &ar_pinMISO,
00024
                    const Pin &ar_pinMOSI,
              const Pin &ar_pinSS)
: m_pinSCK(ar_pinSCK),
00025
00026
                m_pinMISO(ar_pinMISO),
00027
00028
                 m_pinMOSI(ar_pinMOSI),
00029
                m_pinSS(ar_pinSS)
00030 {
00031
          core::MCU::enableSPI(1);
00032
          sei();
00033
          enableTransferCompleteInterrupt(1);
00034
00035 }
00036
00037 io::SPI::~SPI()
00038 {
00039
00040 }
00041
00042 uint8_t io::SPI::writeCollision()
00043 {
00044
          return (SPI_STATUS_REGISTER & (1 « SPI_WRITE_COLLISION));
00045 }
00046
00047
00048 uint8_t io::SPI::transferComplete()
00049 {
00050
           return (SPI_STATUS_REGISTER & (1 « SPI_TRANSFER_COMPLETE));
00051 }
00053 void io::SPI::selectClockPrescaler(const clockPrescaler& ar_clockPrescaler)
```

10.73 SPI.cpp 295


```
00054 {
00055
          SPI_SELECT_CLOCK_PRESCALER(static_cast<uint8_t>(ar_clockPrescaler));
00056
00057 }
00058
00059 void io::SPI::selectOperationMode(const operationMode& ar_operationMode)
00061
          switch (ar_operationMode)
00062
00063
              case operationMode::master:
00064
00065
                  m_pinMOSI.toOutput();
00066
                  m_pinSCK.toOutput();
00067
                  m_pinMISO.toInput(1);
00068
                  m_pinSS.toOutput();
00069
                  m_pinSS.setHigh();
00070
                  SPI_SELECT_MASTER_MODE;
SPI_ENABLE;
00071
00072
                  break;
00073
00074
              case operationMode::slave:
00075
00076
                  m_pinMISO.toOutput();
00077
                  SPI_SELECT_SLAVE_MODE;
SPI_ENABLE;
00078
00079
                  break;
00080
00081
              case operationMode::submaster:
00082
00083
                  m_pinMOSI.toOutput();
00084
                  m_pinSCK.toOutput();
00085
                  m_pinMISO.toInput(1);
00086
                  m_pinSS.toInput(1);
00087
                  SPI_SELECT_MASTER_MODE;
00088
                  SPI ENABLE;
00089
                  break;
00090
00091
              case operationMode::disable:
00092
              {
00093
                  SPI_DISABLE;
00094
                  break;
00095
              }
00096
          }
00097 }
00099 void io::SPI::selectDataMode(const dataMode& ar_dataMode)
00100 {
00101
          SPI_SELECT_DATA_MODE(static_cast<uint8_t>(ar_dataMode));
00102 }
00103
00104 void io::SPI::selectDataOrder(const dataOrder& ar_dataOrder)
00105 {
00106
          SPI_SELECT_DATA_ORDER(static_cast<uint8_t>(ar_dataOrder));
00107
00108 }
00109
00110 void io::SPI::enableTransferCompleteInterrupt(const uint8_t a_enable)
00111 {
00112
          if (a_enable) {
              SPI_ENABLE_TRANSFER_COMPLETE_INTERRUPT;
00113
          } else {
00114
00115
              SPI_DISABLE_TRANSFER_COMPLETE_INTERRUPT;
00116
          }
00117 }
00118
00119 void io::SPI::selectSlave(const uint8_t a_select)
00120 {
00121
          if (a select) {
00122
              m pinSS.setLow();
00123
00124
          } else {
00125
              m_pinSS.setHigh();
00126
          }
00127
00128 }
00129 void io::SPI::transferCompleteServiceRoutine()
00130 {
00131
00132
              m_data = SPI_DATA_REGISTER;
00133 }
00134
00135 void io::SPI::masterSendByte(const uint8_t &ar_byte)
00136 {
00137
00138
          SPI_DATA_REGISTER = ar_byte;
00139
          selectSlave(1);
00140
          while(!transferComplete()){};
```

```
selectSlave(0);
00142
00143
00144
00145 }
00146
00147 void io::SPI::masterReceiveByte(uint8_t &ar_byte)
00148 {
00149
          masterSendByte(0);
00150
00151
          ar_byte = m_data;
00152 }
00153
00154 void io::SPI::slaveReceiveByte(uint8_t &ar_byte)
00155 {
00156
          ar_byte = m_data;
00157
00158 }
```


# 10.74 SPI.h File Reference

Header file of the SPI class.

```
#include "ha_base.h"
#include "Pin.h"
Include dependency graph for SPI.h:
```

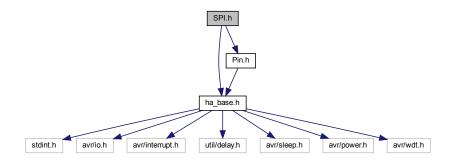

This graph shows which files directly or indirectly include this file:

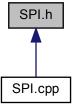

## **Classes**

• class io::SPI

10.74 SPI.h File Reference 297

#### **Namespaces**

• io

AVR chip internal i/o components.

#### **Enumerations**

```
    enum io::operationMode::uint8_t { io::operationMode::master =0, io::operationMode::slave, io::operationMode::submaster,

  io::operationMode::disable }
```

```
• enum io::clockPrescaler : uint8 t {
  io::clockPrescaler::PS 4 = 0, io::clockPrescaler::PS 16, io::clockPrescaler::PS 64, io::clockPrescaler::PS 128,
  io::clockPrescaler::PS_2, io::clockPrescaler::PS_8, io::clockPrescaler::PS_32 }
```

- enum io::dataMode : uint8\_t { io::dataMode::mode\_0 = 0, io::dataMode::mode\_1, io::dataMode::mode\_2, io::dataMode::mode\_3 }
- enum io::dataOrder : uint8\_t { io::dataOrder::first\_MSB = 0, io::dataOrder::first\_LSB }

```
10.74.1 Detailed Description
Header file of the SPI class.
Usage example (test): #include "MCU.h" #include "SPI.h"
#define SPI_SCK 5 #define SPI_MISO 4 #define SPI_MOSI 3 #define SPI_SS 2
int main(void) {
Init initialize MCU core::MCU::init(); instantiate a SPI object io::SPI &myISP = io::SPI::getInstance(io::Pin(SPI_SCK,io::PortB),
io::Pin(SPI_MISO,io::PortB), io::Pin(SPI_MOSI,io::PortB), io::Pin(SPI_SS,io::PortB));
myISP.selectClockPrescaler(io::clockPrescaler::PS_128); myISP.selectDataMode(io::dataMode::mode_0); myIS←
P.selectDataOrder(io::dataOrder::first LSB); myISP.selectOperationMode(io::operationMode::master);
myISP.masterSendByte(0x03);
Mainloop while (1) {
} return 0; }
Basic class for IO abstraction of Pin and Port
Author
     Farid Oubbati ( https://github.com/faroub)
Date
     March 2020
```

Definition in file SPI.h.


## 10.75 SPI.h

```
00001
00048 #ifndef SPI_H
00049 #define SPI_H
00050 #include "ha_base.h"
00051 #include "Pin.h"
00052
00053 namespace io
00054 {
00055
00056 enum class operationMode : uint8_t {
00057
          master=0,
00058
          slave,
00059
          submaster.
00060
          disable,
00061 };
00062
00063 enum class clockPrescaler : uint8_t {
00064
           PS\_4 = 0,
           PS_16,
00065
00066
           PS_64,
PS_128,
00067
00068
           PS_2,
00069
           PS_8,
00070
00071 };
00072
00073 enum class dataMode : uint8_t {
00074
           mode_0 = 0,
00075
           mode_1,
00076
           mode_2,
00077
           mode_3,
00078 };
00079
00080 enum class dataOrder : uint8_t {
00081
           first\_MSB = 0,
00082
           first_LSB
00083 };
00084
00085
00086 class SPI
00087 {
00088
00089 public:
00090
          static SPI& getInstance(const io::Pin &ar_pinSCK,
                                    const io::Pin &ar_pinMISO,
00091
                                    const io::Pin &ar_pinMOSI,
00092
00093
                                    const io::Pin &ar_pinSS);
00094
00095
          void selectDataMode(const dataMode& ar_dataMode);
00096
00097
          void selectDataOrder(const dataOrder& ar_dataOrder);
00098
00099
          void selectOperationMode(const operationMode& ar_operationMode);
00100
00101
          void selectClockPrescaler(const clockPrescaler& ar_clockPrescaler);
00102
00103
          void selectSlave(const uint8_t a_select);
00104
00107
          uint8_t writeCollision();
00108
00111
          uint8 t transferComplete();
00112
00113
00114
          static void enableTransferCompleteInterrupt(const uint8 t a enable):
00115
00116
          void masterSendByte(const uint8_t &ar_byte);
00117
00118
          void masterReceiveByte(uint8_t &ar_byte);
00119
00120
          void slaveReceiveByte(uint8_t &ar_byte);
00121
       static void transferCompleteServiceRoutine() __asm__(STR(SPI_TRANSFER_COMPLETE_INTERRUPT))
__attribute__((__signal__, __used__, __externally_visible__));
00124
00125
00126
00127
00128 private:
00137
          SPI (const io::Pin &ar_pinSCK,
00138
            const io::Pin &ar_pinMISO,
00139
               const io::Pin &ar_pinMOSI,
00140
              const io::Pin &ar_pinSS);
00141
00144
          ~SPI();
00145
00148
          SPI(const SPI&);
```

```
00149
00152
          const SPI& operator=(const SPI&);
00153
00154
          static volatile uint8_t m_data;
00155
          io::Pin m_pinSCK;
00156
00157
          io::Pin m_pinMISO;
00158
          io::Pin m_pinMOSI;
00159
          io::Pin m_pinSS;
00167 };
00168
00169
00170 #endif // SPI_H
```

## 10.76 StepperMotor.cpp File Reference

```
#include "StepperMotor.h"
#include <math.h>
Include dependency graph for StepperMotor.cpp:
```

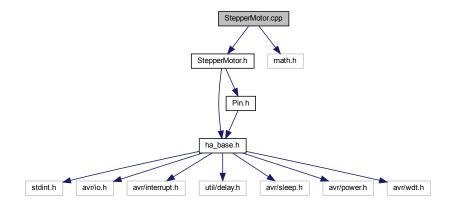

## 10.77 StepperMotor.cpp

```
00001 #include "StepperMotor.h"
00002 #include <math.h>
00003
00004 // TODO: steps to angle
00005 // TODO: maximum speed
00006 // TODO: speed and accelleration profiles
00007
00008 component::StepperMotor::StepperMotor(const mode &ar_mode,
00009
                                               const io::Pin &ar_pinCoil1,
00010
                                               const io::Pin &ar_pinCoil2,
00011
                                               const io::Pin &ar_pinCoil3,
00012
                                               const io::Pin &ar_pinCoil4)
00013
          : m_pinCoil1(ar_pinCoil1),
            m_pinCoil2(ar_pinCoil2),
m_pinCoil3(ar_pinCoil3),
00014
00015
00016
            m_pinCoil4(ar_pinCoil4),
00017
            stepMode(ar_mode)
00018 {
00019
00020
          m_pinCoil1.toOutput();
00021
          m_pinCoil2.toOutput();
00022
          m_pinCoil3.toOutput();
00023
          m_pinCoil4.toOutput();
00024
          m_goalReached = 0;
00025
          m_currentPos = 0;
00026
00027
00028 }
```

```
00030 component::StepperMotor::~StepperMotor()
00031 {
00032
00033 }
00034
00035 void component::StepperMotor::setCurrentPos(uint16_t a_currentPos)
00036 {
00037
           m_currentPos = a_currentPos;
00038 }
00039
00040 uint16_t component::StepperMotor::currentPos()
00041 {
00042
          return m_currentPos;
00043 }
00044
00045
00046
00047 void component::StepperMotor::step(const int16_t a_step,
         const uint16_t a_speed,
00048
00049
              const uint16_t a_accel,
00050
              const uint16_t a_decel)
00051 {
          static int16_t l_stepNumber = 0;
uint8_t l_stepDelay_ms = 0;
uint16_t l_step=0;
00052
00053
00054
00055
00056
           if (a_step<=0)</pre>
00057
             1_step = -a_step;
00058
00059
          } else
00060
          {
00061
              1_step = a_step;
00062
00063
00064
          l_stepDelay_ms = computeStepDelay(l_step,
00065
                                                a speed,
00066
                                                a_accel,
00067
                                                a_decel);
00068
00069 if (l_stepDelay_ms>0)
00070 {
00071
00072
           if (a_step<=0)</pre>
00073
00074
               if (l_stepNumber== -a_step)
00075
00076
                   m_goalReached = 1;
00077
00078
               } else {
                   l_stepNumber++;
08000
                   m_currentPos++;
00081
               }
00082
00083
00084
          } else {
00086
               if (l_stepNumber == -a_step)
00087
               {
00088
                   m_goalReached = 1;
00089
00090
               } else {
00091
                   l_stepNumber--;
00092
                   m_currentPos--;
00093
00094
00095
          }
00096
00097
00098
           if (m_goalReached == 0)
00099
00100
00101
               switch (stepMode)
00102
00103
                   case mode::fullStep:
00104
00105
                        // equivalent to l_stepNumber % 4
00106
                        // 1 3 5 7 <->
                       stepPulse(2*(1_stepNumber & 3)+1);
00107
00108
                       break:
00109
                   }
00110
00111
                   case mode::halfStep:
00112
                        // equivalent to 1_stepNumber % 8 // 0 1 2 3 4 5 6 7 <-> stepPulse(1_stepNumber & 7);
00113
00114
00115
```

```
00116
                        break;
00117
00118
               }
00119
00120
               stepDelay(l_stepDelay_ms);
00121
00122
          }
00123 }
00124
00125 }
00126
00127 uint8_t component::StepperMotor::computeStepDelay(uint16_t a_step,
                               uint16_t a_speed,
uint16_t a_accel,
00128
00129
00130
                               uint16_t a_decel)
00131 {
00132
00133
00134
         uint32_t l_accelTime= (1000UL*a_speed/a_accel);
00135
         uint16_t l_decelTime = (1000UL*a_speed/a_decel);
00136
         int16_t l_constSpeedTime=((1000UL*a_step/a_speed)-(l_accelTime/2)-(l_decelTime/2));
00137
         static uint32_t l_time=0;
00138
         static uint32_t l_speed=0;
         static uint64_t l_speed_time_product=0;
static uint64_t l_current_position=0;
00139
00140
00141
00142
00143
00144
00145
00146
00147
00148
          if (l_constSpeedTime<0)</pre>
00149
00150
              1_constSpeedTime=0;
              1_accelTime = static_cast<uint32_t>(1000UL*sqrtf(a_step/a_accel));
00151
00152
              a_speed=l_accelTime*a_accel/1000UL;
00153
              1_decelTime = 1000UL*a_speed/a_decel;
00154
00155
00156
00157
00158
00159
00160
          if (l_time<=l_accelTime)</pre>
00161
00162
              l_speed=a_accel*l_time;
00163
00164
00165
         else if ((1_time>1_accelTime) && (1_time<=(1_accelTime+1_constSpeedTime)))</pre>
00166
00167
               l_speed=1000UL*a_speed;
00168
00169
         else if
00170
        ((1\_time>(1\_accelTime+1\_constSpeedTime)) \& \& (1\_time<=1\_accelTime+1\_constSpeedTime+1\_decelTime))\\
00171
00172
              1_speed= (1000UL*a_speed)-a_decel*(l_time-l_accelTime-l_constSpeedTime);
00173
00174
00175
         }
00176
00177
00178
         1_time=1_time+1;
00179
00180
00181
         1_speed_time_product = l_speed_time_product+l_speed;
00182
00183
          if (l_speed_time_product - l_current_position >= 1000000UL)
00184
         {
00185
              1_current_position=1_current_position+1000000UL;
00186
              return 1;
00187
00188
         else
00189
         {
00190
              stepDelay(1);
00191
              return 0;
00192
00193
00194
00195
00196
00197
00198
00199
00200
00201 void component::StepperMotor::step(const int16 t a step, const uint16 t a speed)
```

```
00202 {
00203
          static int16_t l_stepNumber = 0;
00204
          static uint8_t 1_stepDelay_ms = static_cast<uint8_t>(1000UL/a_speed);
00205
00206
          if (a_step<=0)</pre>
00207
               if (l_stepNumber== -a_step)
00209
00210
                   m_goalReached = 1;
00211
00212
              } else {
                  l_stepNumber++;
00213
00214
                  m_currentPos++;
00215
00216
00217
00218
          } else {
00219
00220
               if (l_stepNumber == -a_step)
00221
               {
00222
                   m_goalReached = 1;
00223
00224
              } else {
                  l_stepNumber--;
00225
00226
                  m_currentPos--;
00227
00228
00229
          }
00230
00231
00232
          if (m_goalReached == 0)
00233
00234
00235
               switch (stepMode)
00236
                   case mode::fullStep:
00237
00238
                       // equivalent to l_stepNumber % 4
00240
00241
                       stepPulse(2*(l_stepNumber & 3)+1);
00242
00243
                   }
00244
00245
                   case mode::halfStep:
00246
                       // equivalent to 1_stepNumber % 8 // 0 1 2 3 4 5 6 7 <->
00247
00248
00249
                       stepPulse(l_stepNumber & 7);
00250
                       break:
00251
00252
              }
00253
00254
               stepDelay(l_stepDelay_ms);
00255
00256
00257 }
00259 void component::StepperMotor::step(const int16_t a_step, const uint16_t a_speed, const float
       a_stepAngle)
00260 {
          static int16_t 1_stepNumber = 0;
static uint8_t 1_stepDelay_ms = static_cast<uint8_t>(1000UL*a_stepAngle/a_speed);
00261
00262
00263
00264
           if (a_step<=0)</pre>
00265
00266
               if (1_stepNumber== -a_step)
00267
00268
                   m_goalReached = 1;
00269
               } else {
00271
                  l_stepNumber++;
00272
                   m_currentPos++;
00273
               }
00274
00275
00276
          } else {
00277
00278
               if (l_stepNumber == -a_step)
00279
00280
                   m_goalReached = 1;
00281
00282
               } else {
00283
                  l_stepNumber--;
00284
                   m_currentPos--;
00285
00286
              }
00287
          }
```


```
00288
00289
00290
          if (m_goalReached == 0)
00291
00292
00293
              switch (stepMode)
00295
                   case mode::fullStep:
00296
00297
                       // equivalent to l_stepNumber \mbox{\%} 4
                       // 1 3 5 7 <->
00298
00299
                       stepPulse(2*(1_stepNumber & 3)+1);
00300
                       break;
00301
00302
00303
                   case mode::halfStep:
00304
00305
                       // equivalent to 1_stepNumber % 8 // 0 1 2 3 4 5 6 7 <->
00306
00307
                       stepPulse(l_stepNumber & 7);
00308
00309
00310
              }
00311
00312
              stepDelay(l_stepDelay_ms);
00313
00314
          }
00315
00316
00317 }
00318
00319
00320 void component::StepperMotor::stepPulse(const uint8_t a_stepPulse)
00321 {
00322
          switch (a_stepPulse) {
00323
00324
            case 0: // 1000
00325
00326
              m_pinCoil1.setHigh();
00327
              m_pinCoil2.setLow();
00328
              m_pinCoil3.setLow();
              m_pinCoil4.setLow();
00329
00330
              break;
00331
00332
                      // 1100
            case 1:
00333
00334
              m_pinCoil1.setHigh();
00335
              m_pinCoil2.setHigh();
              m_pinCoil3.setLow();
00336
              m_pinCoil4.setLow();
00337
00338
              break;
00339
00340
            case 2:
                       //0100
00341
              m_pinCoil1.setLow();
00342
              m_pinCoil2.setHigh();
m_pinCoil3.setLow();
00343
00345
              m_pinCoil4.setLow();
00346
00347
            case 3:
                      //0110
00348
00349
00350
              m_pinCoil1.setLow();
00351
              m_pinCoil2.setHigh();
              m_pinCoil3.setHigh();
00352
00353
              m_pinCoil4.setLow();
00354
              break;
00355
00356
            case 4:
                       //0010
00358
              m_pinCoil1.setLow();
00359
              m_pinCoil2.setLow();
00360
              m_pinCoil3.setHigh();
00361
              m_pinCoil4.setLow();
00362
              break;
00363
00364
            case 5:
                        //0011
00365
              m_pinCoil1.setLow();
00366
00367
              m_pinCoil2.setLow();
              m_pinCoil3.setHigh();
00368
00369
              m_pinCoil4.setHigh();
00370
              break;
00371
00372
            case 6:
                      //0001
00373
00374
              m_pinCoil1.setLow();
```

```
m_pinCoil2.setLow();
00376
              m_pinCoil3.setLow();
00377
              m_pinCoil4.setHigh();
00378
              break;
00379
00380
            case 7:
                      //1001
00381
00382
              m_pinCoil1.setHigh();
00383
              m_pinCoil2.setLow();
              m_pinCoil3.setLow();
00384
00385
              m_pinCoil4.setHigh();
00386
              break;
00387
00388
00389
00390
00392
00394
00395 void component::StepperMotor::stepDelay(uint8_t a_stepDelay)
00396 {
00397
          while (a_stepDelay--)
00398
00399
              _delay_ms(1);
00400
00401 }
00402
00403 uint8_t component::StepperMotor::goalReached()
00404 {
00405
          return m_goalReached;
00406
00407 }
```

# 10.78 StepperMotor.h File Reference


```
#include "ha_base.h"
#include "Pin.h"
```

Include dependency graph for StepperMotor.h:

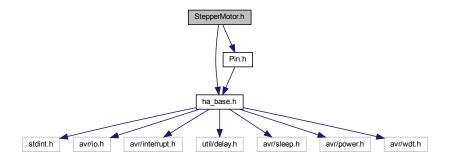

10.79 StepperMotor.h 305

This graph shows which files directly or indirectly include this file:

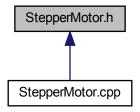

#### **Classes**

· class component::StepperMotor

#### **Namespaces**

· component

AVR chip external components.

#### **Enumerations**

• enum component::mode : uint8\_t { component::mode::fullStep =0, component::mode::halfStep }

## 10.79 StepperMotor.h


```
00001
00062 #ifndef STEPPERMOTOR_H
00063 #define STEPPERMOTOR_H
00064 #include "ha_base.h"
00065 #include "Pin.h"
00066
00067 namespace component
00068 {
00069
00070 enum class mode : uint8_t {
00071 fullStep=0,
00072 halfStep,
00073 };
00074
00075 class StepperMotor
00076 {
00077 public:
00078
00079
          StepperMotor(const mode &ar_mode,
            const io::Pin &ar_pinCoil1,
08000
00081
                         const io::Pin &ar_pinCoil2,
00082
                         const io::Pin &ar_pinCoil3,
00083
                         const io::Pin &ar_pinCoil4);
00084
00085
          ~StepperMotor();
00086
00090
          void step(const int16_t a_step,
00091
                      const uint16_t a_speed);
00092
00093
          void step(const int16_t a_step,
00094
                     const uint16_t a_speed,
```

```
00095
                       const float a_stepAngle);
00096
00097
           void step(const int16_t a_step,
00098
                       const uint16_t a_speed,
00099
                       const uint16_t a_accel,
const uint16_t a_decel);
00100
00101
00102
           void stepPulse(const uint8_t a_stepPulse);
00103
00104
           void stepDelay(uint8_t a_stepDelay);
00105
00106
           uint8_t goalReached();
00107
00108
           void setCurrentPos(uint16_t a_currentPos);
00109
00110
           uint16_t currentPos();
00111
00112
00113
           uint8_t computeStepDelay(uint16_t a_step,
00114
                                      const uint16_t a_speed,
00115
                                      const uint16_t a_accel,
00116
                                      const uint16_t a_decel);
00117
           uint16_t m_accelTime;
uint16_t m_decelTime;
uint16_t m_constSpeedTime;
00118
00119
00120
00124 private:
00125
00126 //
00127 //
              uint8_t computeStepDelay(int16_t a_step,
                                        const uint16_t a_speed,
const uint16_t a_accel,
00128 //
00129 //
                                        const uint16_t a_decel);
00130
00131
00132
           io::Pin m_pinCoil1;
           io::Pin m_pinCoil2;
io::Pin m_pinCoil3;
00133
00134
00135
           io::Pin m_pinCoil4;
00137
           mode stepMode;
00138
           uint8_t m_goalReached;
00139
           uint16_t m_currentPos;
00144 };
00145
00146 }
00147 #endif // STEPPERMOTOR_H
```


### 10.80 TimerCounter.h File Reference

Header file of the TimerCounter class.

```
#include "ha_base.h"
Include dependency graph for TimerCounter.h:
```

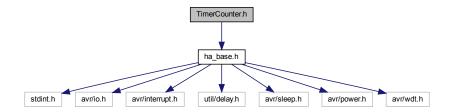

This graph shows which files directly or indirectly include this file:

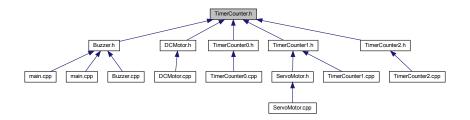

#### Classes

class core::TimerCounter

#### **Namespaces**

core

AVR chip internal core components.

#### **Enumerations**

- enum core::channel : uint8\_t { core::channel::A =0, core::channel::B }
- enum core::compareOutputMode : uint8\_t { core::compareOutputMode::normal =0, core::compareOutputMode::toggle, core::compareOutputMode::clear, core::compareOutputMode::set }

```
    enum core::operationMode : uint8_t {
        core::operationMode::normal =0, core::operationMode::PWM_PC, core::operationMode::PWM_PC_8bit,
        core::operationMode::PWM_PC_9bit,
        core::operationMode::PWM_PC_10bit, core::operationMode::PWM_PFC_ICR, core::operationMode::PWM_PC_OCR,
        core::operationMode::PWM_PC_ICR,
        core::operationMode::PWM_PC_OCR, core::operationMode::fast_PWM_8bit,
        core::operationMode::fast_PWM_9bit,
        core::operationMode::fast_PWM_10bit, core::operationMode::fast_PWM_ICR, core::operationMode::fast_PWM_OCR,
        core::operationMode::CTC_OCR,
        core::operationMode::CTC_ICR, core::operationMode::interrupt =1, core::operationMode::reset, core::operationMode::interrupt }
}
```

enum core::clockSource : uint16\_t {
 core::clockSource::noClock = 0, core::clockSource::PS\_1, core::clockSource::PS\_8, core::clockSource::PS\_32,
 core::clockSource::PS\_64, core::clockSource::PS\_128, core::clockSource::PS\_256, core::clockSource::PS\_1024,
 core::clockSource::extern\_Clock\_T0\_Falling\_Edge, core::clockSource::extern\_Clock\_T0\_Rising\_Edge }

#### 10.80.1 Detailed Description

Header file of the TimerCounter class.

Basic class for abstraction of the TimerCounter peripherals.

```
Author
     Farid Oubbati ( https://github.com/faroub)
Date
     March 2020
Basic class for abstraction of the TimerCounter peripherals.
Usage example (Reaction Timer): #include "TimerCounter.h" #include "USARTO.h" #include "PushButton.h" #in-
clude "Led.h"
void randomDelay(void); void printWord(uint16_t word);
instantiate the Counter object extern core::TimerCounter core::TimerCounter &myCounter = core::TimerCounter ←
::getInstanceTimerCounter0();
instantiate the USART0 object extern io::USART0 io::USART0 &myUSART0 = io::USART0::getInstance();
#define BUFFER SIZE 1 #define LED NUMBER 0 #define PUSHBUTTON NUMBER 2
int main(void) {
Init uint16_t timerValue;
char I_receiverBuffer[BUFFER_SIZE];
myCounter.selectClockSource(core::timerCounter::timerCounter1, core::clockSource::PS_1024);
/ instantiate a Led object component::Led Led(io::Pin(LED NUMBER,io::PortB));
instantiate a Led object component::PushButton PushButton(io::Pin(PUSHBUTTON_NUMBER,io::PortD));
ready to send flag uint8_t I_ready2Send = 1;
if (myUSART0.ready2Send()) { myUSART0.sendString("Reaction Timer:\r\n"); }
wait to send next string while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send()) { myUSART0.sendString("------\r\n"); }
wait to send next string while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send()) { myUSART0.sendString("Press any key to start.\r\n"); }
Mainloop while (1) {
myUSART0.receiveFrame(reinterpret_cast<uint8_t*>(I_receiverBuffer),BUFFER_SIZE);
wait for a key press while (!myUSART0.getNumberBytesReceived()) {
}
reset number of bytes after extracting the received data myUSART0.resetNumberBytesReceived();
wait to send next string while (!myUSART0.ready2Send()){};
```

```
if (myUSART0.ready2Send()) { myUSART0.sendString("\r\nGet ready..."); }
randomDelay();
wait to send next string while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send()) { myUSART0.sendString("\r\nGo!\r\n"); }
Led.on();
myCounter.setCounter(core::timerCounter::timerCounter1,0);
if (PushButton.isPressed()) { wait to send next string while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send()) { myUSART0.sendString("You're only cheating yourself.\r\n"); }
} else {
wait for a button press while (!PushButton.isPressed()) {
} get counter value myCounter.getCounter(core::timerCounter::timerCounter1, &timerValue); bit shift divide by 16 =
2<sup>4</sup> to convert from micro to millseconds timerValue = timerValue >> 4; print response time printWord(timerValue);
Led.off();
while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send()) { myUSART0.sendString("\r\nPress any key to try again.\r\n"); }
} return 0; }
void randomDelay(void) {
Waits for a "random" delay from 1 - 3.5 sec Requires timer 1 initialized and running It's not really random, but very
hard to control –like coin-flipping.
uint16_t counter;
_delay_ms(1000);
myCounter.getCounter(core::timerCounter::timerCounter1, &counter);
uint8_t randomTime = static_cast<uint8_t>(counter);
type-casting the 16-bit TCNT1 as an 8-bit number keeps only the 8 least-significant (fastest-changing) bits
while (--randomTime) {
_delay_ms(10);
void printWord(uint16_t word) {
while (!myUSARTO.ready2Send()){};
if (myUSART0.ready2Send())
    myUSART0.sendByte('0' + (word / 10000));
while (!myUSART0.ready2Send()){};
```

```
if (myUSART0.ready2Send())
    myUSARTO.sendByte('0' + ((word / 1000) % 10));
while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send())
    myUSARTO.sendByte('0' + ((word / 100) % 10));
while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send())
    myUSART0.sendByte('0' + ((word / 10) % 10));
while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send())
    myUSART0.sendByte('0' + (word % 10));
}
void printWord(uint16_t word) {
char timerValue = '0' + (word / 10000);
while (!myUSARTO.ready2Send()){};
if (myUSART0.ready2Send())
   myUSARTO.sendFrame(reinterpret_cast<uint8_t*>(&timerValue),BUFFER_SIZE);
timerValue = '0' + ((word / 1000) % 10);
while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send())
   myUSARTO.sendFrame(reinterpret_cast<uint8_t*>(&timerValue),BUFFER_SIZE);
timerValue = '0' + ((word / 100) % 10);
while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send())
   myUSART0.sendFrame(reinterpret_cast<uint8_t*>(&timerValue),BUFFER_SIZE);
timerValue = '0' + ((word / 10) % 10);
while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send())
   myUSARTO.sendFrame(reinterpret_cast<uint8_t*>(&timerValue),BUFFER_SIZE);
```

```
timerValue = '0' + (word % 10);
while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send())
   myUSARTO.sendFrame(reinterpret_cast<uint8_t*>(&timerValue),BUFFER_SIZE);
}
Usage example (PWM):
#include "Led.h" #include "USART0.h" #include "TimerCounter1.h" #include "TimerCounter2.h"
uint8_t getNumber(const char *ap_receive);
#define LED_1 1 #define LED_2 2 #define LED_3 3 #define BUFFER_SIZE 4
int main(void) {
Init receiver buffer char I receiverBuffer[BUFFER SIZE];
instantiate Led objects component::Led Led1(io::Pin(LED 1,io::PortB)); component::Led Led2(io::Pin(LED 2,io::←
PortB)); component::Led Led3(io::Pin(LED 3,io::PortB));
instantiate USART0 object io::USART0 &myUSART0 = io::USART0::getInstance();
instantiate Timer1 object core::TimerCounter1 &myTimerCounter1 = core::TimerCounter1::getInstance(); my←
TimerCounter1.selectOperationMode(core::operationMode::Fast_PWM_8bit); myTimerCounter1.selectCompare ←
                                                                myTimerCounter1.selectCompareOutput←
OutputMode(core::channel::A,core::compareOutputMode::Clear);
Mode(core::channel::B,core::compareOutputMode::Clear); instantiate Timer2 object core::TimerCounter2 &my←
TimerCounter2 = core::TimerCounter2::getInstance(); myTimerCounter2.selectOperationMode(core::operation ←
Mode::Fast PWM); myTimerCounter2.selectCompareOutputMode(core::channel::A,core::compareOutputMode ←
::Clear);
if (myUSART0.ready2Send()) { myUSART0.sendString("-- LED PWM Demo --\r\n"); } wait to send next string while
(!myUSART0.ready2Send()){}
myTimerCounter1.start(core::clockSource::PS_64); myTimerCounter2.start(core::clockSource::PS_64);
---- Event loop ---- // while (1) {
if (myUSART0.ready2Send())
    myUSARTO.sendString("\r\nEnter (0-255) for PWM duty cycle: ");
myUSARTO.receiveFrame(reinterpret_cast<uint8_t*>(l_receiverBuffer),BUFFER_SIZE);
wait for a key press while (myUSART0.getNumberBytesReceived()<4){}
reset number of bytes after extracting the received data myUSART0.resetNumberBytesReceived();
send back the received character if (myUSART0.ready2Send()) { myUSART0.sendFrame(reinterpret_cast<uint8←
t*>(I receiverBuffer),BUFFER SIZE); }
while (!myUSART0.ready2Send()){} myTimerCounter2.setOutputCompareRegister(core::channel::A,myTimer ←
Counter1.getOutputCompareRegister(core::channel::B)); myTimerCounter1.setOutputCompareRegister(core::channel::B,my←
TimerCounter1.getOutputCompareRegister(core::channel::A)); myTimerCounter1.setOutputCompareRegister(core ←
::channel::A,getNumber(I_receiverBuffer));
```

```
return 0;
}
uint8_t getNumber(const char *ap_receive) { Gets a numerical 0-255 from the serial port. Converts from string to
number. char hundreds = '0'; char tens = '0'; char ones = '0'; char thisChar = '0'; do { hundreds = tens; tens = ones;
ones = thisChar; thisChar = *ap_receive; ap_receive++;
} while (*ap_receive != '\r'); return (100 * (hundreds - '0') + 10 * (tens - '0') + ones - '0'); }
Usage example (PWM on Any Pin):
#include "TimerCounter0.h" #include "Led.h"
#define LED 00 #define LED 11 #define LED 22 #define LED 33
instantiate Timer0 object extern core::TimerCounter0 core::TimerCounter0 &myTimerCounter0 = core::TimerCounter0::getInstance();
instantiate Led objects extern component::Led Led0; component::Led Led0(io::Pin(LED_0,io::PortB)); ex-
tern component::Led Led1; component::Led Led1(io::Pin(LED_1,io::PortB)); extern component::Led Led2;
component::Led Led2(io::Pin(LED 2,io::PortB)); extern component::Led Led3; component::Led Led3(io::Pin(←
LED_3,io::PortB));
#define DELAYTIME 3
volatile uint8_t l_brightnessA; volatile uint8_t l_brightnessB;
int main(void) {
Init uint8 ti;
sei();
myTimerCounter0.enableOutputCompareMatchInterrupt(core::channel::A,1); myTimerCounter0.enableOutput ←
CompareMatchInterrupt(core::channel::B,1); myTimerCounter0.enableOverflowInterrupt(1); myTimerCounter0.←
start(core::clockSource::PS_1024);
---- Event loop ---- // while (1) {
for (i = 0; i < 255; i++) {
    _delay_ms(DELAYTIME);
    l_brightnessA = i;
    l\_brightnessB = 255 - i;
for (i = 254; i > 0; i--) {
    \_delay\_ms(DELAYTIME);
    l_brightnessA = i;
    l_brightnessB = 255 - i;
}
} return 0; }
```

```
void core::TimerCounter0::overflowServiceRoutine()
    Led0.on();
    Led1.on();
    Led2.on();
    Led3.on();
    myTimerCounter0.setOutputCompareRegister(core::channel::A,l_brightnessA);
    \verb|myTimerCounter0.setOutputCompareRegister(core::channel::B,l\_brightnessB)|;
void core::TimerCounter0::outputCompareMatchAServiceRoutine()
    Led0.off();
    Led1.off();
    Led2.on();
    Led3.on();
void core::TimerCounter0::outputCompareMatchBServiceRoutine()
    Led0.on();
    Led1.on();
    Led2.off();
    Led3.off();
Author
     Farid Oubbati ( https://github.com/faroub)
Date
     March 2020
Basic class for abstraction of the TimerCounter peripherals.
Usage example (Reaction Timer): #include "TimerCounter.h" #include "USARTO.h" #include "PushButton.h" #in-
clude "Led.h"
void randomDelay(void); void printWord(uint16_t word);
instantiate the Counter object extern core::TimerCounter core::TimerCounter &myCounter = core::TimerCounter ←
::getInstanceTimerCounter0();
instantiate the USART0 object extern io::USART0 io::USART0 &myUSART0 = io::USART0::getInstance();
#define BUFFER_SIZE 1 #define LED_NUMBER 0 #define PUSHBUTTON_NUMBER 2
int main(void) {
Init uint16_t timerValue;
char I_receiverBuffer[BUFFER_SIZE];
myCounter.selectClockSource(core::timerCounter::timerCounter1, core::clockSource::PS_1024);
```

```
/ instantiate a Led object component::Led Led(io::Pin(LED_NUMBER,io::PortB));
instantiate a Led object component::PushButton PushButton(io::Pin(PUSHBUTTON_NUMBER,io::PortD));
ready to send flag uint8_t l_ready2Send = 1;
if (myUSART0.ready2Send()) { myUSART0.sendString("Reaction Timer:\r\n"); }
wait to send next string while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send()) { myUSART0.sendString("-----\r\n"); }
wait to send next string while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send()) { myUSART0.sendString("Press any key to start.\r\n"); }
Mainloop while (1) {
myUSART0.receiveFrame(reinterpret cast<uint8 t*>(I receiverBuffer),BUFFER SIZE);
wait for a key press while (!myUSART0.getNumberBytesReceived()) {
}
reset number of bytes after extracting the received data myUSART0.resetNumberBytesReceived();
wait to send next string while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send()) { myUSART0.sendString("\r\nGet ready..."); }
randomDelay();
wait to send next string while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send()) { myUSART0.sendString("\r\nGo!\r\n"); }
Led.on();
myCounter.setCounter(core::timerCounter::timerCounter1,0);
if (PushButton.isPressed()) { wait to send next string while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send()) { myUSART0.sendString("You're only cheating yourself.\r\n"); }
} else {
wait for a button press while (!PushButton.isPressed()) {
} get counter value myCounter.getCounter(core::timerCounter::timerCounter1, &timerValue); bit shift divide by 16 =
2<sup>4</sup> to convert from micro to millseconds timerValue = timerValue >> 4; print response time printWord(timerValue);
}
Led.off();
while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send()) { myUSART0.sendString("\r\nPress any key to try again.\r\n"); }
} return 0; }
void randomDelay(void) {
Waits for a "random" delay from 1 - 3.5 sec Requires timer 1 initialized and running It's not really random, but very
hard to control -like coin-flipping.
```

```
uint16_t counter;
_delay_ms(1000);

myCounter.getCounter(core::timerCounter::timerCounter1, &counter);
uint8_t randomTime = static_cast<uint8_t>(counter);
```

type-casting the 16-bit TCNT1 as an 8-bit number keeps only the 8 least-significant (fastest-changing) bits

```
while (--randomTime) {
_delay_ms(10);
void printWord(uint16_t word) {
while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send())
    myUSART0.sendByte('0' + (word / 10000));
}
while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send())
    myUSARTO.sendByte('0' + ((word / 1000) % 10));
while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send())
    myUSARTO.sendByte('0' + ((word / 100) % 10));
while (!myUSARTO.ready2Send()){};
if (myUSART0.ready2Send())
    myUSART0.sendByte('0' + ((word / 10) % 10));
while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send())
    myUSARTO.sendByte('0' + (word % 10));
}
void printWord(uint16_t word) {
char timerValue = '0' + (word / 10000);
while (!myUSARTO.ready2Send()){};
if (myUSART0.ready2Send())
   \verb|myUSART0.sendFrame(reinterpret_cast<uint8_t*>(&timerValue), \verb|BUFFER_SIZE|);|
timerValue = '0' + ((word / 1000) % 10);
while (!myUSART0.ready2Send()){};
```

```
if (myUSART0.ready2Send())
   myUSART0.sendFrame(reinterpret_cast<uint8_t*>(&timerValue),BUFFER_SIZE);
timerValue = '0' + ((word / 100) % 10);
while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send())
   myUSART0.sendFrame(reinterpret_cast<uint8_t*>(&timerValue),BUFFER_SIZE);
timerValue = '0' + ((word / 10) % 10);
while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send())
   myUSARTO.sendFrame(reinterpret_cast<uint8_t*>(&timerValue),BUFFER_SIZE);
timerValue = '0' + (word % 10);
while (!myUSART0.ready2Send()){};
if (myUSART0.ready2Send())
   myUSARTO.sendFrame(reinterpret_cast<uint8_t*>(&timerValue),BUFFER_SIZE);
}
}
Usage example (Reaction Timer):
Author
     Farid Oubbati ( https://github.com/faroub)
Date
```

Definition in file TimerCounter.h.

March 2020

### 10.81 TimerCounter.h

```
00001
00039
00461 #ifndef TIMER_COUNTER_H
00462 #define TIMER_COUNTER_H
00463 #include "ha_base.h"
00464
00465
00466
00467 namespace core
00468 {
00470 enum class channel : uint8_t {
```


10.81 TimerCounter.h 317

```
00472
          В,
00473 };
00474
00475
00476 enum class compareOutputMode : uint8_t {
00477
          normal=0.
00478
          toggle,
00479
          clear,
00480
          set,
00481 };
00482
00483
00484
00485 enum class operationMode : uint8_t {
00486
          normal=0,
00487
          PWM_PC,
          PWM_PC_8bit,
00488
          PWM_PC_9bit,
00489
          PWM_PC_10bit,
00490
00491
          PWM_PFC_ICR,
00492
          PWM_PFC_OCR,
          PWM_PC_ICR,
PWM_PC_OCR,
00493
00494
          fast_PWM,
00495
00496
          fast_PWM_8bit,
00497
          fast_PWM_9bit,
00498
           fast_PWM_10bit,
00499
          fast_PWM_ICR,
00500
          fast_PWM_OCR
          CTC_OCR,
00501
00502
          CTC_ICR,
00503 };
00504 enum class clockSource : uint16_t {
00505
           noClock=0,
00506
           PS_1,
00507
           PS_8,
00508
           PS_32,
00509
           PS_64,
00510
           PS_128,
00511
           PS_256,
00512
           PS_1024
           extern_Clock_T0_Falling_Edge, extern_Clock_T0_Rising_Edge,
00513
00514
00515 };
00516
00517 class TimerCounter
00518 {
00519
00520 public:
00521
00522
00523
          virtual void selectOperationMode(const operationMode &ar_operationMode) = 0;
00524
00525
          virtual void start() = 0;
00526
00527
          virtual\ void\ stop() = 0;
00528
00529
          virtual void selectClockSource(const clockSource &ar_clockSource) = 0;
00530
00531
          virtual void selectCompareOutputMode(const channel &ar_channel, const compareOutputMode
       &ar_compareOutputMode) = 0;
00532
00533
          virtual void setCounter(const uint16_t &ar_dataBuffer) = 0;
00534
00535
          virtual uint16_t getCounter() const = 0;
00536
00537
          virtual void setOutputCompareRegister(const channel &ar_channel, const uint16_t &ar_dataBuffer) =
       0;
00538
00539
          virtual uint16_t getOutputCompareRegister(const channel &ar_channel) const = 0;
00540
00541
          virtual void enableOutputCompareMatchInterrupt(const channel &ar_channel, const uint8_t a_enable)
       = 0;
00542
00543
          virtual void enableOverflowInterrupt(const uint8 t a enable) = 0;
00544
00545
          virtual uint16_t getClockPrescaler() = 0;
00546
00547 protected:
00548
00549 private:
00550
00551
00552
00553
00554 };
00555
```

```
00556 }
00557
00558
00559 #endif
```

### 10.82 TimerCounter0.cpp File Reference

```
#include "TimerCounter0.h"
#include "MCU.h"
Include dependency graph for TimerCounter0.cpp:
```

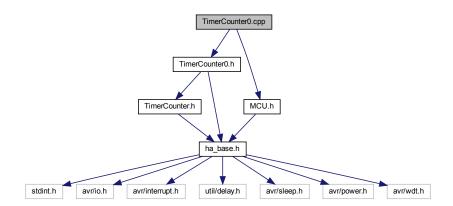

## 10.83 TimerCounter0.cpp

```
00001 #include "TimerCounterO.h"
00002 #include "MCU.h"
00003
00004
00005 core::TimerCounter0& core::TimerCounter0::getInstance(const channel &ar_channel,
00006
                                                                const operationMode &ar_operationMode,
00007
                                                                const clockSource &ar_clockSource,
00008
                                                                 const compareOutputMode &ar_compareOutputMode)
00009 {
00010
          static TimerCounter0 l_instance(ar_channel,
00011
                                             ar_operationMode,
00012
                                             ar_clockSource,
00013
                                             ar_compareOutputMode);
00014
00015
          return l_instance;
00016
00017
00019
00020 core::TimerCounter0::TimerCounter0(const channel &ar_channel,
00021
                                            const operationMode &ar_operationMode,
                                            const clockSource &ar_clockSource,
const compareOutputMode& ar_compareOutputMode)
00022
00023
00024 {
00025
          core::MCU::enableTimerCounter0(1);
00026
          stop();
00027
          selectOperationMode(ar_operationMode);
00028
          selectClockSource(ar_clockSource);
00029
          \verb|selectCompareOutputMode| (ar\_channel, ar\_compareOutputMode)|;
00030
00031
00032
00033 }
00034 core::TimerCounter0::~TimerCounter0()
00035 {
00036
00037 }
```

```
00038
00039 void core::TimerCounter0::selectClockSource(const clockSource &ar_clockSource)
00040 {
00041
          switch (ar_clockSource)
00042
00043
              case core::clockSource::noClock:
00044
              {
00045
                  m_clockPrescaler=0;
                  m_clockSource=0;
00046
00047
                  break;
00048
              }
00049
              case core::clockSource::PS 1:
00050
              {
00051
                  m_clockPrescaler=1;
00052
                  m_clockSource=1;
00053
                  break;
00054
00055
              case core::clockSource::PS 8:
00056
00057
                  m_clockPrescaler=8;
00058
                  m_clockSource=2;
00059
                  break;
00060
              case core::clockSource::PS_64:
00061
00062
00063
                  m_clockPrescaler=64;
00064
                  m_clockSource=3;
00065
                  break;
00066
              case core::clockSource::PS_256:
00067
00068
00069
                  m_clockPrescaler=256;
00070
                  m_clockSource=4;
00071
                  break;
00072
00073
              case core::clockSource::PS_1024:
00074
00075
                  m_clockPrescaler=1024;
00076
                  m_clockSource=5;
00077
                  break;
00078
              case core::clockSource::extern_Clock_T0_Falling_Edge:
00079
00080
00081
                  m_clockPrescaler=0;
00082
                  m_clockSource=6;
00083
00084
00085
              case core::clockSource::extern_Clock_T0_Rising_Edge:
00086
              {
00087
                  m_clockPrescaler=0;
00088
                  m_clockSource=7;
00089
                  break;
00090
              }
00091
          }
00092
00093
00094 }
00095
00096 void core::TimerCounter0::selectOperationMode(const operationMode &ar_operationMode)
00097 {
00098
          switch (ar_operationMode)
00099
00100
              case core::operationMode::normal:
00101
00102
                  TIMERO_SELECT_OPERATION_MODE(0);
00103
00104
00105
              case core::operationMode::PWM PC:
00106
              {
                  TIMERO_SELECT_OPERATION_MODE(1);
00107
00108
                  break;
00109
00110
              case core::operationMode::CTC_OCR:
00111
                  TIMERO_SELECT_OPERATION_MODE(2);
00112
00113
                  break;
00114
00115
              case core::operationMode::fast_PWM:
00116
              {
                  TIMERO_SELECT_OPERATION_MODE(3);
00117
00118
                  break;
00119
00120
              case core::operationMode::PWM_PC_OCR:
00121
00122
                  TIMERO_SELECT_OPERATION_MODE(5);
00123
                  break;
00124
              }
```


```
case core::operationMode::fast_PWM_OCR:
00126
00127
                  TIMERO_SELECT_OPERATION_MODE(7);
00128
                  break;
00129
00130
00131
          }
00132
00133 }
00134
00135
00136 void core::TimerCounter0::start()
00137 {
00138
          TIMERO_SELECT_CLOCK_SOURCE(m_clockSource);
00139 }
00140
00141 uint16 t core::TimerCounter0::getClockPrescaler()
00142 {
00143
          return m_clockPrescaler;
00144 }
00145
00146 void core::TimerCounter0::stop()
00147 {
          TIMERO_STOP;
00148
00149 }
00150
00151
00152 void core::TimerCounter0::selectCompareOutputMode(const channel &ar_channel, const compareOutputMode
      &ar_compareOutputMode)
00153 {
00154
          switch (ar channel)
00155
00156
              case core::channel::A:
00157
              {
00158
                  TIMERO_SELECT_COM_CHANNEL_A(static_cast<uint8_t>(ar_compareOutputMode));
00159
                  break;
00160
              }
00161
              case core::channel::B:
00162
              {
00163
                  TIMERO_SELECT_COM_CHANNEL_B(static_cast<uint8_t>(ar_compareOutputMode));
00164
                  break;
00165
              }
00166
          }
00167 }
00168
00169
00170
00171 void core::TimerCounter0::setCounter(const uint16_t &ar_dataBuffer)
00172 {
00173
          TCNT0 = static_cast<uint8_t>(ar_dataBuffer);
00174 }
00175
00176 uint16_t core::TimerCounter0::getCounter() const
00177 {
00178
          return TCNT0:
00179 }
00180
00181 void core::TimerCounter0::setOutputCompareRegister(const channel &ar_channel, const uint16_t
       &ar_dataBuffer)
00182 {
          switch (ar_channel)
00183
00184
00185
              case core::channel::A:
00186
00187
                  OCROA = static_cast<uint8_t>(ar_dataBuffer);
00188
00189
00190
              case core::channel::B:
00191
              {
00192
                  OCROB = static_cast<uint8_t>(ar_dataBuffer);
00193
                  break;
00194
              }
00195
00196
          }
00197 }
00198
00199
00200
00201 uint16_t core::TimerCounter0::getOutputCompareRegister(const channel &ar_channel) const
00202 {
00203
          switch (ar_channel)
00204
          {
00205
              case core::channel::A:
00206
00207
                  return OCROA;
00208
00209
              case core::channel::B:
```

```
{
00211
                  return OCROB;
00212
              }
00213
00214 }
00215
00216 void core::TimerCounter0::enableOutputCompareMatchInterrupt(const channel &ar_channel, const uint8_t
       a_enable)
00217 {
00218
          switch (ar_channel)
00219
00220
              case core::channel::A:
00221
00222
                  if (a_enable) {
00223
00224
                     TIMERO_ENABLE_COM_CHANNEL_A_INTERRUPT;
00225
00226
                 } else {
00227
00228
                      TIMERO_DISABLE_COM_CHANNEL_A_INTERRUPT;
00229
00230
                  break;
00231
00232
              case core::channel::B:
00233
00234
                  if (a_enable) {
00235
00236
                     TIMERO_ENABLE_COM_CHANNEL_B_INTERRUPT;
00237
00238
                  } else {
00239
00240
                      TIMERO_DISABLE_COM_CHANNEL_B_INTERRUPT;
00241
00242
00243
                 break;
             }
00244
00245
         }
00246
00247 }
00248
00249
00250
00251 void core::TimerCounter0::enableOverflowInterrupt(const uint8 t a enable)
00252 {
00253
00254
          if (a_enable) {
00255
00256
             TIMERO_ENABLE_OVERFLOW_INTERRUPT;
00257
00258
         } else {
00259
00260
             TIMERO_DISABLE_OVERFLOW_INTERRUPT;
00261
00262
00263 }
```


### 10.84 TimerCounter0.h File Reference

```
#include "TimerCounter.h"
#include "ha_base.h"
```

Include dependency graph for TimerCounter0.h:

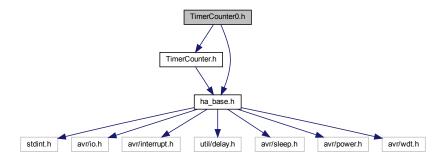

This graph shows which files directly or indirectly include this file:

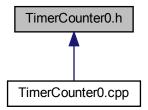

#### **Classes**

• class core::TimerCounter0

### **Namespaces**

core

AVR chip internal core components.

### 10.85 TimerCounter0.h


```
00001
00039
00268 #ifndef TIMER_COUNTERO_H
00269 #define TIMER_COUNTERO_H
00270 #include "TimerCounter.h"
00271 #include "ha_base.h"
00272
00273
00274
00275 namespace core
```

```
00278
00279 class TimerCounter0 : public TimerCounter
00280 {
00281
00282 public:
00283
          static TimerCounter0& getInstance(const channel &ar_channel = channel::A,
00285
                                             const operationMode &ar_operationMode = operationMode::normal,
00286
                                             const clockSource &ar_clockSource= clockSource::noClock,
00287
                                             const compareOutputMode& ar_compareOutputMode =
       compareOutputMode::normal);
00288
00289
          void selectOperationMode(const operationMode &ar_operationMode) override;
00290
00291
          void start() override;
00292
00293
          void stop() override;
00294
00295
          void selectClockSource(const clockSource &ar_clockSource) override;
00296
00297
          void selectCompareOutputMode(const channel &ar_channel, const compareOutputMode
       &ar_compareOutputMode) override;
00298
00299
          void setCounter(const uint16 t &ar dataBuffer) override;
00300
00301
          uint16_t getCounter() const override;
00302
00303
          void setOutputCompareRegister(const channel &ar_channel, const uint16_t &ar_dataBuffer) override;
00304
00305
          uint16_t getOutputCompareRegister(const channel &ar_channel) const override;
00306
00307
          void enableOutputCompareMatchInterrupt(const channel &ar_channel, const uint8_t a_enable)
00308
00309
          void enableOverflowInterrupt(const uint8_t a_enable) override;
00310
00311
          uint16 t getClockPrescaler() override;
00312
00313
          static void outputCompareMatchAServiceRoutine() __asm__(STR(TIMERO_COM_CHANNEL_A_INTERRUPT))
       __attribute__((__signal__, __used__, __externally_visible__));
00314
00315
          static void outputCompareMatchBServiceRoutine() __asm__(STR(TIMERO_COM_CHANNEL_B_INTERRUPT))
                                              _externally_visible )):
        _attribute___((__signal_
                                    used ,
00316
          static void overflowServiceRoutine() __asm__(STR(TIMERO_OVERFLOW_INTERRUPT))
00317
       __attribute__((__signal__, __used__, __externally_visible__));
00318
00319
00320
00321 protected:
00322
00323 private:
00324
00325
          TimerCounterO(const channel &ar_channel,
00326
                        const operationMode &ar_operationMode,
00327
                        const clockSource &ar_clockSource,
00328
                        const compareOutputMode& ar_compareOutputMode);
00329
00330
          ~TimerCounter0();
00331
          TimerCounter0(const TimerCounter0&):
00334
00335
00338
          const TimerCounter0& operator=(const TimerCounter0&);
00339
00340
          uint16_t m_clockPrescaler;
00341
00342
          uint8_t m_clockSource;
00343
00344
00345
00346 };
00347
00348
00349
00350
00351 #endif
```

### 10.86 TimerCounter1.cpp File Reference

```
#include "TimerCounter1.h"
#include "MCU.h"
```

Include dependency graph for TimerCounter1.cpp:

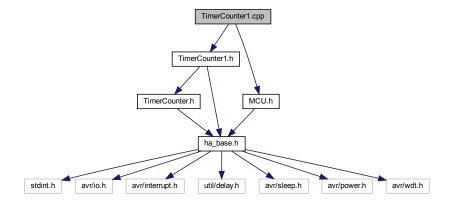

## 10.87 TimerCounter1.cpp

```
00001 #include "TimerCounter1.h"
00002 #include "MCU.h"
00003
00004
00005 core::TimerCounter1& core::TimerCounter1::getInstance(const channel &ar_channel,
00006
                                                              const operationMode &ar_operationMode,
00007
                                                              const clockSource &ar clockSource,
00008
                                                              const compareOutputMode& ar_compareOutputMode)
00009 {
00010
          static TimerCounter1 l_instance(ar_channel,
00011
                                           ar_operationMode,
00012
                                           ar_clockSource,
00013
                                           ar_compareOutputMode);
00014
00015
          return l_instance;
00016
00017
00018 }
00019
00020 core::TimerCounter1::TimerCounter1(const channel &ar_channel,
00021
                                          const operationMode &ar_operationMode,
00022
                                          const clockSource &ar_clockSource,
00023
                                          const compareOutputMode& ar_compareOutputMode)
00024 {
00025
          core::MCU::enableTimerCounter1(1);
00026
          stop();
00027
          selectOperationMode(ar_operationMode);
00028
          selectClockSource(ar_clockSource);
00029
          selectCompareOutputMode(ar_channel,ar_compareOutputMode);
00030
00031
00032 }
00033 core::TimerCounter1::~TimerCounter1()
00035
00036 }
00037
00038 void core::TimerCounter1::selectClockSource(const clockSource &ar_clockSource)
00039 {
00040
          switch (ar clockSource)
00041
00042
              case core::clockSource::noClock:
00043
                  m clockPrescaler=0;
00044
00045
                  m_clockSource=0;
00046
                  break;
00047
00048
              case core::clockSource::PS_1:
00049
00050
                  m_clockPrescaler=1;
00051
                  m clockSource=1:
00052
                  break;
00053
```

```
00054
              case core::clockSource::PS_8:
00055
00056
                  m_clockPrescaler=8;
00057
                  m_clockSource=2;
00058
                  break;
00059
              case core::clockSource::PS_64:
00060
00061
00062
                  m_clockPrescaler=64;
00063
                  m_clockSource=3;
00064
                  break:
00065
00066
              case core::clockSource::PS_256:
00067
00068
                  m_clockPrescaler=256;
                  m_clockSource=4;
00069
00070
                  break;
00071
00072
              case core::clockSource::PS_1024:
00073
              {
00074
                  m_clockPrescaler=1024;
00075
                  m_clockSource=5;
00076
                  break;
00077
00078
              case core::clockSource::extern_Clock_T0_Falling_Edge:
00079
00080
                  m_clockPrescaler=0;
00081
                  m_clockSource=6;
00082
                  break;
00083
00084
              case core::clockSource::extern Clock TO Rising Edge:
00085
00086
                  m_clockPrescaler=0;
00087
                  m_clockSource=7;
00088
                  break;
00089
00090
          }
00091
00092
00093 }
00094
00095 void core::TimerCounter1::selectOperationMode(const operationMode &ar_operationMode)
00096 {
00097
          switch (ar_operationMode)
00098
00099
              case core::operationMode::normal:
00100
00101
                  TIMER1_SELECT_OPERATION_MODE(0);
00102
                  break:
00103
00104
              case core::operationMode::PWM_PC_8bit:
00105
00106
                  TIMER1_SELECT_OPERATION_MODE(1);
00107
                  break;
00108
00109
              case core::operationMode::PWM PC 9bit:
00110
00111
                  TIMER1_SELECT_OPERATION_MODE(2);
00112
00113
              case core::operationMode::PWM_PC_10bit:
00114
00115
              {
00116
                  TIMER1_SELECT_OPERATION_MODE(3);
00117
                  break;
00118
00119
              case core::operationMode::CTC_OCR:
00120
00121
                  TIMER1 SELECT OPERATION MODE (4):
00122
                  break:
00123
00124
              case core::operationMode::fast_PWM_8bit:
00125
              {
00126
                  TIMER1_SELECT_OPERATION_MODE(5);
00127
                  break;
00128
00129
              case core::operationMode::fast_PWM_9bit:
00130
              {
00131
                  TIMER1_SELECT_OPERATION_MODE(6);
00132
                  break;
00133
              case core::operationMode::fast PWM 10bit:
00134
00135
              {
00136
                  TIMER1_SELECT_OPERATION_MODE(7);
00137
                  break;
00138
00139
              case core::operationMode::PWM_PFC_ICR:
00140
```


```
TIMER1_SELECT_OPERATION_MODE(8);
00141
00142
00143
00144
              case core::operationMode::PWM_PFC_OCR:
00145
              {
00146
                  TIMER1_SELECT_OPERATION_MODE(9);
00147
                  break;
00148
00149
              case core::operationMode::PWM_PC_ICR:
00150
              {
                  TIMER1 SELECT OPERATION MODE(10);
00151
00152
                  break:
00153
00154
              case core::operationMode::PWM_PC_OCR:
00155
00156
                  TIMER1_SELECT_OPERATION_MODE(11);
00157
                  break;
00158
00159
              case core::operationMode::CTC_ICR:
00160
              {
00161
                  TIMER1_SELECT_OPERATION_MODE(12);
                  break;
00162
00163
00164
              case core::operationMode::fast_PWM_ICR:
00165
              {
00166
                  TIMER1_SELECT_OPERATION_MODE(14);
00167
00168
00169
              case core::operationMode::fast_PWM_OCR:
00170
00171
                  TIMER1_SELECT_OPERATION_MODE(15);
00172
                  break;
00173
00174
00175
          }
00176
00177
00178 }
00179
00180
00181 void core::TimerCounter1::start()
00182 {
          TIMER1_SELECT_CLOCK_SOURCE(m_clockSource);
00183
00184 }
00186 uint16_t core::TimerCounter1::getClockPrescaler()
00187 {
00188
          return m_clockPrescaler;
00189 }
00190
00191 void core::TimerCounter1::stop()
00192 {
00193
          TIMER1_STOP;
00194 }
00195
00196
00197 void core::TimerCounter1::selectCompareOutputMode(const channel &ar_channel, const compareOutputMode
       &ar_compareOutputMode)
00198 {
00199
          switch (ar_channel)
00200
00201
              case core::channel::A:
00202
00203
                  TIMER1_SELECT_COM_CHANNEL_A(static_cast<uint8_t>(ar_compareOutputMode));
00204
                  break;
00205
00206
              case core::channel::B:
00207
              {
00208
                  TIMER1_SELECT_COM_CHANNEL_B(static_cast<uint8_t>(ar_compareOutputMode));
00209
                  break;
00210
00211
          }
00212
00213 }
00214
00216 void core::TimerCounter1::setCounter(const uint16_t &ar_dataBuffer)
00217 {
00218
          TCNT1 = ar_dataBuffer;
00219 }
00220
00221 uint16_t core::TimerCounter1::getCounter() const
00222 {
00223
          return TCNT1;
00224 }
00225
00226 void core::TimerCounter1::setOutputCompareRegister(const channel &ar channel, const uint16 t
```

```
&ar_dataBuffer)
00227 {
00228
          switch (ar_channel)
00229
00230
              case core::channel::A:
00231
00232
                  OCR1A = ar_dataBuffer;
00233
00234
00235
              case core::channel::B:
00236
              {
                  OCR1B = ar_dataBuffer;
00237
00238
                  break;
00239
00240
          }
00241 }
00242
00243
00244
00245 uint16_t core::TimerCounter1::getOutputCompareRegister(const channel &ar_channel) const
00246 {
00247
          switch (ar_channel)
00248
00249
              case core::channel::A:
00250
00251
                  return OCR1A;
00252
00253
              case core::channel::B:
00254
              {
00255
                  return OCR1B:
00256
              }
00257
          }
00258 }
00259
00260 void core::TimerCounter1::enableOutputCompareMatchInterrupt(const channel &ar_channel, const uint8_t
       a_enable)
00261 {
00262
          switch (ar_channel)
00263
00264
              case core::channel::A:
00265
                  if (a_enable) {
00266
00267
                      TIMER1_ENABLE_COM_CHANNEL_A_INTERRUPT;
00268
00269
00270
                  } else {
00271
                      TIMER1_DISABLE_COM_CHANNEL_A_INTERRUPT;
00272
00273
                  }
00274
                  break:
00275
00276
              case core::channel::B:
00277
00278
                  if (a_enable) {
00279
00280
                      TIMER1_ENABLE_COM_CHANNEL_B_INTERRUPT;
00281
00282
                  } else {
00283
00284
                      TIMER1_DISABLE_COM_CHANNEL_B_INTERRUPT;
00285
00286
00287
                  break;
00288
00289
          }
00290
00291 }
00292
00293
00294
00295 void core::TimerCounter1::enableOverflowInterrupt(const uint8_t a_enable)
00296 {
00297
00298
          if (a_enable) {
00299
00300
             TIMER1_ENABLE_OVERFLOW_INTERRUPT;
00301
00302
          } else {
00303
              TIMER1_DISABLE_OVERFLOW_INTERRUPT;
00304
00305
00306
00307 }
00308
00309 void core::TimerCounter1::enableInputCaptureInterrupt(const uint8_t a_enable)
00310 {
00311
          if (a enable) {
```


```
00313
              TIMER1_ENABLE_INPUT_CAPTURE_INTERRUPT;
00314
00315
00316
          } else {
00317
              TIMER1_DISABLE_INPUT_CAPTURE_INTERRUPT;
00318
00319 }
00320
00321 void core::TimerCounter1::setInputCaptureRegister(const uint16_t &ar_dataBuffer)
          ICR1 = ar_dataBuffer;
00323
00324 }
00325
00326
00327 uint16_t core::TimerCounter1::getInputCaptureRegister() const
00328 {
00329
          return ICR1;
00330 }
```

### 10.88 TimerCounter1.h File Reference

```
#include "TimerCounter.h"
#include "ha_base.h"
Include dependency graph for TimerCounter1.h:
```

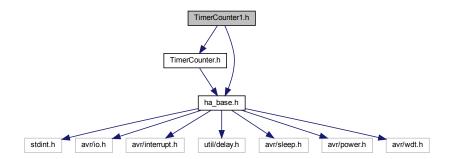

This graph shows which files directly or indirectly include this file:

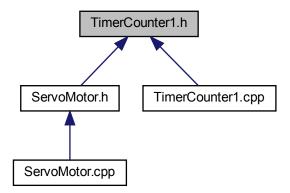

10.89 TimerCounter1.h 329

#### **Classes**

· class core::TimerCounter1

#### **Namespaces**

core

AVR chip internal core components.


#### 10.89 TimerCounter1.h

```
00001
00039
00268 #ifndef TIMER_COUNTER1_H
00269 #define TIMER_COUNTER1_H
00270 #include "TimerCounter.h"
00271 #include "ha_base.h"
00272
00273
00274
00275 namespace core
00276 {
00277
00278
00279 class TimerCounter1 : public TimerCounter
00280 {
00281
00282 public:
00283
          00284
00285
00286
                                           const clockSource &ar_clockSource= clockSource::noClock,
00287
                                           const compareOutputMode& ar_compareOutputMode =
       compareOutputMode::normal);
00288
00289
          void selectOperationMode(const operationMode &ar_operationMode) override;
00290
00291
         void start() override;
00292
00293
         void stop() override;
00294
00295
         void selectClockSource(const clockSource &ar_clockSource) override;
00296
00297
00298
          void selectCompareOutputMode(const channel &ar_channel, const compareOutputMode
       &ar_compareOutputMode) override;
00299
00300
          void setCounter(const uint16_t &ar_dataBuffer) override;
00301
00302
          uint16_t getCounter() const override;
00303
00304
          void setOutputCompareRegister(const channel &ar_channel, const uint16_t &ar_dataBuffer) override;
00305
00306
         uint16_t getOutputCompareRegister(const channel &ar_channel) const override;
00307
00308
          void setInputCaptureRegister(const uint16_t &ar_dataBuffer);
00309
00310
          uint16_t getInputCaptureRegister() const;
00311
00312
          void enableOutputCompareMatchInterrupt(const channel &ar_channel, const uint8_t a_enable)
00313
00314
          void enableOverflowInterrupt(const uint8 t a enable) override;
00315
00316
          void enableInputCaptureInterrupt(const uint8_t a_enable);
00317
00318
         uint16_t getClockPrescaler() override;
00319
         static void outputCompareMatchAServiceRoutine() __asm__(STR(TIMER1_COM_CHANNEL_A_INTERRUPT))
00320
        _attribute__((__signal__, __used__, __externally_visible__));
00321
00322
          static void outputCompareMatchBServiceRoutine() __asm__(STR(TIMER1_COM_CHANNEL_B_INTERRUPT))
        _attribute__((__signal__, __used__, __externally_visible__));
00323
00324
          static void overflowServiceRoutine() __asm__(STR(TIMER1_OVERFLOW_INTERRUPT))
        _attribute__((__signal__, __used__, __externally_visible__));
00325
```

```
static void inputCaptureServiceRoutine() __asm__(STR(TIMER1_INPUT_CAPTURE_INTERRUPT))
        _attribute__((__signal__, __used__, __externally_visible__));
00327
00328
00329
00330 protected:
00331
00332 private:
00333
00334
          TimerCounter1(const channel &ar_channel,
00335
                         \verb|const|| operation Mode & ar_operation Mode, \\
                         const clockSource &ar_clockSource,
00336
00337
                         const compareOutputMode& ar_compareOutputMode);
00338
00339
          ~TimerCounter1();
00340
          TimerCounter1(const TimerCounter1&);
00343
00344
00347
          const TimerCounter1& operator=(const TimerCounter1&);
00348
00349
          uint16_t m_clockPrescaler;
00350
00351
          uint8_t m_clockSource;
00352
00353 };
00354
00355 }
00356
00357
00358 #endif
```

## 10.90 TimerCounter2.cpp File Reference

```
#include "TimerCounter2.h"
#include "MCU.h"
Include dependency graph for TimerCounter2.cpp:
```

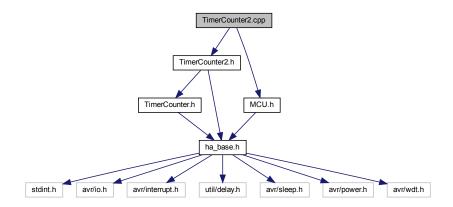

# 10.91 TimerCounter2.cpp

```
00001 #include "TimerCounter2.h"
00002 #include "MCU.h"
00003
00004
00005 core::TimerCounter2& core::TimerCounter2::getInstance(const channel &ar_channel,
00006
                                                             const operationMode &ar_operationMode,
00007
                                                             const clockSource &ar_clockSource,
00008
                                                             const compareOutputMode& ar_compareOutputMode)
00009 {
00010
          static TimerCounter2 l_instance(ar_channel,
00011
                                           ar_operationMode,
```

```
00012
                                           ar_clockSource,
00013
                                           ar_compareOutputMode);
00014
00015
          return l_instance;
00016
00017
00018 }
00019
00020 core::TimerCounter2::TimerCounter2(const channel &ar_channel,
00021
                                          const operationMode &ar_operationMode,
00022
                                          const clockSource &ar_clockSource,
00023
                                          \verb|const| compareOutputMode& ar_compareOutputMode)|
00024 {
00025
          core::MCU::enableTimerCounter2(1);
00026
          stop();
00027
          selectOperationMode(ar_operationMode);
00028
          selectClockSource(ar_clockSource);
00029
          selectCompareOutputMode(ar_channel, ar_compareOutputMode);
00030
00032 core::TimerCounter2::~TimerCounter2()
00033 {
00034
00035 }
00036
00037 void core::TimerCounter2::selectClockSource(const clockSource &ar_clockSource)
00038 {
00039
          switch (ar_clockSource)
00040
00041
              case core::clockSource::noClock:
00042
              {
00043
                  m_clockPrescaler=0;
00044
                  m_clockSource=0;
00045
                  break;
00046
              case core::clockSource::PS_1:
00047
00048
00049
                  m_clockPrescaler=1;
00050
                  m_clockSource=1;
00051
00052
00053
              case core::clockSource::PS 8:
00054
00055
                  m_clockPrescaler=8;
00056
                  m_clockSource=2;
00057
00058
00059
              case core::clockSource::PS_32:
00060
00061
                  m_clockPrescaler=32;
00062
                  m_clockSource=3;
00063
00064
00065
              case core::clockSource::PS_64:
00066
00067
                  m clockPrescaler=64;
00068
                  m_clockSource=4;
00069
                  break;
00070
00071
              case core::clockSource::PS_128:
00072
00073
                  m clockPrescaler=128;
00074
                  m_clockSource=5;
00075
                  break;
00076
00077
              case core::clockSource::PS_256:
00078
00079
                  m clockPrescaler=256;
08000
                  m_clockSource=6;
00081
                  break;
00082
00083
              case core::clockSource::PS_1024:
00084
              {
00085
                  m clockPrescaler=1024:
00086
                  m clockSource=7;
00087
                  break;
00088
              }
00089
          }
00090
00091 }
00092
00093 void core::TimerCounter2::selectOperationMode(const operationMode &ar_operationMode)
00094 {
00095
          switch (ar_operationMode)
00096
00097
              case core::operationMode::normal:
00098
```


```
TIMER2_SELECT_OPERATION_MODE(0);
00100
00101
00102
              case core::operationMode::PWM_PC:
00103
              {
00104
                  TIMER2_SELECT_OPERATION_MODE(1);
00105
                  break;
00106
00107
              case core::operationMode::CTC_OCR:
00108
              {
                  TIMER2_SELECT_OPERATION_MODE(2);
00109
00110
                  break:
00111
00112
              case core::operationMode::fast_PWM:
00113
00114
                  TIMER2_SELECT_OPERATION_MODE(3);
00115
                  break;
00116
00117
              case core::operationMode::PWM_PC_OCR:
00118
              {
00119
                  TIMER2_SELECT_OPERATION_MODE(5);
00120
                  break;
00121
              }
              case core::operationMode::fast_PWM_OCR:
00122
00123
              {
00124
                  TIMER2_SELECT_OPERATION_MODE(7);
00125
00126
00127
00128
          }
00129
00130 }
00131
00132
00133 void core::TimerCounter2::start()
00134 {
00135
          TIMER2 SELECT CLOCK SOURCE (m clockSource);
00136 }
00137
00138 uint16_t core::TimerCounter2::getClockPrescaler()
00139 {
00140
          return m_clockPrescaler;
00141 }
00142
00143
00144 void core::TimerCounter2::stop()
00145 {
          TIMER2_STOP;
00146
00147 }
00148
00149
00150 void core::TimerCounter2::selectCompareOutputMode(const channel &ar_channel, const compareOutputMode
       &ar_compareOutputMode)
00151 {
00152
          switch (ar_channel)
00153
00154
              case core::channel::A:
00155
              {
00156
                  TIMER2_SELECT_COM_CHANNEL_A(static_cast<uint8_t>(ar_compareOutputMode));
00157
                  break;
00158
              }
00159
              case core::channel::B:
00160
              {
00161
                  TIMER2_SELECT_COM_CHANNEL_B(static_cast<uint8_t>(ar_compareOutputMode));
00162
                  break;
00163
              }
00164
          }
00165
00166
00167 }
00168
00169
00170
00171 void core::TimerCounter2::setCounter(const uint16 t &ar dataBuffer)
00172 {
00173
          TCNT2 = static_cast<uint8_t>(ar_dataBuffer);
00174 }
00175
00176 uint16_t core::TimerCounter2::getCounter() const
00177 {
00178
          return TCNT2;
00179 }
00180
00181 void core::TimerCounter2::setOutputCompareRegister(const channel &ar_channel, const uint16_t
       &ar_dataBuffer)
00182 {
00183
          switch (ar channel)
```

```
00184
          {
00185
              case core::channel::A:
00186
                  OCR2A = static_cast<uint8_t>(ar_dataBuffer);
00187
00188
                  break;
00189
              }
00190
              case core::channel::B:
00191
              {
00192
                  OCR2B = static_cast<uint8_t>(ar_dataBuffer);
00193
                  break;
00194
              }
00195
          }
00196 }
00197
00198
00199 uint16_t core::TimerCounter2::getOutputCompareRegister(const channel &ar_channel) const
00200 {
00201
          switch (ar_channel)
00202
00203
              case core::channel::A:
00204
              {
00205
                  return OCR2A;
00206
00207
              case core::channel::B:
00208
              {
00209
                  return OCR2B;
00210
00211
          }
00212
00213 }
00214
00215 void core::TimerCounter2::enableOutputCompareMatchInterrupt(const channel &ar_channel, const uint8_t
       a_enable)
00216 {
00217
          switch (ar_channel)
00218
00219
              case core::channel::A:
00220
00221
                  if (a_enable) {
00222
00223
                      TIMER2_ENABLE_COM_CHANNEL_A_INTERRUPT;
00224
00225
                  } else {
00226
00227
                      TIMER2_DISABLE_COM_CHANNEL_A_INTERRUPT;
00228
00229
                  break;
00230
00231
              case core::channel::B:
00232
00233
                  if (a_enable) {
00234
00235
                      TIMER2_ENABLE_COM_CHANNEL_B_INTERRUPT;
00236
00237
                  } else {
00238
00239
                      TIMER2_DISABLE_COM_CHANNEL_B_INTERRUPT;
00240
00241
00242
                  break;
00243
              }
00244
          }
00245
00246 }
00247
00248
00249
00250 void core::TimerCounter2::enableOverflowInterrupt(const uint8_t a_enable)
00251 {
00252
00253
          if (a_enable) {
00254
              TIMER2_ENABLE_OVERFLOW_INTERRUPT;
00255
00256
00257
          } else {
00258
00259
              TIMER2_DISABLE_OVERFLOW_INTERRUPT;
00260
00261
00262 1
```


## 10.92 TimerCounter2.h File Reference

#include "TimerCounter.h"
#include "ha\_base.h"

Include dependency graph for TimerCounter2.h:

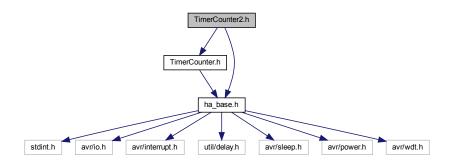

This graph shows which files directly or indirectly include this file:

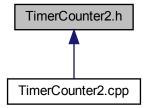

#### **Classes**

• class core::TimerCounter2

### **Namespaces**

• core

AVR chip internal core components.


10.93 TimerCounter2.h 335

#### 10.93 TimerCounter2.h

```
00001
00268 #ifndef TIMER_COUNTER2_H
00269 #define TIMER_COUNTER2_H
00270 #include "TimerCounter.h"
00271 #include "ha_base.h"
00272
00273
00274
00275 namespace core
00276 {
00277
00278
00279 class TimerCounter2 : public TimerCounter
00280 {
00281
00282 public:
00283
00284
          static TimerCounter2& getInstance(const channel &ar_channel = channel::A,
00285
                                               const operationMode &ar_operationMode = operationMode::normal,
00286
                                               const clockSource &ar_clockSource= clockSource::noClock,
00287
                                               const compareOutputMode& ar_compareOutputMode
       compareOutputMode::normal);
00288
00289
          void selectOperationMode(const operationMode &ar_operationMode) override;
00290
00291
          void start() override;
00292
00293
          void stop() override;
00294
00295
          void selectClockSource(const clockSource &ar clockSource) override;
00296
00297
          void selectCompareOutputMode(const channel &ar_channel, const compareOutputMode
       &ar_compareOutputMode) override;
00298
00299
          void setCounter(const uint16_t &ar_dataBuffer) override;
00300
00301
          uint16 t getCounter() const override;
00302
00303
          void setOutputCompareRegister(const channel &ar_channel, const uint16_t &ar_dataBuffer) override;
00304
00305
          uint16_t getOutputCompareRegister(const channel &ar_channel) const override;
00306
          void enableOutputCompareMatchInterrupt(const channel &ar_channel, const uint8_t a_enable)
00307
       override;
00308
00309
          void enableOverflowInterrupt(const uint8_t a_enable) override;
00310
00311
          uint16_t getClockPrescaler() override;
00312
         static void outputCompareMatchAServiceRoutine() __asm__(STR(TIMER2_COM_CHANNEL_A_INTERRUPT))
_attribute__((__signal__, __used__, __externally_visible__));
00313
00314
00315
          static void outputCompareMatchBServiceRoutine() __asm__(STR(TIMER2_COM_CHANNEL_B_INTERRUPT))
       __attribute__((__signal__,
                                     _used__, __externally_visible_
00316
          static void overflowServiceRoutine() __asm__(STR(TIMER2_OVERFLOW_INTERRUPT))
00317
        _attribute__((__signal__, __used__, __externally_visible__));
00318
00319 protected:
00320
00321 private:
00322
00323
          TimerCounter2(const channel &ar_channel,
00324
                         const operationMode &ar_operationMode,
00325
                         const clockSource &ar_clockSource,
00326
                         const compareOutputMode& ar_compareOutputMode);
00327
00328
          ~TimerCounter2():
00329
00332
          TimerCounter2(const TimerCounter2&);
00333
00336
          const TimerCounter2& operator=(const TimerCounter2&);
00337
00338
          uint16 t m clockPrescaler:
00339
          uint8_t m_clockSource;
00341
00342 };
00343
00344
00345
00346
00347 #endif
```

## 10.94 USART0.cpp File Reference

```
#include "USARTO.h"
#include "MCU.h"
#include <string.h>
Include dependency graph for USARTO.cpp:
```

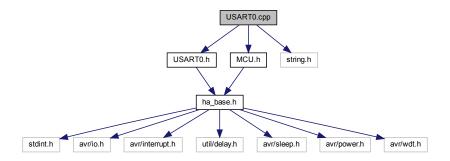

# 10.95 **USART0.cpp**

```
00001
00010 #include "USARTO.h"
00011 #include "MCU.h"
00012 #include <string.h>
00013
00014 volatile uint8_t io::USART0::m_status = 0;
00015 const uint8_t* io::USART0::mp_data2Send = nullptr;
00016 uint8_t* io::USART0::mp_data2Receive = nullptr;
00017 uint16_t io::USART0::m_sizeData2Send = 0;
00018 uint16_t io::USART0::m_sizeData2Receive = 0;
00019 volatile uint16_t io::USART0::m_numberBytesReceived = 0;
00020 volatile uint16_t io::USART0::m_numberBytesSent = 0;
00021 volatile uint8_t io::USART0::m_ready2Send = 1;
00022
00023
00024
00025
00026 io::USARTO& io::USARTO::getInstance(const transmissionMode& ar_transMode,
00027
                                     const communicationMode& ar_comMode,
00028
                                     const frameSize& ar_frameSize,
                                    const stopBit& ar_stopBit,
00029
00030
                                    const parityMode& ar_parityMode)
00031 {
00032
           static USARTO l_instance(ar_transMode,
00033
                                       ar_comMode,
00034
                                       ar_frameSize,
00035
                                       ar stopBit.
00036
                                       ar_parityMode);
00037
00038
           return l_instance;
00039 }
00040
00041
00042
00043 io::USART0::USART0(const transmissionMode& ar_transMode,
00044
                           const communicationMode& ar_comMode,
00045
                            const frameSize& ar_frameSize,
00046
                            const stopBit& ar_stopBit,
00047
                            const parityMode& ar_parityMode)
00048
00049 {
00050
           core::MCU::enableUSART0(1);
00051
           setBaudRate();
00052
           setTransmissionMode(ar_transMode);
00053
           setCommunicationMode(ar comMode);
00054
           setParityMode(ar_parityMode);
00055
           setFrameSize(ar_frameSize);
00056
           setStopBit(ar_stopBit);
```

10.95 USART0.cpp 337

```
00057
          sei();
00058
          enableReceiveCompleteInterrupt(1);
00059 }
00060
00061 io::USART0::~USART0()
00062 {
00063
00064 }
00065
00066 void io::USARTO::setBaudRate()
00067 {
          USARTO_SET_BAUDRATE_HIGH_REGISTER;
00068
00069
          USARTO_SET_BAUDRATE_LOW_REGISTER;
00070
00071 }
00072
00073 void io::USART0::setTransmissionMode(const transmissionMode& ar transMode)
00074 {
00075
          switch (ar_transMode)
00076
          {
00077
              case transmissionMode::async:
00078
00079
                  USARTO_ENABLE_ASYNC_TRANSMISSION_MODE;
00080
                  break;
00081
00082
              case transmissionMode::sync:
00083
              {
00084
                  USARTO_DISABLE_DOUBLE_SPEED_MODE;
00085
                  USARTO_ENABLE_SYNC_TRANSMISSION_MODE;
00086
                  break:
00087
              }
00088
          case transmissionMode::masterSPI:
00089
00090
                  USARTO_ENABLE_MASTER_SPI_MODE;
00091
                  break;
00092
00093
00094
00095
00096 }
00097
00098 void io::USART0::setCommunicationMode(const communicationMode &ar comMode)
00099 {
00100
          switch (ar_comMode)
00101
00102
              case communicationMode::duplex:
00103
                  USARTO_ENABLE_TRANSMITTER;
00104
                  USARTO_ENABLE_RECEIVER;
00105
00106
                  break:
00107
00108
              case communicationMode::receive:
00109
00110
                  USARTO_ENABLE_RECEIVER;
                  USARTO_DISABLE_TRANSMITTER;
00111
00112
                  break;
00114
              case communicationMode::transmit:
00115
                  USARTO_ENABLE_TRANSMITTER;
00116
00117
                  USARTO_DISABLE_RECEIVER;
00118
                  break;
00119
              }
00120
          }
00121
00122 }
00123
00124 void io::USART0::setParityMode(const parityMode& ar_parityMode)
00125 {
00126
          switch (ar_parityMode)
00127
00128
              case parityMode::noParity:
00129
              {
                  USARTO_DISABLE_PARITY_MODE;
00130
00131
                  break;
00132
00133
              case parityMode::evenParity:
00134
                  USARTO_ENABLE_EVEN_PARITY_MODE;
00135
00136
                  break:
00137
00138
              case parityMode::oddParity:
00139
              {
00140
                  USARTO_ENABLE_ODD_PARITY_MODE;
00141
00142
              }
00143
          }
```

```
00144
00145 }
00146
00147 void io::USARTO::setFrameSize(const frameSize& ar_frameSize)
00148 {
00149
          switch (ar frameSize)
00150
00151
              case frameSize::eightBits:
00152
00153
                  USARTO_SET_8BIT_FRAME_SIZE;
00154
                  break:
00155
00156
              case frameSize::sevenBits:
00157
00158
                  USARTO_SET_7BIT_FRAME_SIZE;
00159
00160
00161
              case frameSize::sixBits:
00162
00163
                  USARTO_SET_6BIT_FRAME_SIZE;
00164
00165
              case frameSize::fiveBits:
00166
00167
              {
00168
                  USARTO_SET_5BIT_FRAME_SIZE;
00169
                  break;
00170
00171
              case frameSize::neineBits:
00172
              {
00173
                  USARTO SET 9BIT FRAME SIZE:
00174
                  break:
00175
00176
00177
00178 }
00179 void io::USARTO::setStopBit(const stopBit& ar_stopBit)
00180 {
00181
          switch (ar_stopBit)
00182
00183
              case stopBit::oneStopBit:
00184
              {
                  USARTO_SET_ONE_STOP_BIT;
00185
00186
                  break:
00187
00188
              case stopBit::twoStopBits:
00189
00190
                  USARTO_SET_TWO_STOP_BITS;
00191
                  break;
00192
              }
00193
          }
00194
00195 }
00196
00197
00198 uint8_t io::USART0::frameError()
00199 {
00200
          return (m_status & (1 « USARTO_FRAME_ERROR));
00201
00202 }
00203
00204 uint8 t io::USART0::dataOverrun()
00205 {
00206
          return (m_status & (1 « USARTO_DATA_OVERRUN));
00207
00208 }
00209
00210 uint8_t io::USART0::parityError()
00211 {
00212
          return (m_status & (1 « USARTO_PARITY_ERROR));
00213
00214 }
00215
00216 void io::USART0::sendFrame(const uint8_t* ap_dataBuffer, const uint8_t a_size) 00217 {
00218
          while (!ready2Send()){};
00219
          m_sizeData2Send = a_size;
00220
          mp_data2Send = ap_dataBuffer;
00221
          enableDataRegisterEmptyInterrupt(1);
00222 }
00223
00224
00225 void io::USART0::sendString(const char* ap_string)
00226 {
00227
          while (!ready2Send()){};
00228
          m_sizeData2Send = strlen(ap_string);
          mp_data2Send = reinterpret_cast<const uint8_t*>(ap_string);
00229
          enableDataRegisterEmptyInterrupt(1);
00230
```

10.95 USART0.cpp 339


```
00231
00232 }
00233
00234
00235 void io::USART0::sendByte(const uint8 t &ar byte)
00236 {
            static uint8_t 1_byte2Send[3];
           1_byte2Send[0] = '0' + (ar_byte / 100);
1_byte2Send[1] = '0' + ((ar_byte / 10) % 10);
00238
00239
            1_byte2Send[2] = '0' + (ar_byte % 10);
00240
00241
           while (!ready2Send()){};
00242
00243
           m_sizeData2Send = 3;
00244
            mp_data2Send = l_byte2Send;
00245
            enableDataRegisterEmptyInterrupt(1);
00246
00247 }
00248 void io::USARTO::sendLong(const uint32 t &ar long)
00249 {
00250
            static uint8_t 1_word2Send[10];
           l_word2Send[0] = '0' + (ar_long / 1000000000);
l_word2Send[1] = '0' + ((ar_long / 100000000) % 10);
l_word2Send[2] = '0' + ((ar_long / 10000000) % 10);
00251
00252
00253
            1_word2Send[3] = '0' + ((ar_long /
                                                       1000000) % 10);
00254
00255
            1_word2Send[4] = '0' + ((ar_long /
                                                         100000) % 10);
            1_word2Send[5] = '0' + ((ar_long /
                                                          10000) % 10);
00256
            1_word2Send[6] = '0' + ((ar_long /
00257
                                                           1000) % 10);
           1_word2Send[6] = '0' + ((ar_long /
1_word2Send[7] = '0' + ((ar_long /
1_word2Send[8] = '0' + ((ar_long /
00258
                                                           100) % 10);
                                                             10) % 10);
00259
           1_word2Send[9] = '0' + (ar_long % 10);
00260
00261
00262
           while (!ready2Send()){};
00263
           m_sizeData2Send = 10;
00264
            mp_data2Send = 1_word2Send;
00265
            enableDataRegisterEmptyInterrupt(1);
00266
00267 }
00268 void io::USARTO::sendWord(const uint16_t &ar_word)
00269 {
00270
            static uint8_t 1_word2Send[5];
           1_word2Send[0] = '0' + (ar_word / 10000);
1_word2Send[1] = '0' + ((ar_word / 1000) % 10);
00271
           1_word2Send[1] = '0' + ((ar_word / 1000, 1 - 1...
1_word2Send[2] = '0' + ((ar_word / 100) % 10);
1_word2Send[3] = '0' + ((ar_word / 10) % 10);
1_word2Send[4] = '0' + (ar_word % 10);
00272
00273
00274
00275
           1_word2Send[4] = '0' + (ar_word %
00276
00277
           while (!ready2Send()){};
00278
           m_sizeData2Send = 5;
           mp_data2Send = 1_word2Send;
00279
00280
           enableDataRegisterEmptvInterrupt(1);
00281
00282 }
00283
00284 void io::USART0::sendChar(const uint8_t &ar_char)
00285 {
00286
           while (!ready2Send()){};
00287
           m_sizeData2Send = 1;
00288
           mp_data2Send = &ar_char;
00289
            enableDataRegisterEmptyInterrupt(1);
00290
00291 }
00292
00293 void io::USARTO::receiveChar(uint8_t &ar_char)
00294 {
00295
            m_sizeData2Receive = 1;
00296
           mp_data2Receive = &ar_char;
00297 }
00298
00299
00300 void io::USART0::receiveFrame(uint8_t *ap_dataBuffer, const uint8_t a_size)
00301 {
00302
           m_sizeData2Receive = a_size;
00303
           mp_data2Receive = ap_dataBuffer;
00304 // TODO: to be implemented
00305
00306
00307 }
00308
00309 void io::USARTO::receiveString(const char *ap_string)
00310 {
00311 // TODO: to be implemented
00312 }
00313
00314
00315 void io::USARTO::receiveCompleteServiceRoutine()
00316 {
00317
           static volatile uint8 t *lp dataReceived = mp data2Receive:
```

```
00318
         static uint16_t l_dataSize = m_sizeData2Receive;
00319
00320
          m_status = USARTO_CONTROL_STATUS_REGISTER;
00321
00322
00323
00324
              if (l_dataSize)
00325
00326
00327
                  *lp_dataReceived++ = USARTO_DATA_REGISTER;
00328
                  l_dataSize--;
                  m_numberBytesReceived++;
00329
00330
00331
00332
              else
00333
                  1_dataSize = m_sizeData2Receive;
00334
00335
                  lp_dataReceived = mp_data2Receive;
00336
00337
00338 }
00339
00340 void io::USARTO::dataRegisterEmptyServiceRoutine()
00341 {
00342
00343
          if (m_sizeData2Send)
00344
00345
              m_ready2Send = 0;
              USARTO_DATA_REGISTER = *mp_data2Send++;
00346
00347
              m_sizeData2Send--;
00348
              m_numberBytesSent++;
00349
00350
00351
          else
00352
          {
00353
              enableDataRegisterEmptyInterrupt(0);
00354
              m_numberBytesSent = 0;
00355
              m_ready2Send = 1;
00356
00357
00358
00359 }
00360
00361
00362 void io::USARTO::enableTransmitCompleteInterrupt(const uint8_t a_enable)
00363 {
00364
          if (a enable) {
              USARTO_ENABLE_TRANSMIT_COMPLETE_INTERRUPT;
00365
          } else {
00366
00367
             USARTO_DISABLE_TRANSMIT_COMPLETE_INTERRUPT;
00368
          }
00369
00370 }
00371
00372 void io::USARTO::enableReceiveCompleteInterrupt(const uint8_t a_enable)
00373 {
00374
          if (a_enable) {
00375
              USARTO_ENABLE_RECEIVE_COMPLETE_INTERRUPT;
00376
00377
          } else {
00378
              USARTO DISABLE RECEIVE COMPLETE INTERRUPT:
00379
          }
00380
00381 }
00382
00383 void io::USARTO::enableDataRegisterEmptyInterrupt(const uint8_t a_enable)
00384 {
00385
          if (a enable) {
              USARTO_ENABLE_DATA_REGISTER_EMPTY_INTERRUPT;
00386
00387
00388
          } else {
00389
              USARTO_DISABLE_DATA_REGISTER_EMPTY_INTERRUPT;
00390
          }
00391
00392 }
00394 void io::USARTO::transmitCompleteServiceRoutine()
00395 {
00396
00397 }
00398
00399 uint16_t io::USART0::getNumberBytesSent()
00400 {
00401
          return m_numberBytesSent;
00402 }
00403
00404 uint16_t io::USART0::getNumberBytesReceived()
```


```
00405 {
00406
          return m_numberBytesReceived;
00407 }
00408
00409 void io::USARTO::resetNumberBytesReceived()
00410 {
00411
          m_numberBytesReceived = 0;
00412 }
00413
00414 uint8_t io::USART0::ready2Send()
00415 {
          return m_ready2Send;
00416
00417
00418 }
00419
```

## 10.96 USARTO.h File Reference

```
#include "ha_base.h"
Include dependency graph for USARTO.h:
```

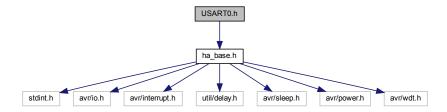

This graph shows which files directly or indirectly include this file:

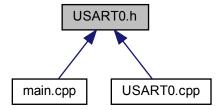

#### **Classes**

• class io::USART0

Class for handling USART0.

## **Namespaces**

io

AVR chip internal i/o components.

#### **Enumerations**

enum io::transmissionMode : uint8\_t { io::transmissionMode::async =0, io::transmissionMode::sync, io::transmissionMode::masterSPI }

USART0 transmission mode.

enum io::communicationMode : uint8\_t { io::communicationMode::duplex =0, io::communicationMode::transmit, io::communicationMode::receive }

USART0 communication mode.

enum io::parityMode : uint8\_t { io::parityMode::noParity =0, io::parityMode::evenParity, io::parityMode::oddParity }

USART0 parity mode.

enum io::frameSize : uint8\_t {
 io::frameSize::eightBits =0, io::frameSize::fiveBits, io::frameSize::sixBits, io::frameSize::sevenBits,
 io::frameSize::neineBits }

USART0 frame size.

enum io::stopBit : uint8\_t { io::stopBit::oneStopBit =0, io::stopBit::twoStopBits }
 USART0 stop bit.

## 10.97 USART0.h


```
00001 #ifndef USART H
00002 #define USART_H
00003 #include "ha_base.h"
00004
00013 namespace io
00014 {
00015
00016
00025 enum class transmissionMode : uint8_t {
00026
        async=0,
00027
         sync,
00028
         masterSPI
00029 1:
00030
00039 enum class communicationMode : uint8_t {
       duplex=0,
00040
         transmit,
00041
00042
         receive,
00044 };
00045
00054 enum class parityMode : uint8_t {
00055
         noParity=0,
          evenParity,
00056
00057
          oddParity
00058 };
00059
00068 enum class frameSize : uint8_t {
00069
       eightBits=0,
00070
         fiveBits,
         sixBits,
00071
00072
         sevenBits.
00073
         neineBits
00074 };
00075
00084 enum class stopBit : uint8_t{
00085
        oneStopBit=0,
00086
         twoStopBits
00087 };
00088
00098 class USARTO
00099 {
00100
00101 public:
00102
00103
00113
          static USARTO& getInstance(const transmissionMode& ar_transMode = transmissionMode::async,
00114
                                     const communicationMode& ar_comMode = communicationMode::duplex,
00115
                                     const frameSize& ar_frameSize = frameSize::eightBits,
00116
                                     const stopBit& ar_stopBit = stopBit::oneStopBit
00117
                                     const parityMode& ar_parityMode = parityMode::noParity);
00122
         void setBaudRate();
00128
         void setTransmissionMode(const transmissionMode& ar_transMode);
00134
          void setCommunicationMode(const communicationMode& ar_comMode);
```

10.97 USART0.h 343

```
00140
           void setParityMode(const parityMode& ar_parityMode);
00146
           void setFrameSize(const frameSize& ar_frameSize);
00152
           void setStopBit(const stopBit& ar_stopBit);
00159
           void sendFrame(const uint8_t *ap_dataBuffer, const uint8_t a_size);
00160
00166
           void sendString(const char *ap string);
00167
00173
           void receiveString(const char *ap_string);
00174
00180
           void sendChar(const uint8_t &ar_char);
00181
00187
           void sendByte (const uint8 t &ar byte);
00188
00194
           void sendWord(const uint16_t &ar_word);
00195
00201
           void sendLong(const uint32_t &ar_long);
00202
00208
           void receiveChar(uint8 t &ar char);
00209
00217
           void receiveFrame(uint8_t *ap_dataBuffer, const uint8_t a_size);
00218
00224
           void enableTransmitCompleteInterrupt(const uint8_t a_enable);
00225
00231
           void enableReceiveCompleteInterrupt(const uint8 t a enable);
00232
00238
           static void enableDataRegisterEmptyInterrupt(const uint8_t a_enable);
00239
00245
           uint8_t frameError();
00246
00252
           uint8 t dataOverrun();
00253
00259
           uint8 t parityError();
00265
           uint16_t getNumberBytesReceived();
00271
           uint16_t getNumberBytesSent();
00277
           uint8_t ready2Send();
00280
           void resetNumberBytesReceived();
         static void receiveCompleteServiceRoutine() __asm__(STR(USARTO_RECEIVE_COMPLETE_INTERRUPT))
_attribute__((__signal__, __used__, __externally_visible__));
00283
       static void dataRegisterEmptyServiceRoutine() __asm__(STR(USARTO_DATA_REGISTER_EMPTY_INTERRUPT))
_attribute__((_signal__, _used__, _externally_visible__));
00286
       static void transmitCompleteServiceRoutine() __asm__(STR(USARTO_TRANSMIT_COMPLETE_INTERRUPT))
_attribute__((__signal__, __used__, __externally_visible__));
00289
00290
00291
00292 protected:
00293
00294
00295
00296
00297 private:
00308
          USARTO(const transmissionMode& ar_transMode,
00309
                  const communicationMode& ar_comMode,
00310
                   const frameSize& ar_frameSize,
00311
                   const stopBit& ar_stopBit,
00312
                   const parityMode& ar_parityMode);
00313
00316
           ~USARTO();
00317
00321
           USARTO(const USARTO&);
00322
00326
           const USARTO& operator=(const USARTO&);
00327
00328
           static volatile uint8_t m_status;
00330
           static const uint8_t *mp_data2Send;
00332
           static uint8_t *mp_data2Receive;
00334
           static uint16_t m_sizeData2Send;
00336
           static uint16_t m_sizeData2Receive;
00338
           static volatile uint16_t m_numberBytesReceived;
00340
           static volatile uint16_t m_numberBytesSent;
00342
           static volatile uint8_t m_ready2Send;
00345 };
00346
00347
00348
00349 }
00350
00351
00352
00353
00354
00355
00356
00357
00358
00359
00360
00361 #endif
```

# 10.98 utils\_m328p.cpp File Reference

```
#include "utils_m328p.h"
Include dependency graph for utils_m328p.cpp:
```

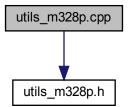


# 10.99 utils\_m328p.cpp

```
00001 #include "utils_m328p.h"
00002
00003 long utils::map(long x, long in_min, long in_max, long out_min, long out_max)
00004 {
00005 return (x - in_min) * (out_max - out_min) / (in_max - in_min) + out_min;
00006 }
```

# 10.100 utils\_m328p.h File Reference

This graph shows which files directly or indirectly include this file:

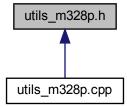

## **Namespaces**

utils

10.101 utils\_m328p.h 345

#### **Functions**


long utils::map (long x, long in\_min, long in\_max, long out\_min, long out\_max)

# 10.101 utils\_m328p.h

```
00001 #ifndef UTILSM329P H
00002 #define UTILSM329P_H
00003 namespace utils
00004 {
00005
00006
00007 // delay functions
80000
00009
00010
00011 // multiplication / division operations bit-shift devide multiply
00012
00013
00014 // clock division (set prescaler)
00015
00016 // clock power saving through macros
00017
00018
00019 // mapping values
00020
00021 long map(long x, long in_min, long in_max, long out_min, long out_max);
00022
00023
00024
00025 #endif
```

# 10.102 WatchdogTimer.cpp File Reference

#include "WatchdogTimer.h"
Include dependency graph for WatchdogTimer.cpp:

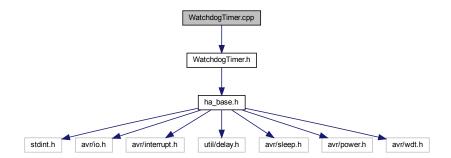


# 10.103 WatchdogTimer.cpp

```
00011 core::WatchdogTimer::WatchdogTimer()
00013
                      sei();
00014
                      stop();
00015 }
00016
00017 core::WatchdogTimer::~WatchdogTimer()
00018 {
00019
00020 }
00021
00022 void core::WatchdogTimer::selectTimeOut(const timeOut &ar timeOut)
00023 {
00024
                       m_timeOut = static_cast<uint8_t>(ar_timeOut);
00025
                       m_timeOut = static_cast<uint8_t>((m_timeOut & 7) | ((m_timeOut & 8) « 2 ));
00026
                       cli();
                      wdt_reset();
WATCHDOG_SELECT_TIMEOUT(m_timeOut);
00027
00028
00029
                      sei();
00030
00031 }
00032
00033 void core::WatchdogTimer::reset()
00034 {
00035
                      wdt_reset();
00036
00037 }
00038
00039 void core::WatchdogTimer::start(const operationMode &ar_operationMode)
00040 {
00041
                      m operationMode = static cast<uint8 t>(ar operationMode);
00042
                      m_operationMode = static_cast<uint8_t>(((m_operationMode & 1) « 6) | ((m_operationMode & 2) « 3
00043
                      cli();
00044
                      wdt_reset();
                      WATCHDOG_START(m_operationMode,m_timeOut);
00045
00046
                     sei();
00048 }
00049
00050 void core::WatchdogTimer::start(const operationMode &ar_operationMode, const timeOut &ar_timeOut)
00051 {
00052
                      m_timeOut = static_cast<uint8_t>(ar_timeOut);
                      m_timeOut = static_cast<uint8_t>((m_timeOut & 7) | ((m_timeOut & 8) « 2 ));
00053
00054
                      m_operationMode = static_cast<uint8_t>(ar_operationMode);
00055
                      \verb|m_operationMode| = static_cast < \verb|uint8_t>| ((m_operationMode & 1) & 6) | ((m_operationMode & 2) & 3 | (m_operationMode & 2) & 3 | (m_operationMode & 2) & 3 | (m_operationMode & 3) & 3 | (m_ope
00056
                     cli();
00057
                      wdt_reset();
WATCHDOG_START(m_operationMode, m_timeOut);
00058
00059
                      sei();
00060
00061 }
00062
00063 void core::WatchdogTimer::stop()
00064 {
00065
                      cli();
00066
                      wdt_reset();
00067
                     WATCHDOG_STOP;
00068
                      sei();
00069
00070 }
00071
```


# 10.104 WatchdogTimer.h File Reference

Header file of the WatchdogTimer class.

```
#include "ha_base.h"
Include dependency graph for WatchdogTimer.h:
```

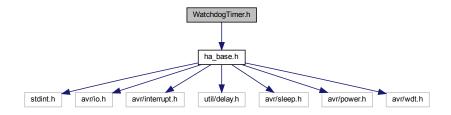

This graph shows which files directly or indirectly include this file:

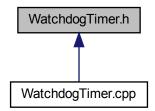

## Classes

· class core::WatchdogTimer

#### **Namespaces**

core

AVR chip internal core components.

#### **Enumerations**

```
    enum core::timeOut::uint8_t {
        core::timeOut::to_16ms = 0, core::timeOut::to_32ms, core::timeOut::to_64ms, core::timeOut::to_125ms,
        core::timeOut::to_250ms, core::timeOut::to_500ms, core::timeOut::to_1s, core::timeOut::to_2s,
        core::timeOut::to_4s, core::timeOut::to_8s }
    enum core::operationMode::uint8_t {
            core::operationMode::PWM_PC_9bit,
            core::operationMode::PWM_PC_10bit, core::operationMode::PWM_PFC_ICR, core::operationMode::PWM_PFC_OCR,
            core::operationMode::PWM_PC_ICR,
            core::operationMode::PWM_PC_OCR, core::operationMode::fast_PWM_8bit,
            core::operationMode::fast_PWM_9bit,
            core::operationMode::fast_PWM_10bit, core::operationMode::fast_PWM_ICR, core::operationMode::fast_PWM_OCR,
            core::operationMode::CTC_OCR,
            core::operationMode::CTC_ICR, core::operationMode::interrupt =1, core::operationMode::reset, core::operationMode::interrupt }
```

## 10.104.1 Detailed Description

Definition in file WatchdogTimer.h.

Header file of the WatchdogTimer class. Basic class abstraction of the WatchdogTimer peripheral Usage example (test): #include "WatchdogTimer.h" #include "Led.h" instantiate a Led object extern component::Led Led; component::Led Led(io::Pin(1,io::PortB)); extern component::Led LedStart; component::Led LedStart(io::Pin(2,io::PortB)); int main(void) { Init instantiate a Watchdog object core::WatchdogTimer &myWatchdog = core::WatchdogTimer::getInstance(); my ← Watchdog.selectTimeOut(core::timeOut::to\_8s); LedStart.on(); \_delay\_ms(5000); LedStart.off(); myWatchdog. ← start(core::operationMode::reset); ---- Event loop ----- // while (1) { Led.on(); \_delay\_ms(1000); Led.off(); \_delay\_ms(1000); } return 0; } void core::WatchdogTimer::timeOutServiceRoutine() { for (uint8 t i=0;i<10;i++) { Led.on(); delay ms(100); Led.↔ off(); \_delay\_ms(100); } } **Author** Farid Oubbati ( https://github.com/faroub) Date March 2020

# 10.105 WatchdogTimer.h

```
00001
00057 #ifndef WATCHDOG_TIMER_H
00058 #define WATCHDOG_TIMER_H
00059 #include "ha_base.h"
00060
00061
00062
00063 namespace core
00064 {
00065 enum class timeOut : uint8_t {
         to_16ms=0,
00067
          to_32ms,
00068
          to_64ms,
00069
          to_125ms,
00070
          to_250ms,
00071
          to_500ms,
00072
          to_1s,
00073
          to_2s,
00074
          to_4s,
00075
00076 };
00077
00078 enum class operationMode : uint8_t {
          interrupt=1,
08000
00081
          interrupt_reset,
00082 };
00083
00084 class WatchdogTimer
00085 {
00086
00087 public:
00088
00089
          static WatchdogTimer& getInstance();
00090
00091
          void selectTimeOut(const timeOut &ar_timeOut);
00092
00093
          void reset();
00094
00095
          void start(const operationMode &ar_operationMode);
00096
00097
          void start(const operationMode &ar_operationMode, const timeOut &ar_timeOut);
00098
00099
00100
          void stop();
00101
          static void timeOutServiceRoutine() __asm__(STR(WATCHDOG_TIMEOUT_INTERRUPT))
00102
       __attribute__((__signal__, __used__, __externally_visible__));
00103
00104
00105 protected:
00106
00107 private:
00108
00109
          WatchdogTimer();
00110
00113
          ~WatchdogTimer();
00114
00117
          WatchdogTimer(const WatchdogTimer&);
00118
00121
          const WatchdogTimer& operator=(const WatchdogTimer&);
00122
00123
          uint8_t m_timeOut;
00124
          uint8_t m_operationMode;
00125
00126
00127 };
00128
00129 }
00130
00131
00132 #endif
```

# Index

externally_visible	core::WatchdogTimer, 167
core::ADConverter, 54	
core::ExternInterrupt, 67	A
core::TimerCounter0, 127	core, 31
core::TimerCounter1, 138	A0
core::TimerCounter2, 148	buzzer_pitches_16bit.h, 186
core::WatchdogTimer, 170	buzzer_pitches_8bit.h, 204
io::SPI, 104	A1
io::USART0, 164	buzzer_pitches_16bit.h, 186
used	buzzer_pitches_8bit.h, 204
core::ADConverter, 54	A2
core::ExternInterrupt, 68	buzzer_pitches_16bit.h, 186
core::TimerCounter0, 127	buzzer_pitches_8bit.h, 204
core::TimerCounter1, 138	A3
	buzzer_pitches_16bit.h, 186
core::TimerCounter2, 148	A4
core::WatchdogTimer, 170	buzzer pitches 16bit.h, 186
io::SPI, 104	A5
io::USART0, 164	buzzer pitches 16bit.h, 187
~ADConverter	A6
core::ADConverter, 47	buzzer pitches 16bit.h, 187
∼Buzzer	A7
component::Buzzer, 56	buzzer pitches 16bit.h, 187
$\sim$ DCMotor	ADC.cpp, 171
component::DCMotor, 60	ADC.h, 175, 177
$\sim$ ExternInterrupt	ADC_ADJUST_RESULT_LEFT
core::ExternInterrupt, 63	ha_m328p.h, 226
$\sim$ LDR	ADC_ADJUST_RESULT_RIGHT
component::LDR, 69	ha_m328p.h, 226
~Led	ADC_CONVERSION_COMPLETE_INTERRUPT
component::Led, 73	ha_m328p.h, 226
~Pin	ADC DISABLE
io::Pin, 82	<del>-</del>
~PushButton	ha_m328p.h, 226
component::PushButton, 88	ADC_DISABLE_AUTOTRIGGER
~SPI	ha_m328p.h, 226
io::SPI, 99	ADC_DISABLE_CONVERSION_COMPLETE_INTERRUPT
~ServoMotor	ha_m328p.h, 227
component::ServoMotor, 92	ADC_DISABLE_DIGITAL_INPUT_REGISTER
~StepperMotor	ha_m328p.h, 227
• •	ADC_ENABLE
component::StepperMotor, 107	ha_m328p.h, 227
~TimerCounter0	ADC_ENABLE_AUTOTRIGGER
core::TimerCounter0, 120	ha_m328p.h, 227
~TimerCounter1	ADC_ENABLE_CONVERSION_COMPLETE_INTERRUPT
core::TimerCounter1, 130	ha_m328p.h, <mark>227</mark>
~TimerCounter2	ADC_NoiseReduction
core::TimerCounter2, 141	core, 36
~USART0	ADC_SELECT_ANALOG_INPUT
io::USART0, 151	ha_m328p.h, <mark>227</mark>
$\sim$ WatchdogTimer	ADC_SELECT_AUTO_TRIGGER_SOURCE

ha_m328p.h, 228	B4
ADC_SELECT_CLOCK_PRESCALER	buzzer_pitches_16bit.h, 189
ha_m328p.h, 228 ADC_SELECT_REF_VOLTAGE	B5
ha_m328p.h, 228	buzzer_pitches_16bit.h, 189 B6
ADC_START_CONVERSION	buzzer_pitches_16bit.h, 189
ha_m328p.h, 228	B7
ADC_STOP_CONVERSION	buzzer_pitches_16bit.h, 190
 ha_m328p.h, <mark>228</mark>	BlinkLed/main.cpp
ADConverter	LED, 263
core::ADConverter, 46, 47	main, 263
ANALOG_COMARATOR_H	TIMEDELAY, 263
AnalogComparator.h, 179	BODMode
analogComparator	core, 30
core, 30	buzz
AnalogComparator.cpp, 178	component::Buzzer, 57
AnalogComparator.h, 178, 180 ANALOG_COMARATOR_H, 179	BUZZER
AREF	MusicBox/main.cpp, 270
core, 35	Organ/main.cpp, 274
async	Buzzer
io, 42	component::Buzzer, 56 Buzzer.cpp, 180
autoTriggerSource	Buzzer.h, 181, 182
core, 29	buzzer_pitches_16bit.h, 184, 202
AVCC	A0, 186
core, 35	A1, 186
Ax0	A2, 186
buzzer_pitches_16bit.h, 187	A3, 186
buzzer_pitches_8bit.h, 204	A4, 186
Ax1	A5, 187
buzzer_pitches_16bit.h, 187	A6, 187
buzzer_pitches_8bit.h, 205	A7, 187
Ax2 buzzer_pitches_16bit.h, 187	Ax0, 187
buzzer pitches 8bit.h, 205	Ax1, 187
Ax3	Ax2, 187
buzzer_pitches_16bit.h, 188	Ax3, 188
Ax4	Ax4, 188
buzzer_pitches_16bit.h, 188	Ax5, 188
Ax5	Ax6, 188 Ax7, 188
buzzer_pitches_16bit.h, 188	B0, 188
Ax6	B1, 189
buzzer_pitches_16bit.h, 188	B2, 189
Ax7	B3, 189
buzzer_pitches_16bit.h, 188	B4, 189
В	B5, 189
core, 31	B6, 189
В0	B7, 190
buzzer_pitches_16bit.h, 188	C0, 190
buzzer_pitches_8bit.h, 205	C1, 190
B1	C2, 190
buzzer_pitches_16bit.h, 189	C3, 190
buzzer_pitches_8bit.h, 205	C4, 190
B2	C5, 191
buzzer_pitches_16bit.h, 189	C6, 191
buzzer_pitches_8bit.h, 205 B3	C7, 191
buzzer_pitches_16bit.h, 189	Cx0, 191 Cx1, 191
502201_pitories_10bit.ii, 103	OX1, 101

Cx2, 191	Gx4, 201
Cx3, 192	Gx5, 201
Cx4, 192	Gx6, 201
Cx5, 192	Gx7, 202
Cx6, 192	buzzer_pitches_8bit.h, 203, 210
Cx7, 192	A0, 204
D0, 192	A1, 204
	A2, 204
D1, 193	Ax0, 204
D2, 193	
D3, 193	Ax1, 205
D4, 193	Ax2, 205
D5, 193	B0, 205
D6, 193	B1, 205
D7, 194	B2, 205
Dx0, 194	C1, 205
Dx1, 194	C2, 206
Dx2, 194	C3, 206
Dx3, 194	Cx0, 206
Dx4, 194	Cx2, 206
Dx5, 195	Cx3, 206
Dx6, 195	D1, 206
Dx7, 195	D2, 207
	D3, 207
E0, 195	Dx0, 207
E1, 195	Dx2, 207
E2, 195	Dx3, 207
E3, 196	E1, 207
E4, 196	E2, 208
E5, 196	
E6, 196	E3, 208
E7, 196	F1, 208
F0, 196	F2, 208
F1, 197	F3, 208
F2, 197	Fx1, 208
F3, 197	Fx2, 209
F4, 197	Fx3, 209
F5, 197	G1, 209
F6, 197	G2, 209
F7, 198	G3, 209
Fx0, 198	Gx0, 209
Fx1, 198	Gx1, 210
Fx2, 198	Gx2, 210
Fx3, 198	C0
Fx4, 198	buzzer_pitches_16bit.h, 190
Fx5, 199	C1
Fx6, 199	buzzer_pitches_16bit.h, 190
Fx7, 199	buzzer_pitches_8bit.h, 205
G0, 199	C2
G1, 199	buzzer_pitches_16bit.h, 190
G2, 199	buzzer_pitches_8bit.h, 206
G3, 200	C3
G4, 200	buzzer_pitches_16bit.h, 190
G5, 200	buzzer_pitches_8bit.h, 206
G6, 200	C4
G7, 200	buzzer_pitches_16bit.h, 190
Gx0, 200	C5
Gx1, 201	
	buzzer_pitches_16bit.h, 191
Gx2, 201	C6
Gx3, 201	buzzer_pitches_16bit.h, 191

C7	mr_isActiveLow, 90
buzzer_pitches_16bit.h, 191	mr_useInternalPullUp, 90
channel	PushButton, 88
core, 30	resetPressedCount, 89
clear	component::ServoMotor, 91
core, 32	$\sim$ ServoMotor, 92
clockPrescaler	computePulseCycleCount, 92
core, 31	computePulseWidthMaxCount, 93
io, 38	computePulseWidthMidCount, 93
clockSource	computePulseWidthMinCount, 93
core, 31	computeRotationAngleCount, 93
communicationMode	connect, 94
io, 39	disconnect, 94
compareOutputMode	m_pin, 96
core, 32	m_pulseCycle, 96
component, 27	m_pulseWidthMax, 96
fullStep, 28	m_pulseWidthMid, 96
halfStep, 28	m_pulseWidthMin, 96
mode, 27	off, 94
component::Buzzer, 55	on, 95
~Buzzer, 56	rotate, 95
buzz, 57	ServoMotor, 92
Buzzer, 56	toggle, 95
m_pin, 58	component::StepperMotor, 105
pause, 58	~StepperMotor, 107
component::DCMotor, 59	computeStepDelay, 107
~DCMotor, 60 connect, 60	currentPos, 108 goalReached, 108
DCMotor, 60	m_accelTime, 113
disconnect, 60	m_constSpeedTime, 113
m_pin, 62	m currentPos, 113
off, 61	m decelTime, 114
on, 61	m_goalReached, 114
spin, 61	m_pinCoil1, 114
stop, 61	m_pinCoil2, 114
toggle, 62	m_pinCoil3, 114
component::LDR, 68	m_pinCoil4, 115
~LDR, 69	setCurrentPos, 109
getLux, 70	step, 109–111
getResistance, 70	stepDelay, 112
LDR, 69	stepMode, 115
m_pin, 71	StepperMotor, 106
mr_ADC, 71	stepPulse, 112
component::Led, 71	computePulseCycleCount
$\sim$ Led, 73	component::ServoMotor, 92
isOff, 73	computePulseWidthMaxCount
isOn, 74	component::ServoMotor, 93
Led, 73	computePulseWidthMidCount
m_pin, 75	component::ServoMotor, 93
off, 74	computePulseWidthMinCount
on, 74	component::ServoMotor, 93
toggle, 75	computeRotationAngleCount
component::PushButton, 87	component::ServoMotor, 93
∼PushButton, 88	computeStepDelay
getPressedCount, 89	component::StepperMotor, 107
isPressed, 89	connect
m_buttonPressed, 90	component::DCMotor, 60
m_pin, 90	component::ServoMotor, 94

conversionCompleteServiceRoutine	PWM_PC_10bit, 33
core::ADConverter, 47	PWM_PC_8bit, 33
core, 28	PWM_PC_9bit, 33
A, 31	PWM_PC_ICR, 33
ADC_NoiseReduction, 36	PWM_PC_OCR, 33
analogComparator, 30	PWM_PFC_ICR, 33
AREF, 35	PWM_PFC_OCR, 33
autoTriggerSource, 29	referenceVoltage, 34
AVCC, 35	res_10bit, 35
B, 31	res_11bit, 35
BODMode, 30	res 12bit, 35
channel, 30	res_13bit, 35
clear, 32	
	res_14bit, 35
clockPrescaler, 31	res_15bit, 35
clockSource, 31	res_16bit, 35
compareOutputMode, 32	res_8bit, 35
CTC_ICR, 33, 34	res_9bit, 35
CTC_OCR, 33, 34	reset, 33, 34
disabled, 30	resolution, 35
enabled, 30	risingEdge, <mark>36</mark>
extendedStandby, 36	senseControl, 35
extern_Clock_T0_Falling_Edge, 32	set, 32
extern_Clock_T0_Rising_Edge, 32	sleepMode, 36
extInterrupt, 30	standby, 36
fallingEdge, 36	timeOut, 36
fast_PWM, 33	timer0CompareA, 30
fast_PWM_10bit, 33	timer0Overflow, 30
fast_PWM_8bit, 33	timer1Capture, 30
fast_PWM_9bit, 33	timer1CompareB, 30
fast_PWM_ICR, 33	timer1Overflow, 30
fast PWM OCR, 33	to_125ms, 37
freeRunning, 30	to_16ms, 36
Idle, 36	to_1s, 37
internal, 35	
	to_250ms, 37
interrupt, 33, 34	to_2s, 37
interrupt_reset, 33, 34	to_32ms, 36
logicalChange, 36	to_4s, 37
lowLevel, 36	to_500ms, 37
noClock, 32	to_64ms, 37
normal, 32, 33	to_8s, 37
operationMode, 32, 33	toggle, 32
PCINTB, 34	core::ADConverter, 45
PCINTC, 34	externally_visible, 54
PCINTD, 34	used, 54
pinChangePort, 34	$\sim$ ADConverter, 47
powerDown, 36	ADConverter, 46, 47
powerSave, 36	conversionCompleteServiceRoutine, 47
PS 1, 32	enableAutoTrigger, 49
PS 1024, 32	enableConversionCompleteInterrupt, 49
PS_128, 31, 32	getConversionResult, 50
PS 16, 31	getInstance, 51
PS 2, 31	m_conversionResult, 54
PS_256, 32	m_resolution, 54
PS 32, 31, 32	operator=, 51
PS 4, 31	selectAnalogInput, 51
<del>-</del> ·	selectArialogriput, 51 selectAutoTriggerSource, 52
PS_64, 31, 32	
PS_8, 31, 32	selectClockPrescaler, 52
PWM_PC, 33	selectReferenceVoltage, 53

stop, 53  core::AnalogComparator, 55  core::ExternInterrupt, 62 externally_visible, 67 used, 68  ~ExternInterrupt, 63  enableInt1, 64  enablePinChangeMaskPortB, 65  enablePinChangeMaskPortD, 65  ExternInterrupt, 63, 64  getInstance, 66  IntOServiceRoutine, 66  pinChangePortBServiceRoutine, 66  pinChangePortDServiceRoutine, 67  pinChangePortDServiceRoutine, 67  setIntOSenseControl, 67  core::AnalogComparator, 55  m_clockPrescaler, 127  m_clockPrescaler, 128  operator=, 123  outputCompareMatchAServiceRoutine, 123  outputCompareMatchBServiceRoutine, 123  overflowServiceRoutine, 124  selectClockSource, 124  selectCompareOutputMode, 125  selectOperationMode, 125  setCounter, 126  setCounter, 126  setOutputCompareRegister, 126  start, 126  timerCounter0, 120  core::TimerCounter1, 128 externally_visible, 138 used, 138  ~TimerCounter1, 130  enableInputCaptureInterrupt, 130  enableOverflowInterrupt, 131  setInt1SenseControl, 67  getClockPrescaler, 132	start, 53	getOutputCompareRegister, 123
core::AnalogComparator, 55 core::ExternInterrupt, 62   externally_visible, 67   used, 68    ~ExternInterrupt, 63    enableInt1, 64    enableInt1, 64    enableInt1, 64    enableInt1, 64    enableInt2, 64    enableInt3,		- · · · ·
core::Externinterrupt, 62    _externally_visible_, 67    _used_, 68    ~Externinterrupt, 63    enableInt1, 64    enablePinChange, 64    enablePinChange, 64    enablePinChangeMaskPortB, 65    enablePinChangeMaskPortB, 65    enablePinChangeMaskPortD, 65    Externinterrupt, 63, 64    enablePinChangeMaskPortD, 65    Externinterrupt, 63, 64    enablePinChangeMaskPortD, 65    Externinterrupt, 63, 64    enablePinChangeMaskPortD, 65    Externinterrupt, 63    int0ServiceRoutine, 66    int0ServiceRoutine, 66    int0ServiceRoutine, 66    int0ServiceRoutine, 66    int0ServiceRoutine, 67    selnit0SenseControl, 67    selnit0SenseControl, 67    selnit0SenseControl, 67    selnit0SenseControl, 67    enableSPI, 76    enableSPI, 76    enableSPI, 78    enableImerCounter0, 77    enableTimerCounter1, 77    enableTimerCounter1, 77    enableTimerCounter1, 77    enableTimerCounter1, 78    selnit0SenseControl, 89    selectSleepMode, 79    selectOcokPrescaler, 116    getCounter, 116    getCounter, 116    getCounter, 116    getCounter, 117    selectComparePegister, 1	•	
externally_visible67used68     ~Externinterrupt, 63     enableInt0, 64     enableInt1, 64     enableInt1, 64     enablePinChange, 64     enablePinChangeMaskPortB, 65     enablePinChangeMaskPortB, 65     enablePinChangeMaskPortD, 65     Externinterrupt, 63, 64     getInstance, 66     Int0ServiceRoutine, 66     int1ServiceRoutine, 66     int1ServiceRoutine, 66     int1ServiceRoutine, 66     pinChangePortBServiceRoutine, 67     pinChangeTortBy (128     int1 ServiceRoutine, 68     pinChangePortBServiceRoutine, 67     pinChangePortBServiceRoutine, 68     pinChangePortBServiceRoutine, 69     pinChangePortBServiceRoutine, 69     pinChangePortBServiceRoutine, 67     pableTupLCompareRegister, 133     inputCapturcServiceRoutine, 133     nclockSource, 134     selectClockSource,		<del>-</del>
used68     ~ExternInterrupt, 63     enableInt0, 64     enableInt1, 64     enableInt1, 64     enablePinChange, 64     enablePinChange, 64     enablePinChangeMaskPortB, 65     enablePinChangeMaskPortB, 65     enablePinChangeMaskPortB, 65     enablePinChangeMaskPortB, 65     enablePinChangeMaskPortB, 65     ExternInterrupt, 63, 64     getInstance, 66     Int0ServiceRoutine, 66     int0ServiceRoutine, 66     int0ServiceRoutine, 66     int0ServiceRoutine, 66     pinChangePortBServiceRoutine, 67     seltint0SenseControl, 67     seltint1SenseControl, 67     seltint1SenseControl, 67     seltint1SenseControl, 67     disableBOD, 76     enableImerCounter0, 77     enableTimerCounter1, 77     enableTimerCounter2, 77     enableImerCounter2, 77     enableImerCounter2, 77     enableImerCounter2, 77     enableImerCounter2, 77     enableOverflowInterrupt, 116     getClockPrescaler, 116     getClockPrescaler, 116     getCounter, 116     selcOutputCompareMatchInterrupt, 116     getClounter, 116     selcOutputCompareRegister, 117     selectCloexSource, 129     selectCloexSource, 124     selectCloexSource, 124     selectCloexSource, 123     selcCounter, 126     setCoutputCompareRegister, 128     stop, 127     ImerCounter1, 130     enableOverflowInterrupt, 131     enableOverflowInterrupt, 116     getClounter, 115     enableOutputCompareRegister, 117     selectCloexSource, 117     selectCloexSource, 129     selectCloexSource, 129     selectCloexSource, 129     selectCompareOutputMode, 125     setCounter, 120     core::TimerCounter1, 130     enableOverflowInterrupt, 131     enableOverflowInterrupt, 116     getClounter, 116     getClounter, 116     getClounter, 116     getClounter, 116     getClounter, 116     getClounter, 117     selectCloexSource, 117     selectCloexSource, 117     selectCloexSource, 117     selectCloexFrescaler, 118     getClounter, 129     vertinerCounter, 130     vertinerCounter, 130     vertinerCounter, 130     vertinerCounter, 132     selectCloexSource, 139     overtinex 142     selectCondxereaction, 132	•	
~ExternInterrupt, 63 enableInt1, 64 enableInt1, 64 enableInt1, 64 enablePinChange, 64 enablePinChangeMaskPortB, 65 enableFinChangeMaskPortB, 66 pnChangePortDServiceRoutine, 66 pnChangePortDServiceRoutine, 66 pinChangePortDServiceRoutine, 66 pinChangePortDServiceRoutine, 66 pinChangePortDServiceRoutine, 67 selfunterCounter1, 130 enableOutputCampareMatchInterrupt, 111 getClookPrescaler, 132 getCounter, 133 inputCaptureSegister, 133 inputCaptureSegiste		·
enableInt1, 64 enablePinChange, 64 enablePinChangeMaskPortB, 65 enablePinChangeMaskPortC, 65 enablePinChangeMaskPortC, 65 enablePinChangeMaskPortC, 65 enablePinChangeMaskPortC, 65 enablePinChangeMaskPortD, 65 ExternInterrupt, 63, 64 getInstance, 66 IntiServiceRoutine, 66 operator-, 66 pinChangePortDServiceRoutine, 67 pinChangePortDServiceRoutine, 68 pinChangePortDServiceRoutine, 67 pinChangePortDServiceRoutine, 68 pinChangePortDServiceRoutine, 69 pinChangePortDServiceRoutine, 67 portDartart (120 portDartart (120 portDartart (120 portDartart (120 portDarta		·
enablePinChange, 64 enablePinChangeMaskPortB, 65 enablePinChangeMaskPortC, 65 enablePinChangeMaskPortD, 65 ExternInterrupt, 63, 64 getInstance, 66 InttServiceRoutine, 66 inttServiceRoutine, 66 pinChangePortBServiceRoutine, 66 pinChangePortBServiceRoutine, 67 pinChangePortBServiceRoutine, 68 pinChangePortBServiceRoutine, 68 pinChangePortBServiceRoutine, 69 pinChangePortBServiceRoutine, 67 pinCh	·	
enablePinChange, 64 enablePinChangeMaskPortB, 65 enablePinChangeMaskPortC, 65 enablePinChangeMaskPortD, 65 ExternInterrupt, 63, 64 getInstance, 66 Int1ServiceRoutine, 66 operator-, 66 pinChangePortBServiceRoutine, 67 pinChangePortBServiceRoutine, 67 pinChangePortBServiceRoutine, 67 seltIntSenseControl, 67 core::MCU, 75 disableBOD, 76 enableADC, 76 enableTimerCounter0, 77 enableTimerCounter0, 77 enableTimerCounter1, 77 enableTimerCounter1, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableTounter2, 77 enableOutputCompareMatchInterrupt, 116 enableOverflowInterrupt, 116 getClockPrescaler, 118 getCloutputCompareRegister, 117 selectClockSource, 117 selectCounter, 118 externally, visible, 127used, 127used, 127used, 128 selectOperationMode, 125 setCounter, 128 setCounter, 130 on-ableInputCaptureRegister, 133 enableOutputCompareRegister, 133 inputCaptureRegister, 133 inputCaptureRegister, 133 outputCompareMatchAServiceRoutine, 134 selectClockSource, 137 selfuputCaptureRegister, 137 selfuputCaptureRegister, 137 selfuputCaptureRegister, 137 selfuputCaptureRegister, 133 inputCaptureRegister, 133 inputCaptureRegister, 133 selectCompareOutputMode, 135 selectCompareOutp		
enablePinChangeMaskPortD, 65 enablePinChangeMaskPortD, 65 ExternInterrupt, 63, 64 getInstance, 66 IntOServiceRoutine, 66 intOServiceRoutine, 66 pinChangePortBServiceRoutine, 66 pinChangePortBServiceRoutine, 67 pinChangePortDServiceRoutine, 67 setInt1SenseControl, 67 core::MCU, 75 enableSDD, 76 enableSDD, 76 enableSDE, 76 enableFimerCounter0, 77 enableTimerCounter1, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableSpenable, 79 solectSleepMode, 79 solectSleepMode, 79 selectCloepRoareMatchInterrupt, 116 getCounter, 116 getCounter, 116 getCounter, 116 getCounter, 117 selectCompareOutputMode, 117 selectCompareRegister, 117 selectCompareRegister, 117 selectCompareRegister, 117 selectCompareRegister, 117 setCounter, 118 core::TimerCounter0, 118externally_visible, 127used, 127 ~TimerCounter0, 120 enableOverflowInterrupt, 121 enableOverflowInterrupt, 121 enableOverflowInterrupt, 121 enableOverflowInterrupt, 121 enableOverflowInterrupt, 121 getClockPrescaler, 122 getCounter, 122		• • • • • •
enablePinChangeMaskPortD, 65 enablePinChangeMaskPortD, 65 ExternInterrupt, 63, 64 getInstance, 66 IntOServiceRoutine, 66 intOServiceRoutine, 66 pinChangePortBServiceRoutine, 66 pinChangePortBServiceRoutine, 67 pinChangePortDServiceRoutine, 67 setInt1SenseControl, 67 core::MCU, 75 enableSDD, 76 enableSDD, 76 enableSDE, 76 enableFimerCounter0, 77 enableTimerCounter1, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableSpenable, 79 solectSleepMode, 79 solectSleepMode, 79 selectCloepRoareMatchInterrupt, 116 getCounter, 116 getCounter, 116 getCounter, 116 getCounter, 117 selectCompareOutputMode, 117 selectCompareRegister, 117 selectCompareRegister, 117 selectCompareRegister, 117 selectCompareRegister, 117 setCounter, 118 core::TimerCounter0, 118externally_visible, 127used, 127 ~TimerCounter0, 120 enableOverflowInterrupt, 121 enableOverflowInterrupt, 121 enableOverflowInterrupt, 121 enableOverflowInterrupt, 121 enableOverflowInterrupt, 121 getClockPrescaler, 122 getCounter, 122	enablePinChangeMaskPortB, 65	setCounter, 126
ExternInterrupt, 63, 64 getInslarce, 66 Int0ServiceRoutine, 66 Int1ServiceRoutine, 66 int1ServiceRoutine, 66 operator=, 66 pinChangePortDServiceRoutine, 66 pinChangePortDServiceRoutine, 67 pinChangePortDServiceRoutine, 67 setInt0SenseControl, 67 setInt1SenseControl, 67 setInt1SenseControl, 67 enableBDD, 76 enableBDD, 76 enableBDD, 76 enableSPI, 76 enableTimerCounter1, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableSpephode, 79 selectSleepMode, 79 sleepEnable, 79 core::TimerCounter, 115 enableOvtprlucOmpareMatchInterrupt, 116 getCounter, 116 getCounter, 116 getCounter, 117 selectClockSource, 117 selectClockSource, 117 selectClockSource, 117 selectClockSource, 117 selectClockSource, 117 selectClockSource, 117 selectCompareOutputMode, 117 selectCompareOutputCompareMatchInterrupt, 141 enableOverflowInterrupt, 142 getCounter, 139 core::TimerCounter2, 144 nenableOverflowInterrupt, 141 enableOverflowInterrupt, 141 enableOverflowInterrupt, 142 getCounter, 143 getUngtCompareRegister, 143 m_clockPrescaler, 148 m_clockPrescaler, 148 m_clockPrescaler, 148 operator=, 144 outputCompareMatchAServiceRoutine, 144 outputCompareMatchAServiceRoutine, 144 outputCompareMatchAServiceRoutine, 144 outputCompareMatchAServiceRoutine, 144 outputCompareMatchAServiceRoutine, 130 ore::TimerCounter2, 139 setter 138 uset138uset138 uset138 uset138 uset138 uset138 uset132  getClockPrescaler, 132 getCounter, 132 getCounter_133 outputCompareMatchAServiceRoutine, 133 outputCompareMatchAServiceRoutine, 133 o	<del>_</del>	setOutputCompareRegister, 126
getInstance, 66 InttOServiceRoutine, 66 IntOServiceRoutine, 66 operator=, 66 operator=, 66 pinChangePortBServiceRoutine, 67 pinChangePortBServiceRoutine, 67 pinChangePortDServiceRoutine, 67 pinChangePortDServiceRoutine, 67 setIntISenseControl, 67 core::MCU, 75 disableBOD, 76 enableADC, 76 enableADC, 76 enableADC, 76 enableImerCounter1, 77 enableTimerCounter1, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableTimerCounter3, 78 goToSleep, 78 init, 79 selectSleepMode, 79 sleepEnable, 79 core::TimerCounter3 init, 79 selectClockSource, 117 selectCompareOutputMode, 117 setCounter, 116 getCounter, 117 selectCompareOutputMode, 117 selectCompareOutputCompareRegister, 117 start, 118 stop, 118 externally_visible, 127used, 127  ~TimerCounter0, 120 enableOutputCompareMatchInterrupt, 121 enableOverflowInterrupt, 122 enableOverflowInterrupt, 121 enableOverflowInterrupt, 122	enablePinChangeMaskPortD, 65	start, 126
Int0ServiceRoutine, 66 Int1ServiceRoutine, 66 operators, 66 operators, 66 pinChangePortBServiceRoutine, 67 pinChangePortBServiceRoutine, 67 setInt0SenseControl, 67 setInt1SenseControl, 67 setInt1SenseControl, 67 setInt1SenseControl, 67 enableBOD, 76 enableBOD, 76 enableSPI, 76 enableTimerCounter1, 77 enableTimerCounter1, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableUsARTO, 78 goToSleep, 78 init, 79 selectSleepMode, 79 sleepEnable, 79 core::TimerCounter, 116 enableOutpuCompareMatchInterrupt, 116 enableOutpuCompareMatchInterrupt, 116 getCounter, 116 getCounter, 116 getCounter, 117 selectClockSource, 117 selectCompareRegister, 117 selectCompareRegister, 117 selectCompareRegister, 117 selectCompareRegister, 117 start, 118 core::TimerCounter0, 120 enableOutpuCompareMatchInterrupt, 121 enableOverflowInterrupt, 141 enableOverflowInterrupt, 142 enableOverflowInterrupt, 143 getOutputCompareRegister, 143 m_clockPrescaler, 142 getCounter, 143 pertor=, 138 m_clockPrescaler, 133 outputCompareMatchAServiceRoutine, 133 outputCompareRegister, 137 selectCloexSource, 133 selectCloexSource, 133 selectCloexSource, 133 selectCloexSource, 134 selectCompareRegister, 137 selotUputCompareRegister, 137 setOutputCompareRegister, 137 setOutputCompareMatchInterrupt, 141 enableOverflowInterrupt, 141 enab	ExternInterrupt, 63, 64	stop, 127
Int1ServiceRoutine, 66 operator=, 66 pinChangePortBServiceRoutine, 66 pinChangePortBServiceRoutine, 67 pinChangePortDServiceRoutine, 67 sethtoSenseControl, 67 sethtoSenseControl, 67 sethtoSenseControl, 67 sethtoSenseControl, 67 disableBOD, 76 enableADC, 76 enableTimerCounter0, 77 enableTimerCounter1, 77 enableTimerCounter1, 77 enableTimerCounter2, 78 enableUsART0, 78 goToSleep, 78 init, 79 selectSleepMode, 79 sleepEnable, 79 core::TimerCounter, 116 getCounter, 117 selectCompareOutputMode, 117 selectCompareRegister, 117 selectCompareRegister, 117 selectCompareRegister, 117 selectCompareRegister, 117 setCounter, 117 setCounter, 118 enterCounter2, 139 externally_visible_, 127used, 127 used, 127 enableOutputCompareMatchInterrupt, 121 enableOverflowInterrupt, 141 enableOverflowInterrupt, 142 eptClockPrescaler, 142 getClockPrescaler, 143 m_clockPrescaler, 143 m_clockPrescaler, 144 operator=, 144 outputCompareMatchAServiceRoutine, 138 enableOverflowInterrupt, 141 enableOverflowInterrupt, 141 enableOverflowInterrupt, 141 enableOverflowInterrupt, 141 enableOverflowInterrupt, 142 eptClockPrescaler, 142 getClockPrescaler, 148 operator=, 138 enableOverflowInterrupt, 141 enableOverflowInterrupt, 141 enableOverflowInterrupt, 142 eptClockPrescaler, 142 operator=, 138 ou	getInstance, 66	TimerCounter0, 120
operator=, 66 pinChangePortBServiceRoutine, 66 pinChangePortBServiceRoutine, 67 pinChangePortDServiceRoutine, 67 setIntDSenseControl, 67 setIntDSenseControl, 67 setInt1SenseControl, 67 core::MCU, 75 disableBOD, 76 enableSPI, 77 enableTimerCounter0, 77 enableTimerCounter1, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableTwint 78 senableUsARTO, 78 softoSleep, 78 init, 79 selectSleepMode, 79 sleepEnable, 79 core::TimerCounter, 115 enableOutputCompareMatchInterrupt, 116 enableOutputCompareRegister, 117 selectClockSource, 117 selectClockSource, 117 selectClockSource, 117 selectClockSource, 117 selectClockSource, 117 setCoutputCompareRegister, 118 e_externally_visible, 127used, 127used, 127used, 127used, 127used, 127 enableOverflowInterrupt, 121 enableOverflowInterrupt, 121 enableOverflowInterrupt, 121 enableOverflowInterrupt, 121 enableOverflowInterrupt, 122 getCounter, 122 outputCompareRegister, 143 m_clockSource, 148 operator=, 148 outputCompareMatchAServiceRoutine, 138 nutputCaptureRegister, 139 outputCompareRegister, 137 setCoutputCompareRegister, 137 setCoutputCompareRegister, 137 setCoutputCompareMatchInterrupt, 141 enableOvetIowInterrupt, 141 enableOvetIowInterrupt, 142 getClockPrescaler	Int0ServiceRoutine, 66	core::TimerCounter1, 128
pinChangePortlServiceRoutine, 66 pinChangePortlServiceRoutine, 67 pinChangePortlServiceRoutine, 67 seltntlSenseControl, 67 settntlSenseControl, 67 settntlSenseControl, 67 settntlSenseControl, 67 settntlSenseControl, 67 settntlSenseControl, 67 disableBOD, 76 enableADC, 76 enableADC, 76 enableSPI, 76 enableTimerCounter0, 77 enableTimerCounter1, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableUSARTO, 78 gortSleep, 78 init, 79 selectSleepMode, 79 sleepEnable, 79 core::TimerCounter, 115 enableOverflowInterrupt, 116 getCounter, 116 getCounter, 116 getCounter, 117 selectClockSource, 117 selectClockSource, 117 selectClockSource, 117 selectCompareRegister, 117 setCounter, 117 selectCounter, 118externally_visible, 127used, 127used, 127used, 127used, 127 getCounter, 122 getCounter, 143 m_clockSource, 148 m_clockSource, 148 m_clockSource, 148 m_clockSource, 148 poperator=, 144 outputCompareRegister, 143 poperator=, 144 outputCompareRegister, 144 outputCompareRegister, 144 outputCompareRegister, 144	Int1ServiceRoutine, 66	externally_visible, 138
pinChangePortCServiceRoutine, 67 pinChangePortDServiceRoutine, 67 setIntDServiceRoutine, 67 setIntDServiceRoutine, 67 setIntSenseControl, 67 setIntSenseControl, 67 setIntSenseControl, 67 setIntSenseControl, 67 getClockPrescaler, 132 getClockPrescaler, 132 getCouther, 132 getCouther, 132 getCouther, 132 getCouther, 132 getCouther, 132 getInputCaptureRegister, 133 inputCaptureRegister, 133 inputCaptureRegister, 133 inputCaptureRegister, 133 inputCaptureRegister, 133 m_clockPsecaler, 133 m_clockSource, 139 operator=, 133 outputCompareMatchAServiceRoutine, 134 overflowServiceRoutine, 134 overflowServiceRoutine, 134 overflowServiceRoutine, 134 selectSleepMode, 79 sleepEnable, 79 core::TimerCounter, 115 enableOverflowInterrupt, 116 getClockPrescaler, 116 getCouther, 116 getCouther, 117 selectClockSource, 117 selectClockSource, 117 selectClockSource, 117 selectClockSource, 117 setCounter, 118externally_visible, 148used, 148 ~TimerCounter2, 141 enableOverflowInterrupt, 141 enableOverflowInterrupt, 142 getClockPrescaler, 148 m_clockSource, 148 m_clockSource, 148 operator=, 144 outputCompareRegister, 144 outputCompareMatchAServiceRoutine, 144	operator=, 66	used, 138
pinChangePortDServiceRoutine, 67 setInt1SenseControl, 67 setInt1SenseControl, 67 core:::MCU, 75 disableBOD, 76 enableADC, 76 enableSPI, 76 enableSPI, 76 enableTimerCounter1, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableTimerCounter2, 79 selectSleepMode, 79 selectSleepMode, 79 selectSleepMode, 79 selectConpareMatchInterrupt, 116 enableOverflowInterrupt, 116 getCounter, 115 getCounter, 116 getCounter, 116 getCounter, 117 selectComparePegister, 117 selectComparePegister, 117 selectComparePegister, 117 selectComparePegister, 117 selectOmpareRegister, 117 setCounter, 118externally_visible, 127used, 127used, 127used, 127mableOutputCompareMatchInterrupt, 121 enableOverflowInterrupt, 121 enableOverflowInterrupt, 121 getClockPrescaler, 122 getCounter, 132 getClockPrescaler, 132 getInstance, 132 getInputCaptureRegister, 132 getInputCaptureSegister, 132 getInstance, 133 outputCompareMatchAServiceRoutine, 133 outputCompareMatchAServiceRoutine, 133 selectClockSource, 134 selectCompareOutputMode, 135 selectCompareRegister, 137 setCounter, 137 setCounter, 137 setCounter, 139externally_visible, 137 setCounter, 139 outputCompareRegister, 132 getInstance, 132 getInstance, 132 getInstance, 132 getInstance, 132 getCounter, 135 setCounter, 136 n_clockPrescaler, 138 m_clockPrescaler, 138 m_clockPrescaler, 138 m_clockPrescaler, 138 m_clockPrescaler, 138 m_clockPrescaler, 13	pinChangePortBServiceRoutine, 66	$\sim$ TimerCounter1, 130
setInt0SenseControl, 67 core::MCU, 75 disableBOD, 76 enableADC, 76 enableADC, 76 enableTimerCounter0, 77 enableTimerCounter1, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableSplable, 79 selectSleepMode, 79 selectSleepMode, 79 selectSleepMode, 79 selectSloverflowInterrupt, 116 enableOverflowInterrupt, 116 getCounter, 116 getCounter, 116 getCounter, 117 selectCompareOutputMode, 117 selectCompareOutputMode, 117 selectCompareRegister, 118externally_visible, 127used, 127used, 127used, 127 getClockPrescaler, 122 getCounter, 124 outputCompareMatchAServiceRoutine, 144 outputCompareMatchInterrupt, 141 outputCompareRegister, 132 getCounter, 143 getClockPrescaler, 133 m_clockSource, 139 outputCompareMatchAServiceRoutine, 133 outputCompareMatchServiceRoutine, 133 outputCompareRegister, 133 m_clockSource, 139 outputCompareMatchServiceRoutine, 134 overflowServiceRoutine, 133 outputCompareMatchServiceRoutine, 133 outputCompareMatchServiceRoutine, 133 outputCompareMatchBegister, 133 selectClookSource, 134 selectClookSource, 134 selectClookSource, 134 selectClookPrescaler, 139 m_clockSource, 134 selectClookPrescaler, 139 m_clockSource, 134 selectClookPrescaler, 139 m_clockPrescaler, 143 m_clockSource, 134 selectClookSourc	pinChangePortCServiceRoutine, 67	enableInputCaptureInterrupt, 130
setInt1 SenseControl, 67  core::MCU, 75  disableBOD, 76 enableADC, 76 enableSPI, 76 enableFirmerCounter0, 77 enableTimerCounter1, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableSpep, 78 enableUsART0, 78 enableUsART0, 78 enableOutputCompareMatchInterrupt, 116 enableOutputCompareRegister, 117 selectOompareOutputMode, 117 selectOmpareOutputMode, 117 selectOmpareOutputMode, 117 selectOmpareOutputMode, 117 selectOmpareRegister, 117 selectOmpareRegister, 117 selectOmpareRegister, 117 selectOmpareRegister, 117 selectOmpareRegister, 117 selectOmpareRegister, 117 selectOmpareOutputMode, 117 selectOmpareOutputMode, 117 selectOmpareOutputMode, 117 selectOmpareOutputMode, 117 selectOmpareOutputMode, 117 selectOmpareRegister, 118 externally_visible, 148used, 148 used, 148 used, 149 seltInstance, 132 getCounter, 133 inputCaptureRegister, 133 inputCaptureServiceRoutine, 133 m_clockSource, 138 outputCompareMatchAserviceRoutine, 133 outputCompareRegister, 139 outputCompareMatchAserviceRoutine, 134 selectClockSource, 134 selectClockSource, 134 selectClockPrescaler, 138 overflowServiceRoutine, 133 overflowServiceRoutine,	pinChangePortDServiceRoutine, 67	enableOutputCompareMatchInterrupt, 131
core::MCU, 75 disableBOD, 76 enableADC, 76 enableSPI, 76 enableSPI, 76 enableSPI, 76 enableTimerCounter0, 77 enableTimerCounter1, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableUSART0, 78 goToSleep, 78 init, 79 selectSleepMode, 79 sleepEnable, 79 core::TimerCounter, 115 enableOutputCompareMatchInterrupt, 116 enableOverflowInterrupt, 116 getClockPrescaler, 116 getClockPoscaler, 116 getClompareOutputMode, 117 selectClockSource, 117 selectCompareOutputMode, 117 selectCompareOutputMode, 117 setCounter, 117 setCounter, 117 setCounter, 117 setCounter, 118 enableOverflowInterrupt, 116 getClockPoscaler, 116 getClockPoscaler, 116 getClockPoscaler, 116 getClockPoscaler, 116 getClockPoscaler, 116 getClockPoscaler, 117 selectClockSource, 117 selectCompareOutputMode, 117 setCounter, 117 setCounter, 117 setCounter, 117 setCounter, 118 externally_visible, 127used, 128 getCounter, 129 getCounter, 129 getCounter, 122 getCounter, 124 outputCompareMatchAServiceRoutine, 133 outputCompareMatchAServiceRoutine, 133 outputCompareMatchBServiceRoutine, 133 outputCompa	setInt0SenseControl, 67	enableOverflowInterrupt, 131
disableBOD, 76 enableADC, 76 enableADC, 76 enableSPI, 76 enableTimerCounter0, 77 enableTimerCounter1, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableUSART0, 78 goToSleep, 78 init, 79 selectSleepMode, 79 selectClockPrescaler, 115 enableOutputCompareMatchInterrupt, 116 enableOverflowInterrupt, 116 getCounter, 116 getCounter, 116 getCounter, 116 getCounter, 116 selectCompareOutputMode, 117 selectCompareOutputMode, 117 selectCompareOutputMode, 117 selectCompareOutputMode, 117 selectCompareOutputMode, 117 setCounter, 118externally_visible, 127used, 128 getOutputCompareRegister, 129 getCounter, 122 getCounter, 122 getCounter, 122 outputCompareMatchInterrupt, 121 enableOverflowInterrupt, 122 enableOverflowInterrupt, 122 outputCompareRegister, 133 m_clockPourte, 133 outputCompareMatchAServiceRoutine, 133 outputCompareRegister, 133 enableOverflowInterrupt, 134 eslectClooreReciseRoutine, 133 outputCompareMatchAServiceRoutine, 133 outputCompareRegister, 133 entotheAServiceRoutine, 133 outputCompareMatchAServ	setInt1SenseControl, 67	getClockPrescaler, 132
enableADC, 76 enableSPI, 76 enableTimerCounter0, 77 enableTimerCounter1, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableUSART0, 78 enableUSART0, 78 enableUSART0, 78 enableOsep, 78 init, 79 selectSleepMode, 79 sleepEnable, 79 core::TimerCounter, 115 enableOverflowInterrupt, 116 getCounter, 116 getCounter, 116 getCounter, 116 getCounter, 116 getCounter, 117 selectCloekSource, 117 selectCompareRegister, 117 selectCoperationMode, 117 selectCoperationMode, 117 setCounter, 118 e_externally_visible, 127used, 127  ~TimerCounter0, 120 enableOutputCompareRegister, 122 getCounter, 122 getInstance, 132 getOutputCompareRegister, 133 inputCaptureServiceRoutine, 133 m_clockPrescaler, 138 m_clockSource, 139 outputCompareMatchAServiceRoutine, 133 outputCompareMatchAServiceRoutine, 133 outputCompareMatchAServiceRoutine, 134 selectClockSource, 134 selectClockSource, 137 selectCompareOutputMode, 135 setCounter, 137 setInputCaptureRegister, 137 setCoutputCompareRegister, 137 setCoutputCompareRegister, 137 setInputCaptureRegister, 137 setCoutputCompareRegister, 133 outputCompareMatchAServiceRoutine, 134 selectClockSource, 134 selectClockSource, 134 selectCompareRegister, 137 setCoutputCompareRegister, 137 setInputCaptureRegister, 137 setInputCaptureRegister, 137 setCoutputCompareRegister, 137 setInputCaptureRegister, 138 m_clockSource, 134 selectClockSource, 134 selectCompareRegister, 138 m_clockSource, 134 selectClockSource, 134 selectCompareRegister, 137 setCounter, 1,130 core::TimerCounter2, 149 externally_visible, 148 m_clockPrescaler, 142 getClockPrescaler, 143 m_clockPrescaler, 144 outputCompareMatchAServiceRoutine, 144 outputCompareMatchAServiceRoutine, 134 selectClockSource, 134 selectClockSource, 137 setCounter, 13	core::MCU, 75	getCounter, 132
enableSPI, 76 enableTimerCounter0, 77 enableTimerCounter1, 77 enableTimerCounter2, 77 enableUSART0, 78 enableUsAPserviceRoutine, 133 outputCompareRegister, 137 estCounter, 137 estCounter, 137 estCounter, 137 estCounter, 137 estCounter, 13	disableBOD, 76	getInputCaptureRegister, 132
enableTimerCounter0, 77 enableTimerCounter1, 77 enableTimerCounter2, 77 enableTimerCounter2, 77 enableTWI, 78 enableUSART0, 78 enableUSART0, 78 goToSleep, 78 init, 79 selectSleepMode, 79 selectSleepMode, 79 selectGounter, 115 enableOutputCompareMatchInterrupt, 116 enableOverflowInterrupt, 116 getCounter, 116 getCounter, 116 getCounter, 117 selectCompareOutputMode, 117 selectCompareOutputMode, 117 selectCompareOutputMode, 117 setCounter, 117 selectCompareOutputMode, 117 setCounter, 118externally_visible, 127used, 127 ~TimerCounter0, 120 enableOutputCompareMatchInterrupt, 121 enableOverflowInterrupt, 121 getClockPrescaler, 122 getCounter, 122 uptCompareMatchAServiceRoutine, 133 m_clockPoscaler, 139 outputCompareMatchAServiceRoutine, 133 m_clockPoscaler, 139 outputCompareMatchAServiceRoutine, 133 outputCompareMatchAServiceRoutine, 134 selectClockSource, 134 selectCompareOutputMode, 135 setCounter, 137 setCounter, 137 setOutputCompareRegister, 137 setOutputCompareRegister, 137 setOutputCompareRegister, 137 stop, 138 TimerCounter1, 130 core::TimerCounter2, 139externally_visible, 148used, 148used, 148used, 149 getClockPrescaler, 142 getCounter, 143 getInstance, 143 getInstance, 143 getInstance, 143 getInstance, 143 getInstance, 143 getCounter, 144 outputCompareMatchAServiceRoutine, 144	enableADC, 76	getInstance, 132
enableTimerCounter1, 77 enableTimerCounter2, 77 enableUSART0, 78 enableUSART0, 78 enableUSART0, 78 goToSleep, 78 init, 79 selectSleepMode, 79 sleepEnable, 79 core::TimerCounter, 115 enableOverflowInterrupt, 116 getConter, 116 getConter, 116 getCompareOutputMode, 117 selectCompareOutputMode, 117 selectCompareOutputMode, 117 selectCompareOutputMode, 117 selectCompareOutputMode, 117 selectCompareOutputMode, 117 setCounter, 117 setCounter, 117 setCounter, 118externally_visible, 127used, 127 ~TimerCounter0, 120 enableOverflowInterrupt, 121 enableOverflowInterrupt, 121 getClockPrescaler, 122 getCounter, 122  m_clockPource, 139 m_clockPource, 139 m_clockPource, 139 outputCompareMatchAServiceRoutine, 133 outputCompareMatchAServiceRoutine, 134 soluptCompareOutputMode, 135 selectClockSource, 134 selectCompareOutputMode, 135 selectCompareRegister, 137 setCounter, 139 selectCompareRegister, 137 setOutputCompareRegister, 137 setOutputCompareRegister, 139 externally_visible, 138 intplockSource, 139 outputCompareMatchAServiceRoutine, 133 outputCompareMatchAServiceRoutine, 134 selectClockSource, 134 selectClockSource, 134 selectCompareRegister, 137 setCounter, 130 core::TimerCounter1, 130 core::TimerCounter2, 139externally_visible, 148 used, 148  ~TimerCounter2, 141 enableOverflowInterrupt, 141 enableOverflowInterrupt, 141 enableOverflowInterrupt, 142 getClockPrescaler, 142 getClockPrescaler, 143 m_clockSource, 148 m_clockSource, 139 outputCompareMatchAServiceRoutine, 133 outputCompareMatchAServiceRoutine, 133 outputCompareMatchAServiceRoutine, 133 outputCompareMatchAServiceRoutine, 134 selectClockSource, 139 selectClockSource, 139 selectClockPrescaler, 143 m_clockSource, 139 outputCompareMatchAServiceRoutine, 133 outputCompareMatchAServiceRoutine, 134 selectClockPrescaler, 139 selectCompareMatchAServiceRoutine, 144 outputCompareMatchAServiceRoutine, 133 outputCompareMatchAServiceRoutine, 133 outputCompareMatchAServiceRoutine, 133 outputCompareMatchAServiceRoutine, 133 outputCompareMatchAServiceRout		getOutputCompareRegister, 133
enableTimerCounter2, 77 enableTWI, 78 enableUSART0, 78 operator=, 133 oporator=, 133 outputCompareMatchAServiceRoutine, 133 outputCompareMatchAServiceRoutine, 133 outputCompareMatchAServiceRoutine, 133 outputCompareMatchAServiceRoutine, 133 outputCompareMatchAServiceRoutine, 134 init, 79 selectSleepMode, 79 sleepEnable, 79 core::TimerCounter, 115 enableOutputCompareMatchInterrupt, 116 enableOverflowInterrupt, 116 getCoutputCompareRegister, 117 selectClockSource, 117 selectCompareOutputMode, 117 selectCompareRegister, 117 selectCompareOutputMode, 117 selectCompareRegister, 117 selectCompareOutputMode, 117 selectCompareRegister, 117 selectCompareOutputMode, 117 selectCompareRegister, 117 setOutputCompareRegister, 117 setOunter, 118 setOunter, 118 setOutputCompareMatchInterrupt, 141 enableOverflowInterrupt, 142 getClockPrescaler, 122 getCounter, 143 getCoutputCompareRegister, 143 m_clockSource, 148 m_clockSource, 148 m_clockSource, 148 poperator=, 133 outputCompareMatchAServiceRoutine, 133 outputComparePatchAthserviceRoutine, 133 outputCompareMatchAServiceRoutine, 133 outputCompareMatchAServiceRo	enableTimerCounter0, 77	inputCaptureServiceRoutine, 133
enableTWI, 78 enableUSART0, 78 enableUSART0, 78 enableUSART0, 78 goToSleep, 78 init, 79 selectSleepMode, 79 sleepEnable, 79 core::TimerCounter, 115 enableOverflowInterrupt, 116 enableOverflowInterrupt, 116 getClockPrescaler, 116 getCounter, 117 selectClockSource, 117 selectCompareOutputMode, 117 selectCompareOutputMode, 117 setCounter, 117 setCounter, 117 setCounter, 117 setCounter, 118 stop, 118 core::TimerCounter0, 118externally_visible, 127used, 127 ~TimerCounter0, 120 enableOverflowInterrupt, 121 enableOverflowInterrupt, 121 getClockPrescaler, 122 getCounter, 122  overflowServiceRoutine, 133 outputCompareMatchAServiceRoutine, 134 selectClockSource, 134 selectClockSource, 134 selectCompareOutputMode, 135 setCounter, 137 selectOperationMode, 137 setOutputCompareRegister, 137 start, 138 stop, 138 TimerCounter1, 130 core::TimerCounter2, 139externally_visible, 148used, 148 ~TimerCounter2, 141 enableOverflowInterrupt, 141 enableOverflowInterrupt, 142 getClockPrescaler, 142 getCounter, 143 getOutputCompareRegister, 143 m_clockPrescaler, 148 m_clockSource, 148 m_clockSource, 148 overflowServiceRoutine, 133 outputCompareMatchAServiceRoutine, 134 selectClockSource, 134 selectClockSource, 134 selectClockSource, 137 selectOperationMode, 135 setCounter, 137 setOutputCompareRegister, 137 setOutputCompareRegister, 137 start, 137 stop, 138 TimerCounter2, 139externally_visible, 148used, 148used, 148used, 148used, 149 getClockPrescaler, 142 getCounter, 143 getClockPrescaler, 142 getCounter, 143 getClockPrescaler, 144 m_clockPrescaler, 148 m_clockSource, 148 m_clockSource, 148 outputCompareMatchAServiceRoutine, 144	enableTimerCounter1, 77	m_clockPrescaler, 138
enableUSART0, 78 goToSleep, 78 init, 79 selectSleepMode, 79 sleepEnable, 79 core::TimerCounter, 115 enableOutputCompareMatchInterrupt, 116 getClockPrescaler, 116 getClotkSource, 117 selectClorepareMede, 117 selectCompareOutputMode, 117 selectCompareOutputMode, 117 selectCompareOutputMode, 117 selectCompareOutputMode, 117 setCounter, 118 enableOutputCompareMatchInterrupt, 141 stop, 118 core::TimerCounter0, 118 externally_visible, 127used, 127used, 127 orimerCounter0, 120 enableOutputCompareMatchInterrupt, 121 enableOverflowInterrupt, 121 getClockPrescaler, 122 getCounter, 143 m_clockPoescaler, 148 m_clockPoescaler, 148 operator=, 144 outputCompareMatchAServiceRoutine, 133 outputCompareMatchAServiceRoutine, 134 overflowServiceRoutine, 134 selectClockSource, 134 selectClockSource, 134 selectCompareOutputMode, 135 selectOperationMode, 135 setCounter, 137 setCounter, 137 setOutputCompareRegister, 137 start, 137 stop, 138 TimerCounter1, 130 core::TimerCounter2, 139 externally_visible, 148 used, 148  enableOutputCompareMatchInterrupt, 141 enableOverflowInterrupt, 141 enableOverflowInterrupt, 142 getClockPrescaler, 143 m_clockPrescaler, 148 operator=, 144 outputCompareMatchAServiceRoutine, 144	enableTimerCounter2, 77	m_clockSource, 139
goToSleep, 78 init, 79 selectSleepMode, 79 sleepEnable, 79 core::TimerCounter, 115 enableOverflowInterrupt, 116 getClockPrescaler, 116 getClockSource, 117 selectClockSource, 117 selectClockSource, 117 selectClockSource, 117 selectClockSource, 118 selectCompareOutputMode, 117 selectCompareOutputCompareRegister, 117 selectCompareOutputCompareRegister, 117 setCounter, 117 setCounter, 117 setCounter, 117 setCuptutCompareRegister, 117 start, 118 stop, 118 core::TimerCounter0, 118    externally_visible, 127    used, 127    used, 127    used, 127    used, 127    externally_visible, 127    externally_visible, 127    externally_visible, 127    externally_visible, 127    externally_visible, 127    externally_visible, 142 getClockPrescaler, 122 getCounter, 143 getInstance, 143 m_clockPrescaler, 148 m_clockPrescaler, 148 operator=, 144 outputCompareMatchAServiceRoutine, 134 overflowServiceRoutine, 134 selectClockSource, 134 selectCompareOutputMode, 135 setCounter, 137 setCounter, 137 setCounter, 139 setCounter1, 130 core::TimerCounter1, 130 core::TimerCounter2, 148 enableOutputCompareMatchInterrupt, 141 enableOverflowInterrupt, 141 enableOverflowInterrupt, 142 getCounter, 143 getInstance, 143 m_clockPrescaler, 148 operator=, 144 outputCompareMatchAServiceRoutine, 144		operator=, 133
init, 79 selectSleepMode, 79 sleepEnable, 79 sleepEnable, 79 selectCounter, 115 enableOutputCompareMatchInterrupt, 116 enableOverflowInterrupt, 116 getClockPrescaler, 116 getClockSource, 117 selectComparePoutputMode, 135 selectOperationMode, 135 setCounter, 137 setInputCaptureRegister, 137 setInputCompareRegister, 137 setOutputCompareRegister, 117 selectCompareOutputMode, 117 selectCompareOutputMode, 117 setCounter, 117 setCounter, 117 setCounter, 117 setOutputCompareRegister, 117 setOutputCompareMatchInterrupt, 141 enableOverflowInterrupt, 142 getClockPrescaler, 142 getCounter, 143 getInstance, 143 m_clockPoscaler, 148 m_clockSource, 148 operator=, 144 outputCompareMatchAServiceRoutine, 144		·
selectSleepMode, 79 sleepEnable, 79 selectCompareOutputMode, 135 selectCompareOutputMode, 135 selectOperationMode, 137 selectOperationMode, 116 getOutputCompareRegister, 117 selectClockSource, 117 selectClockSource, 117 selectOperationMode, 117 selectOperationMode, 117 selectOperationMode, 117 setOutputCompareRegister, 117 setOutputCompareRegister, 117 setOutputCompareRegister, 117 setOutputCompareRegister, 117 setOutputCompareRegister, 117 start, 118 stop, 118 core::TimerCounter2, 141 enableOverflowInterrupt, 142 getClockPrescaler, 142 getCounter, 143 getClockPrescaler, 143 m_clockSource, 148 m_clockSource, 148 operator=, 144 outputCompareMatchAServiceRoutine, 144		·
sleepEnable, 79  core::TimerCounter, 115	·	•
core::TimerCounter, 115 enableOutputCompareMatchInterrupt, 116 enableOverflowInterrupt, 116 enableOverflowInterrupt, 116 enableOverflowInterrupt, 116 getClockPrescaler, 116 getCounter, 116 getCounter, 116 getOutputCompareRegister, 117 selectClockSource, 117 selectCompareOutputMode, 117 selectOperationMode, 117 selectOperationMode, 117 setCounter, 118 setCounter, 117 setOutputCompareRegister, 118 =externally_visible, 148 =externally_visible, 127 =used, 127	•	
enableOutputCompareMatchInterrupt, 116 enableOverflowInterrupt, 116 enableOverflowInterrupt, 116 getClockPrescaler, 116 getCounter, 116 getOutputCompareRegister, 117 selectClockSource, 117 selectCompareOutputMode, 117 selectOperationMode, 117 setCounter, 117 setOutputCompareRegister, 117 setOutputCompareMatchInterrupt, 141 enableOverflowInterrupt, 142 getClockPrescaler, 142 getCounter, 143 getClockPrescaler, 143 m_clockPrescaler, 148 m_clockSource, 148 operator=, 144 outputCompareMatchAServiceRoutine, 144	·	• • •
enableOverflowInterrupt, 116 getClockPrescaler, 116 getCounter, 116 getCounter, 116 getOutputCompareRegister, 117 selectClockSource, 117 selectCompareOutputMode, 117 selectCompareOutputMode, 117 setCounter, 117 setCounter, 117 setOutputCompareRegister, 117 setCounter, 117 setOutputCompareRegister, 117 setOutputCompareRegister, 117 setOutputCompareRegister, 117 setOutputCompareRegister, 117 start, 118 stop, 118 core::TimerCounter0, 118externally_visible, 127used, 127	,	•
getClockPrescaler, 116 getCounter, 116 getQutputCompareRegister, 117 selectClockSource, 117 selectCompareOutputMode, 117 selectOperationMode, 117 setCounter, 117 setCounter, 117 setCounter, 117 setOutputCompareRegister, 117 setOutputCompareRegister, 117 setOutputCompareRegister, 117 start, 118 stop, 118 core::TimerCounter2, 141 start, 118 stop, 118 core::TimerCounter0, 118 sexternally_visible, 127 sused, 127 sused, 127 crimerCounter0, 120 enableOutputCompareMatchInterrupt, 121 enableOverflowInterrupt, 121 enableOverflowInterrupt, 121 getClockPrescaler, 122 getCounter, 148 operator=, 144 outputCompareMatchAServiceRoutine, 144	·	
getCounter, 116 getOutputCompareRegister, 117 selectClockSource, 117 selectCompareOutputMode, 117 selectOperationMode, 117 setCounter, 117 setCounter, 117 setOutputCompareRegister, 117 setOutputCompareRegister, 117 start, 118 stop, 118 core::TimerCounter0, 118externally_visible, 127used, 127	•	
getOutputCompareRegister, 117 selectClockSource, 117 selectCompareOutputMode, 117 selectOperationMode, 117 setCounter, 117 setOutputCompareRegister, 117 setOutputCompareRegister, 117 start, 118 stop, 118 core::TimerCounter2, 141 stop, 118 core::TimerCounter0, 118externally_visible, 127used, 127 ~TimerCounter0, 120 enableOutputCompareRegister, 121 enableOutputCompareRegister, 143 getClockPrescaler, 142 getOutputCompareRegister, 143 m_clockPrescaler, 148 m_clockSource, 148 operator=, 144 outputCompareMatchAServiceRoutine, 144	<del>-</del>	· · · · · · · · · · · · · · · · · · ·
selectClockSource, 117 selectCompareOutputMode, 117 selectOperationMode, 117 selectOperationMode, 117 setCounter, 117 setOutputCompareRegister, 117 start, 118 stop, 118 core::TimerCounter2, 141 stop, 118 core::TimerCounter0, 118externally_visible, 127used, 127 ~TimerCounter0, 120 enableOutputCompareMatchInterrupt, 121 enableOverflowInterrupt, 121 getClockPrescaler, 148 m_clockPrescaler, 148 getClockPrescaler, 149 getCounter, 149 get		
selectCompareOutputMode, 117 selectOperationMode, 117 setCounter, 117 setOutputCompareRegister, 117 start, 118 stop, 118 core::TimerCounter2, 141 stop, 118 core::TimerCounter0, 118externally_visible, 142 getClockPrescaler, 142 getCounter0, 120 enableOutputCompareMatchInterrupt, 121 enableOverflowInterrupt, 121 enableOverflowInterrupt, 121 getClockPrescaler, 148 m_clockSource, 148 getClockPrescaler, 122 operator=, 144 outputCompareMatchAServiceRoutine, 144		•
selectOperationMode, 117 setCounter, 117 setOutputCompareRegister, 117 start, 118 stop, 118 core::TimerCounter0, 118externally_visible, 127used, 127used, 127		
setCounter, 117 setOutputCompareRegister, 117 start, 118 stop, 118 core::TimerCounter0, 118externally_visible, 127used, 127 core::Counter0, 120 enableOutputCompareRegister, 143 enableOutputCompareRegister, 143 enableOutputCompareMatchInterrupt, 121 enableOverflowInterrupt, 142 enableOverflowInterrupt, 143 enableOverflowInterrupt, 143 enableOverflowInterrupt, 144 enableOverflowInterrupt, 145 enableOverflowInterrupt, 144 enableOverflowInterrupt, 145 enableOverflowInterrupt, 148 enableOverflowInterrupt, 148 enableOverflowInterrupt, 149 enableOverflowInte	·	
setOutputCompareRegister, 117  start, 118  stop, 118  core::TimerCounter0, 118 externally_visible, 127 used, 127  ~TimerCounter0, 120  enableOutputCompareMatchInterrupt, 143  getClockPrescaler, 143  getInstance, 143  getOutputCompareRegister, 143  m_clockPrescaler, 148  enableOverflowInterrupt, 121  m_clockPrescaler, 148  getClockPrescaler, 122  operator=, 144  outputCompareMatchAServiceRoutine, 144	•	·
start, 118 stop, 118 enableOutputCompareMatchInterrupt, 141 enableOverflowInterrupt, 142 getClockPrescaler, 142 getCounter, 143 getCounter, 143 getCounter, 143 getInstance, 143 core::TimerCounter0, 120 getOutputCompareRegister, 143 enableOutputCompareMatchInterrupt, 121 enableOverflowInterrupt, 121 getCounter, 148 getClockPrescaler, 148 getCounter, 122 getCounter, 148 operator=, 144 outputCompareMatchAServiceRoutine, 144		
stop, 118 core::TimerCounter0, 118    externally_visible, 127    used, 127     ~TimerCounter0, 120     enableOverflowInterrupt, 121     enableOverflowInterrupt, 121     enableOverflowInterrupt, 121     getCounter, 148     enableOverflowInterrupt, 121     getClockPrescaler, 148     getClockPrescaler, 122     getCounter, 149     operator=, 144     outputCompareMatchAServiceRoutine, 144		
core::TimerCounter0, 118 externally_visible, 127 used, 127  ~TimerCounter0, 120  enableOutputCompareMatchInterrupt, 121  enableOverflowInterrupt, 121  getClockPrescaler, 142  getCounter, 143  getOutputCompareRegister, 143  m_clockPrescaler, 148  m_clockSource, 148  getClockPrescaler, 122  operator=, 144  outputCompareMatchAServiceRoutine, 144		·
externally_visible, 127used, 127used, 127		•
used, 127 getInstance, 143     ~TimerCounter0, 120 getOutputCompareRegister, 143     enableOutputCompareMatchInterrupt, 121 m_clockPrescaler, 148     enableOverflowInterrupt, 121 m_clockSource, 148     getClockPrescaler, 122 operator=, 144     getCounter, 122 outputCompareMatchAServiceRoutine, 144		
~TimerCounter0, 120 getOutputCompareRegister, 143 enableOutputCompareMatchInterrupt, 121 m_clockPrescaler, 148 enableOverflowInterrupt, 121 m_clockSource, 148 getClockPrescaler, 122 operator=, 144 getCounter, 122 outputCompareMatchAServiceRoutine, 144		
enableOutputCompareMatchInterrupt, 121 m_clockPrescaler, 148 enableOverflowInterrupt, 121 m_clockSource, 148 getClockPrescaler, 122 operator=, 144 getCounter, 122 outputCompareMatchAServiceRoutine, 144		
enableOverflowInterrupt, 121 m_clockSource, 148 getClockPrescaler, 122 operator=, 144 getCounter, 122 outputCompareMatchAServiceRoutine, 144		
getClockPrescaler, 122 operator=, 144 getCounter, 122 outputCompareMatchAServiceRoutine, 144	·	
getCounter, 122 outputCompareMatchAServiceRoutine, 144		
		·

	overflowServiceRoutine, 144		buzzer_pitches_8bit.h, 207
	selectClockSource, 144	D4	
	selectCompareOutputMode, 145		buzzer_pitches_16bit.h, 193
	selectOperationMode, 146	D5	
	setCounter, 146	Б.	buzzer_pitches_16bit.h, 193
	setOutputCompareRegister, 147	D6	human mitabaa dichit hi doo
	start, 147	D7	buzzer_pitches_16bit.h, 193
	stop, 147 TimerCounter2, 141	D7	huzzor pitches 16hit h 104
coro	::WatchdogTimer, 166	data	buzzer_pitches_16bit.h, 194 Mode
COIE	externally_visible, 170	uaia	io, 39
	externally_visible, 170 used, 170	data	Order
	~WatchdogTimer, 167	data	io, 40
	getInstance, 167	data	Overrun
	m_operationMode, 170		io::USART0, 151
	m_timeOut, 170	data	RegisterEmptyServiceRoutine
	operator=, 168		io::USART0, 152
	reset, 168	DCN	<b>Notor</b>
	selectTimeOut, 168		component::DCMotor, 60
	start, 168, 169	DCN	Notor.cpp, 211
	stop, 169	DCN	Notor.h, 211, 214
	timeOutServiceRoutine, 169	disa	ble
	WatchdogTimer, 167		io, 41
CTC	_ICR	disa	bleBOD
	core, 33, 34		core::MCU, 76
CTC	_OCR	disa	bled
	core, 33, 34		core, 30
curre	entPos	disc	onnect
_	component::StepperMotor, 108		component::DCMotor, 60
Cx0			component::ServoMotor, 94
	buzzer_pitches_16bit.h, 191	dupl	
01	buzzer_pitches_8bit.h, 206	D0	io, 39
Cx1	buzzer pitches 16bit h 101	Dx0	buzzor pitaboo 16bit b 104
Cx2	buzzer_pitches_16bit.h, 191		buzzer_pitches_16bit.h, 194 buzzer_pitches_8bit.h, 207
UXZ	buzzer_pitches_16bit.h, 191	Dx1	buzzei_pitches_obit.ii, 207
	buzzer_pitches_8bit.h, 206	DXI	buzzer_pitches_16bit.h, 194
СхЗ	buzzer_phones_obit.n, zoo	Dx2	buzzer_piteries_robit.ii, ro-
OAO	buzzer_pitches_16bit.h, 192	DAL	buzzer pitches 16bit.h, 194
	buzzer_pitches_8bit.h, 206		buzzer_pitches_8bit.h, 207
Cx4	201_0p	Dx3	
	buzzer_pitches_16bit.h, 192		buzzer_pitches_16bit.h, 194
Cx5	<b>–</b> ,		buzzer_pitches_8bit.h, 207
	buzzer_pitches_16bit.h, 192	Dx4	
Cx6			buzzer_pitches_16bit.h, 194
	buzzer_pitches_16bit.h, 192	Dx5	
Cx7			buzzer_pitches_16bit.h, 195
	buzzer_pitches_16bit.h, 192	Dx6	
			buzzer_pitches_16bit.h, 195
D0		Dx7	
<b>5</b> .4	buzzer_pitches_16bit.h, 192		buzzer_pitches_16bit.h, 195
D1		<b>-</b> 0	
	buzzer_pitches_16bit.h, 193	E0	human misshar dobish doc
Da	buzzer_pitches_8bit.h, 206	□4	buzzer_pitches_16bit.h, 195
D2	huzzor pitchos 16hit h 100	E1	huzzor pitchoo 16hith 105
	buzzer_pitches_16bit.h, 193 buzzer_pitches_8bit.h, 207		buzzer_pitches_16bit.h, 195
D٥	DUZZEI_PIIGHES_ODILH, ZU/	E2	buzzer_pitches_8bit.h, 207
D3	huzzer pitches 16hit h 102	L2	huzzer nitches 16hit h 105
	buzzer_pitches_16bit.h, 193		buzzer_pitches_16bit.h, 195

	buzzer_pitches_8bit.h, 208	enableTransferCompleteInterrupt
E3		io::SPI, 99
	ouzzer_pitches_16bit.h, 196	enableTransmitCompleteInterrupt
	buzzer_pitches_8bit.h, 208	io::USART0, 153
E4		enableTWI
	buzzer_pitches_16bit.h, 196	core::MCU, 78
E5 .	502251_51t01105_1051tt11, 100	enableUSART0
	buzzar pitahas 16bit h 106	
	ouzzer_pitches_16bit.h, 196	core::MCU, 78
E6 .		evenParity
	buzzer_pitches_16bit.h, 196	io, 41
E7		EXT_INT_DISABLE_INT0
	buzzer_pitches_16bit.h, 196	ha_m328p.h, <mark>228</mark>
eightl	Bits	EXT_INT_DISABLE_INT1
į	o, 40	ha_m328p.h, <mark>229</mark>
enabl	eADC	EXT_INT_DISABLE_PIN_CHANGE_INTERRUPT
(	core::MCU, 76	ha_m328p.h, 229
	eAutoTrigger	EXT_INT_DISABLE_PIN_CHANGE_MASK_PORTB
	core::ADConverter, 49	ha m328p.h, 229
	eConversionCompleteInterrupt	EXT_INT_DISABLE_PIN_CHANGE_MASK_PORTC
	core::ADConverter, 49	ha_m328p.h, 229
enabl		EXT_INT_DISABLE_PIN_CHANGE_MASK_PORTD
	core, 30	ha_m328p.h, 229
	eDataRegisterEmptyInterrupt	EXT_INT_ENABLE_INT0
	o::USART0, 152	ha_m328p.h, <mark>229</mark>
enabl	eInputCaptureInterrupt	EXT_INT_ENABLE_INT1
(	core::TimerCounter1, 130	ha_m328p.h, 230
enabl	eInt0	EXT_INT_ENABLE_PIN_CHANGE_INTERRUPT
(	core::ExternInterrupt, 64	ha_m328p.h, 230
enabl	•	EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTB
	core::ExternInterrupt, 64	ha_m328p.h, 230
	•	
	AC HITCHITC COMPARAMISTONINTARY INT	EXT INT ENARIE PIN CHANGE MASK PORTO
	eOutputCompareMatchInterrupt	EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTC
(	core::TimerCounter, 116	ha_m328p.h, 230
(	core::TimerCounter, 116 core::TimerCounter0, 121	ha_m328p.h, 230 EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD
(	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131	ha_m328p.h, 230 EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230
(	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141	ha_m328p.h, 230 EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230 EXT_INT_INTO_INTERRUPT
enabl	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141 leOverflowInterrupt	ha_m328p.h, 230 EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230 EXT_INT_INTO_INTERRUPT ha_m328p.h, 230
enabl	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141 eOverflowInterrupt core::TimerCounter, 116	ha_m328p.h, 230 EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230 EXT_INT_INT0_INTERRUPT ha_m328p.h, 230 EXT_INT_INT1_INTERRUPT
enabl	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141 leOverflowInterrupt	ha_m328p.h, 230 EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230 EXT_INT_INTO_INTERRUPT ha_m328p.h, 230
enabl	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141 eOverflowInterrupt core::TimerCounter, 116	ha_m328p.h, 230 EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230 EXT_INT_INT0_INTERRUPT ha_m328p.h, 230 EXT_INT_INT1_INTERRUPT
enabl	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141 eOverflowInterrupt core::TimerCounter, 116 core::TimerCounter0, 121	ha_m328p.h, 230 EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230 EXT_INT_INT0_INTERRUPT ha_m328p.h, 230 EXT_INT_INT1_INTERRUPT ha_m328p.h, 231
enabl	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141 leOverflowInterrupt core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 142	ha_m328p.h, 230  EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230  EXT_INT_INTO_INTERRUPT ha_m328p.h, 230  EXT_INT_INT1_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTB_INTERRUPT ha_m328p.h, 231
enabl	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141 leOverflowInterrupt core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 142 lePinChange	ha_m328p.h, 230  EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230  EXT_INT_INTO_INTERRUPT ha_m328p.h, 230  EXT_INT_INT1_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTB_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTC_INTERRUPT
enabl	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141 eeOverflowInterrupt core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 142 eePinChange core::ExternInterrupt, 64	ha_m328p.h, 230  EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230  EXT_INT_INTO_INTERRUPT ha_m328p.h, 230  EXT_INT_INT1_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTB_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTC_INTERRUPT ha_m328p.h, 231
enabl enabl enabl	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141 leOverflowInterrupt core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 142 lePinChange core::ExternInterrupt, 64 lePinChangeMaskPortB	ha_m328p.h, 230  EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230  EXT_INT_INT0_INTERRUPT ha_m328p.h, 230  EXT_INT_INT1_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTB_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTC_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT
enable en	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141 leOverflowInterrupt core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 142 lePinChange core::ExternInterrupt, 64 lePinChangeMaskPortB core::ExternInterrupt, 65	ha_m328p.h, 230  EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230  EXT_INT_INT0_INTERRUPT ha_m328p.h, 230  EXT_INT_INT1_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTB_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTC_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231
enabl enabl enabl	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141 leOverflowInterrupt core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 142 lePinChange core::ExternInterrupt, 64 lePinChangeMaskPortB core::ExternInterrupt, 65 lePinChangeMaskPortC	ha_m328p.h, 230  EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230  EXT_INT_INT0_INTERRUPT ha_m328p.h, 230  EXT_INT_INT1_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTB_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTC_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_SET_INT0_SENSE_CONTROL
enabl enabl enabl	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141 leoVerflowInterrupt core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 142 leePinChange core::ExternInterrupt, 64 leePinChangeMaskPortB core::ExternInterrupt, 65 leePinChangeMaskPortC core::ExternInterrupt, 65	ha_m328p.h, 230  EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230  EXT_INT_INTO_INTERRUPT ha_m328p.h, 230  EXT_INT_INT1_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTB_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTC_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_SET_INTO_SENSE_CONTROL ha_m328p.h, 231
enable en	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141 leoVerflowInterrupt core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 142 leoPinChange core::ExternInterrupt, 64 leoPinChangeMaskPortB core::ExternInterrupt, 65 leoPinChangeMaskPortC core::ExternInterrupt, 65 leoPinChangeMaskPortD	ha_m328p.h, 230  EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230  EXT_INT_INTO_INTERRUPT ha_m328p.h, 230  EXT_INT_INT1_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTB_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTC_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_SET_INTO_SENSE_CONTROL ha_m328p.h, 231  EXT_INT_SET_INT1_SENSE_CONTROL
enabl enabl enabl	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141 eeOverflowInterrupt core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 142 eePinChange core::ExternInterrupt, 64 leePinChangeMaskPortB core::ExternInterrupt, 65 leePinChangeMaskPortC core::ExternInterrupt, 65 leePinChangeMaskPortD core::ExternInterrupt, 65	ha_m328p.h, 230  EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230  EXT_INT_INTO_INTERRUPT ha_m328p.h, 230  EXT_INT_INT1_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTB_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTC_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_SET_INTO_SENSE_CONTROL ha_m328p.h, 231  EXT_INT_SET_INT1_SENSE_CONTROL ha_m328p.h, 231
enabl enabl enabl	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141 leoVerflowInterrupt core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 142 leoPinChange core::ExternInterrupt, 64 leoPinChangeMaskPortB core::ExternInterrupt, 65 leoPinChangeMaskPortC core::ExternInterrupt, 65 leoPinChangeMaskPortD	ha_m328p.h, 230  EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230  EXT_INT_INTO_INTERRUPT ha_m328p.h, 230  EXT_INT_INT1_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTB_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTC_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_SET_INTO_SENSE_CONTROL ha_m328p.h, 231  EXT_INT_SET_INT1_SENSE_CONTROL
enable en	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141 eeOverflowInterrupt core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 142 eePinChange core::ExternInterrupt, 64 leePinChangeMaskPortB core::ExternInterrupt, 65 leePinChangeMaskPortC core::ExternInterrupt, 65 leePinChangeMaskPortD core::ExternInterrupt, 65	ha_m328p.h, 230  EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230  EXT_INT_INTO_INTERRUPT ha_m328p.h, 230  EXT_INT_INT1_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTB_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTC_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_SET_INTO_SENSE_CONTROL ha_m328p.h, 231  EXT_INT_SET_INT1_SENSE_CONTROL ha_m328p.h, 231
enable en	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141 leoverflowInterrupt core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 142 lePinChange core::ExternInterrupt, 64 lePinChangeMaskPortB core::ExternInterrupt, 65 lePinChangeMaskPortC core::ExternInterrupt, 65 lePinChangeMaskPortD core::ExternInterrupt, 65 lePinChangeMaskPortD core::ExternInterrupt, 65 lePenChangeMaskPortD core::ExternInterrupt, 65	ha_m328p.h, 230  EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230  EXT_INT_INT0_INTERRUPT ha_m328p.h, 230  EXT_INT_INT1_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTB_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTC_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_SET_INT0_SENSE_CONTROL ha_m328p.h, 231  EXT_INT_SET_INT1_SENSE_CONTROL ha_m328p.h, 231  extendedStandby
enable en	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141 leoverflowInterrupt core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 142 lePinChange core::ExternInterrupt, 64 lePinChangeMaskPortB core::ExternInterrupt, 65 lePinChangeMaskPortC core::ExternInterrupt, 65 lePinChangeMaskPortD core::ExternInterrupt, 65 lePinChangeMaskPortD core::ExternInterrupt, 65 lePenChangeMaskPortD core::ExternInterrupt, 65	ha_m328p.h, 230  EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230  EXT_INT_INT0_INTERRUPT ha_m328p.h, 230  EXT_INT_INT1_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTB_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTC_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_SET_INT0_SENSE_CONTROL ha_m328p.h, 231  EXT_INT_SET_INT1_SENSE_CONTROL ha_m328p.h, 231  extendedStandby core, 36
enable en	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141 leoVerflowInterrupt core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 142 leePinChange core::ExternInterrupt, 64 leePinChangeMaskPortB core::ExternInterrupt, 65 leePinChangeMaskPortC core::ExternInterrupt, 65 leePinChangeMaskPortD core::ExternInterrupt, 65 leePinChangeMaskPortD core::ExternInterrupt, 65 leePinChangeMaskPortD core::ExternInterrupt, 65 leeReceiveCompleteInterrupt io::USART0, 153 leeSPI	ha_m328p.h, 230  EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230  EXT_INT_INT0_INTERRUPT ha_m328p.h, 230  EXT_INT_INT1_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTB_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTC_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_SET_INT0_SENSE_CONTROL ha_m328p.h, 231  EXT_INT_SET_INT1_SENSE_CONTROL ha_m328p.h, 231  extendedStandby core, 36  extern_Clock_T0_Falling_Edge core, 32
enable en	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141 leoVerflowInterrupt core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 142 leoPinChange core::ExternInterrupt, 64 leoPinChangeMaskPortB core::ExternInterrupt, 65 leoPinChangeMaskPortC core::ExternInterrupt, 65 leoPinChangeMaskPortD core::ExternInterrupt, 65 leoPinChangeM	ha_m328p.h, 230  EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230  EXT_INT_INTO_INTERRUPT ha_m328p.h, 230  EXT_INT_INT1_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTB_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTC_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_SET_INTO_SENSE_CONTROL ha_m328p.h, 231  EXT_INT_SET_INT1_SENSE_CONTROL ha_m328p.h, 231  extendedStandby core, 36  extern_Clock_T0_Falling_Edge core, 32  extern_Clock_T0_Rising_Edge
enable en	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141 eeOverflowInterrupt core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 142 eePinChange core::ExternInterrupt, 64 eePinChangeMaskPortB core::ExternInterrupt, 65 eePinChangeMaskPortC core::ExternInterrupt, 65 eePinChangeMaskPortD core::ExternInterrupt, 65 eePinChangeMaskPortD core::ExternInterrupt, 65 eeReceiveCompleteInterrupt fo::USART0, 153 eeSPI core::MCU, 76 eeTimerCounter0 core::MCU, 77	ha_m328p.h, 230  EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230  EXT_INT_INTO_INTERRUPT ha_m328p.h, 230  EXT_INT_INT1_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTB_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTC_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_SET_INTO_SENSE_CONTROL ha_m328p.h, 231  EXT_INT_SET_INT1_SENSE_CONTROL ha_m328p.h, 231  extendedStandby core, 36  extern_Clock_T0_Falling_Edge core, 32  extern_Clock_T0_Rising_Edge core, 32
enable en	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141 eOverflowInterrupt core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 142 ePinChange core::ExternInterrupt, 64 ePinChangeMaskPortB core::ExternInterrupt, 65 ePinChangeMaskPortC core::ExternInterrupt, 65 ePinChangeMaskPortD core::ExternInterrupt fo::USART0, 153 eSPI core::MCU, 76 eTimerCounter0 core::MCU, 77 eTimerCounter1	ha_m328p.h, 230  EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230  EXT_INT_INTO_INTERRUPT ha_m328p.h, 230  EXT_INT_INT1_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTB_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTC_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_SET_INTO_SENSE_CONTROL ha_m328p.h, 231  EXT_INT_SET_INT1_SENSE_CONTROL ha_m328p.h, 231  extendedStandby core, 36  extern_Clock_T0_Falling_Edge core, 32  extern_Clock_T0_Rising_Edge core, 32  ExternInterrupt
enable en	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141 leoVerflowInterrupt core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 142 leoPinChange core::ExternInterrupt, 64 leoPinChangeMaskPortB core::ExternInterrupt, 65 leoPinChangeMaskPortC core::ExternInterrupt, 65 leoPinChangeMaskPortD core::MCU, 76 leoTimerCounter0 core::MCU, 77 leoTimerCounter1 core::MCU, 77	ha_m328p.h, 230  EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230  EXT_INT_INT0_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTB_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTC_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_SET_INT0_SENSE_CONTROL ha_m328p.h, 231  EXT_INT_SET_INT1_SENSE_CONTROL ha_m328p.h, 231  extendedStandby core, 36  extern_Clock_T0_Falling_Edge core, 32  extern_Clock_T0_Rising_Edge core, 32  ExternInterrupt core::ExternInterrupt, 63, 64
enable en	core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 141 eOverflowInterrupt core::TimerCounter, 116 core::TimerCounter0, 121 core::TimerCounter1, 131 core::TimerCounter2, 142 ePinChange core::ExternInterrupt, 64 ePinChangeMaskPortB core::ExternInterrupt, 65 ePinChangeMaskPortC core::ExternInterrupt, 65 ePinChangeMaskPortD core::ExternInterrupt fo::USART0, 153 eSPI core::MCU, 76 eTimerCounter0 core::MCU, 77 eTimerCounter1	ha_m328p.h, 230  EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTD ha_m328p.h, 230  EXT_INT_INTO_INTERRUPT ha_m328p.h, 230  EXT_INT_INT1_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTB_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTC_INTERRUPT ha_m328p.h, 231  EXT_INT_PIN_CHANGE_PORTD_INTERRUPT ha_m328p.h, 231  EXT_INT_SET_INTO_SENSE_CONTROL ha_m328p.h, 231  EXT_INT_SET_INT1_SENSE_CONTROL ha_m328p.h, 231  extendedStandby core, 36  extern_Clock_T0_Falling_Edge core, 32  extern_Clock_T0_Rising_Edge core, 32  ExternInterrupt

extInterrupt	buzzer_pitches_16bit.h, 198
core, 30	buzzer_pitches_8bit.h, 209
F0	Fx4
	buzzer_pitches_16bit.h, 198
buzzer_pitches_16bit.h, 196 F1	Fx5
buzzer_pitches_16bit.h, 197	buzzer_pitches_16bit.h, 199
buzzer_pitches_16bit.h, 197 buzzer_pitches_8bit.h, 208	Fx6
F2	buzzer_pitches_16bit.h, 199
buzzer pitches 16bit.h, 197	Fx7
buzzer_pitches_8bit.h, 208	buzzer_pitches_16bit.h, 199
F3	G0
buzzer_pitches_16bit.h, 197	buzzer_pitches_16bit.h, 199
buzzer_pitches_8bit.h, 208	G1
F4	buzzer_pitches_16bit.h, 199
buzzer_pitches_16bit.h, 197	buzzer_pitches_8bit.h, 209
F5	G2
buzzer pitches 16bit.h, 197	buzzer pitches 16bit.h, 199
F6	buzzer_pitches_8bit.h, 209
buzzer_pitches_16bit.h, 197	G3
F7	buzzer pitches 16bit.h, 200
buzzer_pitches_16bit.h, 198	buzzer_pitches_8bit.h, 209
fallingEdge	G4
core, 36	buzzer_pitches_16bit.h, 200
fast PWM	G5
core, 33	buzzer_pitches_16bit.h, 200
fast_PWM_10bit	G6
 core, <u>33</u>	buzzer_pitches_16bit.h, 200
fast PWM 8bit	G7
 core, <mark>33</mark>	buzzer_pitches_16bit.h, 200
fast PWM 9bit	getClockPrescaler
core, 33	core::TimerCounter, 116
fast PWM ICR	core::TimerCounter0, 122
core, 33	core::TimerCounter1, 132
fast_PWM_OCR	core::TimerCounter2, 142
core, 33	getConversionResult
first_LSB	core::ADConverter, 50
io, 40	getCounter
first_MSB	core::TimerCounter, 116
io, 40	core::TimerCounter0, 122
fiveBits	core::TimerCounter1, 132
io, 40	core::TimerCounter2, 143
frameError	getInputCaptureRegister
io::USART0, 154	core::TimerCounter1, 132
frameSize	getInstance
io, 40	core::ADConverter, 51
freeRunning	core::ExternInterrupt, 66
core, 30	core::TimerCounter0, 122
fullStep	core::TimerCounter1, 132
component, 28	core::TimerCounter2, 143
Fx0	core::WatchdogTimer, 167
buzzer_pitches_16bit.h, 198	io::SPI, 100
Fx1	io::USART0, 154
buzzer_pitches_16bit.h, 198	getLux
buzzer_pitches_8bit.h, 208	component::LDR, 70
Fx2	getNumberBytesReceived
buzzer_pitches_16bit.h, 198	io::USART0, 154
buzzer_pitches_8bit.h, 209	getNumberBytesSent
Fx3	io::USART0, 155

getOutputCompareRegister	EXT_INT_DISABLE_INT0, 228
core::TimerCounter, 117	EXT_INT_DISABLE_INT1, 229
core::TimerCounter0, 123	EXT_INT_DISABLE_PIN_CHANGE_INTERRUPT,
core::TimerCounter1, 133	229
core::TimerCounter2, 143	EXT_INT_DISABLE_PIN_CHANGE_MASK_PORTB,
getPinNumber	229
io::Pin, 82	EXT_INT_DISABLE_PIN_CHANGE_MASK_PORTC,
getPressedCount	229
component::PushButton, 89	EXT_INT_DISABLE_PIN_CHANGE_MASK_PORTD,
getResistance component::LDR, 70	229
goalReached	EXT_INT_ENABLE_INTO, 229
component::StepperMotor, 108	EXT_INT_ENABLE_INT1, 230
goToSleep	EXT_INT_ENABLE_PIN_CHANGE_INTERRUPT,
core::MCU, 78	230 EVI INT ENABLE DIN CHANCE MASK DODTE
Gx0	EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTB, 230
buzzer_pitches_16bit.h, 200	EXT_INT_ENABLE_PIN_CHANGE_MASK_PORTC,
buzzer_pitches_8bit.h, 209	230
Gx1	EXT INT ENABLE PIN CHANGE MASK PORTD,
buzzer pitches 16bit.h, 201	230
buzzer pitches 8bit.h, 210	EXT INT INTO INTERRUPT, 230
Gx2	EXT_INT_INTO_INTERRUPT, 231
buzzer_pitches_16bit.h, 201	EXT_INT_PIN_CHANGE_PORTB_INTERRUPT,
buzzer_pitches_8bit.h, 210	231
Gx3	EXT_INT_PIN_CHANGE_PORTC_INTERRUPT,
buzzer_pitches_16bit.h, 201	231
Gx4	EXT_INT_PIN_CHANGE_PORTD_INTERRUPT,
buzzer_pitches_16bit.h, 201	231
Gx5	EXT_INT_SET_INT0_SENSE_CONTROL, 231
buzzer_pitches_16bit.h, 201	EXT_INT_SET_INT1_SENSE_CONTROL, 231
Gx6	MCU ADC DISABLE, 232
buzzer_pitches_16bit.h, 201	MCU_ADC_ENABLE, 232
Gx7	MCU_BOD_DISABLE, 232
buzzer_pitches_16bit.h, 202	MCU SELECT SLEEP MODE, 232
	MCU_SLEEP_DISABLE, 232
ha_base.h, 220, 221	MCU_SLEEP_ENABLE, 232
STR, 221	MCU_SPI_DISABLE, 233
STRx, 221	MCU SPI ENABLE, 233
ha_m328p.h, 222, 253	MCU_TIMER0_DISABLE, 233
ADC_ADJUST_RESULT_LEFT, 226	MCU_TIMERO_ENABLE, 233
ADC_ADJUST_RESULT_RIGHT, 226	MCU TIMER1 DISABLE, 233
ADC_CONVERSION_COMPLETE_INTERRUPT,	MCU_TIMER1_ENABLE, 233
226	MCU TIMER2 DISABLE, 234
ADC_DISABLE, 226 ADC_DISABLE_AUTOTRIGGER, 226	MCU_TIMER2_ENABLE, 234
ADC_DISABLE_AOTOTHIGGER, 226  ADC_DISABLE_CONVERSION_COMPLETE_INTERF	
	MCU_TWI_ENABLE, 234
227 ADC DISABLE DIGITAL INPUT REGISTER,	MCU_USART0_DISABLE, 234
227	MCU_USART0_ENABLE, 234
ADC ENABLE, 227	PUSHBUTTON_DEBOUNCE_TIME_US, 235
ADC_ENABLE_AUTOTRIGGER, 227	PUSHBUTTON SAMPLING, 235
ADC_ENABLE_CONVERSION_COMPLETE_INTERR	
227	SERVOMOTOR_TIMER_PULSE_WIDTH_COUNT,
ADC_SELECT_ANALOG_INPUT, 227	235
ADC_SELECT_AUTO_TRIGGER_SOURCE, 228	SPI_CONTROL_REGISTER, 235
ADC_SELECT_ACTO_TRIGGER_SOURCE, 228  ADC_SELECT_CLOCK_PRESCALER, 228	SPI_DATA_REGISTER, 236
ADC_SELECT_CEOCK_FRESCALER, 228	SPI_DISABLE, 236
ADC_START_CONVERSION, 228	SPI_DISABLE_TRANSFER_COMPLETE_INTERRUPT
ADC_START_CONVERSION, 228	236
, 12 3_0 1 0 1 _0 0 1 4 1 E 1 0 1 0 1 4 , 2 E 0	200

SPI_ENABLE, 236	TIMER2_COM_CHANNEL_A_INTERRUPT, 243
SPI_ENABLE_TRANSFER_COMPLETE_INTERRUPT,	TIMER2_COM_CHANNEL_B_INTERRUPT, 243
236	TIMER2_DISABLE_COM_CHANNEL_A_INTERRUPT,
SPI_MASTER_MODE, 236	244
SPI_SELECT_CLOCK_PRESCALER, 237	TIMER2_DISABLE_COM_CHANNEL_B_INTERRUPT,
SPI_SELECT_DATA_MODE, 237	244
SPI_SELECT_DATA_ORDER, 237	TIMER2_DISABLE_OVERFLOW_INTERRUPT,
SPI_SELECT_MASTER_MODE, 237	244 TIMEDA ENADLE COM CHANNEL A INTERDURT
SPI_SELECT_SLAVE_MODE, 237 SPI_STATUS_REGISTER, 237	TIMER2_ENABLE_COM_CHANNEL_A_INTERRUPT, 244
SPI TRANSFER COMPLETE, 238	TIMER2_ENABLE_COM_CHANNEL_B_INTERRUPT,
SPI_TRANSFER_COMPLETE_NTERRUPT, 238	244
SPI_WRITE_COLLISION, 238	TIMER2_ENABLE_OVERFLOW_INTERRUPT,
TIMERO_COM_CHANNEL_A_INTERRUPT, 238	244
TIMERO_COM_CHANNEL_B_INTERRUPT, 238	TIMER2_OVERFLOW_INTERRUPT, 245
TIMERO_DISABLE_COM_CHANNEL_A_INTERRUPT,	TIMER2_SELECT_CLOCK_SOURCE, 245
238	TIMER2 SELECT COM CHANNEL A, 245
TIMERO DISABLE COM CHANNEL B INTERRUPT,	TIMER2 SELECT COM CHANNEL B, 245
239	TIMER2_SELECT_OPERATION_MODE, 245
TIMERO_DISABLE_OVERFLOW_INTERRUPT,	TIMER2 STOP, 245
239	USARTO_CONTROL_STATUS_REGISTER, 246
TIMERO_ENABLE_COM_CHANNEL_A_INTERRUPT,	USARTO_DATA_OVERRUN, 246
239	USART0_DATA_REGISTER, 246
TIMERO_ENABLE_COM_CHANNEL_B_INTERRUPT,	USARTO_DATA_REGISTER_EMPTY_INTERRUPT,
239	246
TIMERO_ENABLE_OVERFLOW_INTERRUPT,	USARTO_DISABLE_DATA_REGISTER_EMPTY_INTERRUPT,
239	246
TIMER0_OVERFLOW_INTERRUPT, 239	USARTO_DISABLE_DOUBLE_SPEED_MODE,
TIMER0_SELECT_CLOCK_SOURCE, 240	246, 247
TIMER0_SELECT_COM_CHANNEL_A, 240	USARTO_DISABLE_PARITY_MODE, 247
TIMER0_SELECT_COM_CHANNEL_B, 240	USARTO_DISABLE_RECEIVE_COMPLETE_INTERRUPT,
TIMER0_SELECT_OPERATION_MODE, 240	247
TIMER0_STOP, 240	USARTO_DISABLE_RECEIVER, 247
TIMER1_COM_CHANNEL_A_INTERRUPT, 240	USARTO_DISABLE_TRANSMIT_COMPLETE_INTERRUPT,
TIMER1_COM_CHANNEL_B_INTERRUPT, 241	247
TIMER1_DISABLE_COM_CHANNEL_A_INTERRUPT,	USARTO_DISABLE_TRANSMITTER, 247
241	USARTO_ENABLE_ASYNC_TRANSMISSION_MODE,
TIMER1_DISABLE_COM_CHANNEL_B_INTERRUPT,	248
241	USARTO_ENABLE_DATA_REGISTER_EMPTY_INTERRUPT, 248
TIMER1_DISABLE_INPUT_CAPTURE_INTERRUPT, 241	USARTO_ENABLE_DOUBLE_SPEED_MODE,
TIMER1_DISABLE_OVERFLOW_INTERRUPT,	248
241	USARTO_ENABLE_EVEN_PARITY_MODE, 248
TIMER1_ENABLE_COM_CHANNEL_A_INTERRUPT,	USARTO ENABLE MASTER SPI MODE, 248
241	USARTO_ENABLE_ODD_PARITY_MODE, 248
TIMER1_ENABLE_COM_CHANNEL_B_INTERRUPT,	USARTO_ENABLE_RECEIVE_COMPLETE_INTERRUPT,
242	249
TIMER1_ENABLE_INPUT_CAPTURE_INTERRUPT,	USARTO ENABLE RECEIVER, 249
242	USARTO_ENABLE_SYNC_TRANSMISSION_MODE,
TIMER1_ENABLE_OVERFLOW_INTERRUPT,	249
242	USARTO_ENABLE_TRANSMIT_COMPLETE_INTERRUPT,
TIMER1_INPUT_CAPTURE_INTERRUPT, 242	249
TIMER1_OVERFLOW_INTERRUPT, 242	USARTO_ENABLE_TRANSMITTER, 249
TIMER1_SELECT_CLOCK_SOURCE, 242	USART0_FRAME_ERROR, 249
TIMER1_SELECT_COM_CHANNEL_A, 243	USARTO_PARITY_ERROR, 250
TIMER1_SELECT_COM_CHANNEL_B, 243	USARTO_RECEIVE_COMPLETE_INTERRUPT,
TIMER1_SELECT_OPERATION_MODE, 243	250
TIMER1_STOP, 243	USART0_SET_5BIT_FRAME_SIZE, 250

first_LSB, 40 first_MSB, 40 fiveBits, 40 frameSize, 40 master, 41 masterSPI, 42 mode_0, 39 mode_1, 39 mode_2, 39  getInstance, 100 m_data, 104 m_pinMISO, 104 m_pinMOSI, 104 m_pinSCK, 105 m_pinSS, 105 masterReceiveByte, 100 masterSendByte, 100 operator=, 101	USART0_SET_6BIT_FRAME_SIZE, 250	operationMode, 41
USARTO_SET_BAUDRATE_HIGH_REGISTER,		
USARTO_SET_BAUDRATE_HIGH_REGISTER, 251 USARTO_SET_BAUDRATE_LOW_REGISTER, 251 USARTO_SET_ONE_STOP_BIT, 251 USARTO_SET_TWO_STOP_BITS, 252 USARTO_TRANSMIT_COMPLETE_INTERRUPT, 252 WATCHDOG_START, 252 WATCHDOG_START, 252 WATCHDOG_START, 252 WATCHDOG_START, 252 WATCHDOG_STOP_S22 WATCHDOG_STOP_SE2 WATCHDOG_STOP_S22 WATCHDOG_STOP_SE2 WATCHDOG_STOP_S22 WATCHDOG_STOP_S22 WATCHDOG_STOP_S22 WATCHDOG_STOP_S22 WATCHDOG_STOP_S22 WATCHDOG_STOP_S22 WATCHDOG_STOP_SS_8 RS_8, 38 receive, 39 sevenBits, 40 sixBits,		
251 USARTO_SET_BAUDRATE_LOW_REGISTER, 251 USARTO_SET_ONE_STOP_BIT, 251 USARTO_SET_TWO_STOP_BITS, 252 USARTO_TRANSMIT_COMPLETE_INTERRUPT, 252 WATCHDOG_START, 252 WATCHDOG_START, 252 WATCHDOG_START, 252 WATCHDOG_STOP_252 WATCHDOG_TIMEOUT_INTERRUPT, 252 hallStep component, 28  Idle core, 36 init core::MCU, 79 inputCaptureServiceRoutine core::EnternInterrupt, 66 intl ServiceRoutine core::ExternInterrupt, 66 internal core, 33, 34 interrupt diadadode, 39 dataMode,		
USARTO_SET_BAUDRATE_LOW_REGISTER, 251 USARTO_SET_ONE_STOP_BIT, 251 USARTO_SET_TWO_STOP_BITS, 252 USARTO_TRANSMIT_COMPLETE_INTERRUPT, 252 WATCHDOG_START, 252 WATCHDOG_START, 252 WATCHDOG_START, 252 WATCHDOG_TIMEOUT_INTERRUPT, 252 hallStep component, 28  Idle core, 36 init core::MCU, 79 inputCaptureServiceRoutine core::ExternInterrupt, 66 init core, 35 interrupt core, 33, 34 io, 37 async, 42 clockPrescaler, 38 communicationMode, 39 dataMode, 39 dataOrder, 40 disable, 41 duplex, 39 eightBits, 40 evenParity, 41 first_LSB, 40 first_MSB, 40 master, 41 masterSPI, 42 mode_0, 39 mode_1, 39 mode_2, 39  mode_1, 39 mode_2, 39  mode_1, 39 mode_2, 39  mode_1, 39 mode_2, 39  mode_1, 39 mode_2, 39		
251 USARTO_SET_ONE_STOP_BIT, 251 USARTO_SET_TWO_STOP_BITS, 252 USARTO_TRANSMIT_COMPLETE_INTERRUPT, 252 WATCHDOG_SELECT_TIMEOUT, 252 WATCHDOG_START, 252 WATCHDOG_START, 252 WATCHDOG_TIMEOUT_INTERRUPT, 252 halfStep component, 28  Idle core::MCU, 79 inpit(CaptureServiceRoutine core::ExternInterrupt, 66 internal core, 35 interrupt core, 35 interrupt core, 33, 34 interrupt_reset core, 35 interrupt core, 36 interrupt core, 36 interrupt core, 36 interrupt core, 35 interrupt for interval core, 36 interrupt core, 36 interval cor		_ :
USARTO_SET_ONE_STOP_BIT, 251		
USARTO_SET_TWO_STOP_BITS, 252 USARTO_TRANSMIT_COMPLETE_INTERRUPT, 252 WATCHDOG_SELECT_TIMEOUT, 252 WATCHDOG_START, 252 WATCHDOG_START, 252 WATCHDOG_START, 252 WATCHDOG_STOP, 252 WATCHDOG_TIMEOUT_INTERRUPT, 252 halfStep component, 28  Idle core, 36 init core::MCU, 79 inputCaptureServiceRoutine core::EnternInterrupt, 66 internal core, 35 interrupt core, 35 interrupt core, 33, 34 in, 37 async, 42 clockPrescaler, 38 communicationMode, 39 dataMode,		<del>-</del> :
USART0_TRANSMIT_COMPLETE_INTERRUPT, 252  WATCHDOG_SELECT_TIMEOUT, 252  WATCHDOG_START, 252  WATCHDOG_STOP, 252  WATCHDOG_TIMEOUT_INTERRUPT, 252  halfStep		= ·
WATCHDOG_SELECT_TIMEOUT, 252 WATCHDOG_START, 252 WATCHDOG_STOP, 252 WATCHDOG_TIMEOUT_INTERRUPT, 252 halfStep component, 28 ldle core, 36 init core::MCU, 79 inputCaptureServiceRoutine core::ExternInterrupt, 66 internal core, 35 interrupt core, 35, 34 interrupt core, 33, 34 interrupt reset core, 33, 34 interrupt reset core, 33, 34 io, 37 async, 42 clockPrescaler, 38 communicationMode, 39 dataMode, 39 dataMode, 39 dataMode, 39 dataMode, 39 dataMode, 39 dataMode, 39 diable, 41 duplex, 39 eightBits, 40 evenParity, 41 first_LSB, 40 fiveBits, 40 frameSize, 40 master, 41 masterSPI, 42 mode_0, 39 mode_1, 39 mode_2, 39 mode_2, 39  masterSendByte, 100 sixble, 40 slave, 41 stopBit, 40 slave, 41 submaster, 41 stopBit, 40 slave, 42 transmissionMode, 20 isker, 41 stopBit, 40		
WATCHDOG_SELECT_TIMEOUT, 252 WATCHDOG_START, 252 WATCHDOG_STOP, 252 WATCHDOG_TIMEOUT_INTERRUPT, 252 halfStep component, 28  Idle core, 36 init core::MCU, 79 inputCaptureServiceRoutine core::ExternInterrupt, 66 Int1ServiceRoutine core::ExternInterrupt, 66 internal core, 33, 34 interrupt_reset core, 33, 34 interrupt_reset core, 33, 34 io, 37 async, 42 clockPrescaler, 38 communicationMode, 39 dataMode, 39 dataMode, 39 dataMode, 39 eightBits, 40 evenParity, 41 first_LSB, 40 first_MSB, 40 first_MSB, 40 frameSize, 40 master, 41 masterSPI, 42 mode_1, 39 mode_1, 39 mode_2, 39  mede_2, 39  masterSendByte, 100 masterSendByte, 100 masterSendByte, 100 moperator=, 101		<del>-</del> ·
WATCHDOG_START, 252 WATCHDOG_TIMEOUT_INTERRUPT, 252 hallStep component, 28  Idle core, 36  init core::MCU, 79 inputCaptureServiceRoutine core::TimerCounter1, 133 InttOServiceRoutine core::ExternInterrupt, 66 internal core, 35 interrupt core, 33, 34 interrupt_reset core, 33, 34 interrupt_reset core, 33, 34 io, 37  async, 42 clockPrescaler, 38 communicationMode, 39 dataOrder, 40 disable, 41 duplex, 39 eightBits, 40 evenParity, 41 first_LSB, 40 first_MSB, 40 fiveBits, 40 master, 41 masterSPI, 42 mode_0, 39 mode_1, 39 mode_1, 39 mode_1, 39 mode_1, 39 mode_1, 39 mode_0, 39 mode_0, 39 mode_0, 39 mode_0, 39 mode_1, 39 mode_0,		<del>-</del> ·
WATCHDOG_STOP, 252 WATCHDOG_TIMEOUT_INTERRUPT, 252 halfStep component, 28  Idle core, 36 init core::MCU, 79 inputCaptureServiceRoutine core::TimerCounter1, 133 Int0ServiceRoutine core::ExternInterrupt, 66 internal core, 35 interrupt core, 33, 34 interrupt_reset core, 33, 34 io, 37 async, 42 clockPrescaler, 38 communicationMode, 39 dataMode, 39 dataMode, 39 dataMode, 39 dataMode, 39 distable, 41 duplex, 39 eightBits, 40 evenParity, 41 first_LSB, 40 first_MSB, 4		•
WATCHDOG_TIMEOUT_INTERRUPT, 252 halfstep component, 28  slave, 41 stopBit, 41 submaster, 41 sync, 42 transmissionMode, 42 transmissionM		
halfStep component, 28 stopBit, 41 submaster, 41 sync, 42 transmissionMode, 42 transmit, 39 twoStopBits, 42 io::Pin, 80		
Idle		
Idle core, 36	•	•
core, 36 init core::MCU, 79 inputCaptureServiceRoutine core::TimerCounter1, 133 Int0ServiceRoutine core::ExternInterrupt, 66 Int1ServiceRoutine core, 35 internal core, 35 interrupt core, 35 interrupt core, 33, 34 interrupt_reset core, 33, 34 io, 37 async, 42 clockPrescaler, 38 communicationMode, 39 dataMode, 39 dataMode, 39 dataOrder, 40 disable, 41 duplex, 39 eightBits, 40 evenParity, 41 first_LSB, 40 first_MSB, 40 master, 41 masterSPI, 42 mode_0, 39 mode_1, 39 mode_2, 39 mode_2, 39  internamissionMode, 42 transmit, 39 twoStopBits, 42 io::Pin, 80  ~Pin, 82 getPinNumber, 82 isHigh, 82 isLow, 83 mp_portName, 85 Pin, 81 setLow, 83 isHigh, 83 setLow, 83 io::Port, 85 mp_portName, 85 Pin, 81 vortlander is High, 82 isLow, 83 mp_portName, 85 pin, 81 vortlander is High, 82 is H	56.11, 25	•
core::MCU, 79 inputCaptureServiceRoutine	Idle	•
init core::MCU, 79 inputCaptureServiceRoutine core::TimerCounter1, 133 Int0ServiceRoutine core::ExternInterrupt, 66 int1ServiceRoutine core::ExternInterrupt, 66 internal core, 35 interrupt core, 33, 34 interrupt reset core, 33, 34 interrupt reset clockPrescaler, 38 communicationMode, 39 dataMode, 39 dataMode, 39 disable, 41 duplex, 39 eightBits, 40 evenParity, 41 first_LSB, 40 first_MSB, 40 first_MSB, 40 first_MSB, 40 master, 41 masterSPI, 42 mode_0, 39 mode_1, 39 mode_2, 39  interSetimerCounter1, 133 methodate core; 32 io::Pin, 80  ~Pin, 82 getPinNumber, 82 is:High, 83 m_pinNumber, 85 mr_portName, 85 Pin, 81 setHigh, 83 setLow, 83 tooluput, 84 toOutput, 84 toOutput, 84 toOutput, 84 toSPIt, 97 io::Port, 85 mp_ddrReg, 86 mp_pinReg, 86 mp_pinReg, 86 io::SPI, 97 getInsance, 100 m_data, 104 m_pinMISO, 104 m_pinMISO, 104 m_pinMSOI, 104 m_pinSSI, 105 masterSendByte, 100 operator=, 101	core, 36	
inputCaptureServiceRoutine   core::TimerCounter1, 133   Int0ServiceRoutine   core::ExternInterrupt, 66   Int1ServiceRoutine   core::ExternInterrupt, 66   internal   core, 35   interrupt   core, 33, 34   core, 34   core, 36   core, 37   core, 37   core, 38   communicationMode, 39   dataMode, 39   dataMode, 39   dataOrder, 40   disable, 41   duplex, 39   eightBits, 40   evenParity, 41   evenParity, 41   disable, 40   first_LSB, 40   first_LSB, 40   first_LSB, 40   first_MSB, 40   first_MSB, 40   first_MSB, 40   first_MSB, 40   m_binMSO, 104   m_pinMSO, 104   m_pinMSO, 104   m_pinSCk, 105   m_sterSPI, 42   m_pinSS, 105   masterSendByte, 100   mode_1, 39   mode_2, 39   operator=, 101	init	
InfoCaptureserviceRounine	•	•
Core::TimerCounter1, 133   getPinNumber, 82   isHigh, 82   isHigh, 82   isHigh, 82   isHigh, 82   isLow, 83   m_pinNumber, 85   mr_portName, 85   pin, 81   setHigh, 83   setLow, 83   interrupt   reset   core, 33, 34   toOutput, 84   toOutput, 8	·	
isHigh, 82 isLow, 83 Int1ServiceRoutine		
Int1ServiceRoutine		<del>-</del>
core::ExternInterrupt, 66 internal	•	_
internal core, 35 interrupt set Light, 83 setLow, 83 interrupt core, 33, 34 setLow, 83 setLow, 83 interrupt set core, 33, 34 io., 37 source, 22 source, 28 clockPrescaler, 38 communicationMode, 39 dataMode, 39 dataMode, 39 dataOrder, 40 disable, 41 setPhillips, 40 evenParity, 41 getInstance, 100 first_MSB, 40 fiveBits, 40 fiveBits, 40 master, 41 master, 41 master, 41 master, 41 masterSPI, 42 mode_0, 39 mode_1, 39 mode_2, 30 mode_1, 30 mode_2, 30 setLow, 85 mr_portName, 85 mr_portNa		
core, 35 interrupt	· · · · · · · · · · · · · · · · · · ·	<del></del>
interrupt setHigh, 83 core, 33, 34 interrupt_reset toggle, 84 io, 37 async, 42 clockPrescaler, 38 communicationMode, 39 dataMode, 39 dataOrder, 40 disable, 41 duplex, 39 eightBits, 40 evenParity, 41 first_LSB, 40 first_MSB, 40 fiveBits, 40 master, 41 masterSPI, 42 mode_0, 39 mode_1, 39 mode_2, 39  ioggle, 84 tolnput, 84 ioggle, 84 tolnput, 84 iogue, 86 mp_portReg, 86 mp_pinReg, 86 mp_pinReg, 86 mp_portReg, 86 ioggle, 84 tolnput, 84 iogue, 84 ioggle, 84 tolnput, 84 iogue, 84 mp_pinReg, 86 mp_portReg, 86 ioggle, 84 iogue, 84 mp_pinReg, 86 mp_portReg, 86 ioggle, 84 mp_pinReg, 86 mp_portReg, 86 ioggle, 84 mp_pinReg, 86 mp_portReg, 86 ioggle, 84 mp_pinReg, 86 mp_pinReg, 86 mp_portReg, 86 mp_portReg, 86 mp_portReg, 86 mp_pinReg, 86 mp_pinReg, 86 mp_pinReg, 86 mp_pinReg, 86 mp_portReg, 86 mp_pinReg, 86 mp_pinR		<del>_</del>
core, 33, 34 interrupt_reset		
interrupt_reset core, 33, 34 toOutput, 84 toOutput, 84 toOutput, 84 toOutput, 84 toOutput, 85 mp_ddrReg, 86 mp_pinReg, 86 mp_pinReg, 86 mp_pinReg, 86 mp_protReg, 86 mp_pro	·	_
tolnput, 84  to, 37  async, 42 clockPrescaler, 38 communicationMode, 39 dataMode, 39 dataOrder, 40 disable, 41 duplex, 39 eightBits, 40 evenParity, 41 first_LSB, 40 first_MSB, 40 first_MSB, 40 firameSize, 40 master, 41 masterSPI, 42 mode_0, 39 mode_1, 39 mode_2, 39  tolnput, 84 toOutput, 84		
toOutput, 84  async, 42 clockPrescaler, 38 communicationMode, 39 dataMode, 39 dataOrder, 40 disable, 41 duplex, 39 eightBits, 40 first_LSB, 40 first_MSB, 40 fiveBits, 40 master, 41 masterSPI, 42 mode_0, 39 mode_1, 39 mode_2, 39  toOutput, 84 io::Port, 85 mp_ddrReg, 86 mp_pinReg, 86 mp_portReg, 86 io::SPI, 97  externally_visible, 104 externally_visible, 104 used, 104 ~SPI, 99 enableTransferCompleteInterrupt, 99 getInstance, 100 m_data, 104 m_pinMISO, 104 m_pinMOSI, 104 m_pinSCK, 105 m_pinSS, 105 masterReceiveByte, 100 masterSendByte, 100 masterSendByte, 100 operator=, 101		
async, 42 clockPrescaler, 38 communicationMode, 39 dataMode, 39 dataOrder, 40 disable, 41 duplex, 39 eightBits, 40 evenParity, 41 first_LSB, 40 first_MSB, 40 firseBits, 40 master, 41 masterSPI, 42 mode_0, 39 mode_1, 39 mode_2, 39  io::Port, 85 mp_ddrReg, 86 mp_pinReg, 86 mp_portReg, 86 io::SPI, 97 externally_visible, 104used, 104used, 104sPI, 99 enableTransferCompleteInterrupt, 98 getInstance, 100 m_data, 104 m_pinMISO, 104 m_pinMOSI, 104 m_pinSCK, 105 masterReceiveByte, 100 masterSendByte, 100 operator=, 101		•
clockPrescaler, 38 communicationMode, 39 dataMode, 39 dataOrder, 40 disable, 41 duplex, 39 eightBits, 40 evenParity, 41 first_LSB, 40 fiveBits, 40 fiveBits, 40 master, 41 masterSPI, 42 mode_0, 39 mode_1, 39 mode_2, 39  mp_ddrReg, 86 mp_pinReg, 86 mp_portReg, 86 io::SPI, 97 externally_visible, 104used, 104 ~SPI, 99 enableTransferCompleteInterrupt, 98 getInstance, 100 m_data, 104 m_pinMOSI, 104 m_pinMOSI, 104 m_pinSCK, 105 masterReceiveByte, 100 masterSendByte, 100 masterSendByte, 100 operator=, 101		•
communicationMode, 39 dataMode, 39 dataOrder, 40 disable, 41 duplex, 39 eightBits, 40 evenParity, 41 first_LSB, 40 fiveBits, 40 fiveBits, 40 master, 41 masterSPI, 42 mode_0, 39 mode_1, 39 mode_2, 39  mp_pinReg, 86 mp_portReg, 86 io::SPI, 97 externally_visible, 104used, 104 ~SPI, 99 enableTransferCompleteInterrupt, 96 getInstance, 100 m_data, 104 m_pinMISO, 104 m_pinMOSI, 104 m_pinSCK, 105 m_pinSCK, 105 masterReceiveByte, 100 masterSendByte, 100 operator=, 101		
dataMode, 39       mp_portReg, 86         dataOrder, 40       io::SPI, 97         disable, 41      externally_visible, 104         duplex, 39      used, 104         eightBits, 40      used, 104         evenParity, 41       enableTransferCompleteInterrupt, 99         first_LSB, 40       m_data, 104         fiveBits, 40       m_pinMISO, 104         frameSize, 40       m_pinMOSI, 104         master, 41       m_pinSCK, 105         masterSPI, 42       m_pinSS, 105         mode_0, 39       masterReceiveByte, 100         mode_1, 39       masterSendByte, 100         mode_2, 39       operator=, 101		
dataOrder, 40       io::SPI, 97         disable, 41      externally_visible, 104         duplex, 39      used, 104         eightBits, 40       ~SPI, 99         evenParity, 41       enableTransferCompleteInterrupt, 99         first_LSB, 40       m_data, 104         fiveBits, 40       m_pinMISO, 104         frameSize, 40       m_pinMOSI, 104         master, 41       m_pinSCK, 105         masterSPI, 42       m_pinSS, 105         mode_0, 39       masterReceiveByte, 100         mode_1, 39       masterSendByte, 100         mode_2, 39       operator=, 101		mp_portReg, 86
disable, 41 duplex, 39 eightBits, 40 evenParity, 41 first_LSB, 40 first_MSB, 40 fiveBits, 40 master, 41 masterSPI, 42 mode_0, 39 mode_1, 39 mode_2, 39  externally_visible, 104used, 104used, 104 used, 100  m_data, 104  m_pinMISO, 104  m_pinMISO, 104  m_pinMOSI, 104  m_pinSCK, 105  masterReceiveByte, 100  masterSendByte, 100  operator=, 101		io::SPI, 97
duplex, 39      used, 104         eightBits, 40       ~SPI, 99         evenParity, 41       enableTransferCompleteInterrupt, 98         first_LSB, 40       getInstance, 100         first_MSB, 40       m_data, 104         fiveBits, 40       m_pinMISO, 104         frameSize, 40       m_pinMOSI, 104         master, 41       m_pinSCK, 105         masterSPI, 42       m_pinSS, 105         mode_0, 39       masterReceiveByte, 100         mode_1, 39       masterSendByte, 100         mode_2, 39       operator=, 101		externally_visible, 104
eightBits, 40 evenParity, 41 first_LSB, 40 first_MSB, 40 fiveBits, 40 frameSize, 40 master, 41 masterSPI, 42 mode_0, 39 mode_1, 39 mode_2, 39  enableTransferCompleteInterrupt, 98 getInstance, 100 m_data, 104 m_pinMISO, 104 m_pinMOSI, 104 m_pinSCK, 105 m_pinSCK, 105 masterReceiveByte, 100 masterSendByte, 100 operator=, 101		used, 104
evenParity, 41 first_LSB, 40 first_MSB, 40 fiveBits, 40 frameSize, 40 master, 41 masterSPI, 42 mode_0, 39 mode_1, 39 mode_2, 39  getInstance, 100 m_data, 104 m_pinMISO, 104 m_pinMOSI, 104 m_pinSCK, 105 m_pinSS, 105 masterReceiveByte, 100 masterSendByte, 100 operator=, 101	•	$\sim$ SPI, 99
first_MSB, 40 m_data, 104 fiveBits, 40 m_pinMISO, 104 frameSize, 40 m_pinMOSI, 104 master, 41 m_pinSCK, 105 masterSPI, 42 m_pinSS, 105 mode_0, 39 masterReceiveByte, 100 mode_1, 39 masterSendByte, 100 mode_2, 39 operator=, 101	S .	enableTransferCompleteInterrupt, 99
fiveBits, 40 m_pinMISO, 104 frameSize, 40 m_pinMOSI, 104 master, 41 m_pinSCK, 105 masterSPI, 42 m_pinSS, 105 mode_0, 39 masterReceiveByte, 100 mode_1, 39 masterSendByte, 100 mode_2, 39 operator=, 101	first_LSB, 40	getInstance, 100
frameSize, 40 m_pinMOSI, 104 master, 41 m_pinSCK, 105 masterSPI, 42 m_pinSS, 105 mode_0, 39 masterReceiveByte, 100 mode_1, 39 masterSendByte, 100 mode_2, 39 operator=, 101	first_MSB, 40	m_data, 104
master, 41 m_pinSCK, 105 masterSPI, 42 m_pinSS, 105 mode_0, 39 masterReceiveByte, 100 mode_1, 39 masterSendByte, 100 mode_2, 39 operator=, 101	fiveBits, 40	<del>-</del>
masterSPI, 42       m_pinSS, 105         mode_0, 39       masterReceiveByte, 100         mode_1, 39       masterSendByte, 100         mode_2, 39       operator=, 101	frameSize, 40	<del></del>
mode_0, 39 masterReceiveByte, 100 mode_1, 39 masterSendByte, 100 operator=, 101	master, 41	_
mode_1, 39 masterSendByte, 100 mode_2, 39 operator=, 101	masterSPI, 42	_
mode_2, 39 operator=, 101	— ·	<u>-</u>
— <i>'</i>	— ·	
mode 2 20 selectClockPrescaler 101		•
= /	mode_3, 39	selectClockPrescaler, 101
neineBits, 40 selectDataMode, 101		
noParity, 41 selectDataOrder, 101		
oddParity, 41 selectOperationMode, 102	• • • • • • • • • • • • • • • • • • • •	•
oneStopBit, 42 selectSlave, 102	uneolupoii, 42	Selectolave, 102

slaveReceiveByte, 103	LCD.cpp, 257
SPI, 98, 99	LCD.h, 257
transferComplete, 103	LDR
transferCompleteServiceRoutine, 103	component::LDR, 69
writeCollision, 103	LDR.cpp, 257
io::USARTO, 149	LDR.h, 258, 259
externally_visible, 164	LDRVD
	LightMeter/main.cpp, 265
~USART0, 151	LED
dataOverrun, 151	BlinkLed/main.cpp, 263
dataRegisterEmptyServiceRoutine, 152	Led
- · · ·	component::Led, 73
enableDataRegisterEmptyInterrupt, 152	Led.cpp, 259, 260
enableReceiveCompleteInterrupt, 153	Led.h, 260, 261
enableTransmitCompleteInterrupt, 153	LED0
frameError, 154	LightMeter/main.cpp, 265
getInstance, 154	Lightivieter/main.cpp, 203
getNumberBytesReceived, 154	=== :
getNumberBytesSent, 155	LightMeter/main.cpp, 265
m_numberBytesReceived, 164	LED2
m_numberBytesSent, 164	LightMeter/main.cpp, 266
m_ready2Send, 165	LED3
m_sizeData2Receive, 165	LightMeter/main.cpp, 266
m_sizeData2Send, 165	LED4
m_status, 165	LightMeter/main.cpp, 266
mp_data2Receive, 165	LED5
mp_data2Send, 166	LightMeter/main.cpp, 266
operator=, 155	LED6
parityError, 155	LightMeter/main.cpp, 266
ready2Send, 155	LED7
receiveChar, 156	LightMeter/main.cpp, 267
receiveCompleteServiceRoutine, 156	LightMeter/main.cpp
receiveFrame, 157	LDRVD, 265
receiveString, 157	LED0, 265
resetNumberBytesReceived, 157	LED1, 265
	LED2, 266
sendByte, 158	LED3, 266
sendChar, 158	LED4, 266
sendFrame, 159	LED5, 266
sendLong, 159	LED6, 266
sendString, 159	LED7, 267
sendWord, 160	main, 267
setBaudRate, 160	logicalChange
setCommunicationMode, 161	core, 36
setFrameSize, 161	lowLevel
setParityMode, 162	core, 36
setStopBit, 163	0010, 00
setTransmissionMode, 163	m accelTime
transmitCompleteServiceRoutine, 164	component::StepperMotor, 113
USART0, 150, 151	m buttonPressed
isHigh	component::PushButton, 90
io::Pin, 82	m clockPrescaler
isLow	core::TimerCounter0, 127
io::Pin, 83	core::TimerCounter1, 138
isOff	core::TimerCounter2, 148
component::Led, 73	m_clockSource
isOn	core::TimerCounter0, 128
component::Led, 74	core::TimerCounter0, 128
isPressed	core::TimerCounter1, 139
component::PushButton, 89	m_constSpeedTime
componential defibution, of	m_constopedu i iiile

component::StepperMotor, 113	m_status
m_conversionResult	io::USART0, 165
core::ADConverter, 54	m_timeOut
m_currentPos	core::WatchdogTimer, 170
component::StepperMotor, 113	main
m_data	BlinkLed/main.cpp, 263
io::SPI, 104	LightMeter/main.cpp, 267
m_decelTime	MusicBox/main.cpp, 270
component::StepperMotor, 114	Organ/main.cpp, 274
m_goalReached	main.cpp, 262, 264, 268, 271, 272, 275
component::StepperMotor, 114	map
m_numberBytesReceived	utils, 43
io::USART0, 164	master
m_numberBytesSent	io, 41
io::USART0, 164	masterReceiveByte
m_operationMode	io::SPI, 100
core::WatchdogTimer, 170	masterSendByte
m_pin	io::SPI, 100
component::Buzzer, 58	masterSPI
component::DCMotor, 62	io, 42
component::LDR, 71	MCU.cpp, 276, 277
component::Led, 75	MCU.h, 278, 280
component::PushButton, 90	MCU_ADC_DISABLE
component::ServoMotor, 96	 ha_m328p.h, <mark>232</mark>
m_pinCoil1	MCU ADC ENABLE
component::StepperMotor, 114	ha_m328p.h, 232
m_pinCoil2	MCU BOD DISABLE
component::StepperMotor, 114	ha_m328p.h, <mark>232</mark>
m_pinCoil3	MCU_SELECT_SLEEP_MODE
component::StepperMotor, 114	ha_m328p.h, 232
m pinCoil4	MCU_SLEEP_DISABLE
component::StepperMotor, 115	ha_m328p.h, 232
m_pinMISO	MCU_SLEEP_ENABLE
io::SPI, 104	ha_m328p.h, 232
m_pinMOSI	MCU SPI DISABLE
io::SPI, 104	ha_m328p.h, 233
m_pinNumber	MCU SPI ENABLE
io::Pin, 85	ha_m328p.h, 233
m_pinSCK	MCU_TIMER0_DISABLE
io::SPI, 105	ha_m328p.h, 233
m_pinSS	MCU TIMERO ENABLE
io::SPI, 105	ha_m328p.h, 233
m_pulseCycle	MCU_TIMER1_DISABLE
component::ServoMotor, 96	ha_m328p.h, 233
m_pulseWidthMax	MCU TIMER1 ENABLE
_ <del>-</del>	
component::ServoMotor, 96	ha_m328p.h, 233
m_pulseWidthMid	MCU_TIMER2_DISABLE
component::ServoMotor, 96	ha_m328p.h, 234
m_pulseWidthMin	MCU_TIMER2_ENABLE
component::ServoMotor, 96	ha_m328p.h, 234
m_ready2Send	MCU_TWI_DISABLE
io::USART0, 165	ha_m328p.h, 234
m_resolution	MCU_TWI_ENABLE
core::ADConverter, 54	ha_m328p.h, 234
m_sizeData2Receive	MCU_USARTO_DISABLE
io::USART0, 165	ha_m328p.h, 234
m_sizeData2Send	MCU_USART0_ENABLE
io::USART0, 165	ha_m328p.h, <mark>234</mark>

mode	io, 41
component, 27	operator=
mode_0	core::ADConverter, 51
io, 39	core::ExternInterrupt, 66
mode_1	core::TimerCounter0, 123
io, 39	core::TimerCounter1, 133
mode_2	core::TimerCounter2, 144
io, 39	core::WatchdogTimer, 168
mode_3	io::SPI, 101
io, 39	io::USART0, 155
mp_data2Receive	Organ/main.cpp
io::USART0, 165	BUZZER, 274
mp_data2Send	main, 274
io::USART0, 166	NOTE_DURATION, 274
mp_ddrReg	outputCompareMatchAServiceRoutine
io::Port, 86	core::TimerCounter0, 123
mp_pinReg	core::TimerCounter1, 133
io::Port, 86	core::TimerCounter2, 144
mp_portReg	outputCompareMatchBServiceRoutine
io::Port, 86	core::TimerCounter0, 123
mr_ADC	core::TimerCounter1, 134
component::LDR, 71	core::TimerCounter2, 144
mr_isActiveLow	overflowServiceRoutine
component::PushButton, 90	core::TimerCounter0, 124
mr_portName	core::TimerCounter1, 134
io::Pin, 85	core::TimerCounter2, 144
mr_useInternalPullUp	parityError
component::PushButton, 90	io::USART0, 155
MusicBox/main.cpp	parityMode
BUZZER, 270	io, 41
main, 270	
PUSHBUTTON, 270	pause component::Buzzer, 58
SONG_LENGTH, 270	PCINTB
neineBits	core, 34
io, 40	PCINTC
noClock	core, 34
core, 32	PCINTD
noParity	core, 34
io, 41	Pin
normal	io::Pin, 81
core, 32, 33	Pin.cpp, 281
NOTE DURATION	Pin.h, 282, 284
Organ/main.cpp, 274	pinChangePort
Organi mam.opp, 274	core, 34
oddParity	pinChangePortBServiceRoutine
io, 41	core::ExternInterrupt, 66
off	pinChangePortCServiceRoutine
component::DCMotor, 61	core::ExternInterrupt, 67
component::Led, 74	pinChangePortDServiceRoutine
component::ServoMotor, 94	core::ExternInterrupt, 67
on	PortB
component::DCMotor, 61	io, 43
component::Led, 74	PortC
component::ServoMotor, 95	io, 43
oneStopBit	PortD
io, 42	io, 43
operationMode	powerDown
core, 32, 33	core, 36

powerSave	receive
core, 36	io, 39
PS_1	receiveChar
core, 32	io::USART0, 156
PS_1024	receiveCompleteServiceRoutine
core, 32	io::USART0, 156
PS_128	receiveFrame
core, 31, 32	io::USART0, 157
io, 38	receiveString
PS_16	io::USART0, 157
core, 31	referenceVoltage
io, 38	core, 34
PS_2	res_10bit
core, 31	core, <u>35</u>
io, 38	res_11bit
PS_256	core, 35
core, 32	res 12bit
PS_32	core, 35
core, 31, 32	res 13bit
io, 38	core, 35
PS_4	res 14bit
core, 31	core, 35
	res 15bit
io, 38 PS 64	<del>-</del>
<del>-</del>	core, 35
core, 31, 32	res_16bit
io, 38	core, 35
PS_8	res_8bit
core, 31, 32	core, 35
io, 38	res_9bit
PUSHBUTTON	core, 35
M : D / : 070	
MusicBox/main.cpp, 270	reset
PushButton	core, 33, 34
PushButton component::PushButton, 88	core, 33, 34 core::WatchdogTimer, 168
PushButton component::PushButton, 88 PushButton.cpp, 284, 285	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived
PushButton component::PushButton, 88 PushButton.cpp, 284, 285 PushButton.h, 285, 286	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157
PushButton component::PushButton, 88  PushButton.cpp, 284, 285  PushButton.h, 285, 286  PUSHBUTTON_DEBOUNCE_TIME_US	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157 resetPressedCount
PushButton component::PushButton, 88 PushButton.cpp, 284, 285 PushButton.h, 285, 286 PUSHBUTTON_DEBOUNCE_TIME_US ha_m328p.h, 235	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157 resetPressedCount component::PushButton, 89
PushButton component::PushButton, 88 PushButton.cpp, 284, 285 PushButton.h, 285, 286 PUSHBUTTON_DEBOUNCE_TIME_US ha_m328p.h, 235 PUSHBUTTON_SAMPLING	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157 resetPressedCount component::PushButton, 89 resolution
PushButton component::PushButton, 88 PushButton.cpp, 284, 285 PushButton.h, 285, 286 PUSHBUTTON_DEBOUNCE_TIME_US ha_m328p.h, 235	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157 resetPressedCount component::PushButton, 89
PushButton component::PushButton, 88 PushButton.cpp, 284, 285 PushButton.h, 285, 286 PUSHBUTTON_DEBOUNCE_TIME_US ha_m328p.h, 235 PUSHBUTTON_SAMPLING	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157 resetPressedCount component::PushButton, 89 resolution
PushButton component::PushButton, 88  PushButton.cpp, 284, 285  PushButton.h, 285, 286  PUSHBUTTON_DEBOUNCE_TIME_US ha_m328p.h, 235  PUSHBUTTON_SAMPLING ha_m328p.h, 235  PWM_PC core, 33	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157 resetPressedCount component::PushButton, 89 resolution core, 35
PushButton component::PushButton, 88  PushButton.cpp, 284, 285  PushButton.h, 285, 286  PUSHBUTTON_DEBOUNCE_TIME_US ha_m328p.h, 235  PUSHBUTTON_SAMPLING ha_m328p.h, 235  PWM_PC	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157 resetPressedCount component::PushButton, 89 resolution core, 35 risingEdge
PushButton component::PushButton, 88  PushButton.cpp, 284, 285  PushButton.h, 285, 286  PUSHBUTTON_DEBOUNCE_TIME_US ha_m328p.h, 235  PUSHBUTTON_SAMPLING ha_m328p.h, 235  PWM_PC core, 33  PWM_PC_10bit core, 33	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157 resetPressedCount component::PushButton, 89 resolution core, 35 risingEdge core, 36
PushButton component::PushButton, 88  PushButton.cpp, 284, 285  PushButton.h, 285, 286  PUSHBUTTON_DEBOUNCE_TIME_US ha_m328p.h, 235  PUSHBUTTON_SAMPLING ha_m328p.h, 235  PWM_PC core, 33  PWM_PC_10bit	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157 resetPressedCount component::PushButton, 89 resolution core, 35 risingEdge core, 36 rotate component::ServoMotor, 95
PushButton component::PushButton, 88  PushButton.cpp, 284, 285  PushButton.h, 285, 286  PUSHBUTTON_DEBOUNCE_TIME_US ha_m328p.h, 235  PUSHBUTTON_SAMPLING ha_m328p.h, 235  PWM_PC core, 33  PWM_PC_10bit core, 33	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157 resetPressedCount component::PushButton, 89 resolution core, 35 risingEdge core, 36 rotate component::ServoMotor, 95 selectAnalogInput
PushButton component::PushButton, 88  PushButton.cpp, 284, 285  PushButton.h, 285, 286  PUSHBUTTON_DEBOUNCE_TIME_US ha_m328p.h, 235  PUSHBUTTON_SAMPLING ha_m328p.h, 235  PWM_PC core, 33  PWM_PC_10bit core, 33  PWM_PC_8bit	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157 resetPressedCount component::PushButton, 89 resolution core, 35 risingEdge core, 36 rotate component::ServoMotor, 95 selectAnalogInput core::ADConverter, 51
PushButton component::PushButton, 88  PushButton.cpp, 284, 285  PushButton.h, 285, 286  PUSHBUTTON_DEBOUNCE_TIME_US ha_m328p.h, 235  PUSHBUTTON_SAMPLING ha_m328p.h, 235  PWM_PC core, 33  PWM_PC_10bit core, 33  PWM_PC_8bit core, 33	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157 resetPressedCount component::PushButton, 89 resolution core, 35 risingEdge core, 36 rotate component::ServoMotor, 95 selectAnalogInput core::ADConverter, 51 selectAutoTriggerSource
PushButton component::PushButton, 88  PushButton.cpp, 284, 285  PushButton.h, 285, 286  PUSHBUTTON_DEBOUNCE_TIME_US ha_m328p.h, 235  PUSHBUTTON_SAMPLING ha_m328p.h, 235  PWM_PC core, 33  PWM_PC_10bit core, 33  PWM_PC_8bit core, 33  PWM_PC_9bit	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157 resetPressedCount component::PushButton, 89 resolution core, 35 risingEdge core, 36 rotate component::ServoMotor, 95 selectAnalogInput core::ADConverter, 51 selectAutoTriggerSource core::ADConverter, 52
PushButton component::PushButton, 88  PushButton.cpp, 284, 285  PushButton.h, 285, 286  PUSHBUTTON_DEBOUNCE_TIME_US ha_m328p.h, 235  PUSHBUTTON_SAMPLING ha_m328p.h, 235  PWM_PC core, 33  PWM_PC_10bit core, 33  PWM_PC_8bit core, 33  PWM_PC_9bit core, 33	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157 resetPressedCount component::PushButton, 89 resolution core, 35 risingEdge core, 36 rotate component::ServoMotor, 95 selectAnalogInput core::ADConverter, 51 selectAutoTriggerSource core::ADConverter, 52 selectClockPrescaler
PushButton component::PushButton, 88  PushButton.cpp, 284, 285  PushButton.h, 285, 286  PUSHBUTTON_DEBOUNCE_TIME_US ha_m328p.h, 235  PUSHBUTTON_SAMPLING ha_m328p.h, 235  PWM_PC core, 33  PWM_PC_10bit core, 33  PWM_PC_8bit core, 33  PWM_PC_9bit core, 33  PWM_PC_9bit core, 33  PWM_PC_ICR	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157 resetPressedCount component::PushButton, 89 resolution core, 35 risingEdge core, 36 rotate component::ServoMotor, 95 selectAnalogInput core::ADConverter, 51 selectAutoTriggerSource core::ADConverter, 52 selectClockPrescaler core::ADConverter, 52
PushButton component::PushButton, 88  PushButton.cpp, 284, 285  PushButton.h, 285, 286  PUSHBUTTON_DEBOUNCE_TIME_US ha_m328p.h, 235  PUSHBUTTON_SAMPLING ha_m328p.h, 235  PWM_PC core, 33  PWM_PC_10bit core, 33  PWM_PC_8bit core, 33  PWM_PC_9bit core, 33  PWM_PC_9bit core, 33  PWM_PC_ICR core, 33	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157 resetPressedCount component::PushButton, 89 resolution core, 35 risingEdge core, 36 rotate component::ServoMotor, 95 selectAnalogInput core::ADConverter, 51 selectAutoTriggerSource core::ADConverter, 52 selectClockPrescaler core::ADConverter, 52 io::SPI, 101
PushButton component::PushButton, 88  PushButton.cpp, 284, 285  PushButton.h, 285, 286  PUSHBUTTON_DEBOUNCE_TIME_US ha_m328p.h, 235  PUSHBUTTON_SAMPLING ha_m328p.h, 235  PWM_PC core, 33  PWM_PC_10bit core, 33  PWM_PC_8bit core, 33  PWM_PC_9bit core, 33  PWM_PC_JICR core, 33  PWM_PC_ICR core, 33  PWM_PC_ICR	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157 resetPressedCount component::PushButton, 89 resolution core, 35 risingEdge core, 36 rotate component::ServoMotor, 95 selectAnalogInput core::ADConverter, 51 selectAutoTriggerSource core::ADConverter, 52 selectClockPrescaler core::ADConverter, 52 io::SPI, 101 selectClockSource
PushButton component::PushButton, 88  PushButton.cpp, 284, 285  PushButton.h, 285, 286  PUSHBUTTON_DEBOUNCE_TIME_US ha_m328p.h, 235  PUSHBUTTON_SAMPLING ha_m328p.h, 235  PWM_PC core, 33  PWM_PC_10bit core, 33  PWM_PC_8bit core, 33  PWM_PC_9bit core, 33  PWM_PC_1CR core, 33  PWM_PC_ICR core, 33  PWM_PC_ICR core, 33  PWM_PC_OCR core, 33	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157 resetPressedCount component::PushButton, 89 resolution core, 35 risingEdge core, 36 rotate component::ServoMotor, 95 selectAnalogInput core::ADConverter, 51 selectAutoTriggerSource core::ADConverter, 52 selectClockPrescaler core::ADConverter, 52 io::SPI, 101 selectClockSource core::TimerCounter, 117
PushButton component::PushButton, 88  PushButton.cpp, 284, 285  PushButton.h, 285, 286  PUSHBUTTON_DEBOUNCE_TIME_US ha_m328p.h, 235  PUSHBUTTON_SAMPLING ha_m328p.h, 235  PWM_PC core, 33  PWM_PC_10bit core, 33  PWM_PC_8bit core, 33  PWM_PC_9bit core, 33  PWM_PC_ICR	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157 resetPressedCount component::PushButton, 89 resolution core, 35 risingEdge core, 36 rotate component::ServoMotor, 95 selectAnalogInput core::ADConverter, 51 selectAutoTriggerSource core::ADConverter, 52 selectClockPrescaler core::ADConverter, 52 io::SPI, 101 selectClockSource core::TimerCounter, 117 core::TimerCounter0, 124
PushButton component::PushButton, 88  PushButton.cpp, 284, 285  PushButton.h, 285, 286  PUSHBUTTON_DEBOUNCE_TIME_US ha_m328p.h, 235  PUSHBUTTON_SAMPLING ha_m328p.h, 235  PWM_PC core, 33  PWM_PC_10bit core, 33  PWM_PC_8bit core, 33  PWM_PC_9bit core, 33  PWM_PC_JCR core, 33  PWM_PC_ICR core, 33  PWM_PC_ICR core, 33  PWM_PC_ICR core, 33  PWM_PC_ICR core, 33  PWM_PC_OCR core, 33  PWM_PC_OCR core, 33  PWM_PC_OCR core, 33	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157 resetPressedCount component::PushButton, 89 resolution core, 35 risingEdge core, 36 rotate component::ServoMotor, 95 selectAnalogInput core::ADConverter, 51 selectAutoTriggerSource core::ADConverter, 52 selectClockPrescaler core::ADConverter, 52 io::SPI, 101 selectClockSource core::TimerCounter, 117 core::TimerCounter0, 124 core::TimerCounter1, 134
PushButton component::PushButton, 88  PushButton.cpp, 284, 285  PushButton.h, 285, 286  PUSHBUTTON_DEBOUNCE_TIME_US ha_m328p.h, 235  PUSHBUTTON_SAMPLING ha_m328p.h, 235  PWM_PC core, 33  PWM_PC_10bit core, 33  PWM_PC_8bit core, 33  PWM_PC_9bit core, 33  PWM_PC_ICR core, 33  PWM_PC_ICR core, 33  PWM_PC_ICR core, 33  PWM_PC_OCR core, 33  PWM_PC_OCR core, 33  PWM_PFC_ICR core, 33  PWM_PFC_ICR core, 33  PWM_PFC_ICR	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157 resetPressedCount component::PushButton, 89 resolution core, 35 risingEdge core, 36 rotate component::ServoMotor, 95 selectAnalogInput core::ADConverter, 51 selectAutoTriggerSource core::ADConverter, 52 selectClockPrescaler core::ADConverter, 52 io::SPI, 101 selectClockSource core::TimerCounter, 117 core::TimerCounter0, 124
PushButton component::PushButton, 88  PushButton.cpp, 284, 285  PushButton.h, 285, 286  PUSHBUTTON_DEBOUNCE_TIME_US ha_m328p.h, 235  PUSHBUTTON_SAMPLING ha_m328p.h, 235  PWM_PC core, 33  PWM_PC_10bit core, 33  PWM_PC_8bit core, 33  PWM_PC_9bit core, 33  PWM_PC_ICR core, 33  PWM_PC_ICR core, 33  PWM_PC_ICR core, 33  PWM_PC_OCR core, 33  PWM_PC_OCR core, 33  PWM_PFC_ICR core, 33  PWM_PFC_ICR core, 33  PWM_PFC_ICR	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157 resetPressedCount component::PushButton, 89 resolution core, 35 risingEdge core, 36 rotate component::ServoMotor, 95 selectAnalogInput core::ADConverter, 51 selectAutoTriggerSource core::ADConverter, 52 selectClockPrescaler core::ADConverter, 52 io::SPI, 101 selectClockSource core::TimerCounter, 117 core::TimerCounter0, 124 core::TimerCounter1, 134
PushButton component::PushButton, 88  PushButton.cpp, 284, 285  PushButton.h, 285, 286  PUSHBUTTON_DEBOUNCE_TIME_US ha_m328p.h, 235  PUSHBUTTON_SAMPLING ha_m328p.h, 235  PWM_PC core, 33  PWM_PC_10bit core, 33  PWM_PC_8bit core, 33  PWM_PC_9bit core, 33  PWM_PC_ICR core, 33  PWM_PC_ICR core, 33  PWM_PC_OCR core, 33  PWM_PC_OCR core, 33  PWM_PFC_ICR core, 33  PWM_PFC_OCR	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157 resetPressedCount component::PushButton, 89 resolution core, 35 risingEdge core, 36 rotate component::ServoMotor, 95  selectAnalogInput core::ADConverter, 51 selectAutoTriggerSource core::ADConverter, 52 selectClockPrescaler core::ADConverter, 52 io::SPI, 101 selectClockSource core::TimerCounter0, 124 core::TimerCounter1, 134 core::TimerCounter2, 144
PushButton component::PushButton, 88  PushButton.cpp, 284, 285  PushButton.h, 285, 286  PUSHBUTTON_DEBOUNCE_TIME_US ha_m328p.h, 235  PUSHBUTTON_SAMPLING ha_m328p.h, 235  PWM_PC core, 33  PWM_PC_10bit core, 33  PWM_PC_8bit core, 33  PWM_PC_9bit core, 33  PWM_PC_ICR core, 33  PWM_PC_ICR core, 33  PWM_PC_ICR core, 33  PWM_PC_OCR core, 33  PWM_PFC_ICR core, 33	core, 33, 34 core::WatchdogTimer, 168 resetNumberBytesReceived io::USART0, 157 resetPressedCount component::PushButton, 89 resolution core, 35 risingEdge core, 36 rotate component::ServoMotor, 95  selectAnalogInput core::ADConverter, 51 selectAutoTriggerSource core::ADConverter, 52 selectClockPrescaler core::ADConverter, 52 io::SPI, 101 selectClockSource core::TimerCounter, 117 core::TimerCounter0, 124 core::TimerCounter1, 134 core::TimerCounter2, 144 selectCompareOutputMode

core::TimerCounter1, 135	io::Pin, 83
core::TimerCounter2, 145	setInputCaptureRegister
selectDataMode	core::TimerCounter1, 137
io::SPI, 101	setInt0SenseControl
selectDataOrder	core::ExternInterrupt, 67
io::SPI, 101	setInt1SenseControl
selectOperationMode	core::ExternInterrupt, 67
core::TimerCounter, 117	setLow
core::TimerCounter0, 125	io::Pin, 83
core::TimerCounter1, 135	setOutputCompareRegister
core::TimerCounter2, 146	core::TimerCounter, 117
io::SPI, 102	core::TimerCounter0, 126
selectReferenceVoltage	core::TimerCounter1, 137
core::ADConverter, 53	core::TimerCounter2, 147
selectSlave	setParityMode
io::SPI, 102	io::USART0, 162
selectSleepMode	setStopBit
core::MCU, 79	io::USART0, 163
selectTimeOut	setTransmissionMode
core::WatchdogTimer, 168	io::USART0, 163
sendByte	sevenBits
io::USART0, 158	io, 40
sendChar	sixBits
io::USART0, 158	io, 40
sendFrame	slave
io::USART0, 159	io, 41
sendLong	slaveReceiveByte
io::USART0, 159	io::SPI, 103
sendString	sleepEnable
io::USART0, 159	core::MCU, 79
sendWord	sleepMode
io::USART0, 160	core, 36
senseControl	SONG_LENGTH
core, 35	MusicBox/main.cpp, 270
ServoMotor	SPI
component::ServoMotor, 92	io::SPI, 98, 99
ServoMotor.cpp, 287, 288	SPI.cpp, 293, 294
ServoMotor.h, 289, 293	SPI.h, 296, 298
SERVOMOTOR_TIMER_ANGLE_COUNT	SPI_CONTROL_REGISTER
ha_m328p.h, 235	ha_m328p.h, 235
SERVOMOTOR_TIMER_PULSE_WIDTH_COUNT	SPI DATA REGISTER
ha m328p.h, 235	ha m328p.h, 236
set	SPI_DISABLE
core, 32	ha_m328p.h, <mark>236</mark>
setBaudRate	SPI_DISABLE_TRANSFER_COMPLETE_INTERRUPT
io::USART0, 160	ha m328p.h, <u>236</u>
setCommunicationMode	SPI ENABLE
io::USART0, 161	ha_m328p.h, <mark>236</mark>
setCounter	SPI_ENABLE_TRANSFER_COMPLETE_INTERRUPT
core::TimerCounter, 117	ha_m328p.h, <mark>236</mark>
core::TimerCounter0, 126	SPI_MASTER_MODE
core::TimerCounter1, 137	ha_m328p.h, <mark>236</mark>
core::TimerCounter2, 146	SPI_SELECT_CLOCK_PRESCALER
setCurrentPos	ha_m328p.h, 237
component::StepperMotor, 109	SPI_SELECT_DATA_MODE
setFrameSize	ha_m328p.h, 237
io::USART0, 161	SPI_SELECT_DATA_ORDER
setHigh	ha_m328p.h, 237
<del></del> -	··

SPI_SELECT_MASTER_MODE	core::WatchdogTimer, 169
ha_m328p.h, 237	TIMER0_COM_CHANNEL_A_INTERRUPT
SPI SELECT SLAVE MODE	ha_m328p.h, 238
ha_m328p.h, 237	TIMERO_COM_CHANNEL_B_INTERRUPT
SPI_STATUS_REGISTER	ha_m328p.h, 238
ha_m328p.h, 237	TIMER0_DISABLE_COM_CHANNEL_A_INTERRUPT
SPI_TRANSFER_COMPLETE	ha_m328p.h, 238
ha_m328p.h, 238	TIMERO_DISABLE_COM_CHANNEL_B_INTERRUPT
SPI_TRANSFER_COMPLETE_INTERRUPT	ha_m328p.h, <mark>23</mark> 9
ha m328p.h, 238	TIMERO_DISABLE_OVERFLOW_INTERRUPT
SPI WRITE COLLISION	
	ha_m328p.h, <mark>239</mark>
ha_m328p.h, 238	TIMER0_ENABLE_COM_CHANNEL_A_INTERRUPT
spin	ha_m328p.h, <mark>239</mark>
component::DCMotor, 61	TIMERO_ENABLE_COM_CHANNEL_B_INTERRUPT
standby	ha_m328p.h, <mark>23</mark> 9
core, 36	TIMERO_ENABLE_OVERFLOW_INTERRUPT
start	
	ha_m328p.h, <mark>239</mark>
core::ADConverter, 53	TIMER0_OVERFLOW_INTERRUPT
core::TimerCounter, 118	ha_m328p.h, 239
core::TimerCounter0, 126	TIMER0_SELECT_CLOCK_SOURCE
core::TimerCounter1, 137	ha_m328p.h, <mark>24</mark> 0
core::TimerCounter2, 147	TIMERO_SELECT_COM_CHANNEL_A
core::WatchdogTimer, 168, 169	
step	ha_m328p.h, 240
•	TIMER0_SELECT_COM_CHANNEL_B
component::StepperMotor, 109–111	ha_m328p.h, <mark>240</mark>
stepDelay	TIMERO_SELECT_OPERATION_MODE
component::StepperMotor, 112	ha_m328p.h, 240
stepMode	TIMERO STOP
component::StepperMotor, 115	ha_m328p.h, 240
StepperMotor	timer0CompareA
component::StepperMotor, 106	•
StepperMotor.cpp, 299	core, 30
StepperMotor.h, 304, 305	timer0Overflow
••	core, 30
stepPulse	TIMER1_COM_CHANNEL_A_INTERRUPT
component::StepperMotor, 112	ha m328p.h, 240
stop	TIMER1_COM_CHANNEL_B_INTERRUPT
component::DCMotor, 61	ha_m328p.h, 241
core::ADConverter, 53	
core::TimerCounter, 118	TIMER1_DISABLE_COM_CHANNEL_A_INTERRUPT
core::TimerCounter0, 127	ha_m328p.h, <mark>241</mark>
core::TimerCounter1, 138	TIMER1_DISABLE_COM_CHANNEL_B_INTERRUPT
	ha_m328p.h, 241
core::TimerCounter2, 147	TIMER1_DISABLE_INPUT_CAPTURE_INTERRUPT
core::WatchdogTimer, 169	ha m328p.h, 241
stopBit	TIMER1_DISABLE_OVERFLOW_INTERRUPT
io, 41	ha_m328p.h, 241
STR	
ha_base.h, 221	TIMER1_ENABLE_COM_CHANNEL_A_INTERRUPT
STRx	ha_m328p.h, <mark>241</mark>
ha_base.h, 221	TIMER1_ENABLE_COM_CHANNEL_B_INTERRUPT
submaster	
Submaster	ha_m328p.h, <mark>242</mark>
in 41	ha_m328p.h, 242
io, 41	ha_m328p.h, 242 TIMER1_ENABLE_INPUT_CAPTURE_INTERRUPT
sync	ha_m328p.h, 242 TIMER1_ENABLE_INPUT_CAPTURE_INTERRUPT ha_m328p.h, 242
	ha_m328p.h, 242 TIMER1_ENABLE_INPUT_CAPTURE_INTERRUPT ha_m328p.h, 242 TIMER1_ENABLE_OVERFLOW_INTERRUPT
sync io, 42	ha_m328p.h, 242 TIMER1_ENABLE_INPUT_CAPTURE_INTERRUPT ha_m328p.h, 242 TIMER1_ENABLE_OVERFLOW_INTERRUPT ha_m328p.h, 242
sync io, 42 TIMEDELAY	ha_m328p.h, 242 TIMER1_ENABLE_INPUT_CAPTURE_INTERRUPT ha_m328p.h, 242 TIMER1_ENABLE_OVERFLOW_INTERRUPT ha_m328p.h, 242 TIMER1_INPUT_CAPTURE_INTERRUPT
sync io, 42	ha_m328p.h, 242 TIMER1_ENABLE_INPUT_CAPTURE_INTERRUPT ha_m328p.h, 242 TIMER1_ENABLE_OVERFLOW_INTERRUPT ha_m328p.h, 242 TIMER1_INPUT_CAPTURE_INTERRUPT ha_m328p.h, 242
sync io, 42 TIMEDELAY	ha_m328p.h, 242 TIMER1_ENABLE_INPUT_CAPTURE_INTERRUPT ha_m328p.h, 242 TIMER1_ENABLE_OVERFLOW_INTERRUPT ha_m328p.h, 242 TIMER1_INPUT_CAPTURE_INTERRUPT
sync io, 42  TIMEDELAY BlinkLed/main.cpp, 263	ha_m328p.h, 242 TIMER1_ENABLE_INPUT_CAPTURE_INTERRUPT ha_m328p.h, 242 TIMER1_ENABLE_OVERFLOW_INTERRUPT ha_m328p.h, 242 TIMER1_INPUT_CAPTURE_INTERRUPT ha_m328p.h, 242
sync io, 42  TIMEDELAY BlinkLed/main.cpp, 263 timeOut	ha_m328p.h, 242 TIMER1_ENABLE_INPUT_CAPTURE_INTERRUPT ha_m328p.h, 242 TIMER1_ENABLE_OVERFLOW_INTERRUPT ha_m328p.h, 242 TIMER1_INPUT_CAPTURE_INTERRUPT ha_m328p.h, 242 TIMER1_OVERFLOW_INTERRUPT

ha_m328p.h, 242	to_16ms
TIMER1_SELECT_COM_CHANNEL_A	core, 36
ha_m328p.h, 243	to_1s
TIMER1_SELECT_COM_CHANNEL_B	core, 37
ha_m328p.h, 243	to_250ms
TIMER1_SELECT_OPERATION_MODE	core, 37
ha_m328p.h, 243	to_2s
TIMER1_STOP	core, 37
ha_m328p.h, 243	to_32ms
timer1Capture	core, 36
core, 30	to_4s
timer1CompareB	core, 37
core, 30	to_500ms
timer1Overflow	core, 37
core, 30	to_64ms
TIMER2_COM_CHANNEL_A_INTERRUPT	core, 37
ha_m328p.h, 243	to_8s
TIMER2_COM_CHANNEL_B_INTERRUPT	core, 37
ha_m328p.h, 243	toggle
TIMER2_DISABLE_COM_CHANNEL_A_INTERRUPT	component::DCMotor, 62
ha_m328p.h, <mark>244</mark>	component::Led, 75
TIMER2_DISABLE_COM_CHANNEL_B_INTERRUPT	component::ServoMotor, 95
ha_m328p.h, <mark>244</mark>	core, 32
TIMER2_DISABLE_OVERFLOW_INTERRUPT	io::Pin, 84
ha_m328p.h, 244	toInput
TIMER2_ENABLE_COM_CHANNEL_A_INTERRUPT	io::Pin, 84
ha_m328p.h, 244	toOutput
TIMER2_ENABLE_COM_CHANNEL_B_INTERRUPT	io::Pin, 84
ha_m328p.h, 244	transferComplete
TIMER2_ENABLE_OVERFLOW_INTERRUPT	io::SPI, 103
ha_m328p.h, 244	transferCompleteServiceRoutine
TIMER2_OVERFLOW_INTERRUPT	io::SPI, 103
ha_m328p.h, 245	transmissionMode
	io, 42
TIMER2_SELECT_CLOCK_SOURCE	transmit
ha_m328p.h, 245	io, 39
TIMER2_SELECT_COM_CHANNEL_A	transmitCompleteServiceRoutine
ha_m328p.h, 245	io::USART0, 164
TIMER2_SELECT_COM_CHANNEL_B	twoStopBits
ha_m328p.h, 245	io, 42
TIMER2_SELECT_OPERATION_MODE	
ha_m328p.h, 245	USART0
TIMER2_STOP	io::USART0, 150, 151
ha_m328p.h, 245	USART0.cpp, 336
TimerCounter.h, 306, 316	USART0.h, 341, 342
TimerCounter0	USART0_CONTROL_STATUS_REGISTER
core::TimerCounter0, 120	ha_m328p.h, 246
TimerCounter0.cpp, 318	USARTO_DATA_OVERRUN
TimerCounter0.h, 321, 322	ha_m328p.h, 246
TimerCounter1	USART0_DATA_REGISTER
core::TimerCounter1, 130	ha_m328p.h, 246
TimerCounter1.cpp, 323, 324	USART0_DATA_REGISTER_EMPTY_INTERRUPT
TimerCounter1.h, 328, 329	ha_m328p.h, <mark>246</mark>
TimerCounter2	USARTO_DISABLE_DATA_REGISTER_EMPTY_INTERRUPT
core::TimerCounter2, 141	ha_m328p.h, 246
TimerCounter2.cpp, 330	USARTO_DISABLE_DOUBLE_SPEED_MODE
TimerCounter2.h, 334, 335	ha_m328p.h, 246, 247
to_125ms	USARTO_DISABLE_PARITY_MODE
core, 37	ha_m328p.h, 247

```
USARTO_DISABLE_RECEIVE_COMPLETE_INTERRUPTutils_m328p.cpp, 344
    ha m328p.h, 247
                                             utils m328p.h, 344, 345
USARTO_DISABLE_RECEIVER
                                             WATCHDOG_SELECT_TIMEOUT
    ha m328p.h, 247
                                                 ha m328p.h, 252
USARTO_DISABLE_TRANSMIT_COMPLETE_INTERRUPT
                                             WATCHDOG_START
    ha m328p.h, 247
                                                 ha_m328p.h, 252
USARTO DISABLE TRANSMITTER
                                             WATCHDOG STOP
    ha m328p.h, 247
                                                 ha m328p.h, 252
USARTO_ENABLE_ASYNC_TRANSMISSION_MODE
                                             WATCHDOG TIMEOUT INTERRUPT
    ha_m328p.h, 248
USARTO_ENABLE_DATA_REGISTER_EMPTY_INTERRUPT ha_m328p.h, 252
                                             WatchdogTimer
    ha m328p.h, 248
                                                 core::WatchdogTimer, 167
USARTO_ENABLE_DOUBLE_SPEED_MODE
                                             WatchdogTimer.cpp, 345
    ha_m328p.h, 248
                                             WatchdogTimer.h, 346, 349
USARTO ENABLE EVEN PARITY MODE
                                             writeCollision
    ha m328p.h, 248
                                                 io::SPI, 103
USARTO_ENABLE_MASTER_SPI_MODE
    ha m328p.h, 248
USARTO_ENABLE_ODD_PARITY_MODE
    ha m328p.h, 248
USARTO_ENABLE_RECEIVE_COMPLETE_INTERRUPT
    ha_m328p.h, 249
USARTO_ENABLE_RECEIVER
    ha m328p.h, 249
USARTO ENABLE SYNC TRANSMISSION MODE
    ha m328p.h, 249
USARTO ENABLE TRANSMIT COMPLETE INTERRUPT
    ha m328p.h, 249
USARTO_ENABLE_TRANSMITTER
    ha_m328p.h, 249
USARTO FRAME ERROR
    ha_m328p.h, 249
USARTO_PARITY_ERROR
    ha m328p.h, 250
USARTO_RECEIVE_COMPLETE_INTERRUPT
    ha_m328p.h, 250
USARTO SET 5BIT FRAME SIZE
    ha_m328p.h, 250
USARTO_SET_6BIT_FRAME_SIZE
    ha m328p.h, 250
USART0_SET_7BIT_FRAME_SIZE
    ha_m328p.h, 250
USARTO SET 8BIT FRAME SIZE
    ha m328p.h, 251
USARTO SET 9BIT FRAME SIZE
    ha m328p.h, 251
USARTO_SET_BAUDRATE_HIGH_REGISTER
    ha_m328p.h, 251
USARTO_SET_BAUDRATE_LOW_REGISTER
    ha m328p.h, 251
USART0_SET_ONE_STOP_BIT
    ha m328p.h, 251
USARTO SET TWO STOP BITS
    ha_m328p.h, 252
USARTO_TRANSMIT_COMPLETE_INTERRUPT
   ha m328p.h, 252
utils, 43
    map, 43
```