

User Manual

CHANGE THE DEFAULT PASSWORD

Default Network Camera Account: Username: abc Password: 123

The default password (123) for the abc account is for first-time log-in purposes only. You should change this default password to better protect against security risks, such as the unauthorized access by others to the product that may prevent the product from functioning properly and/or lead to other undesirable consequences.

For your privacy, we strongly recommend changing the password to something of your own choosing (using a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

FCC Certification Requirements

Caution: Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- $\hbox{-} \textit{Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.}$
- Consult the dealer or an experienced radio/TV technician for help.


The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm form all persons.

Contents

Introduction	3
1.1 Appearance and Interface	3
1.2 Specification	3
Installation	4
2.1 Ceiling Mounting	4
Network Connection	5
3.1 Wireless connection	5
3.2 Wired Connection*	5
Preparation on Smart Phone (iOS, Android)	6
4.1 Get CloudSEE APP	6
4.2 Register CloudSEE Account	6
4.3 Power-on the Device	6
Add JVS-H210 on Smart Phone (iOS, Android)	7
5.1 How to Choose Device Adding Methods	7
5.2 Add by Sound Wave	7
5.3 Add Wi-Fi Device on iPhone	9
5.4 Add Wi-Fi Device on Android	12
5.5 Add by CloudSEE ID	13
5.6 Scan devices in LAN	14

1 Introduction

1.1 Appearance and Interface

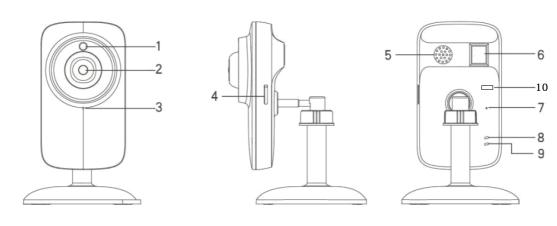

Name	Description	
Photo-resistance	Light-controlled variable resistor, control IR cut filter switch	
Lens	Optical imaging element	
MIC	Microphone	
TF Card Slot	Maximum: 64GB	
Speaker	Audio out	
Network	Ethernet cable line in.	
Interface		
Reset	1. Press 3 seconds to start soundwave configuration	
	2. Press 15 seconds to restet the device.	
Power Light	Indicates the power is on.	
Network Light	1.If hasn't been configured, green light will blink equelly.	
	2. If has been configured, grenn light will blink with one long and one	
	short.	
Power	DC 5V	
	Photo-resistance Lens MIC TF Card Slot Speaker Network Interface Reset Power Light Network Light	

1.2 Specification	
Image Sensor	1/4" CMOS 1.0MP
Resolution	1280×720@25fps
Focus	3.6mm Fixed 71°
Local Storage	64G
Temperature	-20℃~55℃
Humidity	10%~90%
Power Supply	DC 5V
Power	≦3.2W
Material	White ABS+PC
Size(W×H×D)(mm)	78×120×90
Weight(g)	130

2 Installation


2.1 Ceiling Mounting

Before you start:

JVS-H210 can be installed to wall/ceiling or fixed on desktop. Ceiling mounting is taken as an example in this section; if you adopt wall mounting, you can also take below procedure as a reference.

Steps:

- 1. Attach the mounting (bottom base of the JVS-H210 which can be removed) to the ceiling and tighten the screws to fix it.
- 2. Rotate the base to secure it to the bottom base, and secure JVS-H210 camera on the mounting base.

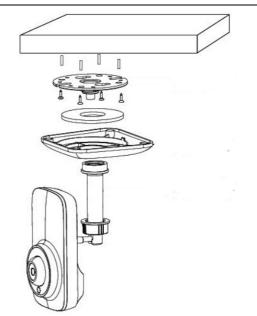


Notes:

Please make sure that the ceiling can support more than 50(N) Newton gravities if the camera is fixed to the ceiling.

3 Network Connection


3.1 Wireless connection

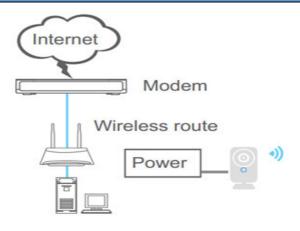

Notes:

With wireless connection, you can add the device by "Add Wi-Fi Device", which is based on AP function. Once you connect JVS-H210 to the router with Ethernet cable, JVS-H210 will disable AP, which means the function mentioned above won't work.

3.2 Wired Connection*

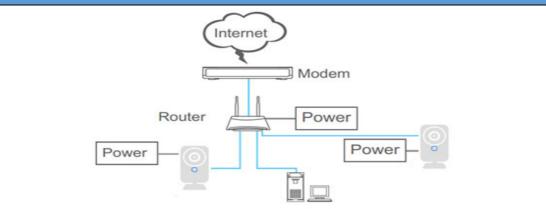

Notes:

- "Add Wi-Fi Device" does not apply to wired connection.
- For JVS-H210 only

4 Preparation on Smart Phone (iOS, Android)


4.1 Get CloudSEE APP

- 1. Search "CloudSEE" in App Store (iOS) or Google play (Android).
- 2. Get and install CloudSEE on your smart phone.


4.2 Register CloudSEE Account

Notes:

You need to register a CloudSEE account before using CloudSEE service which is free. Although you can use "Visitor Login", but we strongly recommend that register your own account for better experience. With CloudSEE service account, devices list will automatically upload and store in cloud, and when you login CloudSEE with your account on other smart phones, you can access to all these devices without adding them again.

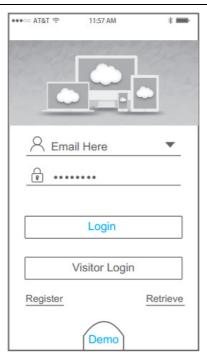

1. Open CloudSEE App, and tap "*Register*" on *Login Page*.

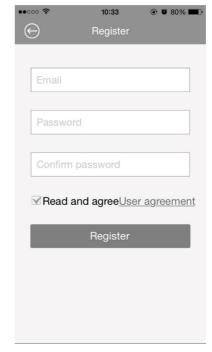

2. Input your E-mail and password, make sure the E-mail has not been registered, tap Register, account will login automatically if the register succeed.

4.3 Power-on the Device

Connect JVS-H210 with power adapter, the device starts self-checking, it will pan and tilt for about 10 seconds. After that, we can start.

5 Add JVS-H210 on Smart Phone (iOS, Android)

Before you start:

The device has to be configured by "Add by Sound Wave" or "Add Wi-Fi Device" for first-time use if you want to use wireless connection.


Press reset button for about 3 seconds and release to start sound wave configuration Press reset button for about 15 seconds and release to reset the device.


5.1 How to Choose Device Adding Methods		
Methods	Situation	Connection
Add by CloudSEE ID	The device had been connect to Internet	Wireless, Ethernet Cable
	and get CloudSEE ID online.	
	The device had been connect to Internet	
Scan QR Code	and get CloudSEE ID online.(The same as	Wireless, Ethernet Cable
	"Add by CloudSEE ID")	
Add Wi-Fi Device	First-time use or the device has been	Wireless
Add WI-FI Device	reset.	
Scan Devices in LAN	The device has been connected to the	Wireless, Ethernet Cable
	same network as your smart phone.	
Add by sound wave	First-time use or the device has been	Wireless
	reset.	

5.2 Add by Sound Wave

Notes:

- Set the volume of your phone to maximum level before this operation.
- Make sure there is no noise when add the device by sound wave.
- Keep the speaker of your phone close enough to the MIC of the device when sound wave is playing

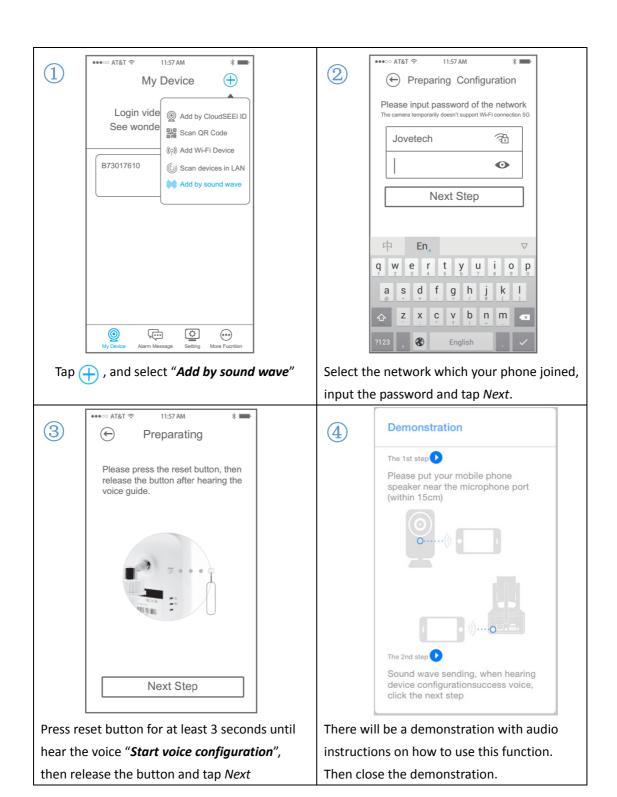

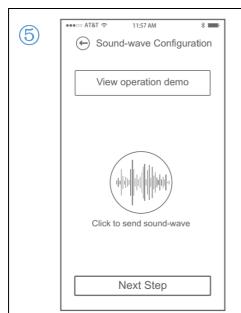

Keep the speaker of your phone close enough to the MIC of JVS-H210, click the sound wave icon to send sound wave, you can send it for many times until hear the voice "Receive network configuration", which means the device has joined the network.




(6)

(8)

Then CloudSEE starts scanning devices in the network. Choose the one you want to add, and click **Add**



The device will be added.

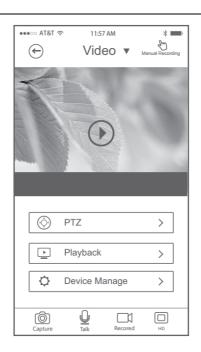


Tap the device on the list, live video will display.


5.3 Add Wi-Fi Device on iPhone

Notes:

Do not connect Ethernet cable before this operation.

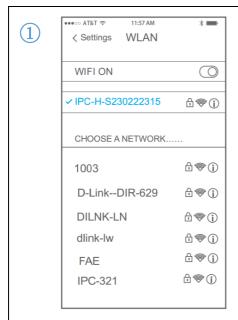


Power-on the device, wait for about 40 seconds, JVS-H210 will create an AP, choose this AP (IPC-H-XXXXXXX) from the WLAN settings of your iPhone, and enter the password (12345678) when prompted.

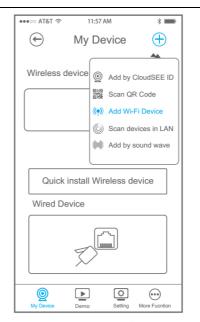


(2)

(4)


Open CloudSEE App, Tap +, and select "Add Wi-Fi Device".

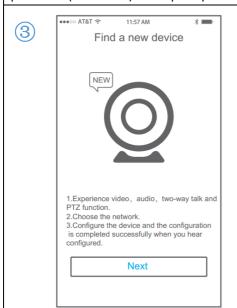


CloudSEE will prompt that a new device has been found. Tap **NEXT.**

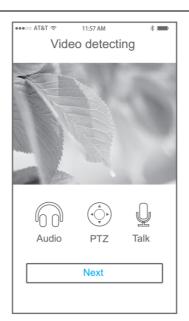

Then the live video of the device will display, you can access *Audio*, *PTZ*, *Talk* function here, but we haven't finished configuring yet, Tap *NEXT*.

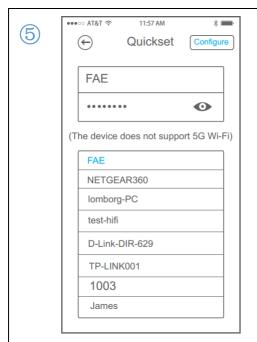


Select the Wi-Fi network for JVS-H210 and input the password, tap *Configure*. After hearing *success* from the device, you NEED to close the app and switch Wi-Fi network of your iPhone to the one which JVS-H210 is connected.

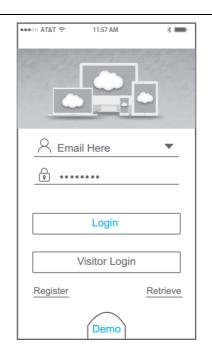

(6)


When the Wi-Fi connection is completed, Open CloudSEE App again.

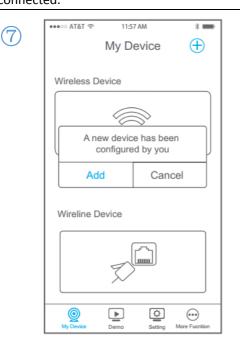


CloudSEE will prompt that "A new device has been configured by you", tap Add.



Confirm the information of the device, and tap \emph{Save}

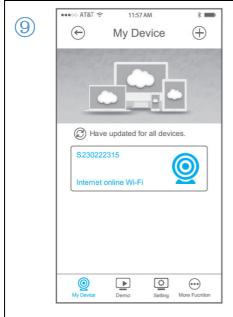


The device will be added.

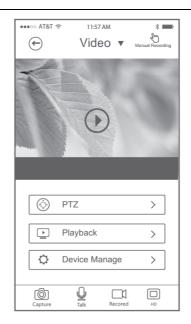


(10)

Tap the device on the list, live video will display.

5.4 Add Wi-Fi Device on Android

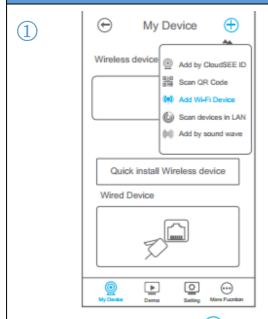


Open CloudSEE App, Tap , ar + lect "Add Wi-Fi Device".

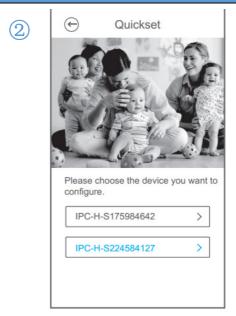

The app will scan AP from JVS-H210 and list them, select the one you want to add. You can check whether it is the one in next step, or go back to this page to choose another.



Then the live video of the device will display, check the picture and confirm you can also access *PTZ*, *Two-way Talk* function here, but we haven't finished configuring yet, Tap *NEXT*.

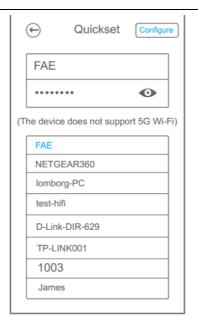


4

Select the Wi-Fi network for JVS-H210 and input the password, tap *Configure*.



Then CloudSEE will prompt that "Discovering Device", and click Add

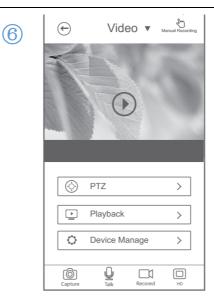


Tap the device on the list, live video will display.

5.5 Add by CloudSEE ID

Notes:

This method requires that the device be connected to Internet and get CloudSEE ID online first.

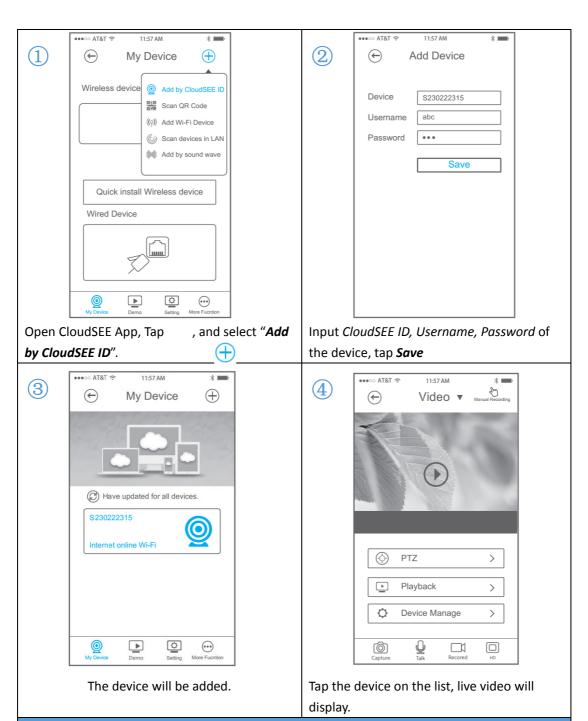

5.6 Scan devices in LAN

Notes:

This method requires that the device be connected to the **SAME** Wi-Fi network with your smart phone first.

