
Gen 3 Multi Channel Single Channel

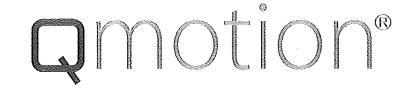

Programming Instructions

FIRST TIME SETUP

- 1. TUG the shade 6"-10" to wake the shade from shipping sleep mode
- 2. Single Channel Remote PRESS and HOLD the UP button until the shade travels to the upper limit position
- Multi Channel Remote First select a channel to program: PRESS and RELEASE a CHANNEL selection (1-6). Next, PRESS and HOLD the UP button until the shade travels to the upper limit position

SETTING LOWER LIMIT

- PRESS and RELEASE the DOWN button, shade will travel to the current lower limit
- 2. PRESS and HOLD the DOWN button until the shade JOGS
- 3. TUG the shade hembar 6-10"
- 4. Adjust the shade hembar manually to the new lower limit position
- 5. PRESS and HOLD the DOWN button until the shade travels to the upper limit position

ADDING A REMOTE OR CHANNEL

- PRESS and RELEASE the UP button to send the shade to the upper limit position or manually roll the shade to the upper limit
- 2. PRESS and HOLD the UP button until the shade travels to the 75% closed position
- 3. TUG the shade hembar 6"-10"
- 4. Single Channel Remote PRESS and HOLD the UP button until the shade travels to the upper limit position
- 5. Multi Channel Remote First select a channel to program: PRESS and RELEASE a CHANNEL selection (1-6). Next, PRESS and HOLD the UP button until the shade travels to the upper limit position

DELETING A REMOTE OR CHANNEL


- 1. PRESS and HOLD the UP button until the shade travels to the 75% closed position
- 2. TUG the shade hembar 6"-10"
- 3. Single Channel Remote PRESS and HOLD the DOWN button until the shade travels to the upper limit position
- 4. Multi Channel Remote First select a channel to program: PRESS and RELEASE a CHANNEL selection (1-6). Next, PRESS and HOLD the DOWN button until the shade travels to the upper limit position


MASTER RESET - Will delete all learned remotes and limits on shade

- 1. PRESS and RELEASE the UP button to send the shade to the upper limit position or manually roll the shade to the upper limit
- 2. PRESS and HOLD the UP button, and CONTINUE HOLDING until the shade JOGS, travels to 75% closed then starts to travel up. RELEASE the UP button when the final upward travel starts
- 3. TUG the shade hembar 6"-10"
- **4.** At this point, the shade has been reset. All learned remotes and limits have been deleted. To learn a remote to the shade, PRESS and HOLD the UP button until the shade travels up

SPECIAL LEARN COMMAND - Start with Shade at the Upper Limit Position

- PRESS and HOLD both UP and DOWN buttons at the same time until the shade travels down to the 75% closed position
- 2. TUG the shade 6 inches to put the shade in learn mode
- 3. Select a channel to add to the shade
- 4. PRESS and HOLD the UP button until the shade travels to the Upper Limit Position

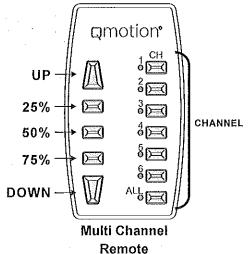

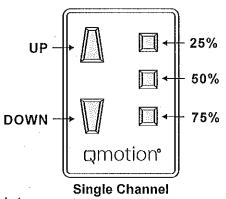

Remote

CANADIAN REGULATORY STATEMENTS

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

This equipment complies with the ICES RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of the human body.

Cet équipement est conforme aux limites d'exposition aux radiations ICES définies pour un environnement non contrôlé . Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et une partie de votre corps.

FCC REGULATORY STATEMENTS

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions.

This device may not cause harmful interference.

This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.