# **Bluetooth**

# Wireless barcode scanner Manual Guide


32bit high speed CPU
High-efficiency power management
High-advanced function setting
25 Language supported

# **Specification**

TYPE:		Bluetooth						
Distance:		50m		400m	10m			
Storage:		200 barcodes	150000 barcodes		150000 barcodes			
Workir	ng currer	3.5Vx40mA		Standby current : 18uA-5mA				
Workir	ng time :	3 to 10 days		Charging powe	r: 5V-500mA			
Scanner parameters								
Scanning type : bi-directional			Light source: 6	50±20nm VLD				
Scanning width: 30cm			BER: 1/5millon、1/20million					
Printing Contract : >25%			Indication: Buzzer & LED					
Trigger Mode: Button, Continuous, Auto-Induction								
Depth of Field	3.3mil	2mm-100mm		CPU: ARM 32-bit Cortex				
	10mil	2mm-350mm		Resolution: 3.3mil				
	15mil	5mm-500mm						
	30mil	10mm-800mr	10mm-800mm		Decoding speed: 200/sec			
Scanning angle: Angle of rotation±30°, inclination±45°, declination±60°								
Anti-in	terferend	ce: No influence	worl	king under strong	light and sunshine			
Decode Capability: UPC/EAN、with complementary UPC/EAN、								
Code128、Code39、Code 39Full ASCII、Coda bar、industrial								
/Interleaved 2 of 5 Code93、MSI、Code11、ISBN、ISSN、China post、								
etc. (optional)GS1 Databar,Code32								
Button life : 500,000 times				laser life: 10000 hours				
Drop test : 1.5m			Interface: USB, USB-COM					
Certificate : CE, FCC, RoHS, Class I								

#### Guide

Scan barcode to setup scanner

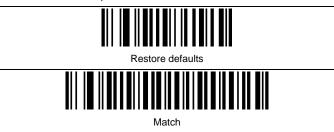

Network Mode(Bluetooth)

Matching Operation: Connect USB to the computer , when it start to work ,match the scanner with receiver within 30 seconds by "Match" Barcode

Working Mode: Instant upload mode, storage mode

1.Instant upload Mode: Transmit the data to receiver soon

Instant upload Mode





HID fast

HID slow-Default

2.Storage Mode: The code will be stored into the barcode scanner will upload to the computer by scanning upload mode




Storage Mode



#### Battery level

Battery level						
Standby setup: engine power is off during standby ,but CPU is working ,when						
press key ,scanner start to work soon						
10s Standby	30s Standby					
15mins Standby	30mins Standby					
Auto power-off: After auto power-off , Leal	kage current is less than 10uA					
Standby 10s after scanner off	Standby 30s after scanner off					
Standby 5mins after scanner off	Standby 15mins after scanner off					
Trigger Mode						
Keys Trigger	Continuous Mode					
Auto sense -on	Auto sense –off					
Note1: By pressing the button for 30s to switch "Auto sense"						

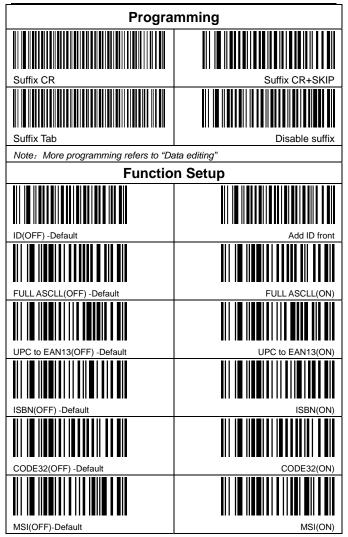

# Language

UNITED STATES	BELGIUM				
BRAZIL	DENMARK				
FRANCE	GERMANY				
HUNGARY	ITALY				
LATIN AMERICA	NETHERLANDS				
NORWAY	PORTUGAL				
SPAIN	SWEDEN				
UNITED KINGDOM UNIVERSAL  Note: More language setting, refers to Appendix "Language"					

### **Bluetooth- Setup Guide**

#### Bluetooth Matching:

 $3.0 \ lower \ version \ : \ input code 0000 \ when matching with computer$ 

 $\label{eq:Higher than 3.0 version: match directly without input code.}$ 

HID-mode-Default SPP-ma						
Wired Function(OI)  Wired Function(OI	)					
Bluetooth reliability						
Reliability High-Default Reliability L	ow					
Note: High reliability: short transmitting distance, Low-speed, error rate Low						
Low reliability: long transmitting distance, High-speed, error rate h	ligh					
Show/Hide IOS keyboard						
Off connect to just H	ost					
Clear all matching records Shutdo	wn					

#### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help. To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction