


ARGARD MIO manual

(

•

•






Contents




- **02** Overview
- **03** Accessories
- **04** Features
- **05** Specifications
- **06** Getting Started
- 11 Using Your Headset
- 12 Menu Functions
- 16 Troubleshooting & FAQ
- 18 Care and Maintenance
- 20 Warranty

01



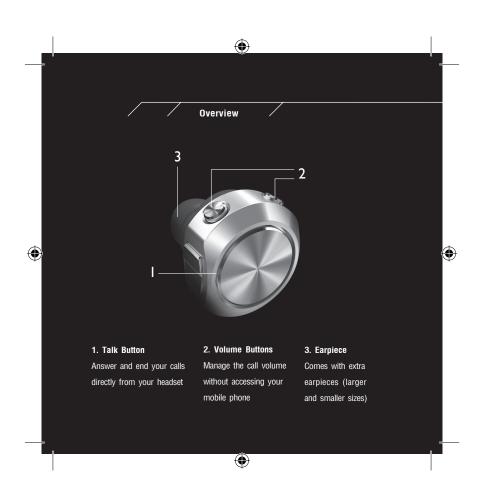

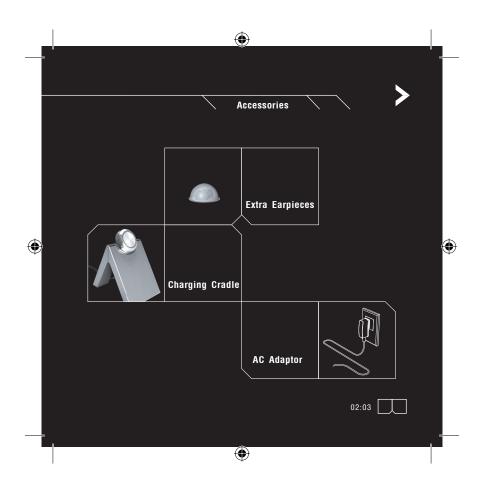



Features

- > Lightweight, small, cutting edge design
- > In-ear Design, fits completely in ear
- > Design to be wearable on the left or right ear
- > Easy to use: only 3 buttons and one clear indicator light
- > Battery will last all day long


















Specifications

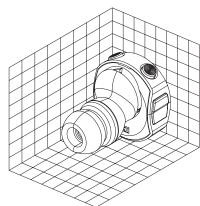



- > Size: 23 mm x 22 mm x 31.5 mm
- > Talk Time: Up to 3 hours
- > Standby Time: Up to 100 hours
- > Bluetooth Version 1.2 Class 2

04:05



Getting Started

5.1 Charging the battery


- 1. Connect the charging port of the ARGARD M10 to the charging port on the charging cradle.
- 2. Connect the DC jack of the adaptor to the DC jack socket of the charging cradle.
- 3. Plug the adaptor into the appropriate electrical outlet.

Notes:

- > Charge ARGARD M10 for 8 hours before using it for the first time.
- While the ARGARD M10 is charging, the red light on the TALK button will come on. If it does not, please press the TALK button to activate. Once the battery is fully charged the red light will turn off.
- > Recharging takes approximately 2 hours.





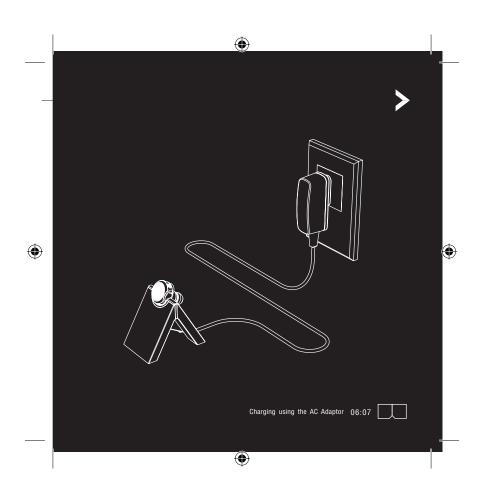





5.2 Pairing with the phone

5.2.1 Setting the ARGARD M10 headset to pairing mode

Press and hold down the **TALK** button for approximately 10 seconds. The blue light will flash rapidly 4 times. Continue holding the button until the red and blue lights flash alternately. Release the **TALK** button.





5.2.2 Setting Bluetooth on the mobile phone to device searching and pairing modes

Activate Bluetooth on the mobile phone and start searching for the new Bluetooth device. When the search is complete, the name of the ARGARD M10 will appear "M10" on the mobile phone screen and select pairing with M10. When the mobile phone requests a passkey, please enter "0000" (four zeros) and then press "Yes" or "OK".





5.2.3 Connecting Bluetooth with a mobile phone

Some mobile phone models support Bluetooth hand free profiles or have a function to select the type of connection. When set to "Always ask before connection", the connection will be completed by either pressing the **TALK** button on the headset or entering the Bluetooth menu, choosing a connecting device, then pressing "**Yes**" or "**OK**" to confirm the connection. When the type of connection is set to "Automatic without confirmation", the system will make a connection automatically after the pairing is complete.


Table of Status Indicator Lights

(

rabio di diatao maidato. Ligitto		
Order	Headset Status	Headset Indicator Lights
1	Power on	Blue light, flashes 4 times
2	Power off	Red light, flashes 3 times
3	Pairing mode	Blue and red lights, alternating flashes
4	Pairing successful	Blue light, flash 1 time
5	Standby mode	Blue light, flash 1 time every 10 seconds
6	Low battery	Red light, flash 1 time every 10 seconds
7	Charging battery	Red light is on continuously
8	Charging completed	Red light goes out
9	Incoming call	Blue light, rapid flashes until the call is received
10	During a call	Blue light, flashes 2 times every 10 seconds

08:09



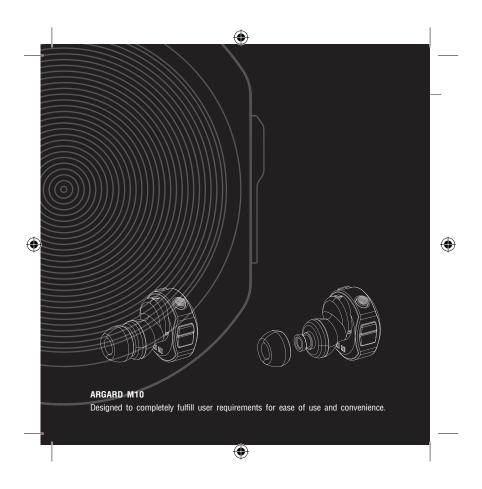



Using the Headset

6.1 Wearing the headset

- $\,>\,$ Put one of the earpieces on the headset as shown in the figure on page 10.
- > The earpiece can be placed in either the left or right ear, depending on the user's preference.

6.2 Answering and ending a call

With just one touch of the **TALK** button on the headset, a call can be instantly answered or ended.

6.3 Low battery warning

A warning tone will sound when the battery is low during a call or in stand-by mode, and the flashing blue **TALK** button light will change to a red light, with 1 flash every 10 seconds.

10:11



/ Menu Functions /

7.1 Quick Connect/Disconnect

If the mobile phone is already paired with the ARGARD M10, activate Bluetooth on the mobile phone, and then do the following:

> To connect: press and hold down the TALK button on the ARGARD M10 for approximately 2 seconds. When the blue light flashes 5 times, release the button. The ARGARD M10 will connect to the mobile phone automatically.

> To disconnect: press and hold the TALK button on the ARGARD M10 for approximately 2 seconds. When the red light flashes 3 times, release the button. The ARGARD M10 will disconnect from the mobile phone automatically.

7.2 One-touch On/Off

- > To turn on: press and hold the TALK button for approximately 2 seconds. The blue light will flash 3 times.
- > To turn off: press and hold the **TALK** button for approximately 2 seconds. The red light will flash 3 times.

7.3 Volume Up/Down

The volume may be increased or decreased according to the wearer's preference: $\begin{tabular}{ll} \hline \end{tabular}$

> To increase the volume: press the "volume up" button located on the right side of the headset (when holding the headset with the TALK button turned towards the user).

> To decrease the volume: press the "volume down" button located on the left side (when holding the headset with the **TALK** button turned towards the user).

(

7.4 One Touch Answer Call/End Call

An incoming call can be answered or ended with one touch by pressing the TALK button.

7.5 Voice Dialing

To use voice dialing, the voice command for the phone number to be called using voice dialing must first be recorded. Consult the mobile phone's User Guide for instructions on the recording methods available.

> Voice dialing

Press the **TALK** button. Alternating high and low tones will be heard. Speak the voice command recorded in the phonebook. If the voice command is the same as that recorded in the phone book, the ARGARD M10 will repeat the sound voice command, and then call the recorded number.

> Cancel voice dialing

Press the ${\bf TALK}$ button to cancel voice dialing.



7.6 Transfer Call to ARGARD M10/ARGARD M10 to Phone

A call can be switched between the mobile phone and the $\pmb{\mathsf{ARGARD}}$ $\pmb{\mathsf{M10}}$ without ending the call:

- > To transfer a call from the ARGARD M10 to the mobile phone: Press the TALK button twice. The ARGARD M10 will transfer the call from the Bluetooth headset to the mobile phone.
- > To transfer a call from the mobile phone to the ARGARD M10: Press the TALK button once to transfer a call back to the ARGARD M10. Continue the call using the ARGARD M10 without ending the call or reconnecting the ARGARD M10.



>

>

,

>

 \bigoplus



>

7.7 Reject a Call

To reject an incoming call, press and hold the **TALK** button for 2 seconds. The mobile phone will send a busy signal to the caller.

7.8 Redial Last Number

To redial the last number called, press the **TALK** button twice. A "beep" sound will be heard, and the last number called will be redialed.

 $>\,$ To cancel redialing the last number press the TALK button once.

Note: Use of some of these functions depends on the type of mobile phone. Check which functions are available in the mobile phone's User Guide.

14:15





Troubleshooting & FAQ

Problem: The ARGARD M10 will not turn on.

Cause: This may be due to a malfunction in the battery, in case the headset

is dropped, or has sustained a sharp impact.

Solution: Reactivate the headset by charging the battery and pressing the **TALK** button. The red **TALK** button light will be turned on (if the battery is full, the red light may not be turned on). Continue pressing for approximately 5 seconds and then release.

Problem: The ARGARD M10 is connected, but it doesn't work. **Cause:** This may be due to a failed connection between the phone and

the ARGARD M10.

Solution: Reset the phone by turning it off and then on again. Then turn

the ARGARD M10 off and on again to create a new connection.

Problem: There are problems when trying to use the following functions: rejecting a call, putting a call on hold, redialing, three-way calling, or voice dialing.

 $\textbf{Cause:} \ \ \text{These functions are dependent a mobile phone that supports the activation}$

of a headset or hands-free unit.

Solution: Check these functions in the mobile phone's User Guide.

Problem: Ring tone for incoming call cannot be heard.

Cause: This may occur if the phone is set to silent mode or if the ring tone

is disabled.

 $\textbf{Solution:} \ \ \textbf{Change the phone settings to enable the incoming call ring tone.}$







Problem: Background noise during phone conversations.

(

Cause: The ARGARD M10 is designed for safety from propagating frequency waves. It is designed to use the lowest transmission power (including the use of as little battery power as possible) while still meeting the signal efficiency standards of Bluetooth Class 2.

Solution: For the best sound quality, wear the headset on the same side as the mobile phone.

Problem: The ARGARD M10 is automatically disconnected when not in use for over 90 minutes, or calls cannot be answered using the ARGARD M10.

Cause: It is a normal feature of the headset that when not in use for over 90 minutes, the headset enters energy saving mode. If the mobile phone does not support the use of this mode, the ARGARD M10 will temporarily disconnect the signal.

Solution: When there is an incoming call, press the **TALK** button once to reconnect and answer the call (it may take 2-3 seconds to make the connection).

Problem: The ARGARD M10 improperly performs a function, or the control buttons don't work correctly.

Cause: This may be due to usage that is improper or at too high a temperature, which can cause the processor chip to hang or malfunction.

Solution: The ARGARD M10 should be reset. Press and hold down the Volume Up, Volume Down, and Talk buttons simultaneously for approximately 10 seconds. The red light will flash 3 times to indicate headset shutdown and reset. Then press the Talk button once more to restart the ARGARD M10 for normal use.





Care and Maintenance


(

The ARGARD M10 was designed and produced using high technology, and should be carefully maintained. The following recommendations will help you to use the ARGARD M10 in accordance with the requirements of the warranty, and will help to extend the usable lifetime of the ARGARD M10.

> Avoid storing the ARGARD M10 headset under humidity, dusty, moist conditions, or at a temperature over 45°C. These conditions may degrade the electronic components. **—**

- > Do not store the headset in very cold conditions (Below -10°C). Use of the headset will produce a higher temperature, which will in turn create condensation inside the headset and may damage its electronic circuits.
- > Avoid using the Argard M10 in very hot conditions, as the heat may shorten the life of the electronic equipment, and may also damage the battery.



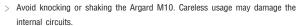

- > Do not clean the headset with strong chemicals or substances, as they may damage the surface.
- > Do not attempt to open the headset.

These recommendations will help you to use the headset more efficiently and to extend its usage lifetime. If any problems are encountered using the headset, please contact a nearby service center.

Certification and safety approvals

This device complies with Part 15 of the FCC Rules. Operation is subject to following two conditions:

(1) this device may not cause harmful interference and

(2) this device must accept any interference received, including interference that may cause undesired operation.

This product is CE Marked according to provisions of the R&TTE Directive

The Bluetooth word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Argard is under license. Other trademarks and trade names are those of their respective owners.













Warranty

Argard Co., Ltd, the producer of this Bluetooth headset, guarantees to provide quality after-sales support and service to buyers or users of this product, under the following conditions:

- 1. The product warranty is valid for the duration of one (1) year from the date of purchase.
- The buyer must produce a receipt or other documentation showing the date, time, and place where this product was purchased, in the event that the service representative asks to see such information.
- 3. The buyer shall not receive coverage or benefits of the warranty under the following conditions:
- > The product is damaged due to: improper usage or storage, falling or being dropped hard on the ground, direct contact with steam or water.
- > The product has been repaired or modified by someone who is not authorized by the company.
- > The product is sent for repairs after the warranty has expired, in which case the company will charge for the service at the normal cost.
- $\,>\,$ The battery has been modified, or an unsuitable battery has been used.
- > Charging equipment other than that provided with the ARGARD M10 headset has been used.
- 4. If there is a problem with the product within the duration of the warranty, the buyer should send or take the product to be checked or repaired at a nearby service center.
- All information regarding the warranty or the product may be changed or modified without prior notice.





