CAEN UHF RFID READERS

COMMUNICATION PROTOCOL





Technical Information Manual

Revision n. 16

13/09/2013



Scope of Manual

The goal of this manual is to provide the basic information to work with the CAEN UHF RFID READERS Communication Protocol.

Change Document Record

Date	Revision	Changes	Pages
18 Apr 2011	14	-	-
		Added AVP_PC parameter in the <i>Tab. 2.1: Attribute types</i>	12
		Modified Tab. 2.3: Commands with Optional Parameters Table	30
		Added Tab. 2.4: Renamed Commands Table	31
05 Oct 2012	15	Added bit 7 and 8 in the flag description of InventoryTag	14
05 OCT 2012	13	command	14
		Added reference to Ion R4300P Reader in the Tab. 2.2: Command	
		codes and in the Tab. 2.3: Commands with Optional Parameters	29, 30
		Table	
		Added <i>PowerSet</i> unit of measurement	12
		Modified Set Power Command	42
		Added R1230CB as supported reader for the	24
		ProgramID_EPC_C1G2 command	24
		Renamed NewRawReadIDs in setProtocol in the Set Protocol	37, 44
		Command and in the Continuous Inventory Command	37, 44
		Renamed NewRawReadIDs in InventoryTag in the InventoryTag	38
		Command	
		Renamed G2Write in WriteTagData_EPC_C1G2 in the	40
13 Sep 2013	16	WriteTagData_EPC_C1G2 Command	
10 00p 2010		Renamed G2Read in ReadTagData_EPC_C1G2 in the	41
		ReadTagData_EPC_C1G2 Command	
		Renamed G2Lock in LockTag_EPC_C1G2 and Tag Address in	43
		G2Password in the LockTag Command	
		Added RFRegulation in the Tab.2.1: Attribute types	12
		Added footnotes in the <i>Tab. 2.1: Attribute types</i>	12
		Added values for the ResultCode attribute	9
	Added reference to Muon A528B and qID R1240I Reade	<u>'</u>	
		Tab. 2.2: Command codes and in the Tab. 2.3: Commands with	29, 30
		Optional Parameters Table	

Reference Document

[RD1] Reader Protocol 1.0 – Working Draft Version of 25 August 2004 – Document revision 33 - EPCGlobal

[RD2] EPC Radio Frequency Identity Protocols Class-1 Generation-2 UHF RFID Protocol for Communications at 860MHz – 960MHz – Version 1.0.9 – EPCGlobal

[RD3] ISO/IEC FDIS 18000-6:2003(E) — Information technology automatic identification and data capture techniques — Radio frequency identification for item management air interface — Part 6: Parameters for air interface communication at 860-960 MHz

CAEN RFID srl

Via Vetraia, 11 55049 Viareggio (LU) - ITALY Tel. +39.0584.388.398 Fax +39.0584.388.959 info@caenrfid.com

www.caenrfid.com



© CAEN RFID srl - 2013

Disclaimer

No part of this manual may be reproduced in any form or by any means, electronic, mechanical, recording, or otherwise, without the prior written permission of CAEN RFID.

The information contained herein has been carefully checked and is believed to be accurate; however, no responsibility is assumed for inaccuracies. CAEN RFID reserves the right to modify its products specifications without giving any notice; for up to date information please visit www.caenrfid.com.

Federal Communications Commission (FCC) Notice (Preliminary) ¹

This device was tested and found to comply with the limits set forth in Part 15 of the FCC Rules. Operation is subject to the following conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This device generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instruction manual, the product may cause harmful interference to radio communications. Operation of this product in a residential area is likely to cause harmful interference, in which case, the user is required to correct the interference at their own expense. The authority to operate this product is conditioned by the requirements that no modifications be made to the equipment unless the changes or modifications are expressly approved by CAEN RFID.

¹ This declaration only applies to FCC readers A828US, A829US, A528, R1230CB, R1260I, R1260U, R4300P, A528B, R1240I.



Index

	Scope of Manual	2
	Change Document Record	2
	Reference Document	2
Inde	ex	4
List	of Tables	4
1	Introduction	5
	General Information	Е
2	Protocol Specification	7
	Attribute types	g
	Command codes	13
	Commands with Optional Parameters	30
	Renamed Commands Table	31
3	ASYNCHRONOUS NOTIFICATION: PROTOCOL SPECIFICATION	32
4	DEFAULT CONFIGURATION	34
5	EXAMPLES	36
	Set Protocol Command	37
	InventoryTag Command	38
	WriteTagData_EPC_C1G2 Command	40
	ReadTagData_EPC_C1G2 Command	41
	Set Power Command	42
	LockTag Command	43
	Continuous Inventory Command	44
ı id	st of Tables	
	. 2.1: Attribute types	
	. 2.2: Command codes	
Tab.	. 2.3: Commands with Optional Parameters Table	30
	. 2.4: Renamed Commands Table	
	. 3.3.1: Attribute types: Notification AVP List	
	. 4.4.1: A928EUEU and A948EUEU Configuration parameters default values	
	. 4.4.2: A928EUEU and A948EUEU Default composition of sources	
	. 4.4.3: A828EU A828AEUEU, A829EUEU, A946EUEU and A949EUEU Configuration parameters default values	
Tab.	. 4.4.4: A828EU A828AEUEU, A829EUEU, A946EUEU and A949EUEU Default composition of sources	35



1 Introduction





General Information

This document describes the message format of the communication protocol used by the host and the reader in order to issuing commands and reply with responses.

The protocol is based on the Attribute Value Pair (AVP) schema and foresees a message header in order to identify the message scope.

The command set and the firmware architecture draw inspiration from the Reader Protocol 1.0 specification draft from EPCGlobal but, at now, this protocol is not fully compatible with the same last specifications.

Message fields are described left to right, with the most significant byte on the left and the least on the right.




2 Protocol Specification





CAEN UHF RFID Reader protocol uses two logical communication channels: one for synchronous commands and one for asynchronous notifications. Command channel is mandatory and, at now, it is implemented on top of a TCP/IP socket (port 1000) and on RS232 while notification channels are implemented only with sockets.

All the messages (commands, responses and notifications) are composed by a header and a body. In all cases the body of the message is a list of attribute-value pairs. Responses always echo the Command AVP sent by the host. All the packets for the control and notification channel share a common header format:

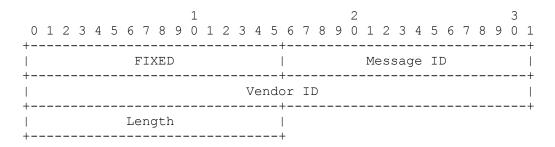

FIXED: Must be 0x8001 for commands and 0x0001 for responses.

Message ID: Id of the message. It is a sequence number used to map requests to its responses: a request and its corresponding response have the same message ID (the id is local to the channel).

Vendor ID: Must be 21336: the IANA "SMI Network Management Private Enterprise Code" assigned to CAEN SpA.

Length: Encodes the length of the message (in bytes) including the header.

The header is followed by a list of AVPs the number of which depends on the command. Each AVP have the following format:

											1										2										3	
	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1
Н																																-+
						Ε	RES	SEI	RVE	D												I	Ler	ngt	:h							
Н																																-+
					Αt	ttı	rik	out	te	$T_{\underline{\zeta}}$	ype	€								P	\tt	cri	Ĺbι	ıt∈	7	/al	Lue	€.				
Н																																-+
									[ι	ınt	til	L I	Ler	ngt	:h	is	s i	cea	ach	ec	_ t										
4																																-+

RESERVED: The first 16 bits are reserved for future extensions. All reserved bits must be set to 0 on outgoing messages and ignored on incoming messages.

Length: Encodes the length of the AVP packet including the length and the reserved fields.

Attribute type: A 2 byte code identifying the attribute type.

Attribute value: The actual attribute value according to the type. It follows immediately after the Attribute Type field and runs for the remaining bytes indicated in the Length (i.e. Length minus 6 bytes of header).



Attribute types

Code	Description
Code	CommandName: the command to be executed. All the commands are specified in the relevant
0x01	table. Attribute value is 2 bytes long.
0x02	ResultCode: a code representing an indication on the result of the command. All the commands are specified in the relevant table. Attribute value is 2 bytes long. The complete list of all possible return values is: enum AVPResultCode { ERR_SUCCESS = 0 ERR_UNKNOWN = 102, ERR_INVALIDCMD = 127, ERR_PWROUTRANGE = 183, ERR_INVALIDPAR = 200, ERR_TAGNOTPRESENT = 202, ERR_TAGWRITE = 203, ERR_TAGBADADDRESS = 205, ERR_INVALIDFUNCTION = 206, ERR_LOCKED = 209, ERR_FAILED = 210 }
	Note that the ERR_INVALIDPAR is used as a generic error and may be returned even if all the parameters passed to the reader are valid (for example, you may get an ERR_INVALIDPAR during the execution of a lock function just to signal that the lock operation has failed).
0x0E	EventType: the type of the notified event. Attribute value is 4 bytes long and can assume the following values: 0x00 = Unknown Event 0x01 = Tag glimpsed 0x02 = Tag New 0x03 = Tag Observed 0x04 = Tag Lost
0.05	0x05 = Tag Purged
0x0F	TagIDLen: the length of the tag ID. Attribute value is 2 bytes long. TimeStamp: an indication of the time. Attribute is 8 bytes long and must be interpreted as follow:
0x10	 the 4 least significant bytes are the seconds elapsed from the 1 January 1970. the 4 most significant bytes are the micro-seconds.
0x11	TagID : the ID read from the tag. Attribute value has a maximum length of 12 bytes. For ISO18000 tags only the first 8 bytes are significant while for EPC tags all the 12 bytes are significant.
0x12	TagType: the tag's type. Attribute value is 2 bytes long and can assume the following values: 0x00 = ISO18KB 0x01 = EPCC1G1 0x02 = ISO18KA 0x03 = EPCC1G2 0x05 = EPC119
0x1E	ChannelName : the name of the notification channel. Attribute value has a maximum length of 30 bytes.
0x1F	ChannelAddress : the address of the notification channel. Attribute value has a maximum length of 30 bytes.
0x20	TriggerName : the name of the trigger. Attribute value has a maximum length of 30 bytes.
0x21	TriggerType : the type of the trigger. Attribute value has a maximum length of 30 bytes.
0x22	ReadPointName : a string ² representing the name of the read point. Attribute value has a maximum length of 5 bytes and can assume the following values: "Ant0", "Ant1", "Ant2", "Ant3"
0x4D	TagValue : data read from the tag memory (when applicable). Attribute value has a maximum length of 128 bytes.

 $^{^{2} \ \}text{Regarding the string format our convention is to use a NULL terminate character, i.e. all the string end with 0x00.} \\$



Code	Description
	TagAddress : the memory location address of the tag where read or write data (when applicable).
0x4E	Attribute value is 2 bytes long.
0x4F	RESERVED.
0x50	Length : a value representing the length of a parameter. Attribute value is 2 bytes long.
	BitRate : a value representing the RF BitRate. Attribute value is 2 bytes long and can assume the following values:
0x51	Ox00 - Transmit: DSB ASK 10kbit, Ox01 - Transmit: DSB ASK 10kbit, Ox02 - Transmit: DSB ASK 40kbit, Ox03 - Transmit: DSB ASK 40kbit, Ox04 - Transmit: DSB ASK 160kbit, Ox05 - Transmit: DSB ASK 40kbit, Ox06 - Transmit: PR ASK 40kbit, Ox07 - Transmit: PR ASK 40kbit, Ox08 - Transmit: PR ASK 40kbit, Ox09 - Transmit: PR ASK 40kbit, Ox09 - Transmit: PR ASK 40kbit, Ox00 - Transmit: PR ASK
	reader please refer to the reader's user manual.
0x52	PowerGet : a value representing the RF power. Attribute value is 4 bytes long. (used for read the
	current setting)
0x53	RESERVED.
0x54	Protocol: a value representing the air protocol. Attribute value is 4 bytes long and can assume the following values: 0x00 = ISO18000-6B 0x01 = EPCC1G1 0x02 = ISO18000-6A 0x03 = EPCC1G2
0x56	ReadPointStatus: a value representing the antenna's status. Attribute value is 4 bytes long and can assume the following values: 0x00 = Good: antenna is well connected. 0x01 = Poor: antenna has a low quality connection. 0x02 = Bad: antenna is not connected or broken.
0x57	Boolean : a value representing a boolean data. Attribute value is 2 bytes long and can assume the following values: $0x00 = FALSE$. Not $0x00 = TRUE$.
0x58	IPAddress : a string ³ representing an IP address formatted with the standard IP dotted decimal format. Attribute value has a maximum length of 30 bytes.
0x59	IPNetMask : a string ⁴ representing an IP netmask formatted with the standard IP dotted decimal format. Attribute value has a maximum length of 30 bytes.
0x5A	IPGateway : a string ⁵ representing an IP address formatted with the standard IP dotted decimal format. Attribute value has a maximum length of 30 bytes.
0x5B	DESBEnable : used to enable/disable the Data Exchange Status Bit handling for ISO18000-6b and EPC 1.19 anti-collision algorithm. Attribute value is 2 bytes long and can assume the following values: 0x00 = Disable the DESB handling. Not 0x00 = Enable the DESB handling.
0x5C	FWRelease : a string ⁶ representing the device's firmware revision. Attribute value has a maximum length of 200 bytes.

³ Regarding the string format our convention is to use a NULL terminate character, i.e. all the string end with 0x00.

⁴ Regarding the string format our convention is to use a NULL terminate character, i.e. all the string end with 0x00.

Regarding the string format our convention is to use a NULL terminate character, i.e. all the string end with 0x00.

⁶ Regarding the string format our convention is to use a NULL terminate character, i.e. all the string end with 0x00.



Code	Description
Couc	DESBStatus : used to check the Data Exchange Status Bit handling for ISO18000-6b and EPC 1.19
٥٠٠٢٦	anti-collision algorithm. Attribute value is 2 bytes long and can assume the following values:
0x5D	0x00 = DESB handling is not enabled.
	Not 0x00 = DESB handling is enabled.
0x5E	EPCPWD : a value representing an EPC tag password. Attribute value is 2 bytes long.
	RFOnOff : used to start the generation of a continuous wave for test purposes. Attribute value is 2
0x5F	bytes long and can assume the following vaules:
	0x00 = Stop the wave generation.
0x60	Not 0x00 = Start the wave generation. BaudRate : a value representing the baudrate setting of serial port. Attribute value is 4 bytes long.
0x61	DataBits : a value representing the databits setting of serial port. Attribute value is 4 bytes long.
0x62	StopBits: a value representing the databits setting of serial port. Attribute value is 4 bytes long.
0,02	Parity: a value representing the parity setting of serial port. Attribute value is 4 bytes long and can
	assume the following values:
0x63	0x00 = No parity
	0x01 = Odd parity
	0x02 = Even parity
	FlowCtrl: a value representing the flow control setting of serial port. Attribute value is 4 bytes
	long and can assume the following values:
0x64	0x00 = No flow control
	0x01 = Hardware flow control
	0x02 = Software flow control (not yet implemented)
	DateTime : a value representing a date and time. Attribute value has a maximum length of 30
0x65	bytes. The data format is:
	YYYY-MM-DD HH:MM:SS
	SelUnselOp : a value representing the tag selection operation defined by the ISO18000-6B
	protocol. Attribute value is 2 bytes long and can assume the following values:
	0x00 = select equal
	0x01 = select not equal
0x66	0x02 = select greater than
UXOO	0x03 = select lower than
	0x04 = unselect equal
	0x05 = unselect not equal
	0x06 = unselect greater than
	0x07 = unselect lower than
0x67	Bitmask : a value representing the flag parameter used in the newRawReadID command.
000	Attribute value is 2 bytes long (only 8 least significant bits are used).
0x68	REESERVED.
	IORegister: a value representing the status of the I/O lines of the reader. Where input lines are
0x69	separated from output ones, input lines are mapped on the less significant bits while outputs are mapped on the most significant. Attribute value is 4 bytes long (effective used bits depend on the
	reader model).
	ConfigParameter: a value representing a configuration parameter. Attribute value is 4 bytes long
	and can assume the following values:
	0x00 = ReadCycle configuration
	0x01 = Observed Threshold configuation
	0x02 = Lost Threshold configuration
0,46.4	0x03 = Starting Q value (Valid values : 0 ÷ 15). EPC C1GEN2 Protocol only.
0x6A	$0x04 = Session$ (Valid values : $0 \div 3$). EPC C1GEN2 protocol only.
	0x05 = Target (Valid values : 0 ÷ 1). EPC C1GEN2 protocol only.
	0x06 = Selected (Valid values : 0, 1, 2, 3). EPC C1GEN2 protocol only.
	$0x07$ = Data Exchange Status B (Valid values : $0 \div 1$). ISO 18000-6B protocol only.
	0x08 = Antenna dwell time during inventory (msec). A528 only.
	$0x09$ = Inventory type (Valid values : $0 \div 3$). A528 only.
0x6B	ConfigValue: a value for the configuration parameter. Attribute value is 4 bytes long.
0x6C	NoOfTriggers : a value representing the number of triggers. Attribute value is 2 bytes long.
0x6D	NoOfChannels: a value representing the number of channels. Attribute value is 2 bytes long.
	EventMode : a value representing the event handling mode. Attribute value is 2 bytes long and
065	can assume the following values:
0x6E	0x00 = ReadCycle mode
	0x01 = Time Mode 0x02 = No Event Mode
	ONOZ - NO EVERTIMONE



Code	Description
	UpgradeType: a value representing the type of upgrade to perform. Attribute value is 2 bytes long
0x6F	and can assume the following values:
OXOI	0x01 = TFTP firmware upgrade.
	UpgradeArgument : a value representing the argument for the requested upgrade. Attribute value
0x70	has a maximum length of 255 bytes.
0.70	For TFTP upgrade (code 0x01) the string has the form: ' <tftpserverip>:<filename>'.</filename></tftpserverip>
	MemoryBank : a value representing the memory bank of a EPC Class 1 Generation 2 tag. Attribute
	value is 2 bytes long and can assume the following values:
	0x00 = Reserved Memory Bank
0x71	0x01 = EPC Memory Bank
	0x02 = TID Memory Bank
	0x03 = User Memory Bank
	Payload: a value representing the payload parameter for the EPC Class 1 Gen 2 lock command
0x72	(see the EPC Gen2 specification for details). Attribute value is 4 bytes long.
	G2Password : a value representing the Acess / Kill password parameter for the EPC Class 1 Gen 2
0x73	commands (see the EPC Gen2 specification for details). Attribute value is 4 bytes long.
	G2NSI : a value representing the numbering system identifier for the EPC Class 1 Gen 2 tags' id
0x74	(see the EPC Gen2 specification for details). Attribute value is 2 bytes long.
	QParameter : a value representing the initial value for the Q parameter involved in the EPC Class 1
0x75	Gen 2 anticollision algorithm (see the EPC Gen2 specification for details). Attribute value is 2 bytes
	long.
0x76	ReaderInfo : a string ⁸ indicating the model and the serial number of the reader.
	RFRegulation: a value representing the RF regulation to use. Attribute value is 2 bytes long and
	can assume the following values:
	0x00 = ETSI EN 302 208
	0x01 = ETSI EN 300 220
	0x02 = FCC
	0x03 = Malaysia
	0x04 = Japan
	0x05 = Korea
0x77	0x06 = Australia
	0x07 = China
	0x08 = Taiwan
	0x09 = Singapore
	0x0A = Brazil
	0x0B = Japan_STD_T106
	0x0C = Japan_STD_T107
	Note: not all the value are supported by all the readers. For the list of RF regulation supported by
	each reader please refer to the reader's user manual.
0x78	RFChannel : a value representing the RF channel to use. Attribute value is 2 bytes long and can
	assume values in the range 0 9. Channels are referred to the ETSI EN 302 208 regulation.
0x7A	RSSI : a value representing the backscattered RF field strenght. Attribute value is 2 bytes long.
0x7B	AVP_OPTION
0x7C	AVP_XPC a value representing the XPC word. Attribute value is 4 bytes long.
0x7D	AVP_PC a value representing the PC word. Attribute value is 4 bytes long.
0x96	PowerSet : a value (mW) representing the RF power emitted during the communication with tags.
	Attribute value is 4 bytes long. (used to set a new current value).
	SourceName : a string ⁹ representing the name of the data source. Attribute value has a maximum
0xFB	length of 30 bytes and can assume the following values:
	"Source_0", "Source_1", "Source_2", "Source_3"

Tab. 2.1: Attribute types

⁷ Regarding the string format our convention is to use a NULL terminate character, i.e. all the string end with 0x00.

⁸ The reader info string 's format is in the form <reader name> <space> <serial number>.Regarding the string format our convention is to use a NULL terminate character, i.e. all the string end with 0x00.

Regarding the string format our convention is to use a NULL terminate character, i.e. all the string end with 0x00.



Command codes

Note: Some commands have been renamed to align the nomenclature in this manual and in the CAEN RFID API Reference Manual. See § *Tab. 2.4: Renamed Commands Table* pag. 31 to know the equivalence between old and new name of the renamed commands.

Note: Some commands have optional parameters. See § *Tab. 2.3: Commands with Optional Parameters Table pag. 30* to know the CAEN RFID readers that support them.

Code	Description	Comp.
Code 0x12	RawReadIDs: permits to get all the tag's Ids that are under the RF field of the selected source [obsolete]. Parameters: SourceNameIn: [in] the name of the source to use. SourceNameOut: [out] the name of the source used. ReadPointName: [out] the name of the readpoint. TimeStamp: [out] the time at which the tags are detected. TagIDLen: [out] the ID length of the tags detected. ListOfIDs: [out] the list of Ids detected from the source. ResultCode: [out] the result code.	A928EU A948EU A828EU A828BT A828AEU A829EU A949EU
	Note: out parameters are repeated for each readpoint in the source.	



Code	Description	Comp.
	InventoryTag: permits to get all the tag's Ids that are under the RF field of the selected	
	source.	
0x13	Source. Parameters: SourceNameIn: [in] the name of the source to use (optional) Bank: [in] the number of the bank to use (optional). Length: [in] Filter Mask Length (optional). TagJD: [in] the Filter Mask Value (optional). TagJD: [in] the Filter Mask Value (optional). TagJD: [in] Inventory Flags. When set to 1 for each tag detected the RSSI value is returned. Default value 0. (optional). Bitmask: [in] Inventory Flags. When set to 1 for each tag detected the RSSI value is returned. Default value 0. (optional). Flags: (optional). BitO: RSSI: a 1 value indicates the reader will transmit the RSSI (Return Signal Strength Indicator) in the response. Bit1: FRAMED: a 1 value indicates that the tag's data will be transmitted by the reader to the PC as soon as the tag is detected, a 0 value means that all the tags detected are buffered in the reader and trasmitted all together at the end of the inventory cycle Bit2: CONTINUOS: a 1 value indicates that the inventory cycle is repeated by the reader depending on the SetReadCycle setting value, a 0 value means that only one inventory cycle will be performed. If the continuous mode is selected a 0 value in the ReadCycle setting will instruct the reader to repeat the inventory cycle until an InventoryAbort method is invoked, a value X different from 0 means that the inventory cycle will be performed X times by the reader. Bit3: Compact data: a 1 value indicates that only the EPC of the tag will be returned by the reader, a 0 value indicates that the complete data will be returned. In case that the compact option is enabled all the other data will be populated by this library with fakes values. Bit4: TID reading: a 1 value indicates that also the TID of the tag will be returned by the reader together with the other information. Bit5: EventTrigger: a 1 value indicates that the continuous acquisition will start once an event as a key pressure occurs (this flag requires also bit2 flag active) Bit6: NPC: a 1 value allows the reader to get the XPC word if backscattered by a tag. Ta	A928EU A948EU A941EU A941US A828EU A828AEU A828BT A829EU A528 A528J A939 R1230CB R1260U R1260U R1260E R4300P A528B R1240I
	(See § Tab. 2.3: Commands with Optional Parameters Table pag. 30 to know the CAEN RFID readers that support them)	
	AddReadTrigger: permits to add a trigger to a source. [obsolete]	
	Parameters:	A928EU
0x3F	SourceName: [in] the name of the source. TriggerName: [in] the name of the trigger. ResultCode: [out] the result code.	A948EU



Code	Description	Comp.
	AddNotifyTrigger: permits to add a trigger to a notification channel. [obsolete]	
0x40	Parameters: ChannelName: [in] the name of the channel. TriggerName: [in] the name of the trigger. ResultCode: [out] the result code.	A928EU A948EU
0x41	RemoveReadTrigger: permits to remove a trigger from a source. [obsolete] Parameters: SourceName: [in] the name of the source. TriggerName: [in] the name of the trigger. ResultCode: [out] the result code.	A928EU A948EU
0x42	RemoveNotifyTrigger: permits to remove a trigger from a notification channel. [obsolete] Parameters: ChannelName: [in] the name of the channel. TriggerName: [in] the name of the trigger. ResultCode: [out] the result code.	A928EU A948EU
0x49	AllocateTrigger: permits to create a new trigger. [obsolete] Parameters: TriggerName: [in] the name of the trigger. TriggerType: [in] the type of the trigger. ResultCode: [out] the result code.	A928EU A948EU
0x4A	DeallocateTrigger: permits to destroy an existing trigger. [obsolete] Parameters: TriggerName: [in] the name of the trigger. ResultCode: [out] the result code.	A928EU A948EU
0x53	AllocateChannel: permits to create a notification channel. [obsolete] Parameters: ChannelName: [in] the name of the channel. ChannelAddress: [in] the address of the channel. ResultCode: [out] the result code.	A928EU A948EU
0x54	DeallocateChannel: permits to destroy a notification channel. [obsolete] Parameters: ChannelName: [in] the name of the channel. ResultCode: [out] the result code.	A928EU A948EU
0x5D	AddSourceToChannel: permits to add a source to a notification channel. [obsolete] Parameters: SourceName: [in] the name of the source. ChannelName: [in] the name of the channel. ResultCode: [out] the result code.	A928EU A948EU
0x5E	RemoveSourceFromChannel: permits to remove a source from a notification channel. [obsolete] Parameters: SourceName: [in] the name of the source. ChannelName: [in] the name of the channel. ResultCode: [out] the result code.	A928EU A948EU
0x5F	AddReadPointToSource: permits to add a readpoint to a source. Parameters: SourceName: [in] the name of the source. ReadPointName: [in] the name of the readpoint. ResultCode: [out] the result code.	A928EU A948EU A528 A939 A829 A828BT A528B R1240I



Code	Description	Comp.
	RemoveReadPointFromSource: permits to remove a readpoint from a source.	A928EU
		A948EU
	Parameters:	A528
000	SourceName: [in] the name of the source.	A939
0x60	ReadPointName: [in] the name of the readpoint.	A829
	ResultCode: [out] the result code.	A828BT
		A528B
		R1240I
	SetPower: permits to set the RF power level.	A928EU
	The same of the sa	A948EU
	Parameters:	A949EU
	PowerSet: [in] the power level to set.	A528
	ResultCode: [out] the result code.	A939
		A828AEU
		R1230CB
0x64		R1260I
		R1260E
		R1260U
		A941
		R4300P
		A528B
		R1240I
	BoodTogDate: normits to road data from the ISO19000 Ch tag's moment	K124UI
	ReadTagData: permits to read data from the ISO18000-6b tag's memory.	
	Parameters:	A928EU
	SourceName: [in] the name of the source to use.	A948EU
	TagIDLen: [in] the ID length of the tag.	A828EU
0x6E	TagID: [in] the ID of the tag.	A828AEU
	TagAddress: [in] the address from which read the data.	A829EU
	Length: [in] the number of bytes to read.	A949EU
	TagValue: [out] the data read from the tag memory.	
	ResultCode: [out] the result code.	
	WriteTagData: permits to write data to the ISO18000-6b tag's memory.	
	Time agenta. Permits to write data to the 150 10000 on tag 5 memory.	
	Parameters:	A928EU
	SourceName: [in] the name of the source to use.	A948EU
0.5-	TagIDLen: [in] the ID length of the tag.	A828EU
0x6F	TagID: [in] the ID of the tag.	A828AEU
	TagAddress: [in] the address where to write the data.	A829EU
	Length: [in] the number of bytes to write.	A949EU
	TagValue: [in] the data to write to the tag memory.	
	ResultCode: [out] the result code.	
	LockTag: permits to lock data into the ISO18000-6b tag's memory.	
		A928EU
	Parameters:	A948EU
0.70	SourceName: [in] the name of the source to use.	A828EU
0x70	TagIDLen: [in] the ID length of the tag.	A828AEU
	TagID: [in] the ID of the tag.	A829EU
	TagAddress: [in] the address where to write the data.	A949EU
	ResultCode: [out] the result code.	
0x71	RESERVED	



Code	Description	Comp.
	SetBitRate: permits to set the BitRate to use.	A928EU
		A948EU
	<u>Parameters:</u>	A828EU
	BitRate: [in] the BitRate to set.	A828AEU
	ResultCode: [out] the result code.	A829EU
		A949EU
		A939
0x72		A828BT
5 <u>-</u>		A941EU
		A941US
		A528
		A528J
		A939
		A528B
		R1240I
	GetPower: permits to get the current RF power level.	A928EU
	den ower permits to get the content in power level.	A948EU
	Parameters:	A949EU
	PowerGet: [out] the current power level.	A941EU
	ResultCode: [out] the result code.	A941US
		A828EU
		A828AEU
		A828BT
		A829EU
0x73		A528
0.775		A528J
		A939
		R1230CB
		R1260I
		R1260U
		R1260E
		R4300P
		A528B
		R1240I
	SetProtocol: permits to set the protocol to use.	A928EU
	ben rototon permits to set the protocor to use.	A948EU
	<u>Parameters:</u>	A949EU
	Protocol: [in] the protocol to use.	A941EU
	ResultCode: [out] the result code.	A941US
		A828EU
		A828AEU
		A828BT
		A829EU
0x74		A528
OM 7		A528J
		A939
		R1230CB
		R1260I
		R1260U
		R1260E
		R4300P
		A528B
1		R1240I
		K1Z4III



Code	Description	Comp.
	CheckReadPointStatus : permits to check the quality of the antenna connection.	A928EU
	Parameters:	A948EU
	ReadPointName: [in] the name of the readpoint.	A949EU
	ReadPointStatus: [out] the quality of the connection.	A941EU
	ResultCode: [out] the result code.	A941US
	hesuncode: [out] the result code.	A828EU
0x76		A828AEU
0.770		A828BT
		A829EU
		A528
		A528J
		A939
		A528B
		R1240I
	CheckSourceInChannel: permits to verify if a source is assigned to a notify	
	channel.[obsolete]	
	Darameters	
0x77	Parameters:	A928EU
	SourceName: [in] the name of the source.	A948EU
	ChannelName: [in] the name of the channel.	
	Value: [out] a Boolean value meaning the belonging to the source.	
	ResultCode: [out] the result code.	40205::
	CheckReadPointInSource : permits to verify if a readpoint belongs to a givens source.	A828EU
	Parameters:	A828AEU
	ReadPointName: [in] the name of the readpoint.	A828BT
	SourceName: [in] the name of the source.	A829EU
	Value: [out] a Boolean value meaning the belonging to the source.	A928EU
	ResultCode: [out] the result code.	A948EU
	nesalteode. [ode] the result code.	A941EU
		A941US
		A949EU
0x78		A528
		A528J
		A939
		R1230CB
		R1260I
		R1260U
		R1260E
		R4300P
		A528B
		R1240I
	GetProtocol: permits to get the protocol in use.	A828EU
	Darameters	A828AEU
	Parameters:	A828BT
	Protocol: [out] the protocol in use.	A829EU
	ResultCode: [out] the result code.	A928EU
		A948EU
		A941EU
		A941US
		A949EU
0x79		A528
-		A528J
		A939
		R1230CB
		R1260I
		R1260U
		R1260E
		R4300P
		<u> </u>
		A528B
		R1240I



Code	Description	Comp.
	SetNetwork: permits to set up the network configuration.	
0x7A	Parameters: IPAddress: [in] the IP address to set. IPNetMask: [in] the IP netmask to set. IPGateway: [in] the IP gateway to set. ResultCode: [out] the result code.	A928EU A948EU da verificare
0x7B	SetDESB: permits to enable or disable the "Data Exchange Status Bit" handling during the anti-collision algorithm when ISO 18000-6b air protocol is in use. [obsolete] Parameters: DESBEnable: [in] enable/disable value. ResultCode: [out] the result code.	A928EU A948EU A828EU A828AEU A829EU A949EU
0x7C	GetFirmwareRelease: permits to get the firmware revision. Parameters: FWRelease: [in] the firmware release. ResultCode: [out] the result code.	A828EU A828AEU A828BT A829EU A928EU A948EU A941EU A941US A949EU A528 A528J A939 R1230CB R1260U R1260U R1260E R4300P A528B R1240I
0x7D	GetDESB: permits to get the current setting of the "Data Exchange Status Bit" handling. [obsolete] Parameters: DESBStatus: [in] enabled/disabled value. ResultCode: [out] the result code.	A928EU A948EU A828EU A828AEU A829EU A949EU
0x7E	ProgramID: permits to program the ID in the EPC Class 1 Gen 1 tags. Parameters: SourceName: [in] the name of the source. TagIDLen: [in] the ID length of the tag. TagID: [in] the ID of the tag. EPCPWD: [in] the EPC password to set. Lock: [in] a Boolean value; TRUE = lock the ID. FALSE = do not lock. ResultCode: [out] the result code.	A928EU A948EU
0x7F	KillTag: permits to kill a EPC Class 1 Gen 1 tag. Parameters: SourceName: [in] the name of the source. TagIDLen: [in] the ID length of the tag. TagID: [in] the ID of the tag. EPCPWD: [in] the EPC password. ResultCode: [out] the result code.	A928EU A948EU



Code	Description Description	Comp.
	RFOnOff : permits to start/stop the generation of a continuous wave. Used only for test	A928EU
	and measurements purposes.	A948EU
	Parameters:	A828EU
	$RFOnOff$: [in] = 0 \rightarrow stop; != 0 \rightarrow start	A828AEU
	ResultCode: [out] the result code	A828BT
		A829EU
0x80		A949EU
		A528
		R1230CB
		R1260I
		R1260U
		R4300P
		A528B
		R1240I
	GetBitRate: permits to get the BitRate in use.	A828EU
		A828AEU
	Parameters:	A828BT
	BitRate: [out] the BitRate in.	A829EU
	ResultCode: [out] the result code.	A928EU
		A948EU
		A941EU
0x81		A941US
		A949EU
		A528
		A528J
		A939
		A528B
	Disciplify to Tark managers to a surity data to the tark managers. This formation was the	R1240I
	BlockWriteTag: permits to write data to the tag memory. This function uses the	
	ISO18000-6b Write4Byte command to speed up the writing of large amount of data at	
	one time.	A928EU
	Parameters:	A948EU
	SourceName: [in] the name of the source to use.	A828EU
0x82	TagIDLen: [in] the ID length of the tag.	A828AEU
	TagID: [in] the ID of the tag.	A829EU
	TagAddress: [in] the address where to write the data.	A949EU
	Length: [in] the number of bytes to write.	
	TagValue: [in] the data to write to the tag memory.	
	ResultCode: [out] the result code.	4000511
	SetRS232 : permits to modify the settings of the serial port.	A828EU
	Parameters:	A828AEU
	Baudrate: [in] the baud rate value.	A829EU
	Databits: [in] the data bits setting.	A928EU
	Stopbits: [in] the data bits setting.	A948EU
	Parity: [in] the parity setting.	A941EU
0x83	Flowctrl: [in] the flow control setting.	A941US
	ResultCode: [out] the result code.	A949EU
	nesuncode. [out] the result code.	R1230CB
		R1260I
		R1260U
		R1260E
		R4300P
	SetDateTime: permits to modify date and time.	A828EU
		A828AEU
	Parameters:	A829EU
	Datetime: [in] the date and time to set up.	A928EU
0x84	ResultCode: [out] the result code.	A948EU
0.04		A941EU
		A941US
		A949EU



Code	Description	Comp.
	GroupSelectUnselect : permits to execute the tag selection commands defined by the	
	ISO18000-6B protocol.	
		A928EU
	Parameters:	A948EU
	SourceName: [in, optional] the name of the source to use.	A828EU
0x85	Operation: [in] the tag selection operation.	A828AEU
	Bytemask: [in] the byte mask as defined by the protocol.	A829EU
	TagAddress: [in] the address where to compare the data.	A949EU
	TagValue: [in] the data to compare with the tag memory.	
	TagID: [out] the ID of the tag.	
	ResultCode: [out] the result code.	
	GetIO : permits to read the current status of the I/O lines.	A828EU
	Parameters:	A828AEU
	IORegister: [out] the status of the I/O lines.	A828BT
	ResultCode: [out] the result code.	A829EU
	nesureoue. [out] the result code.	A928EU
		A948EU
		A941EU
		A941US
		A949EU
0x86		A528
		A528J
		A939
		R1230CB
		R1260I
		R1260U
		R1260E
		R4300P
		A528B
		R1240I
	SetIO : permits to set the level of the output lines.	A828EU
	Parameters:	A828AEU
	IORegister: [in] the value to set to the output lines.	A828BT
	ResultCode: [out] the result code.	A829EU
	nesureoute. [out] the result code.	A928EU
		A948EU
		A941EU
		A941US
		A949EU
0x87		A528
		A528J
		A939
		R1230CB
		R1260I
		R1260U
		R1260E
		R4300P
		A528B
		R1240I



Code	Description	Comp.
	SetIODirection: permits to define the direction of the I/O lines.	A828EU
	(0 = input; 1 = output)	A828AEU
		A828BT
	Parameters:	A829EU
	IORegister: [in] the direction to set to the I/O lines.	A928EU
	ResultCode: [out] the result code.	A948EU
		A941EU
		A941US
		A949EU
0x88		A528
onee		A528J
		A939
		R1230CB
		R1260I
		R1260U
		R1260E
		R4300P
		A528B
		R1240I
	GetIODirection : permits to read the current status of the I/O lines. (0 = input; 1 =	A828EU
	output)	A828AEU
	Parameters:	A829EU
	IORegister: [out] the direction of the I/O lines.	A828BT
	ResultCode: [out] the result code.	A928EU
	nesuncode. [out] the result code.	A948EU
		A941EU
		A941US
		A949EU
0x89		A528
		A528J
		A939
		R1230CB
		R1260I
		R1260U
		R1260E
		R4300P
		A528B
		R1240I
	SetSourceConfig: permits to set a configure parameter for a logical source.	A828EU
		A828AEU
	Parameters:	A828BT
	SourceName: [in] the name of the source to configure.	A829EU
	ConfigParameter: [in] the code of the parameter.	A928EU
	ConfigValue: [in] the value for the parameter.	A948EU
	ResultCode: [out] the result code.	A941EU
		A941US
		A949EU
0x8A		A528
UNUM		A528J
		A939
		R1230CB
		<u> </u>
		R1260I
		R1260U
		R1260E
		R4300P
		A528B
	The state of the s	R1240I



Code	Description	Comp.
	GetSourceConfig: permits to read a configure parameter for a logical source.	A828EU
	Parameters	A828AEU
	Parameters: SourceName: [in] the name of the source to configure.	A828BT
		A829EU
	ConfigParameter: [in] the code of the parameter.	A928EU
	ConfigValue: [out] the value for the parameter.	A948EU
	ResultCode: [out] the result code.	A941EU
		A941US
		A949EU
0x8B		A528
		A528J
		A939
		R1230CB
		R1260I
		R1260U
		R1260E
		R4300P
		A528B
		R1240I
	GetTriggers : permits to read the names of the allocated triggers.[obsolete]	
	Parameters:	A928EU
0x8C	NoOfTriggers: [out] the number of allocated triggers.	A948EU
	ListOfTriggerNames: [in] a list containing the names of the allocated triggers.	7.5 1020
	ResultCode: [out] the result code.	
	GetChannels: permits to read the names of the allocated notification channels	
	[obsolete].	
		A928EU
0x8D	Parameters:	A948EU
	NoOfChannels: [out] the number of allocated channels.	ASTOLO
	ListOfChannelNames: [in] a list containing the names of the allocated channels.	
	ResultCode: [out] the result code.	
	CheckSourceInTrigger : permits to verify if the specified logical source is associated to	
	the specified trigger. [obsolete]	
	Parameters:	A928EU
0x8E	SourceName: [in] the name of the source.	A948EU
	TriggerName: [in] the name of the trigger.	7.5 1020
	Boolean: [out] 0 if they are associated, ≠0 if not.	
	ResultCode: [out] the result code.	
	CheckTriggerInChannel: permits to verify if the specified trigger is associated to the	
	specified channel. [obsolete]	
0x8F	Parameters:	A928EU
2,01	ChannelName: [in] the name of the source.	A948EU
	TriggerName: [in] the name of the trigger.	
	Boolean: [out] 0 if they are associated, ≠0 if not.	
	ResultCode: [out] the result code.	
	CheckChannelInTrigger : permits to verify if the specified channel is associated to the specified trigger. [obsolete]	
	specified trigger. [obsolete]	
	Parameters:	A928EU
0x90	ChannelName: [in] the name of the source.	A948EU
	TriggerName: [in] the name of the trigger.	
	Boolean: [out] 0 if they are associated, ≠0 if not.	
	ResultCode: [out] the result code.	
	SetEventMode: permits to set the event generation mode for the reader notification	
	channels. [obsolete]	
0x91	Descriptions	A928EU
551	Parameters:	A948EU
	EventMode: [in] the event mode.	
	ResultCode: [out] the result code.	



Code	Description	Comp.
	GetEventMode : permits to read the event generation mode for the reader notification	
	channels. [obsolete]	4030511
0x92	Parameters:	A928EU
	EventMode: [out] the event mode.	A948EU
	ResultCode: [out] the result code.	
	FirmwareUpgrade: permits to upgrade the reader firmware. [obsolete]	
0x93	Parameters:	A928EU
	UpgradeType: [in] the type of the upgrade. UpgradeArg: [in] the argument needed by the upgrade procedure.	A948EU
	ResultCode: [out] the result code.	
	E119ProgramID : permits to write the EPC into a EPC1.19 tag.	A928EU
	E113F10grannib. permits to write the EFC into a EFC1.13 tag.	A948EU
	Parameters:	A828EU
0x94	SourceName: [in] the name of the source to use.	A828AEU
chs .	TagID: [in] the old EPC of the tag.	A829EU
	TagValue: [in] the EPC to write into the tag memory.	A949EU
	ResultCode: [out] the result code.	
	ProgramID_EPC_C1G2: permits to write the EPC in a Class 1 Gen 2 tag.	
	Deventant	A828EU
	Parameters: SourceName: [in] the name of the source to use.	A828AEU
	TagIDLen: [in] the ID length of the tag (must be an even number).	A828BT
	TagID: [in] the EPC to write into the tag memory.	A829EU
0x95	G2NSI: [in] the EPC numbering system.	A928EU
	G2Password: [in] the EPC Access password (optional).	A948EU A941EU
	ResultCode: [out] the result code.	A941US
	(,	A94103
	(See § Tab. 2.3: Commands with Optional Parameters Table pag. 30 to know the CAEN	R1230CB
	RFID readers that support them)	
	ReadTagData_EPC_C1G2: permits to read data from anyone of the Gen2 tag memory	A828EU
	banks.	A828AEU
	Darameters	A828BT
	Parameters: SourceName: [in, optional] the name of the source to use.	A829EU
	Bank: [in] the number of the bank to use (optional).	A928EU
	TagAddress: [in] Filter Mask Start Address (optional)	A948EU
	TagIDLen: [in] the ID length of the tag.	A941EU
	TagID: [in] the ID of the tag.	A941US
0.00	MemoryBank: [in] the memory bank.	A949EU
0x96	TagAddress: [in] the address where to read the data.	A528 A528J
	Length: [in] the number of bytes to read (must be an even number).	A528J A939
	TagValue: [out] the data read from the tag memory.	R1230CB
	G2Password: [in] the EPC Access password (optional).	R1260I
	ResultCode: [out] the result code.	R1260U
		R1260E
	(See § Tab. 2.3: Commands with Optional Parameters Table pag. 30 to know the CAEN	R4300P
	RFID readers that support them)	A528B
		R1240I



Code	Description	Comp.
	WriteTagData_EPC_C1G2: permits to write data into anyone of the Gen2 tag memory	A828EU
	banks.	A828AEU
	Parameters:	A828BT
		A829EU
	SourceName: [in, optional] the name of the source to use. Bank: [in] the number of the bank to use (optional).	A928EU
		A948EU
	TagAddress: [in] Filter Mask Start Address (optional)	A941EU
	TagIDLen: [in] the ID length of the tag.	A941US
	TagID: [in] the ID of the tag.	A949EU
0x97	MemoryBank: [in] the memory bank.	A528
	TagAddress: [in] the address where to write the data.	A528J
	Length: [in] the number of bytes to write (must be an even number).	A939
	TagValue: [in] the data to write to the tag memory.	R1230CB
	G2Password: [in] the EPC Access password (optional).	R1260I
	ResultCode: [out] the result code.	R1260U
		R1260E
	(See § Tab. 2.3: Commands with Optional Parameters Table pag. 30 to know the CAEN	R4300P
	RFID readers that support them)	A528B
		R1240I
	LockTag_EPC_C1G2: permits to execute the tag lock command defined by the EPC Class	A828EU
	1 Gen 2 protocol.	A828AEU
	1 den 2 protocoi.	
	Parameters:	A828BT
	SourceName: [in, optional] the name of the source to use.	A829EU
	BankMask: [in] filter mask for the bank (optional).	A928EU
	PositionMask: [in] filter mask start address (optional).	A948EU
	TagIDLen: [in] the ID length of the tag to lock or the filter mask length	A941EU
	TagID: [in] the ID of the tag or the filter mask to use (optional).	A941US
	G2Payload: [in] the lock payload.	A949EU
0x98	G2Password: [in] the EPC Access password (optional).	A528
		A528J
	ResultCode: [out] the result code.	A939
		R1230CB
	(See § Tab. 2.3: Commands with Optional Parameters Table pag. 30 to know the CAEN	R1260I
	RFID readers that support them)	R1260U
		R1260E
		R4300P
		A528B
		R1240I
	KillTag_EPC_C1G2: permits to execute the tag kill command defined by the EPC Class 1	A828EU
	Gen 2 protocol.	A828AEU
		A828BT
	Parameters:	A829EU
	SourceName: [in, optional] the name of the source to use.	A928EU
	BankMask: [in] filter mask for the bank (optional).	A948EU
	PositionMask: [in] filter mask start address (optional).	A941EU
	TagIDLen: [in] the ID length of the tag.	A941US
	TagID: [in] the ID of the tag or the filter mask to use (optional).	A94103 A949EU
0x99	G2Password: [in] the kill password.	A549EU A528
UX33	ResultCode: [out] the result code.	
		A528J
	(See S. Tab. 2.2). Commando with Ontional Description Table 2002 2015 Inc. 11 CASA	A939
	(See § Tab. 2.3: Commands with Optional Parameters Table pag. 30 to know the CAEN	R1230CB
	RFID readers that support them)	R1260I
		R1260U
		R1260E
		R4300P
	T and the second	A528B
		ASEOD



Code	Description	Comp.
	Query_EPC_C1G2: permits to execute the tag query command defined by the EPC Class	A828EU
	1 Gen 2 protocol. If a tag is in the field result code is ERROR_SUCCESS (0x00) else result	A828AEU
	code is ERROR_TAGNOTPRESENT (0xCA).	A828BT
		A829EU
	Parameters:	A928EU
	SourceName: [in] the name of the source to use.	A948EU
	ResultCode: [out] the result code.	A941EU
		A941US
		A949EU
0x9A		A528
		A528J
		A939
		R1230CB
		R1260I
		R1260U
		R1260E
		R4300P
		A528B
	C-10 FDC C1C2 page its to always the initial value of the Comment	R1240I
	SetQ_EPC_C1G2 : permits to change the initial value of the Q parameter used in the	A828EU A828AEU
	Gen2 anticollision algorithm.	A828BT
	Parameters:	A829EU
	QParameter: [in] the value of the Q parameter.	A928EU
	ResultCode: [out] the result code.	A948EU
		A941EU
		A941US
		A949EU
0x9B		A528
		A528J
		A939
		R1230CB
		R1260I
		R1260U
		R1260E
		R4300P
		A528B
		R1240I
	GetQ_EPC_C1G2: permits to read the initial value of the Q parameter used in the Gen2	A828EU
	anticollision algorithm.	A828AEU
	Parameters:	A828BT
	QParameter: [out] the value of the Q parameter.	A829EU
	ResultCode: [out] the result code.	A928EU
		A948EU A941EU
		A941EU A941US
		A949EU
0x9C		A528
JAJC		A528J
		A939
		R1230CB
		R1260I
		R1260U
		R1260E
		R4300P
		A528B
		R1240I
		I.



Code	Description	Comp.
	QueryAck_EPC_C1G2: permits to execute the tag query and ack command defined by the EPC Class 1 Gen 2 protocol. If a tag is in the field result code is ERROR_SUCCESS (0x00) and the command returns the EPC code stored in the tag else the result code is	A928EU
0x9D	ERROR_TAGNOTPRESENT (0xCA).	A948EU A828EU
	Parameters:	A828AEU A829EU
	SourceName: [in] the name of the source to use. TagID: [out] the ID of the tag.	A949EU
	ResultCode: [out] the result code.	
	GetReaderInfo : permits to read some information about the reader itself.	A928EU A948EU
	Parameters:	A828EU
	ReaderInfo: [out] a string ¹⁰ with information about the reader. ResultCode: [out] the result code.	A828AEU
	hesarcoac. [out] the result code.	A829EU A941EU
		A941US
0x9E		A949EU
		A528
		R1230CB R1260I
		R1260U
		R4300P
		A528B
	SetLBTMode : permits to enable or disable the Listen Before Talk capability on ETSI EN	R1240I A928EU
	302 208 compatible readers.	A948EU
	Parameters:	A941EU
	Boolean: [in] 0 to disable LBT and ≠0 to enable LBT.	A941US A949EU
	ResultCode: [out] the result code.	A528
		A528J
0x9F		A939
		R1230CB R1260I
		R1260U
		R1260E
		R4300P
		A528B R1240I
	GetLBTMode : permits to read the current setting for the Listen Before Talk capability	A928EU
	on ETSI EN 302 208 compatible readers.	A948EU
	Parameters:	A941EU
	Boolean: [out] 0 if LBT is disabled, ≠0 if LBT is enabled.	A941US A949EU
	ResultCode: [out] the result code.	A528
		A528J
0xA0		A939
		R1230CB R1260I
		R1260U
		R1260E
		R4300P
		A528B
		R1240I

 $^{^{10}}$ Regarding the string format our convention is to use a NULL terminate character, i.e. all the string end with 0x00 .



Code	Description Control of the production was described as and the DE regulation was described as a description.	Comp.
	GetRFRegulation : permits to read the RF regulation used by the reader.	A828EU
	Parameters:	A828AEU
	RFRegulation: [out] the desired RF regulation.	A828BT A829EU
	ResultCode: [out] the result code.	
		A928EU A948EU
		A948EU A941EU
		A941US
		A94103 A949EU
0xA2		A549EU A528
UXAZ		A528 A528J
		A939
		R1230CB
		R1260I
		R1260U
		R1260E
		R4300P
		A528B
		R1240I
	SetRFChannel : permits to set the RF channel where the reader emits the RF field.	A828BT
	Seam Sharmen permits to set the fit charmer where the reduct childs the fit field.	A928EU
	Parameters:	A948EU
	RFChannel: [in] the RF channel.	A941EU
	ResultCode: [out] the result code.	A941US
0xA3		A949EU
07.1.0		R1230CB
		R1260I
		R1260U
		R1260E
		R4300P
	GetRFChannel: permits to read the RF channel currently in use.	A828BT
	, , , , , , , , , , , , , , , , , , ,	A928EU
	Parameters:	A948EU
	RFChannel: [out] the RF channel.	A941EU
	ResultCode: [out] the result code.	A941US
0xA4		A949EU
		R1230CB
		R1260I
		R1260U
		R1260E
		R4300P
0xA7	GetChannelData: [Obsolete]	
	GetBufferedData : permits to read all the tags stored in reader's memory using all the ReadPoints belonging to the source. It returns an array of CAENRFIDTag objects detected	
0xB0	Parameters: SourceNameIn: [in] the name of the source to use. SourceNameOut: [out] the name of the source used. ReadPointName: [out] the name of the readpoint.	A828BT
	TimeStamp: [out] the time at which the tags are detected. TagIDLen: [out] the ID length of the tags detected. ListOfIDs: [out] the list of Ids detected from the source. ResultCode: [out] the result code.	
0xB1	LockBlockPermaLock_EPC_C1G2	A528 A528J A939
OVDI		A528B R1240I



Code	Description	Comp.
	ReadBLockPermalock_EPC_C1G2	A528
		A528J
0xB2		A939
		A528B
		R1240I
0xFFFF	RESERVED	

Tab. 2.2: Command codes



Commands with Optional Parameters

The following table shows a list of EPC C1G2 commands with optional parameters and the CAEN RFID readers that support them.

	Reader	SEU	SAE	BT	EU	Œ	ν	Œ	:US	EU	80	88	8	68	OCB	201	00	30E	90P	IOt
Con	nmand	A828EU	A828AE	A828BT	A829EU	A928EU	A948EU	A941EU	A941US	A949EU	A528	A528B	A528J	A939	R1230CB	R1260	R1260U	R1260E	R4300P	R1240I
Inver	ntoryTag	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
ial iters	InventoryTag + SourceNameIn + bank + Length + TagID + TagAddress + Bitmask	х	x	х	х	х	х	х	x	х	1	1	1	1	1	1	1	1	х	V
+optional parameters	InventoryTag + flags	1	1	1	1	х	х	1	1	1	1	1	1	1	1	1	1	1	х	1
KillTa	ng_EPC_C1G2	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
+optional parameters	KillTag_EPC_C1G2 + BankMask + PositionMask + TagId	х	x	х	х	х	х	х	х	х	1	1	1	1	х	х	х	х	х	1
Lock1	Tag_EPC_C1G2	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
+optional parameters	LockTag_EPC_C1G2 + BankMask + PositionMask + TagID + G2Password	x	x	х	х	х	х	х	х	х	1	1	1	√	х	х	х	x	х	1
Read	TagData_EPC_C1G2	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	√	√
eters	ReadTagData_EPC_C1G2 + G2Password	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
+optional parameters	ReadTagData_EPC_C1G2 + Bank + TagAddress	х	х	х	х	х	х	х	х	х	1	1	1	1	х	х	х	х	х	1
+option	ReadTagData_EPC_C1G2 + Bank + TagAddress + G2Password	х	x	x	х	х	х	х	х	х	1	1	1	1	х	х	х	х	х	1
Write	eTagData_EPC_C1G2	1	√	1	1	1	1	1	1	1	1	√	1	1	1	1	1	1	√	1
eters	WriteTagData_EPC_C1G2 + G2Password	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
+optional parameters	WriteTagData_EPC_C1G2 + Bank + TagAddress	х	х	х	х	х	х	х	х	х	1	1	1	1	х	х	х	х	х	1
+option	WriteTagData_EPC_C1G2 + Bank + TagAddress + G2Password	х	x	x	x	х	х	x	х	х	1	1	1	1	x	x	x	х	х	1
Prog	ramID_EPC_C1G2	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
+optional parameters	ProgramID_EPC_C1G2 + G2Password	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1

Tab. 2.3: Commands with Optional Parameters Table



Renamed Commands Table

Some commands have been renamed to align the nomenclature in this manual and in the *CAEN RFID API Reference* manual (you can download this manual from the <u>CAEN RFID Web Site</u>).

The following table shows the equivalence between old and new name of the renamed commands.

Old name	New name
NewRawReadIDs	InventoryTag
G2Kill	KillTag_EPC_C1G2
G2Write	WriteTagData_EPC_C1G2
G2Read	ReadTagData_EPC_C1G2
G2Lock	LockTag_EPC_C1G2
G2ProgramID	ProgramID_EPC_C1G2
G2Query	Query_EPC_C1G2
G2SetQ	SetQ_EPC_C1G2
G2GetQ	GetQ_EPC_C1G2
G2QueryAck	QueryAck_EPC_C1G2
G2ReadBlockPermalock	ReadBLockPermalock_EPC_C1G2
G2LockBlockPermablock	LockBLockPermalock_EPC_C1G2

Tab. 2.4: Renamed Commands Table



ASYNCHRONOUS
NOTIFICATION:
PROTOCOL SPECIFICATION



3




The notification channels are implemented only with sockets.

All the messages notifications are composed by a header and a body. In all cases the body of the message is a list of attribute-value pairs. The first AVP of the body is fixed and called **NotifyMessage**.

All the packets for notification channel share the same header format of other packet as described at § 3.

The first AVP (NotifyMessage) is followed by a list of AVPs, the number of which depends on how many tags should be notified. Each AVP has the same format of the AVP described in § 3.

The **NotifyMessage** has the following fixed format:

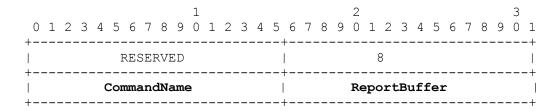

After the NotifyMessage AVP we can receive:

- a) a list of AVPs (as described in table 3) followed by an AVP with 'Attribute Type' ResultCode
- b) a single AVP called KillMessage with the following fixed format:



Description

TimeStamp: the timestamp of the notification

TagIDLen: the ID length of the tag.

TagID: the ID of the tag.

SourceName: the name of the source to use. EventType: the type of the notified event

Tab. 3.3.1: Attribute types: Notification AVP List.



4 DEFAULT CONFIGURATION





CAEN A928EUEU and A948EUEU UHF RFID Reader protocol has various configuration parameters; in the following table are summarized the default values.

Parameter	Default value
IP Address	192.168.0.125
IP Netmask	255.255.255.0
IP Gateway	192.168.0.1
Sources	"Source_0", "Source_1", "Source_2", "Source_3"
Readpoints	"Ant0", "Ant1", "Ant2", "Ant3"
Baud Rate	115200
Data Bits	8
Stop Bits	1
Parity	None
Flow Control	None

Tab. 4.4.1: A928EUEU and A948EUEU Configuration parameters default values

The default composition of sources for A928EUEU and A948EUEU reader is the following:

	Source	Readpoints
	Source_0	Ant0
Ī	Source_1	Ant1
	Source_2	Ant2
F	Source_3	Ant3

Tab. 4.4.2: A928EUEU and A948EUEU Default composition of sources

CAEN A828EU A828AEUEU, A829EUEU, A946EUEU and A949EUEU UHF RFID Reader protocol has various configuration parameters; in the following table are summarized the default values.

Parameter	Default value
Sources	"Source_0"
Readpoints	"Ant0"
Baud Rate	115200
Data Bits	8
Stop Bits	1
Parity	None
Flow Control	None

Tab. 4.4.3: A828EU A828AEUEU, A829EUEU, A946EUEU and A949EUEU Configuration parameters default values

The default composition of sources for the A828EU A828AEUEU, A829EUEU, A946EUEU and A949EUEU reader is the following:

Source	Readpoints
Source_0	Ant0

Tab. 4.4.4: A828EU A828AEUEU, A829EUEU, A946EUEU and A949EUEU Default composition of sources





Set Protocol Command

Action: Set Reader Protocol to EPC C1G2

Result: Reader select EPC C1G2 protocol.

Command sent:

0x8001 (Fixed) 0x0000 (Message ID) 0x00005358 (Vendor ID = CAEN SpA) 0x001C (Message Length) 0x0000 (Reserved) 0x0008 (AVP Length) 0x0001 (AVP Type = CommandName) (AVP Value = SetProtocol) 0x0074 0x0000 (Reserved) 0x000A (AVP Length) 0x0054 (AVP Type = Protocol) 0x0000003 (AVP Value = EPC C1G2)

Response received: 0x0001 (Fixed) 0x0000 (Message ID) 0x00005358 (Vendor ID = CAEN SpA) 0x001A (Overall Message Length) 0x0000 (Reserved) 0x0008 (AVP Length) 0x0001 (AVP Type = CommandName) 0x0074 (AVP Value = SetProtocol) 0x0000 (Reserved) 0x0008 (AVP Length) 0x0002 (AVP Type = ResultCode) 0x0000 (AVP Value = Success)



InventoryTag Command

Action: Execute an inventory cycle on the logical source SourceO

Result: Two EPCC1G2 tags are returned as being inventory by the reader on Anto.

Tag1 Id = 010203040506070809101112131415161718191920 (160 bit)

Tag2 Id = 300833B2DDD9014035050000 (96 bit)

Command sent: 0x8001 0x0000 0x00005358 0x0021	<pre>(Fixed) (Message ID) (Vendor ID = CAEN SpA) (Message Length)</pre>
0x0000 0x0008 0x0001 0x0013	<pre>(Reserved) (AVP Length) (AVP Type = CommandName) (AVP Value = InventoryTag)</pre>
0x0000 0x000F 0x00FB 0x536F757263655F3000	<pre>(Reserved) (AVP Length) (AVP Type = SourceName) (AVP Value = "Source_0")</pre>
Response received: 0x0001 0x0000 0x00005358 0x00B6	(Fixed) (Message ID) (Vendor ID = CAEN SpA) (Overall Message Length)
0x0000 0x0008 0x0001 0x0013	<pre>(Reserved) (AVP Length) (AVP Type = CommandName) (AVP Value = InventoryTag)</pre>
0x0000 0x000F 0x00FB 0x536F757263655F3000	<pre>(Reserved) (AVP Length) (AVP Type = SourceName) (AVP Value = "Source_0")</pre>
0x0000 0x000B 0x0022 416E743000	<pre>(Reserved) (AVP Length) (AVP Type = ReadPointName) (AVP Value = "Ant0")</pre>
0x0000 0x000E 0x0010 0x00000578 0x00000000	<pre>(Reserved) (AVP Length) (AVP Type = TimeStamp) (AVP Value = Thu Jan 1 01:23:20 1970) (AVP Value)</pre>
0x0000 0x0008 0x0012 0x0003	<pre>(Reserved) (AVP Length) (AVP Type = TagType) (AVP Value = EPCC1G2)</pre>
0x0000 0x0008 0x000F 0x0014	<pre>(Reserved) (AVP Length) (AVP Type = TagIDLen) (AVP Value = 160 bit)</pre>
0x0000 0x001A 0x0011 0x01020304050607080910111	(Reserved) (AVP Length) (AVP Type = TagID) 2131415161718191920
0x0000 0x000F 0x00FB	(Reserved) (AVP Length) (AVP Type = SourceName)



0x536F757263655F3000	(AVP Value)
0x0000 0x000B 0x0022 0x416E743000	<pre>(Reserved) (AVP Length) (AVP Type = ReadPointName) (AVP Value = "Ant0")</pre>
0x0000 0x000E 0x0010 0x00000578 0x00000000	<pre>(Reserved) (AVP Length) (AVP Type = TimeStamp) (AVP Value = Thu Jan 1 01:23:20 1970) (AVP Value)</pre>
0x0000 0x0008 0x0012 0x0003	<pre>(Reserved) (AVP Length) (AVP Type = TagType) (AVP Value = EPCC1G2)</pre>
0x0000 0x0008 0x000F 0x000C	(Reserved) (AVP Length) (AVP Type = TagIDLen) (AVP Value = 96 bit)
0x0000 0x0012 0x0011 0x300833B2DDD9014035050000	(Reserved) (AVP Length) (AVP Type = TagID)
0x0000 0x0008 0x0002 0x0000	<pre>(Reserved) (AVP Length) (AVP Type = ResultCode) (AVP Value = Success)</pre>



WriteTagData_EPC_C1G2 Command

Command sent:

0x8001 0x001A 0x00005358 0x005d	(Fixed) (Message ID) (Vendor ID = CAEN SpA) (Message Length)
0x0000 0x0008 0x0001 0x0097	<pre>(Reserved) (AVP Length) (AVP Type = CommandName) (AVP Value = WriteTagData_EPC_C1G2)</pre>
0x0000 0x000F 0x00FB 0x536F757263655F3000	<pre>(Reserved) (AVP Length) (AVP Type = SourceName) (AVP Value)</pre>
0x0000 0x0008 0x000F 0x000C	(Reserved) (AVP Length) (AVP Type = TagIDLen) (AVP Value = 96 bit)
0x0000 0x0012 0x0011 0x300833B2DDD9014035050000	(Reserved) (AVP Length) (AVP Type = TagID)
0x0000 0x0008 0x0071 0x0003	(Reserved) (AVP Length) (AVP Type = Memory Bank) (AVP Value = User Memory Bank)
0x0000 0x0008 0x004e 0x0000	(Reserved) (AVP Length) (AVP Type = Tag Address) (AVP Value = Address)
0x0000 0x0008 0x0050 0x0004	(Reserved) (AVP Length) (AVP Type = Length) (AVP Value = # of bytes)
0x0000 0x000a 0x004d 0x00000000	(Reserved) (AVP Length) (AVP Type = Tag Value) (AVP Value = bytes to be written)
Response received: 0x0001 0x001A 0x00005358 0x001A	(Fixed) (Message ID) (Vendor ID = CAEN SpA) (Overall Message Length)
0x0000 0x0008 0x0001 0x0097	<pre>(Reserved) (AVP Length) (AVP Type = CommandName) (AVP Value = WriteTagData_EPC_C1G2)</pre>
0x0000 0x0008 0x0002 0x0000	(Reserved) (AVP Length) (AVP Type = ResultCode) (AVP Value = Success)



ReadTagData_EPC_C1G2 Command

Command sent:

0x8001 0x000E 0x0005358 0x0053	(Fixed) (Message ID) (Vendor ID = CAEN SpA) (Message Length)
0x0000 0x0008 0x0001 0x0096	<pre>(Reserved) (AVP Length) (AVP Type = CommandName) (AVP Value = ReadTagData_EPC_C1G2)</pre>
0x0000 0x000F 0x00FB 0x536F757263655F3000	(Reserved) (AVP Length) (AVP Type = SourceName) (AVP Value)
0x0000 0x0008 0x000F 0x000C	(Reserved) (AVP Length) (AVP Type = TagIDLen) (AVP Value = 96 bit)
0x0000 0x0012 0x0011 0x300833B2DDD9014035050000	(Reserved) (AVP Length) (AVP Type = TagID)
0x0000 0x0008 0x0071 0x0003	(Reserved) (AVP Length) (AVP Type = Memory Bank) (AVP Value = User Memory Bank)
0x0000 0x0008 0x004e 0x0000	(Reserved) (AVP Length) (AVP Type = Tag Address) (AVP Value = Address)
0x0000 0x0008 0x0050 0x0004	(Reserved) (AVP Length) (AVP Type = Length) (AVP Value = # of bytes)

Response received:

0x0001	(Fixed)
0x000E	(Message ID)
0x00005358	(Vendor ID = CAEN SpA)
0x0024	(Overall Message Length)
0x0000	(Reserved)
0x0008	(AVP Length)
0x0001	(AVP Type = CommandName)
0x0096	(AVP Value = ReadTagData_EPC_C1G2)
0x0000	(Reserved)
0x000A	(AVP Length)
0x004d	(AVP Type = Tag Value)
0x0000000	(AVP Value = bytes written / bytes to be read)
0x0000	(Reserved)
0x0008	(AVP Length)
0x0002	(AVP Type = ResultCode)
0x0000	(AVP Value = Success)



Set Power Command

Command sent:

0x8001 (Fixed) 0x0000 (Message ID) 0x00005358 (Vendor ID = CAEN SpA) 0x001C (Message Length) 0x0000 (Reserved) 0x0008 (AVP Length) 0x0001 (AVP Type = CommandName) 0x0064 (AVP Value = Set Power) 0x0000 (Reserved) 0x000A (AVP Length) 0x0096 (AVP Type = Power Set) 0x000003E8 (1000 mW) (AVP Value = FCC)

Response received:

0x0001 (Fixed) 0x0000 (Message ID) 0x00005358 (Vendor ID = CAEN SpA) 0x001A (Overall Message Length) 0x0000 (Reserved) 0x0008 (AVP Length) 0x0001 (AVP Type = CommandName) 0x0064 (AVP Value = Set Power) 0x0000 (Reserved) (AVP Length) 0×0008 0x0002 (AVP Type = ResultCode) 0x0000 (AVP Value = Success)



LockTag Command

Command sent:

communa sent.	
0x8001 0x0009 0x00005358 0x004F	<pre>(Fixed) (Message ID) (Vendor ID = CAEN SpA) (Message Length)</pre>
0x0000 0x0008 0x0001 0x0098	<pre>(Reserved) (AVP Length) (AVP Type = CommandName) (AVP Value = LockTag_EPC_C1G2)</pre>
0x0000 0x000F 0x00FB 0x536F757263655F3000	<pre>(Reserved) (AVP Length) (AVP Type = SourceName) (AVP Value)</pre>
0x0000 0x0008 0x000F 0x000C	<pre>(Reserved) (AVP Length) (AVP Type = TagIDLen) (AVP Value = 96 bit)</pre>
0x0000 0x0012 0x0011 0x300833B2DDD9014035050000	(Reserved) (AVP Length) (AVP Type = TagID)
0x0000 0x000A 0x0072 0x00000C02	(Reserved) (AVP Length) (AVP Type = Payload) (AVP Value = User memory accessible on secure)
0x0000 0x000A 0x0073 0x12345678	<pre>(Reserved) (AVP Length) (AVP Type = G2Password) (AVP Value = Password)</pre>

Response received:

0x0001	(Fixed)
0x0009	(Message ID)
0x00005358	(Vendor ID = CAEN SpA)
0x001A	(Overall Message Length)
0x0000	(Reserved)
0x0008	(AVP Length)
0x0001	(AVP Type = CommandName)
0x0098	(AVP Value = LockTag_EPC_C1G2)
0x0000	(Reserved)
0x0008	(AVP Length)
0x0000	
	(AVP Type = ResultCode)
0x0000	(AVP Value = Success)



Continuous Inventory Command

Command sent (set read cycle to 0):

0x8001 (Fixed) 0x0003 (Message ID) 0x00005358 (Vendor ID = CAEN SpA) 0x0035 (Message Length) 0x0000 (Reserved) 0x0008 (AVP Length) 0×0001 (AVP Type = CommandName) 0x008A (AVP Value = Set Source Config) 0x0000 (Reserved) 0x000F (AVP Length) $0 \times 0.0 FB$ (AVP Type = SourceName) 0x536F757263655F3000 (AVP Value) 0x0000 (Reserved) 0x000A (AVP Length) 0x006A (AVP Type = Config Parameter) 0x00000000 (read cycle) 0x0000 (Reserved) 0×000A (AVP Length) (AVP Type = Config Value) 0x006B 0x00000000 (read cycle = 0)

Response received:

0x0001 (Fixed) 0x0003 (Message ID) 0x00005358 (Vendor ID = CAEN SpA) 0x001A (Overall Message Length) 0x0000 (Reserved) 8000x0 (AVP Length) 0x0001 (AVP Type = CommandName) 0x008A (AVP Value = Set Source Config) 0×0000 (Reserved) (AVP Length) 0x0008 0x0002 (AVP Type = ResultCode) 0x0000 (AVP Value = Success)

Command sent (Continuous inventory):

(Fixed) (Message ID) 0×0002 (Vendor ID = CAEN SpA) 0x00005358 0x0040 (Message Length) 0x0000 (Reserved) 0x0008 (AVP Length) (AVP Type = CommandName) 0×0001 (AVP Value = InventoryTag) 0x0013 0x0000 (Reserved) (AVP Length) (AVP Type = SourceName) $0 \times 0.0 FB$ (AVP Value) 0x536F757263655F3000 0.50000(Reserved) 0x0008 (AVP Length) 0×0050 (AVP Type = Length) 0x0000 (AVP Value = 0 byte)



0x0000 (Reserved) 0x0007 (AVP Length) 0x0011 (AVP Type = TagID)

0x00

0x0000 (Reserved) 0x0008 (AVP Length)

0x004e (AVP Type = Tag Address) 0x0000 (AVP Value = Address)

0x0000 (Reserved) 0x0008 (AVP Length)

0x0067 (AVP Type = Bit Mask)

0x0006 (AVP Value = Flags: FRAMED and CONTINUOS)

Response received:

0x0001 (Fixed) 0x0002 (Message ID)

 0×00005358 (Vendor ID = CAEN SpA)

0x0000 (Overall Message Length not defined)

0x0000 (Reserved) 0x0008 (AVP Length)

0x0001 (AVP Type = CommandName) 0x0013 (AVP Value = InventoryTag)

0x0000 (Reserved) 0x0008 (AVP Length)

Now the reader will send a data packet every time it will detect a valid tag in the field.

To Exit from the Continuous Inventory mode the following byte shall be sent to the reader:

0xAB (Stop the continuous acquisition mode)

The Reader does no t reply with any byte.