LCD COLOR MONITOR
USER MANUAL
26" / 42"



Table Of Content

IMF	PORTANT SAFETY INSTRUCTIONS	4
FC	C Regulation CLASS B COMPUTING statement	5
CH .	APTER 1 INTRODUCTION	
1.2	Product Features	
1.3	Package Contents	
1.4	Product Care	7
1.5	Product Dimension	8
1.6	The length of the joint screw	9
1.7	Installing the base stand	9
1.8	Caution	10
СН	APTER 2 OPERATION INSTRUCTION	12
2.1	Control Panel	12
2.2	OSD Menu	13
2.3	OSD Function Table	15
2.4	Input Signal Icon	17
2.5	Hot Key Icon	17
2.6	Remote Controller	18
CH	APTER 3 SIGNAL CONNECTOR AND INSTRUCTION.	.19
CH	APTER 4 PRODUCT SPECIFICATION	.21
CH	APTER 5 PANEL SPECIFICATION	25
CH.	APTER 6 WARRANTY	25

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- 2. Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 10. Only use attachments/accessories specified by the manufacturer.
- 11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 12. Unplug this apparatus during lightning storms or when unused for a long period of time.
- 13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- 15. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

SYMBOL	SYMBOL DEFINITION
SA 1965	DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock to persons.
SA 1966	INSTRUCTIONS: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

FCC Regulation CLASS B COMPUTING statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guaranty that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by on or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2)this device must accept any interference received, including interference that may cause undesired operation.

CAUTION:

Any changes or modifications not expressly approved by the grantee off this device could void the user's authority to operate the equipment. (FOR FCC MODEL ONLY)

CHAPTER 1 INTRODUCTION

Thank you for choosing our new generation LCD monitor. This lightweight, slim design LCD monitor includes many outstanding features and combines the benefit of a high resolution display. Your LCD monitor is safe to use and completely free from any X-ray radiation. We hope you enjoy using our product, and would like to provide the following additional information to assist you in obtaining the best results, using the product safely and in complete comfort.

Please follow ALL instructions and cautions carefully before using this product. And keep this user manual carefully for future reference.

1.1 Product Description

This product uses 26" / 42" color active matrix TFT (thin-film transistor) monitor, providing high quality displayed images. The maximum supported resolution is 1920 x 1200(26")/1366 x 768(42"), which enables the display of complex and high quality images. In addition, the monitor also provides access to the new OSD (On Screen Display) controls and has built in multi-media speakers. It is the option of the DVI and component terminal, and it depends on the model name.

1.2 Product Features

- High contrast color TFT LCD monitor, supports VGA / DVI signal input up to resolution 1920 x 1200(26")/1366 x 768(42"), video signal resolution up to resolution both 500TVL.
- 2. Imbedded video signal BNC terminal and S-Video terminal and component signal RCA terminal and Audio signal RCA Jack.
- 3. A complete OSD function optimizes the screen display.

1.3 Package Contents

Standard package includes the following:


- 1. 26" / 42" TFT LCD Monitor. (Depend on the screen diagonal)
- 2. Remote Controller.
- 3. Signal Cable. (VGA Cable)
- 4. User Manual.
- 5. DVI-I Cable. [Option]
- 6. Y Cb Cr Cable. [Option]
- 7. HDMI Cable. [Option]
- 8. Support stand. [Option]

1.4 Product Care

- 1. To remove dust or dirt from the screen, use a soft clean cotton cloth and wipe gently.
- 2. Do not apply pressure to the screen surface while wiping.
- 3. Do not use any water or chemical detergent to clean the surface. Chemicals detergent may damage the surface of the LCD.


1.5 Product Dimension

• 26"

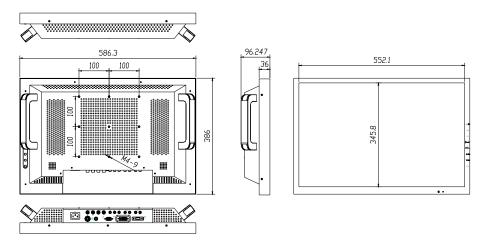


UNIT:mm

• 42"

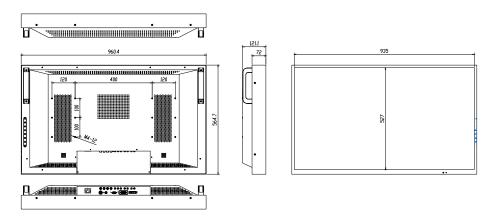


UNIT:mm

1.6 The length of the joint screw

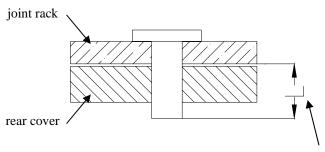

The length of insert screw :4mm<L<7mm

1.7 Installing the base stand

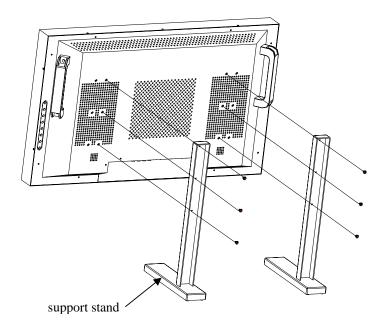

1.8 Caution

PRODUCT

- 1. Do not cover or block the ventilation holes in the back of the monitor case.
- Do not insert any metal objects into the ventilation holes of the monitor case and be careful not to spill liquids over this product as this could result in severe injury.
- 3. Unplug the monitor's power cable if not to be used for a long period of time.
- 4. Do not attempt to dismantle this product. Any attempt to dismantle or remove the covers from this product will invalidate the warranty and may also result in serious injury.
- 5. Do not touch the screen directly with fingers. The oils from your skin may leave marks on the surface of the screen, which are difficult to be removed and may damage the screen permanently.
- Do not apply pressure to the LCD screen. The LCD is very delicate and fragile component.
- 7. When mounting on the wall, for safety concern, please use the supporting parts in the packing.

MAINS PLUG (2Pin / 3Pin)

- 1. Do not remove the grounding or earth connection from the power supply / mains plug.
- 2. Always remember to unplug the LCD Monitor from the power supply under the following circumstances :
- If the monitor will not be used for a long period of time.

(Please refer to the "User Manual" when connecting and disconnecting the LCD Monitor from any power supply or other systems and before making any adjustments to the Monitor. In the event of any unexpected situation occurring whilst operating the Monitor please switch off the power supply and remove the power cable. If the problem is not explained in the User Manual, please contact your local dealer or our customer service department.)

If the monitor housing is damaged or broken.

• POWER CORD AND SIGNAL CABLE

- 1. Do not put anything on the power cord or signal cable.
- 2. Do not allow any cables from the monitor to lie on the floor in an area where pedestrians are likely to trip causing injury.


- 3. This product is supplied with a 3 line-grounding plug. The grounding plug provides an additional safety feature for anyone using this equipment and should not be removed. Please contact a qualified electrician for assistance if the grounding plug and electrical connections appear to differ from the local supply provided. Do NOT throw this safety-grounding plug.
- 4. Do not overload the power cord or adapter.
- 5. Do not put the power cord or signal cable in humid places.

ALLOCATION ENVIRONMENT

- 1. DO NOT place this product on any unstable trolleys, shelves or tables as it may fall and cause severe injury and damage.
- 2. Always ensure that the monitor is located in a well-ventilated area to prevent the unit from overheating.
- 3. AVOID operating or placing the monitor in the following environments:
- * Extremes of temperatures, both hot and cold.
- High Humidity.
- Direct sunlight.
- Excessively Dusty Surroundings.
- Avoid close proximity to other equipment that generate a strong magnetic field.

CHAPTER 2 OPERATION INSTRUCTION

2.1 Control Panel

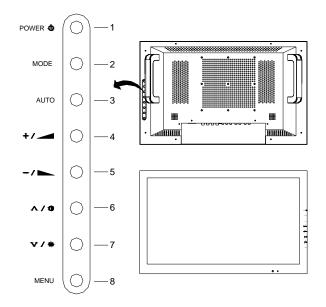

- 1. Power Switch : press to switch monitor on / off.
- 2. Mode: press to select input signal. (see Remark)
- 3. Auto: VGA signal auto adjustment.
- 4. Plus (+): press to increase the value of OSD option selected; press to increase volume.
- 5. Minus (-): press to decrease the value of OSD option selected; press to decrease volume.
- 6. Up (Contrast): select OSD options upwards; press to adjust contrast.
- 7. Down (Brightness): select OSD options downwards; press to adjust brightness.
- 8. Menu: recall or close OSD display, enter or return selection.

Remark:

On the first press, the monitor shows OSD of the current signal. Before OSD disappears, press again to change Mode.

2.2 OSD Menu

• VGA / DVI/ HDMI Signal

	1.	Brightness	50
	2.	Contrast	60
*	3.	H-Position	50
*	4.	V-Position	39
*	5.	Clock	50
*	6.	Phase	87
	7.	Color Temp.	User Color
	8.	User Color R	50
	9.	User Color G	50
	10.	User Color B	50
	11.	Osd H-Pos.	50
	12.	Osd V-Pos.	50
	13.	Volume	50
	14.	PIP/POP	Off
	15.	SUB SOURCE	Composite 1
	16.	PIP SIZE	Large
	17.	PIP H-POS.	0
	18.	PIP V-POS.	0
	19.	SOURCE SWAP	
	20.	Language	English
	21.	Recall	

- 1.

 Item 3,4,5,6 have different value after auto tuning, but DVI can't adjust.
- 2. Above Value / data is for reference only.

• VIDEO (Composite / S-Video / Component) Signal

	1.	Color	60
	2.	Tint	50
	3.	Brightness	55
	4.	Contrast	63
	5.	Sharpness	19
	6.	Volume	50
	7.	H-Position	50
	8.	Language	English
*	9.	Color Temp.	Standard
	10.	Scan	Over
	11.	PIP/POP	Off
	12.	SUB SOURCE	Y Cb Cr
	13.	PIP SIZE	LARGE
	14.	PIP H-POS.	0
	15.	PIP V-POS.	0
	16.	Source Swap	
	17.	Recall	

- 1. \times The Color Temp. depends on the region.
- 2. Above Value / data is for reference only.

2.3 OSD Function Table

VGA / DVI/HDMI


1.	Brightness	Adjust back ground black level of the screen image.
2.	Contrast	Adjust fore ground white level of the screen image.
3.	H-Position	Adjust the left or right position of the screen image.
4.	V-Position	Adjust the up or down position of the screen image.
5.	Clock	Adjust the horizontal sync width of the screen image.
6.	Phase	Adjust the clarity of the screen image.
7.	Color Temp.	Press (+) or (-) to choose three types of color temperature 9300°K , 6500°K , User Color.
8.	User Color R	Adjust the red color's intensity of the screen image.
9.	User Color G	Adjust the green color's intensity of the screen image.
10.	User Color B	Adjust the blue color's intensity of the screen image.
11.	OSD H-Pos.	Adjust the left or right position of the OSD.
12.	OSD V-Pos.	Adjust the up or down position of the OSD.
13.	Volume	Adjust the volume control.
14.	PIP/POP	View the video input screen image on the left-top screen. Press (+) or (-) to choose three types of PIP/POP: S-Video , Video 1 , Video 2 .
15.	SUB SOURCE	Choose the source of the sub picture.
16.	PIP SIZE	Choose the size of the sub picture.
17.	PIP H-POS.	Adjust the left or right position of the sub picture.
18.	PIP V-POS.	Adjust the up or down position of the sub picture.
19.	SOURCE SWAP	Swap the picture in picture.
20.	Language	Select languages : English, Chinese, French, German, Spanish, Italian or Japanese.
21.	Recall	Press (+) or (-) recall the default value.

• VIDEO (Composite / S-Video / Component)


1.	Color	Adjust the color density.
2.	Tint	Adjust the color tint. (NTSC only)
3.	Brightness	Adjust back ground black level of the screen image.
4.	Contrast	Adjust fore ground white level of the screen image.
5.	Sharpness	Adjust the clarity and focus of the screen image.
6.	Volume	Adjust the volume control.
7.	H-Position	Adjust the left or right position of the screen image.
8.	Language	Select languages : English, Chinese, French, German, Spanish, Italian or Japanese.
9.	Color Temp.	Press (+) or (-) to choose three types of color temperature 9300°K , 6500°K , Standard.
10.	Scan	Press (+) or (-) to choose four type of over scan or under scan or full scan or 1:1 scan.
11.	PIP/POP	View the video input screen image on the left-top screen. Press (+) or (-) to choose three types of PIP: VGA, DVI, Y Cb Cr.
12.	SUB SOURCE	Choose the source of the sub picture.
13.	PIP SIZE	Choose the size of the sub picture.
14.	PIP H-POS.	Adjust the left or right position of the sub picture.
15.	PIP V-POS.	Adjust the up or down position of the sub picture.
16.	SOURCE SWAP	Swap the picture in picture.
17.	Recall	Press (+) or (-) recall the default value.

15


2.4 Input Signal Icon

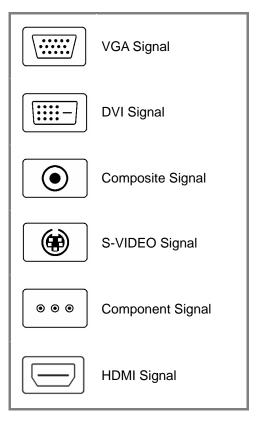

2.5 Hot Key Icon

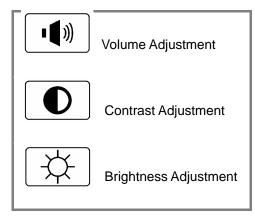


2.6 Remote Controller

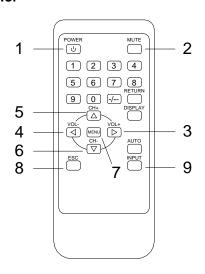

- 1. Power Switch: press to switch monitor on / off.
- 2.MUTE:N/A.
- 3. Plus (+): press to increase volume; press to increase the value of OSD option selected.
- 4. Minus (-): press to decrease volume; press to decrease the value of OSD option selected.
- 5. Up: select OSD options upwards.
- 6. Down: select OSD options downwards.
- 7. Menu: recall or close OSD display, enter or return selection.
- 8. ESC: escape from selection.
- 9. INPUT: select VGA、DVI (HDMI)、BNC1、BNC2、Y/C、Y Cb Cr.

CHAPTER 3 SIGNAL CONNECTOR AND INSTRUCTION

Input / Output Interface

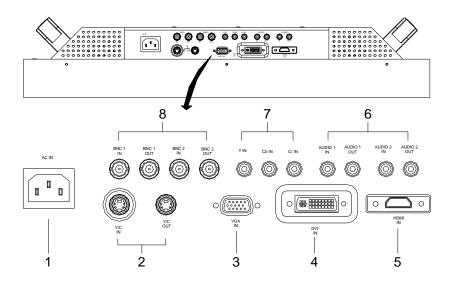

- 1. AC In: Connect the AC power cord to the AC input connector and wall outlet.
- 2. Y/C In / Out (4-Pin mini-Din) : connect to the Y/C output / input terminal of camera VCR or other video equipment.
- 3. VGA In : connect analog R.G.B output terminal, such as the display card output VGA terminal of the personal computer.
- 4. DVI In: connect digital R.G.B output terminal, such as the display card output DVI terminal of the personal computer. [OPTION]
- 5. HDMI In: connect High Definition Multimedia output terminal, such as DVD. [OPTION]
- 6. Audio In / Out (RCA Jack): audio input / output terminal.
- 7. Y Cb Cr In (RCA Jack): connect to the component output terminal of video equipment, such as DVD. [OPTION]
- 8. VIDEO In / Out (BNC-TYPE): connect to the output / input terminal of video equipment, such as a VCR or a color video camera.
- 9. When you choose a video signal screen without connecting any video signal, "No Signal " will be showed on the screen. During the time playing the video, and remove the video signal, " Video Loss " will be showed on the screen. It's same of other channel.

Note:

- ※ It takes about 4~ 5 seconds to change Mode.
- When Mode is changed, the monitor will shows blue screen, then enter Signal Input or shows " NO Signal ".

Caution:

AVOID directly pulling any cables when disconnecting devices from the monitor. Always disconnect devices carefully by firmly gripping the metal or plastic connector body and gently easing the connector from its socket.

CHAPTER 4 PRODUCT SPECIFICATION

Active Matrix TFT LCD Monitor

MODEL		26"
Pixel pitch (H x V mm)		0.2865 x 0.2865
Max.	VGA / DVI	1920 x1200 pixel.
Resolution	VIDEO	500TVL.
Dimension (W x H x D m	nm)	586.3 x 386.0x 96.247
Packing Dir (W x H x D m		755.0 x 655.0 x 335.0
Display Mod	de	VGA、DVI、HDMI、Composite、S-VIDEO、Component.
Signal Connector		DC In/Out, VGA In, DVI In[OPTION], HDMI In[OPTION], BNC1 In/Out, BNC2In/Out, Y/C In/Out, Y Cb Cr In [OPTION], Audio1 In/Out, Audio2 In/Out.
Front Control Panel Buttons		Power Switch, LED Indicator, Mode, Auto, Plus (Volume Increase), Minus (Volume Decrease), Up (Contrast Adjust), Down (Brightness Adjust), Menu.
OSD Menu	VGA / DVI/HDMI	Brightness, Contrast, H-Position, V-Position, Clock, Phase, Color Temp., User Color R.G.B, OSD H-Pos., OSD V-Pos., Volume, Language, PIP Size/Pos., PIP/POP, SUB SOURCE, PIP SIZE, PIP H-POS, PIP V-POS, SOURCE SWAP, Recall.
OSD Meriu	VIDEO	Color, Tint (NTSC only), Brightness, Contrast, Sharpness, Volume, H-Position, Language, Color Temp., Scan, PIP/POP, SUB SOURCE, PIP SIZE, PIP H-POS, PIP V-POS, SOURCE SWAP, Recall.
Power Input	t	AC Input : 100~240V(± 10 %) 50/ 60HZ.
Operating C	Condition	Temp. : 0°C ~ 50°C, Humidity : 10% ~ 90%.
Storage Co	ndition	Temp.: -20°C ~ 60°C, Humidity: 10% ~ 90%.
Power Consumption		60W. (Max.)
Scan Vertical		56.250 ~ 75.029Hz
Scan Horizontal		31.469 ~ 75.000KHz
Weight	N.W.	9.92kgs.
J 3	G.W.	12kgs.

Active Matrix TFT LCD Monitor

MODEL		42"	
Pixel pitch (H x V mm)		0.681 x 0.681	
Max.	VGA / DVI	1366 x 768 pixel.	
Resolution	VIDEO	500TVL.	
Dimension (W x H x D m	ım)	960.4 x 564.7 x 121.1	
Packing Dir (W x H x D m		1145.0 x855.0 x 367.0	
Display Mod	de	VGA、DVI、HDMI、Composite、S-VIDEO、Component.	
Signal Connector		DC In/Out, VGA In, DVI In[OPTION], HDMI In[OPTION], BNC1 In/Out, BNC2In/Out, Y/C In/Out, Y Cb Cr In [OPTION], Audio1 In/Out, Audio2 In/Out.	
Front Control Panel Buttons		Power Switch, LED Indicator, Mode, Auto, Plus (Volume Increase), Minus (Volume Decrease), Up (Contrast Adjust), Down (Brightness Adjust), Menu.	
OSD Marin	VGA / DVI/HDMI	Brightness, Contrast, H-Position, V-Position, Clock, Phase, Color Temp., User Color R.G.B, OSD H-Pos., OSD V-Pos., Volume, Language, PIP Size/Pos., PIP/POP, SUB SOURCE, PIP SIZE, PIP H-POS, PIP V-POS, SOURCE SWAP, Recall.	
OSD Menu	VIDEO	Color, Tint (NTSC only), Brightness, Contrast, Sharpness, Volume, H-Position, Language, Color Temp., Scan, PIP/POP, SUB SOURCE, PIP SIZE, PIP H-POS, PIP V-POS, SOURCE SWAP, Recall.	
Power Input	t	AC Input: 100~240V(±10%) 50/60HZ.	
Operating C	Condition	Temp. : 0°C ~ 50°C, Humidity : 10% ~ 90%.	
Storage Condition		Temp. : -20°C ~ 60°C, Humidity : 10% ~ 90%.	
Power Consumption		270W. (Max.)	
Scan Vertical		56.250 ~ 75.029Hz	
Scan Horizontal		31.469 ~ 63.981KHz	
Weight	N.W.	27.2kgs.	
	G.W.	38kgs.	

26" VGA/DVI Supported Resolution

Mode	Resolution	FH KHz	FV Hz
Mode 1	640*480@60Hz	31.469	59.940
Mode 2	640*480@72Hz	37.861	72.809
Mode 3	640*480@75Hz	37.500	75.000
Mode 4	800*600@56Hz	35.156	56.250
Mode 5	800*600@60Hz	37.879	60.317
Mode 6	800*600@72Hz	48.077	72.188
Mode 7	800*600@75Hz	46.875	75.000
Mode 8	1024*768@60Hz	48.363	60.004
Mode 9	1024*768@70Hz	56.467	70.069
Mode 10	1024*768@75Hz	60.023	75.029
Mode 11	1280*1024@60Hz	63.981	60.020
Mode 12	1360*768@60Hz	47.712	60.015
Mode 13	1400*1050@60Hz	65.317	59.978
Mode 14	1440*900@60Hz	55.469	59.901
Mode 15	1600*1200@60Hz	75.000	60.000
Mode 16	1680*1050@60Hz	65.290	59.954
Mode 17	1920*1200@60Hz	74.556	59.885

42" VGA/DVI Supported Resolution

Mode	Resolution	FH KHz	FV Hz
Mode 1	640*480@60Hz	31.469	59.940
Mode 2	640*480@72Hz	37.861	72.809
Mode 3	640*480@75Hz	37.500	75.000
Mode 4	800*600@56Hz	35.156	56.250
Mode 5	800*600@60Hz	37.879	60.317
Mode 6	800*600@72Hz	48.077	72.188
Mode 7	800*600@75Hz	46.875	75.000
Mode 8	1024*768@60Hz	48.363	60.004
Mode 9	1024*768@70Hz	56.467	70.069
Mode 10	1024*768@75Hz	60.023	75.029
Mode 11	1280*1024@60Hz	63.981	60.020
Mode 12	1360*768@60Hz	47.712	60.015

26"/42" Component/HDMI (Option)Supported Resolution

Sigal	Component	НДМІ
480i	YES	NO
480p	YES	YES
720p	YES	YES
1080i	YES	YES
1080p	YES	YES

CHAPTER 5 PANEL SPECIFICATION

Please refer to attach specification sheet.

CHAPTER 6 WARRANTY

After Sales Service

After this product is unpacked, keep the carton and packing materials to ensure safe transportation in case of any after sales service.

The warranty is covered by a 12-month limited warranty, subject to normal conditions of use. If you experience any problems with this product please contact your local dealer or supplier for repair and maintenance instructions.

Warranty Do NOT Include:

- Any damage resulting from incorrect use or careless operation or handling of the equipment.
- * Any damage caused by not operating the equipment in accordance with the manufacturer's instructions detailed in the " User Manual " .
- * Any tampering or removal of the Monitor housing will invalidate the warranty.
- * Damages resulting from natural disasters e.g. flood, fire and earthquake.
- Any damages caused by inappropriate transportation or storage of the equipment.

∄ 錄

第一	章	前言	2
1.1	產品	說明	2
1.2	產品	特性	2
1.3	包裝	內容	2
1.4	產品	保養	2
1.5	產品	尺寸	2
1.6	鎖後	蓋螺絲規	2
1.7	底座	支架安裝	2
1.8	注意	事項	3
第二 2.1	_章 	操作說明 响面板說明	
2.2) 選單	
2.3) 可能表	
2.4		訊號圖示	
2.5	快速	鍵圖示	3
2.6	遙控	· · · · · · · · · · · · · · · · · · ·	3
第三	章	訊號接頭與使用說明	39
第四	章	產品規格表	40
第王	章	面板規格表	4
第六	7章	產品保固說明	44

第一章 前言

感謝您選擇了最新一代的 LCD 液晶顯示器,具有高顯示品質及重量輕、無輻射等特性,新一代的液晶顯示器將提供您舒適、安全、環保的全新視覺感受。 使用本產品請詳細閱讀下列規範要求,並請保存使用手冊以備日後查詢。

1.1 產品說明

本產品採用全新技術 26" / 42" 彩色主動式矩陣薄膜電晶體 (Active Matrix TFT) 液晶板,提供優質的顯示畫面可支援到 1920 x 1200(26")/1366 x 768(42"),能夠顯示複雜或高品質的圖像,內建最新 OSD 視控功能,多媒體喇叭。數位訊號端子與色差端子皆爲選購,依機種而有所不同。

1.2 產品特性

- 1. 高對比的彩色 TFT 液晶顯示器,支援類比 (VGA)/數位 (DVI)訊號,解析度支援到 1920 x 1200(26")/1366 x 768(42")像素,視頻訊號解析度皆為 500TVL。
- 2. 內建視頻訊號 BNC 端子之混合訊號、S 端子之 Y/C 分離訊號、RCA 端子之色差 訊號及 RCA 端子之音頻訊號。
- 3. 完整的 OSD 功能,可調整書面至最佳顯示狀態。

1.3 包裝內容

本產品的標準包裝內應有下列配件:


- 1. 26" / 42" TFT 液晶顯示器。(依購買顯示器的尺寸而定)
- 2. 遙控器。
- 3. 信號線。(VGA)
- 4. 使用手冊。
- 5. 數位信號線。(DVI-I)【選購】
- 6. 色差信號線。(Y Cb Cr)【選購】
- 7. 高清多媒體訊號線。(HDMI)【選購】
- 8. 底座支架。【選購】

1.4 產品保養

- 1. 清潔 LCD 螢幕時請使用軟質具絨毛的布料,以清除螢幕上灰塵及髒污。
- 2. 擦拭 LCD 螢幕表面時請勿施壓。
- 3. 請不要使用水及其他化學清潔劑擦拭 LCD 螢幕表面, 化學藥劑可能會損傷 LCD 螢幕表面。


1.5 產品尺寸

• 26"

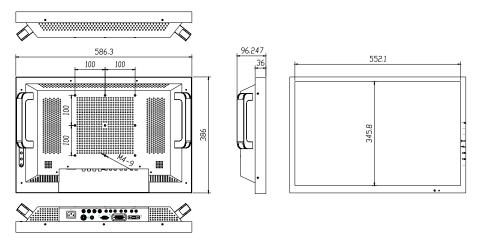


UNIT:mm

• 42"

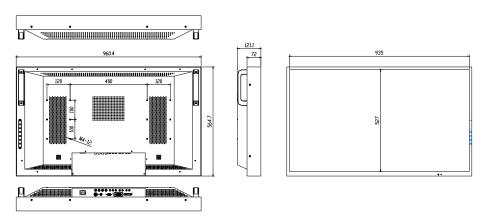


UNIT:mm

1.6 鎖後蓋螺絲規格

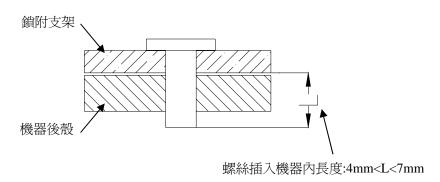

1.7 底座支架安裝

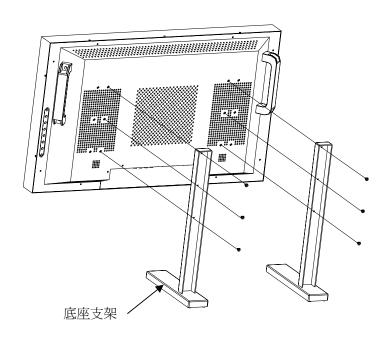

1.8 注意事項

- 產品
- 1. 請不要掩蓋或阻塞機體背後散熱孔,以免妨礙機體散熱。
- 2. 請不要用銳利物、金屬伸入或液體滲入散熱孔內,以避免電路及產品損壞。
- 3. 若將有一段很長的時間不使用本產品,請將電源線自電源插頭拔下。
- 4. 請不要嘗試自行分解,拆卸本產品任何部分,這樣的行為可能會損壞產品及對人 體造成傷害,並使您所享有的產品保固失效。
- 5. 不要以手指直接接觸螢幕表面,這樣可能會損傷螢幕表面,且皮膚上的油脂若留在螢幕上將很難清除。
- 6. 請不要對 LCD 螢幕施加壓力, LCD 螢幕是非常精緻且脆弱的。
- 7. 機體鎖附在 Wall Mount 時,爲安全考慮,須使用我司所提供的零配件。

• 電源插頭

- 1. 請不要移除插頭上的地線接頭。
- 2. 在下列狀況時請拔下產品的電源線:
- ※ 如果您將有一段長時間不使用本產品。
- ※ 如果電源線或電源插座 / 插頭有損壞。

(請您依照使用手冊說明進行產品安裝或調整,請不要自行以非本手冊說明範圍內的方式或程序調整或操作本產品,如果您以非本說明手冊的方式或程序調整或操作本產品及發生不可預期的狀況,請您將電源線拔下並通知您所購買的代理 / 經銷商或本公司相關客服人員爲您處理)


- ※ 如遭撞擊或摔落,以致外殼破損時。
- 電源線及訊號連接線
- 1. 請不要讓任何物體壓迫電源線或訊號連接線。
- 2. 請不要讓本產品之電源線或訊號連接線經過走道,或人們可能常走過的地方以避 免線體被踩到。
- 3. 本產品備有三線接地型插頭,該插頭僅能適用於接地型電源插座,如有不適請治 詢您的電工技師來汰換舊式插座,千萬不可放棄該具有安全性作用的接地插頭。
- 4. 請不要讓電源插座或電源線超載。
- 5. 請不要讓本產品之電源線或訊號連接線置於濕氣重的地方。

• 使用環境

- 1. 請勿將本產品置於不穩定的推車,架子或桌子上,本產品可能因掉落而導致 嚴重損毀。
- 2. 請將本產品置於通風環境良好的地方使用。
- 3. 請勿將本產品置於下列環境下:
- ※ 過熱、冷。
- ※ 太潮濕的地方。
- ※ 陽光直接照射的地方。
- ※ 灰塵較多的地方。
- ※ 會造成強烈磁場的設備附近。

第二章 操作說明

2.1 控制面板說明

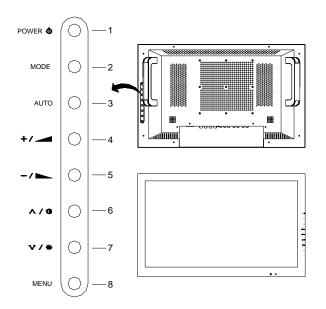

- 1. 電源開關:開啟/關閉螢幕電源。
- 2. 信號模式:選擇輸入的信號源。(※註)
- 3. 自動調整鍵:類比信號自動調整鍵。
- 4. 調整 (增加+): 調整 OSD 數值增加 (聲音控制快速鍵)。
- 5. 調整 (減少-):調整 OSD 數值減少 (聲音控制快速鍵)。
- 6. 向上 (對比調整): OSD 各選項向上選擇 (對比控制快速鍵)。
- 7. 向下 (亮度調整): OSD 各選項向下選擇 (亮度控制快速鍵)。
- 8. 目錄: 開啓或儲存離開 OSD 畫面。

※ 註:

第一次螢幕顯示現有的 Signal 之 OSD,在螢幕未消失前,再接一次,始爲 Mode 的切換。

2.2 OSD 選單

● 類比 (VGA) / 數位 (DVI) / 數位 (HDMI)訊號

 對比 水平位置 垂直位置 頻率 相位 色溫 使用者自言 自訂-紅色 	
4. 垂直位置 5. 頻率 6. 相位 7. 色溫 使用者自言	50 25 87 T色彩
5. 頻率 6. 相位 7. 色溫 使用者自訂	25 87 T色彩
6. 相位 7. 色溫 使用者自訂	87 丁色彩
7. 色溫 使用者自言	T色彩
8. 自訂-紅色	
	50
9. 自訂-綠色	50
10 自訂-藍色	50
11. OSD 水平位置	50
12. OSD 垂直位置	50
13. 音量	50
14. 畫中畫/畫外畫	關閉
15. 子畫面信源 複合	合信號
16. 子畫面大小	大
17. 子畫面水平位置	0
18. 子畫面垂直位置	0
19. 畫面交換	
20. 语言	中文
21. 回復	

- 1. ※ 3,4,5,6 依自動調整後會有所不同,DVI 不可調整。
- 2. 上述數值僅供參考。

● 視頻訊號 (混合訊號,Y/C 分離訊號,色差訊號)

	1.	色彩	60
	2.	色相	50
	3.	亮度	55
	4.	對比	63
	5.	銳利	51
	6.	音量	50
	7.	水平位置	50
	8.	語言	中文
*	9.	色溫	標準
	10.	掃描	過掃描
	11.	畫中畫/畫外畫	關閉
	12.	子畫面信源	高清
	13.	子畫面大小	大
	14.	子畫面水平位置	0
	15.	子畫面垂直位置	0
	16.	畫面交換	
	17.	回復	

- 1. ※ 色溫依地區而有所不同。
- 2. 上述數值僅供參考。

2.3 OSD 功能表

● 類比 (VGA) / 數位 (DVI) / 高清多媒體 (HDMI)訊號

1.	亮度	調整螢幕影像的背景黑色程度。	
2.	對比	調整螢幕影像的前景白色程度。	
3.	水平位置	調整螢幕影像的左右位置。	
4.	垂直位置	調整螢幕影像的上下位置。	
5.	頻率	調整螢幕影像的水平寬度。	
6.	相位	調整螢幕影像的清晰度。	
7.	色溫	提供色溫選擇 6500°K 或 9300°K 或使用者自訂色彩。	
8.	自訂-紅色	調整螢幕影像紅色的強弱。	
9.	自訂-綠色	調整螢幕影像綠色的強弱。	
10.	自訂-藍色	調整螢幕影像藍色的強弱。	
11.	OSD 水平位置	調整 OSD 左右位置。	
12.	OSD 垂直位置	調整 OSD 上下位置。	
13.	音量	調整聲音大小聲。	
14.	畫中畫/畫外畫	提供畫中畫/畫外畫選擇 S 訊號或視頻訊號 1 或視頻訊號 2。	
15.	子畫面信源	選擇子畫面通道	
16.	子畫面大小	選擇子畫面大小	
17.	子畫面水準位置	調整子畫面水準位置	
18.	子畫面垂直位置	調整子畫面垂直位置	
19.	畫面交換	進行子母畫面交換	
20 .	語言	提供七種語言選擇:中文、英文、法文、德文、西班牙文、義大利文 或日文。	
21.	回復	按 (+) 或 (-) 將所有控制項目恢復成原廠設定値。	


• 視頻訊號 (混合訊號, Y/C 分離訊號, 色差訊號)

1.	色彩	調整顏色濃淡。
2.	色相	調整顏色相位。(只有 NTSC 才有)
3.	亮度	調整螢幕影像的背景黑色程度。
4.	對比	調整螢幕影像的前景白色程度。
5.	銳利	調整螢幕影像的明晰度。
6.	音量	調整聲音大小聲。
7.	水平位置	
8.	語言	提供七種語言選擇:中文、英文、法文、德文、西班牙文、義大利文 或日文。
9.	色溫	提供色温選擇 6500°K 或 9300°K 或標準。
10.	掃描	選擇過掃描或欠掃描或 1:1 或全畫面。
11.	畫中畫/畫外畫	提供畫中畫/畫外畫選擇類比訊號 VGA 或數位訊號 DVI 或高清訊號 Y Cb Cr。
12.	子畫面信源	選擇子畫面通道
13.	子畫面大小	選擇子畫面大小
14.	子畫面水平位置	調整子畫面水準位置
15.	子畫面垂直位置	調整子畫面垂直位置
16.	畫面交換	進行子母畫面交換
17.	回復	將按 (+) 或 (-) 所有控制項目恢復成原廠設定值。


2.4 輸入訊號圖示



2.5 快速鍵圖示

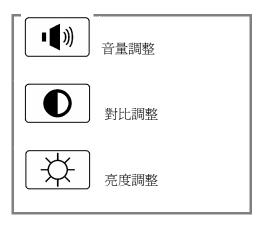

2.6 遙控器按鍵說明

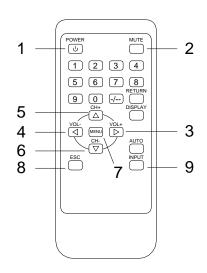

1. 電源開關: 開啓/關閉螢幕電源。

2. 靜音 : 无此功能。

3. 聲音上調:增加音量,調整 OSD 數值增加。

4. 聲音下調:降低音量,調整 OSD 數值減少。

5. 向上: OSD 各選項向上選擇。


6. 向下: OSD 各選項向下選擇。

7. 目錄: 開啟或儲存離開 OSD 畫面。

8. ESC:離開選擇項目。

9. INPUT:選擇 VGA、DVI (HDMI)、BNC1、BNC2、Y/C、Y Cb Cr。

第三章 訊號接頭與使用說明

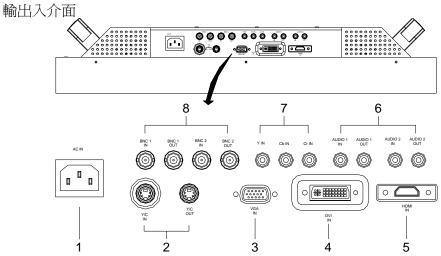

- 1. 交流電輸入連接:連接交流電源線到 AC 輸入端,連接上插座。
- 2. Y/C 輸入 / 輸出端子 (4-Pin mini-DIN): 連接攝影機 VCR 或其他監視器的 Y/C 信號分離輸出端子 / 輸入端子。
- 3. 類比輸入 (VGA): 連接類比紅.綠.藍輸出端子。例如: 個人電腦之類比訊號顯示卡(VGA)。
- 4. 數位輸入 (DVI): 連接數位 紅.綠.藍 輸出端子。例如: 個人電腦之數位訊號顯示 卡(DVI)。【選購】
- 5. 高清多媒體訊號 (HDMI):連接高清數位信號端子。例如:高清 DVD。【選購】
- 6. 音源輸入/輸出 (RCA Jack): 聲音輸入端子/輸出端子。
- 7. 色差輸入端子 (RCA Jack): 連接影像設備色差輸出端子。例如: DVD。【選購】
- 8. 視訊輸入/輸出 (BNC-TYPE): 連接影像設備輸出端子/輸入端子。例如:VCR或彩色影像攝影機。
- 9. 若選擇之輸入訊號畫面無連接影像訊號,螢幕會顯現 "No Signal";若在輸入訊號正常顯示畫面下,移除連接影像訊號,螢幕會顯現 "Video Loss"。

Note:

- ※ Mode 切換時間約 4~5 秒。
- ※ Mode 切換時會先顯示藍色底後,再進入訊號源或顯示 "No Signal"。

注意: 當您要拔下連接中的電源線或訊號線時,請勿握住線體強拉,請抓住線體連接頭部分拔下,以避免線體損傷。

主動矩陣式 TFT 液晶顯示板

機種		26"	
點 距 (水平 x 重直 mm)		0.2865 x 0.2865 °	
最大解析度	類比 (VGA) / 數位 (DVI)訊號	1920 x1200 pixel ·	
	視頻訊號	500 TVL ·	
機體尺寸 (寬	x 高x 深mm)	586.3 x 386.0x 96.247	
包裝尺寸 (寬	x 高x 深mm)	755.0 x 655.0 x 335.0	
顯示模式		類比訊號 (VGA)、數位訊號 (DVI) 、高清多媒體訊號 (HDMI)、混合訊號、Y/C 分離訊號、色差訊號。	
訊號連接頭		直流電輸入/輸出,類比輸入 (VGA),數位輸入 (DVI) [選購],高清多媒體輸入 (HDMI) [選購],視訊輸入/輸出 1 (BNC-Type),視訊輸入/輸出 2 (BNC-Type),Y/C 輸入/輸出端子 (4-Pin mini-DIN),色差輸入端子 (RCA Jack) 【選購】,音源輸入/輸出 1 (RCA Jack),音源輸入/輸出 2 (RCA Jack)。	
前面板控制鈕		電源開關,LED 指示燈,信號模式,自動調整鍵,增加 (音量增加),減少 (音量減少),向上 (對比調整),向下 (亮度調整),目錄。	
OSD 選擇項目	類比 (VGA) / 數位 (DVI)訊號/ 高清多媒體 (HDMI)訊號	亮度,對比,水平位置,垂直位置,頻率,相位,色溫, 自訂-紅色、綠色、藍色,OSD 水平位置,OSD 垂直位置,音量, 語言,畫中畫/畫外畫,子畫面信源、子畫面大小、子畫面水平位置、 子畫面垂直位置、畫面交換,回復。	
WH*K□	視頻訊號	色彩,色相(僅 NTSC),亮度,對比,銳利,音量,水平位置,語言, 色溫,掃描,畫中畫/畫外畫,子畫面信源、子畫面大小、子畫面水平 位置、子畫面垂直位置、畫面交換,回復。	
電源輸入		交流電輸入:100~240V(±10%) 50/60HZ.	
操作環境		溫度:0°C~50°C,	
儲存環境		溫度:-20°C~60°C,	
消耗功率		60W(Max.) ·	
垂直掃描 频率		56.250~75.029 赫兹	
水平掃描 频率	<u> </u>	31.469~75.000K 赫兹	
重量	淨重	9.92kgs.	
生生	毛重	12kgs.	

主動矩陣式 TFT 液晶顯示板

機種		42"	
點 距 (水平 x 重直 mm)		0.681 x 0.681 °	
最大解析度	類比 (VGA) / 數位 (DVI)訊號	1366 x 768 像素。	
	視頻訊號	500 TVL °	
機體尺寸 (寬	x 高x 深mm)	960.4 x 564.7 x 121.1	
包裝尺寸 (寬	x 高x 深mm)	1145.0 x855.0 x 367.0	
顯示模式		類比訊號 (VGA)、數位訊號 (DVI) 、高清多媒體訊號 (HDMI)、混合訊號、Y/C 分離訊號、色差訊號。	
訊號連接頭		直流電輸入/輸出,類比輸入 (VGA),數位輸入 (DVI)【選購】,高清多媒體輸入 (HDMI)【選購】,視訊輸入/輸出1 (BNC-Type),視訊輸入/輸出2 (BNC-Type),Y/C 輸入/輸出端子 (4-Pin mini-DIN),色差輸入端子 (RCA Jack)【選購】,音源輸入/輸出1 (RCA Jack),音源輸入/輸出2 (RCA Jack)。	
前面板控制鈕		電源開關,LED 指示燈,信號模式,自動調整鍵,增加 (音量增加),減少 (音量減少),向上 (對比調整),向下 (亮度調整),目錄。	
OSD 選擇項目	類比 (VGA) / 數位 (DVI)訊號/ 高清多媒體 (HDMI)訊號	亮度,對比,水平位置,垂直位置,頻率,相位,色溫, 自訂-紅色、綠色、藍色,OSD 水平位置,OSD 垂直位置,音量, 語言,畫中畫/畫外畫,子畫面信源、子畫面大小、子畫面水平位置、 子畫面垂直位置、畫面交換,回復。	
送洋	視頻訊號	色彩,色相(僅 NTSC),亮度,對比,銳利,音量,水平位置,語言, 色溫,掃描,畫中畫/畫外畫,子畫面信源、子畫面大小、子畫面水平 位置、子畫面垂直位置、畫面交換,回復。	
電源輸入		交流電輸入:100~240V(±10%) 50/60HZ.	
操作環境		温度:0°C~50°C,溼度:10%~90%。	
儲存環境		溫度:-20℃~60℃,溼度:10%~90%。	
消耗功率		270W(Max.) ·	
垂直掃描 频率	K	56.250~75.029 赫兹	
水平掃描 频率		31.469~63.981K 赫兹	
壬旦	淨重	27.2kgs ∘	
重量	毛重	38kgs ·	

模式	解析度	水平頻率 KHz	垂直頻率 Hz
模式 1	640*480@60Hz	31.469	59.940
模式 2	640*480@72Hz	37.861	72.809
模式3	640*480@75Hz	37.500	75.000
模式 4	800*600@56Hz	35.156	56.250
模式 5	800*600@60Hz	37.879	60.317
模式 6	800*600@72Hz	48.077	72.188
模式 7	800*600@75Hz	46.875	75.000
模式 8	1024*768@60Hz	48.363	60.004
模式 9	1024*768@70Hz	56.467	70.069
模式 10	1024*768@75Hz	60.023	75.029
模式 11	1280*1024@60Hz	63.981	60.020
模式 12	1360*768@60Hz	47.712	60.015
模式 13	1400*1050@60Hz	65.317	59.978
模式 14	1440*900@60Hz	55.469	59.901
模式 15	1600*1200@60Hz	75.000	60.000
模式 16	1680*1050@60Hz	65.290	59.954
模式 17	1920*1200@60Hz	74.556	59.885
		· ·	

42"類比訊號 (VGA)/ 數位訊號 (DVI)可支援螢幕解析度

模式	解析度	水平頻率 KHz	垂直頻率 Hz
模式 1	640*480@60Hz	31.469	59.940
模式 2	640*480@72Hz	37.861	72.809
模式3	640*480@75Hz	37.500	75.000
模式4	800*600@56Hz	35.156	56.250
模式 5	800*600@60Hz	37.879	60.317
模式 6	800*600@72Hz	48.077	72.188
模式 7	800*600@75Hz	46.875	75.000
模式 8	1024*768@60Hz	48.363	60.004
模式 9	1024*768@70Hz	56.467	70.069
模式 10	1024*768@75Hz	60.023	75.029
模式 11	1280*1024@60Hz	63.981	60.020
模式 12	1360*768@60Hz	47.712	60.015

26"/42"色差訊號(Component)/高清多媒體訊號 (HDMI)(選購)可支援螢幕解析度

訊號	色差訊號	高清多媒體訊號 (HDMI)
480 i	是	否
480p	是	是
720p	是	是
1080 i	是	是
1080p	是	是

第五章 面板規格表

請參閱附件。

第六章 產品保固說明

售後服務

消費者在購買產品後,請保留紙箱及保麗龍之包裝材料,以確保售後服務產品 運送之安全性。本產品在保證使用環境條件下,保固期限一年。產品若發生故障, 請找購買經銷商維修,以保障您的權益。

非保固範圍概要:

- ※ 因使用不慎或錯誤而導致之損害。
- ※ 未遵照產品所附之說明書進行操作。
- ※ 自行對產品進行拆卸。
- ※ 因水災、火災、電擊及其他不可抗拒之因素所造成的損害。
- ※ 因不當搬運所受到之損害。