











125KHz & 13.56HMz Dual Frequencies Magic Series Reader

Design & Technologies

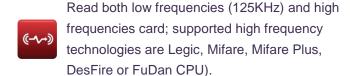

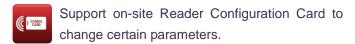

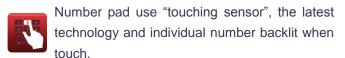

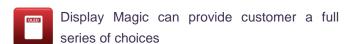

Display reader can display CSN/UID number or Programmed Card Number or user Name when the user card is present.* (Supported Multiple Languages)



Front plate customization and back lit design is available.




Door Bell function for Number pad reader.

Economical Mini Magic can be mullion mount.

OLED Display allow user to see the message clearly under direct sunlight.

> A PIN can be set inside the card to authenticate with the reader so that "Card + PIN" mode can be implemented without relying on the controller.*

Friendly Installation

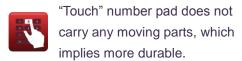


All weather proof design with IP65 certificate.

Metal back plate allows the reader install on metal surface and back-to back without affecting the read range.



Universal back plate allows the reader be installed on different size of gang box.

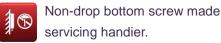

All input and output signals are protected against static charges.



Reverse power protection.



Stainless steel Security screw is an option



All inputs are 12Vdc protected.











Model Number: $X_1 X_2 N_1 N_2 N_3 - N_4 X_3$

RF Technologies		Reader Appearance and Function	
X ₁ X ₂	HM = Mifare & 125KHz Technologies HL = Legic & 125KHz Technologies	N ₁	3 = Normal Reader ; 5 = Display Reader
		N ₂	2 = Normal Size
			8 = Mini Size
		N ₃	2 = Read UID / Card Number
			3 = Read Sector (Mifare) / Segment (Legic)
		N ₄	3 = Terminal (for Display Reader)
			8 = Pigtail
		X ₃	N = No Number pad; K = Number pad

Model	Standard & Mini Reader	Keypad Reader	Display Reader			
Functions						
Configurable Functions						
Re-configure Window	5 seconds (Default) or Half an hour after Power up					
Reader Output Format	CSN/UID 32bits, 34bits, 56bits (backward/forward), file content reading for programmed ID					
Wiegand Plus Width	Different choices to fit with different Controller's requirements					
Keypad Output	N/A	Definable	Definable			
Buzzer Control	Reader & Controller control (Default) or Controller control only					
LED/Back lit Control	Define different LED color res	sponse base on Green LED	N/A			
Display Clock	N/A	N/A	H/W reset			
Synchronization.			Via RS485 TimeSyn S/W			
Technical Specifications						
Typical Read range	3 – 5 cm					
Reader Standard Output	Wiegand (RS232 & RS485 optional)					
Standard Keypad output	N/A	Wiegand with 4 bits burst	Wiegand with 4 bits burst			
Display	N/A	N/A	OLED Display			
	N/A	N/A	Access Granted, Access			
Display Message			Denied, Enter PIN;			
Display Message			• Time;			
			Card Number			
Wiring Distance	150m (22 AWG with shielded cable)		120m (22 AWG with shielded cable)			

Operating Specification:

Operating Voltage	10 - 15VDC		
Operating Current	150mA (max)		
Operating Temperature	-30℃-70℃		
Exterior dimension (Mini)	115.5*84.5*20.5mm (84.05*54.05*16.5mm)		
Case material	PC+ABS		
Standard Color	Black		
Operating Humidity	10% - 90%		
Weight (Mini)	210g (160g)		

FCC Caution.

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.