IEEE802.15.4 / ZigBee Module High Power w/ uFL connector

Overview





This MD-120FC-5148A ZigBee Module w/ uFL connector is a surface mount module with 52.84mW output power that enables users to implement IEEE802.15.4 or ZigBee PRO networking applications with minimum time to market and at the lowest cost. They remove the need for expensive and lengthy development of custom RF board designs and test suites. The modules provide a comprehensive solution with high radio performance and all RF components included. All that is required to develop and manufacture wireless control or sensing products is to connect a power supply and peripherals such as switches, actuators and sensors, considerably simplifying product development.

Benefits

- Microminiature module solutions
- Ready to use in products
- Minimizes product development time
- No RF test required for systems
- Compliant with FCC part 15 rules, IC Canada

Applications

- Robust and secure low power wireless applications
- ZigBee PRO networks
- Home and commercial building automation
- Home networks
- Toys and gaming peripherals
- Industrial systems
- Telemetry and utilities (e.g. AMR)



Features: Module

- 2.4GHz IEEE802.15.4 & ZigBee PRO Compatible
- 2.7 -3.6V for SOC
- Sleep Current (with Active Sleep Timer) 2.6µA
- Receiver Sensitivity -98dBm
- TX Power +17.23dBm
- TX Current 130mA
- RX Current 30mA
- Dimension: 30 *18*3.5mm
- Weight: 2.0g

Features: Microcontroller

- 32-Bit RISC CPU,up to 32MIPs with low power
- 128KB RAM, 128KB ROM
- 4Mbit serial flash for program code and data
- On chip OTP efuse
- JTAG debug interface
- 4-input 12-bit ADC, 2 12-Bit DACs, 2 Comparators
- 3 Application Timer / Counters,
 3 System Timers
- 2 UARTs (One for In-System Debug)
- SPI Port with 5 Selects
- 2-Wire Serial Interface
- 4-wire digtal audio interface
- Watchdog timer
- 19 GPIO

Temperature Range -40°C to +85°C

Humidity 10 to 95% RH

Lead-Free and RoHS Compliant

Revised History					
Date	Revision	Description			
2012/03/20 1.0		1 st Released			

Table of Contents

I.	Introduction	3
	1.1 Key Features	.3
	1.1.1 Module	
	1.1.2 Microcontroller	
	1.2 Applications	
2.	Specifications	
3.	Install Information	
	Install Hardware	
	3.1 PCB Footprint	.5
	3.2 Pin Configurations	
	3.3 TX/RX Enable Control Logic	
	3.4 Pin Assignment	.6
	Install Software	.9
4.	FCC Statement	10
5.	IC Statement 錯誤! 尚未定義書籤	0
6.	Contact Information 錯誤! 尚未定義書籤	0

1. Introduction

This MD-120FC-5148A ZigBee Module w/ uFL connector is a surface mount module with 52.84mW output power that enables users to implement IEEE802.15.4 or ZigBee PRO networking applications with minimum time to market and at the lowest cost. They remove the need for expensive and lengthy development of custom RF board designs and test suites. The modules provide a comprehensive solution with high radio performance and all RF components included. All that is required to develop and manufacture wireless control or sensing products is to connect a power supply and peripherals such as switches, actuators and sensors, considerably simplifying product development.

1.1 Kev Features

1.1.1 **Module**

- 2.4GHz IEEE802.15.4 & ZigBee PRO Compatible
- 2.7 -3.6V for SOC
- Sleep Current (with Active Sleep Timer) 2.6µA
- Receiver Sensitivity -98dBm
- TX Power +17.23dBm
- TX Current 130mA
- RX Current 30mA
- Dimension: 30*18*3.5mm
- Weight: 2.0g

1.1.2 Microcontroller

- 32-Bit RISC CPU
- 128KB RAM, 128KB ROM
- 4-input 12-bit ADC, 2 12-Bit DACs, 2 Comparators
- 3 Application Timer / Counters, 3 System Timers
- 2 UARTs
- SPI Port with 5 Selects
- 2-Wire Serial Interface
- 4-Wire digtal audio interface
- 19 GPIO

1.2 Applications

- · Robust and secure low power wireless applications
- ZigBee PRO networks
- Home and commercial building automation
- Home networks
- Toys and gaming peripherals
- · Industrial systems
- Telemetry and utilities (e.g. AMR)

2. Specifications

VDD=3.0V @ +25°C

Typical DC Characteristics		Notes
Deep Sleep Current	1.3uA	
Sleep Current	2.6uA	With active sleep timer
Radio Transmit Current	110mA	CPU in doze, radio transmitting
Radio Receive Current	30mA	CPU in doze, radio receiving
Centre Frequency Accuracy	±20ppm	Additional ±20ppm allowance for temperature and ageing
Typical RF Characteristics		Notes
Receive Sensitivity	-98dBm	Nominal for 1% PER, as per 802.15.4 section 6.5.3.3
Maximum Transmit Power (without PIFA Antenna)	+17.23dBm	
Total Transmit Current	110mA	
Total Receive Current	30mA	
Maximum Input Signal	-5dBm	For 1% PER, measured as sensitivity
RSSI Range	-105 to -20 dBm	
RF Port Impedance -PIFA Antenna	50 ohm	2.4 - 2.5GHz
VSWR (Max)	2:1	2.4 - 2.5GHz
Peripherals	2.1	Notes
Master SPI Port	3 selects	250kHz - 16MHz
Slave SPI Port	✓	250kHz - 8MHz
Two UARTs	✓	16550 compatible
TwoWire Serial I/F (Compatible with SMbus & I ² C)	✓	Up to 400kHz
Two Programmable Timer/Counters with Capture/Compare Facility, Tick Timer	✓	16MHz clock
Two Programmable Sleep Timers	✓	32kHz clock
Digital IO Lines (Multiplexed with UARTs, Timers and SPI Selects)	19	
Four Channel Analogue-to-Digital Converter	✓	12-bit, up to 100ks/s
Two Channel Digital-to-Analogue Converter	✓	12-bit, up to 100ks/s
Two PProgrammable Analogue Comparators	✓	Ultra low power mode for sleep
Internal Temperature Sensor and Battery Monitor	✓	•

3. Install Information

Install Hardware:

3.1 PCB Footprint

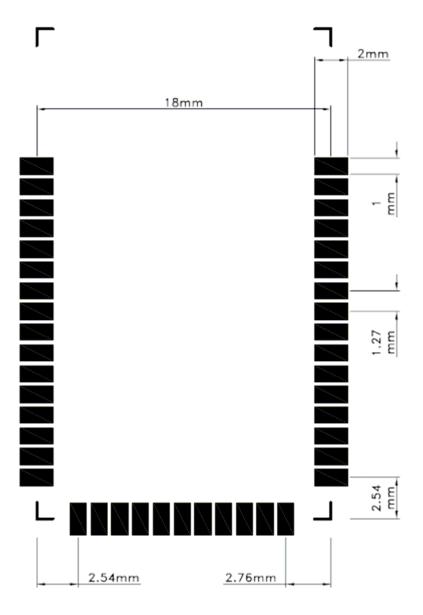


Figure: Module PCB footprint

RF note for MD-120FC-5148A modules with uFL connector: No components, ground plane or tracks on any layer of the mother board should be placed within 20mm of the 3 free sides of the antenna. Tracks etc may be placed adjacent to the can, but should not extend past the can towards the antenna end of the module for 20mm from the antenna.

3.2 Pin Configurations

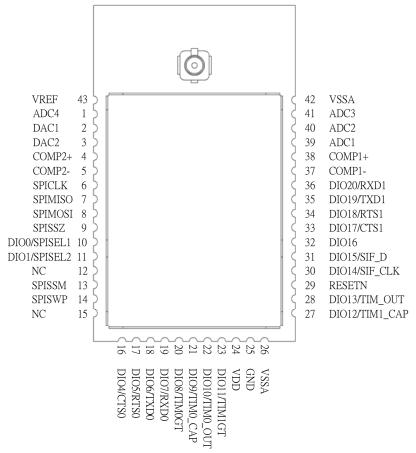


Figure: MD-120FC-5148A Pin Configuration (Top View)

Note: NC Pin such as Pin-12 (DIO3/SPISEL4) and Pin-15 (DIO2/SPISEL3) are not available on the high power modules

3.3 TX / RX Enable Control Logic

TX / RX Enable Control Logic							
DIO3	DIO2	Operation Condition					
L	Н	RX Active					
Н	H or L	TX Active					
L	L	Chip is shut-down					

3.4 Pin Assignment

Pin	Signal	Function	Alternative Function
1	ADC4	Analogue to Digital input	
2	DAC1	Digital to Analogue output	

JOYMAX

MD-120FC User Manual

Pin	Signal	Function	Alternative Function				
3	DAC2	Digital to Analogue output					
4	COMP2+	Comparator 2 inputs					
5	COMP2-	Comparation 2 inputs					
6	SPICLK	SPI master clock out					
7	SPIMISO	SPI Master In/Slave Out					
8	SPIMOSI	SPI Master Out/Slave In					
9	SPISSZ	SPI select from module - SS0 (output)					
10	DIO0	DIO0 or SPI Slave Select1 (output)	SPISEL1				
11	DIO1	DIO1, SPI Slave Select2 (output) or Pulse Counter0 Input	SPISEL2	PC0			
12	NC						
13	SPISSM	SPI select to FLASH (input)					
14	SPISWP	FLASH write protect (input)					
15	NC						
16	DIO4	DIO4, UARTO Clear To Send (input) or JTAG CLK	CTS0	JTAG_TCK			
17	DIO5	DIO5, UART0 Request To Send (output) or JTAG Mode Select	RTS0	JTAG_TMS			
18	DIO6	DIO6, UART0 Transmit Data (output) or JTAG Data Output	TXD0	JTAG_TDO			
19	DIO7	DIO7, UARTO Receive Data (input) or JTAG Data Input	RXD0	JTAG_TDI			
20	DIO8	DIO8, Timer0 clock/gate (input) or Pulse Counter1 Input	TIM0GT	PC1			
21	DIO9	DIO9, Timer0 capture (input), 32K External Crystal Input or 32K Clock Input	TIM0_CAP	32KXTALIN	32KIN		
22	DIO10	DIO10, Timer0 PWM (output), 32K External Crystal Output	TIM0_OUT	32KXTALO UT			
23	DIO11	DIO11, Timer1 clock/gate (input) or Timer2 PWN Output	TIM1GT	TIM2OUT			
24	VDD	Supply Voltage		•	·		
25	GND	Digital ground					
26	VSSA	Analogue ground					
27	DIO12	DIO12, Timer1 capture (input), Antenna Diversity or Digital Audio Word Select	TIM1_CAP	ADO	DAI_WS		

JOYMAX


MD-120FC User Manual

Pin	Signal	Function	Alternative Function					
28	DIO13	DIO13, Timer1 PWM (output), Antenna Diversity or Digital Audio Data Input	TIM1_OUT		ADE		DAI_SDIN	
29	RESETN	Reset input			•			
30	DIO14	DIO14, Serial Interface clock or Intelligent peripheral clock Input	SIF_CL	SIF_CLK IP_		IP_CLK		
31	DIO15	DIO15, Serial Interface data or Intelligent peripheral data out	SIF_D		IP_DO			
32	DIO16	DIO16, Intelligent peripheral Data In	IP_DI					
33	DIO17	DIO17, UART1 Clear To Send (input), Intelligent Peripheral Device Select Input or Digital Audio Clock or JTAG CLK	CTS1	IP_S	P_SEL DAI_		CK JTAG_ TCK	
34	DIO18	DIO18, UART1 Request To Send (output), Intelligent Peripheral Interrupt Output or Digital Audio Data Output or JTAG Mode Select	RTS1	IP_I	IP_INT DAI_ UT		00	JTAG_ TMS
35	DIO19	DIO19, UART1 Transmit Data (output) or JTAG Data Out	TXD1	KD1 J		JTAG_TDO		
36	DIO20	DIO20, UART1 Receive Data (input) or JTAG Data In	RXD1		JTAG_TDI			
37	COMP1-	Compositor Linguis					•	
38	COMP1+	Comparator 1 inputs						
39	ADC1	Analogue to Digital input						
40	ADC2	Analogue to Digital input						
41	ADC3	Analogue to Digital input						
42	VSSA	Analogue ground						
43	VREF	Analogue peripheral reference voltage						

Install Software:

Click flash program to execute the NXP Flash Programmer.



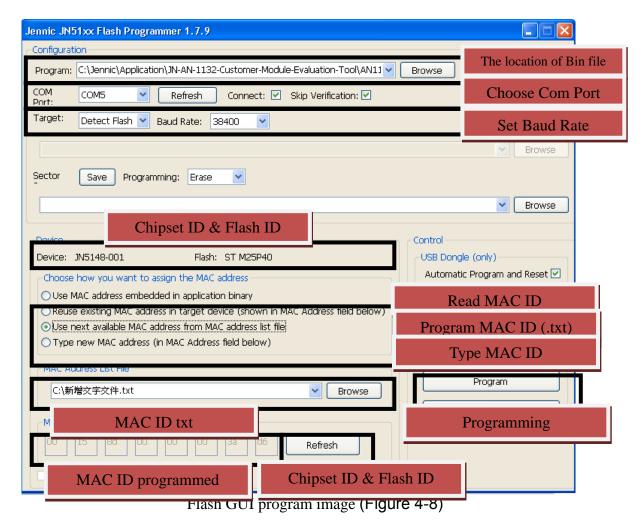

For MAC address selections:

- 1 → Use MAC address embedded in application binary → Seldom use
- 2 → Reuse existing MAC address in target device → Read MAC ID
- 3 → Use next available MAC address from MAC address list file → Program MAC ID (.txt)
- 4 → Type new MAC address → Type MAC ID

4. FCC Statement

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located with any other transmitters except in accordance with FCC multi-transmitter product procedures.

Referring to the multi-transmitter policy, multiple-transmitter(s) and module(s) can be operated simultaneously without C2P.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

IMPORTANT NOTE:

This module is intended for OEM integrator. The OEM integrator is still responsible for the FCC compliance requirement of the end product, which integrates this module.

20cm minimum distance has to be able to be maintained between the antenna and the users for the host this module is integrated into. Under such configuration, the FCC radiation exposure limits set forth for an population/uncontrolled environment can be satisfied.

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment.

USERS MANUAL OF THE END PRODUCT:

In the users manual of the end product, the end user has to be informed to keep at least 20cm separation with the antenna while this end product is installed and operated. The end user has to be informed that the FCC radio-frequency exposure guidelines for an uncontrolled environment can be satisfied. The end user has to also be informed that any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment. If the size of the end product is smaller than 8x10cm, then additional FCC part 15.19 statement is required to be available in the users manual: This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

LABEL OF THE END PRODUCT:

The final end product must be labeled in a visible area with the following "Contains TX FCC ID: XNNMD120FC". If the size of the end product is larger than 8x10cm, then the following FCC part 15.19 statement has to also be available on the label: This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device is intended only for OEM integrators under the following conditions: According to FCC Part 15 Subpart C Section 15.212 and IC RSS-GEN 3.1, the radio elements of the modular transmitter must have their own power supply. However, due to there is no own power supply regulator for this RF module, the host device must support the module with a stable 2.7~3.6V voltage power to assure compliance of the host device incl. Integrated RF Module under extreme operating conditions. This RF Module must not be sold to the general public.

5. IC Statement

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B conforme á la norme NMB-003 du Canada.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This device and its antenna(s) must not be co-located with any other transmitters except in accordance with IC multi-transmitter product procedures.

Refering to the multi-transmitter policy, multiple-transmitter(s) and module(s) can be operated simultaneously without reassessment permissive change.

Cet appareil et son antenne (s) ne doit pas être co-localisés ou fonctionnement en association avec une autre antenne ou transmetteur.

IMPORTANT NOTE:

IC Radiation Exposure Statement:

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This module is intended for OEM integrator. The OEM integrator is still responsible for the IC compliance requirement of the end product, which integrates this module.

20cm minimum distance has to be able to be maintained between the antenna and the users for the host this module is integrated into. Under such configuration, the IC RSS-102 radiation exposure limits set forth for an population/uncontrolled environment can be satisfied.

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment.

USERS MANUAL OF THE END PRODUCT:

In the users manual of the end product, the end user has to be informed to keep at least 20cm separation with the antenna while this end product is installed and operated. The end user has to be informed that the IC radio-frequency exposure guidelines for an uncontrolled environment can be satisfied. The end user has to also be informed that any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment. IC statement is required to be available in the users manual: This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

LABEL OF THE END PRODUCT:

The final end product must be labeled in a visible area with the following " Contains TX IC: 8520A-MD120FC

The device is intended only for OEM integrators under the following conditions: According to FCC Part 15 Subpart C Section 15.212 and IC RSS-GEN 3.1, the radio elements of the modular transmitter must have their own power supply. However, due to there is no own power supply regulator for this RF module, the host device must support the module with a stable 2.7~3.6V voltage power to assure compliance of the host device incl. Integrated RF Module under extreme operating conditions. This RF Module must not be sold to the general public.

6. Contact Information

Headquarter (Taiwan)

JOYMAX ELECTRONICS CO., LTD.

No. 5, Dong Yuan Rd.2, Jhongli Industrial Park, Jhongli City, Taoyuan 32063, Taiwan, R.O.C.

Tel: +886-3-433-5698 Fax: +886-3-433-5798

E-mail: info@joymax.com.tw http://www.joymax.com.tw http://www.joymax-antenna.com

Europe

Joymax Europe GmbH Buettgenbachstr. 10 D-40549 Duesseldorf Germany

Tel: 49-211-984 937 Fax: 49-211-984 9399 E-mail: info@joymax.de http://www.joymax.de

U.S.A.

Nearson Inc. 7432 Alban Station Blvd. Suite B226 Springfield, VA 22150 U.S.A.

Tel: 1-703-9135552 Fax: 1-703-9135553

E-mail: sales@nearson.com http://www.nearson.com